

# BOMB JACK DIP SWITCH SETTINGS:

DIP SWITCH 1		1	2	3	4	5	6	7	8
COIN1	0 1COIN - 1PLAY	OFF	OFF						
	1COIN - 2PLAY	ON	OFF						
	1COIN - 3PLAY	OFF	ON						
	1COIN - 6PLAY	ON	ON						
COIN2	0 1COIN - 1PLAY			OFF	OFF				
	2COIN - 1PLAY			ON	OFF				
	1COIN - 2PLAY			OFF	ON				
	1COIN - 3PLAY			ON	ON				
NUMBER OF MEN	0 3 JACKS					OFF	OFF		
	4 JACKS					ON	OFF		
	5 JACKS					OFF	ON		
	2 JACKS					ON	ON		
TYPE	COCKTAIL TABLE							OFF	
	0 UPRIGHT							ON	
DEMONSTRATION SOUND	NON SOUND								OFF
	0 SOUND								ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
DIFFICULTY 1 (SPEED OF MECHANICAL BIRD)	MODERATE				OFF	OFF			
	DIFFICULT				ON	OFF			
	0 MORE DIFFICULT				OFF	ON			
	TOP DIFFICULT				ON	ON			
DIFFICULTY 2 (ENEMIES' NUMBERS AND SPEED)	EASY						ON	OFF	
	MODERATE						OFF	OFF	
	0 DIFFICULT						OFF	ON	
	MORE DIFFICULT						ON	ON	
RATIO OF SPECIAL COIN APPEARANCE	0 EASY								OFF
	DIFFICULT								ON

SW 1, SW 2, SW 3 of Dip SW 2 are not used. Be sure to keep them in the OFF position when using.

0 Factory Settings