


# CRAZY KONG One P.C. Board

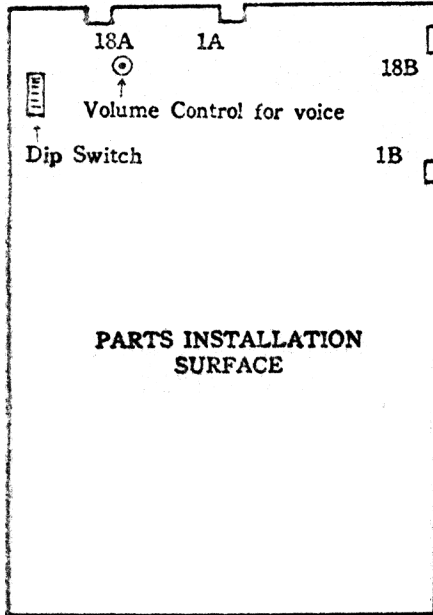

## CONNECTOR DIAGRAM

A side		B side
GND	1	GND
GND	2	GND
GND	3	GND
SP GND	4	S P
+12V	5	+12V
	6	1P Upper
	7	2P Upper
TV GND	8	TV GND
+5V	9	+5V
1P Lower	10	
2P Lower	11	
	12	2P Start
Coin	13	1P Start
1P Jump	14	1P Right
TV Red	15	1P Left
2P Right	16	TV Blue
2P Left	17	TV Green
2P Jump	18	TV Same period

**NOTE:** Be sure to check picture direction.  
It differs depending on the makers.

## DIP SWITCH

### WARNING!!

Re-Check connector wirings before SW-ON. P.C. Board maybe damaged if power lines (+5V +12V) are misconnected.

	1	2	3	4	5	6	7	8	
<b>Mister</b>									In case of on, Upright type.          In case of off, Table type.
3 Persons									
4 Persons									
5 Persons									
6 Persons									
<b>Extra score</b>									
7,000 points									
10,000 points									
15,000 points									
20,000 points									
<b>Credit</b>									
1 coin 1 play									
1 2									
1 3									
1 4									
2 1									
3 1									
4 1									
5 1									