GEMINI WING

Edge Connector


•JAMMA

		,		, , , ,
SOLDER SIDE	NO.	NO.	PARTS SIDE	<u> </u>
GND	1A	18	GND]
GND	2A	28	GND	
+5∨	3A	38	+5V]
+5V	4A	4B	+5V	サウンドボリューム SOUND VR
	5A	58		7 300145 48
+12V	6A	6B	+12V	7 9 9 9 9
•	7A	7B		
COIN COUNTER 2	8A	88	COIN COUNTER 1	
COIN OUT 2	9A	9В	COIN OUT 1	DIP SW2 DIP SW1
SPEAKER (-)	10A	108	SPEAKER (+)	PARTS SIDE
	11A	11B		18 288
VIDEO GREEN	12A	12B	VIDEO RED	11 =
VIDEO SYNC	13A	13B	VIDEO BLUE	1 5
SERVICE SW	14A	148	VIDEO GND	
	15A	15 B	1	11 1 1
COIN SW 2	16A	16B	COIN SW 1	11 1 1
START SW 2	17A	178	START SW 1	1
2P UP	18A	188	1P UP	11 1 1
2P DOWN	19A	19B	1P DOWN	11 1
2P LEFT	20A	20B	1P LEFT	1
2P RIGHT	21A	21B	1P RIGHT	11
2P GUNBALL POWER SW	22A	22B	1P GUNBALL POWER SW	
2P FIRE SW	23A	238	1P FIRE SW	1
	24A	248		
	25A	258		
	26A	26B		
GND	27A	278	GND	
GND	28A	288	GND	

CONNECTOR KEL-1168-056-009 (3.97mm ピッチ)

電源 POWER SOURCE

+5V5A +12V1A (AF Amp. BTL System)

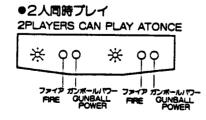

注意---+5VはPCB上の値です。

Caution — The power supply should be exactly 5V on this P.C.B.

4,8 VOLT

Dip Switch

DIP SWITCH 1		1	2	3	4	5	6	7	8
COIN 1	1 COIN 1 CREDIT	OFF	OFF	OFF			1		
	1 COIN 2 CREDIT	ON	OFF	OFF					
	1 COIN 3 DREDIT	OFF	ON	OFF					
	1 COIN 4 CREDIT	ON	ON	OFF					
	1 COIN 5 CREDIT	OFF	OFF	ON					Π.
	1 COIN 6 CREDIT	ON	OFF.	ON					
	2 COIN 1 CREDIT	OFF	ON	ON					
	2 COIN 3 CREDIT	ON	ON	ON					
COIN 2	1 COIN 1 CREDIT					OFF	OFF	OFF	
	1 COIN 2 CREDIT					ON	CFF	OFF	
	1 COIN 3 CREDIT					OFF	ON	OFF	
	1 COIN 4 CREDIT					ON	ON	OFF	
	1 COIN 5 CREDIT					OFF	OFF	ON	
	1 COIN 6 CREDIT	Ţ				ON	OFF	ON	<u> </u>
	2 COIN 1 CREDIT					OFF	ON	ON	
	2 COIN 3 CREDIT					ON	ON	ON	
最終面途中参加 Buy-In During Final Round	なし								OF
	あり	ľ j							ON
最終面コンティニュー	ROUND 6 から				OFF				
Final Round Continuation	ROUND 7 から	Ī			ON				

- ○最終面途中参加一最終面(ROUND7)での途中参加の有無を、設定できます。
- ・最終面コンティニューー最終面(ROUND) でコンティニューした時、どのラウンドからスタートするかを設定できます。
- * Buy-In During Final Round Determines if a second player can join in play during the final round (round 7).
- Final Round Continuation Determines which round the player can continue at after buy-in during the final round (round 7).
- "OFF": Player will continue at the beginning of round 6.
- "ON": Player will continue at the beginning of round 7.

DIP SWITCH 2		1	2	3	4	5	8	7	8
自慢の数 THE NUMBER OF STOCK	3	OFF	OFF			1			
	4	ON	OFF						
	5	OFF	ON						
	2	ON	ON						
	NORMAL	T		OFF	OFF		i		
難為度	DIFFICULTY 1			ON	OFF	i			
DIFFICULTY	. 2			OFF	ON				
	" 3			ON	ON				
	50000,200000					OFF	OFF	OFF	
	50000,300000					ON	OFF	OFF	
	100000,500000					OFF	ON	OFF	
エキステンド	50000					ON	ON	OFF	
EXTEND	100000					OFF	OFF	ON	
	200000					ON	OFF	ON	
	300000					OFF	ON	ON	
	SU NO					ON	ON	ON	
テモ書 EMONSTRATION SOUND	音有 SOUND								OFF
	音無 NON SOUND	1				i			ON