


SUPER MULTIPLE JUNCTION (SMJ)

Disconnecting and Connecting

- SMJ is located on left side of dash.
- To disconnect SMJ, loosen fixing bolt.

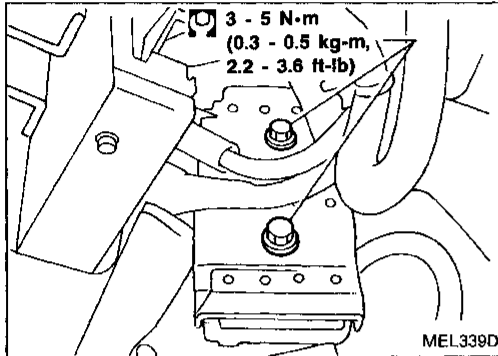

- To install SMJ, tighten bolts until orange "full-tight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)


CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

MAIN HARNESS

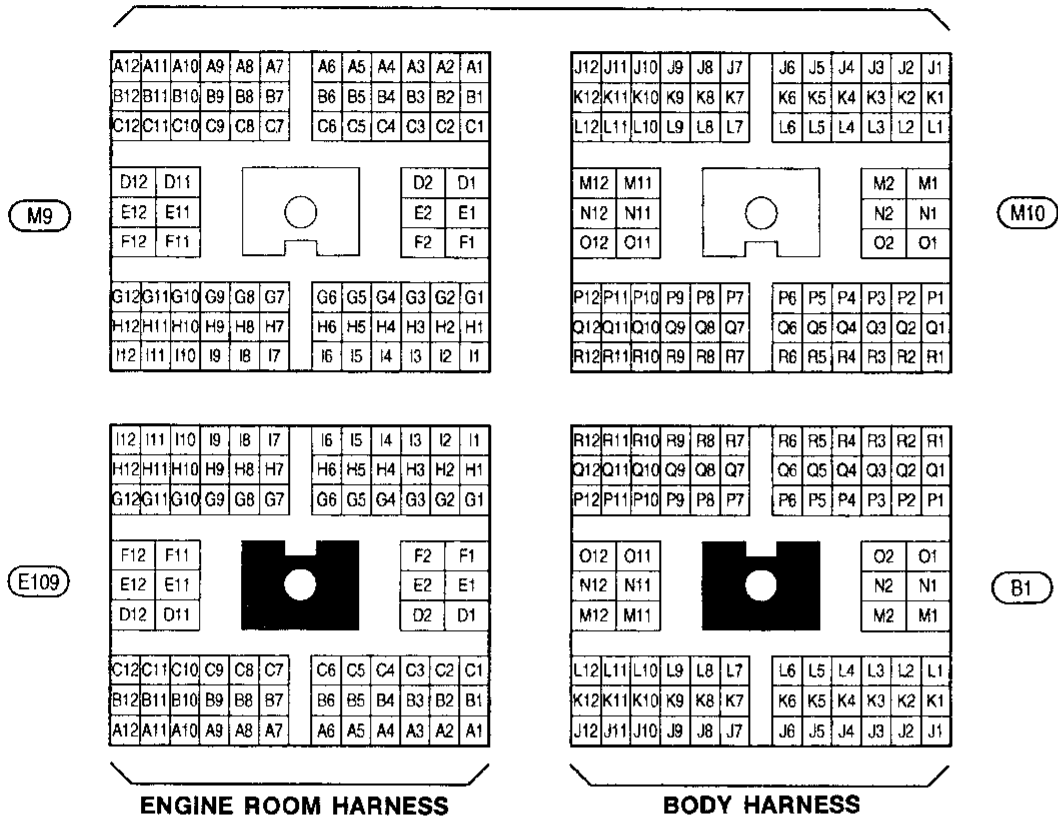


ECM (ECCS CONTROL MODULE)

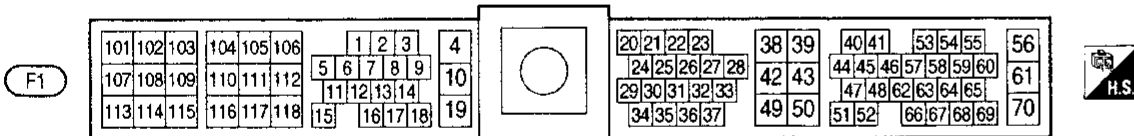


View from harness side

 A/T CONTROL UNIT



View from harness side

 SMART ENTRANCE CONTROL UNIT



View from harness side

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement (Cont'd)

ENGINE CONTROL HARNESS



F3	S48	S47	S46	S45	S44	S43	S42	S41	S40	S39	S38	S37	S36	S35	S34	S33	S16	S15	S14	S13	S12	S11	S10	S9
	S32	S31	S30	S29	S28	S27	S26	S25	S24	S23	S22	S21	S20	S19	S18	S17	S8	S7	S6	S5	S4	S3	S2	S1

M63	S32	S31	S30	S29	S28	S27	S26	S25	S24	S23	S22	S21	S20	S19	S18	S17	S8	S7	S6	S5	S4	S3	S2	S1
	S48	S47	S46	S45	S44	S43	S42	S41	S40	S39	S38	S37	S36	S35	S34	S33	S16	S15	S14	S13	S12	S11	S10	S9

MAIN HARNESS