

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram .....	<a href="#">DI-37</a> , <a href="#">DI-41</a>
<b>A</b>	
A/C component layout .....	<a href="#">ATC-23</a>
A/C compressor mounting .....	<a href="#">ATC-128</a>
A/C compressor special service tool .....	<a href="#">ATC-15</a>
A/C controller .....	<a href="#">ATC-105</a>
A/C diagnostic work flow (auto A/C) .....	<a href="#">ATC-94</a>
A/C evaporator .....	<a href="#">ATC-141</a>
A/C HFC134a (R134a) system service procedure .....	<a href="#">ATC-126</a>
A/C HFC134a (R134a) system service tools ...	<a href="#">ATC-16</a>
A/C lubricant (R134a) .....	<a href="#">ATC-24</a>
A/C lubrication oil .....	<a href="#">ATC-148</a>
A/C operational check .....	<a href="#">ATC-56</a>
A/C self-diagnoses (auto A/C) .....	<a href="#">ATC-48</a> , <a href="#">ATC-94</a>
A/C service data specification .....	<a href="#">ATC-148</a>
A/C trouble diagnoses (auto A/C) .....	<a href="#">ATC-36</a>
A/C, A - Wiring diagram .....	<a href="#">ATC-41</a>
A/T fluid checking .....	<a href="#">AT-13</a> , <a href="#">AT-51</a> , <a href="#">MA-22</a>
A/T fluid replacement .....	<a href="#">AT-13</a> , <a href="#">MA-24</a>
A/T fluid temperature sensor .....	<a href="#">AT-137</a>
A/T IND - Wiring diagram .....	<a href="#">DI-89</a>
A/T self-diagnoses .....	<a href="#">AT-102</a>
A/T shift lock system .....	<a href="#">AT-239</a>
A/T shift lock system - Wiring diagram	<a href="#">AT-240</a> , <a href="#">AT-241</a>
A/T trouble diagnoses .....	<a href="#">AT-42</a>
ABS - Wiring diagram .....	<a href="#">BRC-16</a> , <a href="#">BRC-20</a>
Accelerator control system .....	<a href="#">ACC-3</a>
Accelerator pedal position (APP) sensor .....	<a href="#">EC-619</a> , <a href="#">EC-627</a> , <a href="#">EC-643</a>
Accelerator pedal released position learning .....	<a href="#">EC-79</a>
AF1B1-Wiring diagram .....	<a href="#">EC-258</a> , <a href="#">EC-268</a> , <a href="#">EC-278</a> , <a href="#">EC-289</a> , <a href="#">EC-654</a>
AF1B2-Wiring diagram .....	<a href="#">EC-260</a> , <a href="#">EC-270</a> , <a href="#">EC-280</a> , <a href="#">EC-291</a> , <a href="#">EC-656</a>
AF1HB1-Wiring diagram .....	<a href="#">EC-177</a>
AF1HB2-Wiring diagram .....	<a href="#">EC-179</a>
Air bag .....	<a href="#">SRS-3</a>
Air bag precautions .....	<a href="#">SRS-3</a>
Air bleeding (hydraulic clutch) .....	<a href="#">CL-7</a>
Air bleeding for brake system .....	<a href="#">BR-11</a>
Air cleaner and air duct .....	<a href="#">EM-16</a>
Air cleaner filter replacement .....	<a href="#">MA-18</a>
Air conditioner cut control .....	<a href="#">EC-28</a>
Air flow meter - See Mass air flow sensor .....	<a href="#">EC-209</a> , <a href="#">EC-218</a>
Air fuel ratio sensor 1 .....	<a href="#">EC-255</a> , <a href="#">EC-266</a> , <a href="#">EC-276</a> , <a href="#">EC-286</a> , <a href="#">EC-652</a>
Air fuel ratio sensor 1 heater .....	<a href="#">EC-176</a>
Air mix. door motor .....	<a href="#">ATC-66</a> , <a href="#">ATC-120</a>
Air spoiler, rear .....	<a href="#">EI-30</a>
Ambient sensor .....	<a href="#">ATC-95</a> , <a href="#">ATC-107</a>
Angular tightening application .....	<a href="#">EM-5</a>
APPS1 - Wiring diagram .....	<a href="#">EC-621</a>
APPS2 - Wiring diagram .....	<a href="#">EC-629</a>
APPS3 - Wiring diagram .....	<a href="#">EC-645</a>
ASC/BS - Wiring diagram .....	<a href="#">EC-577</a> , <a href="#">EC-579</a>
ASC/SW - Wiring diagram .....	<a href="#">EC-569</a>
ASCBOF - Wiring diagram .....	<a href="#">EC-665</a> , <a href="#">EC-667</a>
ASCD .....	<a href="#">EC-29</a>
ASCD (automatic speed control device) .....	<a href="#">ACS-2</a>
ASCD brake switch .....	<a href="#">EC-575</a> , <a href="#">EC-664</a>
ASCD indicator lamp .....	<a href="#">EC-679</a>
ASCD steering switch .....	<a href="#">EC-567</a>
ASCIND - Wiring diagram .....	<a href="#">EC-680</a>
AT indicator lamp .....	<a href="#">DI-88</a>
Audio .....	<a href="#">AV-6</a>
AUDIO - Wiring diagram .....	<a href="#">AV-11</a>
Auto air conditioner - Wiring diagram .....	<a href="#">ATC-41</a>
Auto amp .....	<a href="#">ATC-106</a>
Auto anti-dazzling inside mirror .....	<a href="#">GW-54</a>
Automatic amplifier .....	<a href="#">ATC-57</a> , <a href="#">ATC-106</a>
Axle .....	<a href="#">MA-29</a>
Axle housing (rear) .....	<a href="#">RAX-8</a>
<b>B</b>	
Back Door .....	<a href="#">BL-104</a>
Back door .....	<a href="#">BL-104</a>
Back door opener - See Back door .....	<a href="#">BL-109</a>
BACK/L - Wiring diagram .....	<a href="#">LT-105</a> , <a href="#">LT-288</a>
Back-up lamp .....	<a href="#">LT-105</a> , <a href="#">LT-288</a>
Back-up lamp switch (M/T) .....	<a href="#">MT-11</a>
Basic inspection .....	<a href="#">EC-71</a>
Battery .....	<a href="#">SC-4</a>
Battery/Starting/Charging System Tester	<a href="#">SC-7</a> , <a href="#">SC-15</a> , <a href="#">SC-23</a>
BCM (Body control module) .....	<a href="#">BCS-3</a>
Blower motor .....	<a href="#">ATC-72</a> , <a href="#">ATC-113</a>
Blower unit .....	<a href="#">ATC-111</a>
Bose speaker amp. ....	<a href="#">AV-6</a> , <a href="#">AV-7</a>
Brake booster .....	<a href="#">BR-23</a>
Brake fluid change .....	<a href="#">BR-10</a>
Brake fluid level .....	<a href="#">MA-27</a>
Brake fluid level and line check .....	<a href="#">BR-10</a>
Brake hydraulic line .....	<a href="#">BR-12</a>
Brake inspection .....	<a href="#">MA-27</a>
Brake lines and cables inspection .....	<a href="#">MA-27</a>
Brake master cylinder .....	<a href="#">BR-15</a>
Brake pedal .....	<a href="#">BR-7</a>
Brake switch .....	<a href="#">EC-594</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-595</a>
Bulb specifications .....	<a href="#">LT-191</a> , <a href="#">LT-364</a>
Bumper, front .....	<a href="#">EI-14</a>
Bumper, rear .....	<a href="#">EI-17</a>
<b>C</b>	
Camshaft .....	<a href="#">EM-100</a>
Camshaft inspection .....	<a href="#">EM-102</a>
Camshaft position sensor (PHASE) .....	<a href="#">EC-402</a>
CAN .....	<a href="#">DI-116</a>
CAN - Wiring diagram .....	<a href="#">EC-162</a> , <a href="#">AT-107</a>
CAN communication	<a href="#">EC-31</a> , <a href="#">EC-161</a> , <a href="#">EC-164</a> , <a href="#">AT-31</a> ,

# ALPHABETICAL INDEX

[AT-106](#), [LT-11](#), [LT-73](#), [LT-112](#), [LT-177](#), [LT-195](#), [LT-257](#),  
[LT-295](#), [LT-350](#), [WW-11](#), [WW-66](#)  
 CHARGE - Wiring diagram ..... [SC-22](#)  
 Charging system ..... [SC-21](#)  
 Chassis and body maintenance ..... [MA-22](#)  
 CHIME - Wiring diagram ..... [DI-95](#), [DI-98](#)  
 Circuit breaker ..... [PG-29](#)  
 Closed loop control ..... [EC-25](#)  
 Clutch cover ..... [CL-16](#)  
 Clutch disc ..... [CL-16](#)  
 Clutch master cylinder ..... [CL-8](#)  
 Clutch operating cylinder ..... [CL-11](#)  
 Clutch pedal ..... [CL-5](#)  
 Clutch release bearing ..... [CL-14](#)  
 Clutch release mechanism ..... [CL-14](#)  
 Clutch withdrawal lever ..... [CL-14](#)  
 Coil spring (front) ..... [FSU-10](#)  
 Collision diagnosis ..... [SRS-59](#)  
 Combination lamp, rear, removal and installation .....  
[LT-134](#), [LT-317](#)  
 Combination meter ..... [DI-5](#)  
 Combination meter removal and installation - See  
 Instrument panel ..... [IP-11](#)  
 Combination switch ..... [LT-93](#), [LT-276](#)  
 Component Location (auto A/C) ..... [ATC-38](#)  
 Compression pressure ..... [EM-119](#)  
 Compressor special service tool ..... [ATC-15](#)  
 Condenser ..... [ATC-137](#), [ATC-141](#), [ATC-143](#)  
 Console box - See Instrument panel ..... [IP-10](#)  
 CONSULT for ABS ..... [BRC-25](#)  
 CONSULT for TCS ..... [BRC-65](#)  
 CONSULT for VDC ..... [BRC-118](#)  
 Control units (terminal arrangement) [PG-133](#), [PG-135](#)  
 Control valve (A/T) ..... [AT-36](#)  
 Converter housing installation ..... [AT-276](#)  
 COOL/F - Wiring diagram ..... [EC-555](#)  
 Cooling circuit (engine) ..... [CO-8](#)  
 Cooling fan ..... [CO-22](#)  
 Cooling fan motor ..... [EC-562](#)  
 Cowl top ..... [EI-20](#)  
 Cowl top cover ..... [EI-20](#)  
 Crankcase ventilation system - See Positive crankcase  
 ventilation ..... [EC-44](#)  
 Crankshaft position sensor (POS) ..... [EC-394](#)  
 Crash zone sensor ..... [SRS-54](#)  
 Cylinder head ..... [EM-119](#)

## D

D/LOCK - Wiring diagram ..... [BL-26](#)  
 Daytime light system ..... [LT-37](#), [LT-221](#)  
 Daytime running light - See Daytime light system .....  
[LT-37](#), [LT-221](#)  
 DEF - Wiring diagram ..... [GW-60](#), [GW-64](#)  
 Diagnosis sensor unit ..... [SRS-57](#)  
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),  
[EC-48](#)  
 Diagnostic trouble code (DTC) inspection priority chart  
[EC-89](#)

Differential gear oil replacement ..... [MA-25](#)  
 Direct clutch solenoid valve ..... [AT-157](#), [AT-159](#)  
 Display and amp.assembly ..... [ATC-57](#)  
 Door glass ..... [GW-51](#)  
 Door glass Fitting Adjustment(Front) ..... [GW-53](#)  
 Door lock ..... [BL-102](#)  
 Door mirror ..... [GW-81](#)  
 Door trim ..... [EI-33](#)  
 Door, front ..... [BL-97](#), [BL-98](#), [GW-51](#)  
 Drive belt ..... [EM-14](#)  
 Drive shaft (rear) ..... [RAX-10](#)  
 Driver air bag ..... [SRS-46](#)  
 DTRL - Wiring diagram ..... [LT-43](#), [LT-227](#)  
 Duct and grilles ..... [ATC-122](#)

## E

ECM power supply ..... [EC-152](#), [EC-517](#)  
 ECM/PW - Wiring diagram ..... [EC-518](#)  
 ECTS - Wiring diagram ..... [EC-234](#)  
 Electric throttle control actuator ..... [EC-605](#), [EC-617](#)  
 Electrical load signal circuit ..... [EC-682](#)  
 Electrical unit ..... [PG-133](#), [PG-135](#)  
 Electrical units location ..... [PG-121](#)  
 Electronic ignition (EI) system ..... [EC-26](#)  
 Engine control circuit diagram ..... [EC-109](#)  
 Engine control component parts location ..... [EC-96](#),  
[EC-102](#)  
 Engine control module (ECM) ..... [EC-521](#)  
 Engine control system diagram ..... [EC-22](#), [EC-23](#)  
 Engine coolant ..... [CO-10](#)  
 Engine coolant temperature sensor (ECTS) ... [EC-232](#),  
[EC-246](#)  
 Engine fail-safe system ..... [EC-91](#)  
 Engine oil ..... [LU-7](#)  
 Engine oil filter replacement ..... [MA-19](#)  
 Engine oil precautions ..... [GI-7](#)  
 Engine removal ..... [EM-131](#)  
 ETC1 - Wiring diagram ..... [EC-606](#)  
 ETC2 - Wiring diagram ..... [EC-601](#)  
 ETC3 - Wiring diagram ..... [EC-613](#)  
 EVAP canister ..... [EC-35](#)  
 EVAP canister purge volume control solenoid valve ...  
[EC-431](#), [EC-439](#)  
 EVAP canister vent control valve ..... [EC-446](#), [EC-455](#)  
 EVAP control system (small leak) diagnosis ... [EC-423](#)  
 EVAP control system pressure sensor ..... [EC-464](#),  
[EC-468](#), [EC-475](#)  
 EVAP control system purge flow monitoring diagnosis  
[EC-418](#)  
 EVAP vapor lines inspection ..... [MA-21](#)  
 Evaporative emission (EVAP) system ..... [EC-32](#)  
 Evaporator ..... [ATC-141](#)  
 EVCB1 - Wiring diagram ..... [EC-202](#)  
 EVCB2 - Wiring diagram ..... [EC-204](#)  
 EVCSB1 - Wiring diagram ..... [EC-539](#)  
 EVCSB2 - Wiring diagram ..... [EC-541](#)  
 Exhaust system ..... [EX-3](#)  
 Exhaust system inspection ..... [EX-3](#), [MA-22](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

Exhaust valve timing control (Bank 1) ..... [EC-171](#)  
Exhaust valve timing control (Bank 2) ..... [EC-171](#)  
Exhaust valve timing control learning ..... [EC-78](#)  
Exhaust valve timing control magnet retarder (Bank 1)  
[EC-201](#)  
Exhaust valve timing control magnet retarder (Bank 2)  
[EC-201](#)  
Exhaust valve timing control position sensor (Bank 1) .  
[EC-538](#)  
Exhaust valve timing control position sensor (Bank 2) .  
[EC-538](#)  
Expansion valve ..... [ATC-143](#)

## F

F/LID - Wiring diagram ..... [BL-53](#)  
F/PUMP - Wiring diagram ..... [EC-693](#)  
Final drive pre-inspection ..... [RFD-20](#), [RFD-40](#)  
Floor trim ..... [EI-43](#)  
Flow charts ..... [GI-26](#)  
Fluid temperature sensor (A/T) ..... [AT-137](#)  
Fluorescent leak detector ..... [ATC-144](#)  
Flywheel (clutch) ..... [CL-16](#)  
Flywheel runout ..... [EM-165](#)  
Freeze frame data ..... [EC-52](#)  
Front axle ..... [FAX-4](#)  
Front brake solenoid valve ..... [AT-153](#), [AT-155](#)  
Front bumper ..... [EI-14](#)  
Front door ..... [BL-97](#), [BL-98](#), [GW-51](#)  
Front passenger air bag ..... [SRS-50](#)  
Front seat belt ..... [SB-4](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-56](#)  
Front suspension ..... [FSU-5](#)  
Front washer ..... [WW-6](#)  
Front wiper ..... [WW-6](#)  
FTS - Wiring diagram ..... [AT-138](#)  
FTTS - Wiring diagram ..... [EC-364](#), [EC-368](#)  
Fuel cut control (at no load high engine speed) . [EC-27](#)  
Fuel filter replacement ..... [FL-4](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system (Bank 1) ..... [EC-338](#), [EC-350](#)  
Fuel injection system (Bank 2) ..... [EC-338](#), [EC-350](#)  
Fuel injector ..... [EC-684](#)  
Fuel level sensor ..... [EC-500](#), [EC-502](#), [EC-504](#)  
Fuel lid opener, electric ..... [BL-52](#)  
Fuel line inspection ..... [FL-3](#), [MA-18](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-82](#)  
Fuel pressure release ..... [EC-81](#)  
Fuel pump ..... [EC-692](#)  
Fuel pump and gauge ..... [FL-4](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-10](#)  
Fuel tank temperature sensor ..... [EC-362](#), [EC-367](#)  
Fuel tank vacuum relief valve ..... [EC-35](#)  
FUELB1 - Wiring diagram ..... [EC-340](#), [EC-352](#)  
FUELB2 - Wiring diagram ..... [EC-342](#), [EC-354](#)  
Fuse ..... [PG-29](#)  
Fuse and fusible link box ..... [PG-142](#)

Fusible link ..... [PG-29](#)

## G

Gauges ..... [DI-5](#)  
Generic scan tool (GST) ..... [EC-133](#)  
Glass ..... [GW-11](#), [GW-51](#)  
Ground distribution ..... [PG-44](#)

## H

H/LAMP - Wiring diagram ..... [LT-13](#), [LT-197](#)  
Harness connector ..... [PG-130](#)  
Harness layout ..... [PG-73](#)  
Hazard warning lamp ..... [LT-71](#)  
Headlamp ..... [LT-9](#), [LT-193](#)  
Headlining - See Roof trim ..... [EI-44](#), [EI-46](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-299](#), [EC-311](#),  
[EC-326](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-299](#), [EC-311](#),  
[EC-326](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-184](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-184](#)  
Heated seat ..... [SE-59](#)  
Heater and cooling unit (Heater core) ..... [ATC-115](#)  
HFC134a (R134a) system service procedure [ATC-126](#)  
HFC134a (R134a) system service tools ..... [ATC-16](#)  
High and low reverse clutch solenoid valve .... [AT-161](#),  
[AT-163](#)  
Hood ..... [BL-13](#)  
Hood lock system ..... [BL-16](#)  
Horn ..... [WW-58](#), [WW-113](#)  
HORN - Wiring diagram ..... [WW-58](#), [WW-113](#)  
How to erase DTC for OBD system ..... [EC-60](#)

## I

IATS - Wiring diagram ..... [EC-228](#)  
Idle air volume learning ..... [EC-79](#)  
Idle speed ..... [EC-76](#)  
Idle speed control (ISC) ..... [EC-508](#), [EC-510](#)  
Ignition coil ..... [EM-35](#), [EC-699](#)  
Ignition control system ..... [EC-699](#)  
Ignition timing ..... [EC-76](#)  
IGNSYS - Wiring diagram ..... [EC-700](#)  
ILL - Wiring diagram ..... [LT-180](#), [LT-353](#)  
Illumination ..... [LT-175](#)  
In vehicle sensor ..... [ATC-97](#), [ATC-108](#)  
INJECT - Wiring diagram ..... [EC-685](#)  
Input clutch solenoid valve ..... [AT-149](#), [AT-151](#)  
Instrument panel ..... [IP-10](#)  
Intake air temperature sensor ..... [EC-226](#), [EC-250](#)  
Intake door control linkage adjustment ..... [ATC-71](#)  
Intake door motor ..... [ATC-69](#), [ATC-114](#)  
Intake manifold ..... [EM-23](#)  
Intake manifold collector ..... [EM-18](#)  
Intake sensor ..... [ATC-103](#), [ATC-110](#)  
Intake valve timing control (Bank 1) ..... [EC-166](#)  
Intake valve timing control (Bank 2) ..... [EC-166](#)

# ALPHABETICAL INDEX

Intake valve timing control solenoid valve (Bank 1) ..... [EC-193](#)  
 Intake valve timing control solenoid valve (Bank 2) ..... [EC-193](#)  
 Integrated homelink transmitter ..... [BL-177](#)  
 Interior ..... [EI-35](#)  
 Interior lamp ..... [LT-135](#), [LT-318](#)  
 IPDM (Intelligent power distribution module engine room) ..... [PG-30](#)  
 IVCB1 - Wiring diagram ..... [EC-194](#)  
 IVCB2 - Wiring diagram ..... [EC-196](#)

## K

KEYLES - Wiring diagram ..... [BL-66](#)  
 Knock sensor (KS) ..... [EC-389](#)  
 KS - Wiring diagram ..... [EC-390](#)

## L

LAN system circuit ..... [ATC-59](#)  
 License lamp ..... [LT-110](#)  
 Line pressure solenoid valve ..... [AT-132](#)  
 Line pressure test (A/T) ..... [AT-53](#)  
 Liquid gasket application ..... [LU-2](#), [CO-2](#)  
 Location of electrical units ..... [PG-121](#)  
 Lock, door ..... [BL-102](#)  
 Low coast brake solenoid valve ..... [AT-165](#), [AT-167](#)  
 Low tire pressure warning system ..... [WT-11](#)  
 Lubricant (R134a) A/C ..... [ATC-24](#)  
 Lubrication circuit (engine) ..... [LU-4](#)  
 Lubrication oil A/C ..... [ATC-148](#)

## M

M/ANT - Wiring diagram ..... [AV-52](#)  
 M/T major overhaul ..... [MT-21](#)  
 M/T oil replacement ..... [MT-9](#)  
 M/T removal and installation ..... [MT-18](#)  
 MAFS - Wiring diagram ..... [EC-212](#), [EC-220](#)  
 Magnet clutch ..... [ATC-77](#)  
 MAIN - Wiring diagram ..... [EC-152](#), [AT-182](#)  
 Maintenance (engine) ..... [MA-14](#)  
 Major overhaul (Final drive) ..... [RFD-19](#)  
 Malfunction indicator lamp (MIL) ..... [EC-62](#)  
 Manual transmission oil replacement ..... [MA-22](#)  
 Mass air flow sensor (MAFS) ..... [EC-209](#), [EC-218](#)  
 Master cylinder (clutch) ..... [CL-8](#)  
 Meter ..... [DI-5](#)  
 METER - Wiring diagram ..... [DI-13](#), [DI-16](#)  
 MIL data link connectors circuit ..... [EC-718](#)  
 MIL/DL - Wiring diagram ..... [EC-718](#)  
 MIRROR - Wiring diagram ..... [GW-80](#)  
 Mirror, door ..... [GW-81](#)  
 Mirror, out side ..... [GW-81](#)  
 Misfire ..... [EC-379](#)  
 MMSW - Wiring diagram ..... [AT-170](#)  
 Mode door control linkage adjustment ..... [ATC-65](#)  
 Mode door motor ..... [ATC-63](#), [ATC-119](#)

Molding - See Exterior ..... [EI-22](#), [EI-26](#)  
 Multiport fuel injection (MFI) system ..... [EC-24](#)  
 Multiport fuel injection precautions ..... [GI-6](#)

## N

NATS - Wiring diagram ..... [BL-161](#)  
 NAVI - Wiring diagram ..... [AV-62](#), [AV-66](#)  
 Navigation system ..... [AV-56](#)  
 NONDTC - Wiring diagram ..... [AT-189](#), [AT-192](#)  
 NVH troubleshooting (BR) ..... [BR-6](#)  
 NVH troubleshooting (Final drive) ..... [RFD-7](#)  
 NVH troubleshooting (Propeller shaft) ..... [PR-4](#)  
 NVH troubleshooting (WT) ..... [WT-6](#)  
 NVIS (Nissan vehicle immobilizer system) ..... [BL-158](#)

## O

O2H2B1 - Wiring diagram ..... [EC-186](#)  
 O2H2B2 - Wiring diagram ..... [EC-188](#)  
 O2S2B1 - Wiring diagram ... [EC-302](#), [EC-314](#), [EC-329](#)  
 O2S2B2 - Wiring diagram ... [EC-304](#), [EC-316](#), [EC-331](#)  
 Oil cooler (engine) ..... [LU-11](#)  
 Oil filter ..... [LU-10](#)  
 Oil pressure (engine) ..... [LU-8](#)  
 Oil pump (engine) ..... [LU-13](#)  
 Oil pump regulator valve (engine) ..... [LU-13](#)  
 Oil seal replacement (front of final drive) ..... [RFD-10](#)  
 Oil seal replacement (side of final drive) ..... [RFD-15](#)  
 On board diagnostic system ..... [EC-47](#)  
 Operating cylinder (clutch) ..... [CL-11](#)  
 ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)  
 Out side mirror ..... [GW-81](#)  
 Overheat ..... [EC-551](#)

## P

P/SCKT - Wiring diagram ..... [WW-56](#), [WW-111](#)  
 Park/Neutral position switch ..... [EC-530](#)  
 Park/neutral position switch (A/T) ..... [AT-115](#)  
 Parking brake control ..... [PB-4](#)  
 Parking lamp ..... [LT-110](#)  
 PCV (positive crankcase ventilation) ..... [EC-44](#)  
 PGC/V - Wiring diagram ..... [EC-433](#), [EC-441](#)  
 PHSB1 - Wiring diagram ..... [EC-404](#)  
 PHSB2 - Wiring diagram ..... [EC-406](#)  
 PNP/SW - Wiring diagram ... [EC-532](#), [EC-534](#), [AT-116](#)  
 POS - Wiring diagram ..... [EC-396](#)  
 POWER - Wiring diagram ..... [PG-6](#), [PG-18](#)  
 Power door lock ..... [BL-21](#)  
 Power socket ..... [WW-56](#), [WW-111](#)  
 Power steering fluid level ..... [PS-6](#), [MA-29](#)  
 Power steering gear ..... [PS-18](#)  
 Power steering oil pump ..... [PS-29](#)  
 Power steering pressure (PSP) sensor ..... [EC-512](#)  
 Power steering system bleeding ..... [PS-6](#)  
 Power supply routing ..... [PG-5](#)  
 Power window ..... [GW-18](#)  
 PRE/SE - Wiring diagram ..... [EC-470](#), [EC-477](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L



IDX



# ALPHABETICAL INDEX

Precautions (General) .....	<a href="#">GI-3</a>	Specification value .....	<a href="#">EC-141</a>
Pressure plate - See Clutch cover .....	<a href="#">CL-16</a>	Speedometer .....	<a href="#">DI-5</a>
Pressure switch 1 .....	<a href="#">AT-155, AT-174</a>	Spiral cable .....	<a href="#">SRS-48</a>
Pressure switch 2 .....	<a href="#">AT-167</a>	SRS - See Supplemental Restraint System .....	<a href="#">SRS-5</a>
Pressure switch 3 .....	<a href="#">AT-151, AT-176</a>	SRS - Wiring diagram .....	<a href="#">SRS-13</a>
Pressure switch 5 .....	<a href="#">AT-159, AT-178</a>	SRS Trouble diagnoses .....	<a href="#">SRS-9</a>
Pressure switch 6 .....	<a href="#">AT-163, AT-180</a>	Stabilizer bar (rear) .....	<a href="#">RSU-16</a>
Pressure test (A/T) .....	<a href="#">AT-53</a>	Stall test (A/T) .....	<a href="#">AT-51</a>
Propeller shaft .....	<a href="#">PR-5</a>	Standardized relay .....	<a href="#">PG-139</a>
Propeller shaft on vehicle service .....	<a href="#">PR-5</a>	START - Wiring diagram .....	<a href="#">SC-12</a>
Propeller shaft vibration .....	<a href="#">PR-5</a>	Starter .....	<a href="#">SC-10</a>
PS/SEN - Wiring diagram .....	<a href="#">EC-513</a>	Starting system .....	<a href="#">SC-10</a>

## R

Radiator .....	<a href="#">CO-13</a>
Radio - See Audio .....	<a href="#">AV-6</a>
Rear axle .....	<a href="#">RAX-6</a>
Rear bumper .....	<a href="#">EI-17</a>
Rear combination lamp removal and installation .....	<a href="#">LT-134, LT-317</a>
Rear suspension .....	<a href="#">RSU-5</a>
Rear washer .....	<a href="#">WW-40, WW-95</a>
Rear window defogger .....	<a href="#">GW-56</a>
Rear wiper .....	<a href="#">WW-40</a>
Refrigerant discharging evacuating charging .....	<a href="#">ATC-126</a>
Refrigerant lines .....	<a href="#">ATC-126</a>
Refrigerant pressure sensor .....	<a href="#">EC-712, ATC-83, ATC-141</a>
Refrigeration cycle .....	<a href="#">ATC-19</a>
Release bearing (clutch) .....	<a href="#">CL-14</a>
Remote keyless entry system .....	<a href="#">BL-60</a>
Removal and installation (A/T) .....	<a href="#">AT-274</a>
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	<a href="#">MT-11</a>
Revolution sensor (A/T) .....	<a href="#">AT-121</a>
Rocker cover .....	<a href="#">EM-44</a>
Room lamp - See Interior lamp .....	<a href="#">LT-135, LT-318</a>
ROOM/L - Wiring diagram .....	<a href="#">LT-141, LT-150, LT-323</a>
RP/SEN - Wiring diagram .....	<a href="#">EC-713</a>

## S

SAE J1979 - Service \$01 - 09 .....	<a href="#">EC-47</a>
SEAT - Wiring diagram .....	<a href="#">SE-12</a>
Seat belt inspection .....	<a href="#">SB-8</a>
Seat belt, front .....	<a href="#">SB-4</a>
Self-diagnostic results .....	<a href="#">EC-64</a>
SEN/PW - Wiring diagram .....	<a href="#">EC-525</a>
SHIFT - Wiring diagram .....	<a href="#">AT-240, AT-241</a>
Shift lock system .....	<a href="#">AT-239</a>
Shift schedule .....	<a href="#">AT-343</a>
Shock absorber (front) .....	<a href="#">FSU-10</a>
Shock absorber (rear) .....	<a href="#">RSU-9</a>
Side air bag (satellite) sensor .....	<a href="#">SRS-55</a>
Side trim .....	<a href="#">EI-35</a>
SMJ (super multiple junction) .....	<a href="#">PG-137</a>
Spark plug .....	<a href="#">EM-36</a>
Spark plug replacement .....	<a href="#">MA-20</a>

Specification value .....	<a href="#">EC-141</a>
Speedometer .....	<a href="#">DI-5</a>
Spiral cable .....	<a href="#">SRS-48</a>
SRS - See Supplemental Restraint System .....	<a href="#">SRS-5</a>
SRS - Wiring diagram .....	<a href="#">SRS-13</a>
SRS Trouble diagnoses .....	<a href="#">SRS-9</a>
Stabilizer bar (rear) .....	<a href="#">RSU-16</a>
Stall test (A/T) .....	<a href="#">AT-51</a>
Standardized relay .....	<a href="#">PG-139</a>
START - Wiring diagram .....	<a href="#">SC-12</a>
Starter .....	<a href="#">SC-10</a>
Starting system .....	<a href="#">SC-10</a>
Steering gear and linkage inspection .....	<a href="#">MA-28</a>
Steering linkage .....	<a href="#">PS-18</a>
Steering wheel and column .....	<a href="#">PS-8, PS-11</a>
Steering wheel turning force .....	<a href="#">PS-8</a>
Stop lamp .....	<a href="#">LT-102, LT-285</a>
Stop lamp switch .....	<a href="#">EC-594</a>
STOP/L - Wiring diagram .....	<a href="#">LT-102, LT-285</a>
STSIG - Wiring diagram .....	<a href="#">AT-110, AT-111</a>
Sunload sensor .....	<a href="#">ATC-100, ATC-109</a>
Supplemental Restraint System .....	<a href="#">SRS-5</a>
Supplemental restraint system - Wiring diagram .....	<a href="#">SRS-13</a>
Suspension .....	<a href="#">MA-29</a>
Symbols and abbreviations .....	<a href="#">GI-10, GI-22</a>
Symptom matrix chart .....	<a href="#">EC-92</a>
System readiness test (SRT) code .....	<a href="#">EC-53</a>

## T

Tachometer .....	<a href="#">DI-5</a>
Tail lamp .....	<a href="#">LT-110</a>
TAIL/L - Wiring diagram .....	<a href="#">LT-114, LT-297</a>
TCM circuit diagram .....	<a href="#">AT-50</a>
TCM inspection table .....	<a href="#">AT-89</a>
TCS - Wiring diagram .....	<a href="#">BRC-55, BRC-59</a>
Three way catalyst .....	<a href="#">EM-25</a>
Three way catalyst function (Bank 1) .....	<a href="#">EC-412</a>
Three way catalyst function (Bank 2) .....	<a href="#">EC-412</a>
Three way catalyst precautions .....	<a href="#">GI-5</a>
Throttle body .....	<a href="#">EM-22</a>
Throttle control motor .....	<a href="#">EC-612</a>
Throttle control motor relay .....	<a href="#">EC-599</a>
Throttle position sensor (TPS) .....	<a href="#">EC-238, EC-371, EC-563, EC-565, EC-635</a>
Throttle valve closed position learning .....	<a href="#">EC-79</a>
Throwout bearing - See Clutch release bearing .....	<a href="#">CL-14</a>
Tie-rod .....	<a href="#">PS-18</a>
Timing chain .....	<a href="#">EM-59</a>
Tire rotation .....	<a href="#">WT-9, MA-27</a>
Torque converter installation .....	<a href="#">AT-275, AT-276</a>
Torque converter clutch solenoid valve .....	<a href="#">AT-128, AT-130</a>
TPS1 - Wiring diagram .....	<a href="#">EC-373</a>
TPS2 - Wiring diagram .....	<a href="#">EC-240</a>
TPS3 - Wiring diagram .....	<a href="#">EC-637</a>
Transverse link (front) .....	<a href="#">FSU-13</a>
Triple meter .....	<a href="#">DI-32</a>
TRNSCV - Wiring diagram .....	<a href="#">BL-177</a>

# ALPHABETICAL INDEX

Trouble diagnoses ..... [GI-11](#)  
Trunk lid ..... [BL-111](#)  
TURN - Wiring diagram ..... [LT-75](#), [LT-259](#)  
Turn signal lamp ..... [LT-71](#)  
Two trip detection logic ..... [EC-47](#)

## U

Unified meter and A/C amp. .... [DI-54](#)  
Upper link (front susp.) ..... [FSU-14](#)

## V

Vacuum hose (brake system) ..... [BR-25](#)  
Vacuum hose drawing (Engine control) ..... [EC-108](#)  
Valve clearance ..... [EM-111](#)  
Valve guide ..... [EM-127](#)  
Valve lifter ..... [EM-104](#)  
Valve seat ..... [EM-129](#)  
Valve spring ..... [EM-130](#)  
VDC -Wiring diagram ..... [BRC-102](#), [BRC-109](#)  
Vehicle security (theft warning) system ..... [BL-129](#)  
Vehicle speed sensor (VSS) ..... [EC-506](#), [EC-593](#)  
VEHSEC - Wiring diagram ..... [BL-134](#)  
VENT/V - Wiring diagram ... [EC-448](#), [EC-450](#), [EC-457](#),  
[EC-459](#)  
VIN registration ..... [EC-77](#)  
VSS A/T - Wiring diagram ..... [AT-123](#)

## W

WARN - Wiring diagram ..... [DI-70](#), [DI-79](#)  
Warning chime ..... [DI-92](#)  
Warning lamps ..... [DI-68](#)  
Washer, front ..... [WW-6](#)  
Washer, rear ..... [WW-40](#)  
Water pump ..... [CO-24](#)  
Water temperature gauge ..... [DI-5](#)  
Wheel alignment (front) ..... [FSU-6](#)  
Wheel alignment (rear) ..... [RSU-5](#)  
Wheel balance ..... [WT-8](#), [MA-25](#)  
Wheel bearing (front) ..... [FAX-4](#)  
Wheel bearing (rear) ..... [RAX-6](#)  
Wheel hub (front) ..... [FAX-4](#)  
Wheel hub (rear) ..... [RAX-6](#)  
Wheel sensor (VDC) ..... [BRC-153](#)  
Wheel sensors (ABS) ..... [BRC-41](#)  
Wheel sensors (TCS) ..... [BRC-86](#)  
WINDOW - Wiring diagram ..... [GW-23](#)  
Window, door ..... [GW-51](#)  
Windshield ..... [GW-11](#)  
WIP/R - Wiring diagram ..... [WW-42](#), [WW-97](#)  
WIPER - Wiring diagram ..... [WW-13](#), [WW-68](#)  
Wiper and washer ..... [WW-61](#)  
Wiper, front ..... [WW-6](#)  
Wiper, rear ..... [WW-40](#)  
Wiring Diagram (Cell code) list ..... [PG-118](#)  
Withdrawal lever (clutch) ..... [CL-14](#)  
WT-T/WARN - Wiring diagram ..... [WT-17](#), [WT-20](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX