

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS actuator .....	BR-38	A/C self-diagnoses (auto A/C).....	HA-71
ABS (anti-lock brake system).....	BR-35	A/C switch .....	HA-14
ABS circuit diagram.....	BR-42	A/C symptom chart (auto A/C).....	HA-67
ABS component parts and connector		A/C symptom chart (manual A/C).....	HA-18
locations .....	BR-41	A/C system description (auto A/C).....	HA-60
ABS control unit .....	BR-36	A/C trouble diagnoses (auto A/C).....	HA-63
ABS hydraulic circuit .....	BR-6	A/C trouble diagnoses (manual A/C) .....	HA-15
ABS self-diagnosis .....	BR-47	A/C wiring diagram (auto A/C) .....	HA-97
ABS symptom chart .....	BR-49	A/C wiring diagram (manual A/C) .....	HA-37
ABS system components.....	BR-36	Accel drum unit .....	EM-28
ABS trouble diagnoses.....	BR-39	Accelerator control system.....	FE-3
ABS wheel sensors.....	BR-36	Accelerator wire adjustment.....	FE-3
ABS wiring diagram.....	BR-43	Air bag.....	RS-11
A/C air flow.....	HA-13	Air bag disposal.....	RS-15
A/C circuit diagram (auto A/C).....	HA-96	Air bag module.....	RS-11
A/C circuit diagram (manual A/C) .....	HA-35	Air bag precautions .....	GI-2
A/C component layout.....	HA-12	Air bag removal and installation.....	RS-11
A/C compressor clutch removal and		Air bleeding for brake system .....	BR-5
installation .....	HA-143	Air cleaner filter replacement.....	MA-13
A/C compressor description.....	HA-5	Air conditioner cut control .....	EC-21
A/C compressor mounting.....	HA-142	Air conditioning - See A/C.....	HA-11
A/C compressor precaution.....	HA-5	Air cut valve inspection .....	EC-263
A/C compressor special service tool.....	HA-6	Air flow meter - See Mass air flow sensor.....	EC-96
A/C control linkage adjustment (auto A/C).....	HA-121	Air mix door control linkage adjustment	
A/C control linkage adjustment (manual A/C).....	HA-57	(auto A/C).....	HA-121
A/C control operation (auto A/C).....	HA-61	Air mix door control linkage adjustment	
A/C control operation (manual A/C).....	HA-14	(manual A/C).....	HA-58
A/C diagnostic work flow (auto A/C) .....	HA-63	Air mix door motor (auto A/C).....	HA-126
A/C diagnostic work flow (manual A/C) .....	HA-15	Air mix door motor (manual A/C) .....	HA-58
A/C harness layout (auto A/C) .....	HA-94	Air spoiler, rear - See Rear air spoiler.....	BT-38
A/C harness layout (manual A/C) .....	HA-33	Alternator.....	EL-32
A/C HFC134a (R134a) system introduction .....	HA-11	Ambient sensor .....	HA-125
A/C HFC134a (R134a) system precaution .....	HA-2	Angular tightening application.....	EM-2
A/C HFC134a (R134a) system service		Antenna .....	EL-141
procedure .....	HA-137	Antenna - See Power antenna.....	EL-141
A/C HFC134a (R134a) system service tools.....	HA-6	Anti-freeze coolant .....	MA-8
A/C HFC134a system service equipment		Anti-freeze coolant mixture ratio .....	MA-9
precaution .....	HA-7	ASCD (automatic speed control device).....	EL-147
A/C lubricant (R134a).....	HA-139	A/T control DTC:P0600.....	EC-198
A/C lubrication oil.....	HA-139	AT control unit .....	AT-103
A/C operational check (auto A/C) .....	HA-64	AT diagnosis communication line.....	EC-228
A/C operational check (manual A/C).....	HA-16	AT fluid temperature sensor.....	AT-107
A/C performance chart (auto A/C) .....	HA-89	AT removal and installation .....	AT-128
A/C performance chart (manual A/C).....	HA-28	AT self-diagnoses .....	AT-47
A/C performance test diagnoses		AT shift lock system .....	AT-118
(auto A/C).....	HA-87	AT trouble diagnoses .....	AT-14
A/C performance test diagnoses		Audio .....	EL-135
(manual A/C) .....	HA-26	Audio and A/C control removal and	
A/C pressure switch .....	HA-11	installation - See Instrument panel.....	BT-12
A/C push control.....	HA-14	Automatic amplifier.....	HA-126
A/C relay (auto A/C).....	HA-120	Automatic transaxle number .....	GI-35
A/C relay (manual A/C) .....	HA-57	Automatic transmission fluid .....	MA-8
		Automatic transmission fluid replacement .....	MA-17
		Auxiliary air control (AAC).....	EC-194

# ALPHABETICAL INDEX

## B

<p>Back-up lamp ..... EL-50</p> <p>Back-up lamp switch (MT) -See reverse lamp switch ..... MT-6</p> <p>Ball joint front axle..... FA-24</p> <p>Battery ..... EL-18</p> <p>Baulk ring (MT)..... MT-12</p> <p>Belt inspection (drive belt)..... MA-10</p> <p>Blower motor (auto A/C)..... HA-120</p> <p>Blower motor (manual A/C)..... HA-56</p> <p>Blower relay..... HA-120</p> <p>Blower resistor..... HA-56</p> <p>Board-on lift..... GI-38</p> <p>Body alignment..... BT-39</p> <p>Boring/horning cylinder block..... EM-46</p> <p>Brake booster ..... BR-14</p> <p>Brake control valve (Proportioning valve)..... BR-7</p> <p>Brake fluid ..... MA-8</p> <p>Brake fluid change ..... BR-4</p> <p>Brake fluid level..... MA-18</p> <p>Brake fluid level and line check ..... BR-4</p> <p>Brake hydraulic line..... BR-6</p> <p>Brake inspection..... MA-18</p> <p>Brake lines and cables inspection ..... MA-18</p> <p>Brake lining temporary checking..... MA-19</p> <p>Brake master cylinder ..... BR-11</p> <p>Brake pedal ..... BR-9</p> <p>Bumper, front - See Front bumper..... BT-6</p> <p>Bumper, rear - See Rear bumper ..... BT-8</p>	<p>Clutch pedal height ..... CL-4</p> <p>Clutch release bearing ..... CL-8</p> <p>Clutch withdrawal lever ..... CL-8</p> <p>Coil spring (front)..... FA-22</p> <p>Coil spring (rear) ..... RA-11</p> <p>Combination lamp, rear, removal and installation ..... BT-25</p> <p>Combination meter ..... EL-71</p> <p>Combination meter (needle type)..... EL-71</p> <p>Combination meter removal and installation - See Instrument panel..... BT-12</p> <p>Combination switch ..... EL-34</p> <p>Compression pressure ..... EM-11</p> <p>Compressor clutch removal and installation..... HA-143</p> <p>Compressor description ..... HA-5</p> <p>Compressor mounting..... HA-142</p> <p>Compressor precaution..... HA-5</p> <p>Compressor special service tool..... HA-6</p> <p>Connecting rod ..... EM-46</p> <p>Connecting rod bearing clearance..... EM-49</p> <p>Connecting rod bushing clearance ..... EM-50</p> <p>Console box - See Instrument panel..... BT-12</p> <p>CONSULT for ECCS ..... EC-43</p> <p>CONSULT general information ..... GI-32</p> <p>Control lever (MT) ..... MT-10</p> <p>Control valve (AT) ..... AT-155</p> <p>Converter housing installation..... AT-129</p> <p>Coolant ..... MA-8</p> <p>Coolant replacement..... MA-11</p> <p>Cooling circuit (engine) ..... LC-8</p> <p>Cooling fan ..... LC-12</p> <p>Cooling fan control ..... EC-231</p> <p>Cooling fan control system..... LC-12</p> <p>Cooling fan motor (auto A/C)..... HA-94</p> <p>Cooling fan motor (manual A/C) ..... HA-33</p> <p>Cooling fan motor inspection ..... EC-242</p> <p>Cooling fan relay (auto A/C)..... HA-94</p> <p>Cooling fan relay (manual A/C)..... HA-33</p> <p>Cooling fan relay inspection..... EC-242</p> <p>Cornering lamp..... EL-61</p> <p>Coupling sleeve (MT)..... MT-12</p> <p>Crank angle sensor built into distributor - See Camshaft position sensor ..... EC-171</p> <p>Crankshaft assembly..... EM-52</p> <p>Crankshaft bearing clearance ..... EM-48</p> <p>Crankshaft inspection..... EM-47</p> <p>Crankshaft position sensor (OBD) DTC0802, P0335..... EC-167</p> <p>Crankshaft position sensor (OBD) DTC0802, P0335 inspection ..... EC-170</p> <p>Cruise control - See ASCD ..... EL-147</p> <p>Cylinder block..... EM-43</p> <p>Cylinder block boring..... EM-46</p> <p>Cylinder head ..... EM-30</p>
---	---

## C

<p>Camshaft inspection..... EM-32</p> <p>Camshaft position sensor (CMPS)..... EC-171</p> <p>Camshaft position sensor inspection ..... EC-174</p> <p>Charging system ..... EL-29</p> <p>Chassis and body maintenance..... MA-16</p> <p>Check connector for ECCS checker box..... EC-43</p> <p>Cigarette lighter..... EL-130</p> <p>Circuit breaker..... EL-13</p> <p>Clearance lamp ..... EL-51</p> <p>Clock..... EL-130</p> <p>Closed loop control ..... EC-129</p> <p>Closed throttle position switch ..... EC-112</p> <p>Clutch cover ..... CL-9</p> <p>Clutch disc..... CL-9</p> <p>Clutch fluid..... MA-8</p> <p>Clutch fluid level..... MA-16</p> <p>Clutch master cylinder..... CL-6</p> <p>Clutch operating cylinder..... CL-7</p> <p>Clutch pedal ..... CL-3</p> <p>Clutch pedal free play ..... CL-4</p>	<p>Clutch pedal height ..... CL-4</p> <p>Clutch release bearing ..... CL-8</p> <p>Clutch withdrawal lever ..... CL-8</p> <p>Coil spring (front)..... FA-22</p> <p>Coil spring (rear) ..... RA-11</p> <p>Combination lamp, rear, removal and installation ..... BT-25</p> <p>Combination meter ..... EL-71</p> <p>Combination meter (needle type)..... EL-71</p> <p>Combination meter removal and installation - See Instrument panel..... BT-12</p> <p>Combination switch ..... EL-34</p> <p>Compression pressure ..... EM-11</p> <p>Compressor clutch removal and installation..... HA-143</p> <p>Compressor description ..... HA-5</p> <p>Compressor mounting..... HA-142</p> <p>Compressor precaution..... HA-5</p> <p>Compressor special service tool..... HA-6</p> <p>Connecting rod ..... EM-46</p> <p>Connecting rod bearing clearance..... EM-49</p> <p>Connecting rod bushing clearance ..... EM-50</p> <p>Console box - See Instrument panel..... BT-12</p> <p>CONSULT for ECCS ..... EC-43</p> <p>CONSULT general information ..... GI-32</p> <p>Control lever (MT) ..... MT-10</p> <p>Control valve (AT) ..... AT-155</p> <p>Converter housing installation..... AT-129</p> <p>Coolant ..... MA-8</p> <p>Coolant replacement..... MA-11</p> <p>Cooling circuit (engine) ..... LC-8</p> <p>Cooling fan ..... LC-12</p> <p>Cooling fan control ..... EC-231</p> <p>Cooling fan control system..... LC-12</p> <p>Cooling fan motor (auto A/C)..... HA-94</p> <p>Cooling fan motor (manual A/C) ..... HA-33</p> <p>Cooling fan motor inspection ..... EC-242</p> <p>Cooling fan relay (auto A/C)..... HA-94</p> <p>Cooling fan relay (manual A/C)..... HA-33</p> <p>Cooling fan relay inspection..... EC-242</p> <p>Cornering lamp..... EL-61</p> <p>Coupling sleeve (MT)..... MT-12</p> <p>Crank angle sensor built into distributor - See Camshaft position sensor ..... EC-171</p> <p>Crankshaft assembly..... EM-52</p> <p>Crankshaft bearing clearance ..... EM-48</p> <p>Crankshaft inspection..... EM-47</p> <p>Crankshaft position sensor (OBD) DTC0802, P0335..... EC-167</p> <p>Crankshaft position sensor (OBD) DTC0802, P0335 inspection ..... EC-170</p> <p>Cruise control - See ASCD ..... EL-147</p> <p>Cylinder block..... EM-43</p> <p>Cylinder block boring..... EM-46</p> <p>Cylinder head ..... EM-30</p>
---	---

# ALPHABETICAL INDEX

Cylinder head bolt tightening ..... EM-30

## D

Data link connector for CONSULT ..... EC-43  
Daytime light system ..... EL-41  
Detonation sensor - See Knock sensor ..... EC-164  
Device (FICD) solenoid valve ..... EC-257  
Diagnostic trouble code (DTC) for ECCS  
  OBD system ..... EC-33  
Differential gear (FF AT) (RE4F04A) ..... AT-198  
Differential gear (FF AT) (RE4F04V) ..... AT-202  
Differential gear (FF MT) ..... MT-12  
Dimensions ..... GI-36  
Distributor ignition (DI) system ..... EC-19  
Dome light - See Interior lamp ..... EL-64  
Door, front - See Front door ..... BT-10  
Door glass ..... BT-10  
Door lock ..... BT-10  
Door mirror ..... BT-36  
Door, rear - See Rear door ..... BT-11  
Door trim ..... BT-16  
Drive plate runout ..... EM-51  
Drive shaft (front) ..... FA-14  
Dropping resistor (AT) ..... AT-109

## E

ECCS basic inspection ..... EC-61  
ECCS circuit diagram ..... EC-7  
ECCS component parts location ..... EC-10  
ECCS fail-safe system ..... EC-75  
ECCS on-board diagnostic system ..... EC-33  
ECCS symptom matrix chart ..... EC-76  
ECCS system diagram and chart ..... EC-8  
ECCS trouble diagnoses ..... EC-57  
ECM input/output signal inspection ..... EC-87  
EGR control (EGRC) - BPT valve ..... EC-185  
EGR control (EGRC) - solenoid valve ..... EC-219  
EGR temperature sensor ..... EC-223  
EGR temperature sensor inspection ..... EC-183  
EGR valve EVAP canister control solenoid  
  valve inspection ..... EC-222  
EGR valve inspection ..... EC-183  
EGRC - BPT valve inspection ..... EC-186  
Electric sun roof ..... EL-128  
Electrical units location ..... EL-195  
Energy conserving oils ..... MA-8  
Engine compartment ..... BT-39  
Engine control module (ECM) ..... EC-201  
Engine coolant temperature sensor (ECTS) ..... EC-108

Engine coolant temperature sensor (ECTS)  
  P0115, DTC0103 inspection ..... EC-111  
Engine coolant temperature sensor (ECTS)  
  P0115, DTC0103 ..... EC-108  
Engine coolant temperature sensor (ECTS)  
  P0125, DTC0908 ..... EC-117  
Engine coolant temperature sensor (ECTS)  
  P0125, DTC0908 inspection ..... EC-121  
Engine coolant temperature sensor  
  inspection ..... EC-111  
Engine oil ..... MA-8  
Engine oil filter replacement ..... MA-14  
Engine oil precautions ..... GI-4  
Engine oil replacement ..... MA-14  
Engine outer component parts ..... EM-7  
Engine removal ..... EM-40  
Engine room - See Engine compartment ..... BT-39  
Engine serial number ..... GI-35  
EVAP canister ..... EC-22  
EVAP canister control ..... EC-22  
EVAP canister inspection ..... EC-22  
EVAP canister purge control solenoid valve ..... EC-219  
Evaporative emission (EVAP) system ..... EC-22  
Exhaust gas recirculation (EGR) system ..... EC-176  
Exhaust gas recirculation (EGR) valve ..... EC-176  
Exhaust system ..... FE-6  
Exhaust system inspection ..... MA-16  
Exterior ..... BT-20  
Exterior lamp ..... EL-50

## F

Fan control amp ..... HA-133  
Fan switch (auto A/C) ..... HA-61  
Fan switch (manual A/C) ..... HA-14  
Final drive (FF AT) (RE4F04A) ..... AT-198  
Final drive (FF AT) (RE4F04A) ..... AT-202  
Final drive (FF MT) ..... MT-26  
Finisher, interior - See Trim ..... BT-15  
Finisher, rear panel - See Rear panel finisher ..... BT-15  
Floor trim ..... BT-15  
Fluid temperature sensor (AT) ..... AT-107  
Fluids ..... MA-8  
Flywheel runout ..... EM-51  
Fog lamp, front ..... EL-54  
Fog lamp, front, removal and installation ..... BT-6  
Fork rod (MT) ..... MT-13  
Forward clutch ..... AT-176  
Freeze frame data ..... EC-34  
Fresh vent door control linkage adjustment  
  (auto A/C) ..... HA-122  
Fresh vent door control linkage adjustment  
  (manual A/C) ..... HA-58

# ALPHABETICAL INDEX

Front axle .....	FA-9
Front bumper.....	BT-6
Front disc brake .....	BR-17
Front door.....	BT-10
Front fog lamp.....	EL-54
Front fog lamp removal and installation.....	BT-6
Front heated oxygen sensor heater inspection .....	EC-132
Front heated oxygen sensor (HO2S).....	EC-122
Front heated oxygen sensor (HO2S) heater .....	EC-130
Front heated oxygen sensor (HO2S) monitor.....	EC-38
Front oxygen sensor (O2S).....	EC-122
Front oxygen sensor (O2S) monitor .....	EC-35
Front passenger air bag.....	RS-13
Front seat .....	BT-28
Front seat belt .....	RS-3
Front suspension.....	FA-21
Front washer .....	EL-103
Front wiper .....	EL-102
Fuel check valve inspection .....	EC-23
Fuel cut control (at no load & high engine speed) .....	EC-21
Fuel filler lid.....	BT-8
Fuel filter.....	EC-25
Fuel filter replacement.....	MA-13
Fuel gauge .....	EL-73
Fuel injection system.....	EC-150
Fuel injector.....	EC-243
Fuel line inspection .....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-25
Fuel pressure regulator.....	EC-26
Fuel pressure release .....	EC-25
Fuel pump .....	EC-248
Fuel pump control .....	EC-248
Fuel pump inspection.....	EC-252
Fuel pump relay inspection.....	EC-252
Fuel system .....	FE-4
Fuel tank vacuum relief valve inspection.....	EC-23
Fuse.....	EL-13
Fusible link .....	EL-13

## G

Garage jack and safety stand.....	GI-38
Gauges .....	EL-70
Gear oil.....	MA-8
Gears (MT).....	MT-12
Generator .....	EL-32
Generic scan tool (GST) .....	EC-55
Glass .....	BT-33
Grease.....	MA-8
Grille - See Exterior.....	BT-6

Ground distribution.....	EL-14
--------------------------	-------

## H

Harness connector .....	EL-3
Harness layout .....	EL-197
Hazard warning lamp .....	EL-56
Headlamp .....	EL-37
Headlamp aiming control .....	EL-48
Headlining - See Roof trim.....	BT-18
Heated oxygen sensor (HO2S).....	EC-130
Heated oxygen sensor (HO2S) heater control .....	EC-130
Heated oxygen sensor heater (front) inspection .....	EC-132
Heated oxygen sensor heater inspection .....	EC-132
Heated oxygen sensor (HO2S) (front).....	EC-122
Heated oxygen sensor (HO2S) heater (front).....	EC-130
Heated oxygen sensor (HO2S) heater (rear) .....	EC-141
Heated oxygen sensor (HO2S) monitor.....	EC-38
Heated oxygen sensor monitor (HO2S) (front).....	EC-38
Heated oxygen sensor (rear) .....	EC-133
Heater wiring diagram.....	HA-36
Height (Dimensions).....	GI-36
HFC134a (R134a) system introduction.....	HA-11
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure .....	HA-135
HFC134a (R134a) system service tools.....	HA-6
HFC134a system service equipment precaution .....	HA-7
High clutch.....	AT-172
Hood.....	BT-6
Horn.....	EL-130
How to erase DTC for ECCS OBD system .....	EC-33
How to follow flow chart in trouble diagnoses .....	GI-29
How to perform efficient diagnosis for an electrical incident .....	GI-18
How to read wiring diagrams .....	GI-9
How to use this manual .....	GI-7

## I

IACV - air regulator inspection.....	EC-256
IACV - FICD solenoid valve inspection.....	EC-260
IACV-AAC valve inspection.....	EC-197
Identification plate .....	GI-34
Idle air control valve (IACV).....	EC-194
Idle air control valve (IACV) - air regulator.....	EC-256
Idle air control valve (IACV) - fast idle control .....	EC-257
Idle mixture ratio inspection .....	EC-27
Idle speed inspection .....	EC-27
Ignition coil inspection.....	EC-214

# ALPHABETICAL INDEX

Ignition timing inspection.....	EC-27
Illumination .....	EL-64
In vehicle sensor .....	HA-124
Inhibitor switch.....	AT-108
Inhibitor switch inspection .....	EC-203
Injector inspection .....	EC-245
Injector removal and installation .....	EC-26
Input shaft.....	MT-17
Instrument panel.....	BT-12
Intake air temperature sensor.....	EC-101
Intake air temperature sensor inspection.....	EC-107
Intake door control linkage adjustment (auto A/C).....	HA-122
Intake door control linkage adjustment (manual A/C).....	HA-58
Intake door motor (auto A/C) .....	HA-131
Intake door motor (manual A/C).....	HA-58
Intake manifold .....	EM-7
Intake sensor.....	HA-124
Interior .....	BT-15
Interior lamp .....	EL-64

## J

Jacking points.....	GI-38
Joint connector (J/C).....	Foldout page

## K

Knock sensor (KS) .....	EC-164
Knock sensor (KS) inspection.....	EC-166
Knuckle spindle .....	FA-9

## L

Length (Dimensions) .....	GI-36
License lamp .....	EL-51
Lifting points .....	GI-37
Line pressure solenoid valve .....	AT-107
Line pressure test (AT).....	AT-113
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-195
Lock, door - See Door lock.....	BT-10
Low and reverse brake .....	AT-182
Lubricant (R134a) A/C.....	HA-139
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-139
Lubrication-locks, hinges and hood latches.....	MA-21
Luggage compartment trim .....	BT-19

## M

Magnet clutch.....	HA-134
Main drive gear (MT).....	MT-12
Mainshaft (MT) .....	MT-22
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
Maintenance general.....	MA-3
Maintenance periodic .....	MA-5
Maintenance schedule (1).....	MA-5
Maintenance schedule (2).....	MA-5
Malfunction indicator lamp (MIL).....	EC-35
Manual transaxle number.....	GI-35
Manual transmission oil.....	MA-8
Manual transmission oil replacement.....	MA-16
Mass air flow sensor inspection.....	EC-100
Mass air flow sensor (MAFS).....	EC-96
Master cylinder (brake) .....	BR-11
Master cylinder (clutch).....	CL-6
Meter and gauges .....	EL-70
MIL & Data link connectors circuit .....	EC-264
Mirror, door - See Door mirror .....	BT-36
Mirror, out side - See Out side mirror.....	BT-36
Misfire.....	EC-160
Mode door control linkage adjustment (auto A/C).....	HA-121
Mode door control linkage adjustment (manual A/C).....	HA-57
Mode door motor (auto A/C) .....	HA-130
Mode door motor (manual A/C) .....	HA-57
Model variation.....	GI-33
Molding - See Exterior .....	BT-20
MT overhaul .....	MT-11
MT removal and installation.....	MT-7
Mud guard - See Exterior.....	BT-26
Multi link/lower ball joint (rear) .....	RA-13
Multi purpose grease.....	MA-8
Multiport fuel injection (MFI) system.....	EC-16
Multiport fuel injection precautions.....	GI-4
Multiport fuel injection system inspection .....	EC-61

## N

Neutral position switch inspection.....	EC-203
Neutral position switch (MT) .....	MT-6

## O

Oil change (capacity) .....	MA-14
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-12
Oil pressure (engine).....	LC-5

# ALPHABETICAL INDEX

Oil pressure relief valve (engine).....	LC-7
Oil pump (AT).....	AT-151
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-26
Operating cylinder (clutch).....	CL-7
Out side mirror.....	BT-36
Overdrive control switch.....	AT-108
Overrun clutch.....	AT-176
Overrun clutch solenoid valve.....	AT-107
Oversize piston.....	EM-46
Oxygen sensor (O2S).....	EC-130
Oxygen sensor (O2S) (front).....	EC-122

## P

Parking brake control.....	BR-33
Parking drum brake.....	BR-21
Park/Neutral position switch.....	EC-203
PCV (positive crankcase ventilation) inspection.....	EC-24
Personal lamp.....	EL-69
Pilot bushing replacement.....	EM-53
Piston assembly.....	EM-51
Piston pin inspection.....	EM-45
Piston ring inspection.....	EM-45
Piston to bore clearance.....	EM-46
Power antenna.....	EL-141
Power door lock.....	EL-115
Power door mirror.....	EL-127
Power steering fluid.....	MA-8
Power steering fluid level.....	ST-5, MA-20
Power steering gear.....	ST-13
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-253
Power steering oil pressure switch inspection..	EC-255
Power steering oil pump.....	ST-19
Power steering system bleeding.....	ST-5
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-210
Power transistor inspection.....	EC-214
Power window.....	EL-108
Precautions (General).....	GI-3
Pressure plate - See Clutch cover.....	CL-9
Pressure test (AT).....	AT-113

## R

R134a - See HFC134a.....	HA-2
Radiator.....	LC-12
Radiator fan - See Cooling fan.....	LC-12
Radio - See Audio.....	EL-135

Rear air spoiler.....	BT-38
Rear axle.....	RA-3
Rear axle (disc brake type).....	RA-7
Rear axle (drum brake type).....	RA-7
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-25
Rear disc brake.....	BR-26
Rear door.....	BT-11
Rear drum brake.....	BR-21
Rear heated oxygen sensor heater inspection.....	EC-144
Rear heated oxygen sensor (HO2S).....	EC-133
Rear heated oxygen sensor (HO2S) heater.....	EC-141
Rear panel finisher.....	BT-15
Rear seat.....	BT-29
Rear seat belt.....	RS-3
Rear suspension.....	RA-9
Rear window.....	BT-34
Rear window defogger.....	EL-131
Rear window signal.....	EC-261
Refilling engine coolant.....	LC-12
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-4
Refrigerant discharging evacuating charging....	HA-137
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-141
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-8
Resistor inspection.....	EC-214
Reverse clutch.....	AT-169
Reverse gear (MT).....	MT-12
Reverse idler shaft (MT).....	MT-12
Reverse lamp switch.....	MT-6
Revolution sensor (AT).....	AT-109
Road wheel size.....	GI-36
Roof trim.....	BT-18
Room lamp - See Interior lamp.....	EL-64
Rotor disc (front).....	FA-9

## S

SAE J1930 terminology list.....	GI-42
Seal - See Exterior.....	BT-20
Seat belt, front - See Front seat belt.....	RS-3
Seat belt inspection.....	MA-21
Seat belt, rear - See Rear seat belt.....	RS-3
Seat, front - See Front seat.....	BT-28
Seat, rear - See Rear seat.....	BT-29
Self-diagnostic results.....	EC-35
Shift control (MT).....	MT-13
Shift fork (MT).....	MT-13
Shift lock system.....	AT-118

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# ALPHABETICAL INDEX

Shift schedule.....	AT-37
Shift solenoid valve (AT) .....	AT-107
Shock absorber (front) .....	FA-22
Shock absorber (rear) .....	RA-11
Side trim .....	BT-15
SMJ (super multiple junction).....	Foldout page
Spark plug replacement .....	MA-15
Speedometer .....	EL-75
Spiral cable.....	RS-11
Spring (Wheelarch) height .....	FA-5
SRS - See Supplemental Restraint System .....	RS-7
SRS Trouble diagnoses .....	RS-19
SRS Wiring diagram.....	RS-19
Stabilizer bar (front).....	FA-23
Stabilizer bar (rear) .....	RA-13
Stall test (AT).....	AT-110
Standardized relay .....	EL-4
Starter.....	EL-26
Starting system.....	EL-22
Steering gear and linkage inspection.....	MA-19
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch .....	EL-36
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force .....	ST-6
Stop lamp .....	EL-51
Striking rod (MT) .....	MT-13
Strut (front) .....	FA-22
Strut (rear).....	RA-11
Sun roof.....	BT-30
Sunload sensor .....	HA-125
Supplemental Restraint System.....	RS-7
Symbols and abbreviations .....	GI-8
Synchronizer (MT).....	MT-23

## T

Tachometer.....	EL-74
Tail lamp .....	EL-51
Temperature control cable and linkage adjustment (auto A/C).....	HA-121
Temperature control cable and linkage adjustment (manual A/C) .....	HA-58
Theft warning system .....	EL-168
Thermal protector (auto A/C) .....	HA-120
Thermal protector (manual A/C).....	HA-57
Thermo control amp (auto A/C) .....	HA-120
Thermo control amp (manual A/C).....	HA-57
Thermostat .....	LC-11
Three way catalyst.....	EC-187
Three way catalyst precautions .....	GI-4
Throttle bodies.....	EM-7

Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-61
Throttle position sensor inspection .....	EC-116
Throttle position sensor (TPS) .....	EC-112
Throttle position switch.....	AT-109
Throwout bearing - See Clutch release bearing .....	CL-8
Tie-rod .....	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts .....	GI-41
Time control system .....	EL-87
Timing chain .....	EM-17
Tire rotation .....	MA-19
Tire size .....	GI-36
Torque converter clutch solenoid valve.....	AT-107
Torque converter installation .....	AT-129
Tow truck towing.....	GI-39
Transmission case (MT).....	MT-11
Transverse link (front) .....	FA-24
Tread-FR&RR (Dimensions) .....	GI-36
Trim .....	BT-15
Triple pressure switch (auto A/C).....	HA-120
Triple pressure switch (manual A/C).....	HA-57
Trunk lid.....	BT-8
Trunk lid opener - See Trunk lid .....	BT-8
Trunk room lamp .....	EL-69
Trunk room trim.....	BT-19
Turn signal lamp.....	EL-56
Two trip detection logic .....	EC-33
Two-pole lift .....	GI-39

## U

Under body.....	BT-41
-----------------	-------

## V

Vacuum hose (brake system) .....	BR-16
Vacuum hose drawing (ECCS) .....	EC-13
Valve clearance .....	EM-37
Valve guide inspection .....	EM-33
Valve seat inspection .....	EM-35
Valve spring inspection .....	EM-36
Vapor lines inspection .....	MA-15
Vehicle identification number .....	GI-34
Vehicle recovery (Freeing a stuck vehicle).....	GI-40
Vehicle speed sensor (VSS) .....	EC-190
Vent mode switch (auto A/C) .....	HA-61
Vent mode switch (manual A/C).....	HA-16
Viscosity number (SAE) .....	MA-8
Viscous coupling (FF AT) (RE4F04V).....	AT-202
Viscous coupling (FF MT).....	MT-6



# ALPHABETICAL INDEX

## W

<p>Warning chime ..... EL-84</p> <p>Warning lamps ..... EL-79</p> <p>Washer, front ..... EL-103</p> <p>Water cock control rod adjustment (auto A/C) ..... HA-121</p> <p>Water cock control rod adjustment (manual A/C) ..... HA-58</p> <p>Water pump ..... LC-9</p> <p>Water temperature gauge ..... EL-73</p> <p>Weatherstrip - See Exterior ..... BT-20</p> <p>Wheel alignment (front) ..... FA-6</p> <p>Wheel alignment (rear) ..... RA-5</p> <p>Wheel balance ..... MA-19</p> <p>Wheel bearing (front axle) ..... FA-6</p> <p>Wheel bearing (rear) ..... RA-4</p> <p>Wheel hub and steering knuckle ..... FA-9</p> <p>Wheel hub (front) ..... FA-9</p>	<p>Wheel hub (rear) ..... RA-7</p> <p>Wheel sensors (ABS) ..... BR-36</p> <p>Wheel size ..... GI-36</p> <p>Wheelarch height ..... FA-5</p> <p>Wheelbase (Dimensions) ..... GI-36</p> <p>Wide open &amp; closed throttle position (CTP) switch ..... EC-112</p> <p>Width (Dimensions) ..... GI-36</p> <p>Window antenna ..... EL-141</p> <p>Window, door ..... BT-10</p> <p>Window, rear - See Rear window ..... BT-34</p> <p>Windshield ..... BT-33</p> <p>Windshield washer - See Front washer ..... EL-103</p> <p>Windshield wiper - See Front wiper ..... EL-102</p> <p>Wiper and washer ..... EL-102</p> <p>Wiper, front ..... EL-102</p> <p>Withdrawal lever (clutch) ..... CL-8</p> <p>Wrist pin - See Piston pin inspection ..... EM-45</p>
--	--

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX