

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator	BR-38	A/C self-diagnoses (auto A/C).....	HA-70
ABS (anti-lock brake system).....	BR-35	A/C switch	HA-55
ABS circuit diagram.....	BR-42	A/C symptom chart (auto A/C).....	HA-66
ABS component parts and connector		A/C symptom chart (manual A/C).....	HA-18
locations	BR-41	A/C system description (auto A/C).....	HA-58
ABS control unit	BR-36	A/C trouble diagnoses (auto A/C).....	HA-61
ABS hydraulic circuit.....	BR-6	A/C trouble diagnoses (manual A/C).....	HA-15
ABS self-diagnosis	BR-47	A/C wiring diagram (auto A/C).....	HA-96
ABS symptom chart	BR-49	A/C wiring diagram (manual A/C).....	HA-37
ABS system components.....	BR-36	Accel drum unit	EM-28
ABS trouble diagnoses.....	BR-39	Accelerator control system.....	FE-3
ABS wheel sensors.....	BR-36	Accelerator wire adjustment.....	FE-3
ABS wiring diagram.....	BR-43	Air assisted injector system	EC-257
A/C air flow.....	HA-13	Air bag.....	RS-11
A/C circuit diagram (auto A/C).....	HA-95	Air bag disposal.....	RS-15
A/C component layout.....	HA-12	Air bag module.....	RS-11
A/C compressor clutch removal and		Air bag precautions	GI-2
installation	HA-142	Air bleeding for brake system	BR-5
A/C compressor description.....	HA-5	Air cleaner filter replacement.....	MA-13
A/C compressor mounting.....	HA-141	Air conditioner cut control	EC-20
A/C compressor precaution.....	HA-5	Air conditioning - See A/C.....	HA-11
A/C compressor special service tool.....	HA-6	Air cut valve.....	EC-257
A/C control linkage adjustment (auto A/C).....	HA-120	Air cut valve inspection	EC-257
A/C control linkage adjustment (manual A/C).....	HA-56	Air flow meter - See Mass air flow sensor.....	EC-103
A/C control operation (auto A/C).....	HA-59	Air mix door control linkage adjustment.....	HA-57
A/C control operation (manual A/C).....	HA-14	Air mix door control linkage adjustment (auto	
A/C diagnostic work flow (auto A/C).....	HA-61	A/C).....	HA-120
A/C diagnostic work flow (manual A/C).....	HA-15	Air mix. door motor.....	HA-125
A/C harness layout (auto A/C).....	HA-93	Air spoiler, rear.....	BT-38
A/C harness layout (manual A/C).....	HA-33	Alternator.....	EL-32
A/C HFC134a (R134a) system introduction	HA-11	Ambient sensor	HA-124
A/C HFC134a (R134a) system precaution	HA-2	Angular tightening application.....	EM-2
A/C HFC134a (R134a) system service		Antenna	EL-126
procedure.....	HA-136	Antenna - See Power antenna.....	EL-126
A/C HFC134a (R134a) system service tools.....	HA-7	Anti-freeze coolant mixture ratio	MA-9
A/C HFC134a system service equipment		ASCD (automatic speed control device).....	EL-132
precaution	HA-7	A/T control DTC:P0600.....	EC-193
A/C lubricant (R134a).....	HA-138	AT control unit	AT-103
A/C lubrication oil.....	HA-138	AT diagnosis communication line.....	EC-223
A/C operational check (auto A/C).....	HA-62	AT fluid temperature sensor.....	AT-107
A/C operational check (manual A/C).....	HA-16	AT removal and installation.....	AT-128
A/C performance chart (auto A/C).....	HA-88	AT self-diagnoses.....	AT-47
A/C performance chart (manual A/C).....	HA-28	AT shift lock system	AT-118
A/C performance test diagnoses (auto A/C).....	HA-86	AT trouble diagnoses	AT-14
A/C performance test diagnoses		Audio	EL-120
(manual A/C).....	HA-26	Audio and A/C control removal and	
A/C pressure switch	HA-11	installation - See Instrument panel.....	BT-12
A/C push control.....	HA-14	Automatic amplifier.....	HA-59
A/C relay (auto A/C).....	HA-119	Automatic transaxle number	GI-36
A/C relay (manual A/C).....	HA-56	Automatic transmission fluid replacement	MA-17
		Auxiliary air control (AAC).....	EC-189

ALPHABETICAL INDEX

B

Back window	BT-34
Back-up lamp	EL-52
Back-up lamp switch (MT)	MT-6
Ball joint front axle.....	FA-24
Battery	EL-18
Baulk ring (MT).....	MT-12
Belt inspection (drive belt).....	MA-10
Blower motor (auto A/C).....	HA-119
Blower motor (manual A/C).....	HA-55
Blower relay.....	HA-119
Blower resistor.....	HA-55
Board-on lift.....	GI-39
Body alignment.....	BT-39
Boring/honing cylinder block.....	EM-46
Brake booster.....	BR-14
Brake control valve (Proportioning valve).....	BR-7
Brake fluid change	BR-4
Brake fluid level.....	MA-18
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake lining temporary checking.....	MA-19
Brake master cylinder	BR-11
Brake pedal	BR-9
Bumper, front.....	BT-6
Bumper, rear.....	BT-8

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-166
Camshaft position sensor inspection	EC-169
Charging system	EL-29
Chassis and body maintenance.....	MA-16
Check connector for ECCS checker box.....	EC-51
Cigarette lighter.....	EL-115
Circuit breaker.....	EL-13
Clearance lamp	EL-53
Clock.....	EL-115
Closed loop control	EC-132
Closed throttle position switch	EC-117
Clutch cover	CL-9
Clutch disc.....	CL-9
Clutch fluid level.....	MA-16
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal	CL-3
Clutch pedal free play	CL-4
Clutch pedal height	CL-4

Clutch release bearing	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front).....	FA-22
Coil spring (rear)	RA-12
Collision diagnosis.....	RS-39
Combination lamp, rear, removal and installation	BT-25
Combination meter.....	EL-74
Combination meter (needle type).....	EL-74
Combination meter removal and installation - See Instrument panel.....	BT-12
Combination switch	EL-36
Compression pressure	EM-11
Compressor clutch removal and installation	HA-142
Compressor description	HA-5
Compressor mounting.....	HA-141
Compressor precaution.....	HA-5
Compressor special service tool.....	HA-6
Connecting rod.....	EM-46
Connecting rod bearing clearance	EM-49
Connecting rod bushing clearance	EM-50
Console box - See Instrument panel	BT-12
CONSULT for ECCS	EC-51
CONSULT general information	GI-33
Control lever (MT)	MT-10
Control valve (AT)	AT-156
Converter housing installation.....	AT-129
Coolant replacement	MA-11
Cooling circuit (engine)	LC-9
Cooling fan	LC-14
Cooling fan control	EC-226
Cooling fan control system.....	LC-14
Cooling fan motor inspection	EC-237
Cooling fan relay inspection.....	EC-237
Cornering lamp.....	EL-63
Coupling sleeve (MT).....	MT-12
Crank angle sensor built into distributor - See Camshaft position sensor	EC-166
Crankcase emission control system - See positive crankcase ventilation.....	EC-23
Crankcase ventilation system - See positive crankcase ventilation	EC-23
Crankshaft assembly.....	EM-52
Crankshaft bearing clearance	EM-48
Crankshaft inspection.....	EM-47
Crankshaft position sensor (OBD) chipping.....	EC-210
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-162
Crankshaft position sensor (OBD) DTC0802, P0335 inspection	EC-165
Cruise control - See ASCD	EL-132
Cylinder block.....	EM-43
Cylinder block boring.....	EM-46
Cylinder head	EM-30

GI

MA

EM

LC

EC

FF

CL

MT

AT

FA

EA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Cylinder head bolt tightening EM-30

D

Data link connector for Consult.....EC-51
Daytime light system..... EL-42
Detonation sensor - See Knock sensor..... EC-159
Diagnostic trouble code (DTC) chart..... EC-72
Differential gear (FF AT) (RE4F04A).....AT-199
Differential gear (FF AT) (RE4F04V).....AT-203
Differential gear (FF MT).....MT-26
Dimensions..... GI-37
Distributor ignition (DI) system..... EC-18
Dome light - See Interior lamp..... EL-71
Door, front..... BT-10
Door glass..... BT-10
Door lock..... BT-10
Door mirror..... BT-36
Door, rear..... BT-11
Door trim..... BT-16
Drive plate runout..... EM-50
Drive shaft (front)..... FA-14
Dropping resistor (AT).....AT-109

E

ECCS basic inspection..... EC-69
ECCS circuit diagram..... EC-7
ECCS component parts location..... EC-10
ECCS fail-safe system..... EC-83
ECCS on board diagnostic system..... EC-32
ECCS relay inspection..... EC-101
ECCS symptom matrix chart..... EC-84
ECCS system diagram and chart..... EC-8
ECCS trouble diagnoses..... EC-65
ECM input/output signal inspection..... EC-94
EGR control (EGRC) - BPT valve..... EC-180
EGR control (EGRC) - solenoid valve..... EC-214
EGR temperature sensor..... EC-218
EGR temperature sensor inspection..... EC-178
EGR valve OVAP canister control solenoid
valve inspection..... EC-217
EGR valve inspection..... EC-178
EGRC - BPT valve inspection..... EC-181
Electric sun roof..... EL-113
Electrical unit..... EL-205
Electrical units location..... EL-204
Engine compartment..... BT-39
Engine control module (ECM)..... EC-196
Engine coolant temperature sensor (ECTS)..... EC-113
Engine coolant temperature sensor (ECTS)
P0115, DTC0103..... EC-113

Engine coolant temperature sensor (ECTS)
P0115, DTC0103 inspection..... EC-116
Engine coolant temperature sensor (ECTS)
P0125, DTC0908..... EC-122
Engine coolant temperature sensor (ECTS)
P0125, DTC0908 inspection..... EC-126
Engine coolant temperature sensor
inspection..... EC-116
Engine oil filter replacement..... MA-14
Engine oil precautions..... GI-5
Engine oil replacement..... MA-14
Engine outer component parts..... EM-7
Engine removal..... EM-40
Engine room - See Engine compartment..... BT-39
Engine serial number..... GI-36
EVAP canister..... EC-21
EVAP canister inspection..... EC-21
EVAP canister purge control..... EC-21
EVAP canister purge control solenoid
valve..... EC-214
EVAP vapor lines inspection..... MA-15
Evaporative emission (EVAP) system..... EC-21
Exhaust gas recirculation (EGR) system..... EC-171
Exhaust gas recirculation (EGR) valve..... EC-171
Exhaust system..... FE-6
Exhaust system inspection..... MA-16
Exterior..... BT-20
Exterior lamp..... EL-52

F

Fan control amp..... HA-131
Fan switch..... HA-55
Final drive (FF AT) (RE4F04A)..... AT-199
Final drive (FF AT) (RE4F04V)..... AT-203
Final drive (FF MT)..... MT-26
Finisher, interior - See Trim..... BT-15
Finisher, rear panel..... BT-15
Floor trim..... BT-15
Fluid temperature sensor (AT)..... AT-107
Fluids..... MA-8
Flywheel runout..... EM-50
Fog lamp, front..... EL-56
Fog lamp, front, removal and installation..... BT-6
Fork rod (MT)..... MT-13
Forward clutch..... AT-177
Freeze frame data..... EC-34
Fresh vent door control linkage adjustment..... HA-121
Front axle..... FA-9
Front bumper..... BT-6
Front disc brake..... BR-17
Front door..... BT-10
Front fog lamp..... EL-56

ALPHABETICAL INDEX

Front fog lamp removal and installation.....	BT-6
Front heated oxygen sensor heater inspection.....	EC-135
Front heated oxygen sensor (HO2S).....	EC-127
Front heated oxygen sensor (HO2S) heater	EC-133
Front heated oxygen sensor (HO2S) monitor....	EC-50
Front oxygen sensor (O2S) monitor	EC-47
Front passenger air bag.....	RS-13
Front seat.....	BT-28
Front seat belt.....	RS-3
Front suspension.....	FA-21
Front washer	EL-106
Front wiper	EL-105
Fuel check valve inspection.....	EC-22
Fuel cut control (at no load & high engine speed)	EC-20
Fuel filler lid.....	BT-8
Fuel filter.....	EC-24
Fuel filter replacement.....	MA-13
Fuel gauge	EL-76
Fuel injection system.....	EC-145
Fuel injector.....	EC-238
Fuel line inspection	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-24
Fuel pressure regulator.....	EC-25
Fuel pressure regulator control.....	EC-25
Fuel pressure release	EC-24
Fuel pump	EC-243
Fuel pump control	EC-243
Fuel pump inspection.....	EC-247
Fuel pump relay inspection.....	EC-247
Fuel system.....	FE-4
Fuel tank vacuum relief valve inspection.....	EC-22
Fuse.....	EL-13
Fuse block.....	Foldout page
Fusible link	EL-13

G

Garage jack and safety stand.....	GI-39
Gauges.....	EL-73
Gears (MT).....	MT-12
Generator	EL-32
Generic scan tool (GST).....	EC-63
Glass	BT-33
Grease.....	MA-8
Grille - See Exterior.....	BT-6
Ground distribution	EL-14

H

Harness connector	EL-3	GI
Harness layout	EL-206	
Hazard warning lamp	EL-59	HA
Headlamp	EL-39	
Headlamp aiming control	EL-50	
Headlining - See Roof trim.....	BT-18	EM
Heated oxygen (HO2S) heater control	EC-133	
Heated oxygen sensor heater (front) inspection.....	EC-135	IG
Heated oxygen sensor heater inspection	EC-135	
Heated oxygen sensor (HO2S).....	EC-133	EC
Heated oxygen sensor (HO2S) (front).....	EC-127	
Heated oxygen sensor (HO2S) heater (front)...	EC-133	
Heated oxygen sensor (HO2S) heater (rear) ...	EC-141	FE
Heated oxygen sensor (HO2S) monitor.....	EC-50	
Heated oxygen sensor monitor (HO2S) (front).....	EC-50	GL
Heated oxygen sensor (rear)	EC-136	
Heater wiring diagram.....	HA-36	MT
Height (Dimensions).....	GI-37	
HFC134a (R134a) system introduction.....	HA-11	
HFC134a (R134a) system precaution	HA-2	AT
HFC134a (R134a) system service procedure.....	HA-136	
HFC134a (R134a) system service tools.....	HA-7	FA
HFC134a system service equipment precaution	HA-7	RA
High clutch.....	AT-173	
Hood.....	BT-6	
Horn.....	EL-115	BR
How to erase DTC for ECCS OBD system	EC-40	
How to follow flow chart in trouble diagnoses	GI-30	
How to perform efficient diagnosis for an electrical incident	GI-18	ST
How to read wiring diagrams	GI-9	RS
How to use this manual	GI-7	

I

IACV - air regulator inspection.....	EC-251	HA
IACV - FICD solenoid valve inspection.....	EC-254	
IACV-AAC valve inspection.....	EC-192	
IACV-FICD solenoid valve.....	EC-252	EL
Identification plate	GI-35	
Idle air control (IAC) system	EC-189	
Idle air control (IACV) - fast idle control	EC-252	IDX
Idle air control valve (IACV).....	EC-189	
Idle air control valve (IACV) - air regulator.....	EC-251	
Idle mixture ratio inspection	EC-26	
Idle speed inspection	EC-26	

ALPHABETICAL INDEX

Ignition coil inspection.....	EC-209
Ignition timing inspection.....	EC-26
Illumination	EL-66
In vehicle sensor.....	HA-123
Inhibitor switch.....	AT-108
Inhibitor switch inspection.....	EC-198
Injector inspection	EC-240
Injector removal and installation	EC-25
Input shaft.....	MT-17
Instrument panel.....	BT-12
Intake air temperature sensor.....	EC-108
Intake air temperature sensor inspection.....	EC-112
Intake door control linkage adjustment (auto A/C).....	HA-121
Intake door control linkage adjustment (manual A/C).....	HA-57
Intake door motor.....	HA-129
Intake manifold.....	EM-7
Intake sensor.....	HA-123
Interior	BT-15
Interior lamp	EL-66

J

Jacking points.....	GI-39
Joint connector (J/C).....	Foldout page

K

Knock sensor (KS).....	EC-159
Knock sensor (KS) inspection.....	EC-161
Knuckle spindle	FA-9

L

Length (Dimensions).....	GI-37
License lamp	EL-53
Lifting points	GI-38
Line pressure solenoid valve	AT-107
Line pressure test (AT).....	AT-113
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-204
Lock, door.....	BT-10
Low and reverse brake	AT-183
Lubricant (R134a) A/C.....	HA-138
Lubricants	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-138
Lubrication-locks, hinges and hood latches.....	MA-21
Luggage compartment trim	BT-19
Luggage room lamp	EL-71

M

Magnet clutch.....	HA-142
Main drive gear (MT).....	MT-12
Mainshaft (MT).....	MT-22
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
Maintenance general.....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-5
Maintenance schedule (2).....	MA-5
Malfunction indicator lamp (MIL).....	EC-47
Manual transaxle number.....	GI-36
Manual transmission oil replacement.....	MA-16
Mass air flow sensor inspection.....	EC-107
Mass air flow sensor (MAFS).....	EC-103
Master cylinder (brake)	BR-11
Master cylinder (clutch).....	CL-6
Meter	EL-73
MIL & Data link connectors circuit	EC-258
Mirror, door.....	BT-36
Mirror, out side	BT-36
Misfire.....	EC-155
Mode door control linkage adjustment (auto A/C).....	HA-120
Mode door control linkage adjustment (manual A/C).....	HA-56
Mode door motor.....	HA-128
Model variation.....	GI-34
Molding - See Exterior	BT-20
MT overhaul	MT-11
MT removal and installation.....	MT-7
Mud guard - See Exterior.....	BT-26
Multi link/lower ball joint (rear)	RA-14
Multiport fuel injection (MFI) system.....	EC-15
Multiport fuel injection precautions.....	GI-6
Multiport fuel injection system inspection	EC-69

N

Neutral position switch inspection.....	EC-198
Neutral position switch (MT)	MT-6

O

Oil change (capacity)	MA-14
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-12
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-8
Oil pump (AT).....	AT-152

ALPHABETICAL INDEX

Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-8
Oil seal replacement (engine).....	EM-26
Operating cylinder (clutch).....	CL-7
Out side mirror.....	BT-36
Overdrive control switch.....	AT-108
Overrun clutch.....	AT-177
Overrun clutch solenoid valve.....	AT-107
Oversize piston.....	EM-46
Oxygen sensor monitor (O2S) (front).....	EC-50
Oxygen sensor (O2S) (front).....	EC-127

P

Parking brake control.....	BR-33
Parking drum brake.....	BR-21
Park/Neutral position (PNP) relay inspection....	EC-204
Park/Neutral position switch.....	EC-198
PCV (positive crankcase ventilation) inspection.....	EC-23
Personal lamp.....	EL-71
Pilot bushing replacement.....	EM-53
Piston assembly.....	EM-51
Piston pin inspection.....	EM-45
Piston ring inspection.....	EM-45
Piston to bore clearance.....	EM-46
Power antenna.....	EL-126
Power door lock.....	EL-163
Power door mirror.....	EL-112
Power steering fluid level.....	ST-5
Power steering gear.....	ST-13
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-248
Power steering oil pressure switch inspection..	EC-250
Power steering oil pump.....	ST-19
Power steering system bleeding.....	ST-5
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-205
Power transistor inspection.....	EC-209
Power window.....	EL-155
Precautions (General).....	GI-3
Pressure plate - See Clutch cover.....	CL-9
Pressure test (AT).....	AT-113

R

R134a - See HFC134a.....	HA-2
Radiator.....	LC-14
Radiator fan - See Cooling fan.....	LC-14
Radio - See Audio.....	EL-120
Rear air spoiler.....	BT-38
Rear axle.....	RA-3

Rear axle (disc brake type).....	RA-8
Rear axle (drum brake type).....	RA-8
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-25
Rear disc brake.....	BR-26
Rear door.....	BT-11
Rear drum brake.....	BR-21
Rear heated oxygen sensor heater inspection.....	EC-144
Rear heated oxygen sensor (HO2S).....	EC-136
Rear heated oxygen sensor (HO2S) heater.....	EC-141
Rear panel finisher.....	BT-15
Rear seat.....	BT-29
Rear seat belt.....	RS-3
Rear suspension.....	RA-10
Rear window.....	BT-34
Rear window defogger.....	EL-116
Rear window signal.....	EC-255
Refilling engine coolant.....	LC-14
Refrigerant connection precaution.....	HA-4
Refrigerant discharging evacuating charging....	HA-136
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-140
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-8
Resistor inspection.....	EC-209
Reverse clutch.....	AT-170
Reverse gear (MT).....	MT-12
Reverse idler shaft (MT).....	MT-12
Reverse lamp switch (MT) - See Back-up lamp switch (MT).....	MT-6
Revolution sensor (AT).....	AT-109
Road wheel size.....	GI-37
Roof trim.....	BT-18
Room lamp.....	EL-71
Room lamp - See Interior lamp.....	EL-71
Rotor disc (front).....	FA-9

S

SAE J1930 terminology list.....	GI-43
SAE J1979 - Mode 1 ~ 7.....	EC-32
Seal - See Exterior.....	BT-20
Seat belt, front.....	RS-3
Seat belt inspection.....	MA-21
Seat belt, rear.....	RS-3
Seat, front.....	BT-28
Seat, rear.....	BT-29
Self-diagnostic results.....	EC-47
Shift control (MT).....	MT-13
Shift fork (MT).....	MT-13
Shift lock system.....	AT-118

ALPHABETICAL INDEX

Shift schedule.....	AT-37
Shift solenoid valve (AT).....	AT-107
Shock absorber (front).....	FA-22
Shock absorber (rear).....	RA-12
Side trim.....	BT-15
SMJ (super multiple junction).....	Foldout page
Spark plug replacement.....	MA-15
Speedometer.....	EL-78
Spiral cable.....	RS-11
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-7
SRS Trouble diagnoses.....	RS-19
SRS Wiring diagram.....	RS-22
Stabilizer bar (front).....	FA-23
Stabilizer bar (rear).....	RA-14
Stall test (AT).....	AT-110
Standardized relay.....	EL-4
Start signal.....	EC-241
Starter.....	EL-26
Starting system.....	EL-22
Steering gear and linkage inspection.....	MA-19
Steering gear oil level.....	MA-20
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch.....	EL-38
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force.....	ST-6
Stop lamp.....	EL-53
Striking rod (MT).....	MT-13
Strut (front).....	FA-22
Strut (rear).....	RA-12
Sun roof, electric.....	EL-113
Sunload sensor.....	HA-124
Sunroof.....	BT-30
Supplemental Restraint System.....	RS-7
Symbols and abbreviations.....	GI-8
Synchronizer (MT).....	MT-23
System readiness test (SRT) code.....	EC-34

T

Tachometer.....	EL-77
Tail lamp.....	EL-53
Temperature control cable and linkage adjustment.....	HA-57
Theft warning system.....	EL-175
Thermal protector (auto A/C).....	HA-119
Thermal protector (manual A/C).....	HA-56
Thermo control amp (auto A/C).....	HA-119
Thermo control amp (manual A/C).....	HA-56
Thermostat.....	LC-13
Three way catalyst.....	EC-182

Three way catalyst precautions.....	GI-6
Throttle bodies.....	EM-7
Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-69
Throttle position sensor inspection.....	EC-121
Throttle position sensor (TPS).....	EC-117
Throttle position switch.....	AT-109
Throwout bearing - See Clutch release bearing.....	CL-8
Tie-rod.....	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts.....	GI-42
Time control system.....	EL-91
Timing chain.....	EM-17
Tire rotation.....	MA-19
Tire size.....	GI-37
Torque converter clutch solenoid valve.....	AT-107
Torque converter installation.....	AT-129
Tow truck towing.....	GI-40
Transmission case (MT).....	MT-11
Transverse link (front).....	FA-24
Tread-FR&RR (Dimensions).....	GI-37
Trim.....	BT-15
Triple pressure switch (auto A/C).....	HA-119
Triple pressure switch (manual A/C).....	HA-56
Trunk lid.....	BT-8
Trunk lid opener - See Trunk lid.....	BT-8
Trunk room lamp.....	EL-71
Trunk room trim.....	BT-19
Turn signal lamp.....	EL-59
Two trip detection logic.....	EC-32
Two-pole lift.....	GI-40

U

Under body.....	BT-41
-----------------	-------

V

Vacuum hose (brake system).....	BR-16
Vacuum hose drawing (ECCS).....	EC-12
Valve clearance.....	EM-37
Valve guide inspection.....	EM-33
Valve seat inspection.....	EM-35
Valve spring inspection.....	EM-36
Vehicle identification number.....	GI-35
Vehicle Recovery. (Freeing a stuck vehicle).....	GI-41
Vehicle speed sensor (VSS).....	EC-185
Vehicle speed sensor (VSS) inspection.....	EC-185
Vent mode switch.....	HA-14
Vent mode switch (auto A/C).....	HA-59
Viscosity number (SAE).....	MA-8

ALPHABETICAL INDEX

Viscous coupling (FF AT)AT-203
 Viscous coupling (FF MT)MT-6

W

<p>Warning chime EL-88 Warning lamps EL-82 Washer, front EL-106 Water cock control rod adjustment HA-57 Water pump LC-11 Water temperature gauge EL-76 Weatherstrip - See Exterior BT-20 Wheel alignment (front) FA-6 Wheel alignment (rear) RA-5 Wheel balance MA-19 Wheel bearing (front axle) FA-6 Wheel bearing (rear) RA-4 Wheel hub and steering knuckle FA-9 Wheel hub (front) FA-9</p>	<p>Wheel hub (rear) RA-8 Wheel sensors (ABS) BR-36 Wheel size GI-37 Wheelarch height FA-5 Wheelbase (Dimensions) GI-37 Wide open & closed throttle position (CTP) switch EC-117 Width (Dimensions) GI-37 Window antenna EL-126 Window, back BT-34 Window, door BT-10 Window, rear BT-34 Windshield BT-33 Windshield washer - See Front washer EL-106 Windshield wiper - See Front wiper EL-105 Wiper and washer EL-105 Wiper, front EL-105 Withdrawal lever (clutch) CL-8 Wrist pin - See Piston pin inspection EM-45</p>
---	---

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL