



SUPER MULTIPLE JUNCTION (SMJ)

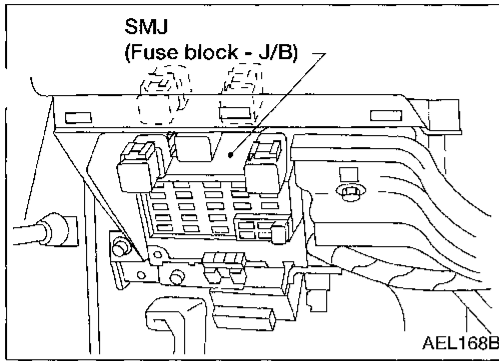


INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: **3 - 5 N·m**
(0.3 - 0.5 kg·m, 26 - 43 in·lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

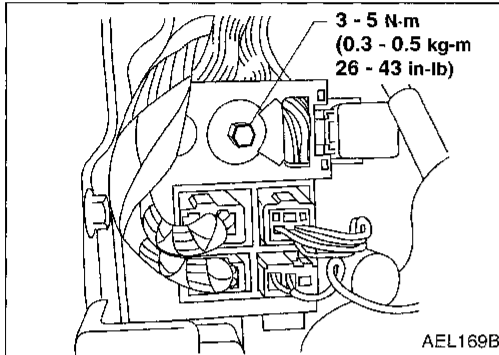


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

MAIN HARNESS



M8

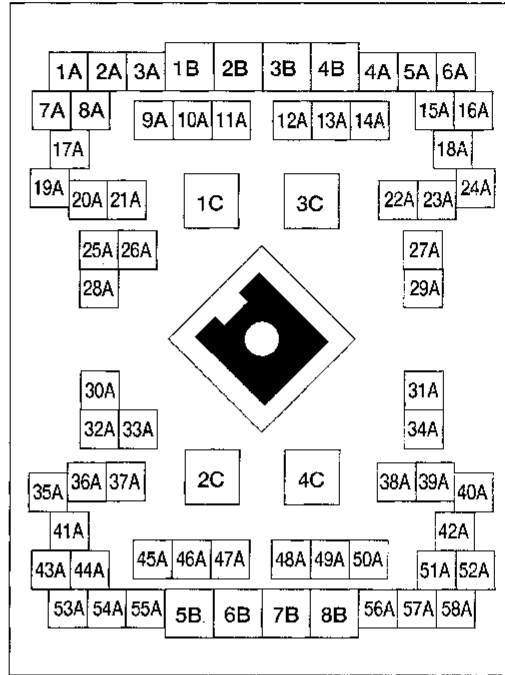


E65


ENGINE ROOM HARNESS

FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

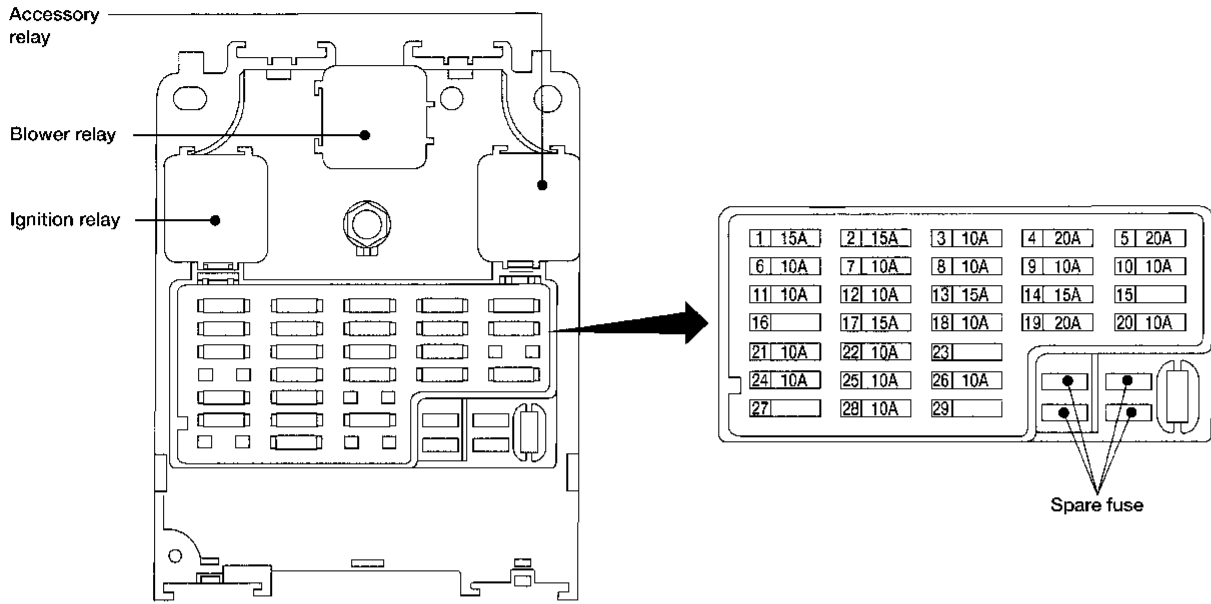


To main harness

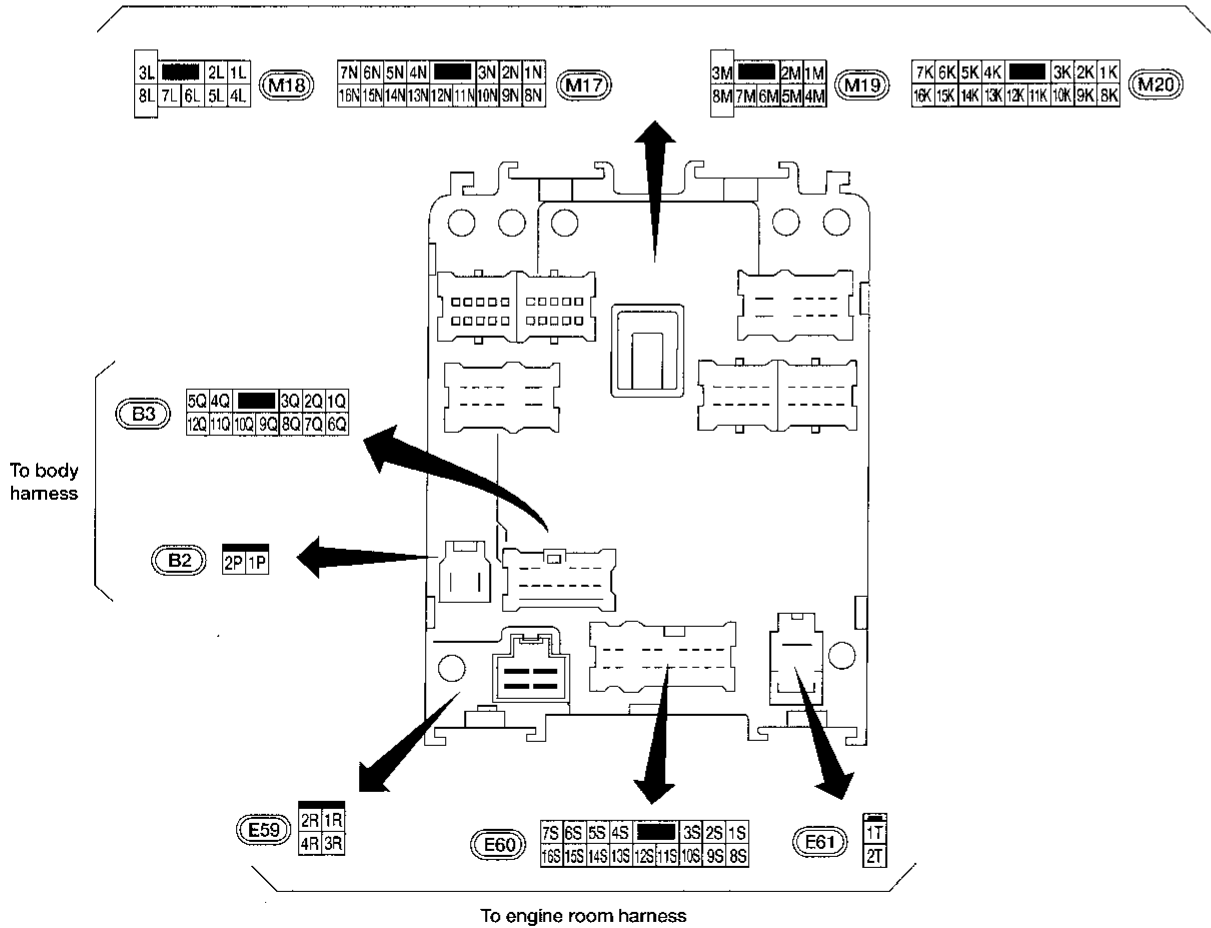

FUSE AND FUSIBLE LINK BOX


Terminal Arrangement

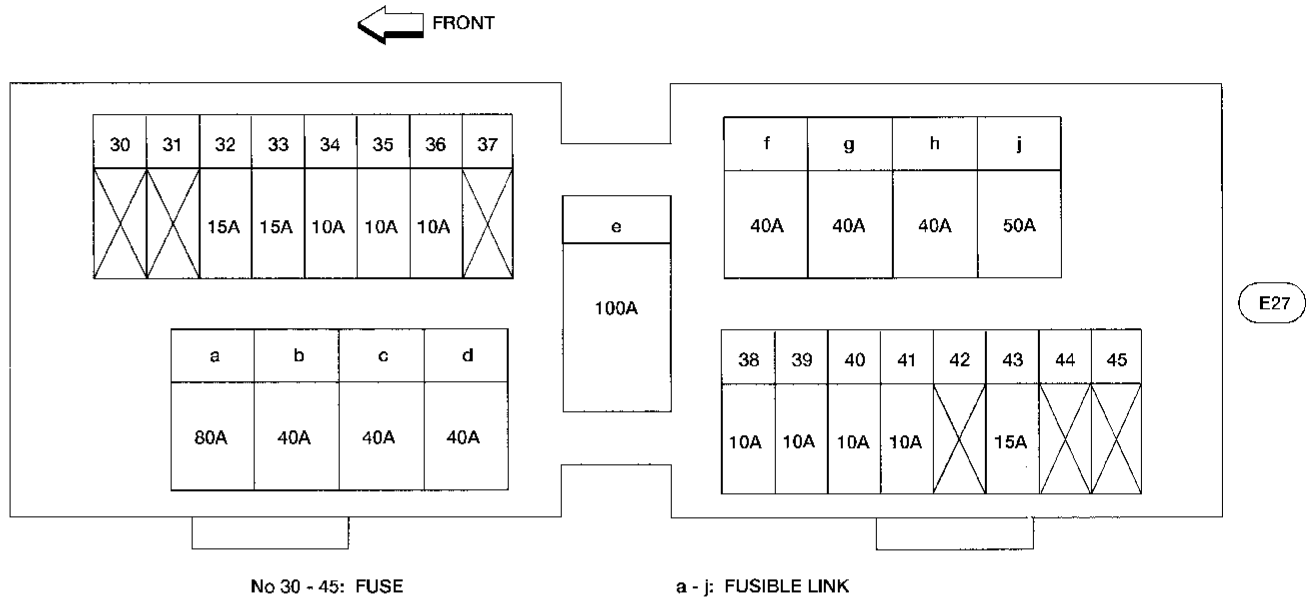


ELECTRICAL UNITS

Terminal Arrangement


ECM (ECCS CONTROL MODULE) (F30)

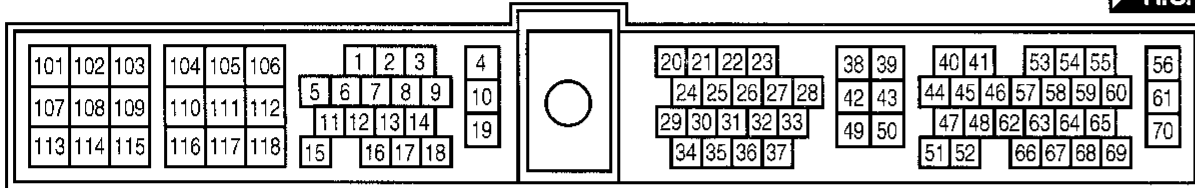


TRANSMISSION CONTROL MODULE (F29)

 

ABS CONTROL UNIT (E67)

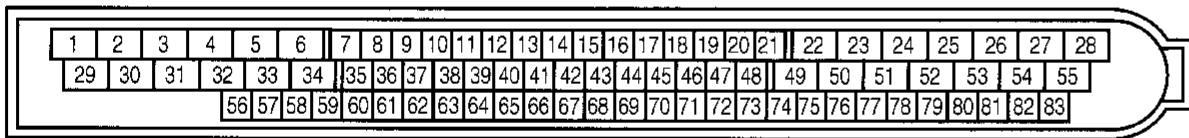

SMART ENTRANCE CONTROL UNIT (M33)

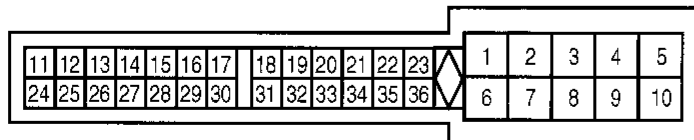

JOINT CONNECTOR (J/C)

Terminal Arrangement

