

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-307
 ABS - Wiring diagramBR-45
 ABS (anti-lock brake system).....BR-38
 Absolute pressure sensorEC-116
 A/C - Wiring diagram.....HA-21
 A/C air flow.....HA-16
 A/C component layout.....HA-15
 A/C compressor clutch removal and
 installationHA-68
 A/C compressor descriptionHA-7
 A/C compressor mounting.....HA-67
 A/C compressor precaution.....HA-7
 A/C compressor special service tool.....HA-8
 A/C control linkage adjustment (manual A/C).....HA-37
 A/C control operation (manual A/C).....HA-14
 A/C diagnostic work flow (manual A/C)HA-28
 A/C HFC134a (R134a) system introductionHA-13
 A/C HFC134a (R134a) system precautionHA-2
 A/C HFC134a (R134a) system service
 procedureHA-59, HA-62
 A/C HFC134a (R134a) system service tools.....HA-9
 A/C HFC134a system service equipment
 precautionHA-9
 A/C lubricant (R134a).....HA-64
 A/C lubrication oilHA-64
 A/C operational check.....HA-26
 A/C performance chart.....HA-52
 A/C performance test diagnoses.....HA-50
 A/C pressure switchHA-13
 A/C push control.....HA-14
 A/C relay.....HA-47
 A/C trouble diagnoses (manual A/C)HA-28
 Accel drum unitEM-28
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Air bag.....RS-10
 Air bag disposal.....RS-19
 Air bag precautionsGI-2
 Air bleeding for brake systemBR-6
 Air bleeding (hydraulic clutch).....CL-6
 Air cleaner filter replacementMA-13
 Air conditioner cut controlEC-18
 Air conditioning - See A/C.....HA-13
 Air flow meter - See Mass air flow sensor.....EC-107
 AlternatorEL-35
 Angular tightening applicationEM-2
 AntennaEL-137
 Anti-lock brake system - Wiring diagram.....BR-45
 AP/SEN - Wiring diagramEC-116
 ASCD - Wiring diagram.....EL-150
 ASCD (automatic speed control device).....EL-146

A/T - Wiring diagram - AT - FTS.....AT-83
 A/T - Wiring diagram - AT - PNP/SW.....AT-78
 A/T - Wiring diagram - AT - MAIN.....AT-74
 A/T - Wiring diagram - AT - VSS A/TAT-88
 A/T control.....EC-318
 A/T diagnosis communication lineEC-412
 A/T fluid temperature sensor.....AT-85
 A/T self-diagnoses.....AT-36
 A/T shift lock systemAT-199
 A/T shift lock system - Wiring diagramAT-200
 A/T trouble diagnosesAT-47
 A/T Wiring diagram - AT - ENG SSAT-92
 A/T Wiring diagram AT - 1STAT-98
 A/T Wiring diagram AT - 2NDAT-104
 A/T Wiring diagram AT - 3RDAT-110
 A/T Wiring diagram AT - 4TH.....AT-117
 A/T Wiring diagram AT - BA/FTS.....AT-164
 A/T Wiring diagram AT - LPSVAT-137
 A/T Wiring diagram AT - NONDTCAT-173
 A/T Wiring diagram AT - OVRCSVAT-159
 A/T Wiring diagram AT - SSV/AAT-142
 A/T Wiring diagram AT - SSV/B.....AT-147
 A/T Wiring diagram AT - TCCSIG.....AT-130
 A/T Wiring diagram AT - TCVAT-124
 A/T Wiring diagram AT - TPS.....AT-153
 A/T Wiring diagram AT - VSSMTR.....AT-169
 AT/C - Wiring diagram.....EC-318
 ATDIAG - Wiring diagramEC-412
 AudioEL-130
 AUDIO - Wiring diagramEL-132
 Audio and A/C control removal and
 installation - See Instrument panel.....BT-18
 Automatic speed control system - See ASCD.. EL-146
 Automatic transaxle numberGI-37
 Automatic transmission fluid replacementMA-18
 Auxiliary air control (AAC).....EC-307

B

Back windowBT-46
 BACK/L - Wiring diagram.....EL-59
 Back-up lampEL-59
 Back-up lamp switch (M/T)MT-8
 Ball joint front axle.....FA-26
 BatteryEL-25
 Baulk ring (M/T).....MT-15
 Blower motorHA-34
 Blower resistor.....HA-34
 Board-on lift.....GI-40
 Body alignment.....BT-50
 Boring/honing cylinder blockEM-46
 BPT valveEC-270
 Brake booster.....BR-15

ALPHABETICAL INDEX

Brake control valve (Proportioning valve).....	BR-8
Brake fluid change	BR-5
Brake fluid level.....	MA-19
Brake fluid level and line check.....	BR-5
Brake hydraulic line.....	BR-7
Brake inspection.....	MA-19
Brake lines and cables inspection	MA-19
Brake lining wear temporary checking.....	MA-20
Brake master cylinder	BR-12
Brake pedal.....	BR-10
Bulb specifications.....	EL-253
Bumper, front.....	BT-7
Bumper, rear.....	BT-11
BYP5/V - Wiring diagram.....	EC-402

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-249
Canister - See EVAP canister.....	EC-20
CHARGE - Wiring diagram	EL-36
Charging system	EL-35
Chassis and body maintenance.....	MA-17
CHIME - Wiring diagram.....	EL-100
CIGAR - Wiring diagram	EL-119
Cigarette lighter.....	EL-119
Circuit breaker.....	EL-17
CKPS - Wiring diagram.....	EC-244
Closed loop control	EC-16
Clutch cover	CL-10
Clutch disc.....	CL-10
Clutch fluid level.....	MA-17
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal	CL-4
Clutch release bearing	CL-9
Clutch release mechanism.....	CL-9
Clutch withdrawal lever	CL-9
CMPS - Wiring diagram	EC-249
Coil spring (front).....	FA-24
Coil spring (rear)	RA-12
Collision diagnosis.....	RS-46
Combination lamp, rear, removal and installation	BT-32
Combination meter.....	EL-82
Combination meter removal and installation - See Instrument panel.....	BT-18
Combination switch	EL-40
Compression pressure	EM-12
Compressor clutch removal and installation.....	HA-68
Compressor description	HA-7
Compressor mounting.....	HA-67
Compressor precaution.....	HA-7

Compressor special service tool.....	HA-8
Connecting rod.....	EM-46
Connecting rod bearing clearance.....	EM-49
Connecting rod bushing clearance	EM-50
Connector inspection.....	GI-17
Console box - See Instrument panel	BT-18
CONSULT for ABS	BR-55
CONSULT for ECCS	EC-60
CONSULT general information	GI-33
Control lever (M/T)	MT-13
Control valve (A/T).....	AT-237
Converter housing installation.....	AT-210
Coolant mixture ratio	MA-9
Coolant replacement	MA-11
Cooling circuit (engine)	LC-9
Cooling fan	LC-14
Cooling fan control system.....	LC-14
Cooling fan motor.....	EC-432
Cooling fan relay	EC-432
Coupling sleeve (M/T).....	MT-15
Crank angle sensor built into distributor - See Camshaft position sensor	EC-249
Crankcase emission control system - See positive crankcase ventilation	EC-30
Crankcase ventilation system - See positive crankcase ventilation	EC-30
Crankshaft	EM-47
Crankshaft position sensor (OBD).....	EC-244
Crankshaft position sensor (OBD) cog chipping.....	EC-342
Cruise control - See ASCD	EL-146
Cylinder block.....	EM-43
Cylinder block boring.....	EM-46
Cylinder head	EM-30
Cylinder head bolt tightening	EM-30

D

Daytime light system	EL-48
Daytime running light - See Daytime light system.....	EL-48
DEF - Wiring diagram	EL-123
Detonation sensor - See Knock sensor.....	EC-239
Diagnosis sensor unit.....	RS-13
Diagnostic trouble code (DTC) inspection priority chart	EC-83
Differential gear (FF A/T)	AT-280
Differential gear (FF M/T).....	MT-29
Dimensions.....	GI-38
Distributor	EC-17
Distributor ignition (DI) system.....	EC-17
D/LOCK - Wiring diagram	EL-175
Dome light - See Interior lamp.....	EL-72

ALPHABETICAL INDEX

Door, front.....	BT-15
Door glass	BT-15
Door lock	BT-15
Door mirror	BT-48
Door, rear	BT-17
Door trim.....	BT-23
Drive belt inspection.....	MA-10
Drive plate runout.....	EM-51
Drive shaft (front)	FA-15
Dropping resistor (A/T).....	AT-139
DTC WORK SUPPORT	EC-68
DTRL - Wiring diagram	EL-51

E

ECCS basic inspection.....	EC-77
ECCS circuit diagram.....	EC-9
ECCS component parts location.....	EC-10
ECCS fail-safe system	EC-84
ECCS on board diagnostic system.....	EC-40
ECCS symptom matrix chart.....	EC-85
ECCS system diagram and chart	EC-12
ECM input/output signal.....	EC-92
ECTS - Wiring diagram	EC-130
EGR control (EGRC) - BPT valve.....	EC-265
EGR control (EGRC) - solenoid valve.....	EC-347
EGR control valve	EC-262, EC-270, EC-363
EGR temperature sensor	EC-352
EGRC1 - Wiring diagram	EC-256
EGRC/V - Wiring diagram.....	EC-347
EGR/TS - Wiring diagram	EC-352
Electric sun roof	EL-142
Electrical diagnoses	GI-20
Electrical ignition system.....	EC-17
Electrical load signal circuit.....	EC-452
Electrical unit.....	EL-230
Electrical units location.....	EL-230
Engine compartment	BT-50
Engine control circuit diagram.....	EC-9
Engine control module (ECM).....	EC-322
Engine coolant temperature sensor (ECTS)	EC-130, EC-147
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-9
Engine removal	EM-40
Engine room - See Engine compartment	BT-50
Engine serial number	GI-37
EVAP canister	EC-20
EVAP canister purge volume control solenoid valve	EC-286, EC-376
EVAP canister vent control valve.....	EC-292, EC-383

EVAP control system pressure sensor	EC-297
EVAP control system purge flow monitoring diagnosis	EC-388
EVAP control system (small leak) diagnosis	EC-276
EVAP vapor lines inspection	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve.....	EC-256
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-17
Exterior	BT-27

F

Fan switch	HA-34
Fast idle.....	EC-32
Fast idle cam (FIC)	EC-32
Fast idle cam (FIC) inspection and adjustment.....	EC-32
F/FOG - Wiring diagram.....	EL-61
FICD - Wiring diagram	EC-448
Final drive (FF A/T)	AT-280
Final drive (FF M/T)	MT-29
Finisher, interior - See Trim.....	BT-21
Finisher, rear panel	BT-21
Floor trim	BT-21
Flow charts	GI-30
Fluid temperature sensor (A/T).....	AT-85
Fluids	MA-8
Flywheel (clutch)	CL-11
Flywheel runout.....	EM-51
Fog lamp, front.....	EL-60
Fog lamp, front, removal and installation.....	BT-7
Fork rod (M/T)	MT-16
Forward clutch.....	AT-258
F/PUMP - Wiring diagram	EC-439
Freeze frame data.....	EC-42
FRO2 - Wiring diagram.....	EC-152
FRO2/H - Wiring diagram	EC-186
Front axle	FA-10
Front bumper.....	BT-7
Front disc brake	BR-18
Front door.....	BT-15
Front fog lamp.....	EL-60
Front fog lamp removal and installation.....	BT-7
Front heated oxygen sensor (HO2S).....	EC-152, EC-158, EC-165, EC-172, EC-180
Front passenger air bag.....	RS-16
Front seat	BT-34
Front seat belt	RS-4
Front suspension	FA-23
FUEL - Wiring diagram	EC-219
Fuel cut control (at no load & high engine speed)	EC-19

ALPHABETICAL INDEX

Fuel filler lid.....	BT-11
Fuel filter.....	EC-31
Fuel filter replacement.....	MA-13
Fuel injector.....	EC-433
Fuel line inspection	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-31
Fuel pressure regulator.....	EC-32
Fuel pressure release	EC-31
Fuel pump	EC-439
Fuel pump and gauge.....	FE-5
Fuel pump relay	EC-439
Fuel system.....	FE-4
Fuel tank vacuum relief valve	EC-21
Fuel temperature sensor.....	EC-230
Fuse.....	EL-17
Fusible link	EL-17

G

Garage jack and safety stand.....	GI-40
Gauges.....	EL-82
Gear components (M/T).....	MT-15
Generator	EL-35
Generic scan tool (GST).....	EC-71
Glass	BT-45
Grease.....	MA-8
Grille - See Exterior.....	BT-7
Ground distribution.....	EL-18

H

Harness connector	EL-3
Harness connector inspection.....	GI-17
Harness layout	EL-234
Hazard warning lamp	EL-63
Headlamp	EL-43
Headlamp aiming control	EL-46
Headlamp leveler - See Headlamp aiming control	EL-46
Headlining - See Roof trim.....	BT-25
Heated oxygen sensor heater.....	EC-163, EC-170
Heated oxygen sensor (HO2S).....	EC-152, EC-158, EC-165, EC-172, EC-180
HEATER - Wiring diagram	HA-20
Height (Dimensions).....	GI-38
HFC134a (R134a) system introduction.....	HA-13
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-59, HA-62
HFC134a (R134a) system service tools.....	HA-9

HFC134a system service equipment precaution	HA-9
High clutch.....	AT-254
H/LAMP - Wiring diagram	EL-44
Hood.....	BT-7
Horn.....	EL-118
HORN - Wiring diagram.....	EL-118
How to erase DTC for ECCS OBD system	EC-50

I

IACV-AAC valve	EC-307
IACV-FICD solenoid valve.....	EC-448
IATS - Wiring diagram.....	EC-124
Identification plate	GI-36
Idle air control valve (IACV).....	EC-307
Idle mixture ratio.....	EC-34
Idle speed.....	EC-34
Ignition coil	EC-335
Ignition timing	EC-34
Ignition wire inspection.....	EC-238
IGN/SG - Wiring diagram.....	EC-335
ILL - Wiring diagram.....	EL-70
Illumination	EL-69
Inhibitor switch.....	AT-76, EC-416
INJECT - Wiring diagram	EC-433
Injector.....	EC-435
Injector removal and installation	EC-32
Input shaft (FF M/T)	MT-20
Instrument panel.....	BT-18
Intake air temperature sensor.....	EC-124
Intake door control linkage adjustment.....	HA-41
Intake manifold	EM-9
Interior	BT-21
Interior lamp	EL-72
Interior lamp on-off control	EL-73
INT/L - Wiring diagram.....	EL-80

J

Jacking points.....	GI-39, GI-40
---------------------	--------------

K

Keyless entry system - See Multi-remote control system.....	EL-186
Knock sensor (KS)	EC-239
Knuckle spindle	FA-10
KS - Wiring diagram.....	EC-239

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL

IDX

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-38
License lamp	EL-56
Lifting points	GI-39
Line pressure solenoid valve	AT-121
Line pressure test (A/T)	AT-55
Liquid gasket application	EM-2
LOAD - Wiring diagram	EC-452
Location of electrical units	EL-230
Lock, door	BT-15
Low and reverse brake	AT-264
Lubricant (R134a) A/C	HA-64
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication oil A/C	HA-64
Lubrication-locks, hinges and hood latches	MA-22
Luggage compartment trim	BT-26
Luggage room lamp	EL-80

M

MAFS - Wiring diagram	EC-107
Magnet clutch	HA-68
MAIN - Wiring diagram	EC-102
Main drive gear (M/T)	MT-15
Mainshaft (M/T)	MT-25
Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-212
Malfunction indicator lamp (MIL)	EC-52
Manual transaxle number	GI-37
Manual transmission oil replacement	MA-17
MAP/BARO switch solenoid valve	EC-324
Mass air flow sensor (MAFS)	EC-107
Master cylinder (brake)	BR-12
Master cylinder (clutch)	CL-7
Meter	EL-82
METER - Wiring diagram	EL-85
MIL & Data link connectors circuit	EC-455
MIL/DL - Wiring diagram	EC-455
Mirror, door	BT-48
Mirror, out side	BT-48
Misfire	EC-234
Mode door control linkage adjustment	HA-37
Model variation	GI-35
Molding - See Exterior	BT-27
M/T major overhaul	MT-14
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-190
Multi link/lower ball joint (rear)	RA-14
Multipoint fuel injection (MFI) system	EC-15
Multipoint fuel injection precautions	GI-5

Multi-remote control system	EL-186
-----------------------------------	--------

N

Neutral position switch	EC-416
Neutral position switch (M/T)	MT-8
NVH troubleshooting (BR)	BR-4
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (ST)	ST-5

O

Oil change (capacity)	MA-14
Oil jet	LC-4
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T)	AT-233
Oil pump (engine)	LC-6
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-26
Operating cylinder (clutch)	CL-8
Out side mirror	BT-48
Overdrive control switch	AT-197
Overrun clutch	AT-258
Overrun clutch solenoid valve	AT-121
Oversize piston	EM-46
Oxygen sensor (O2S)	EC-152, EC-158, EC-165, EC-172, EC-180

P

P/ANT - Wiring diagram	EL-138
Parking brake control	BR-36
Parking drum brake	BR-22
Parking lamp	EL-56
Park/Neutral position switch	EC-416
PCV (positive crankcase ventilation)	EC-30
PGC/V - Wiring diagram	EC-376
Pilot bushing replacement	EM-53
Piston assembly	EM-51
Piston pin inspection	EM-45
Piston ring inspection	EM-45
Piston to bore clearance	EM-46
PNP/SW - Wiring diagram	EC-416
POWER - Wiring diagram	EL-10
Power antenna	EL-137
Power door lock	EL-171

ALPHABETICAL INDEX

Power door mirror	EL-144
Power seat	EL-145
Power steering fluid level	MA-21, ST-6
Power steering gear	ST-14
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-444
Power steering oil pump	ST-20
Power steering system bleeding	ST-7
Power supply routing	EL-8
Power transistor & ignition coil	EC-335
Power window	EL-166
Precautions (General)	GI-3
PRE/SE - Wiring diagram	EC-297
Pressure plate - See Clutch cover	CL-10
Pressure test (A/T)	AT-55
PST/SW - Wiring diagram	EC-444

R

R134a - See HFC134a	HA-2
Radiator	LC-14
Radiator fan - See Cooling fan	LC-14
Radio - See Audio	EL-130
Rear axle	RA-4
Rear axle (disc brake type)	RA-8
Rear axle (drum brake type)	RA-8
Rear bumper	BT-11
Rear combination lamp removal and installation	BT-32
Rear disc brake	BR-27
Rear door	BT-17
Rear drum brake	BR-22
Rear heated oxygen sensor (HO2S)	EC-190, EC-197, EC-204, EC-210
Rear panel finisher	BT-21
Rear seat	BT-35
Rear seat belt	RS-6
Rear suspension	RA-10
Rear window	BT-46
Rear window defogger	EL-120
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-62
Refrigerant general precaution	HA-3
Refrigerant lines	HA-66
Refrigeration cycle	HA-13
Release bearing (clutch)	CL-9
Removal and installation (A/T)	AT-209
Resistor	EC-341
Reverse clutch	AT-251
Reverse idler shaft (M/T)	MT-15
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-8
Reverse main gear (M/T)	MT-15

Revolution sensor (A/T)	AT-89
Road wheel size	GI-38
Roof trim	BT-25
Room lamp	EL-72
Room lamp - See Interior lamp	EL-72
ROOM/L - Wiring diagram	EL-76
Rotor disc (front)	FA-10
RRO2 - Wiring diagram	EC-190
RRO2/H - Wiring diagram	EC-215

S

SAE J1930 terminology list	GI-45
Seal - See Exterior	BT-27
SEAT - Wiring diagram	EL-145
Seat belt, front	RS-4
Seat belt inspection	MA-22
Seat belt, rear	RS-6
Seat, front	BT-34
Seat, rear	BT-35
Self-diagnostic results	EC-52
SHIFT - Wiring diagram	AT-200
Shift control components (M/T)	MT-16
Shift fork (M/T)	MT-16
Shift lock system	AT-199
Shift schedule	AT-303
Shift solenoid valve A (A/T)	AT-99, AT-111
Shift solenoid valve B (A/T)	AT-99
Shock absorber (front)	FA-24
Shock absorber (rear)	RA-12
Side trim	BT-21
Smart entrance control unit	EL-225
Spare tire size	GI-38
Spark plug replacement	MA-15
Spiral cable	RS-14
Spot lamp	EL-80
Spring (Wheelarch) height	FA-6
SROOF - Wiring diagram	EL-142
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram	RS-27
SRS Trouble diagnoses	RS-23
S/SIG - Wiring diagram	EC-436
Stabilizer bar (front)	FA-25
Stabilizer bar (rear)	RA-14
Stall test (A/T)	AT-52
Standardized relay	EL-5
START - Wiring diagram	EL-31
Start signal	EC-436
Starter	EL-29
Starting system	EL-29
Steering gear and linkage inspection	MA-21
Steering knuckle	FA-10
Steering linkage	ST-14

ALPHABETICAL INDEX

Steering switch.....	EL-42
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-8
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-58
STOP/L - Wiring diagram.....	EL-58
Striking rod (M/T).....	MT-16
Strut (front).....	FA-24
Strut (rear).....	RA-12
Sun roof, electric.....	EL-142
Sunroof.....	BT-37
Supplemental Restraint System.....	RS-10
Supplemental restraint system - Wiring diagram.....	RS-27
SW/V - Wiring diagram.....	EC-324
Symbols and abbreviations.....	GI-8
Synchronizer (M/T).....	MT-15, MT-26
System readiness test (SRT) code.....	EC-42

T

Tail lamp.....	EL-56
TAIL/L - Wiring diagram.....	EL-56
TCM circuit diagram.....	AT-12
TCM inspection table.....	AT-70
Temperature control cable and linkage adjustment.....	HA-48
TFTS - Wiring diagram.....	EC-230
THEFT - Wiring diagram.....	EL-208
Theft warning system.....	EL-201
Thermal protector.....	HA-47
Thermo control amp.....	HA-47
Thermostat.....	LC-13
Three way catalyst.....	EC-271
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-9
Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-77
Throttle position sensor (TPS).....	EC-135
Throttle position switch.....	AT-156, AT-198
Throwout bearing - See Clutch release bearing.....	CL-9
Tie-rod.....	ST-17
Tie-rod ball joints.....	ST-17
Tightening torque of standard bolts.....	GI-44
Timing chain.....	EM-17
Tire rotation.....	MA-21
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-121
Torque converter installation.....	AT-210
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-135
TP/SW - Wiring diagram.....	EC-313

Transmission case (M/T).....	MT-14
Transverse link (front).....	FA-26
Tread-FR&RR (Dimensions).....	GI-38
Trim.....	BT-21
Triple pressure switch.....	HA-47
Trouble diagnoses.....	GI-20
Trunk lid.....	BT-11
Trunk lid opener - See Trunk lid.....	BT-11
Trunk room lamp.....	EL-80
Trunk room trim.....	BT-26
TURN - Wiring diagram.....	EL-66
Turn signal lamp.....	EL-63
Two trip detection logic.....	EC-40
Two-pole lift.....	GI-41

U

Under body.....	BT-52
-----------------	-------

V

Vacuum cut valve.....	EC-411
Vacuum cut valve bypass valve.....	EC-402, EC-407
Vacuum hose (brake system).....	BR-17
Vacuum hose drawing (ECCS).....	EC-13
Valve clearance.....	EM-37
Valve guide.....	EM-33
Valve lifter.....	EM-36
Valve seat.....	EM-35
Valve spring.....	EM-36
Vehicle identification number.....	GI-36
Vehicle recovery (freeing a stuck vehicle).....	GI-43
Vehicle speed sensor (VSS).....	EC-302
Vent mode switch.....	HA-14
VENT/V - Wiring diagram.....	EC-292, EC-395
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram.....	EC-302

W

WARN - Wiring diagram.....	EL-93
Warning chime.....	EL-97
Warning lamps.....	EL-90
Washer, front.....	EL-110
Water pump.....	LC-11
Weatherstrip - See Exterior.....	BT-27
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-21
Wheel bearing (front axle).....	FA-7
Wheel bearing (rear).....	RA-5

ALPHABETICAL INDEX

Wheel hub (front)	FA-10	Window, door.....	BT-15
Wheel hub (rear)	RA-8	Window, rear	BT-46
Wheel sensors (ABS).....	BR-39	Windshield.....	BT-45
Wheel size.....	GI-38	WIPER - Wiring diagram.....	EL-112
Wheelarch height	FA-6	Wiper and washer	EL-110
Wheelbase (Dimensions).....	GI-38	Wiper, front.....	EL-110
Width (Dimensions)	GI-38	Wiring Diagram (Cell code) list	EL-254
WINDOW - Wiring diagram.....	EL-168	Wiring diagrams	GI-9
Window antenna.....	EL-137	Withdrawal lever (clutch).....	CL-9
Window, back.....	BT-46	Wrist pin - See Piston pin inspection.....	EM-45

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL

IDX