

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-36](#)
A/C and audio controller [ATC-118](#)
A/C component layout [ATC-25](#)
A/C compressor clutch removal and installation
[ATC-141](#)
A/C compressor mounting [ATC-140](#), [ATC-141](#),
[ATC-144](#), [ATC-145](#), [ATC-146](#), [ATC-147](#), [ATC-148](#),
[ATC-150](#), [ATC-151](#), [ATC-152](#), [ATC-153](#), [ATC-154](#)
A/C compressor precaution [ATC-12](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-33](#)
A/C diagnostic work flow (auto A/C) [ATC-103](#)
A/C evaporator [ATC-153](#)
A/C HFC134a (R134a) system precaution [ATC-5](#)
A/C HFC134a (R134a) system service procedure
[ATC-138](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-12](#)
A/C lubricant (R134a) [ATC-26](#)
A/C lubrication oil [ATC-159](#)
A/C operational check [ATC-62](#)
A/C self-diagnoses (auto A/C) [ATC-53](#), [ATC-103](#)
A/C service data specification [ATC-159](#)
A/C system description (auto A/C) [ATC-29](#)
A/C trouble diagnoses (auto A/C) [ATC-39](#)
A/C, A - Wiring diagram [ATC-45](#)
A/T fluid checking [AT-12](#), [AT-51](#)
A/T fluid cooler cleaning [AT-14](#)
A/T fluid replacement [AT-12](#)
A/T fluid temperature sensor [AT-142](#)
A/T IND - Wiring diagram [DI-36](#)
A/T self-diagnoses [AT-107](#)
A/T shift lock system [AT-240](#)
A/T shift lock system - Wiring diagram [AT-241](#)
A/T trouble diagnoses [AT-42](#)
A/T Wiring diagram AT - CAN [AT-113](#)
A/T Wiring diagram AT - FTS [AT-143](#)
A/T Wiring diagram AT - MAIN [AT-188](#)
A/T Wiring diagram AT - MMSW [AT-177](#)
A/T Wiring diagram AT - NONDTC [AT-195](#)
A/T Wiring diagram AT - PNP/SW [AT-121](#)
A/T Wiring diagram AT - STSIG [AT-116](#)
A/T Wiring diagram AT - VSS A/T [AT-126](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-595](#),
[EC-602](#), [EC-616](#)
Accelerator pedal released position learning [EC-88](#)
AF1B1-Wiring diagram [EC-477](#), [EC-485](#), [EC-493](#),
[EC-502](#), [EC-512](#), [EC-521](#), [EC-533](#)
AF1B2-Wiring diagram [EC-479](#), [EC-487](#), [EC-495](#),
[EC-504](#), [EC-514](#), [EC-523](#), [EC-535](#)
AF1HB1-Wiring diagram [EC-394](#)
AF1HB2-Wiring diagram [EC-396](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-55](#)
Air bag precautions [SRS-3](#)

Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake system [BR-10](#)
Air cleaner and air duct [EM-15](#)
Air cleaner filter replacement [MA-14](#)
Air conditioner cut control [EC-27](#)
Air flow meter - See Mass air flow sensor [EC-180](#),
[EC-189](#)
Air fuel ratio sensor 1 [EC-475](#), [EC-483](#), [EC-491](#),
[EC-500](#), [EC-509](#), [EC-518](#), [EC-530](#)
Air fuel ratio sensor 1 heater [EC-393](#)
Air mix. door motor [ATC-134](#)
Ambient sensor [ATC-104](#), [ATC-120](#)
Angular tightening application [EM-4](#)
Antenna [AV-33](#)
APPS1 - Wiring diagram [EC-597](#)
APPS2 - Wiring diagram [EC-604](#)
APPS3 - Wiring diagram [EC-618](#)
ASC/BS - Wiring diagram [EC-567](#)
ASC/SW - Wiring diagram [EC-559](#)
ASCBOF - Wiring diagram [EC-657](#)
ASCD [EC-28](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-565](#), [EC-656](#)
ASCD indicator lamp [EC-670](#)
ASCD steering switch [EC-557](#)
ASCIND - Wiring diagram [EC-671](#)
Ashtray illumination [LT-167](#)
AT indicator lamp [DI-36](#)
Audio [AV-5](#)
Auto air conditioner - Wiring diagram [ATC-45](#)
Auto amp [ATC-119](#)
Auto anti-dazzling inside mirror [GW-56](#)
Automatic amplifier [ATC-50](#), [ATC-64](#), [ATC-119](#)
Automatic transmission fluid replacement [MA-21](#)
Axle [MA-26](#)
Axle housing (rear) [RAX-8](#)

B

BACK/L - Wiring diagram [LT-140](#)
Back-up lamp [LT-140](#)
Back-up lamp switch (M/T) [MT-12](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#),
[SC-23](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-80](#), [ATC-126](#)
Blower unit [ATC-124](#)
Bose speaker amp. [AV-5](#)
Brake booster [BR-17](#)
Brake fluid change [BR-9](#), [BR-10](#)
Brake fluid level [MA-23](#)
Brake fluid level and line check [BR-9](#)
Brake hydraulic line [BR-11](#)
Brake inspection [MA-24](#)
Brake lines and cables inspection [MA-24](#)
Brake master cylinder [BR-14](#)
Brake pedal [BR-6](#)

ALPHABETICAL INDEX

Brake switch [EC-590](#)
 BRK/SW - Wiring diagram [EC-591](#)
 Bulb specifications [LT-203](#)

C

Camshaft [EM-75](#)
 Camshaft inspection [EM-77](#)
 Camshaft position sensor (PHASE) [EC-297](#)
 CAN - Wiring diagram [EC-165](#), [LAN-10](#), [LAN-35](#)
 CAN (Controller Area Network) [LAN-4](#), [LAN-8](#), [LAN-33](#)
 CAN communication . [EC-30](#), [EC-164](#), [AT-30](#), [AT-112](#),
[WT-9](#), [WW-9](#), [LAN-4](#), [LAN-8](#), [LAN-33](#)
 Canister-See EVAP canister [EC-34](#)
 Center bearing assembly (propeller shaft) [PR-9](#)
 Center bearing disassembly (propeller shaft) [PR-8](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-18](#)
 CHIME - Wiring diagram [DI-42](#)
 CIGAR - Wiring diagram [WW-39](#)
 Cigarette lighter [WW-39](#)
 Cigarette lighter illumination [LT-168](#)
 Circuit breaker [PG-16](#)
 Clock [DI-55](#)
 Closed loop control [EC-24](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-62](#)
 Combination lamp, rear, removal and installation
[LT-161](#)
 Combination meter [DI-4](#)
 COMPAS - Wiring diagram [DI-20](#)
 Compass [DI-19](#)
 Component Location (auto A/C) [ATC-42](#)
 Compression pressure [EM-92](#)
 Compressor clutch removal and installation .. [ATC-141](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-151](#)
 CONSULT-II Reference value (A/T) [AT-93](#)
 Control units (terminal arrangement) [PG-67](#)
 Control valve (A/T) [AT-36](#)
 Controller Area Network (CAN) [LAN-4](#), [LAN-8](#), [LAN-33](#)
 Converter housing installation [AT-277](#)
 COOL/F - Wiring diagram [EC-458](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-21](#)
 Cooling fan motor [EC-465](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-43](#)
 Crankshaft position sensor (POS) [EC-290](#)
 Crash zone sensor [SRS-50](#)
 Cylinder head [EM-92](#)

D

D/LOCK - Wiring diagram [BL-24](#)
 Daytime light system [LT-38](#)
 Daytime running light - See Daytime light system [LT-38](#)
 Diagnosis sensor unit [SRS-53](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),
[EC-47](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-99](#)
 Direct clutch solenoid valve [AT-164](#), [AT-166](#)
 Display and amp.assembly [ATC-50](#), [ATC-64](#)
 Door glass [GW-52](#)
 Door glass Fitting Adjustment(Front) [GW-55](#)
 Door mirror [GW-82](#), [GW-83](#)
 Door trim [EI-29](#)
 Door, front [BL-76](#), [GW-52](#)
 Door, rear [BL-76](#)
 Drive belt [EM-13](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-41](#)
 DTRL - Wiring diagram [LT-44](#)
 Duct and grilles [ATC-135](#)

E

ECM power supply [EC-155](#), [EC-400](#)
 ECM/PW - Wiring diagram [EC-401](#)
 ECTS - Wiring diagram [EC-202](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-411](#), [EC-413](#)
 Electrical load signal circuit [EC-655](#)
 Electrical unit [PG-67](#)
 Electrical units location [PG-61](#)
 Electronic ignition (EI) system [EC-25](#)
 Engine control circuit diagram [EC-113](#)
 Engine control component parts location [EC-106](#)
 Engine control module (ECM) [EC-390](#)
 Engine control system diagram [EC-22](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) ... [EC-200](#),
[EC-212](#)
 Engine fail-safe system [EC-101](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-15](#)
 Engine oil precautions [GI-7](#)
 ETC1 - Wiring diagram [EC-414](#)
 ETC2 - Wiring diagram [EC-421](#)
 ETC3 - Wiring diagram [EC-425](#)
 EVAP canister [EC-34](#)
 EVAP canister purge volume control solenoid valve
[EC-325](#), [EC-542](#)
 EVAP canister vent control valve [EC-332](#), [EC-550](#)
 EVAP control system (small leak) diagnosis ... [EC-317](#)
 EVAP control system pressure sensor [EC-339](#),
[EC-342](#), [EC-348](#)
 EVAP control system purge flow monitoring diagnosis
[EC-312](#)
 EVAP vapor lines inspection [MA-17](#)

ALPHABETICAL INDEX

Evaporative emission (EVAP) system [EC-31](#)
Evaporator [ATC-153](#)
Exhaust manifold [EM-24](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-18](#)
Expansion valve [ATC-154](#)

F

F/FOG - Wiring diagram [LT-98](#)
F/PUMP - Wiring diagram [EC-645](#)
Final drive pre-inspection [RFD-17](#), [RFD-37](#)
Floor trim [EI-34](#)
Flow charts [GI-26](#)
Fluid temperature sensor (A/T) [AT-142](#)
Fluorescent leak detector [ATC-155](#)
Flywheel runout(QR) [EM-137](#)
Fog lamp, front [LT-95](#)
Freeze frame data [EC-51](#)
Front brake solenoid valve [AT-160](#), [AT-162](#)
Front disc brake [BR-21](#)
Front door [BL-76](#), [GW-52](#)
Front fog lamp [LT-95](#)
Front passenger air bag [SRS-45](#)
Front seat [SE-63](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
Front side air bag [SRS-46](#)
Front suspension [FSU-5](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-261](#), [EC-265](#)
Fuel cut control (at no load high engine speed) . [EC-26](#)
Fuel filter replacement [FL-5](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-240](#), [EC-250](#)
Fuel injection system (Bank 2) [EC-240](#), [EC-250](#)
Fuel injector [EC-637](#)
Fuel level sensor [EC-373](#), [EC-375](#), [EC-377](#)
Fuel line inspection [FL-4](#), [MA-14](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-91](#)
Fuel pressure release [EC-91](#)
Fuel pump [EC-644](#)
Fuel pump and gauge [FL-5](#)
Fuel system [FL-4](#)
Fuel tank [FL-11](#)
Fuel tank temperature sensor [EC-259](#), [EC-264](#)
Fuel tank vacuum relief valve [EC-34](#)
FUELB1 - Wiring diagram [EC-242](#), [EC-252](#)
FUELB2 - Wiring diagram [EC-243](#), [EC-253](#)
Fuse [PG-16](#)
Fuse and fusible link box [PG-73](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Generic scan tool (GST) [EC-136](#)

Glass [GW-11](#), [GW-13](#), [GW-52](#)
Glove box lamp [LT-166](#), [LT-202](#)
GPS antenna [AV-38](#)
Ground distribution [PG-30](#)

H

H/LAMP - Wiring diagram [LT-11](#)
Harness connector [PG-65](#)
Harness layout [PG-40](#)
Hazard warning lamp [LT-113](#)
Headlining - See Roof trim [EI-36](#)
Heated oxygen sensor 2 (bank 1) [EC-220](#), [EC-229](#),
[EC-429](#), [EC-440](#)
Heated oxygen sensor 2 (bank 2) [EC-220](#), [EC-229](#),
[EC-429](#), [EC-440](#)
Heated oxygen sensor 2 heater (bank 1) [EC-172](#)
Heated oxygen sensor 2 heater (bank 2) [EC-172](#)
Heated seat [SE-55](#)
Heater and cooling unit (Heater core) [ATC-129](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-138](#)
HFC134a (R134a) system service tools [ATC-17](#)
HFC134a system service equipment precaution
[ATC-12](#)
High & low reverse clutch solenoid valve [AT-168](#),
[AT-170](#)
Hood [BL-12](#)
Hood lock system [BL-15](#)
Horn [WW-43](#)
HORN - Wiring diagram [WW-43](#)
How to erase DTC for OBD system [EC-60](#)
HSEAT - Wiring diagram [SE-57](#)

I

IATS - Wiring diagram [EC-197](#)
Idle air volume learning [EC-89](#)
Idle mixture ratio [EC-77](#)
Idle speed [EC-76](#)
Idle speed control (ISC) [EC-381](#), [EC-383](#)
Ignition coil [EM-34](#), [EC-624](#)
Ignition control system [EC-624](#)
Ignition key hole illumination [LT-165](#)
Ignition timing [EC-76](#)
IGNSYS - Wiring diagram [EC-625](#)
In vehicle sensor [ATC-108](#), [ATC-121](#)
INJECT - Wiring diagram [EC-638](#)
Injector [EC-637](#)
Input clutch solenoid valve [AT-156](#), [AT-158](#)
Intake air temperature sensor [EC-196](#), [EC-215](#)
Intake door control linkage adjustment [ATC-79](#)
Intake door motor [ATC-77](#), [ATC-127](#)
Intake manifold [EM-22](#)
Intake manifold collector [EM-17](#)
Intake sensor [ATC-114](#), [ATC-123](#)
Intake valve timing control (Bank 1) [EC-167](#)
Intake valve timing control (Bank 2) [EC-167](#)
Intake valve timing control solenoid valve (Bank 1)

ALPHABETICAL INDEX

[EC-404](#)

Intake valve timing control solenoid valve (Bank 2)

[EC-404](#)

Integrated homelink transmitter [BL-133](#)

Interior [EI-31](#)

Interior lamp [LT-169](#)

IPDM (Intelligent power distribution module engine room) [PG-17](#)

IVCB1 - Wiring diagram [EC-405](#)

IVCB2 - Wiring diagram [EC-407](#)

IVIS (Infiniti vehicle immobilizer system) precautions ...

[GI-3](#)

K

KEYLES - Wiring diagram [BL-50](#)

Knock sensor (KS) [EC-285](#)

KS - Wiring diagram [EC-286](#)

L

LAN system circuit [ATC-67](#)

Latch (lower anchors and tether for children) system ...

[SB-10](#)

Line pressure solenoid valve [AT-135](#)

Line pressure test (A/T) [AT-53](#)

Liquid gasket application [LU-2](#), [CO-2](#)

Location of electrical units [PG-61](#)

Low coast brake solenoid valve [AT-172](#), [AT-174](#)

Low tire pressure warning system [WT-7](#)

Lubricant (R134a) A/C [ATC-6](#), [ATC-26](#)

Lubrication circuit (engine) [LU-4](#)

Lubrication oil A/C [ATC-159](#)

Luggage compartment trim [EI-38](#)

M

M/T oil replacement [MT-10](#)

MAFS - Wiring diagram [EC-183](#), [EC-191](#)

Magnet clutch [ATC-86](#), [ATC-141](#)

MAIN - Wiring diagram [EC-155](#)

Maintenance (engine) [MA-11](#)

Malfunction indicator lamp (MIL) [EC-62](#)

Manual transmission oil replacement ... [MA-18](#), [MA-19](#)

Mass air flow sensor (MAFS) [EC-180](#), [EC-189](#)

Master cylinder (brake) [BR-14](#)

Master cylinder (clutch) [CL-8](#)

Meter [DI-4](#)

METER - Wiring diagram [DI-8](#)

MIL data link connectors circuit [EC-673](#)

MIL/DL - Wiring diagram [EC-673](#)

Mirror, door [GW-82](#), [GW-83](#)

Mirror, out side [GW-82](#), [GW-83](#)

Misfire [EC-275](#)

Mode door control linkage adjustment [ATC-73](#)

Mode door motor [ATC-71](#), [ATC-133](#)

Multiplex communication [ATC-116](#)

Multiport fuel injection (MFI) system [EC-23](#)

Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-118](#)

NAVI - Wiring diagram [AV-54](#)

Navigation system [AV-37](#)

NVH troubleshooting (BR) [BR-5](#)

NVH troubleshooting (Final drive) [RFD-7](#)

NVH troubleshooting (Propeller shaft) [PR-3](#)

NVIS (Nissan vehicle immobilizer system) precautions

[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-174](#)

O2H2B2 - Wiring diagram [EC-176](#)

O2S2B1 - Wiring diagram .. [EC-222](#), [EC-232](#), [EC-432](#),

[EC-443](#)

O2S2B2 - Wiring diagram .. [EC-224](#), [EC-234](#), [EC-434](#),

[EC-445](#)

Oil cooler (engine) [LU-10](#)

Oil filter [LU-9](#)

Oil pan (engine) [EM-28](#)

Oil pressure (engine) [LU-7](#)

Oil pump (A/T) [AT-302](#)

Oil pump (engine) [LU-12](#)

Oil pump regulator valve (engine) [LU-12](#)

Oil seal replacement (front of final drive) [RFD-10](#)

Oil seal replacement (side of final drive) [RFD-12](#)

On board diagnostic system [EC-46](#)

Operating cylinder (clutch) [CL-11](#)

ORVR (On-board Refueling Vapor Recovery) ... [EC-38](#)

Out side mirror [GW-82](#), [GW-83](#)

Overheat [EC-454](#)

P

P/SCKT - Wiring diagram [WW-41](#)

Park/Neutral position switch [EC-582](#)

Park/neutral position switch (A/T) [AT-120](#)

Parking brake control [PB-5](#)

Parking drum brake [PB-7](#)

PCV (positive crankcase ventilation) [EC-43](#)

PGC/V - Wiring diagram [EC-327](#), [EC-544](#)

PHSB1 - Wiring diagram [EC-299](#)

PHSB2 - Wiring diagram [EC-301](#)

PNP/SW - Wiring diagram [EC-584](#), [EC-586](#)

POS - Wiring diagram [EC-292](#)

POWER - Wiring diagram [PG-5](#)

Power door lock [BL-20](#)

Power seat [SE-13](#)

Power socket [WW-41](#)

Power steering fluid level [PS-7](#), [MA-25](#)

Power steering gear [PS-17](#)

Power steering hydraulic pressure [PS-29](#)

Power steering oil pump [PS-29](#)

Power steering pressure (PSP) sensor [EC-385](#)

Power steering system bleeding [PS-7](#)

Power supply routing [PG-4](#)

Power window [GW-17](#)

ALPHABETICAL INDEX

| | | | |
|--|---|---------------------------------------|------------------------|
| PRE/SE - Wiring diagram | EC-344 , EC-350 | Shock absorber (front) | FSU-10 |
| Precations for Leak detection dye | ATC-15 | Shock absorber (rear) | RSU-9 |
| Precautions (General) | GI-4 | Side air bag (satellite) sensor | SRS-51 |
| Pressure switch 1 | AT-180 | Side curtain air bag | SRS-48 |
| Pressure switch 2 | AT-174 | Side trim | EI-31 |
| Pressure switch 3 | AT-182 | SMJ (super multiple junction) | PG-68 |
| Pressure switch 5 | AT-184 | Spark plug | EM-35 |
| Pressure switch 6 | AT-186 | Spark plug replacement | MA-16 |
| Pressure test (A/T) | AT-53 | Specification value | EC-144 |
| Propeller shaft | PR-4 | Speedometer | DI-4 |
| Propeller shaft on vehicle service | PR-4 | Spiral cable | SRS-43 |
| Propeller shaft vibration | PR-4 | Spot lamp | LT-188 |
| PS/SEN - Wiring diagram | EC-386 | SROOF - Wiring diagram | RF-13 |

R

| | |
|---|--|
| Radiator | CO-13 |
| Radio - See Audio | AV-5 |
| Rear axle | RAX-6 |
| Rear combination lamp removal and installation | LT-161 |
| Rear disc brake | BR-28 |
| Rear parcel shelf finisher | EI-33 |
| Rear seat | SE-69 |
| Rear suspension | RSU-5 |
| Rear window | GW-13 |
| Rear window defogger | GW-58 |
| Refrigerant connection precaution | ATC-7 |
| Refrigerant discharging evacuating charging | ATC-138 |
| Refrigerant general precaution | ATC-6 |
| Refrigerant lines | ATC-138 |
| Refrigerant pressure sensor | EC-650 , ATC-92 , ATC-152 |
| Refrigeration cycle | ATC-20 |
| Release bearing (clutch) | CL-13 |
| Remote keyless entry system | BL-45 |
| Removal and installation (A/T) | AT-274 |
| Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) | MT-12 |
| Revolution sensor (A/T) | AT-124 , AT-268 |
| Rocker cover | EM-43 |
| Room lamp - See Interior lamp | LT-169 |
| ROOM/L - Wiring diagram | LT-174 |
| RP/SEN - Wiring diagram | EC-651 |

S

| | |
|--|------------------------|
| SAE J1979 - Service \$01 - 09 | EC-46 |
| SEAT - Wiring diagram | SE-16 |
| Seat belt inspection | SB-7 |
| Seat belt pre-tensioner disposal | SRS-55 |
| Seat belt, front | SB-4 |
| Seat, front | SE-63 |
| Seat, rear | SE-69 |
| Self-diagnostic results | EC-65 |
| SEN/PW - Wiring diagram | EC-471 |
| SHIFT - Wiring diagram | AT-241 |
| Shift lock system | AT-240 |
| Shift schedule | AT-343 |

| | |
|---|---|
| Shock absorber (front) | FSU-10 |
| Shock absorber (rear) | RSU-9 |
| Side air bag (satellite) sensor | SRS-51 |
| Side curtain air bag | SRS-48 |
| Side trim | EI-31 |
| SMJ (super multiple junction) | PG-68 |
| Spark plug | EM-35 |
| Spark plug replacement | MA-16 |
| Specification value | EC-144 |
| Speedometer | DI-4 |
| Spiral cable | SRS-43 |
| Spot lamp | LT-188 |
| SROOF - Wiring diagram | RF-13 |
| SRS - See Supplemental Restraint System | SRS-7 |
| SRS Trouble diagnoses | SRS-10 |
| Stabilizer bar (rear) | RSU-16 |
| Stall test (A/T) | AT-51 |
| Standardized relay | PG-70 |
| START - Wiring diagram | SC-12 |
| Starter | SC-10 |
| Starting system | SC-10 |
| Steering gear and linkage inspection | MA-25 |
| Steering linkage | PS-17 |
| Steering wheel and column | PS-9 , PS-11 |
| Steering wheel play | PS-9 |
| Steering wheel turning force | PS-9 |
| Step lamp | LT-139 |
| Stop lamp | LT-136 |
| Stop lamp switch | EC-590 |
| STOP/L - Wiring diagram | LT-136 |
| Sun roof, electric | RF-10 |
| Sunload sensor | ATC-111 , ATC-122 |
| Sunroof | RF-10 , RF-25 |
| Supplemental Restraint System | SRS-7 |
| Suspension | MA-26 |
| Symbols and abbreviations | GI-9 , GI-22 |
| Symptom matrix chart | EC-102 |
| System readiness test (SRT) code | EC-52 |

T

| | |
|---|---|
| Tachometer | DI-4 |
| TCM circuit diagram | AT-50 |
| TCM inspection table | AT-92 |
| Three way catalyst | EM-24 |
| Three way catalyst function (Bank 1) | EC-306 |
| Three way catalyst function (Bank 2) | EC-306 |
| Three way catalyst precautions | GI-5 |
| Throttle body | EM-21 |
| Throttle control motor | EC-424 |
| Throttle control motor relay | EC-419 |
| Throttle position sensor (TPS) | EC-205 , EC-268 , EC-466 , EC-468 , EC-609 |
| Throttle valve closed position learning | EC-88 |
| Throwout bearing - See Clutch release bearing | CL-13 |
| Tie-rod | PS-17 |
| Timing chain | EM-55 |
| TLID - Wiring diagram | BL-88 |
| Top tether strap child restraint | SB-11 |

ALPHABETICAL INDEX

| | | | |
|--|---|---------------------------------------|-----------------------|
| Torque converter installation | AT-276 | Window, door | GW-52 |
| Torque convertor clutch solenoid valve | AT-131 , AT-133 | Window, rear | GW-13 |
| TPS1 - Wiring diagram | EC-270 | Windshield | GW-11 |
| TPS2 - Wiring diagram | EC-207 | WIPER - Wiring diagram | WW-11 |
| TPS3 - Wiring diagram | EC-611 | Wiper, front | WW-4 |
| Transverse link (front) | FSU-13 | Wiring Diagram (Cell code) list | PG-58 |
| TRNSCV - Wiring diagram | BL-133 | Wiring diagrams | GI-14 |
| Trouble diagnoses | GI-10 | Withdrawal lever (clutch) | CL-13 |
| Trunk lid | BL-83 | WT-T/WARN - Wiring diagram | WT-10 |
| Trunk lid opener - See Trunk lid | BL-88 | | |
| Trunk lid trim | EI-38 | | |
| Trunk room trim | EI-38 | | |
| Turbine revolution sensor | AT-147 | | |
| TURN - Wiring diagram | LT-117 | | |
| Turn signal lamp | LT-113 | | |
| Two trip detection logic | EC-46 | | |
| Tyre pressure monitoring system - trouble diagnoses .. | WT-10 | | |
| Tyre pressure monitoring system - wiring diagram | WT-10 | | |

U

| | |
|--------------------------------|------------------------|
| Upper link (front susp.) | FSU-14 |
|--------------------------------|------------------------|

V

| | |
|---|---|
| Vacuum hose (brake system) | BR-19 |
| Vacuum hose drawing (Engine control) | EC-112 |
| Valve clearance | EM-84 |
| Valve guide | EM-99 |
| Valve lifter | EM-79 |
| Valve seat | EM-101 |
| Valve spring | EM-102 |
| Vanity mirror lamp | LT-162 |
| VDC -Wiring diagram | BRC-15 |
| Vehicle security (theft warning) system | BL-90 |
| Vehicle speed sensor (VSS) | EC-379 |
| VEHSEC - Wiring diagram | BL-95 |
| VENT/V - Wiring diagram | EC-334 , EC-552 |
| VIN registration | EC-88 |

W

| | |
|-------------------------------|--|
| W/ANT - Wiring diagram | AV-34 |
| WARN - Wiring diagram | DI-27 |
| Warning chime | DI-38 |
| Warning lamps | DI-26 |
| Washer, front | WW-4 |
| Water pump | CO-23 |
| Water temperature gauge | DI-4 |
| Wheel alignment (front) | FSU-6 |
| Wheel alignment (rear) | RSU-5 |
| Wheel balance | WT-4 , MA-22 |
| Wheel bearing (rear) | RAX-6 |
| Wheel hub (rear) | RAX-6 |
| Wheel sensor (VDC) | BRC-66 |
| WINDOW - Wiring diagram | GW-23 |
| Window antenna | AV-33 |

A
B
C
D
E
F
G
H
I
J
K
L

IDX