

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

A/C air flow ..... [ATC-36](#)  
A/C and audio controller ..... [ATC-131](#)  
A/C component layout ..... [ATC-25](#)  
A/C compressor clutch removal and installation .....  
[ATC-156](#)  
A/C compressor mounting ..... [ATC-154](#), [ATC-156](#),  
[ATC-159](#), [ATC-160](#), [ATC-161](#), [ATC-162](#), [ATC-163](#),  
[ATC-164](#), [ATC-165](#), [ATC-166](#), [ATC-167](#), [ATC-168](#)  
A/C compressor precaution ..... [ATC-12](#)  
A/C compressor special service tool ..... [ATC-16](#)  
A/C control operation (auto A/C) ..... [ATC-33](#)  
A/C diagnostic work flow (auto A/C) ..... [ATC-117](#)  
A/C evaporator ..... [ATC-167](#)  
A/C HFC134a (R134a) system precaution ..... [ATC-5](#)  
A/C HFC134a (R134a) system service procedure .....  
[ATC-152](#)  
A/C HFC134a (R134a) system service tools ... [ATC-17](#)  
A/C HFC134a system service equipment precaution ...  
[ATC-12](#)  
A/C lubricant (R134a) ..... [ATC-26](#)  
A/C lubrication oil ..... [ATC-173](#)  
A/C operational check ..... [ATC-70](#)  
A/C self-diagnoses (auto A/C) ..... [ATC-61](#), [ATC-117](#)  
A/C service data specification ..... [ATC-173](#)  
A/C system description (auto A/C) ..... [ATC-29](#)  
A/C trouble diagnoses (auto A/C) ..... [ATC-42](#)  
A/C, A - Wiring diagram ..... [ATC-48](#), [ATC-53](#)  
A/T fluid checking ..... [AT-14](#), [AT-52](#)  
A/T fluid replacement ..... [AT-13](#)  
A/T fluid temperature sensor ..... [AT-155](#)  
A/T IND - Wiring diagram ..... [DI-39](#)  
A/T self-diagnoses ..... [AT-89](#), [AT-98](#), [AT-99](#)  
A/T shift lock system ..... [AT-300](#)  
A/T shift lock system - Wiring diagram [AT-301](#), [AT-307](#)  
A/T trouble diagnoses ..... [AT-43](#)  
A/T Wiring diagram AT - CAN ..... [AT-102](#)  
A/T Wiring diagram AT - D/C ..... [AT-199](#)  
A/T Wiring diagram AT - D/CF ..... [AT-204](#)  
A/T Wiring diagram AT - E/BRE ..... [AT-176](#)  
A/T Wiring diagram AT - FPSW1 ..... [AT-231](#)  
A/T Wiring diagram AT - FPSW3 ..... [AT-235](#)  
A/T Wiring diagram AT - FPSW5 ..... [AT-239](#)  
A/T Wiring diagram AT - FPSW6 ..... [AT-243](#)  
A/T Wiring diagram AT - FR/B ..... [AT-189](#)  
A/T Wiring diagram AT - FR/BF ..... [AT-194](#)  
A/T Wiring diagram AT - FTS ..... [AT-156](#)  
A/T Wiring diagram AT - HLR/C ..... [AT-208](#)  
A/T Wiring diagram AT - HLR/CF ..... [AT-213](#)  
A/T Wiring diagram AT - I/C ..... [AT-180](#)  
A/T Wiring diagram AT - I/CF ..... [AT-185](#)  
A/T Wiring diagram AT - I/LOCK ..... [AT-169](#)  
A/T Wiring diagram AT - LC/B ..... [AT-218](#)  
A/T Wiring diagram AT - LC/BF ..... [AT-223](#)  
A/T Wiring diagram AT - LPSV ..... [AT-133](#)  
A/T Wiring diagram AT - MMSW ..... [AT-227](#)  
A/T Wiring diagram AT - NONDTC ..... [AT-248](#)  
A/T Wiring diagram AT - PNP/SW ..... [AT-111](#)

A/T Wiring diagram AT - POWER ..... [AT-138](#)  
A/T Wiring diagram AT - STSIG ..... [AT-105](#)  
A/T Wiring diagram AT - TCCSIG ..... [AT-128](#)  
A/T Wiring diagram AT - TCV ..... [AT-123](#)  
A/T Wiring diagram AT - TRSA/T ..... [AT-162](#)  
A/T Wiring diagram AT - VSS A/T ..... [AT-116](#)  
Accelerator control system ..... [ACC-4](#)  
Accelerator pedal position (APP) sensor ..... [EC-1211](#),  
[EC-1218](#), [EC-1232](#)  
Accelerator pedal released position learning .... [EC-51](#),  
[EC-692](#)  
Accelerator position sensor [EC-304](#), [EC-311](#), [EC-532](#)  
Air bag ..... [SRS-3](#)  
Air bag disposal ..... [SRS-50](#)  
Air bag precautions ..... [SRS-3](#)  
Air bleeding (hydraulic clutch) ..... [CL-7](#)  
Air bleeding for brake system ..... [BR-10](#)  
Air cleaner and air duct ..... [EM-16](#)  
Air cleaner filter replacement ..... [MA-17](#)  
Air conditioner cut control ..... [EC-36](#), [EC-675](#)  
Air flow meter - See Mass air flow sensor ..... [EC-170](#),  
[EC-178](#), [EC-810](#), [EC-818](#)  
Air mix. door motor ..... [ATC-148](#)  
Air spoiler, rear ..... [EI-35](#)  
Ambient sensor ..... [ATC-118](#), [ATC-133](#)  
Angular tightening application ..... [EM-4](#)  
Antenna ..... [AV-36](#)  
APPS1 - Wiring diagram ..... [EC-313](#), [EC-1213](#)  
APPS2 - Wiring diagram ..... [EC-534](#), [EC-1220](#)  
APPS3 - Wiring diagram ..... [EC-306](#), [EC-1234](#)  
ASC/BS - Wiring diagram ..... [EC-569](#)  
ASC/SW - Wiring diagram ..... [EC-562](#), [EC-1173](#)  
ASCBOF - Wiring diagram ..... [EC-624](#), [EC-1272](#)  
ASCD ..... [EC-650](#), [EC-1307](#)  
ASCD (automatic speed control device) ..... [ACS-2](#)  
ASCIND - Wiring diagram ..... [EC-632](#), [EC-1288](#)  
Ashtray illumination ..... [LT-164](#)  
AT indicator lamp ..... [DI-39](#)  
Audio ..... [AV-5](#)  
AUDIO - Wiring diagram ..... [AV-9](#)  
AUT/DP - Wiring diagram ..... [SE-16](#), [SE-23](#)  
Auto air conditioner - Wiring diagram [ATC-48](#), [ATC-53](#)  
Auto amp ..... [ATC-132](#)  
Auto anti-dazzling inside mirror ..... [GW-97](#)  
Automatic amplifier ..... [ATC-58](#), [ATC-72](#), [ATC-132](#)  
Automatic drive positioner ..... [SE-11](#)  
Automatic transmission fluid replacement ..... [MA-25](#)  
Axle ..... [MA-31](#)  
Axle housing (rear) ..... [RAX-7](#)

## B

BACK/L - Wiring diagram ..... [LT-135](#)  
Back-up lamp ..... [LT-135](#)  
Back-up lamp switch (M/T) ..... [MT-12](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#),  
[SC-23](#)  
BCM (Body control module) ..... [BCS-3](#)

# ALPHABETICAL INDEX

Blower motor .....	<a href="#">ATC-87</a> , <a href="#">ATC-140</a>	Instrument panel .....	<a href="#">IP-11</a>
Blower unit .....	<a href="#">ATC-138</a>	Combination switch .....	<a href="#">LT-120</a>
Bose speaker amp. ....	<a href="#">AV-5</a>	COMM - Wiring diagram .....	<a href="#">AV-64</a>
Brake booster .....	<a href="#">BR-18</a>	COMPAS - Wiring diagram .....	<a href="#">DI-24</a>
Brake fluid change .....	<a href="#">BR-9</a> , <a href="#">BR-10</a>	Compass .....	<a href="#">DI-23</a>
Brake fluid level .....	<a href="#">MA-29</a>	Component Location (auto A/C) .....	<a href="#">ATC-45</a>
Brake fluid level and line check .....	<a href="#">BR-9</a>	Compression pressure .....	<a href="#">EM-87</a>
Brake hydraulic line .....	<a href="#">BR-11</a>	Compressor clutch removal and installation ..	<a href="#">ATC-156</a>
Brake inspection .....	<a href="#">MA-29</a>	Compressor special service tool .....	<a href="#">ATC-16</a>
Brake lines and cables inspection .....	<a href="#">MA-29</a>	Condenser .....	<a href="#">ATC-165</a>
Brake master cylinder .....	<a href="#">BR-13</a>	Console box - See Instrument panel .....	<a href="#">IP-10</a>
Brake pedal .....	<a href="#">BR-6</a>	Control units (terminal arrangement) .....	<a href="#">PG-69</a>
Brake switch .....	<a href="#">EC-584</a> , <a href="#">EC-1206</a>	Control valve (A/T) .....	<a href="#">AT-37</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-585</a> , <a href="#">EC-1207</a>	Controller Area Network (CAN) <a href="#">LAN-4</a> , <a href="#">LAN-8</a> , <a href="#">LAN-33</a> , <a href="#">LAN-55</a>	
Bulb specifications .....	<a href="#">LT-202</a>	Converter housing installation .....	<a href="#">AT-331</a>
Bumper, front .....	<a href="#">EI-14</a>	COOL/F - Wiring diagram <a href="#">EC-513</a> , <a href="#">EC-1127</a> , <a href="#">EC-1139</a>	
Bumper, rear .....	<a href="#">EI-17</a>	Cooling circuit (engine) .....	<a href="#">CO-9</a>

## C

Camshaft .....	<a href="#">EM-71</a>
Camshaft inspection .....	<a href="#">EM-73</a>
Camshaft position sensor (PHASE) ..	<a href="#">EC-334</a> , <a href="#">EC-955</a>
CAN - Wiring diagram .....	<a href="#">EC-143</a> , <a href="#">EC-789</a> , <a href="#">LAN-10</a> , <a href="#">LAN-35</a> , <a href="#">LAN-57</a>
CAN (Controller Area Network) <a href="#">LAN-4</a> , <a href="#">LAN-8</a> , <a href="#">LAN-33</a> , <a href="#">LAN-55</a>	
CAN communication <a href="#">EC-37</a> , <a href="#">EC-142</a> , <a href="#">EC-676</a> , <a href="#">EC-788</a> , <a href="#">AT-30</a> , <a href="#">AT-101</a> , <a href="#">LT-9</a> , <a href="#">LT-36</a> , <a href="#">LT-65</a> , <a href="#">LT-84</a> , <a href="#">LT-103</a> , <a href="#">LT-139</a> , <a href="#">LT-188</a> , <a href="#">WW-10</a> , <a href="#">LAN-4</a> , <a href="#">LAN-8</a> , <a href="#">LAN-33</a> , <a href="#">LAN-55</a>	
Canister-See EVAP canister .....	<a href="#">EC-638</a> , <a href="#">EC-1295</a>
Center bearing assembly (propeller shaft) .....	<a href="#">PR-7</a>
Center bearing disassembly (propeller shaft) .....	<a href="#">PR-7</a>
CHARGE - Wiring diagram .....	<a href="#">SC-22</a>
Charging system .....	<a href="#">SC-21</a>
Chassis and body maintenance .....	<a href="#">MA-22</a>
CHIME - Wiring diagram .....	<a href="#">DI-47</a>
CIGAR - Wiring diagram .....	<a href="#">WW-35</a>
Cigarette lighter .....	<a href="#">WW-35</a>
Cigarette lighter illumination .....	<a href="#">LT-165</a>
Circuit breaker .....	<a href="#">PG-15</a>
Clock .....	<a href="#">DI-60</a>
CLOCK - Wiring diagram .....	<a href="#">DI-60</a>
Closed loop control .....	<a href="#">EC-34</a> , <a href="#">EC-673</a>
Clutch master cylinder .....	<a href="#">CL-8</a>
Clutch operating cylinder .....	<a href="#">CL-11</a>
Clutch pedal .....	<a href="#">CL-5</a>
Clutch release bearing .....	<a href="#">CL-13</a>
Clutch release mechanism .....	<a href="#">CL-13</a>
Clutch withdrawal lever .....	<a href="#">CL-13</a>
Coil spring (front) .....	<a href="#">FSU-9</a>
Collision diagnosis .....	<a href="#">SRS-57</a>
Combination lamp, front, removal and installation .....	<a href="#">LT-30</a>
Combination lamp, rear, removal and installation .....	<a href="#">LT-155</a>
Combination meter .....	<a href="#">DI-4</a>
Combination meter removal and installation - See	

Instrument panel .....	<a href="#">IP-11</a>
Combination switch .....	<a href="#">LT-120</a>
COMM - Wiring diagram .....	<a href="#">AV-64</a>
COMPAS - Wiring diagram .....	<a href="#">DI-24</a>
Compass .....	<a href="#">DI-23</a>
Component Location (auto A/C) .....	<a href="#">ATC-45</a>
Compression pressure .....	<a href="#">EM-87</a>
Compressor clutch removal and installation ..	<a href="#">ATC-156</a>
Compressor special service tool .....	<a href="#">ATC-16</a>
Condenser .....	<a href="#">ATC-165</a>
Console box - See Instrument panel .....	<a href="#">IP-10</a>
Control units (terminal arrangement) .....	<a href="#">PG-69</a>
Control valve (A/T) .....	<a href="#">AT-37</a>
Controller Area Network (CAN) <a href="#">LAN-4</a> , <a href="#">LAN-8</a> , <a href="#">LAN-33</a> , <a href="#">LAN-55</a>	
Converter housing installation .....	<a href="#">AT-331</a>
COOL/F - Wiring diagram <a href="#">EC-513</a> , <a href="#">EC-1127</a> , <a href="#">EC-1139</a>	
Cooling circuit (engine) .....	<a href="#">CO-9</a>
Cooling fan .....	<a href="#">CO-22</a>
Cooling fan motor .....	<a href="#">EC-520</a> , <a href="#">EC-1134</a> , <a href="#">EC-1146</a>
Cowl top .....	<a href="#">EI-21</a>
Cowl top cover .....	<a href="#">EI-21</a>
Crankcase ventilation system - See Positive crankcase ventilation .....	<a href="#">EC-648</a> , <a href="#">EC-1305</a>
Crankshaft position sensor (POS) .....	<a href="#">EC-327</a> , <a href="#">EC-949</a>
Crash zone sensor .....	<a href="#">SRS-46</a>
Cylinder head .....	<a href="#">EM-87</a>

## D

D/LOCK - Wiring diagram .....	<a href="#">BL-27</a>
Data link connector .....	<a href="#">EC-634</a>
Daytime light system .....	<a href="#">LT-33</a>
Daytime running light - See Daytime light system <a href="#">LT-33</a>	
Diagnosis sensor unit .....	<a href="#">SRS-49</a>
Diagnostic trouble code (DTC) for OBD system <a href="#">EC-16</a> , <a href="#">EC-655</a>	
Differential carrier assembly .....	<a href="#">RFD-12</a>
Differential carrier disassembly .....	<a href="#">RFD-14</a>
Direct clutch solenoid valve .....	<a href="#">AT-198</a> , <a href="#">AT-203</a>
Display and amp. assembly .....	<a href="#">ATC-58</a> , <a href="#">ATC-72</a>
DLC - Wiring diagram .....	<a href="#">EC-634</a>
Door glass .....	<a href="#">GW-91</a> , <a href="#">GW-94</a>
Door glass Fitting Adjustment(Front) .....	<a href="#">GW-93</a>
Door glass Fitting Adjustment(Rear) .....	<a href="#">GW-96</a>
Door lock .....	<a href="#">BL-83</a>
Door mirror .....	<a href="#">GW-127</a>
Door trim .....	<a href="#">EI-37</a>
Door, front .....	<a href="#">BL-79</a> , <a href="#">GW-91</a>
Door, rear .....	<a href="#">BL-79</a> , <a href="#">GW-94</a>
Drive belt .....	<a href="#">EM-13</a>
Drive pinion diff. inspection .....	<a href="#">RFD-13</a>
Drive pinion height .....	<a href="#">RFD-17</a> , <a href="#">RFD-20</a>
Drive shaft (rear) .....	<a href="#">RAX-9</a>
Driver air bag .....	<a href="#">SRS-37</a>
DTRL - Wiring diagram .....	<a href="#">LT-42</a>
Duct and grilles .....	<a href="#">ATC-149</a>

# ALPHABETICAL INDEX

## E

ECM power supply [EC-136](#), [EC-441](#), [EC-781](#), [EC-1053](#)  
ECM/PW - Wiring diagram ..... [EC-1054](#)  
ECTS - Wiring diagram ..... [EC-192](#), [EC-832](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator ..... [EC-451](#), [EC-453](#),  
[EC-465](#), [EC-1064](#), [EC-1066](#)  
Electrical load signal circuit ..... [EC-622](#), [EC-1270](#)  
Electrical unit ..... [PG-69](#)  
Electrical units location ..... [PG-62](#)  
Electronic ignition (EI) system ..... [EC-35](#), [EC-674](#)  
Engine control module (ECM) ..... [EC-434](#), [EC-1050](#)  
Engine control system diagram and chart ..... [EC-30](#),  
[EC-669](#)  
Engine coolant ..... [CO-11](#)  
Engine coolant temperature sensor (ECTS) ... [EC-190](#),  
[EC-204](#), [EC-830](#), [EC-842](#)  
Engine oil ..... [LU-6](#)  
Engine oil precautions ..... [GI-7](#)  
Engine oil replacement ..... [MA-17](#)  
Engine removal ..... [EM-98](#)  
ETC1 - Wiring diagram ..... [EC-454](#), [EC-1067](#)  
ETC2 - Wiring diagram ..... [EC-462](#), [EC-1074](#)  
ETC3 - Wiring diagram ..... [EC-466](#), [EC-1078](#)  
EVAP canister ..... [EC-638](#), [EC-1295](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-363](#), [EC-542](#), [EC-984](#), [EC-1156](#)  
EVAP canister vent control valve ..... [EC-369](#), [EC-550](#),  
[EC-991](#), [EC-1164](#)  
EVAP control system (small leak) diagnosis .. [EC-353](#),  
[EC-393](#), [EC-974](#), [EC-1015](#)  
EVAP control system pressure sensor ..... [EC-376](#),  
[EC-379](#), [EC-385](#), [EC-998](#), [EC-1001](#), [EC-1007](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-348](#), [EC-969](#)  
EVAP vapor lines inspection ..... [MA-21](#)  
Evaporative emission (EVAP) system ..... [EC-635](#),  
[EC-1292](#)  
Evaporator ..... [ATC-167](#)  
Exhaust manifold ..... [EM-24](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#), [MA-22](#)  
Expansion valve ..... [ATC-168](#)

## F

F/FOG - Wiring diagram ..... [LT-88](#)  
F/PUMP - Wiring diagram ..... [EC-612](#), [EC-1260](#)  
Final drive pre-inspection ..... [RFD-13](#)  
Final drive removal and installation ..... [RFD-10](#)  
Floor trim ..... [EI-43](#)  
Flow charts ..... [GI-26](#)  
FLS1 - Wiring diagram ..... [EC-412](#)  
FLS2 - Wiring diagram ..... [EC-419](#)  
FLS3 - Wiring diagram ..... [EC-558](#)  
Fluid temperature sensor (A/T) ..... [AT-155](#)  
Fluorescent leak detector ..... [ATC-169](#)  
Flywheel runout(QR) ..... [EM-131](#)

Fog lamp, front ..... [LT-83](#)  
Front axle ..... [FAX-5](#)  
Front brake solenoid valve ..... [AT-188](#), [AT-193](#)  
Front bumper ..... [EI-14](#)  
Front combination lamp removal and installation [LT-30](#)  
Front disc brake ..... [BR-21](#)  
Front door ..... [BL-79](#), [BL-83](#), [GW-91](#)  
Front fog lamp ..... [LT-83](#)  
Front passenger air bag ..... [SRS-41](#)  
Front seat ..... [SE-66](#)  
Front seat belt ..... [SB-4](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-48](#)  
Front side air bag ..... [SRS-42](#)  
Front suspension ..... [FSU-6](#)  
FTTS - Wiring diagram ..... [EC-283](#), [EC-287](#), [EC-924](#),  
[EC-928](#)  
Fuel cut control (at no load high engine speed) [EC-36](#),  
[EC-675](#)  
Fuel filter replacement ..... [FL-5](#)  
Fuel gauge ..... [DI-4](#)  
Fuel level sensor .. [EC-411](#), [EC-416](#), [EC-418](#), [EC-557](#),  
[EC-1033](#), [EC-1035](#), [EC-1037](#)  
Fuel line inspection ..... [FL-4](#), [MA-17](#)  
Fuel pressure check ..... [EC-53](#), [EC-694](#)  
Fuel pressure release ..... [EC-53](#), [EC-694](#)  
Fuel pump ..... [EC-611](#), [EC-1259](#)  
Fuel pump and gauge ..... [FL-5](#)  
Fuel system ..... [FL-4](#)  
Fuel tank ..... [FL-12](#)  
Fuel tank temperature sensor ..... [EC-281](#), [EC-286](#),  
[EC-922](#), [EC-927](#)  
Fuel tank vacuum relief valve ..... [EC-638](#), [EC-1295](#)  
FUELB1 - Wiring diagram .. [EC-266](#), [EC-275](#), [EC-907](#),  
[EC-916](#)  
FUELB2 - Wiring diagram .. [EC-267](#), [EC-276](#), [EC-908](#),  
[EC-917](#)  
Fuse ..... [PG-15](#)  
Fuse and fusible link box ..... [PG-76](#)  
Fusible link ..... [PG-15](#)

## G

Gauges ..... [DI-4](#)  
Glass ..... [GW-12](#), [GW-14](#), [GW-91](#), [GW-94](#)  
Glove box lamp ..... [LT-163](#)  
GPS antenna ..... [AV-42](#)  
Grille - See Exterior ..... [EI-20](#)  
Ground distribution ..... [PG-28](#)

## H

H/LAMP - Wiring diagram ..... [LT-14](#)  
Harness connector ..... [PG-66](#)  
Harness layout ..... [PG-40](#)  
Hazard warning lamp ..... [LT-101](#)  
Headlamp ..... [LT-7](#)  
Headlamp removal and installation ..... [LT-30](#)  
Headlining - See Roof trim ..... [EI-45](#)  
Heated oxygen sensor 1 (bank 1) .... [EC-212](#), [EC-221](#),

# ALPHABETICAL INDEX

[EC-234](#), [EC-470](#), [EC-476](#), [EC-850](#), [EC-860](#), [EC-873](#),  
[EC-1082](#), [EC-1088](#)  
Heated oxygen sensor 1 (bank 2) .... [EC-212](#), [EC-221](#),  
[EC-234](#), [EC-470](#), [EC-476](#), [EC-850](#), [EC-860](#), [EC-873](#),  
[EC-1082](#), [EC-1088](#)  
Heated oxygen sensor 1 heater (bank 1) ..... [EC-154](#),  
[EC-794](#)  
Heated oxygen sensor 1 heater (bank 2) ..... [EC-154](#),  
[EC-794](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-244](#), [EC-253](#),  
[EC-483](#), [EC-494](#), [EC-883](#), [EC-893](#), [EC-1095](#), [EC-1107](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-244](#), [EC-253](#),  
[EC-483](#), [EC-494](#), [EC-883](#), [EC-893](#), [EC-1095](#), [EC-1107](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-162](#),  
[EC-802](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-162](#),  
[EC-802](#)  
Heated seat ..... [SE-57](#)  
Heater and cooling unit (Heater core) ..... [ATC-143](#)  
HFC134a (R134a) system precaution ..... [ATC-5](#)  
HFC134a (R134a) system service procedure [ATC-152](#)  
HFC134a (R134a) system service tools ..... [ATC-17](#)  
HFC134a system service equipment precaution .....  
[ATC-12](#)  
High & low reverse clutch solenoid valve ..... [AT-207](#),  
[AT-212](#)  
Hood ..... [BL-12](#)  
Hood lock system ..... [BL-15](#)  
Horn ..... [WW-39](#)  
HORN - Wiring diagram ..... [WW-39](#)  
HSEAT - Wiring diagram ..... [SE-59](#), [SE-63](#)

## I

IATS - Wiring diagram ..... [EC-187](#), [EC-827](#)  
Idle air volume learning ..... [EC-51](#), [EC-692](#)  
Idle mixture ratio ..... [EC-40](#), [EC-681](#)  
Idle speed ..... [EC-40](#), [EC-681](#)  
Idle speed control (ISC) .... [EC-425](#), [EC-427](#), [EC-1041](#),  
[EC-1043](#)  
Ignition coil ..... [EM-34](#), [EC-589](#), [EC-1241](#)  
Ignition control system ..... [EC-589](#), [EC-1241](#)  
Ignition key hole illumination ..... [LT-162](#), [LT-185](#)  
Ignition timing ..... [EC-40](#), [EC-681](#)  
IGNSYS - Wiring diagram ..... [EC-590](#), [EC-1242](#)  
ILL - Wiring diagram ..... [LT-193](#)  
In vehicle sensor ..... [ATC-121](#), [ATC-134](#)  
INJECT - Wiring diagram ..... [EC-602](#), [EC-1254](#)  
Injector ..... [EC-601](#), [EC-1253](#)  
Input clutch solenoid valve ..... [AT-179](#), [AT-184](#)  
Instrument panel ..... [IP-10](#)  
INT/L - Wiring diagram ..... [LT-159](#)  
Intake air temperature sensor ..... [EC-185](#), [EC-207](#),  
[EC-825](#), [EC-845](#)  
Intake door control linkage adjustment ..... [ATC-86](#)  
Intake door motor ..... [ATC-84](#), [ATC-141](#)  
Intake manifold ..... [EM-22](#)  
Intake manifold collector ..... [EM-18](#)  
Intake sensor ..... [ATC-127](#), [ATC-136](#)

Intake valve timing control (Bank 1) ... [EC-145](#), [EC-791](#)  
Intake valve timing control (Bank 2) ... [EC-145](#), [EC-791](#)  
Intake valve timing control solenoid valve (Bank 1) .....  
[EC-145](#), [EC-1057](#)  
Intake valve timing control solenoid valve (Bank 2) .....  
[EC-145](#), [EC-1057](#)  
Integrated homelink transmitter ..... [BL-143](#)  
Interior ..... [EI-39](#)  
Interior lamp ..... [LT-166](#)  
IPDM (Intelligent power distribution module engine  
room) ..... [PG-16](#)  
IVCB1 - Wiring diagram ..... [EC-148](#), [EC-1058](#)  
IVCB2 - Wiring diagram ..... [EC-150](#), [EC-1060](#)  
IVIS (Infiniti vehicle immobilizer system) precautions ...  
[GI-3](#)

## J

Joint connector (J/C) ..... [PG-68](#)

## K

Knock sensor (KS) ..... [EC-323](#), [EC-944](#)  
KS - Wiring diagram ..... [EC-324](#), [EC-945](#)

## L

LAN system circuit ..... [ATC-75](#)  
Latch (lower anchors and tether for children) system ...  
[SB-9](#)  
Line pressure solenoid valve ..... [AT-132](#)  
Line pressure test (A/T) ..... [AT-53](#)  
Liquid gasket application ..... [LU-2](#)  
Location of electrical units ..... [PG-62](#)  
Low coast brake solenoid valve ..... [AT-217](#), [AT-222](#)  
Lubricant (R134a) A/C ..... [ATC-6](#), [ATC-26](#)  
Lubrication circuit (engine) ..... [LU-4](#)  
Lubrication oil A/C ..... [ATC-173](#)  
Luggage compartment trim ..... [EI-47](#)

## M

M/T oil replacement ..... [MT-10](#)  
MAFS - Wiring diagram .... [EC-173](#), [EC-180](#), [EC-813](#),  
[EC-820](#)  
Magnet clutch ..... [ATC-93](#), [ATC-156](#)  
MAIN - Wiring diagram ..... [EC-136](#), [EC-781](#)  
Maintenance (engine) ..... [MA-13](#)  
Major overhaul (Final drive) ..... [RFD-14](#)  
Malfunction indicator lamp (MIL) ..... [EC-437](#)  
Mass air flow sensor (MAFS) ..... [EC-170](#), [EC-178](#),  
[EC-810](#), [EC-818](#)  
Master cylinder (brake) ..... [BR-13](#)  
Master cylinder (clutch) ..... [CL-8](#)  
Meter ..... [DI-4](#)  
METER - Wiring diagram ..... [DI-12](#), [DI-13](#)  
MIL - Wiring diagram ..... [EC-438](#)  
MIL data link connectors circuit ..... [EC-1290](#)  
MIL/DL - Wiring diagram ..... [EC-1290](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

# ALPHABETICAL INDEX

Mirror, door ..... [GW-127](#)  
Mirror, out side ..... [GW-127](#)  
Misfire ..... [EC-317](#), [EC-938](#)  
Mode door control linkage adjustment ..... [ATC-80](#)  
Mode door motor ..... [ATC-78](#), [ATC-147](#)  
Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),  
[EI-36](#)  
Mud guard - See Exterior ..... [EI-28](#), [EI-29](#)  
Multiplex communication ..... [ATC-129](#)  
Multiport fuel injection (MFI) system .... [EC-33](#), [EC-672](#)  
Multiport fuel injection precautions ..... [GI-6](#)

## N

NATS - Wiring diagram ..... [BL-128](#)  
NAVI - Wiring diagram ..... [AV-60](#)  
Navigation system ..... [AV-41](#)  
NVH troubleshooting (BR) ..... [BR-5](#)  
NVIS (Nissan vehicle immobilizer system) precautions  
[GI-3](#)

## O

O2H1B1 - Wiring diagram ..... [EC-156](#), [EC-796](#)  
O2H1B2 - Wiring diagram ..... [EC-158](#), [EC-798](#)  
O2H2B1 - Wiring diagram ..... [EC-164](#), [EC-804](#)  
O2H2B2 - Wiring diagram ..... [EC-166](#), [EC-806](#)  
O2S1B1 - Wiring diagram .. [EC-214](#), [EC-224](#), [EC-237](#),  
[EC-852](#), [EC-863](#), [EC-876](#)  
O2S1B2 - Wiring diagram .. [EC-214](#), [EC-226](#), [EC-239](#),  
[EC-854](#), [EC-865](#), [EC-878](#)  
O2S2B1 - Wiring diagram .. [EC-246](#), [EC-256](#), [EC-486](#),  
[EC-497](#), [EC-885](#), [EC-896](#), [EC-1098](#), [EC-1110](#)  
O2S2B2 - Wiring diagram .. [EC-248](#), [EC-258](#), [EC-488](#),  
[EC-499](#), [EC-887](#), [EC-898](#), [EC-1100](#), [EC-1112](#)  
Oil cooler (engine) ..... [LU-10](#)  
Oil filter ..... [LU-9](#)  
Oil pan (engine) ..... [EM-28](#)  
Oil pressure (engine) ..... [LU-6](#)  
Oil pump (engine) ..... [LU-13](#)  
Oil pump regulator valve (engine) ..... [LU-13](#)  
Oil seal replacement (front of final drive) ..... [RFD-6](#)  
Oil seal replacement (side of final drive) ..... [RFD-8](#)  
Operating cylinder (clutch) ..... [CL-11](#)  
ORVR (On-board Refueling Vapor Recovery) [EC-642](#),  
[EC-1299](#)  
Out side mirror ..... [GW-127](#)  
Overheat ..... [EC-509](#), [EC-1123](#), [EC-1135](#)

## P

P/SCKT - Wiring diagram ..... [WW-37](#)  
Park/Neutral position switch ..... [EC-578](#), [EC-1197](#)  
Park/neutral position switch (A/T) ..... [AT-110](#), [AT-246](#)  
Parking brake control ..... [PB-5](#)  
Parking drum brake ..... [PB-7](#)  
PCV (positive crankcase ventilation) [EC-648](#), [EC-1305](#)  
Personal lamp ..... [LT-161](#)  
PGC/V - Wiring diagram .... [EC-365](#), [EC-544](#), [EC-986](#),

[EC-1158](#)  
PHSB1 - Wiring diagram ..... [EC-336](#), [EC-957](#)  
PHSB2 - Wiring diagram ..... [EC-338](#), [EC-959](#)  
Pinion bearing preload diff. .... [RFD-25](#)  
Pinion gear height diff. .... [RFD-20](#)  
PNP/SW - Wiring diagram ..... [EC-580](#), [EC-1199](#)  
POS - Wiring diagram ..... [EC-329](#), [EC-950](#)  
POWER - Wiring diagram ..... [EC-442](#), [PG-4](#)  
Power door mirror ..... [BL-19](#)  
Power seat ..... [SE-54](#)  
Power socket ..... [WW-37](#)  
Power steering fluid level ..... [PS-6](#), [MA-30](#)  
Power steering gear ..... [PS-13](#)  
Power steering hydraulic pressure ..... [PS-24](#)  
Power steering oil pump ..... [PS-24](#)  
Power steering system bleeding ..... [PS-6](#)  
Power supply routing ..... [PG-3](#)  
Power window ..... [GW-16](#)  
PRE/SE - Wiring diagram [EC-381](#), [EC-1003](#), [EC-1009](#)  
Precations for Leak detection dye ..... [ATC-15](#)  
Precautions (General) ..... [GI-4](#)  
Pressure switch 1 ..... [AT-193](#), [AT-230](#)  
Pressure switch 2 ..... [AT-222](#)  
Pressure switch 3 ..... [AT-184](#), [AT-234](#)  
Pressure switch 5 ..... [AT-203](#), [AT-238](#)  
Pressure switch 6 ..... [AT-212](#), [AT-242](#)  
Pressure test (A/T) ..... [AT-53](#)  
Propeller shaft ..... [PR-4](#)  
Propeller shaft on vehicle service ..... [PR-4](#)  
Propeller shaft vibration ..... [PR-4](#)  
PS/SEN - Wiring diagram ..... [EC-1046](#)

## R

Radiator ..... [CO-14](#)  
Radio - See Audio ..... [AV-5](#)  
Rear axle ..... [RAX-5](#)  
Rear bumper ..... [EI-17](#)  
Rear combination lamp removal and installation .....  
[LT-155](#)  
Rear cover packing replacement diff. .... [RFD-26](#)  
Rear disc brake ..... [BR-27](#)  
Rear door ..... [BL-79](#), [GW-94](#)  
Rear parcel shelf finisher ..... [EI-41](#)  
Rear seat ..... [SE-73](#)  
Rear seat belt ..... [SB-5](#)  
Rear suspension ..... [RSU-5](#)  
Rear window ..... [GW-14](#)  
Rear window defogger ..... [GW-99](#)  
Refrigerant connection precaution ..... [ATC-7](#)  
Refrigerant discharging evacuating charging [ATC-152](#)  
Refrigerant general precaution ..... [ATC-6](#)  
Refrigerant lines ..... [ATC-152](#)  
Refrigerant pressure sensor ..... [EC-617](#), [EC-1265](#),  
[ATC-103](#), [ATC-166](#)  
Refrigeration cycle ..... [ATC-20](#)  
Release bearing (clutch) ..... [CL-13](#)  
Removal and installation (A/T) ..... [AT-329](#)  
Reverse lamp switch (M/T) - See Back-up lamp switch

# ALPHABETICAL INDEX

(M/T) .....	<a href="#">MT-12</a>
Revolution sensor (A/T) .....	<a href="#">AT-115</a>
Ring gear diff. inspection .....	<a href="#">RFD-13</a>
Rocker cover .....	<a href="#">EM-43</a>
Room lamp - See Interior lamp .....	<a href="#">LT-166</a>
ROOM/L - Wiring diagram .....	<a href="#">LT-170</a>
RP/SEN - Wiring diagram .....	<a href="#">EC-618</a> , <a href="#">EC-1266</a>

## S

S/SIG - Wiring diagram .....	<a href="#">EC-608</a>
Seal - See Exterior .....	<a href="#">EI-26</a>
SEAT - Wiring diagram .....	<a href="#">SE-54</a>
Seat belt inspection .....	<a href="#">SB-6</a>
Seat belt pre-tensioner disposal .....	<a href="#">SRS-50</a>
Seat belt, front .....	<a href="#">SB-4</a>
Seat belt, rear .....	<a href="#">SB-5</a>
Seat, front .....	<a href="#">SE-66</a>
Seat, rear .....	<a href="#">SE-73</a>
SEN/PW - Wiring diagram .....	<a href="#">EC-539</a> , <a href="#">EC-1152</a>
SHIFT - Wiring diagram .....	<a href="#">AT-301</a> , <a href="#">AT-307</a>
Shift lock system .....	<a href="#">AT-300</a>
Shift schedule .....	<a href="#">AT-389</a>
Shock absorber (front) .....	<a href="#">FSU-9</a>
Shock absorber (rear) .....	<a href="#">RSU-9</a>
Side air bag (satellite) sensor .....	<a href="#">SRS-47</a>
Side bearing preload diff. ....	<a href="#">RFD-18</a>
Side curtain air bag .....	<a href="#">SRS-44</a>
Side flange installation diff. ....	<a href="#">RFD-8</a>
Side trim .....	<a href="#">EI-39</a>
SMJ (super multiple junction) .....	<a href="#">PG-71</a>
Spark plug .....	<a href="#">EM-35</a>
Specification value .....	<a href="#">EC-131</a> , <a href="#">EC-776</a>
Speedometer .....	<a href="#">DI-4</a>
Spiral cable .....	<a href="#">SRS-39</a>
Spot lamp .....	<a href="#">LT-185</a>
SROOF - Wiring diagram .....	<a href="#">RF-16</a>
SRS - See Supplemental Restraint System .....	<a href="#">SRS-6</a>
SRS - Wiring diagram .....	<a href="#">SRS-12</a>
SRS Trouble diagnoses .....	<a href="#">SRS-8</a>
Stabilizer bar (rear) .....	<a href="#">RSU-15</a>
Stall test (A/T) .....	<a href="#">AT-52</a>
Standardized relay .....	<a href="#">PG-73</a>
START - Wiring diagram .....	<a href="#">SC-11</a>
Start signal .....	<a href="#">EC-607</a>
Starter .....	<a href="#">SC-9</a>
Starting system .....	<a href="#">SC-9</a>
Steering gear and linkage inspection .....	<a href="#">MA-30</a>
Steering linkage .....	<a href="#">PS-13</a>
Steering wheel and column .....	<a href="#">PS-7</a> , <a href="#">PS-9</a>
Steering wheel play .....	<a href="#">PS-7</a>
Steering wheel turning force .....	<a href="#">PS-7</a>
Step lamp .....	<a href="#">LT-134</a>
Stop lamp .....	<a href="#">LT-132</a>
Stop lamp switch .....	<a href="#">EC-584</a> , <a href="#">EC-1206</a>
STOP/L - Wiring diagram .....	<a href="#">LT-132</a>
Sun roof, electric .....	<a href="#">RF-10</a>
Sunload sensor .....	<a href="#">ATC-123</a> , <a href="#">ATC-135</a>
Sunroof .....	<a href="#">RF-10</a>

Supplemental Restraint System .....	<a href="#">SRS-6</a>
Supplemental restraint system - Wiring diagram .....	<a href="#">SRS-12</a>
Suspension .....	<a href="#">MA-31</a>
Symbols and abbreviations .....	<a href="#">GI-9</a> , <a href="#">GI-22</a>

## T

Tachometer .....	<a href="#">DI-4</a>
TCM circuit diagram .....	<a href="#">AT-51</a>
TCM inspection table .....	<a href="#">AT-86</a>
Thermostat .....	<a href="#">CO-30</a>
Three way catalyst .....	<a href="#">EM-24</a>
Three way catalyst function (Bank 1) .	<a href="#">EC-343</a> , <a href="#">EC-964</a>
Three way catalyst function (Bank 2) .	<a href="#">EC-343</a> , <a href="#">EC-964</a>
Three way catalyst precautions .....	<a href="#">GI-5</a>
Throttle body .....	<a href="#">EM-21</a>
Throttle control motor .....	<a href="#">EC-1077</a>
Throttle control motor relay .....	<a href="#">EC-460</a> , <a href="#">EC-1072</a>
Throttle position sensor (TPS) .....	<a href="#">EC-195</a> , <a href="#">EC-290</a> , <a href="#">EC-297</a> , <a href="#">EC-521</a> , <a href="#">EC-528</a> , <a href="#">EC-530</a> , <a href="#">EC-835</a> , <a href="#">EC-931</a> , <a href="#">EC-1147</a> , <a href="#">EC-1149</a> , <a href="#">EC-1225</a>
Throttle position switch .....	<a href="#">AT-246</a>
Throwout bearing - See Clutch release bearing	<a href="#">CL-13</a>
Tie-rod .....	<a href="#">PS-13</a>
Timing chain .....	<a href="#">EM-54</a>
Tire rotation .....	<a href="#">MA-28</a>
TLID - Wiring diagram .....	<a href="#">BL-94</a>
Tooth contact diff. ....	<a href="#">RFD-23</a>
Top tether strap child restraint .....	<a href="#">SB-10</a>
Torque converter installation .....	<a href="#">AT-330</a> , <a href="#">AT-331</a>
Torque convertor clutch solenoid valve	<a href="#">AT-122</a> , <a href="#">AT-127</a>
TPS1 - Wiring diagram .....	<a href="#">EC-299</a> , <a href="#">EC-933</a>
TPS2 - Wiring diagram .....	<a href="#">EC-523</a> , <a href="#">EC-837</a>
TPS3 - Wiring diagram .....	<a href="#">EC-197</a> , <a href="#">EC-292</a> , <a href="#">EC-1227</a>
Transverse link (front) .....	<a href="#">FSU-12</a>
TRNSCV - Wiring diagram .....	<a href="#">BL-143</a>
Trouble diagnoses .....	<a href="#">GI-10</a>
Trunk lid .....	<a href="#">BL-89</a>
Trunk lid opener - See Trunk lid .....	<a href="#">BL-94</a>
Trunk lid trim .....	<a href="#">EI-47</a>
Trunk room trim .....	<a href="#">EI-47</a>
Turbine revolution sensor .....	<a href="#">AT-161</a>
Turbocharger precautions .....	<a href="#">GI-6</a>
TURN - Wiring diagram .....	<a href="#">LT-108</a>
Turn signal lamp .....	<a href="#">LT-101</a>

## U

Upper link (front susp.) .....	<a href="#">FSU-15</a>
--------------------------------	------------------------

## V

Vacuum hose (brake system) .....	<a href="#">BR-20</a>
Vacuum hose drawing (Engine control)	<a href="#">EC-31</a> , <a href="#">EC-670</a>
Valve clearance .....	<a href="#">EM-78</a>
Valve guide .....	<a href="#">EM-92</a>
Valve lifter .....	<a href="#">EM-75</a>
Valve seat .....	<a href="#">EM-95</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
IDX

## ALPHABETICAL INDEX

---

Valve spring .....	<a href="#">EM-96</a>
Vanity mirror lamp .....	<a href="#">LT-157</a>
VDC -Wiring diagram .....	<a href="#">BRC-18</a> , <a href="#">BRC-26</a>
Vehicle security (theft warning) system .....	<a href="#">BL-97</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-423</a> , <a href="#">EC-1039</a>
VEHSEC - Wiring diagram .....	<a href="#">BL-106</a>
VENT/V - Wiring diagram .	<a href="#">EC-371</a> , <a href="#">EC-993</a> , <a href="#">EC-1166</a>

### W

---

W/ANT - Wiring diagram .....	<a href="#">AV-37</a>
WARN - Wiring diagram .....	<a href="#">DI-31</a>
Warning chime .....	<a href="#">DI-41</a>
Warning lamps .....	<a href="#">DI-30</a>
Water pump .....	<a href="#">CO-26</a>
Water temperature gauge .....	<a href="#">DI-4</a>
Wheel alignment (front) .....	<a href="#">FSU-7</a>
Wheel alignment (rear) .....	<a href="#">RSU-6</a>
Wheel balance .....	<a href="#">WT-4</a> , <a href="#">MA-27</a>
Wheel bearing (front) .....	<a href="#">FAX-5</a>
Wheel bearing (rear) .....	<a href="#">RAX-5</a>
Wheel hub (front) .....	<a href="#">FAX-5</a>
Wheel hub (rear) .....	<a href="#">RAX-5</a>
Wheel sensor (VDC) .....	<a href="#">BRC-76</a>
WINDOW - Wiring diagram .....	<a href="#">GW-28</a>
Window antenna .....	<a href="#">AV-36</a>
Window, door .....	<a href="#">GW-91</a> , <a href="#">GW-94</a>
Window, rear .....	<a href="#">GW-14</a>
Windshield .....	<a href="#">GW-12</a>
WIPER - Wiring diagram .....	<a href="#">WW-15</a>
Wiper and washer .....	<a href="#">WW-4</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-58</a>
Wiring diagrams .....	<a href="#">GI-14</a>
Withdrawal lever (clutch) .....	<a href="#">CL-13</a>