

SECTION CHG

CHARGING SYSTEM

| | | | |
|---|----|--|----|
| BASIC INSPECTION | 3 | CHARGING SYSTEM | 18 |
| DIAGNOSIS AND REPAIR WORKFLOW | 3 | Symptom Table | 18 |
| Work Flow | 3 | | |
| FUNCTION DIAGNOSIS | 6 | PRECAUTION | 19 |
| CHARGING SYSTEM | 6 | PRECAUTIONS | 19 |
| System Diagram | 6 | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" | 19 |
| System Description | 6 | Precaution for Power Generation Voltage Variable Control System | 19 |
| Component Parts Location | 6 | | |
| Component Description | 7 | | |
| POWER GENERATION VOLTAGE VARI- ABLE CONTROL SYSTEM | 8 | PREPARATION | 20 |
| System Diagram | 8 | PREPARATION | 20 |
| System Description | 8 | Special Service Tool | 20 |
| Component Parts Location | 8 | Commercial Service Tool | 20 |
| Component Description | 8 | | |
| COMPONENT DIAGNOSIS | 10 | ON-VEHICLE MAINTENANCE | 21 |
| B TERMINAL CIRCUIT | 10 | CHARGING SYSTEM PRELIMINARY IN- SPECTION | 21 |
| Description | 10 | Inspection Procedure | 21 |
| Diagnosis Procedure | 10 | | |
| L TERMINAL CIRCUIT (OPEN) | 11 | POWER GENERATION VOLTAGE VARI- ABLE CONTROL SYSTEM OPERATION IN- SPECTION | 22 |
| Description | 11 | Inspection Procedure | 22 |
| Diagnosis Procedure | 11 | | |
| L TERMINAL CIRCUIT (SHORT) | 13 | ON-VEHICLE REPAIR | 24 |
| Description | 13 | ALTERATOR | 24 |
| Diagnosis Procedure | 13 | | |
| S TERMINAL CIRCUIT | 14 | 2WD | 24 |
| Description | 14 | 2WD : Exploded View | 24 |
| Diagnosis Procedure | 14 | 2WD : Removal and Installation | 25 |
| CHARGING SYSTEM | 15 | 2WD : Inspection | 26 |
| Wiring Diagram — CHARGING SYSTEM — | 15 | | |
| SYMPTOM DIAGNOSIS | 18 | AWD | 26 |
| | | AWD : Exploded View | 26 |
| | | AWD : Removal and Installation | 27 |
| | | AWD : Inspection | 28 |

A
B
C
D
E

F
G
H
I
J
K
L
M
N
O
P

CHG

| | | | |
|--|-----------|--|-----------|
| SERVICE DATA AND SPECIFICATIONS (SDS) | 29 | SERVICE DATA AND SPECIFICATIONS (SDS) | 29 |
| | | Alternator | 29 |

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000000964263

OVERALL SEQUENCE

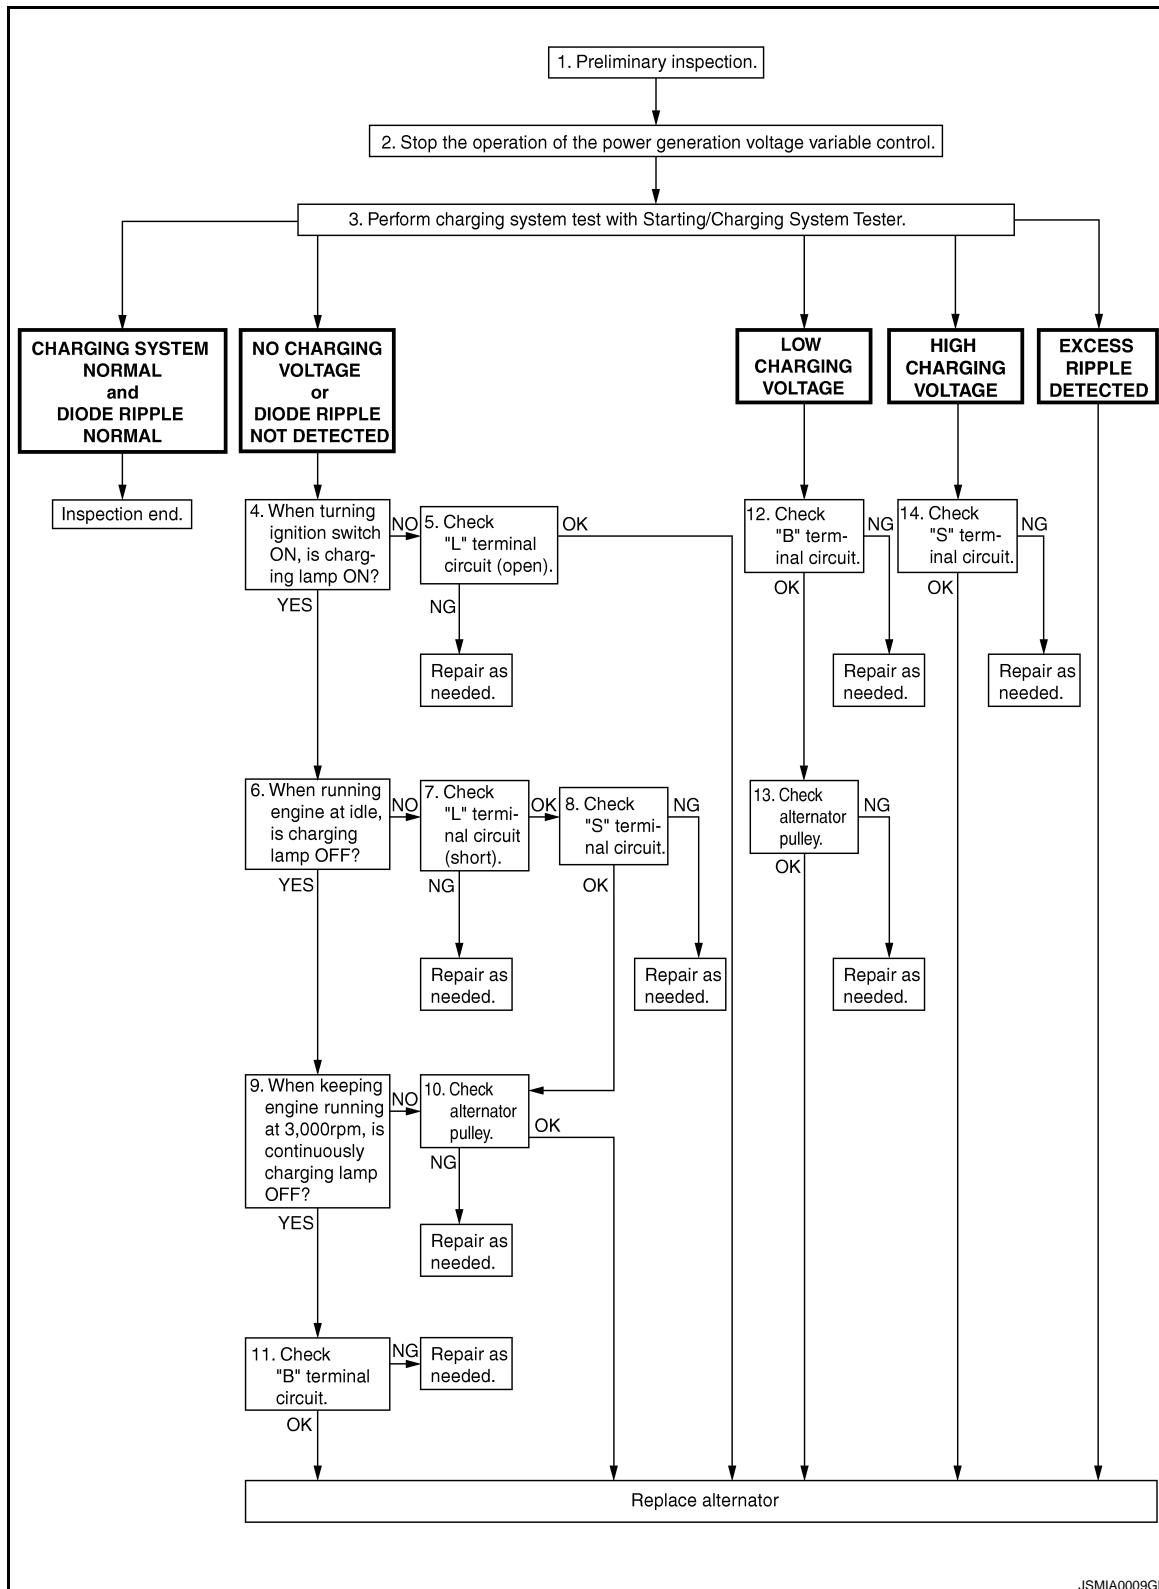

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

DETAILED FLOW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and alternator test segments must be done as a set from start to finish.

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-21, "Inspection Procedure"](#).

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures.

- After selecting “ENGINE” of “SELECT SYSTEM” using CONSULT-III, set the DUTY value of “ALTERNATOR DUTY” to 0 % by selecting “ALTERNATOR DUTY” of “Active Test”. Continue “Active Test” until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC regulator of the alternator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550 - P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT-III.]

>> GO TO 3.

3. DIAGNOSIS WITH STARTING/CHARGING SYSTEM TESTER

Perform the charging system test using Starting/Charging System Tester (SST: J-44373). For details and operating instructions, refer to Technical Service Bulletin.

Test result

CHARGING SYSTEM NORMAL>>Charging system is normal and will also show “DIODE RIPPLE” test result.
NO CHARGING VOLTAGE>>GO TO 4.

LOW CHARGING VOLTAGE>>GO TO 12.

HIGH CHARGING VOLTAGE>>GO TO 14.

DIODE RIPPLE NORMAL>>Diode ripple is OK and will also show “CHARGING VOLTAGE” test result.

EXCESS RIPPLE DETECTED>>Replace the alternator. Perform “DIODE RIPPLE” test again using Starting/Charging System Tester (SST: J-44373) to confirm repair.

DIODE RIPPLE NOT DETECTED>>GO TO 4.

4. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> GO TO 6.

NO >> GO TO 5.

5. “L” TERMINAL CIRCUIT (OPEN) INSPECTION

Check “L” terminal circuit (open). Refer to [CHG-11, "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

6. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle.

Does the charge warning lamp turn OFF?

YES >> GO TO 9.

NO >> GO TO 7.

7. “L” TERMINAL CIRCUIT (SHORT) INSPECTION

Check “L” terminal circuit (short). Refer to [CHG-13, "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

8.“S” TERMINAL CIRCUIT INSPECTION

Check “S” terminal circuit. Refer to [CHG-14, "Diagnosis Procedure"](#).

Is the “S” terminal circuit normal?

YES >> GO TO 10.

NO >> Repair as needed.

9. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 3,000 RPM)

Increase and maintain the engine speed at 3,000 rpm.

Does the charge warning lamp remain off?

YES >> GO TO 11.

NO >> GO TO 10.

10. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-26, "2WD : Inspection"](#) (2WD) or [CHG-28, "AWD : Inspection"](#) (AWD).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

11. “B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [CHG-10, "Diagnosis Procedure"](#).

Is “B” terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

12. “B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [CHG-10, "Diagnosis Procedure"](#).

Is “B” terminal circuit normal?

YES >> GO TO 13.

NO >> Repair as needed.

13. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-26, "2WD : Inspection"](#) (2WD) or [CHG-28, "AWD : Inspection"](#) (AWD).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

14. “S” TERMINAL CIRCUIT INSPECTION

Check “S” terminal circuit. Refer to [CHG-14, "Diagnosis Procedure"](#).

Is the “S” terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P


CHARGING SYSTEM

< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS CHARGING SYSTEM

System Diagram

INFOID:000000000964264

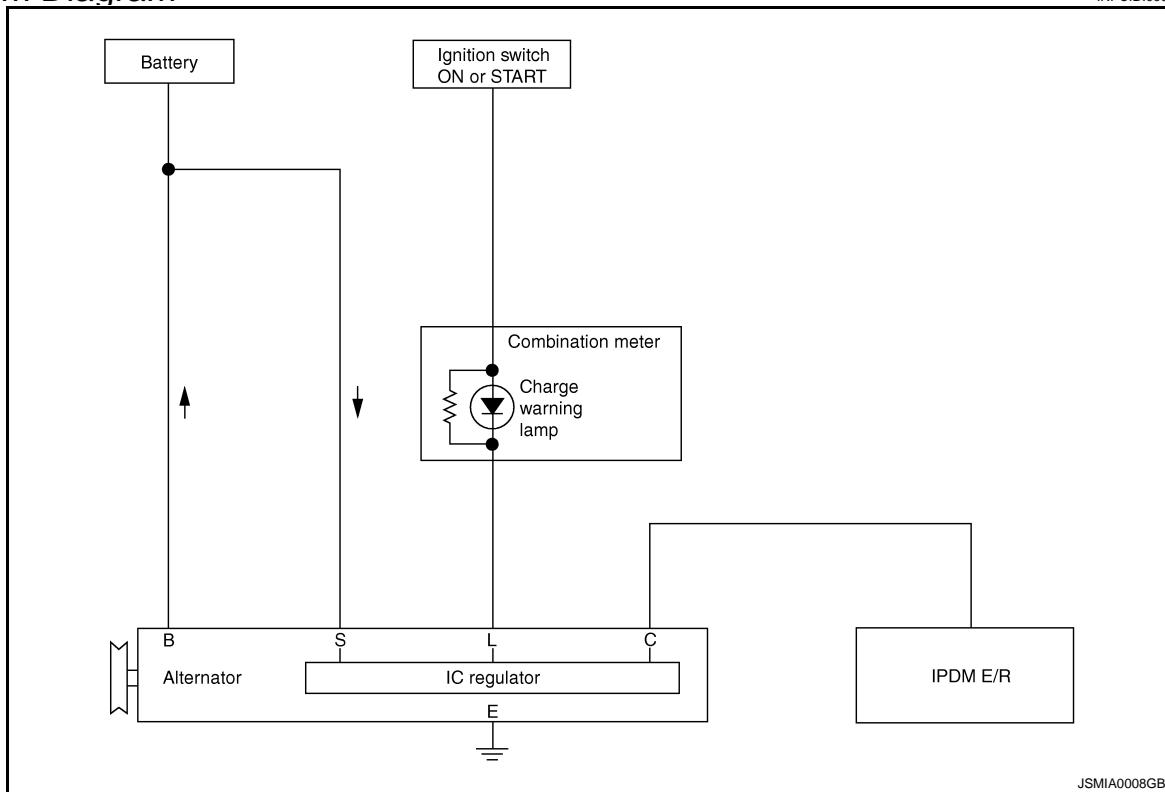

JSMIA0008GB


System Description

INFOID:000000000964265

The alternator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

Component Parts Location

INFOID:000000000964266

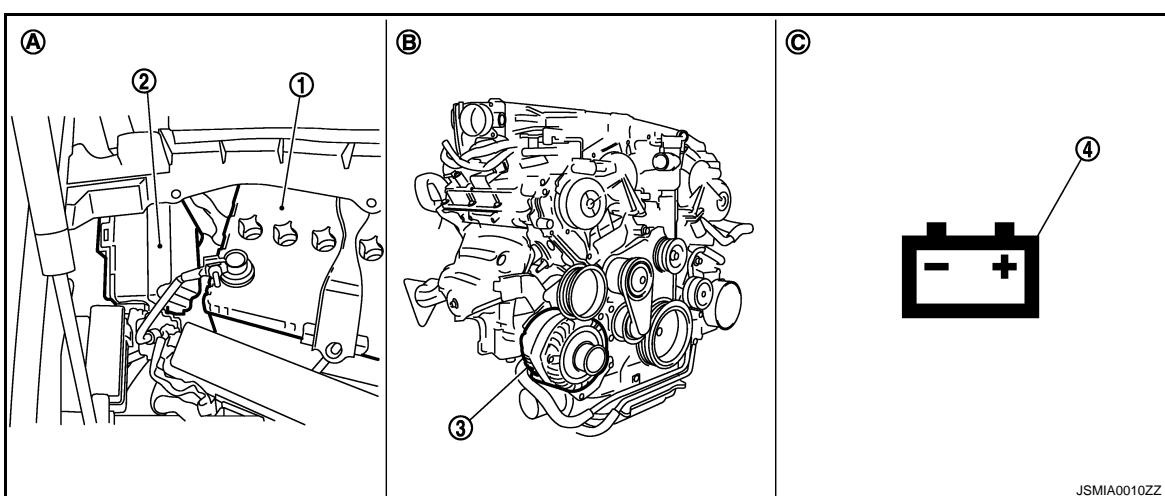

JSMIA0010ZZ

- | | | |
|--------------------------------|-------------|----------------------|
| 1. Battery | 2. IPDM E/R | 3. Alternator |
| 4. Charge warning lamp | | |
| A. Engine room dash panel (RH) | B. Engine | C. Combination meter |

CHARGING SYSTEM

< FUNCTION DIAGNOSIS >

Component Description

INFOID:000000000964267

| Component part | Description |
|---|---|
| Alternator | “B” terminal Refer to CHG-10, "Description" . |
| | “S” terminal Refer to CHG-14, "Description" . |
| | “L” terminal Refer to CHG-11, "Description" . |
| | “C” terminal Used for the power generation voltage variable control system. Refer to CHG-8, "System Description" . |
| Combination meter (Charge warning lamp) | The IC regulator warning function activates to illuminate the charge warning lamp, if any of the following symptoms occur while alternator is operating: <ul style="list-style-type: none">• Excessive voltage is produced.• No voltage is produced. |
| IPDM E/R | Used for the power generation voltage variable control system. Refer to CHG-8, "System Description" . |

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O


P

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

System Diagram

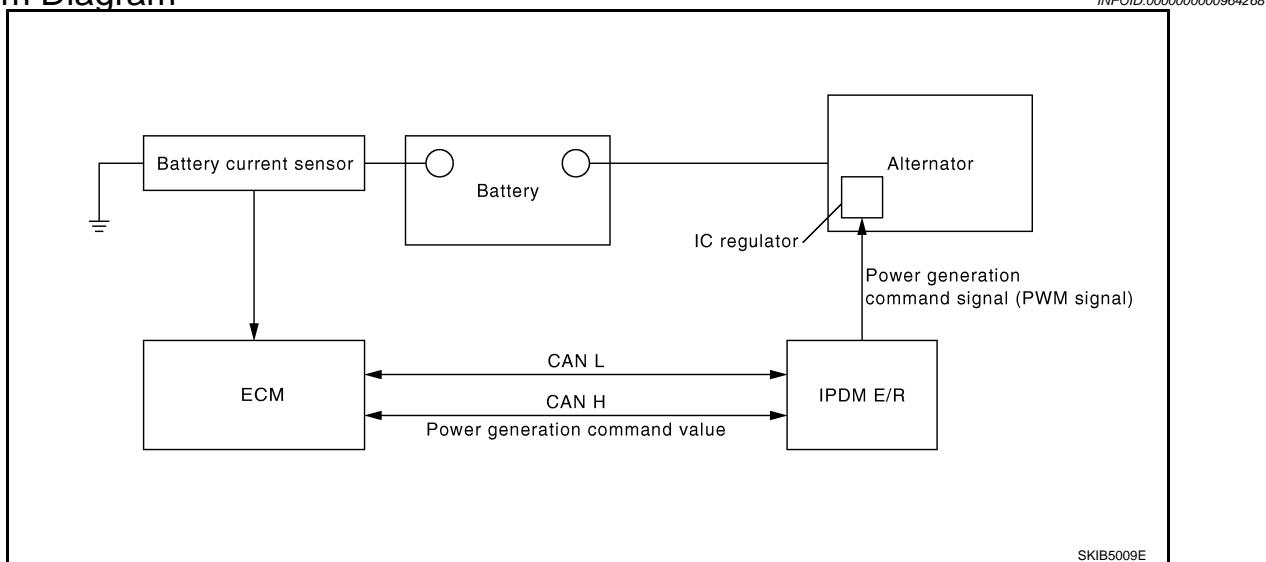

System Description

INFOID: 0000000000964269


By performing the power generation voltage variable control, the engine load due to the power generation of the alternator is reduced and fuel consumption is decreased.

NOTE:

When any malfunction is detected in the power generation voltage variable control system, the power generation is performed according to the characteristic of the IC regulator of the alternator.

Component Parts Location

INFOID: 0000000000964270

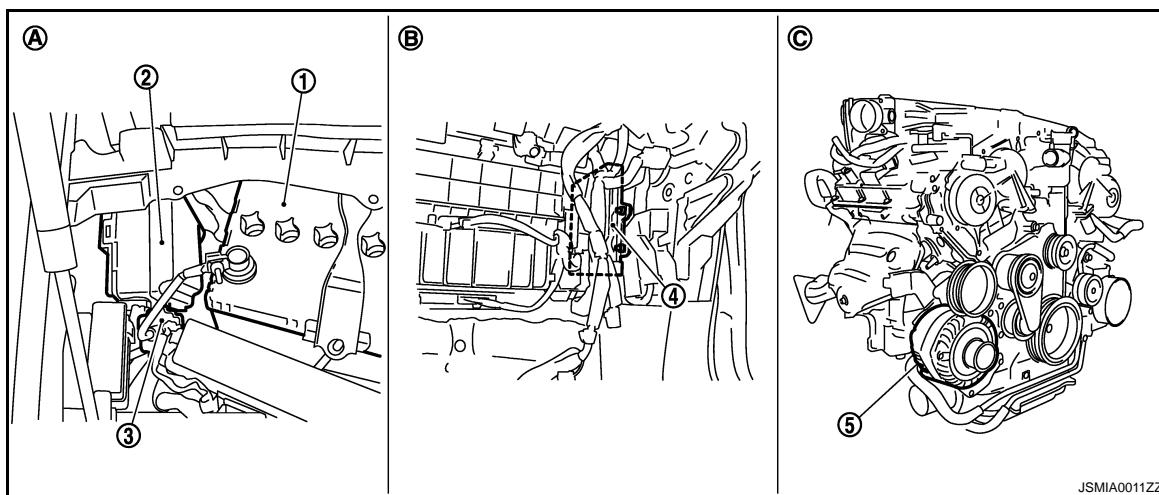

- | | | |
|--------------------------------|---------------------|---------------------------|
| 1. Battery | 2. IPDM E/R | 3. Battery current sensor |
| 4. ECM | 5. Alternator | C. Engine |
| A. Engine room dash panel (RH) | B. Behind glove box | |

Component Description

INFOID: 0000000000964271

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

| Component part | Description |
|---------------------------|--|
| Battery current sensor | Battery current sensor is installed to the battery cable at the negative terminal, and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value. |
| ECM | Battery current sensor detects the charging/discharging current of the battery. ECM judges the battery condition based on this signal. ECM judges whether to perform the power generation voltage variable control according to the battery condition. When performing the power generation voltage variable control, ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to IPDM E/R. |
| IPDM E/R | IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC regulator. |
| Alternator (IC regulator) | IC regulator controls the power generation voltage by the target power generation voltage based on the received power generation command signal. When there is no power generation command signal, the alternator performs the normal power generation according to the characteristic of the IC regulator. |

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

B TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000000964272

"B" terminal circuit supplies power to charge the battery and operate the vehicle's electrical system.

Diagnosis Procedure

INFOID:000000000964273

1.CHECK "B" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "B" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "B" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2.CHECK "B" TERMINAL CIRCUIT

Check voltage between alternator "B" terminal and ground.

| Terminals | | Voltage (Approx.) | |
|-------------------------|----------|-------------------|-----------------|
| (+) | (-) | | |
| Alternator "B" terminal | Terminal | | |
| E203 | 1 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness for open between alternator and fusible link.

3.CHECK "B" TERMINAL CONNECTION (VOLTAGE DROP TEST)

1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and alternator "B" terminal.

| Terminals | | Voltage (Approx.) | |
|---------------------------|----------|-------------------|-----------------|
| (+) | (-) | | |
| Alternator "B" terminal | Terminal | | |
| Battery positive terminal | E203 | 1 | Less than 0.2 V |

Is the inspection result normal?

YES >> "B" terminal circuit is normal. Refer to [CHG-3, "Work Flow"](#).

NO >> Check harness between battery and alternator for poor continuity.

L TERMINAL CIRCUIT (OPEN)

< COMPONENT DIAGNOSIS >

L TERMINAL CIRCUIT (OPEN)

Description

INFOID:000000000964274

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:000000000964275

1. CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "L" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect alternator connector.
2. Apply ground to alternator harness connector terminal.
3. Check condition the charge warning lamp with the ignition switch in the ON position.

| Alternator harness connector | Terminal | Ground | Condition | |
|------------------------------|----------|--------|--------------------------|---------------------|
| | | | Ignition switch position | Charge warning lamp |
| F36 | 2 | | ON | illuminate |

Does it illuminate?

YES >> "L" terminal circuit is normal. Refer to [CHG-3, "Work Flow"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the battery cable from the negative terminal.
2. Disconnect the combination meter connector.
3. Check continuity between alternator harness connector and combination meter harness connector.

| Alternator harness connector | | Combination meter harness connector | | Continuity |
|------------------------------|--------------|-------------------------------------|--------------|------------|
| Connector No. | Terminal No. | Connector No. | Terminal No. | |
| F36 | 2 | M53 | 6 | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check continuity between combination meter harness connector and fuse block.

| Combination meter harness connector | | Fuse block | | Continuity |
|-------------------------------------|--------------|---------------|--------------|------------|
| Connector No. | Terminal No. | Connector No. | Terminal No. | |
| M53 | 21 | M3 | 12C | Existed |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harness.

5. CHECK POWER SUPPLY CIRCUIT

1. Connect the battery cable to the negative terminal.

L TERMINAL CIRCUIT (OPEN)

< COMPONENT DIAGNOSIS >

- Check voltage between combination meter harness connector and ground.

| Terminals | | Condition | Voltage (Approx.) | |
|--|----------------|-----------|---|-----------------|
| (+) | (-) | | | |
| Combination meter harness connector | Terminal 21 | Ground | When the ignition switch is in ON position | Battery voltage |

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Inspect the power supply circuit. Refer to [PG-50, "Wiring Diagram — Ignition Power Supply —".](#)

L TERMINAL CIRCUIT (SHORT)

< COMPONENT DIAGNOSIS >

L TERMINAL CIRCUIT (SHORT)

Description

INFOID:000000000964276

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:000000000964277

1. CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect alternator connector.
3. Turn ignition switch ON.

Charge warning lamp should illuminate?

YES >> GO TO 2.
NO >> Refer to [CHG-3, "Work Flow"](#).

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect combination meter connector.
4. Check continuity between combination meter harness connector and ground.

| Combination meter harness connector | | Ground | Continuity |
|-------------------------------------|--------------|--------|-------------|
| Connector No. | Terminal No. | | |
| M53 | 6 | | Not existed |

Is the inspection result normal?

YES >> Replace combination meter.
NO >> Repair the harness.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

S TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

S TERMINAL CIRCUIT

Description

INFOID:000000000964278

The output voltage of the alternator is controlled by the IC regulator at the "S" terminal detecting the input voltage.

The "S" terminal circuit detects the battery voltage to adjust the alternator output voltage with the IC regulator.

Diagnosis Procedure

INFOID:000000000964279

1.CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "S" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2.CHECK "S" TERMINAL CIRCUIT

Check voltage between alternator harness connector and ground.

| Terminals | | Voltage (Approx.) |
|------------------------------|----------|-------------------|
| (+) | (-) | |
| Alternator harness connector | Terminal | |
| F36 | 3 | Ground |
| | | Battery voltage |

Is the inspection result normal?

YES >> Refer to [CHG-3, "Work Flow"](#).

NO >> Check harness for open between alternator and fuse.

CHARGING SYSTEM


< COMPONENT DIAGNOSIS >

CHARGING SYSTEM

Wiring Diagram — CHARGING SYSTEM —

INFOID:0000000000964280

CHARGING SYSTEM

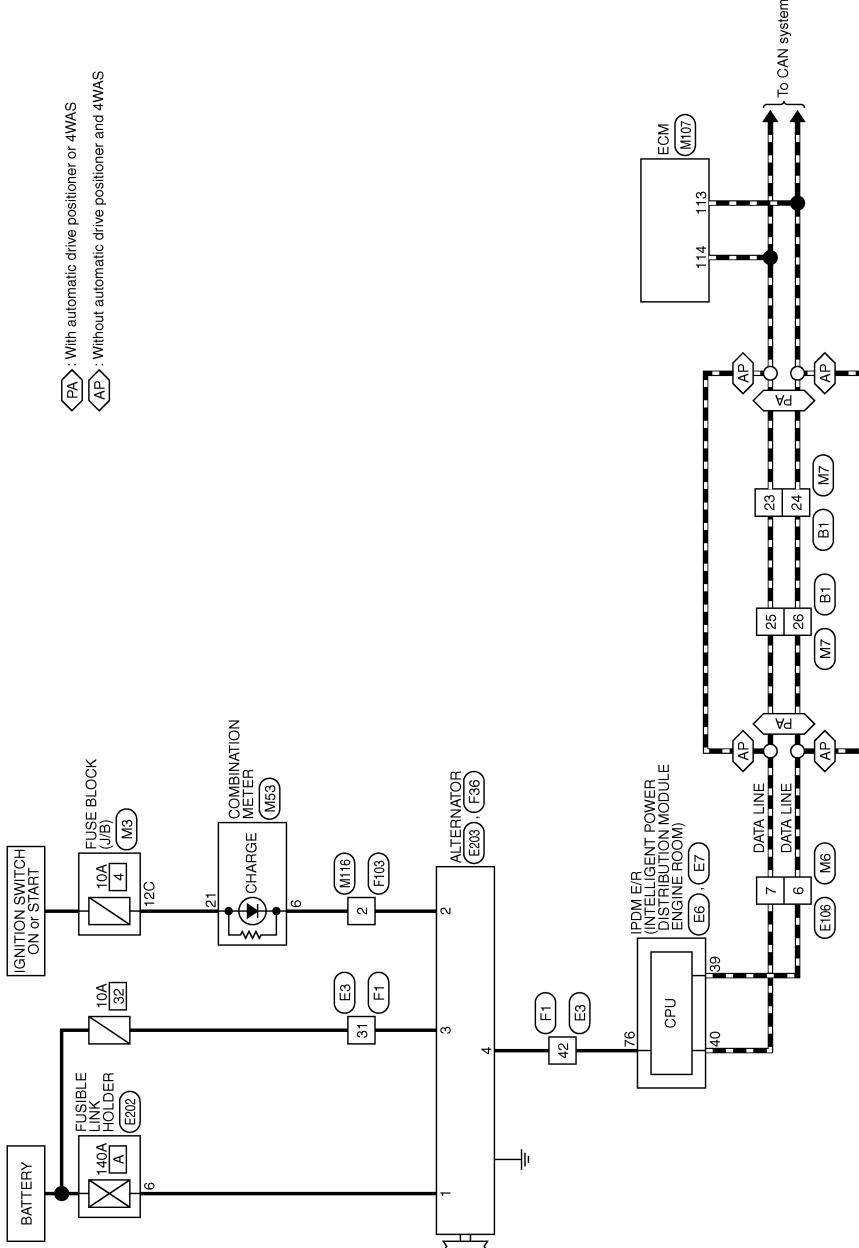


2006/09/15

JCMWA0028GE

CHARGING SYSTEM

< COMPONENT DIAGNOSIS >

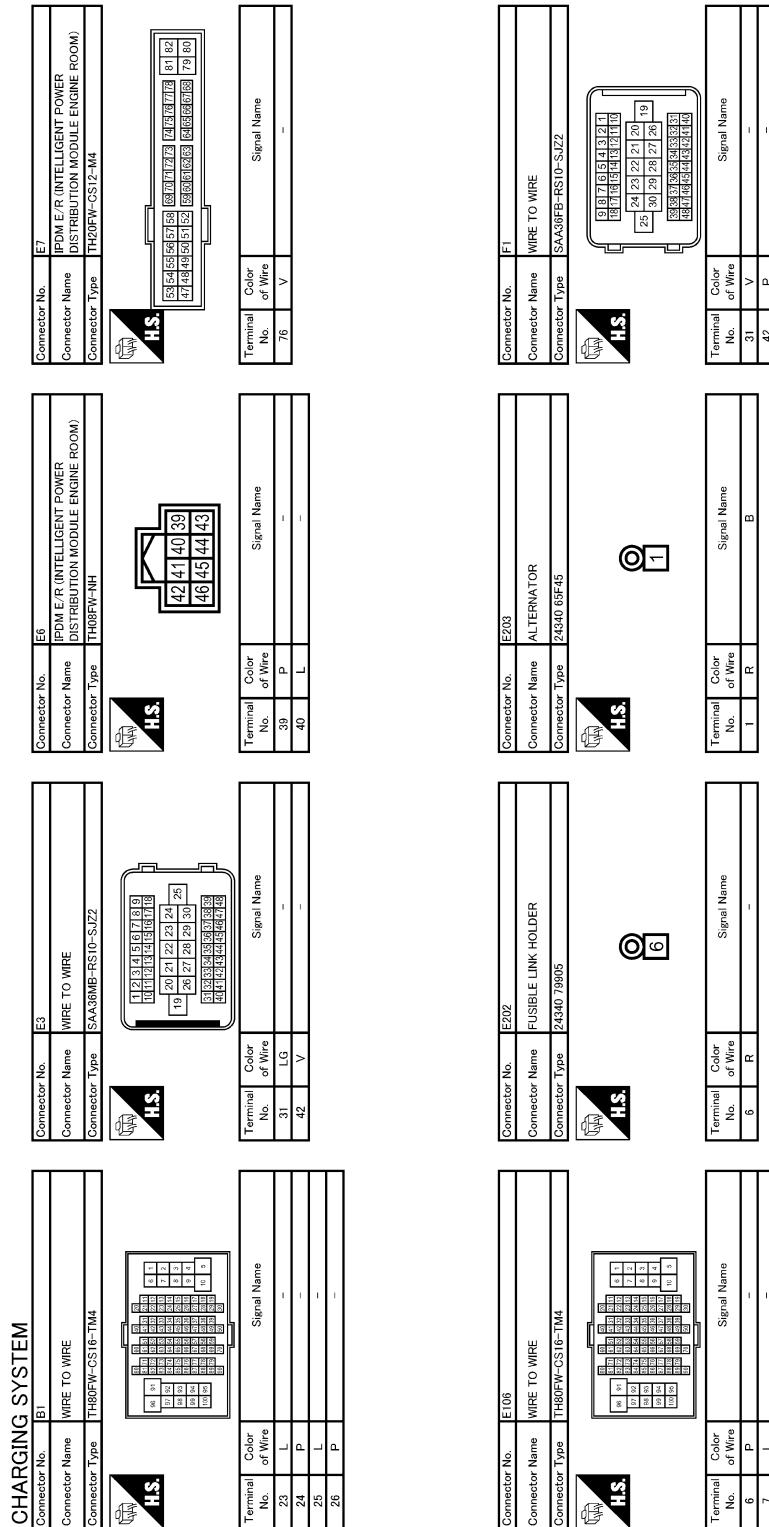

JCMWA0029GF

CHARGING SYSTEM

< COMPONENT DIAGNOSIS >

CHARGING SYSTEM

| Connector No. | F103 | Connector No. | M3 |
|----------------|---------------|----------------|---------------|
| Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE |
| Connector Type | TK36FW-NST0 | Connector Type | NST2FW-CS |
| | | | |
| Terminal No. | Color of Wire | Terminal No. | Color of Wire |
| 2 | G | 12C | R |
| 3 | V | - | - |
| 4 | P | - | - |
| | | | |
| | | | |

| Terminal No. | Color of Wire | Signal Name | Signal Name |
|--------------|---------------|-------------|-------------|
| 2 | G | L | - |
| 3 | V | S | - |
| 4 | P | C | - |
| | | | |
| | | | |

CHG-17

| Connector No. | F103 | Connector No. | M3 |
|----------------|---------------|----------------|---------------|
| Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE |
| Connector Type | TK36FW-NST0 | Connector Type | NST2FW-CS |
| | | | |
| Terminal No. | Color of Wire | Terminal No. | Color of Wire |
| 2 | G | 12C | R |
| 3 | V | - | - |
| 4 | P | - | - |
| | | | |
| | | | |

| Connector No. | M53 | Connector No. | M107 |
|----------------|-------------------|----------------|------------------------|
| Connector Name | COMBINATION METER | Connector Name | ECM |
| Connector Type | SAB40FW | Connector Type | MAA24FGY-MEA8-LH-Z |
| | | | |
| Terminal No. | Color of Wire | Terminal No. | Color of Wire |
| 1 | W | 128 | 124(20)16112(08)04(10) |
| 2 | Y | 127 | 123(19)15111(07)03(9) |
| 3 | U | 126 | 122(18)14111(06)02(8) |
| 4 | W | 125 | 121(17)13103(05)01(97) |
| | | | |
| | | | |

| Connector No. | M7 | Connector No. | M116 |
|----------------|-----------------|----------------|---------------|
| Connector Name | WIRE TO WIRE | Connector Name | WIRE TO WIRE |
| Connector Type | TK36MW-CS16-TM4 | Connector Type | TK36MW-NS10 |
| | | | |
| Terminal No. | Color of Wire | Terminal No. | Color of Wire |
| 23 | L | 113 | P |
| 24 | P | 114 | L |
| 25 | L | - | - |
| 26 | P | - | - |
| | | | |
| | | | |

JCMWA0030GE

CHG

Z

O

P

A

B

D

M

I

K

L

N

CHARGING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

CHARGING SYSTEM

Symptom Table

INFOID:000000000964281

| Symptom | Reference |
|--|---|
| Battery discharged | Refer to CHG-3, "Work Flow" . |
| The charge warning lamp does not illuminate when the ignition switch is set to ON. | |
| The charge warning lamp does not turn OFF after the engine starts. | |
| The charging warning lamp turns ON when increasing the engine speed. | |

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000000964282

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Power Generation Voltage Variable Control System

INFOID:0000000000964283

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION

Special Service Tool

INFOID:000000000964284
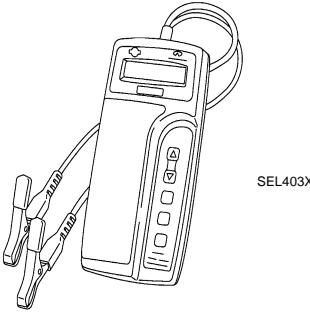
| Tool number (Kent-Moore No.) Tool name | Description |
|--|--|
| — (J-44373 Model MCR620) Starting/Charging System Tester |  <p>Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.</p> |

Commercial Service Tool

INFOID:000000000964285

| Tool name | Description |
|------------|---|
| Power tool |  <p>Loosening bolts, nuts and screws</p> |

CHARGING SYSTEM PRELIMINARY INSPECTION

< ON-VEHICLE MAINTENANCE >

ON-VEHICLE MAINTENANCE

CHARGING SYSTEM PRELIMINARY INSPECTION

Inspection Procedure

INFOID:000000000964286

1.CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair battery terminals connection.

2.CHECK FUSE

Check for blown fuse and fusible link.

| Unit | Power source (Power supply terminals) | Fuse No. |
|-------------------|---------------------------------------|----------|
| Alternator | Battery ("S" terminal) | 32 |
| Combination meter | Ignition switch ON ("L" terminal) | 4 |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

3.CHECK "E" TERMINAL CONNECTION

Check if "E" terminal (alternator ground harness) is clean and tight.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair "E" terminal connection.

4.CHECK DRIVE BELT TENSION

Check drive belt tension. Refer to [EM-12, "Checking"](#).

Is the inspection result normal?

YES >> Inspection end.

NO >> Repair as needed.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< ON-VEHICLE MAINTENANCE >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Inspection Procedure

INFOID:000000000964287

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1.CHECK ECM (CONSULT-III)

Perform ECM self-diagnosis with CONSULT-III. Refer to [EC-113, "CONSULT-III Function".](#)

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2.CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT-III and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" at "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0 % : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0 % : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0 %

Is the measurement value within the specification?

YES >> Inspection end.

NO >> GO TO 3.

3.CHECK IPDM E/R (CONSULT-III)

Perform IPDM E/R self-diagnosis with CONSULT-III. Refer to [PCS-12, "CONSULT - III Function \(IPDM E/R\)".](#)

Self-diagnostic results content

No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4.CHECK HARNESS BETWEEN ALTERNATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect alternator connector and IPDM E/R connector.
3. Check continuity between alternator harness connector and IPDM E/R harness connector.

| Alternator harness connector | | IPDM E/R harness connector | | Continuity |
|------------------------------|----------|----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| F36 | 4 | E7 | 76 | Existed |

4. Check continuity between alternator harness connector and ground.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< ON-VEHICLE MAINTENANCE >

| Alternator harness connector | | Ground | Continuity |
|------------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| F36 | 4 | | Not existed |

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair harness or connector between IPDM E/R and alternator.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

ALTERNATOR

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR


ALTERNATOR

2WD

2WD : Exploded View

INFOID:0000000000964288

REMOVAL

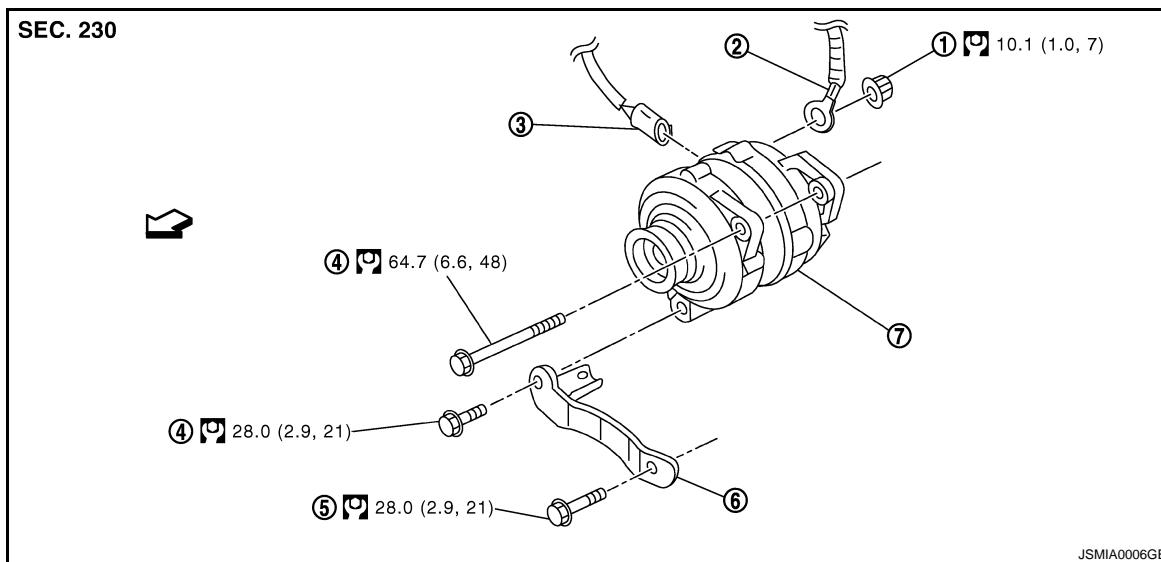

- | | | |
|-----------------------------|----------------------------------|-------------------------|
| 1. "B" terminal nut | 2. "B" terminal harness | 3. Alternator connector |
| 4. Alternator mounting bolt | 5. Alternator stay mounting bolt | 6. Alternator stay |
| 7. Alternator | | |

⇨ : Engine front


Refer to [GI-4, "Components"](#) for symbols in the figure.

DISASSEMBLY

Type: A3TJ1991

ALTERNATOR

< ON-VEHICLE REPAIR >

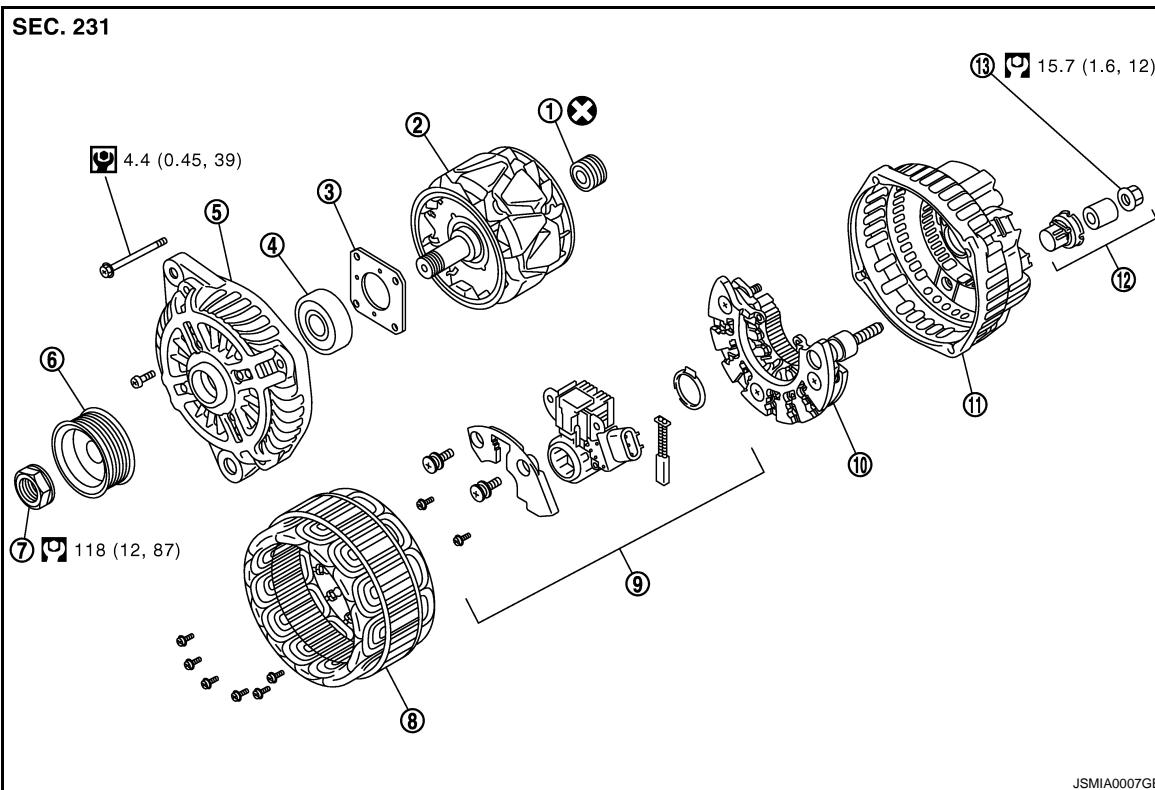

1. Rear bearing
2. Rotor assembly
3. Retainer
4. Front bearing
5. Front bracket assembly
6. Pulley
7. Pulley nut
8. Stator assembly
9. IC voltage regulator assembly
10. Diode assembly
11. Rear bracket assembly
12. Terminal set
13. "B" terminal nut


Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:0000000000964289

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove engine front undercover, using power tools.
3. Remove radiator cooling fan assembly. Refer to [CO-14, "Exploded View"](#).
4. Remove drive belt. Refer to [EM-12, "Removal and Installation"](#).
5. Disconnect alternator connector (1).
6. Remove "B" terminal nut (2).
7. Remove the harness bracket bolts (A).

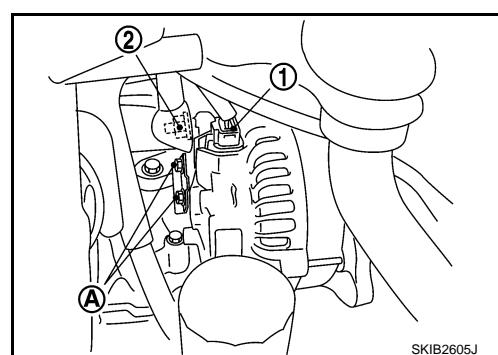


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CHG

ALTERNATOR

< ON-VEHICLE REPAIR >

8. Remove oil pressure switch harness clip (C) from alternator stay (1).
9. Disconnect oil pressure switch connector (D) and oil temperature sensor connector (E).
10. Remove alternator mounting bolt (B) and alternator stay mounting bolt (F) using power tools, then remove alternator stay.
11. Remove alternator mounting bolt (A), using power tools.

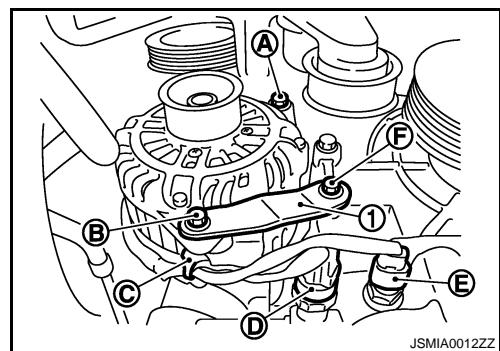

JSMIA0012ZZ

12. Remove alternator assembly downward from the vehicle.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to tighten "B" terminal nut carefully.

- Install alternator, and check tension of belt. Refer to [EM-12, "Checking"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [CHG-22, "Inspection Procedure"](#).

2WD : Inspection

INFOID:0000000000964290

ALTERNATOR PULLEY INSPECTION

Perform the following.


- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight. Refer to [CHG-24, "2WD : Exploded View"](#).

AWD

AWD : Exploded View

INFOID:0000000000964291

REMOVAL

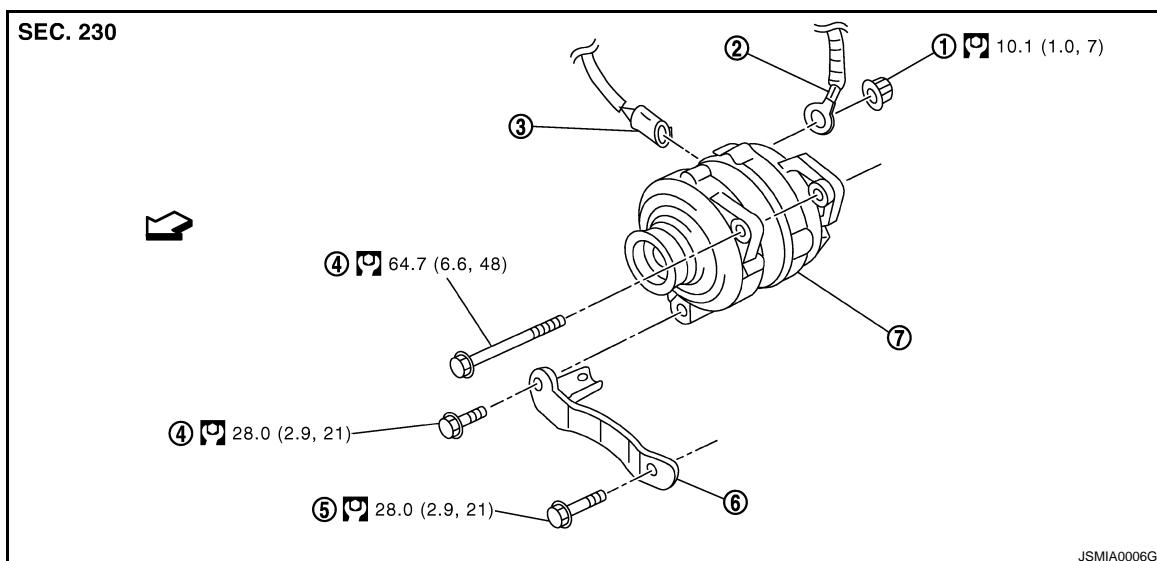

JSMIA0006GB

1. "B" terminal nut
2. "B" terminal harness
3. Alternator connector
4. Alternator mounting bolt
5. Alternator stay mounting bolt
6. Alternator stay
7. Alternator

ALTERNATOR


< ON-VEHICLE REPAIR >

◀ : Engine front

Refer to [GI-4, "Components"](#) for symbols in the figure.

DISASSEMBLY

Type: A3TJ1991

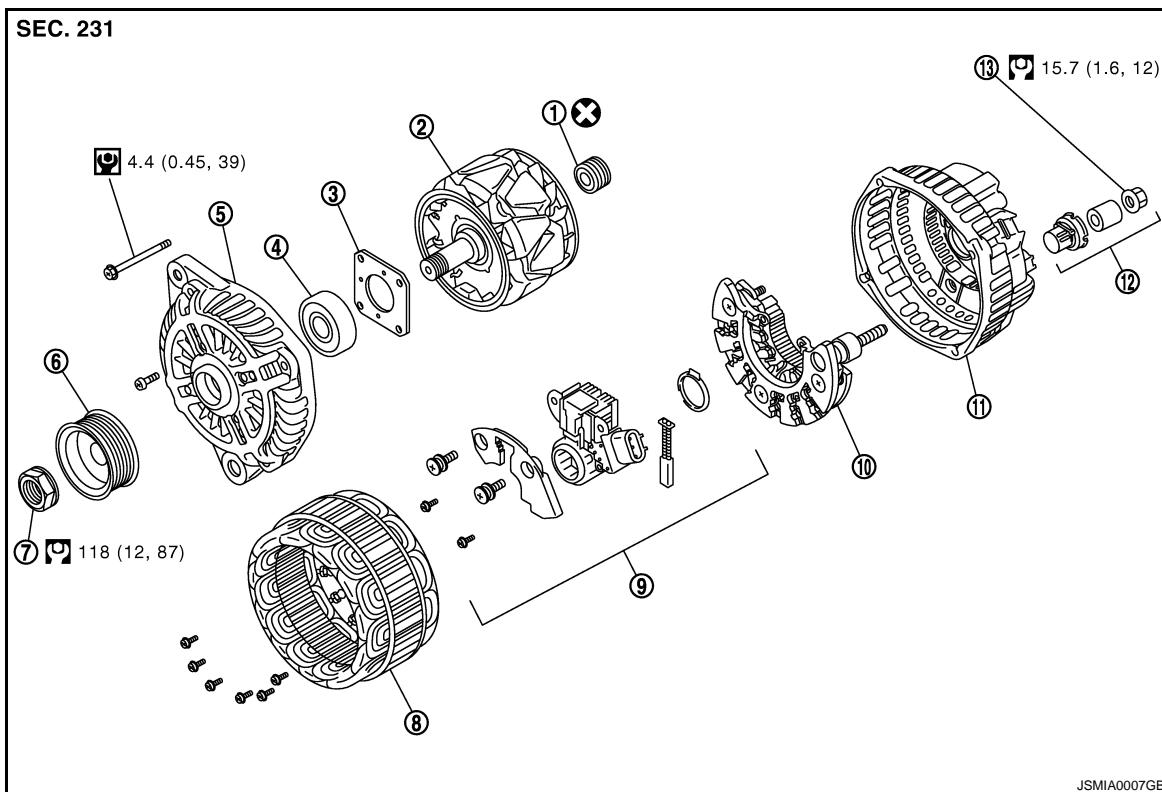

1. Rear bearing
2. Rotor assembly
3. Retainer
4. Front bearing
5. Front bracket assembly
6. Pulley
7. Pulley nut
8. Stator assembly
9. IC voltage regulator assembly
10. Diode assembly
11. Rear bracket assembly
12. Terminal set
13. "B" terminal nut

Refer to [GI-4, "Components"](#) for symbols in the figure.


AWD : Removal and Installation

INFOID:000000000964292

CHG

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove air cleaner case (RH). Refer to [EM-25, "Exploded View"](#).
3. Remove the clip (B) from the harness bracket (1) and "B" terminal harness from the clip (C).
4. Disconnect pressure sensor connector (A).

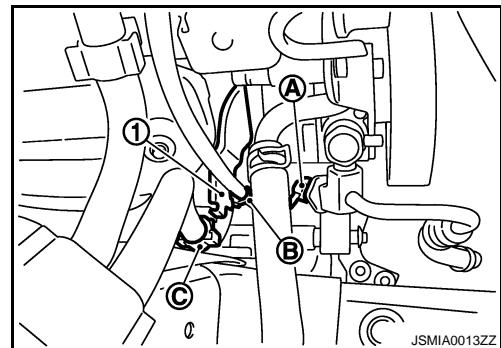


5. Remove engine undercover, using power tools.


ALTERNATOR

< ON-VEHICLE REPAIR >

6. Remove radiator cooling fan assembly. Refer to [CO-14, "Exploded View"](#).
7. Remove drive belt. Refer to [EM-12, "Removal and Installation"](#).
8. Remove alternator mounting bolt (B) and alternator stay mounting bolt (C) using power tools, then remove alternator stay (1).
9. Remove alternator mounting bolt (A), using power tools.

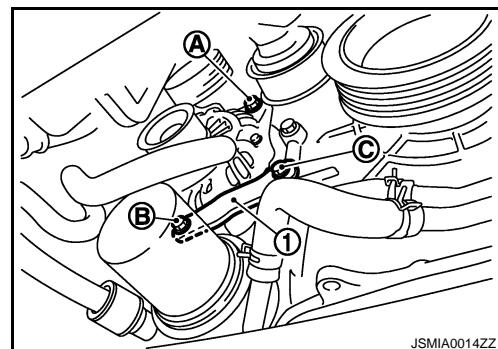

10. Pull and turn alternator, and then remove the harness bracket bolts (A).
11. Disconnect alternator connector (1).
12. Remove "B" terminal nut (2).

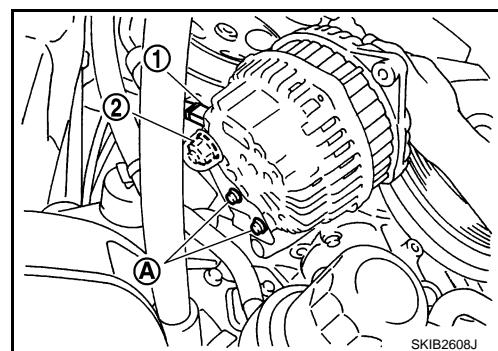

13. Remove alternator assembly downward from the vehicle.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to tighten "B" terminal nut carefully.

- Install alternator, and check tension of belt. Refer to [EM-12, "Checking"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [CHG-22, "Inspection Procedure"](#).

AWD : Inspection

INFOID:000000000964293

ALTERNATOR PULLEY INSPECTION

Perform the following.

- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight. Refer to [CHG-26, "AWD : Exploded View"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Alternator

INFOID:000000000964294

| | | |
|---|-------------|--|
| Type | | A3TJ1991 MITSUBISHI make |
| Nominal rating | [V - A] | 12 -150 |
| Ground polarity | | Negative |
| Minimum revolution under no-load (When 13.5 V is applied) | [rpm] | Less than 1,300 |
| Hot output current (When 13.5 V is applied) | [A/rpm] | More than 31/1,300 More than 122/2,500 More than 144/5,000 |
| Regulated output voltage | [V] | 14.1 - 14.7* |
| Minimum length of brush | [mm (in)] | More than 5.00 (0.197) |
| Brush spring pressure | [N (g, oz)] | 4.1 - 5.3 (418 - 540, 14.8 - 19.1) |
| Slip ring minimum outer diameter | [mm (in)] | More than 22.1 (0.870) |
| Rotor (Field coil) resistance | [Ω] | 1.7 - 2.0 |

*: Adjustment range of power generation voltage variable control is 11.4 - 15.6 V.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P