

# ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

EE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

---

## A

AAC/V - Wiring diagram.....	EC-256
ABS (anti-lock brake system) .....	BR-28
ABS - Wiring diagram .....	BR-40
A/C air flow.....	HA-23
A/C component layout.....	HA-18
A/C compressor clutch removal and installation.....	HA-98
A/C compressor description.....	HA-12
A/C compressor mounting .....	HA-97
A/C compressor precaution .....	HA-6
A/C compressor special service tool .....	HA-6
A/C control linkage adjustment .....	HA-88
A/C control operation .....	HA-21
A/C diagnostic work flow.....	HA-25
A/C harness layout.....	HA-51
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-90
A/C HFC134a (R134a) system service tools .....	HA-7
A/C HFC134a system service equip- ment precaution.....	HA-9
A/C lubricant (R134a) .....	HA-92
A/C operational check.....	HA-26
A/C performance chart.....	HA-47
A/C performance test diagnoses .....	HA-45
A/C relay .....	HA-88
A/C self-diagnoses .....	HA-30
A/C service data specification.....	HA-102
A/C symptom chart .....	HA-29
A/C system description .....	HA-20
A/C trouble diagnoses.....	HA-25
A/C, A - Wiring diagram .....	HA-54
Accelerator control system.....	FE-3
Accelerator wire adjustment .....	FE-3
Air bag.....	RS-5
Air bag disposal .....	RS-13
Air bag precautions .....	GI-2
Air bleeding for brake system .....	BR-5
Air cleaner filter replacement.....	MA-13
Air conditioner cut control .....	EC-18
Air flow meter - See Mass air flow sensor .....	EC-100
Air mix door control linkage adjustment.....	HA-89
Air mix. door motor .....	HA-68, 78
Air spoiler, rear .....	BT-22
All - mode 4WD system.....	TF-7
Alternator .....	EL-34
Ambient sensor .....	HA-61
Angular tightening application .....	EM-2
Antenna - See Power antenna.....	EL-138
Anti-lock brake system - See ABS.....	BR-28
Anti-lock brake system - Wiring diagram.....	BR-40
AP/SEN - Wiring diagram .....	EC-106
ASCD (automatic speed control device) .....	EL-149

ASCD - Wiring diagram .....	EL-153
A/T - Wiring diagram .....	AT-8
A/T control unit inspection table.....	AT-55
A/T control unit inspection table transfer .....	TF-45
A/T diagnosis communication line .....	EC-326
A/T fluid temperature sensor.....	AT-67
A/T removal and installation.....	AT-139
A/T self-diagnoses.....	AT-26
A/T shift lock system .....	AT-129
A/T shift lock system - Wiring diagram .....	AT-130
AT/C - Wiring diagram.....	EC-266
ATDIAG - Wiring diagram .....	EC-326
ATP switch .....	TF-61
ATP warning lamp .....	TF-66, 67
Audio.....	EL-132
AUDIO - Wiring diagram.....	EL-134
Audio and A/C control removal and installation - See Instrument panel .....	BT-13
Auto air conditioner - Wiring diagram .....	HA-54
Automatic amplifier .....	HA-58, 60
Automatic speed control system - See ASCD .....	EL-149
Automatic transmission fluid replacement.....	MA-17
Automatic transmission number.....	GI-36
Auxiliary air control (AAC) valve .....	EC-256
Axle housing (rear).....	RA-8

## B

Back door.....	BT-8
Back door opener - See Back door.....	BT-8
Back door trim .....	BT-21
Back-up lamp.....	EL-54
BACK/L - Wiring diagram .....	EL-54
Ball joint front axle .....	FA-22
Battery.....	EL-22
Blower motor .....	HA-81
Body alignment .....	BT-44
BPT valve .....	EC-220
Brake booster .....	BR-15
Brake fluid change .....	BR-4
Brake fluid level .....	MA-20
Brake fluid level and line check .....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection .....	MA-21
Brake lines and cables inspection .....	MA-20
Brake lining wear temporary checking .....	MA-22
Brake master cylinder .....	BR-12
Brake pedal .....	BR-10
Bumper, front .....	BT-5
Bumper, rear .....	BT-8
BUZZER - Wiring diagram.....	EL-100
BYPS/V - Wiring diagram .....	EC-304

# ALPHABETICAL INDEX

## C

Camshaft inspection .....	EM-24
CANI/V - Wiring diagram .....	EC-233
Canister-See EVAP canister .....	EC-20
Center case transfer .....	TF-78
CHARGE - Wiring diagram.....	EL-31
Charging system.....	EL-30
Chassis and body maintenance .....	MA-17
Cigarette lighter .....	EL-122
Circuit breaker .....	EL-18
CKPS - Wiring diagram .....	EC-200, 289
Clutch drum transfer .....	TF-80
Clutch pressure switch transfer .....	TF-60
CMPS - Wiring diagram .....	EC-205
Coil spring (front) .....	FA-20
Coil spring (rear) .....	RA-12
Collision diagnosis .....	RS-36
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-22
Combination meter .....	EL-79
Combination meter removal and instal- lation - See Instrument panel.....	BT-13
Combination switch.....	EL-35
Compression pressure.....	EM-8
Compressor clutch removal and installation.....	HA-98
Compressor description .....	HA-12
Compressor mounting.....	HA-97
Compressor precaution .....	HA-6
Compressor special service tool .....	HA-6
Connecting rod .....	EM-40
Connecting rod bearing clearance .....	EM-44
Connecting rod bushing clearance.....	EM-45
Console box - See Instrument panel.....	BT-13
CONSULT for ABS .....	BR-47
CONSULT for all-mode 4WD.....	TF-26
CONSULT for ECCS .....	EC-56
CONSULT general information.....	GI-33
Control lever transfer .....	TF-75
Control valve (A/T) .....	AT-161
Control valve transfer.....	TF-83
Converter housing installation.....	AT-140
Coolant mixture ratio .....	MA-9
Coolant replacement .....	MA-11
Cooling circuit (engine).....	LC-8
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-205
Crankcase emission control system - See positive crankcase ventilation.....	EC-24
Crankshaft.....	EM-43
Crankshaft position sensor (OBD) .....	EC-200
Cruise control - See ASCD.....	EL-149
Cylinder block .....	EM-38
Cylinder block boring .....	EM-42
Cylinder head.....	EM-20

Cylinder head bolt tightening..... EM-32

## D

Daytime light system .....	EL-41
Daytime running light - See Daytime light system .....	EL-41
DEF - Wiring diagram.....	EL-126
Detonation sensor - See Knock sensor.....	EC-197
Diagnosis sensor unit.....	RS-8
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-76
Differential carrier assembly .....	PD-27, 49
Differential carrier disassembly .....	PD-34
Differential gear oil replacement.....	MA-19
Dimensions.....	GI-37
Distributor .....	EC-17
Distributor ignition (DI) system.....	EC-17
D/LOCK - Wiring diagram.....	EL-180
Dome light - See Interior lamp .....	EL-72
Door glass .....	BT-11
Door lock .....	BT-11
Door mirror.....	BT-43
Door trim .....	BT-19
Door, front .....	BT-11
Door, rear .....	BT-12
Drive belt inspection .....	MA-10
Drive chain transfer.....	TF-80
Drive pinion diff. inspection.....	PD-19, 38
Drive pinion height .....	PD-21, 45
Drive plate runout .....	EM-45
Drive shaft (front) .....	FA-14
Dropping resistor (A/T) .....	AT-94
DTRL - Wiring diagram.....	EL-44
Dual pressure switch.....	HA-88

## E

ECCS basic inspection .....	EC-74
ECCS circuit diagram .....	EC-11
ECCS component parts location.....	EC-9
ECCS fail-safe system .....	EC-77
ECCS on board diagnostic system.....	EC-36
ECCS symptom matrix chart .....	EC-78
ECCS system diagram and chart .....	EC-12
ECM input/output signal .....	EC-85
ECTS - Wiring diagram .....	EC-118, 129
EGR control (EGRC) - BPT valve.....	EC-219
EGR control (EGRC) - solenoid valve .....	EC-294
EGR control valve .....	EC-217
EGR temperature sensor .....	EC-299
EGR/TS - Wiring diagram .....	EC-299
EGRC/V - Wiring diagram.....	EC-294
EGRC1 - Wiring diagram .....	EC-211
Electric sun roof.....	EL-143
Electrical diagnoses .....	GI-19
Electrical unit .....	Foldout
Electrical units location .....	EL-233

## ALPHABETICAL INDEX

---

Electronic ignition system .....	EC-17
Engine compartment.....	BT-44
Engine control module (ECM).....	EC-269
Engine coolant temperature sensor (ECTS) .....	EC-118
Engine oil filter replacement .....	MA-14
Engine oil precautions .....	GI-4
Engine oil replacement .....	MA-14
Engine outer component parts .....	EM-6
Engine removal.....	EM-35
Engine room - See Engine compartment .....	BT-44
Engine serial number .....	GI-36
EVAP canister .....	EC-20
EVAP canister purge control valve .....	EC-233
EVAP canister purge volume control valve .....	EC-20
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve .....	EC-211
Exhaust system .....	FE-7
Exhaust system inspection .....	MA-17
Exterior.....	BT-22
Exterior lamp.....	EL-50

### F

4WD shift indicator lamp.....	TF-64
4WD shift switch .....	TF-60
4WD solenoid valve .....	TF-60
4WD warning lamp .....	TF-22
Fan control amp.....	HA-82
Fast idle cam (FIC) inspection and adjustment .....	EC-27
F/FOG - Wiring diagram .....	EL-56
FICD - Wiring diagram .....	EC-345
Final drive disassembly .....	PD-34
Final drive pre-inspection .....	PD-34
Final drive removal and installation .....	PD-12
Finisher, interior - See Trim .....	BT-17
Flow charts .....	GI-30
Fluid temperature sensor (A/T) .....	AT-67
Fluids .....	MA-8
FO2H-L - Wiring diagram.....	EC-158
FO2H-R - Wiring diagram .....	EC-140
Fog lamp, front .....	EL-55
Fog lamp, front, removal and installation .....	BT-5
Forward clutch.....	AT-180
F/PUMP - Wiring diagram .....	EC-336
FRO2LH - Wiring diagram .....	EC-153
FRO2RH - Wiring diagram.....	EC-135
Front axle .....	FA-9
Front bumper .....	BT-5
Front case transfer.....	TF-88
Front combination lamp removal and installation .....	BT-5
Front disc brake .....	BR-18
Front door.....	BT-11
Front drive shaft transfer .....	TF-80

Front final drive disassembly (4WD).....	PD-14
Front final drive pre-inspection (4WD).....	PD-14
Front final drive removal and installa- tion (4WD) .....	PD-12
Front fog lamp .....	EL-55
Front fog lamp removal and installation .....	BT-5
Front oxygen sensor (O2S) monitor .....	EC-48
Front passenger air bag.....	RS-10
Front revolution sensor transfer.....	TF-61
Front seat.....	BT-29
Front seat belt .....	RS-3
Front suspension .....	FA-19
Front washer.....	EL-106
Front wiper .....	EL-106
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filler lid .....	BT-8
Fuel filter replacement .....	MA-13
Fuel gauge.....	EL-79
Fuel line inspection .....	MA-12
Fuel precautions .....	GI-5
Fuel pressure check.....	EC-25
Fuel pressure release .....	EC-25
Fuel pump .....	EC-336
Fuel system .....	FE-4
Fuel tank vacuum relief valve .....	EC-21
FUELLH - Wiring diagram .....	EC-180, 185
FUELRH - Wiring diagram.....	EC-170, 175
Fuse .....	EL-18
Fuse block .....	Foldout
Fusible link .....	EL-18

### G

Garage jack and safety stand .....	GI-39
Gauges .....	EL-77
Generator .....	EL-34
Generic scan tool (GST) .....	EC-68
Glass .....	BT-11
Grease .....	MA-8
Ground distribution .....	EL-19

### H

Harness connector.....	EL-3
Harness layout.....	EL-236
Hazard warning lamp .....	EL-58
Headlamp.....	EL-38
Headlining - See Roof trim .....	BT-20
Heated seat.....	BT-31, EL-148
Height (Dimensions) .....	GI-37
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-90
HFC134a (R134a) system service tools .....	HA-7
HFC134a system service equipment precaution .....	HA-9
High clutch.....	AT-178

# ALPHABETICAL INDEX

H/LAMP - Wiring diagram.....	EL-39
Hood .....	BT-5
Horn .....	EL-122
HORN - Wiring diagram .....	EL-122
HSEAT - Wiring diagram .....	EL-148
Hydraulic lash adjuster inspection.....	EM-29

I

IACV-AAC valve.....	EC-256
IACV-FICD solenoid valve .....	EC-345
IATS - Wiring diagram .....	EC-113
Identification plate .....	GI-36
Idle air control valve (IACV) .....	EC-256
IGN/SG - Wiring diagram.....	EC-283
Ignition wire inspection.....	EC-196
ILL - Wiring diagram .....	EL-68
Illumination.....	EL-66
In vehicle sensor .....	HA-63
Inhibitor switch.....	AT-63
INJECT - Wiring diagram .....	EC-329
Injector.....	EC-332
Injector removal and installation .....	EC-26
Instrument panel .....	BT-13
INT/L - Wiring diagram .....	EL-74
Intake air temperature sensor .....	EC-113
Intake door control linkage adjustment.....	HA-89
Intake door motor .....	HA-75
Integrated homelink transmitter .....	EL-231
Interior .....	BT-17
Interior lamp.....	EL-66
Internal gear transfer .....	TF-89

J

Jacking points .....	GI-38, 39
Journal bearing assembly (propeller shaft).....	PD-9
Journal bearing disassembly (propeller shaft).....	PD-8
Junction box (J/B) .....	Foldout

K

Keyless entry system - See Multi-re- mote control system.....	EL-186
Knock sensor (KS) .....	EC-197
Knuckle spindle.....	FA-12
KS - Wiring diagram.....	EC-197

L

Length (Dimensions) .....	GI-37
License lamp.....	EL-50
Lifting points .....	GI-40

Limited slip diff. adjustment.....	PD-41
Limited slip diff. assembly.....	PD-43
Limited slip diff. disassembly .....	PD-40
Limited slip diff. inspection .....	PD-40
Line pressure solenoid valve .....	AT-83, 91, 94
Line pressure switch transfer.....	TF-60
Line pressure test (A/T) .....	AT-127
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-233
Lock, door .....	BT-11
Low and reverse brake .....	AT-184
LSV (Load sensing valve).....	BR-7
Lubricant (R134a) A/C .....	HA-92
Lubricants .....	MA-8
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-23
Luggage room lamp.....	EL-72

M

MAFS - Wiring diagram .....	EC-100
Magnet clutch.....	HA-85, 98
MAIN - Wiring diagram .....	EC-94
Main oil pump transfer .....	TF-86
Mainshaft transfer .....	TF-80
Maintenance (engine) .....	MA-10
Malfunction indicator lamp (MIL) .....	EC-48
Mass air flow sensor (MAFS).....	EC-100
Master cylinder (brake) .....	BR-12
Meter .....	EL-77
METER - Wiring diagram .....	EL-81
MIL & Data link connectors circuit .....	EC-349
MIL/DL - Wiring diagram .....	EC-349
MIRROR - Wiring diagram .....	EL-144
Mirror defogger .....	EL-124
Mirror, door .....	BT-43
Mirror, out side.....	BT-43
Misfire.....	EC-193
Mode door control linkage adjustment.....	HA-88
Mode door motor.....	HA-70
Model variation .....	GI-34
Molding - See Exterior .....	BT-22
MULTI - Wiring diagram.....	EL-189
Multi-remote control system .....	EL-186
Multiport fuel injection (MFI) system.....	EC-15
Multiport fuel injection precautions.....	GI-4

N

Neutral-4LO switch .....	TF-61
--------------------------	-------

O

Oil change (capacity) .....	MA-8
Oil change (interval) .....	MA-6, 7
Oil pan (engine) .....	EM-9

## ALPHABETICAL INDEX

---

Oil pressure (engine) .....	LC-4
Oil pump (A/T) .....	AT-157
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine) .....	LC-6
Oil seal replacement (engine) .....	EM-18
Oil seal replacement (front final drive 4WD) .....	PD-10
Oil seal replacement (front of final drive) .....	PD-10
Out side mirror .....	BT-43
Overdrive control switch .....	AT-63
Overrun clutch .....	AT-180
Overrun clutch solenoid valve .....	AT-83, 91, 104
Oversize piston .....	EM-42

### P

P/ANT - Wiring diagram .....	EL-139
Park/Neutral position switch .....	EC-271
Parking brake control .....	BR-26
Parking lamp .....	EL-50
PCV (positive crankcase ventilation) .....	EC-24
PGC/V - Wiring diagram .....	EC-309
Pilot bushing replacement .....	EM-48
Pinion bearing preload diff. ....	PD-21
Pinion gear height diff. ....	PD-21, 45
Piston assembly .....	EM-46
Piston pin inspection .....	EM-39
Piston ring inspection .....	EM-40
Piston to bore clearance .....	EM-41
Planetary carrier transfer .....	TF-89
PNP/SW - Wiring diagram .....	EC-271
POWER - Wiring diagram .....	EL-7
Power antenna .....	EL-138
Power door lock .....	EL-177
Power door mirror .....	EL-144
Power seat .....	EL-146
Power steering fluid level .....	MA-22, ST-7
Power steering gear .....	ST-23
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-341
Power steering oil pump .....	ST-33
Power steering system bleeding .....	ST-8
Power supply routing .....	EL-6
Power transistor & ignition coil .....	EC-283
Power window .....	EL-169
PRE/SE - Wiring diagram .....	EC-247
Precautions (General) .....	GI-2
Pressure test (A/T) .....	AT-127
Propeller shaft .....	PD-6
Propeller shaft greasing .....	MA-19
Propeller shaft inspection .....	MA-18
Propeller shaft on vehicle service .....	PD-7
Propeller shaft vibration .....	PD-7
PST/SW - Wiring diagram .....	EC-341

### R

Rack retainer adjustment .....	ST-7
Radiator .....	LC-11
Radio - See Audio .....	EL-132
Rear air spoiler .....	BT-22
Rear axle (drum brake type) .....	RA-6
Rear bumper .....	BT-8
Rear case transfer .....	TF-78
Rear combination lamp removal and installation .....	BT-22
Rear cover packing replacement diff. ....	PD-11
Rear door .....	BT-12
Rear drum brake .....	BR-22
Rear seat .....	BT-32
Rear seat belt .....	RS-4
Rear side window .....	BT-42
Rear suspension .....	RA-10
Rear washer .....	EL-114
Rear window defogger .....	EL-124
Rear wiper .....	EL-114
Refrigerant connection precaution .....	HA-3
Refrigerant discharging evacuating charging .....	HA-90
Refrigerant general precaution .....	HA-2
Refrigerant lines .....	HA-94
Refrigeration cycle .....	HA-11
Reverse clutch .....	AT-174
Revolution sensor (A/T) .....	AT-69
Ring gear diff. inspection .....	PD-19, 38
RO2H-L - Wiring diagram .....	EC-166
RO2H-R - Wiring diagram .....	EC-148
Road wheel size .....	GI-37
Roof trim .....	BT-20
Room lamp - See Interior lamp .....	EL-72
Rotor disc (front) .....	FA-10
RRO2LH - Wiring diagram .....	EC-162
RRO2RH - Wiring diagram .....	EC-144

### S

SAE J1930 terminology list .....	GI-43
Screw jack .....	GI-38
Seal - See Exterior .....	BT-22
SEAT - Wiring diagram .....	EL-146
Seat belt inspection .....	MA-23
Seat belt, front .....	RS-3
Seat belt, rear .....	RS-4
Seat, front .....	BT-29
Seat, rear .....	BT-32
Self-diagnosis transfer .....	TF-23
Self-diagnostic results .....	EC-48
SHIFT - Wiring diagram .....	AT-130
Shift lock system .....	AT-129
Shift schedule .....	AT-49
Shift solenoid valve (A/T) .....	AT-73, 76, 78, 83, 91, 96, 99
Shock absorber (rear) .....	RA-12

# ALPHABETICAL INDEX

Side bearing preload (front final drive 4WD).....	PD-20		Throttle position sensor adjustment .....	EC-74
Side trim.....	BT-17		Throttle position switch.....	AT-64
Side window - See Rear side window.....	BT-42		Tie-rod.....	ST-27
Smart entrance control unit .....	EL-227		Tie-rod ball joints .....	ST-27
SMJ (super multiple junction).....	Foldout		Tightening torque of standard bolts .....	GI-42
Spare tire size .....	GI-37		Timing belt .....	EM-12
Spark plug replacement.....	MA-15		Tire rotation.....	MA-20
Speedometer .....	EL-79		Tire size .....	GI-37
Spiral cable .....	RS-9		TLID - Wiring diagram .....	EL-145
Spot lamp.....	EL-72		Tooth contact (front final drive 4WD) .....	PD-26
Spring (Wheelarch) height.....	FA-4		Tooth contact diff.....	PD-48
SROOF - Wiring diagram .....	EL-143		Torque converter clutch solenoid valve .....	AT-83, 86, 91
SRS - See Supplemental Restraint System.....	RS-5		Torque converter installation .....	AT-140
SRS - Wiring diagram .....	RS-20		Tow truck towing.....	GI-41
SRS Trouble diagnoses .....	RS-17		TP/SW - Wiring diagram .....	EC-261
S/SIG - Wiring diagram .....	EC-333		TPS - Wiring diagram .....	EC-123
Stabilizer bar (front) .....	FA-21		TRANSF - Wiring diagram.....	TF-9
Stabilizer bar (rear) .....	RA-13		Transfer dropping resistor.....	TF-61
Stall test (A/T) .....	AT-124		Transfer fluid replacement .....	MA-18
Standardized relay.....	EL-4		Transfer fluid temperature sensor .....	TF-60
START - Wiring diagram.....	EL-27		Transfer indicator relay .....	TF-67
Starter .....	EL-29		Transfer motor .....	TF-45, 73
Starting system .....	EL-26		Transfer motor relay .....	TF-62
Starting torque offset adjustment.....	TF-36		Transfer oil filter .....	TF-73
Steering gear, linkage and transfer gear inspection.....	MA-22		Transfer overhaul .....	TF-76
Steering linkage .....	ST-23		Transfer removal and installation .....	TF-74
Steering switch .....	EL-37		Transfer serial number .....	GI-36
Steering transfer gear.....	ST-14		TRANSMT - Wiring diagram.....	EL-231
Steering wheel and column .....	ST-10		Transverse link (front) .....	FA-22
Steering wheel play .....	ST-6		Tread-FR&RR (Dimensions) .....	GI-37
Steering wheel turning force.....	ST-8		Trim .....	BT-17
Stop lamp.....	EL-52		TURN - Wiring diagram .....	EL-61
STOP/L - Wiring diagram .....	EL-52		Turn signal lamp .....	EL-58
Strut (front).....	FA-20		Two-pole lift .....	GI-40
Sub-oil pump transfer .....	TF-86			ST
Sun gear transfer .....	TF-89			RS
Sun roof, electric.....	EL-143		Under body .....	BT-46
Sunload sensor .....	HA-65			BT
Sunroof .....	BT-33			HA
Supplemental Restraint System.....	RS-5		Vacuum cut valve.....	EC-308
Supplemental restraint system - Wiring diagram.....	RS-20		Vacuum hose (brake system) .....	BR-17
SW/V - Wiring diagram .....	EC-277		Vacuum hose drawing (ECCS) .....	EC-13
Symbols and abbreviations .....	GI-7		Valve clearance.....	EM-50
			Valve guide .....	EM-26
			Valve seat .....	EM-27
			Valve spring .....	EM-28
			Vehicle identification number .....	GI-35
			Vehicle speed sensor (VSS) .....	EC-252
			VENT/V - Wiring diagram .....	EC-242
			Viscosity number (SAE) .....	MA-9
			VSS - Wiring diagram .....	EC-252

T

2-4WD solenoid valve.....	TF-60
Tachometer .....	EL-79
Tail lamp.....	EL-50
TAIL/L - Wiring diagram.....	EL-50
TFTS - Wiring diagram .....	EC-190
THEFT - Wiring diagram.....	EL-208
Theft warning system .....	EL-202
Thermostat.....	LC-10
Three way catalyst precautions .....	GI-4
Throttle position sensor (TPS) .....	EC-123

## ALPHABETICAL INDEX

### W

Wait detection switch .....	TF-61
WARN - Wiring diagram .....	EL-91
Warning buzzer.....	EL-98
Warning lamps .....	EL-90
Washer, front.....	EL-106
Washer, rear.....	EL-114
Water pump .....	LC-9
Water temperature gauge.....	EL-79
Weatherstrip - See Exterior .....	BT-22
Wheel alignment (front) .....	FA-6
Wheel balance .....	MA-20
Wheel bearing (front axle) .....	FA-4
Wheel bearing (rear) .....	RA-5
Wheel hub (front) .....	FA-10
Wheel sensors (ABS).....	BR-32
Wheel size .....	GI-37
Wheelarch height.....	FA-4

Wheelbase (Dimensions) .....	GI-37
Wide open & closed throttle position switch.....	EC-123
Width (Dimensions) .....	GI-37
WINDOW - Wiring diagram .....	EL-172
Window, door .....	BT-11
Window, rear side .....	BT-42
Window, side - See Rear side window.....	BT-42
Windshield .....	BT-41
Windshield washer - See Front washer .....	EL-106
Windshield wiper - See Front wiper .....	EL-106
WIP/R - Wiring diagram.....	EL-117
WIPER - Wiring diagram .....	EL-108
Wiper and washer.....	EL-106
Wiper, front .....	EL-106
Wiper, rear.....	EL-114
Wiring diagrams .....	GI-8
Wrist pin - See Piston pin inspection .....	EM-39