

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-326
 ABS - Wiring diagram BR-36
 ABS sensor rotor..... AX-6, 18
 Absolute pressure sensor EC-123
 A/C air flow..... HA-24
 A/C component layout..... HA-18
 A/C compressor clutch removal and
 installation..... HA-100
 A/C compressor precaution HA-5
 A/C compressor special service tool HA-8
 A/C control operation HA-22
 A/C diagnostic work flow..... HA-41
 A/C harness layout..... HA-26
 A/C HFC134a (R134a) system
 precaution..... HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-95
 A/C HFC134a (R134a) system service
 tools HA-9
 A/C HFC134a system service equip-
 ment precaution..... HA-5
 A/C lubricant (R134a) HA-97
 A/C operational check..... HA-42
 A/C performance chart..... HA-75
 A/C performance test diagnoses HA-73
 A/C relay HA-70
 A/C self-diagnoses HA-35
 A/C service data specification..... HA-108
 A/C system description HA-22
 A/C trouble diagnoses..... HA-26
 A/C, A - Wiring diagram HA-29
 Accelerator control system FE-3
 Accelerator wire adjustment FE-3
 Air bag..... RS-8
 Air bag disposal RS-16
 Air bag precautions GI-2
 Air bleeding for brake system BR-6
 Air cleaner filter replacement..... MA-17
 Air conditioner cut control EC-23
 Air flow meter - See Mass air flow
 sensor EC-115
 Air mix. door control linkage adjustment..... HA-54
 Air mix. door motor HA-52, 94
 Air spoiler, rear BT-22
 All - mode 4WD system..... TF-9
 Alternator..... SC-12
 Ambient sensor HA-84
 Angular tightening application EM-2
 Antenna - See Power antenna EL-126
 Anti-lock brake system - Wiring
 diagram..... BR-36
 AP/SEN - Wiring diagram EC-126
 ASCD (automatic speed control device) EL-136
 ASCD - Wiring diagram EL-140
 A/T - Wiring diagram - AT - FTS..... AT-94
 A/T - Wiring diagram - AT - INH/SW..... AT-89
 A/T - Wiring diagram - AT - MAIN..... AT-85

A/T - Wiring diagram - AT - VSS A/T AT-99
 A/T control..... EC-334
 A/T diagnosis communication line EC-422
 A/T fluid temperature sensor..... AT-96
 A/T shift lock system..... AT-224
 A/T shift lock system - Wiring diagram AT-225
 A/T Wiring diagram - AT - ENG SS AT-104
 A/T Wiring diagram AT - 1ST..... AT-109
 A/T Wiring diagram AT - 2ND..... AT-115
 A/T Wiring diagram AT - 3RD AT-121
 A/T Wiring diagram AT - 4TH..... AT-128
 A/T Wiring diagram AT - BA/FTS AT-176
 A/T Wiring diagram AT - LPSV AT-148
 A/T Wiring diagram AT - NONDTC AT-183
 A/T Wiring diagram AT - OVRCSV AT-171
 A/T Wiring diagram AT - SSV/A AT-154
 A/T Wiring diagram AT - SSV/B..... AT-159
 A/T Wiring diagram AT - TCCSIG..... AT-141
 A/T Wiring diagram AT - TCV AT-135
 A/T Wiring diagram AT - TPS..... AT-165
 A/T Wiring diagram AT - VSSMTR..... AT-181
 AT/C - Wiring diagram..... EC-335
 ATDIAG - Wiring diagram EC-423
 ATP switch TF-78
 ATP warning lamp TF-71, 72
 Audio EL-118
 AUDIO - Wiring diagram..... EL-120
 Audio and A/C control removal and
 installation - See Instrument panel BT-13
 Auto air conditioner - Wiring diagram HA-29
 Automatic amplifier HA-33, 45
 Automatic speed control system - See
 ASCD EL-136
 Automatic transmission fluid
 replacement..... MA-21
 Automatic transmission number GI-38
 Auxiliary air control (AAC) valve EC-323
 Axle housing (rear) AX-18

B

Back door..... BT-8
 Back door opener - See Back door..... BT-8
 Back door trim BT-21
 Back-up lamp..... EL-38
 BACK/L - Wiring diagram EL-38
 Ball joint (front)..... SU-12
 Battery SC-3
 Block heater..... EM-43
 Blower motor HA-61
 Body alignment..... BT-45
 BPT valve..... EC-287
 Brake booster..... BR-17
 Brake fluid change BR-5
 Brake fluid level MA-25
 Brake fluid level and line check BR-5
 Brake hydraulic line..... BR-7
 Brake inspection MA-25
 Brake lines and cables inspection..... MA-25
 Brake lining wear temporary checking MA-26

ALPHABETICAL INDEX

Brake master cylinder BR-14
 Brake pedal BR-12
 Bulb specifications EL-248
 Bumper, front BT-5
 Bumper, rear BT-8
 BYPS/V - Wiring diagram EC-412, 418

C

Camshaft inspection EM-28
 Camshaft position sensor (CMPS) EC-269
 Canister - See EVAP canister EC-24
 Center case (Transfer) TF-88
 CHARGE - Wiring diagram SC-10
 Charging system SC-9
 Chassis and body maintenance MA-21
 CHIME - Wiring diagram EL-85
 CIGAR - Wiring diagram EL-109
 Cigarette lighter EL-109
 Circuit breaker EL-13
 CKPS - Wiring diagram EC-266, 359
 Closed loop control (Left bank) EC-348
 Closed loop control (Right bank) EC-348
 Closed throttle position switch EC-329
 Clutch drum (Transfer) TF-90
 Clutch pressure switch (Transfer) TF-77
 CMPS - Wiring diagram EC-272
 Coil spring (front) SU-8
 Coil spring (rear) SU-17
 Collision diagnosis RS-43
 Combination lamp, front, removal and installation BT-5
 Combination lamp, rear, removal and installation BT-22
 Combination meter EL-58
 Combination meter removal and installation - See Instrument panel BT-13
 Combination switch EL-18
 COMPAS - Wiring diagram EL-72
 Compass EL-71
 Compression pressure EM-12
 Compressor clutch removal and installation HA-100
 Compressor precaution HA-5
 Compressor special service tool HA-8
 Connecting rod EM-45
 Connecting rod bearing clearance EM-50
 Connecting rod bushing clearance EM-50
 Connector inspection GI-17
 Console box - See Instrument panel BT-13
 CONSULT for ABS BR-42
 CONSULT for all-mode 4WD TF-28
 CONSULT for ECCS EC-66
 CONSULT general information GI-34
 Control lever (Transfer) TF-85
 Control valve (A/T) AT-256
 Control valve (Transfer) TF-93
 Converter housing installation AT-235
 Coolant mixture ratio MA-12
 Coolant replacement MA-14

Cooling circuit (engine) LC-8
 Crank angle sensor built into distributor -
 See Camshaft position sensor EC-269 GI
 Crankcase emission control system -
 See positive crankcase ventilation EC-30
 Crankshaft EM-48 MA
 Crankshaft position sensor (OBD) EC-264
 Crankshaft position sensor (OBD) cog
 chipping EC-357 EM
 Cruise control - See ASCD EL-136
 Cylinder block EM-42 LC
 Cylinder block boring EM-47
 Cylinder head EM-24
 Cylinder head bolt tightening EM-36 EC

D

Data link connector for Consult EC-66
 Daytime light system EL-26 AT
 Daytime running light - See Daytime
 light system EL-26 TF
 DEF - Wiring diagram EL-112
 Detonation sensor - See Knock sensor EC-260
 Diagnostic trouble code (DTC) for
 ECCS OBD system EC-2, 45 PD
 Diagnostic trouble code (DTC) inspection
 priority chart EC-87 AX
 Differential carrier assembly PD-26, 52
 Differential carrier disassembly PD-39
 Differential gear oil replacement MA-24 SU
 Dimensions GI-38
 Distributor EC-22
 Distributor ignition (DI) system EC-22 BR
 D/LOCK - Wiring diagram EL-168
 Dome light - See Interior lamp EL-52
 Door glass BT-11 ST
 Door lock BT-11
 Door mirror BT-44
 Door trim BT-19 RS
 Door, front BT-11
 Door, rear BT-12
 Drive belt inspection MA-13 BT
 Drive chain (Transfer) TF-90
 Drive pinion diff. inspection PD-19, 42
 Drive pinion height PD-21, 48 HA
 Drive plate runout EM-51
 Drive shaft (front) AX-10
 Dropping resistor (A/T) AT-151 SC
 DTC WORK SUPPORT EC-75
 DTRL - Wiring diagram EL-29
 Dual pressure switch HA-71 EL

E

ECCS basic inspection EC-85
 ECCS circuit diagram EC-16
 ECCS component parts location EC-14
 ECCS fail-safe system EC-88

IDX

ALPHABETICAL INDEX

ECCS on board diagnostic system.....	EC-44	Final drive removal and installation	PD-38
ECCS symptom matrix chart	EC-89	Finisher, interior - See Trim	BT-17
ECCS system diagram and chart	EC-17	Fluid temperature sensor (A/T)	AT-96
ECM input/output signal.....	EC-98	Fluids.....	MA-11
ECTS - Wiring diagram.....	EC-140, 155	FO2H-L - Wiring diagram.....	EC-197
EGR control (EGRC) - BPT valve.....	EC-284	FO2H-R - Wiring diagram	EC-196
EGR control (EGRC) - solenoid valve	EC-362	Fog lamp, front	EL-39
EGR control valve.....	EC-283, 378	Fog lamp, front, removal and installation	BT-5
EGR temperature sensor	EC-367	Forward clutch.....	AT-275
EGR/TS - Wiring diagram	EC-370	F/PUMP - Wiring diagram.....	EC-441
EGRC/V - Wiring diagram.....	EC-364	Freeze frame data.....	EC-46
EGRC1 - Wiring diagram.....	EC-280, 376	FRO2LH - Wiring diagram.....	EC-162, 182, 190
Electric sun roof.....	EL-130	FRO2RH - Wiring diagram	EC-161, 181, 189
Electrical diagnoses	GI-20	Front axle.....	AX-2
Electrical ignition system.....	EC-22	Front bumper	BT-5
Electrical unit.....	Foldout	Front case (Transfer)	TF-98
Electrical units location	EL-229	Front combination lamp removal and installation	BT-5
Engine compartment.....	BT-46	Front disc brake	BR-20
Engine control module (ECM).....	EC-337	Front door.....	BT-11
Engine coolant temperature sensor (ECTS).....	EC-138, 153	Front drive shaft (Transfer).....	TF-90
Engine oil filter replacement	MA-18	Front final drive disassembly (4WD).....	PD-14
Engine oil precautions.....	GI-4	Front final drive pre-inspection (4WD).....	PD-14
Engine oil replacement.....	MA-17	Front final drive removal and installa- tion (4WD)	PD-14
Engine outer component parts	EM-9	Front fog lamp	EL-39
Engine removal.....	EM-39	Front fog lamp removal and installation	BT-5
Engine room - See Engine compartment	BT-46	Front heated oxygen sensor (HO2S) (Left bank).....	EC-158, 166, 172, 178, 187
Engine serial number	GI-38	Front heated oxygen sensor (HO2S) (Right bank)	EC-158, 166, 172, 178, 187
EVAP canister	EC-25	Front heated oxygen sensor heater (Left bank)	EC-194
EVAP canister purge volume control solenoid valve	EC-24, 299, 387	Front heated oxygen sensor heater (Right bank)	EC-194
EVAP canister vent control valve.....	EC-305, 394, 404	Front oxygen sensor (O2S) monitor	EC-58
EVAP control system (small leak) diagnosis	EC-292, 380	Front revolution sensor (Transfer)	TF-78
EVAP control system pressure sensor.....	EC-311	Front seat.....	BT-29
EVAP control system purge flow moni- toring diagnosis	EC-399	Front seat belt	RS-3
EVAP vapor lines inspection.....	MA-20	Front suspension.....	SU-2
Evaporative emission (EVAP) system.....	EC-24	Front washer.....	EL-91
Exhaust gas recirculation (EGR) valve	EC-276, 373	Front wiper	EL-91
Exhaust system	FE-8	Fuel cut control (at no load & high engine speed).....	EC-24
Exhaust system inspection	MA-21	Fuel filler lid	BT-8
Exterior.....	BT-22	Fuel filter replacement	MA-16
F			
4WD shift indicator lamp.....	TF-68	Fuel gauge.....	EL-58
4WD shift switch	TF-77	Fuel injection system (Left bank).....	EC-237, 244
4WD solenoid valve	TF-77	Fuel injection system (Right bank)	EC-237, 244
4WD warning lamp	TF-12	Fuel line inspection.....	MA-16
Fan control amp.	HA-63	Fuel precautions.....	GI-5
Fast idle cam (FIC) inspection and adjustment	EC-34	Fuel pressure check.....	EC-31
F/FOG - Wiring diagram	EL-40	Fuel pressure regulator	EC-32
FICD - Wiring diagram	EC-449	Fuel pressure release	EC-31
Final drive disassembly.....	PD-38	Fuel pump	EC-439
Final drive pre-inspection.....	PD-38	Fuel system	FE-4
		Fuel tank vacuum relief valve	EC-25
		FUELLH - Wiring diagram	EC-240, 247
		FUELRH - Wiring diagram.....	EC-239, 246
		Fuse	EL-13

ALPHABETICAL INDEX

Fuse block Foldout
 Fusible link EL-13

G

Garage jack and safety stand GI-41
 Gauges EL-58
 Generator - See Alternator SC-12
 Generic scan tool (GST) EC-79
 Glass BT-11
 Grease MA-11
 Ground distribution EL-14

H

Harness connector EL-3
 Harness connector inspection GI-17
 Harness layout EL-232
 Hazard warning lamp EL-42
 Headlamp EL-21
 Headlining - See Roof trim BT-20
 Heated seat BT-31, EL-135
 Height (Dimensions) GI-38
 HFC134a (R134a) system precaution HA-2
 HFC134a (R134a) system service procedure HA-95
 HFC134a (R134a) system service tools HA-9
 HFC134a system service equipment precaution HA-5
 High clutch AT-273
 H/LAMP - Wiring diagram EL-22
 Hood BT-5
 Horn EL-108
 HORN - Wiring diagram EL-108
 How to erase DTC for ECCS OBD system EC-55
 HSEAT - Wiring diagram EL-135
 Hydraulic lash adjuster inspection EM-33

I

IACV-AAC valve EC-323
 IACV-FICD solenoid valve EC-449
 IATS - Wiring diagram EC-135
 Identification plate GI-37
 Idle air control valve (IACV) EC-323
 Idle mixture ratio EC-35
 Idle speed EC-35
 IGN/SG - Wiring diagram EC-353
 Ignition timing EC-35
 Ignition wire inspection EC-259
 ILL - Wiring diagram EL-49
 Illumination EL-47
 In vehicle sensor HA-87
 Inhibitor switch AT-91, 222
 INJECT - Wiring diagram EC-429
 injector EC-434

Injector removal and installation EC-33
 Instrument panel BT-13
 INT/L - Wiring diagram EL-54
 Intake air temperature sensor EC-132
 Intake door control linkage adjustment HA-58
 Intake door motor HA-56
 Intake sensor HA-92
 Integrated homelink transmitter EL-227
 Interior BT-17
 Interior lamp EL-52
 Internal gear (Transfer) TF-99

J

Jacking points GI-40, 41
 Journal bearing assembly (propeller shaft) PD-7
 Journal bearing disassembly (propeller shaft) PD-6
 Junction box (J/B) Foldout

K

Keyless entry system - See Multi-remote control system EL-180
 Knock sensor (KS) EC-260
 Knuckle spindle AX-9
 KS - Wiring diagram EC-261

L

Length (Dimensions) GI-38
 License lamp EL-34
 Lifting points GI-42
 Limited slip diff. adjustment PD-45
 Limited slip diff. assembly PD-46
 Limited slip diff. disassembly PD-43
 Limited slip diff. inspection PD-44
 Line pressure solenoid valve AT-132, 145, 150
 Line pressure switch (Transfer) TF-77
 Line pressure test (A/T) AT-57
 Liquid gasket application EM-2
 Location of electrical units EL-229
 Lock, door BT-11
 Low and reverse brake AT-279
 LSV (Load sensing valve) BR-9
 Lubricant (R134a) A/C HA-97
 Lubricants MA-11
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood latches MA-27
 Luggage room lamp EL-52

ALPHABETICAL INDEX

M

MAFS - Wiring diagram..... EC-119
 Magnet clutch..... HA-67, 100
 MAIN - Wiring diagram EC-108
 Main oil pump (Transfer) TF-96
 Mainshaft (Transfer)..... TF-90
 Maintenance (engine) MA-13
 MAJOR OVERHALL..... AT-237
 Major overhaul (Transfer) TF-85
 Malfunction indicator lamp (MIL)..... EC-57
 MAP/BARO switch solenoid valve EC-339
 Mass air flow sensor (MAFS)..... EC-115
 Master cylinder (brake) BR-14
 Meter..... EL-58
 METER - Wiring diagram EL-61
 MIL & Data link connectors circuit EC-454
 MIL/DL - Wiring diagram EC-454
 MIRROR - Wiring diagram EL-131
 Mirror defogger..... EL-110
 Mirror, door BT-44
 Mirror, out side..... BT-44
 Misfire..... EC-255
 Mode door control linkage adjustment..... HA-49
 Mode door motor..... HA-47
 Model variation GI-36
 Molding - See Exterior..... BT-22
 MULTI - Wiring diagram..... EL-183
 Multi-remote control system EL-180
 Multiport fuel injection (MFI) system..... EC-20
 Multiport fuel injection precautions..... GI-4

N

Neutral-4LO switch TF-78
 NVH troubleshooting (AX) AX-3, 17
 NVH troubleshooting (PD) PD-3
 NVH troubleshooting (ST) ST-6
 NVH troubleshooting (SU) SU-3, 13

O

Oil change (capacity) MA-11
 Oil filter (Transfer) TF-83
 Oil pan (engine) EM-13
 Oil pressure (engine) LC-3
 Oil pump (A/T)..... AT-252
 Oil pump (engine)..... LC-4
 Oil pump regulator valve (engine)..... LC-5
 Oil seal replacement (engine) EM-22
 Oil seal replacement (front final drive
 4WD)..... PD-11
 Oil seal replacement (front of final
 drive)..... PD-35
 Out side mirror..... BT-44
 Overdrive control switch..... AT-222
 Overrun clutch..... AT-275

Overrun clutch solenoid valve AT-132, 145, 173
 Oversize piston EM-47

P

P/ANT - Wiring diagram..... EL-127
 Park/Neutral position switch..... EC-425
 Parking brake control BR-28
 Parking lamp..... EL-34
 PCV (positive crankcase ventilation) EC-30
 PGC/V - Wiring diagram EC-302, 390
 Pilot bushing replacement - See Pilot
 converter EM-53
 Pinion bearing preload diff. PD-21
 Pinion gear height diff. PD-21, 48
 Piston assembly..... EM-51
 Piston pin inspection..... EM-44
 Piston ring inspection EM-45
 Piston to bore clearance..... EM-46
 Planetary carrier (Transfer)..... TF-99
 PNP/SW - Wiring diagram EC-427
 POWER - Wiring diagram EL-7
 Power antenna..... EL-126
 Power door lock..... EL-165
 Power door mirror EL-131
 Power seat..... EL-133
 Power steering fluid level..... MA-27, ST-8
 Power steering gear ST-24
 Power steering hydraulic pressure ST-10
 Power steering oil pressure switch EC-445
 Power steering oil pump..... ST-34
 Power steering system bleeding ST-9
 Power supply routing EL-6
 Power transistor & ignition coil EC-350
 Power window..... EL-157
 PRE/SE - Wiring diagram EC-314
 Precautions (General) GI-2
 Pressure test (A/T)..... AT-57
 Propeller shaft PD-2
 Propeller shaft greasing..... MA-23
 Propeller shaft inspection MA-23
 Propeller shaft on vehicle service..... PD-5
 Propeller shaft vibration PD-5
 PST/SW - Wiring diagram..... EC-445

R

Rack retainer adjustment..... ST-8
 Radiator LC-12
 Radio - See Audio..... EL-118
 Rear air spoiler BT-22
 Rear axle AX-16
 Rear bumper..... BT-8
 Rear case (Transfer)..... TF-88
 Rear combination lamp removal and
 installation BT-22
 Rear cover packing replacement diff. PD-12
 Rear door..... BT-12

ALPHABETICAL INDEX

Rear drum brake	BR-24
Rear heated oxygen sensor (HO2S)	EC-200, 208, 216, 224
Rear heated oxygen sensor (HO2S) heater	EC-231
Rear seat	BT-32
Rear seat belt	RS-4
Rear side window	BT-43
Rear suspension	SU-13
Rear washer	EL-100
Rear window defogger	EL-110
Rear wiper	EL-100
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-95
Refrigerant general precaution	HA-2
Refrigerant lines	HA-104
Refrigeration cycle	HA-11
Removal and installation (A/T)	AT-234
Removal and installation (Transfer)	TF-84
Reverse clutch	AT-269
Revolution sensor (A/T)	AT-101
Ring gear diff. inspection	PD-19, 42
RO2H-L - Wiring diagram	EC-234
RO2H-R - Wiring diagram	EC-233
Road wheel size	GI-39
Roof trim	BT-20
Room lamp - See Interior lamp	EL-52
RRO2LH - Wiring diagram	EC-204, 212, 220, 227
RRO2RH - Wiring diagram	EC-203, 211, 219, 226

S

SAE J1930 terminology list	GI-45
Screw jack	GI-40
Seal - See Exterior	BT-22
SEAT - Wiring diagram	EL-133
Seat belt inspection	MA-28, RS-5
Seat belt, front	RS-3
Seat belt, rear	RS-4
Seat, front	BT-29
Seat, rear	BT-32
Self-diagnosis (Transfer)	TF-25
Self-diagnostic results	EC-58
SHIFT - Wiring diagram	AT-225
Shift lock system	AT-224
Shift schedule	AT-313
Shift solenoid valve A (A/T)	AT-111, 122, 132, 145, 156
Shift solenoid valve B (A/T)	AT-111, 116, 132, 145, 161
Shock absorber (rear)	SU-17
Side bearing preload (front final drive 4WD)	PD-20
Side trim	BT-17
Side window - See Rear side window	BT-43
Smart entrance control unit	EL-223
SMJ (super multiple junction)	Foldout

Spare tire size	GI-39
Spark plug replacement	MA-18
Speedometer	EL-58
Spot lamp	EL-52
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-130
SRS - See Supplemental Restraint System	RS-8
SRS - Wiring diagram	RS-25
S/SIG - Wiring diagram	EC-435
Stabilizer bar (front)	SU-10
Stabilizer bar (rear)	SU-19
Stall test (A/T)	AT-54
Standardized relay	EL-4
START - Wiring diagram	SC-7
Starter	SC-8
Starting system	SC-6
Starting torque offset adjustment	TF-36
Steering gear, linkage and transfer gear inspection	MA-26
Steering linkage	ST-24
Steering switch	EL-20
Steering transfer gear	ST-15
Steering wheel and column	ST-11
Steering wheel play	ST-7
Steering wheel turning force	ST-9
Stop lamp	EL-36
STOP/L - Wiring diagram	EL-36
Strut (front)	SU-8
Sub-oil pump (Transfer)	TF-96
Sun gear (Transfer)	TF-99
Sun roof, electric	EL-130
Sunload sensor	HA-89
Sunroof	BT-33
Supplemental Restraint System	RS-8
Supplemental restraint system - Wiring diagram	RS-25
SW/V - Wiring diagram	EC-342
Symbols and abbreviations	GI-7
System readiness test (SRT) code	EC-46

T

2-4WD shift solenoid valve	TF-77
Tachometer	EL-58
Tail lamp	EL-34
TAIL/L - Wiring diagram	EL-34
Tank fuel temperature sensor	EC-251
TCM circuit diagram	AT-11
TCM inspection table	AT-80
TCM inspection table (Transfer)	TF-47
TFTS - Wiring diagram	EC-253
THEFT - Wiring diagram	EL-204
Theft warning system	EL-197
Thermometer	EL-71
Thermostat	LC-10
Three way catalyst function (Left bank)	EC-288
Three way catalyst function (Right bank)	EC-288
Three way catalyst precautions	GI-4

ALPHABETICAL INDEX

Throttle position sensor (TPS)	EC-143
Throttle position sensor adjustment	EC-85
Throttle position switch	EC-329, AT-168, 223
Tie-rod	ST-28
Tie-rod ball joints	ST-28
Tightening torque of standard bolts	GI-44
Timing belt	EM-16
Tire rotation	MA-24
Tire size	GI-39
TLID - Wiring diagram	EL-132
Tooth contact (front final drive 4WD)	PD-25
Tooth contact diff.	PD-51
Torque converter installation	AT-235
Torque convertor clutch solenoid valve	AT-132, 137, 145
Tow truck towing	GI-42
Towing point	GI-43
TP/SW - Wiring diagram	EC-331
TPS - Wiring diagram	EC-149
Transfer dropping resistor	TF-78
Transfer fluid replacement	MA-22
Transfer fluid temperature sensor	TF-77
Transfer indicator lamp relay	TF-72
Transfer motor	TF-47, 82
Transfer motor relay	TF-79
Transfer serial number	GI-38
TRANSMT - Wiring diagram	EL-227
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-17
Trouble diagnoses	GI-30
Trunk lid opener, electric	EL-132
TURN - Wiring diagram	EL-44
Turn signal lamp	EL-42
Two trip detection logic	EC-44
Two-pole lift	GI-42

U

Under body	BT-48
------------------	-------

V

Vacuum cut valve	EC-24, 421
Vacuum cut valve bypass valve ...	EC-24, 410, 415
Vacuum hose (brake system)	BR-19
Vacuum hose drawing (ECCS)	EC-18
Valve clearance	EM-55

Valve guide	EM-30
Valve seat	EM-31
Valve spring	EM-32
Vehicle identification number	GI-37
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle speed sensor (VSS)	EC-319
VENT/V - Wiring diagram	EC-307, 396, 407
Viscosity number (SAE)	MA-12
VSS - Wiring diagram	EC-321

W

Wait detection switch	TF-78
WARN - Wiring diagram	EL-76
Warning chime	EL-83
Warning lamps	EL-75
Washer, front	EL-91
Washer, rear	EL-100
Water pump	LC-9
Water temperature gauge	EL-58
Weatherstrip - See Exterior	BT-22
Wheel balance	MA-24
Wheel bearing (front)	AX-4
Wheel bearing (rear)	AX-17
Wheel hub (front)	AX-6
Wheel sensors (ABS)	BR-80
Wheel size	GI-39
Wheelarch height	SU-5
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position switch	EC-143
Width (Dimensions)	GI-38
WINDOW - Wiring diagram	EL-160
Window, door	BT-11
Window, rear side	BT-43
Window, side - See Rear side window	BT-43
Windshield	BT-41
WIP/R - Wiring diagram	EL-103
WIPER - Wiring diagram	EL-93
Wiper, front	EL-91
Wiper, rear	EL-100
Wiring Diagram (Cell code) list	EL-249
Wiring diagram (Transfer)	TF-15
Wiring diagrams	GI-8
Wrist pin - See Piston pin inspection	EM-44