

SECTION **HRN**  
HORN

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

CONTENTS

<b>COMPONENT DIAGNOSIS</b> .....	2	<b>FOR USA AND CANADA</b> .....	8
<b>HORN</b> .....	2	FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	8
<b>EXCEPT FOR MEXICO</b> .....	2	<b>FOR MEXICO</b> .....	8
EXCEPT FOR MEXICO : Wiring Diagram - HORN		FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	8
- .....	2	<b>ON-VEHICLE REPAIR</b> .....	9
<b>FOR MEXICO</b> .....	4	<b>HORN</b> .....	9
FOR MEXICO : Wiring Diagram - HORN - .....	5	Exploded View .....	9
<b>PRECAUTION</b> .....	8	Removal and Installation .....	9
<b>PRECAUTIONS</b> .....	8		

HRN

# HORN

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS


HORN

EXCEPT FOR MEXICO

EXCEPT FOR MEXICO : Wiring Diagram - HORN -

INFOID:000000001724843

HORN (EXCEPT FOR MEXICO)

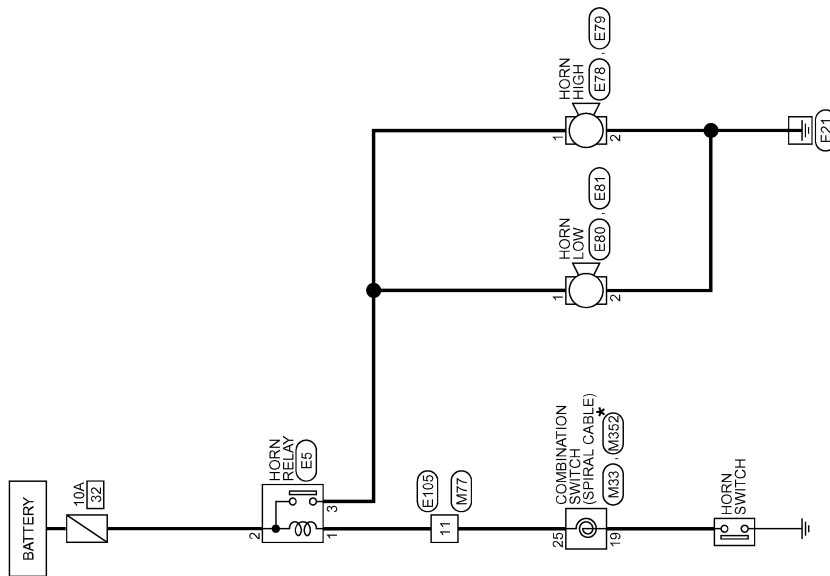

\* This connector is not shown in "Harness Layout".

















2007/07/13

JCLWM0929GE

# HORN

## < COMPONENT DIAGNOSIS >

### HORN (EXCEPT FOR MEXICO)

Connector No. E5	Connector Name HORN RELAY	Connector Type -			Terminal No.	Color of Wire	Signal Name [Specification]
					1	GR	-
					2	P	-
					3	G	-
Connector No. E60	Connector Name HORN LOW	Connector Type P01FB-A			Terminal No.	Color of Wire	Signal Name [Specification]
					1	G	-
Connector No. E78	Connector Name HORN HIGH	Connector Type P01FB-A			Terminal No.	Color of Wire	Signal Name [Specification]
					1	G	-
Connector No. E79	Connector Name HORN HIGH	Connector Type P01FB-A			Terminal No.	Color of Wire	Signal Name [Specification]
					2	B	-
Connector No. E105	Connector Name WIRE TO WIRE	Connector Type TH80FW-C516-TM4			Terminal No.	Color of Wire	Signal Name [Specification]
					11	GR	-
Connector No. E81	Connector Name HORN LOW	Connector Type P01FE-A			Terminal No.	Color of Wire	Signal Name [Specification]
					2	B	-
Connector No. M33	Connector Name COMBINATION SWITCH (SPIRAL CABLE)	Connector Type TK8BFGY-1V			Terminal No.	Color of Wire	Signal Name [Specification]
					25	GR	-
Connector No. M77	Connector Name WIRE TO WIRE	Connector Type TH80MY-C516-TM4			Terminal No.	Color of Wire	Signal Name [Specification]
					11	GR	-

JCLW0930GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
HRN  
M  
N  
O  
P



# HORN

< COMPONENT DIAGNOSIS >

---

**HORN (EXCEPT FOR MEXICO)**

Connector No.	M332
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK0BE GY

Terminal No.	19	Color of Wire	-	Signal Name (Specification)	-
--------------	----	---------------	---	-----------------------------	---

FOR MEXICO


JCLWM0931GE

# HORN

< COMPONENT DIAGNOSIS >

## FOR MEXICO : Wiring Diagram - HORN -

INFOID:000000001848928

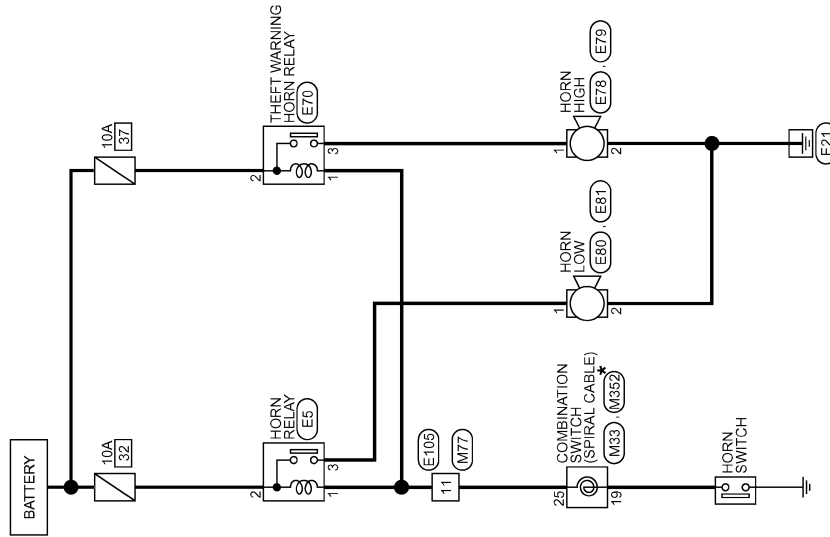

\*: This connector is not shown in "Harness Layout".

HORN (FOR MEXICO)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
HRN  
M  
N  
O  
P


 














2007/07/13

JCLWM0932GE

# HORN

## < COMPONENT DIAGNOSIS >

### HORN (FOR MEXICO)

Connector No. E5	Connector Name HORN RELAY	Connector Type -	 	Terminal No.	Color of Wire	Signal Name [Specification]
				1	GR	-
				2	P	-
				3	G	-
Connector No. E78	Connector Name HORN HIGH	Connector Type F01FB-A	 	Terminal No.	Color of Wire	Signal Name [Specification]
				1	G	-
Connector No. E79	Connector Name HORN HIGH	Connector Type F01FB-A	 	Terminal No.	Color of Wire	Signal Name [Specification]
				2	B	-
Connector No. E70	Connector Name THEFT WARNING HORN RELAY	Connector Type M03FW-R-LC	 	Terminal No.	Color of Wire	Signal Name [Specification]
				1	V	-
				2	R	-
				3	G	-
Connector No. E81	Connector Name HORN LOW	Connector Type P01FB-A	 	Terminal No.	Color of Wire	Signal Name [Specification]
				2	B	-
Connector No. E80	Connector Name HORN LOW	Connector Type P01FE-A	 	Terminal No.	Color of Wire	Signal Name [Specification]
				1	G	-
Connector No. M33	Connector Name COMBINATION SWITCH (SPIRAL CABLE)	Connector Type TK08FGY-1V	 	Terminal No.	Color of Wire	Signal Name [Specification]
				25	GR	-
Connector No. E105	Connector Name WIRE TO WIRE	Connector Type TH03FW-GS16-TM4	 	Terminal No.	Color of Wire	Signal Name [Specification]
				11	GR	-

JCLW0933GE

 
# HORN

## < COMPONENT DIAGNOSIS >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

### HORN (FOR MEXICO)

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	THEB0WV-CS (F-TM4)



Terminal No.	11	GR	—
Color of Wire			
Signal Name [Specification]			

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY



Terminal No.	19	—	—
Color of Wire			
Signal Name [Specification]			

HRN

JCLWM0934GE

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### FOR USA AND CANADA

#### FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003302815

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

#### FOR MEXICO

#### FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003302819

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**



# HORN


< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### HORN

#### Exploded View

INFOID:000000001724845

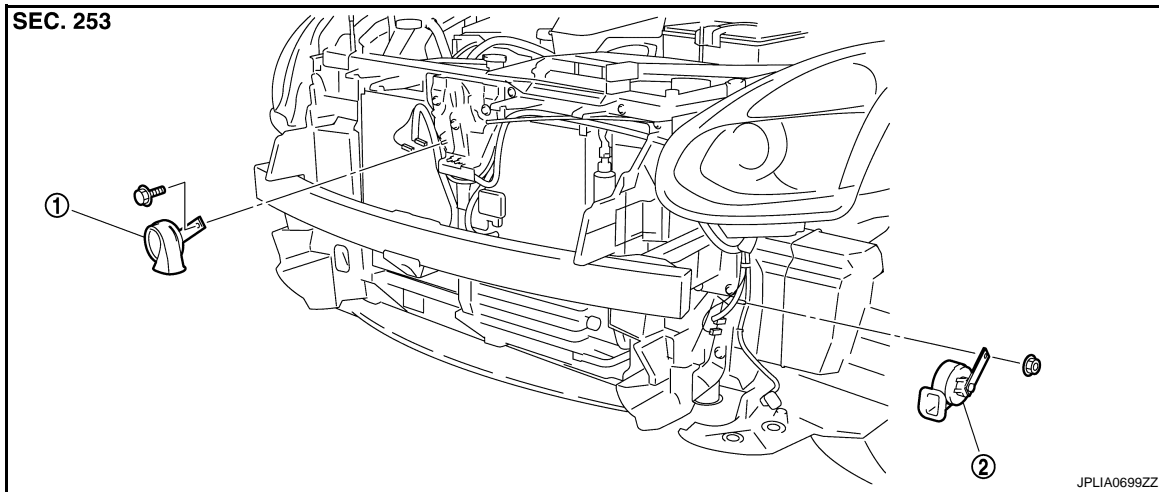

1. Horn (LO)

2. Horn (HI)

#### Removal and Installation

INFOID:000000001724846

##### REMOVAL

###### Horn (LO)

1. Remove the front bumper fascia upper clips. And lift the front bumper fascia up and hold to keep a service area. Refer to [EXT-13. "Exploded View"](#).
2. Disconnect the horn (LO) connector.
3. Remove the horn mounting bolt, and remove the horn (LO) from the vehicle.

###### Horn (HI)

1. Remove the fender protector LH (front). Refer to [EXT-22. "Exploded View"](#).
2. Disconnect the horn (HI) connector.
3. Remove the horn mounting nut, and remove the horn (HI) from the vehicle.

##### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

HRN