

ALPHABETICAL INDEX

SECTION **IDX**

G]

MA

EN

LC

EC

ED

CL

WT

AT

FA

PA

BR

OT

PS

BT

HA

EN

IDX

ALPHABETICAL INDEX

A

ABS actuator	BR-38
ABS (anti-lock brake system).....	BR-34
ABS circuit diagram.....	BR-44
ABS component parts and connector locations	BR-43
ABS control unit	BR-37
ABS self-diagnosis	BR-49
ABS symptom chart	BR-51
ABS system components	BR-35
ABS trouble diagnoses.....	BR-41
ABS wheel sensors	BR-36
ABS wiring diagram.....	BR-45
A/C air flow.....	HA-13
A/C circuit diagram.....	HA-33
A/C component layout.....	HA-12
A/C compressor clutch removal and installation	HA-60
A/C compressor mounting.....	HA-59
A/C compressor precaution.....	HA-5
A/C compressor special service tool.....	HA-6
A/C control linkage adjustment	HA-49
A/C control operation	HA-14
A/C diagnostic work flow.....	HA-15
A/C harness layout.....	HA-31
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-53
A/C HFC134a (R134a) system service tools.....	HA-7
A/C HFC134a system service equipment precaution	HA-9
A/C lubricant (R134a).....	HA-55
A/C lubrication oil	HA-55
A/C operational check	HA-16
A/C performance chart.....	HA-26
A/C performance test diagnoses.....	HA-24
A/C pressure switch	HA-11
A/C relay.....	HA-49
A/C service data specification.....	HA-66
A/C switch	HA-48
A/C symptom chart.....	HA-18
A/C trouble diagnoses.....	HA-15
A/C wiring diagram.....	HA-36
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag	RS-13
Air bag disposal.....	RS-17
Air bag module	RS-13
Air bag precautions	GI-2
Air bag removal and installation.....	RS-13
Air bleeding for brake system	BR-5
Air cleaner filter replacement (GA engine).....	MA-22

Air cleaner filter replacement (SR engine).....	MA-14
Air conditioner cut control (GA engine).....	EC-245
Air conditioner cut control (SR engine).....	EC-18
Air conditioning - See A/C.....	HA-11
Air flow meter - See Mass air flow sensor (GA engine).....	EC-318
Air flow meter - See Mass air flow sensor (SR engine).....	EC-93
Air mix door control linkage adjustment.....	HA-50
Air spoiler, rear - See Rear air spoiler	BT-27
Alternator.....	EL-38
Angular tightening application	EM-2
Anti-freeze coolant	MA-8
Anti-freeze coolant mixture ratio	MA-9
ASCD (automatic speed control device).....	EL-170
AT control unit	AT-124
AT diagnosis communication line (SR engine)	EC-198
AT fluid temperature sensor	AT-128
AT removal and installation	AT-155
AT self-diagnoses	AT-68
AT shift lock system	AT-139
AT trouble diagnoses (RE4F03V)	AT-36
AT trouble diagnoses (RL4F03A).....	AT-17
Audio	EL-151
Audio and A/C control removal and installation - See Instrument panel	BT-12
Automatic transaxle number	GI-36
Automatic transmission fluid	MA-8
Automatic transmission fluid replacement	MA-26
Auxiliary air control (AAC) (GA engine)	EC-395
Auxiliary air control (AAC) (SR engine)	EC-170

B

Back-up lamp	EL-57
Back-up lamp switch (MT) -See reverse lamp switch	MT-7
Ball joint front axle.....	FA-27
Battery	EL-21
Baulk ring (MT) (RS5F31A)	MT-12
Baulk ring (MT) (RS5F32V)	MT-32
Belt inspection (drive belt) (GA engine).....	MA-18
Belt inspection (drive belt) (SR engine)	MA-10
Blower motor	HA-48
Blower resistor	HA-48
Board-on lift	GI-38
Body alignment	BT-38
Boring/honing cylinder block (GA engine).....	EM-101
Boring/honing cylinder block (SR engine)	EM-54
Brake booster	BR-14
Brake control valve (Proportioning valve)	BR-8
Brake fluid	MA-8

ALPHABETICAL INDEX

Brake fluid change	BR-4		Compressor clutch removal and installation	HA-60
Brake fluid level.....	MA-27		Compressor descriptioin.....	HA-59
Brake fluid level and line check	BR-4		Compressor mounting.....	HA-59
Brake hydraulic line.....	BR-6		Compressor precaution	HA-5
Brake inspection.....	MA-27		Compressor special service tool	HA-6
Brake lines and cables inspection	MA-27		Connecting rod bearing clearance (GA engine)	EM-103
Brake lining temporary checking.....	MA-28		Connecting rod bearing clearance (SR engine)	EM-56
Brake master cylinder	BR-11		Connecting rod bushing clearance (GA engine)	EM-104
Brake pedal	BR-10		Connecting rod bushing clearance (SR engine)	EM-57
Bumper, front - See Front bumper.....	BT-5		Connecting rod (GA engine)	EM-99
Bumper, rear - See Rear bumper	BT-7		Connecting rod (SR engine)	EM-52
C				
Camshaft inspection (GA engine)	EM-83		Console box - See Instrument panel	BT-12
Camshaft inspection (SR engine)	EM-36		CONSULT for ABS	BR-52
Camshaft position sensor (CMPS) (GA engine)	EC-372		Consult for ECCS (GA engine)	EC-270
Camshaft position sensor (CMPS) (SR engine)	EC-147		Consult for ECCS (SR engine)	EC-44
Camshaft position sensor inspection (GA engine)	EC-375		Consult general information	GI-33
Camshaft position sensor inspection (SR engine)	EC-150		Control lever (MT)	MT-10
Charging system	EL-35		Control valve (AT) (RE4F03V)	AT-204
Chassis and body maintenance.....	MA-25		Control valve (AT) (RL4F03A).....	AT-196
Cigarette lighter.....	EL-142		Converter housing installation.....	AT-156
Circuit breaker	EL-16		Coolant replacement (GA engine).....	MA-19
Closed loop control (GA engine).....	EC-347		Coolant replacement (SR engine).....	MA-11
Closed loop control (SR engine).....	EC-122		Cooling circuit (GA engine)	LC-17
Clutch cable.....	CL-3		Cooling circuit (SR engine)	LC-8
Clutch cover	CL-6		Cooling fan control (GA engine).....	EC-430
Clutch disc.....	CL-6		Cooling fan control (SR engine).....	EC-201
Clutch pedal	CL-3		Cooling fan control system (GA engine).....	LC-23
Clutch pedal free play	CL-4		Cooling fan control system (SR engine).....	LC-12
Clutch pedal height	CL-4		Cooling fan (GA engine).....	LC-23
Clutch release bearing	CL-5		Cooling fan (SR engine).....	LC-12
Clutch withdrawal lever	CL-5		Cooling fan motor.....	HA-31
Coil spring (front).....	FA-25		Cooling fan motor inspection (GA engine).....	EC-438
Coil spring (rear)	RA-10		Cooling fan motor inspection (SR engine).....	EC-213
Combination lamp, rear, removal and installation	BT-26		Cooling fan relay	HA-31
Combination meter (needle type) (With tachometer)	EL-79		Cooling fan relay inspection (GA engine).....	EC-438
Combination meter (needle type) (Without tachometer)	EL-85		Cooling fan relay inspection (SR engine).....	EC-213
Combination meter removal and installation - See Instrument panel.....	BT-12		Counter gear (MT) (RS5F31A)	MT-12
Combination meter (With tachometer)	EL-79		Counter gear (MT) (RS5F32V)	MT-32
Combination meter (Without tachometer)	EL-85		Coupling sleeve (MT) (RS5F31A)	MT-12
Combination switch	EL-42		Coupling sleeve (MT) (RS5F32V)	MT-32
Compression pressure (GA engine).....	EM-66		Crank angle sensor built into distributor - See Camshaft position sensor (GA engine).....	EC-372
Compression pressure (SR engine).....	EM-10		Crank angle sensor built into distributor - See Camshaft position sensor (SR engine).....	EC-147
			Crank case ventilation system (GA engine).....	EC-248
			Crank case ventilation system (SR engine).....	EC-23
			Crankshaft assembly (GA engine)	EM-105
			Crankshaft assembly (SR engine)	EM-59
			Crankshaft bearing clearance (GA engine).....	EM-102
			Crankshaft bearing clearance (SR engine).....	EM-55

ALPHABETICAL INDEX

Crankshaft inspection (GA engine)	EM-101
Crankshaft inspection (SR engine)	EM-54
Crankshaft position sensor (OBD) DTC0802, P0335 (GA engine)	EC-368
Crankshaft position sensor (OBD) DTC0802, P0335 (SR engine)	EC-143
Crankshaft position sensor (OBD) DTC0802, P0335 inspection (GA engine).....	EC-371
Crankshaft position sensor (OBD) DTC0802, P0335 inspection (SR engine).....	EC-146
Cruise control - See ASCD	EL-170
Cylinder block boring (GA engine)	EM-101
Cylinder block boring (SR engine)	EM-54
Cylinder block (GA engine)	EM-97
Cylinder block (SR engine)	EM-50
Cylinder head bolt tightening (GA engine).....	EM-75
Cylinder head bolt tightening (SR engine).....	EM-24
Cylinder head (GA engine).....	EM-82
Cylinder head (SR engine).....	EM-32

D

Data link connector for Consult (GA engine)....	EC-270
Data link connector for Consult (SR engine)....	EC-44
Daytime light system.....	EL-48
Daytime running light - See Daytime light system.....	EL-48
Detonation sensor - See Knock sensor (GA engine).....	EC-365
Detonation sensor - See Knock sensor (SR engine).....	EC-140
Device (FICD) solenoid valve (GA engine).....	EC-451
Device (FICD) solenoid valve (SR engine).....	EC-230
Diagnostic trouble code (DTC) for ECCS OBD system (GA engine)	EC-260
Diagnostic trouble code (DTC) for ECCS OBD system (SR engine)	EC-33
Differential gear (FF AT) (RE4F03V)	AT-268
Differential gear (FF AT) (RL4F03A).....	AT-264
Differential gear (FF MT) (RS5F31A)	MT-22
Differential gear (FF MT) (RS5F32V)	MT-46
Dimensions.....	GI-37
Distributor (GA engine).....	EC-244
Distributor (SR engine).....	EC-17
Distributor ignition (DI) system (GA engine)	EC-244
Distributor ignition (DI) system (SR engine)	EC-17
Door, front - See Front door.....	BT-9
Door glass (Front).....	BT-9
Door glass (Rear).....	BT-11
Door lock (Front)	BT-9
Door lock (Rear).....	BT-11
Door mirror	BT-37
Door, rear - See Rear door.....	BT-11

Door trim.....	BT-18
Drive plate runout (GA engine)	EM-104
Drive plate runout (SR engine)	EM-58
Drive shaft (front)	FA-13
Dropping resistor (AT).....	AT-130
Dual pressure switch.....	HA-49

E

ECCS basic inspection (GA engine)	EC-288
ECCS basic inspection (SR engine)	EC-62
ECCS circuit diagram (GA engine)	EC-234
ECCS circuit diagram (SR engine)	EC-7
ECCS component parts location (GA engine) ..	EC-236
ECCS component parts location (SR engine) ..	EC-9
ECCS fail-safe system (GA engine).....	EC-300
ECCS fail-safe system (SR engine).....	EC-76
ECCS on-board diagnostic system (GA engine)	EC-260
ECCS on-board diagnostic system (SR engine)	EC-33
ECCS symptom matrix chart (GA engine)	EC-301
ECCS symptom matrix chart (SR engine)	EC-77
ECCS system diagram and chart (GA engine)	EC-235
ECCS system diagram and chart (SR engine)	EC-8
ECCS trouble diagnoses (GA engine)	EC-284
ECCS trouble diagnoses (SR engine)	EC-58
ECCS wiring diagram (GA engine)	EC-234
ECCS wiring diagram (SR engine)	EC-7
ECM input/output signal inspection (GA engine)	EC-309
ECM input/output signal inspection (SR engine)	EC-84
EGR control (EGRC) - BPT valve (GA engine)	EC-386
EGR control (EGRC) - BPT valve (SR engine)	EC-161
EGR control (EGRC) - solenoid valve (GA engine)	EC-420
EGR control (EGRC) - solenoid valve (SR engine)	EC-190
EGR temperature sensor (GA engine).....	EC-424
EGR temperature sensor (SR engine).....	EC-194
EGR temperature sensor inspection (GA engine)	EC-427
EGR temperature sensor inspection (SR engine)	EC-197
EGR valve EVAP canister control solenoid valve inspection (GA engine)	EC-423
EGR valve EVAP canister control solenoid valve inspection (SR engine)	EC-193

ALPHABETICAL INDEX

EGR valve inspection (GA engine)	EC-384	
EGR valve inspection (SR engine)	EC-159	
EGRC - BPT valve inspection (GA engine)	EC-385	
EGRC - BPT valve inspection (SR engine)	EC-162	GI
EGRC-solenoid valve inspection (GA engine)	EC-420	
EGRC-solenoid valve inspection (SR engine)	EC-190	MA
Electric sun roof	EL-140	
Electrical load signal circuit (GA engine)	EC-454	
Electrical units location	EL-226	EM
Electronic ignition system (GA engine)	EC-244	
Electronic ignition system (SR engine)	EC-17	
Engine compartment	BT-38	LC
Engine control module (ECM) (GA engine)	EC-399	
Engine control module (ECM) (SR engine)	EC-174	EC
Engine coolant temperature sensor (ECTS) (GA engine)	EC-328	FE
Engine coolant temperature sensor (ECTS) P0115, DTC0103 (GA engine)	EC-328	CL
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection (GA engine)	EC-331	
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection (SR engine)	EC-106	MT
Engine coolant temperature sensor (ECTS) P0115, DTC0103 (SR engine)	EC-103	
Engine coolant temperature sensor (ECTS) P0125, DTC0908 (GA engine)	EC-337	FA
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection (GA engine)	EC-341	RA
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection (SR engine)	EC-116	
Engine coolant temperature sensor (ECTS) P0125, DTC0908 (SR engine)	EC-112	BR
Engine coolant temperature sensor (ECTS) (SR engine)	EC-103	
Engine coolant temperature sensor inspection (GA engine)	EC-331	ST
Engine coolant temperature sensor inspection (SR engine)	EC-106	RS
Engine oil	MA-8	
Engine oil filter replacement (GA engine)	MA-23	
Engine oil filter replacement (SR engine)	MA-15	
Engine oil precautions	GI-4	
Engine oil replacement (GA engine)	MA-22	
Engine oil replacement (SR engine)	MA-14	HA
Engine outer component parts (GA engine)	EM-62	
Engine outer component parts (SR engine)	EM-7	EL
Engine removal (GA engine)	EM-93	
Engine removal (SR engine)	EM-46	IDX
Engine room - See Engine compartment	BT-38	
Engine serial number	GI-36	
Engine trouble diagnoses (GA engine)	EC-284	
Engine trouble diagnoses (SR engine)	EC-58	
EVAP canister control (GA engine)	EC-246	
EVAP canister control (SR engine)	EC-21	
EVAP canister control solenoid valve inspection (GA engine)	EC-420	
EVAP canister control solenoid valve inspection (SR engine)	EC-190	
EVAP canister (GA engine)	EC-246	
EVAP canister (SR engine)	EC-21	
EVAP canister inspection (GA engine)	EC-246	
EVAP canister inspection (SR engine)	EC-21	
EVAP canister purge control (GA engine)	EC-246	
EVAP canister purge control (SR engine)	EC-21	
EVAP canister purge control solenoid valve (GA engine)	EC-420	
EVAP canister purge control solenoid valve (SR engine)	EC-190	
EVAP canister purge control valve (GA engine)	EC-246	
EVAP canister purge control valve (SR engine)	EC-21	
EVAP canister purge volume control valve (GA engine)	EC-246	
EVAP canister purge volume control valve (SR engine)	EC-21	
Evaporative emission (EVAP) system (GA engine)	EC-246	
Evaporative emission (EVAP) system (SR engine)	EC-21	
Exhaust gas recirculation (EGR) system (GA engine)	EC-377	
Exhaust gas recirculation (EGR) system (SR engine)	EC-152	
Exhaust gas recirculation (EGR) valve (GA engine)	EC-377	
Exhaust gas recirculation (EGR) valve (SR engine)	EC-152	
Exhaust system	FE-5	
Exhaust system inspection	MA-25	
Exterior	BT-22	
Exterior lamp	EL-57	
F		
Fan switch	HA-48	
Fast idle cam (FIC) (GA engine)	EC-251	
Fast idle cam (FIC) inspection and adjustment (GA engine)	EC-251	
Fast idle (GA engine)	EC-251	
Final drive (FF AT) (RE4F03V)	AT-268	
Final drive (FF AT) (RL4F03A)	AT-264	
Final drive (FF MT) (RS5F31A)	MT-22	
Final drive (FF MT) (RS5F32V)	MT-46	
Finisher, interior - See Trim	BT-15	
Finisher, trunk lid - See Trunk lid finisher	BT-25	
Floor trim	BT-15	

ALPHABETICAL INDEX

Fluid temperature sensor (AT)	AT-128	Fuel gauge (With tachometer)	EL-80																																																																																																				
Fluids.....	MA-8	Fuel injection system (GA engine).....	EC-356																																																																																																				
Flywheel runout (GA engine)	EM-104	Fuel injection system (SR engine).....	EC-131																																																																																																				
Flywheel runout (SR engine)	EM-58	Fuel injector (GA engine)	EC-439																																																																																																				
Fog lamp, front.....	EL-61	Fuel injector (SR engine)	EC-214																																																																																																				
Fog lamp, front, removal and installation.....	BT-5	Fuel line inspection (GA engine).....	MA-21																																																																																																				
Fork rod (MT) (RS5F31A).....	MT-13	Fuel line inspection (SR engine).....	MA-13																																																																																																				
Fork rod (MT) (RS5F32V).....	MT-33	Fuel precautions.....	GI-5																																																																																																				
Forward clutch.....	AT-235	Fuel pressure check (GA engine)	EC-249																																																																																																				
Freeze frame data (GA engine)	EC-261	Fuel pressure check (SR engine)	EC-24																																																																																																				
Freeze frame data (SR engine)	EC-34	Fuel pressure regulator (GA engine)	EC-250																																																																																																				
Front axle	FA-8	Fuel pressure regulator (SR engine)	EC-25																																																																																																				
Front bumper.....	BT-5	Fuel pressure release (GA engine)	EC-249																																																																																																				
Front disc brake	BR-17	Fuel pressure release (SR engine)	EC-24																																																																																																				
Front door.....	BT-9	Fuel pump control (GA engine)	EC-444																																																																																																				
Front fog lamp.....	EL-61	Fuel pump control (SR engine)	EC-219																																																																																																				
Front fog lamp removal and installation.....	BT-5	Fuel pump (GA engine)	EC-444																																																																																																				
Front heated oxygen sensor heater inspection (GA engine)	EC-350	Fuel pump (SR engine)	EC-219																																																																																																				
Front heated oxygen sensor heater inspection (SR engine)	EC-125	Fuel pump inspection (GA engine)	EC-447																																																																																																				
Front heated oxygen sensor (HO2S) (GA engine)	EC-342	Fuel pump inspection (SR engine)	EC-223																																																																																																				
Front heated oxygen sensor (HO2S) (SR engine)	EC-117	Fuel pump relay inspection (GA engine)	EC-447																																																																																																				
Front heated oxygen sensor (HO2S) heater (GA engine)	EC-348	Fuel pump relay inspection (SR engine)	EC-223																																																																																																				
Front heated oxygen sensor (HO2S) heater (SR engine)	EC-123	Fuel system	FE-3																																																																																																				
Front heated oxygen sensor (HO2S) monitor (GA engine)	EC-342	Fuel tank vacuum relief valve inspection (GA engine)	EC-247																																																																																																				
Front heated oxygen sensor (HO2S) monitor (SR engine)	EC-117	Fuel tank vacuum relief valve inspection (SR engine)	EC-22																																																																																																				
Front oxygen sensor (O2S) (GA engine)	EC-342	Fuse	EL-16																																																																																																				
Front oxygen sensor (O2S) (SR engine)	EC-117	Fuse block	Foldout page																																																																																																				
Front oxygen sensor (O2S) monitor (GA engine)	EC-262	Front oxygen sensor (O2S) monitor (SR engine)	EC-35	Fusible link	EL-16	Front passenger air bag.....	RS-15	Front seat	BT-28	Front seat belt	RS-3	Front suspension.....	FA-24	Front washer	EL-114	Front wiper	EL-114	Fuel check valve inspection (GA engine)	EC-247	Fuel check valve inspection (SR engine)	EC-22	Fuel cut control (at no load & high engine speed) (GA engine)	EC-245	Fuel cut control (at no load & high engine speed) (SR engine)	EC-19	Fuel filler lid	BT-7	Fuel filter replacement (SR engine)	MA-13	Fuel gauge	EL-86			G				Garage jack and safety stand	GI-39			Gauges (With tachometer)	EL-78			Gauges (Without tachometer)	EL-84			Gears (MT) (RS5F31A)	MT-12			Gears (MT) (RS5F32V)	MT-32			Generator	EL-38			Generator - See Alternator	EL-38			Generic scan tool (GST) (GA engine)	EC-282			Generic scan tool (GST) (SR engine)	EC-56			Glass (Front)	BT-9			Glass (Rear)	BT-11			Governer valve assembly	AT-27			Grille - See Exterior	BT-5			Ground distribution	EL-17			H				Harness layout	EL-228			Hazard warning lamp	EL-63
Front oxygen sensor (O2S) monitor (SR engine)	EC-35	Fusible link	EL-16																																																																																																				
Front passenger air bag.....	RS-15																																																																																																						
Front seat	BT-28																																																																																																						
Front seat belt	RS-3																																																																																																						
Front suspension.....	FA-24																																																																																																						
Front washer	EL-114																																																																																																						
Front wiper	EL-114																																																																																																						
Fuel check valve inspection (GA engine)	EC-247																																																																																																						
Fuel check valve inspection (SR engine)	EC-22																																																																																																						
Fuel cut control (at no load & high engine speed) (GA engine)	EC-245																																																																																																						
Fuel cut control (at no load & high engine speed) (SR engine)	EC-19																																																																																																						
Fuel filler lid	BT-7																																																																																																						
Fuel filter replacement (SR engine)	MA-13																																																																																																						
Fuel gauge	EL-86																																																																																																						
		G																																																																																																					
		Garage jack and safety stand	GI-39																																																																																																				
		Gauges (With tachometer)	EL-78																																																																																																				
		Gauges (Without tachometer)	EL-84																																																																																																				
		Gears (MT) (RS5F31A)	MT-12																																																																																																				
		Gears (MT) (RS5F32V)	MT-32																																																																																																				
		Generator	EL-38																																																																																																				
		Generator - See Alternator	EL-38																																																																																																				
		Generic scan tool (GST) (GA engine)	EC-282																																																																																																				
		Generic scan tool (GST) (SR engine)	EC-56																																																																																																				
		Glass (Front)	BT-9																																																																																																				
		Glass (Rear)	BT-11																																																																																																				
		Governer valve assembly	AT-27																																																																																																				
		Grille - See Exterior	BT-5																																																																																																				
		Ground distribution	EL-17																																																																																																				
		H																																																																																																					
		Harness layout	EL-228																																																																																																				
		Hazard warning lamp	EL-63																																																																																																				

ALPHABETICAL INDEX

Headlamp	EL-45	
Headlamp aiming control	EL-56	
Headlining - See Roof trim.....	BT-20	
Heated oxygen sensor heater (front) inspection (GA engine)	EC-350	CI
Heated oxygen sensor heater (front) inspection (SR engine)	EC-125	MA
Heated oxygen sensor (HO2S) (front) (GA engine)	EC-342	EM
Heated oxygen sensor (HO2S) (front) (SR engine)	EC-117	LC
Heated oxygen sensor (HO2S) heater (front) (GA engine).....	EC-348	EC
Heated oxygen sensor (HO2S) heater (front) (SR engine).....	EC-123	FE
Heated oxygen sensor (HO2S) heater (rear) (GA engine).....	EC-355	CL
Heated oxygen sensor (HO2S) heater (rear) (SR engine).....	EC-130	MT
Heated oxygen sensor monitor (HO2S) (front) (GA engine).....	EC-342	AT
Heated oxygen sensor monitor (HO2S) (front) (SR engine).....	EC-117	FA
Heated oxygen sensor (rear) (GA engine).....	EC-351	RA
Heated oxygen sensor (rear) (SR engine).....	EC-126	BR
Heater wiring diagram.....	HA-35	ST
HEC (Hybrid electrical control unit).....	Foldout page	RS
Height (Dimensions).....	GI-37	BT
HFC134a (R134a) system precaution	HA-2	HA
HFC134a (R134a) system service procedure	HA-53	EL
HFC134a (R134a) system service tools	HA-7	IDX
HFC134a system service equipment precaution	HA-9	
High clutch.....	AT-230	
Hood.....	BT-5	
Horn.....	EL-142	
How to erase DTC for ECCS OBD system (GA engine).....	EC-260	
How to erase DTC for ECCS OBD system (SR engine).....	EC-33	
How to follow flow chart in trouble diagnoses	GI-30	
How to perform efficient diagnosis for an electrical incident	GI-18	
How to read wiring diagrams	GI-9	
How to use this manual	GI-7	
Hydraulic lash adjuster inspection (SR engine)	EM-41	
IACV - air regulator inspection (SR engine)	EC-229	
IACV - FICD solenoid valve inspection (SR engine)	EC-232	
IACV-AAC valve inspection (GA engine)	EC-398	
IACV-AAC valve inspection (SR engine)	EC-173	
Identification plate	GI-35	
Idle air control (IAC) system (GA engine).....	EC-395	
Idle air control (IAC) system (SR engine).....	EC-170	
Idle air control valve (IACV) - air regulator (SR engine).....	EC-227	
Idle air control valve (IACV) (GA engine)	EC-395	
Idle air control valve (IACV) (SR engine)	EC-170	
Idle mixture ratio inspection (GA engine).....	EC-253	
Idle mixture ratio inspection (SR engine).....	EC-26	
Idle speed inspection (GA engine).....	EC-253	
Idle speed inspection (SR engine).....	EC-26	
Ignition coil inspection (GA engine)	EC-415	
Ignition coil inspection (SR engine)	EC-185	
Ignition timing inspection (GA engine)	EC-253	
Ignition timing inspection (SR engine)	EC-26	
Inhibitor switch (RE4F03V)	AT-129	
Inhibitor switch (RL4F03A).....	AT-33	
Injector inspection (GA engine).....	EC-441	
Injector inspection (SR engine).....	EC-216	
Injector removal and installation (GA engine)...	EC-250	
Injector removal and installation (SR engine)....	EC-25	
Input shaft (RS5F31A)	MT-16	
Input shaft (RS5F32V)	MT-37	
Instrument panel.....	BT-12	
Intake air temperature sensor (GA engine)	EC-323	
Intake air temperature sensor inspection (GA engine)	EC-327	
Intake air temperature sensor inspection (SR engine)	EC-102	
Intake air temperature sensor (SR engine)	EC-98	
Intake door control linkage adjustment.....	HA-50	
Intake door motor.....	HA-50	
Intake manifold (GA engine)	EM-63	
Intake manifold (SR engine)	EM-8	
Interior	BT-15	
Interior lamp	EL-70	
Jacking points.....	GI-38	
Knock sensor (KS) (GA engine).....	EC-365	
Knock sensor (KS) inspection (GA engine)	EC-367	
Knock sensor (KS) inspection (SR engine)	EC-142	
Knock sensor (KS) (SR engine).....	EC-140	
Knuckle spindle	FA-8	

I

IACV - air regulator inspection (SR engine)
IACV - FICD solenoid valve inspection (SR
engine)

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-37
License lamp	EL-59
Lifting points	GI-38
Line pressure solenoid valve	AT-128
Line pressure test (AT) (RE4F03V)	AT-134
Line pressure test (AT) (RL4F03A).....	AT-26
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-226
Lock, door - See Door lock (Front).....	BT-9
Lock, door - See Door lock (Rear).....	BT-11
Low and reverse brake	AT-241
Lubricant (R134a) A/C.....	HA-55
Lubricants.....	MA-8
Lubrication circuit (GA engine).....	LC-13
Lubrication circuit (SR engine).....	LC-4
Lubrication oil A/C	HA-55
Lubrication-locks, hinges and hood latches.....	MA-30
Luggage compartment trim	BT-21

M

Magnet clutch	HA-60
Main drive gear (MT) (RS5F31A)	MT-12
Main drive gear (MT) (RS5F32V)	MT-32
Mainshaft (MT) (RS5F31A)	MT-18
Mainshaft (MT) (RS5F32V).....	MT-40
Maintenance (engine) (GA engine).....	MA-18
Maintenance (engine) (SR engine).....	MA-10
Maintenance general.....	MA-3
Maintenance periodic	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL) (GA engine) ..	EC-262
Malfunction indicator lamp (MIL) (SR engine)	EC-35
Manual steering gear	ST-13
Manual transaxle number.....	GI-36
Manual transmission oil.....	MA-8
Manual transmission oil replacement.....	MA-25
Mass air flow sensor inspection (GA engine) ...	EC-322
Mass air flow sensor inspection (SR engine)	EC-97
Mass air flow sensor (MAFS) (GA engine)	EC-318
Mass air flow sensor (MAFS) (SR engine)	EC-93
Master cylinder (brake)	BR-11
Meter and gauges (With tachometer)	EL-78
Meter and gauges (Without tachometer)	EL-84
MIL & Data link connectors circuit (GA engine)	EC-457
MIL & Data link connectors circuit (SR engine)	EC-233
Mirror, door - See Door mirror	BT-37

Mirror, out side - See Out side mirror	BT-37
Misfire (GA engine)	EC-361
Misfire (SR engine)	EC-136
Mode door control linkage adjustment.....	HA-49
Model variation	GI-34
Molding - See Exterior	BT-22
MT overhaul (RS5F31A)	MT-11
MT overhaul (RS5F32V)	MT-31
MT removal and installation	MT-8
Mud guard - See Exterior.....	BT-26
Multi purpose grease.....	MA-8
Multiport fuel injection (MFI) system (GA engine)	EC-241
Multiport fuel injection (MFI) system (SR engine)	EC-15
Multiport fuel injection precautions.....	GI-4
Multiport fuel injection system inspection (GA engine)	EC-356
Multiport fuel injection system inspection (SR engine)	EC-131
Multi-remote control system	EL-155

N

Neutral position switch inspection (GA engine)	EC-401
Neutral position switch inspection (SR engine)	EC-176
Neutral position switch (MT)	MT-7

O

Oil pan (engine) (GA engine).....	EM-67
Oil pan (engine) (SR engine).....	EM-11
Oil pressure (GA engine)	LC-14
Oil pressure (SR engine)	LC-4
Oil pressure relief valve (GA engine)	LC-16
Oil pump (AT)	AT-192
Oil pump (GA engine)	LC-15
Oil pump (SR engine)	LC-5
Oil pump regulator valve (GA engine)	LC-15
Oil pump regulator valve (SR engine)	LC-7
Oil seal replacement (engine) (GA engine)	EM-80
Oil seal replacement (engine) (SR engine)	EM-30
Opera window	BT-35
Out side mirror	BT-37
Overdrive switch (RE4F03V).....	AT-129
Overdrive switch (RL4F03A).....	AT-32
Overrun clutch	AT-235
Overrun clutch solenoid valve.....	AT-128
Oversize piston (GA engine)	EM-101
Oversize piston (SR engine)	EM-54

ALPHABETICAL INDEX

Oxygen sensor monitor (O2S) (front) (GA engine)	EC-342
Oxygen sensor monitor (O2S) (front) (SR engine)	EC-117
Oxygen sensor (O2S) (front) (GA engine)	EC-342
Oxygen sensor (O2S) (front) (SR engine)	EC-117

P

Parking brake control	BR-32
Park/Neutral position switch (GA engine)	EC-401
Park/Neutral position switch (SR engine)	EC-176
PCV (positive crankcase ventilation) inspection (GA engine)	EC-248
PCV (positive crankcase ventilation) inspection (SR engine)	EC-23
Pilot bushing replacement (SR engine)	EM-58
Piston assembly (GA engine)	EM-105
Piston assembly (SR engine)	EM-59
Piston pin inspection (GA engine)	EM-98
Piston pin inspection (SR engine)	EM-51
Piston ring inspection (GA engine)	EM-99
Piston ring inspection (SR engine)	EM-52
Piston to bore clearance (GA engine)	EM-100
Piston to bore clearance (SR engine)	EM-53
Power door lock	EL-131
Power door mirror	EL-139
Power steering fluid	MA-8
Power steering fluid level	ST-5
Power steering gear	ST-18
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch (GA engine)	EC-448
Power steering oil pressure switch inspection (GA engine)	EC-450
Power steering oil pressure switch inspection (SR engine)	EC-226
Power steering oil pressure switch (SR engine)	EC-224
Power steering oil pump	ST-24
Power steering system bleeding	ST-6
Power supply routing	EL-6
Power transistor & ignition coil (GA engine)	EC-411
Power transistor & ignition coil (SR engine)	EC-181
Power transistor inspection (GA engine)	EC-415
Power transistor inspection (SR engine)	EC-185
Power window	EL-123
Precautions (General)	GI-3
Pressure plate - See Clutch cover	CL-6
Pressure test (AT) (RE4F03V)	AT-134
Pressure test (AT) (RL4F03A)	AT-26

R

Rack retainer adjustment	ST-15
Radiator fan - See Cooling fan (GA engine)	LC-23
Radiator fan - See Cooling fan (SR engine)	LC-12
Radiator (GA engine)	LC-23
Radiator (SR engine)	LC-12
Radio - See Audio	EL-151
Rear air spoiler	BT-27
Rear axle	RA-6
Rear axle (disc brake type)	RA-6
Rear axle (drum brake type)	RA-6
Rear bumper	BT-7
Rear combination lamp removal and installation	BT-26
Rear disc brake	BR-24
Rear door	BT-11
Rear drum brake	BR-21
Rear heated oxygen sensor heater inspection (GA engine)	EC-355
Rear heated oxygen sensor heater inspection (SR engine)	EC-130
Rear heated oxygen sensor (HO2S) (GA engine)	EC-351
Rear heated oxygen sensor (HO2S) (SR engine)	EC-126
Rear heated oxygen sensor (HO2S) heater (GA engine)	EC-355
Rear heated oxygen sensor (HO2S) heater (SR engine)	EC-130
Rear seat	BT-29
Rear seat belt	RS-3
Rear side window	BT-35
Rear suspension	RA-8
Rear window	BT-34
Rear window defogger	EL-143
Rear window signal (GA engine)	EC-454
Refilling engine coolant (GA engine)	LC-23
Refilling engine coolant (SR engine)	LC-12
Refrigerant CFC12 precaution	HA-2
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-53
Refrigerant general precaution	HA-3
Refrigerant lines	HA-57
Refrigeration cycle	HA-11
Release bearing (clutch)	CL-5
Resistor inspection (GA engine)	EC-415
Resistor inspection (SR engine)	EC-185
Reverse clutch	AT-226
Reverse gear (MT) (RS5F31A)	MT-12
Reverse gear (MT) (RS5F32V)	MT-32
Reverse idler shaft (MT) (RS5F31A)	MT-12
Reverse idler shaft (MT) (RS5F32V)	MT-32

ALPHABETICAL INDEX

Reverse lamp switch.....	MT-7
Revolution sensor (AT).....	AT-130
Road wheel size.....	GI-37
Roof trim.....	BT-20
Room lamp.....	EL-74
Room lamp - See Interior lamp.....	EL-74
Rotor disc (front).....	FA-8

S

SAE J1930 terminology list.....	GI-43
Seal - See Exterior.....	BT-22
Seat belt, front - See Front seat belt.....	RS-3
Seat belt inspection.....	MA-30
Seat belt, rear - See Rear seat belt.....	RS-3
Seat, front - See Front seat.....	BT-28
Seat, rear - See Rear seat.....	BT-29
Self-diagnostic results (GA engine).....	EC-262
Self-diagnostic results (SR engine).....	EC-35
Shift control (MT) (RS5F31A)	MT-13
Shift control (MT) (RS5F32V)	MT-33
Shift fork (MT) (RS5F31A)	MT-13
Shift fork (MT) (RS5F32V)	MT-33
Shift lock system	AT-139
Shift schedule (RE4F03V).....	AT-59
Shift schedule (RL4F03A).....	AT-19
Shift solenoid valve (AT)	AT-128
Shock absorber (front)	FA-25
Shock absorber (rear)	RA-10
Side trim	BT-15
Side window - See Rear side window	BT-35
Spark plug replacement (GA engine).....	MA-24
Spark plug replacement (SR engine).....	MA-15
Speedometer	EL-86
Speedometer (With tachometer)	EL-80
Spiral cable.....	RS-13
Spot lamp	EL-74
Spring (Wheelarch) height	FA-5
SRS - See Supplemental Restraint System	RS-9
SRS Trouble diagnoses	RS-21
SRS Wiring diagram.....	RS-24
Stabilizer bar (front).....	FA-26
Stall test (AT) (RE4F03V)	AT-131
Stall test (AT) (RL4F03A).....	AT-24
Standardized relay	EL-4
Starter.....	EL-30
Starting system.....	EL-25
Steering gear and linkage inspection.....	MA-28
Steering gear oil level	MA-29
Steering knuckle.....	FA-8
Steering linkage (manual steering)	ST-13
Steering linkage (power steering)	ST-18
Steering switch.....	EL-44

Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force	ST-6
Stop lamp	EL-59
Striking rod (MT) (RS5F31A)	MT-13
Striking rod (MT) (RS5F32V)	MT-33
Strut (front)	FA-25
Sun roof.....	BT-30
Sun roof, electric - See Electric sun roof.....	EL-140
Supplemental Restraint System.....	RS-9
Symbols and abbreviations	GI-8
Synchronizer (MT) (RS5F31A).....	MT-12
Synchronizer (MT) (RS5F32V).....	MT-32

T

Tachometer.....	EL-80
Tail lamp	EL-59
Temperature control cable and linkage adjustment.....	HA-50
Theft warning system.....	EL-193
Thermal protector	HA-49
Thermo control amp	HA-49
Thermostat (GA engine).....	LC-21
Thermostat (SR engine).....	LC-10
Three way catalyst (GA engine).....	EC-388
Three way catalyst (SR engine).....	EC-163
Three way catalyst precautions	GI-4
Throttle bodies (GA engine)	EM-63
Throttle bodies (SR engine)	EM-8
Throttle drum adjustment	FE-2
Throttle position sensor adjustment (GA engine)	EC-288
Throttle position sensor adjustment (SR engine)	EC-62
Throttle position sensor inspection (GA engine)	EC-336
Throttle position sensor inspection (SR engine)	EC-62, EC-111
Throttle position sensor (TPS) (GA engine).....	EC-332
Throttle position sensor (TPS) (SR engine).....	EC-107
Throttle position switch.....	AT-130
Throwout bearing - See Clutch release bearing	CL-5
Tie-rod (manual steering).....	ST-15
Tie-rod (power steering)	ST-21
Tie-rod ball joints (manual steering)	ST-15
Tie-rod ball joints (power steering)	ST-21
Tightening torque of standard bolts	GI-42
Timing chain (GA engine)	EM-69
Timing chain (SR engine)	EM-16
Tire rotation	MA-28
Tire size	GI-37

ALPHABETICAL INDEX

Torque converter clutch solenoid valve (RE4F03V)	AT-128
Torque converter clutch solenoid valve (RL4F03A).....	AT-34
Torque converter installation	AT-156
Tow truck towing.....	GI-40
Transmission case (MT) (RS5F31A)	MT-11
Transmission case (MT) (RS5F32V)	MT-31
Transverse link (front)	FA-27
Tread-FR&RR (Dimensions)	GI-37
Trim	BT-15
Trunk lid.....	BT-7
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid	BT-7
Trunk room lamp	EL-74
Trunk room trim.....	BT-21
Turn signal lamp.....	EL-63
Two trip detection logic (GA engine).....	EC-260
Two trip detection logic (SR engine).....	EC-33
Two-pole lift	GI-40

U

Under body.....	BT-40
-----------------	-------

V

Vacuum hose (brake system)	BR-16
Vacuum hose drawing (ECCS) (GA engine)....	EC-239
Vacuum hose drawing (ECCS) (SR engine).....	EC-13
Valve clearance (GA engine)	EM-90
Valve clearance (SR engine)	EM-38
Valve guide inspection (GA engine).....	EM-85
Valve guide inspection (SR engine).....	EM-38
Valve seat inspection (GA engine).....	EM-87
Valve seat inspection (SR engine).....	EM-39
Valve spring inspection (GA engine).....	EM-88
Valve spring inspection (SR engine).....	EM-40
Valve timing control solenoid valve (GA engine)	EC-404
Valve timing control (VTC) (GA engine).....	EC-404
Valve timing control (VTC) valve inspection (GA engine)	EC-410
Vapor lines inspection (GA engine).....	MA-24
Vapor lines inspection (SR engine).....	MA-17
Vehicle identification number	GI-35
Vehicle Recovery. (Freeing a stuck vehicle).....	GI-41
Vehicle speed sensor (VSS) (GA engine).....	EC-391

Vehicle speed sensor (VSS) (SR engine).....	EC-166
Viscosity number (SAE)	MA-8
Viscous coupling (FF AT)	AT-268
Viscous coupling (FF MT) (RS5F32V).....	MT-46
VTC solenoid valve inspection (GA engine)	EC-410

W

Warning chime	EL-91
Warning lamps	EL-91
Washer, front	EL-114
Water cock control rod adjustment	HA-50
Water pump (GA engine)	LC-20
Water pump (SR engine)	LC-9
Water temperature gauge	EL-86
Water temperature gauge (With tachometer)	EL-80
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (rear).....	RA-5
Wheel balance.....	MA-28
Wheel bearing (rear)	RA-4
Wheel hub and steering knuckle.....	FA-8
Wheel hub (front)	FA-8
Wheel hub (rear)	RA-6
Wheel sensors (ABS).....	BR-36
Wheel size.....	GI-37
Wheelarch height	FA-5
Wheelbase (Dimensions)	GI-37
Wide open & closed throttle position (CTP) switch (GA engine).....	EC-332

Wide open & closed throttle position (CTP) switch (SR engine).....	EC-107
Width (Dimensions)	GI-37
Window, door (Front).....	BT-9
Window, door (Rear)	BT-11
Window, opera _ See Opera window	BT-35
Window, rear - See Rear window	BT-34
Window, rear side - See Rear side window.....	BT-35
Window, side - See Rear side window	BT-35
Windshield	BT-33
Windshield washer - See Front washer.....	EL-114
Windshield wiper - See Front wiper.....	EL-114
Wiper and washer	EL-114
Wiper, front	EL-114
Withdrawal lever (clutch).....	CL-5
Wrist pin - See Piston pin inspection (GA engine)	EM-98
Wrist pin - See Piston pin inspection (SR engine)	EM-51

GI

MA

LC

EC

FE

CL

MT

AT

FA

RS

ST

BT

HA

EL

IDX