

**ALPHABETICAL INDEX**

**SECTION IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram (GA).....EC-472  
 AAC/V - Wiring diagram (SR).....EC-170  
 ABS - Wiring diagram .....BR-47  
 ABS (anti-lock brake system).....BR-36  
 Absolute pressure sensor .....EC-342  
 A/C - Wiring diagram.....HA-36  
 A/C air flow.....HA-14  
 A/C component layout.....HA-12  
 A/C compressor clutch removal and  
 installation .....HA-61  
 A/C compressor mounting.....HA-60  
 A/C compressor precaution.....HA-5  
 A/C compressor special service tool.....HA-6  
 A/C control linkage adjustment.....HA-49  
 A/C control operation .....HA-13  
 A/C diagnostic work flow.....HA-15  
 A/C harness layout.....HA-31  
 A/C HFC134a (R134a) system precaution.....HA-2  
 A/C HFC134a (R134a) system service  
 procedure .....HA-54  
 A/C HFC134a (R134a) system service tools.....HA-7  
 A/C HFC134a system service equipment  
 precaution .....HA-9  
 A/C lubricant (R134a).....HA-56  
 A/C lubrication oil .....HA-56  
 A/C operational check.....HA-16  
 A/C performance chart.....HA-26  
 A/C performance test diagnoses.....HA-24  
 A/C pressure switch .....HA-11  
 A/C relay.....HA-49  
 A/C service data specification.....HA-67  
 A/C switch .....HA-48  
 A/C symptom chart.....HA-18  
 A/C trouble diagnoses.....HA-15  
 Accelerator control system.....FE-2  
 Accelerator wire adjustment.....FE-2  
 Air bag.....RS-14  
 Air bag disposal.....RS-18  
 Air bag precautions .....GI-2  
 Air bleeding for brake system.....BR-5  
 Air cleaner filter replacement (GA) .....MA-22  
 Air cleaner filter replacement (SR).....MA-14  
 Air conditioner - wiring diagram.....HA-36  
 Air conditioner cut control (GA).....EC-254  
 Air conditioner cut control (SR).....EC-20  
 Air conditioning - See A/C.....HA-2  
 Air flow meter - See Mass air flow sensor  
 (GA).....EC-336  
 Air flow meter - See Mass air flow sensor  
 (SR).....EC-85  
 Air mix door control linkage adjustment.....HA-50

Air spoiler, rear.....BT-27  
 AIRREG - Wiring diagram.....EC-233  
 Alternator.....EL-38  
 Angular tightening application.....EM-2  
 Antenna .....EL-144  
 Anti-lock brake system - See ABS.....BR-36  
 Anti-lock brake system - Wiring diagram.....BR-47  
 AP/SEN - Wiring diagram .....EC-345  
 ASCD - Wiring diagram.....EL-152  
 ASCD (automatic speed control device).....EL-148  
 A/T control unit .....AT-79  
 A/T diagnosis communication line .....EC-200  
 A/T fluid temperature sensor.....AT-88  
 A/T, RE - Wiring diagram .....AT-17  
 A/T removal and installation.....AT-177  
 A/T, RL - Wiring diagram.....AT-11  
 A/T self-diagnoses.....AT-47  
 A/T shift lock system - Wiring diagram  
 (RE4F03V) .....AT-163  
 A/T shift lock system - Wiring diagram  
 (RL4F03A).....AT-155  
 A/T shift lock system (RE4F03V).....AT-161  
 A/T shift lock system (RL4F03A) .....AT-154  
 A/T trouble diagnoses .....AT-57  
 A/T trouble diagnoses (RE4F03V) .....AT-62  
 A/T trouble diagnoses (RL4F03A) .....AT-29  
 ATDIAG - Wiring diagram .....EC-201  
 Audio .....EL-141  
 AUDIO - Wiring diagram.....EL-142  
 Audio and A/C control removal and  
 installation - See Instrument panel.....BT-12  
 Automatic speed control system - See ASCD..EL-148  
 Automatic transaxle number .....GI-36  
 Automatic transmission fluid replacement .....MA-28  
 Auxiliary air control (AAC) (GA).....EC-469  
 Auxiliary air control (AAC) (SR).....EC-167

## B

BACK/L - Wiring diagram.....EL-59  
 Back-up lamp .....EL-59  
 Back-up lamp switch (M/T) .....MT-7, MT-11  
 Ball joint front axle.....FA-27  
 Battery .....EL-21  
 Baulk ring (M/T) (RS5F31A) .....MT-12  
 Baulk ring (M/T) (RS5F32V) .....MT-32  
 Blower motor .....HA-48  
 Blower resistor.....HA-48  
 Board-on lift.....GI-39  
 Body alignment.....BT-38  
 Boring/honing cylinder block (GA) .....EM-101  
 Boring/honing cylinder block (SR).....EM-54  
 BPT valve (GA) .....EC-431

# ALPHABETICAL INDEX

BPT valve (SR) .....	EC-159
Brake booster .....	BR-16
Brake control valve (Proportioning valve) .....	BR-8
Brake fluid change .....	BR-4
Brake fluid level .....	MA-28
Brake fluid level and line check .....	BR-4
Brake hydraulic line .....	BR-6
Brake inspection .....	MA-28
Brake lines and cables inspection .....	MA-28
Brake lining temporary checking .....	MA-29
Brake master cylinder .....	BR-12
Brake pedal .....	BR-10
Bumper, front .....	BT-5
Bumper, rear .....	BT-7
BYPSS/V - Wiring diagram .....	EC-521

## C

Camshaft inspection (GA) .....	EM-83
Camshaft inspection (SR) .....	EM-36
Camshaft position sensor (CMPS) (GA) .....	EC-418
Camshaft position sensor (CMPS) (SR) .....	EC-143
Canister - See EVAP canister (GA) .....	EC-255
Canister - See EVAP canister (SR) .....	EC-22
CANI/V - Wiring diagram .....	EC-451
CHARGE - Wiring diagram .....	EL-36
Charging system .....	EL-35
Chassis and body maintenance .....	MA-26
Check connector for ECCS checker box .....	EC-290
CHIME - Wiring diagram .....	EL-111
Cigarette lighter .....	EL-131
Circuit breaker .....	EL-16
CKPS - Wiring diagram (GA) .....	EC-415
CKPS - Wiring diagram (SR) .....	EC-140
Clearance lamp .....	EL-60
Closed loop control (GA) .....	EC-376
Closed loop control (SR) .....	EC-116
Closed throttle position switch .....	EC-475
Clutch cable .....	CL-3
Clutch cover .....	CL-6
Clutch disc .....	CL-6
Clutch pedal .....	CL-3
Clutch release bearing .....	CL-5
Clutch withdrawal lever .....	CL-5
CMPS - Wiring diagram (GA) .....	EC-420
CMPS - Wiring diagram (SR) .....	EC-145
Coil spring (front) .....	FA-25
Coil spring (rear) .....	RA-10
Collision diagnosis .....	RS-42
Combination lamp, rear, removal and installation .....	BT-26
Combination meter (needle type) (with tachometer) .....	EL-82

Combination meter (needle type) (without tachometer) .....	EL-89	
Combination meter removal and installation - See Instrument panel .....	BT-12	GI
Combination meter (with tachometer) .....	EL-82	
Combination meter (without tachometer) .....	EL-89	MA
Combination switch .....	EL-42	
Compression pressure (GA) .....	EM-66	
Compression pressure (SR) .....	EM-10	EM
Compressor clutch removal and installation .....	HA-61	
Compressor mounting .....	HA-60	LC
Compressor precaution .....	HA-5	LC
Compressor special service tool .....	HA-6	
Connecting rod bearing clearance (GA) .....	EM-103	EC
Connecting rod bearing clearance (SR) .....	EM-56	
Connecting rod bushing clearance (GA) .....	EM-104	
Connecting rod bushing clearance (SR) .....	EM-57	FE
Connecting rod (GA) .....	EM-99	
Connecting rod (SR) .....	EM-52	CL
Console box - See Instrument panel .....	BT-12	CL
CONSULT for ABS .....	BR-55	
CONSULT for ECCS (GA) .....	EC-290	MT
CONSULT for ECCS (SR) .....	EC-45	
CONSULT general information .....	GI-33	
Control lever (M/T) .....	MT-10	AT
Control valve (A/T), (RE4F03V) .....	AT-226	
Control valve (A/T), (RL4F03A) .....	AT-218	FA
Converter housing installation .....	AT-178	FA
Coolant mixture ratio .....	MA-9	
Coolant replacement (GA) .....	MA-19	RA
Coolant replacement (SR) .....	MA-11	
COOL/F - Wiring diagram (GA) .....	EC-547	
COOL/F - Wiring diagram (SR) .....	EC-207	BR
Cooling circuit (GA) .....	LC-17	
Cooling circuit (SR) .....	LC-8	
Cooling fan control (GA) .....	EC-544	ST
Cooling fan control (SR) .....	EC-203	
Cooling fan (GA) .....	LC-23	FS
Cooling fan (SR) .....	LC-12	
Cooling fan motor .....	EC-216, HA-31	
Cooling fan relay .....	HA-31	BT
Cooling fan relay (GA) .....	EC-556	
Cooling fan relay (SR) .....	EC-216	
Cornering lamp .....	EL-68	HA
Coupling sleeve (M/T) (RS5F31A) .....	MT-12	
Coupling sleeve (M/T) (RS5F32V) .....	MT-32	EL
Courtesy lamp .....	EL-78	
Crank angle sensor built into distributor - See Camshaft position sensor (GA) .....	EC-418	
Crank angle sensor built into distributor - See Camshaft position sensor (SR) .....	EC-143	
Crankcase emission control system - See positive crankcase ventilation (GA) .....	EC-259	

# ALPHABETICAL INDEX

Crankcase emission control system - See	
positive crankcase ventilation (SR) .....	EC-24
Crankcase ventilation system - See positive	
crankcase ventilation (GA) .....	EC-259
Crankcase ventilation system - See positive	
crankcase ventilation (SR) .....	EC-24
Crankshaft (GA) .....	EM-101
Crankshaft (SR) .....	EM-54
Crankshaft position sensor (OBD) cog	
chipping (GA) .....	EC-504
Crankshaft position sensor (OBD) cog	
chipping (SR) .....	EC-186
Crankshaft position sensor (OBD) (GA) .....	EC-413
Crankshaft position sensor (OBD) (SR) .....	EC-138
Cruise control - See ASCD .....	EL-148
Cylinder block boring (GA) .....	EM-101
Cylinder block boring (SR) .....	EM-54
Cylinder block (GA) .....	EM-97
Cylinder block (SR) .....	EM-50
Cylinder head bolt tightening (GA) .....	EM-75
Cylinder head bolt tightening (SR) .....	EM-24
Cylinder head (GA) .....	EM-82
Cylinder head (SR) .....	EM-32

## D

Data link connector for Consult (GA) .....	EC-290
Data link connector for Consult (SR) .....	EC-45
Daytime light system .....	EL-50
Daytime running light - See Daytime light	
system .....	EL-50
DEF - Wiring diagram .....	EL-134
Detonation sensor - See Knock sensor (GA) ...	EC-409
Detonation sensor - See Knock sensor (SR) ...	EC-135
Diagnosis sensor unit .....	RS-13
Diagnostic trouble code (DTC) for ECCS	
OBD system .....	EC-34
Differential gear (FF M/T) (RS5F31A) .....	MT-22
Differential gear (FF M/T) (RS5F32V) .....	MT-46
Differential gear (FF A/T) (RE4F03V) .....	AT-290
Differential gear (FF A/T) (RL4F03A) .....	AT-286
Dimensions .....	GI-37
Distributor (GA) .....	EC-253
Distributor (SR) .....	EC-19
Distributor ignition (DI) system (GA) .....	EC-253
Distributor ignition (DI) system (SR) .....	EC-19
D/LOCK - Wiring diagram .....	EL-181
Dome light - See Interior lamp .....	EL-78
Door, front .....	BT-9
Door glass (front) .....	BT-9
Door glass (rear) .....	BT-11
Door lock (front) .....	BT-9
Door lock (rear) .....	BT-11

Door mirror .....	BT-37
Door, rear .....	BT-11
Door trim .....	BT-18
Drive belt inspection (GA) .....	MA-18
Drive belt inspection (SR) .....	MA-10
Drive plate runout (GA) .....	EM-105
Drive plate runout (SR) .....	EM-58
Drive shaft (front) .....	FA-13
Dropping resistor (A/T) .....	AT-119
DTRL - Wiring diagram .....	EL-53
Dual pressure switch .....	HA-49

## E

ECCS basic inspection (GA) .....	EC-310
ECCS basic inspection (SR) .....	EC-63
ECCS circuit diagram (GA) .....	EC-243
ECCS circuit diagram (SR) .....	EC-9
ECCS component parts location (GA) .....	EC-245
ECCS component parts location (SR) .....	EC-11
ECCS fail-safe system (GA) .....	EC-314
ECCS fail-safe system (SR) .....	EC-67
ECCS on board diagnostic system (GA) .....	EC-271
ECCS on board diagnostic system (SR) .....	EC-34
ECCS symptom matrix chart (GA) .....	EC-315
ECCS symptom matrix chart (SR) .....	EC-68
ECCS system diagram and chart (GA) .....	EC-244
ECCS system diagram and chart (SR) .....	EC-10
ECM input/output signal (GA) .....	EC-323
ECM input/output signal (SR) .....	EC-75
ECTS - Wiring diagram (GA) .....	EC-357
ECTS - Wiring diagram (SR) .....	EC-97
EGR control (EGRC) - BPT valve (GA) .....	EC-432
EGR control (EGRC) - BPT valve (SR) .....	EC-158
EGR control (EGRC) - solenoid valve (GA) .....	EC-509
EGR control (EGRC) - solenoid valve (SR) .....	EC-191
EGR control valve (GA) .....	EC-430
EGR control valve (SR) .....	EC-156
EGR temperature sensor (GA) .....	EC-514
EGR temperature sensor (SR) .....	EC-196
EGR valve and EVAP canister purge control	
solenoid valve .....	EC-195
EGRC1 - Wiring diagram (GA) .....	EC-428
EGRC1 - Wiring diagram (SR) .....	EC-153
EGRC/V - Wiring diagram (GA) .....	EC-511
EGRC/V - Wiring diagram (SR) .....	EC-193
EGR/TS - Wiring diagram (GA) .....	EC-516
EGR/TS - Wiring diagram (SR) .....	EC-198
Electric sun roof .....	EL-145
Electrical diagnoses .....	GI-18
Electrical load signal circuit .....	EC-577
Electrical units location .....	EL-232
Electronic ignition system (GA) .....	EC-253

# ALPHABETICAL INDEX

Electronic ignition system (SR).....	EC-19	FICD - Wiring diagram (GA) .....	EC-573
Engine compartment.....	BT-38	FICD - Wiring diagram (SR).....	EC-237
Engine control circuit diagram (GA).....	EC-243	Final drive (FF M/T) (RS5F31A) .....	MT-22
Engine control circuit diagram (SR).....	EC-9	Final drive (FF M/T) (RS5F32V) .....	MT-46
Engine control module (ECM) (GA).....	EC-479	Final drive (FF A/T) (RE4F03V) .....	AT-290
Engine control module (ECM) (SR) .....	EC-172	Final drive (FF A/T) (RL4F03A) .....	AT-286
Engine coolant temperature sensor (ECTS) (GA).....	EC-355	Finisher, interior - See Trim.....	BT-15
Engine coolant temperature sensor (ECTS) (SR).....	EC-96	Finisher, trunk lid.....	BT-25
Engine oil filter replacement (GA).....	MA-23	Floor trim .....	BT-15
Engine oil filter replacement (SR).....	MA-15	Flow charts.....	GI-30
Engine oil precautions.....	GI-5	Fluid temperature sensor (A/T).....	AT-88
Engine oil replacement (GA).....	MA-23	Fluids.....	MA-8
Engine oil replacement (SR).....	MA-14	Flywheel runout (GA) .....	EM-105
Engine outer component parts (GA).....	EM-62	Flywheel runout (SR) .....	EM-58
Engine outer component parts (SR).....	EM-7	Fog lamp, front.....	EL-62
Engine removal (GA).....	EM-93	Fog lamp, front, removal and installation.....	BT-5
Engine removal (SR).....	EM-46	Fork rod (M/T) (RS5F31A) .....	MT-13
Engine room - See Engine compartment .....	BT-38	Fork rod (M/T) (RS5F32V) .....	MT-33
Engine serial number.....	GI-36	Forward clutch.....	AT-257
Engine trouble diagnoses (GA).....	EC-306	F/PUMP - Wiring diagram (GA) .....	EC-566
Engine trouble diagnoses (SR).....	EC-59	F/PUMP - Wiring diagram (SR) .....	EC-225
EVAP canister (GA).....	EC-255	Freeze frame data.....	EC-36, EC-273, EC-293
EVAP canister (SR).....	EC-22	FRO2 - Wiring diagram (GA) .....	EC-373
EVAP canister purge control solenoid valve.....	EC-191	FRO2 - Wiring diagram (SR) .....	EC-113
EVAP canister purge control valve .....	EC-255, EC-447	FRO2/H - Wiring diagram (GA).....	EC-379
EVAP canister purge volume control valve.....	EC-255, EC-524	FRO2/H - Wiring diagram (SR).....	EC-119
EVAP canister vent control valve.....	EC-455	Front axle .....	FA-8
EVAP control system pressure sensor .....	EC-460	Front bumper.....	BT-5
EVAP control system purge flow monitoring diagnosis.....	EC-531	Front disc brake .....	BR-19
EVAP control system (small leak) diagnosis .....	EC-437	Front door.....	BT-9
EVAP vapor lines inspection (GA) .....	MA-25	Front fog lamp.....	EL-62
EVAP vapor lines inspection (SR) .....	MA-17	Front fog lamp removal and installation.....	BT-5
Evaporative emission (EVAP) system (GA).....	EC-255	Front heated oxygen sensor (HO2S) (GA).....	EC-371
Evaporative emission (EVAP) system (SR).....	EC-22	Front heated oxygen sensor (HO2S) (SR) .....	EC-111
Exhaust gas recirculation (EGR) valve (GA) .....	EC-424	Front heated oxygen sensor (HO2S) heater (GA).....	EC-377
Exhaust gas recirculation (EGR) valve (SR) .....	EC-149	Front heated oxygen sensor (HO2S) heater (SR).....	EC-117
Exhaust system.....	FE-6	Front heated oxygen sensor (HO2S) monitor... (GA).....	EC-285 EC-372
Exhaust system inspection.....	MA-26	Front heated oxygen sensor (HO2S) monitor (SR).....	EC-112
Exterior .....	BT-22	Front oxygen sensor (O2S) (GA).....	EC-371
Exterior lamp .....	EL-59	Front oxygen sensor (O2S) (SR).....	EC-111
<b>F</b>			
Fan switch.....	HA-48	Front oxygen sensor (O2S) monitor (GA).....	EC-282
Fast idle.....	EC-262	Front oxygen sensor (O2S) monitor (SR).....	EC-36
Fast idle cam (FIC) .....	EC-262	Front passenger air bag.....	RS-16
Fast idle cam (FIC) inspection and adjustment.....	EC-262	Front seat.....	BT-28
F/FOG - Wiring diagram.....	EL-63	Front seat belt.....	RS-3
		Front suspension.....	FA-24
		Front washer .....	EL-122
		Front wiper .....	EL-122
		FUEL - Wiring diagram (GA).....	EC-393

# ALPHABETICAL INDEX

FUEL - Wiring diagram (SR).....	EC-128
Fuel check valve .....	EC-23
Fuel cut control (at no load & high engine speed) (GA) .....	EC-254
Fuel cut control (at no load & high engine speed) (SR).....	EC-21
Fuel filler lid.....	BT-7
Fuel filter replacement (GA).....	MA-22
Fuel filter replacement (SR).....	MA-13
Fuel gauge (with tachometer).....	EL-83
Fuel gauge (without tachometer).....	EL-90
Fuel injection system (GA).....	EC-391
Fuel injection system (SR).....	EC-126
Fuel injector (GA).....	EC-557
Fuel injector (SR).....	EC-217
Fuel line inspection (GA).....	MA-21
Fuel line inspection (SR).....	MA-13
Fuel precautions.....	GI-6
Fuel pressure check (GA).....	EC-260
Fuel pressure check (SR).....	EC-25
Fuel pressure regulator.....	EC-261
Fuel pressure release (GA).....	EC-260
Fuel pressure release (SR).....	EC-25
Fuel pump and gauge.....	FE-5
Fuel pump (GA).....	EC-564
Fuel pump (SR).....	EC-223
Fuel pump relay (GA).....	EC-568
Fuel pump relay (SR).....	EC-228
Fuel system.....	FE-3
Fuel tank vacuum relief valve .....	EC-23
Fuse.....	EL-16
Fuse block.....	Foldout page
Fusible link .....	EL-16

## G

Garage jack and safety stand.....	GI-39
Gauges (with tachometer).....	EL-81
Gauges (without tachometer).....	EL-88
Gears (M/T) (RS5F31A).....	MT-12
Gears (M/T) (RS5F32V).....	MT-32
Generator .....	EL-38
Generator - See Alternator.....	EL-38
Generic scan tool (GST) (GA) .....	EC-304
Generic scan tool (GST) (SR).....	EC-57
Glass (front door).....	BT-9
Glass (rear door).....	BT-11
Governor valve assembly (RL4F03A).....	AT-43
Grille - See Exterior.....	BT-5
Ground distribution.....	EL-17

## H

Harness connector.....	EL-3
Harness layout.....	EL-233
Hazard warning lamp .....	EL-65
Headlamp.....	EL-47
Headlamp aiming control .....	EL-58
Headlining - See Roof trim.....	BT-20
Heated oxygen sensor (HO2S) (front) (GA) .....	EC-371
Heated oxygen sensor (HO2S) (front) (SR) .....	EC-111
Heated oxygen sensor (HO2S) heater (front) (GA).....	EC-377
Heated oxygen sensor (HO2S) heater (front) (SR).....	EC-117
Heated oxygen sensor (HO2S) heater (rear) (GA).....	EC-386
Heated oxygen sensor (HO2S) heater (rear) (SR).....	EC-125
Heated oxygen sensor (HO2S) monitor.....	EC-285
Heated oxygen sensor monitor (HO2S) (front).....	EC-285
Heated oxygen sensor monitor (HO2S) (front) (GA).....	EC-372
Heated oxygen sensor monitor (HO2S) (front) (SR).....	EC-112
Heated oxygen sensor (rear) (GA) .....	EC-381
Heated oxygen sensor (rear) (SR).....	EC-121
HEATER - Wiring diagram .....	HA-35
Heater system - Wiring diagram .....	HA-35
Height (Dimensions).....	GI-37
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure .....	HA-54
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution .....	HA-9
High clutch.....	AT-252
H/LAMP - Wiring diagram .....	EL-48
Hood.....	BT-5
Horn.....	EL-131
HORN - Wiring diagram.....	EL-131
How to erase DTC for ECCS OBD system (GA).....	EC-280
How to erase DTC for ECCS OBD system (SR).....	EC-34
Hydraulic lash adjuster inspection .....	EM-41

## I

IACV - air regulator.....	EC-236
IACV-AAC valve inspection (GA).....	EC-474
IACV-AAC valve inspection (SR).....	EC-171
IACV-FICD solenoid valve (GA).....	EC-573

# ALPHABETICAL INDEX

IACV-FICD solenoid valve (SR).....	EC-237
IATS - Wiring diagram (GA).....	EC-352
IATS - Wiring diagram (SR).....	EC-93
Identification plate.....	GI-36
Idle air control (IAC) system (GA).....	EC-469
Idle air control (IAC) system (SR).....	EC-167
Idle air control valve (IACV) - air regulator.....	EC-233
Idle air control valve (IACV) (GA).....	EC-469
Idle air control valve (IACV) (SR).....	EC-167
Idle mixture ratio (GA).....	EC-264
Idle mixture ratio (SR).....	EC-27
Idle speed (GA).....	EC-264
Idle speed (SR).....	EC-27
Ignition coil (GA).....	EC-503
Ignition coil (SR).....	EC-185
Ignition control system (GA).....	EC-253
Ignition control system (SR).....	EC-19
Ignition timing (GA).....	EC-264
Ignition timing (SR).....	EC-27
Ignition wire inspection (GA).....	EC-408
Ignition wire inspection (SR).....	EC-134
IGN/SG - Wiring diagram (GA).....	EC-500
IGN/SG - Wiring diagram (SR).....	EC-182
ILL - Wiring diagram.....	EL-74
Illumination.....	EL-72
Inhibitor switch (GA).....	EC-481
Inhibitor switch (SR).....	EC-174
Inhibitor switch (RE4F03V).....	AT-87
Inhibitor switch (RL4F03A).....	AT-39
INJECT - Wiring diagram (GA).....	EC-557
INJECT - Wiring diagram (SR).....	EC-217
Injector (GA).....	EC-560
Injector (SR).....	EC-219
Injector removal and installation (GA).....	EC-261
Injector removal and installation (SR).....	EC-26
Input shaft (RS5F31A).....	MT-16
Input shaft (RS5F32V).....	MT-37
Instrument panel.....	BT-12
Intake air temperature sensor (GA).....	EC-349
Intake air temperature sensor (SR).....	EC-91
Intake door control linkage adjustment.....	HA-50
Intake door motor.....	HA-50
Intake manifold (GA).....	EM-62
Intake manifold (SR).....	EM-7
Intake valve timing control.....	EC-491
Intake valve timing control solenoid valve.....	EC-491
Interior.....	BT-15
Interior lamp.....	EL-72
Interior lamp on-off control.....	EL-76
INT/L - Wiring diagram.....	EL-78
IVC - Wiring diagram.....	EC-495

## J

Jacking points.....	GI-38
Joint connector (J/C).....	Foldout page

## K

Keyless entry system - See Multi-remote control system.....	EL-187
Knock sensor (KS) (GA).....	EC-409
Knock sensor (KS) (SR).....	EC-135
Knuckle spindle.....	FA-8
KS - Wiring diagram (GA).....	EC-410
KS - Wiring diagram (SR).....	EC-136

## L

Length (Dimensions).....	GI-37
License lamp.....	EL-60
Lifting points.....	GI-38
Line pressure solenoid valve.....	AT-116
Line pressure test (A/T) (RE4F03V).....	AT-152
Line pressure test (A/T) (RL4F03A).....	AT-42
Liquid gasket application.....	EM-2
LKUP - Wiring diagram.....	EC-541
LOAD - Wiring diagram.....	EC-577
Location of electrical units.....	EL-231
Lock, door (front).....	BT-9
Lock, door (rear).....	BT-11
Low and reverse brake.....	AT-263
Lubricant (R134a) A/C.....	HA-56
Lubricants.....	MA-8
Lubrication circuit (GA).....	LC-13
Lubrication circuit (SR).....	LC-4
Lubrication oil A/C.....	HA-56
Lubrication-locks, hinges and hood latches.....	MA-31
Luggage compartment trim.....	BT-21
Luggage room lamp.....	EL-76

## M

MAFS - Wiring diagram (GA).....	EC-339
MAFS - Wiring diagram (SR).....	EC-88
Magnet clutch.....	HA-61
MAIN - Wiring diagram (GA).....	EC-332
MAIN - Wiring diagram (SR).....	EC-81
Main drive gear (M/T) (RS5F31A).....	MT-12
Main drive gear (M/T) (RS5F32V).....	MT-32
Mainshaft (M/T) (RS5F31A).....	MT-18
Mainshaft (M/T) (RS5F32V).....	MT-40

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
**IDX**

# ALPHABETICAL INDEX

Maintenance .....	MA-3
Maintenance (engine) (GA).....	MA-18
Maintenance (engine) (SR).....	MA-10
Malfunction indicator lamp (MIL) (GA).....	EC-282
Malfunction indicator lamp (MIL) (SR).....	EC-36
Manual steering gear .....	ST-16
Manual transaxle number.....	GI-36
Manual transmission oil replacement.....	MA-26
MAP/BARO switch solenoid valve .....	EC-485
Mass air flow sensor (MAFS) (GA).....	EC-336
Mass air flow sensor (MAFS) (SR).....	EC-85
Master cylinder (brake) .....	BR-12
METER - Wiring diagram .....	EL-83
Meter (with tachometer) .....	EL-81
Meter (without tachometer) .....	EL-88
MIL & Data link connectors circuit (GA) .....	EC-581
MIL & Data link connectors circuit (SR).....	EC-241
MIL/DL Wiring diagram (GA).....	EC-581
MIL/DL Wiring diagram (SR).....	EC-241
MIRROR - Wiring diagram.....	EL-147
Mirror, door.....	BT-37
Mirror, out side .....	BT-37
Misfire (GA) .....	EC-405
Misfire (SR) .....	EC-131
Mode door control linkage adjustment.....	HA-49
Model variation .....	GI-34
Molding - See Exterior .....	BT-22
M/T overhaul (RS5F31A) .....	MT-11
M/T overhaul (RS5F32V) .....	MT-31
M/T removal and installation .....	MT-8
Mud guard - See Exterior.....	BT-26
MULTI - Wiring diagram .....	EL-190
Multiport fuel injection (MFI) system (GA) .....	EC-250
Multiport fuel injection (MFI) system (SR) .....	EC-17
Multiport fuel injection precautions.....	GI-6
Multiport fuel injection system inspection .....	EC-126
Multi-remote control system.....	EL-187

## N

Neutral position switch (GA) .....	EC-482
Neutral position switch (M/T) .....	MT-7
Neutral position switch (SR).....	EC-175

## O

Oil change (capacity) .....	MA-8
Oil change (interval).....	MA-5
Oil pan (engine) (GA).....	EM-67
Oil pan (engine) (SR).....	EM-11
Oil pressure (GA) .....	LC-14
Oil pressure (SR) .....	LC-4

Oil pressure relief valve (GA).....	LC-16
Oil pump (A/T).....	AT-214
Oil pump (GA) .....	LC-15
Oil pump (SR) .....	LC-5
Oil pump regulator valve (GA) .....	LC-15
Oil pump regulator valve (SR) .....	LC-7
Oil seal replacement (engine) (GA) .....	EM-80
Oil seal replacement (engine) (SR) .....	EM-30
Opera window .....	BT-35
Out side mirror .....	BT-37
Overdrive control switch (RE4F03V).....	AT-87
Overdrive control switch (RL4F03A).....	AT-38
Overrun clutch.....	AT-257
Overrun clutch solenoid valve.....	AT-116
Oversize piston (GA).....	EM-101
Oversize piston (SR).....	EM-54
Oxygen sensor monitor (O2S) (front) .....	EC-285
Oxygen sensor monitor (O2S) (front) (GA).....	EC-372
Oxygen sensor monitor (O2S) (front) (SR).....	EC-112
Oxygen sensor (O2S) (front) (GA).....	EC-371
Oxygen sensor (O2S) (front) (SR) .....	EC-111

## P

Parking brake control .....	BR-34
Parking lamp .....	EL-65
Park/Neutral position switch (GA).....	EC-481
Park/Neutral position switch (SR) .....	EC-174
PCV (positive crankcase ventilation) (GA).....	EC-259
PCV (positive crankcase ventilation) (SR).....	EC-24
PGC/V - Wiring diagram .....	EC-528
Pilot bushing replacement.....	EM-58
Piston assembly (GA) .....	EM-105
Piston assembly (SR).....	EM-59
Piston pin inspection (GA) .....	EM-98
Piston pin inspection (SR).....	EM-51
Piston ring inspection (GA) .....	EM-99
Piston ring inspection (SR) .....	EM-52
Piston to bore clearance (GA) .....	EM-100
Piston to bore clearance (SR).....	EM-53
PNP/SW - Wiring diagram (GA).....	EC-483
PNP/SW - Wiring diagram (SR).....	EC-176
POWER - Wiring diagram.....	EL-7
Power door lock .....	EL-179
Power door mirror .....	EL-147
Power steering fluid level.....	ST-5, MA-30
Power steering gear.....	ST-21
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch (GA) .....	EC-569
Power steering oil pressure switch (SR).....	EC-229
Power steering oil pump .....	ST-26
Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6



# ALPHABETICAL INDEX

Power transistor & ignition coil (GA).....	EC-498
Power transistor & ignition coil (SR).....	EC-180
Power transistor (GA).....	EC-503
Power transistor (SR).....	EC-185
Power window.....	EL-172
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-462
Pressure plate - See Clutch cover.....	CL-6
Pressure test (A/T) (RE4F03V).....	AT-152
Pressure test (A/T) (RL4F03A).....	AT-42
PST/SW - Wiring diagram (GA).....	EC-569
PST/SW - Wiring diagram (SR).....	EC-229

## R

Rack retainer adjustment.....	ST-18
Radiator fan - See Cooling fan (GA).....	LC-23
Radiator fan - See Cooling fan (SR).....	LC-12
Radiator (GA).....	LC-23
Radiator (SR).....	LC-12
Radio - See Audio.....	EL-141
Rear air spoiler.....	BT-27
Rear axle.....	RA-6
Rear axle (disc brake type).....	RA-6
Rear axle (drum brake type).....	RA-6
Rear bumper.....	BT-7
Rear combination lamp removal and installation.....	BT-26
Rear disc brake.....	BR-26
Rear door.....	BT-11
Rear drum brake.....	BR-23
Rear heated oxygen sensor (HO2S) (GA).....	EC-381
Rear heated oxygen sensor (HO2S) (SR).....	EC-121
Rear heated oxygen sensor (HO2S) heater (GA).....	EC-386
Rear heated oxygen sensor (HO2S) heater (SR).....	EC-125
Rear seat.....	BT-29
Rear seat belt.....	RS-3
Rear side window.....	BT-35
Rear suspension.....	RA-8
Rear window.....	BT-34
Rear window defogger.....	EL-132
Rear window signal.....	EC-577
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-4
Refrigerant discharging evacuating charging.....	HA-54
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-58
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-5
Resistor (GA).....	EC-503
Resistor (SR).....	EC-185

Reverse clutch.....	AT-248
Reverse gear (M/T) (RS5F31A).....	MT-12
Reverse gear (M/T) (RS5F32V).....	MT-32
Reverse idler shaft (M/T) (RS5F31A).....	MT-12
Reverse idler shaft (M/T) (RS5F32V).....	MT-32
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-7
Revolution sensor (A/T).....	AT-91
Road wheel size.....	GI-37
Roof trim.....	BT-20
Room lamp.....	EL-76
Room lamp - See Interior lamp.....	EL-76
Rotor disc (front).....	FA-8
RRO2 - Wiring diagram (GA).....	EC-384
RRO2 - Wiring diagram (SR).....	EC-123
RRO2/H - Wiring diagram.....	EC-388

## S

SAE J1930 terminology list.....	GI-43
SAE J1979 - Mode 1 ~ 7.....	EC-271, EC-305
Seal - See Exterior.....	BT-22
Seat belt, front.....	RS-3
Seat belt inspection.....	MA-31
Seat belt, rear.....	RS-3
Seat, front.....	BT-28
Seat, rear.....	BT-29
Self-diagnostic results (GA).....	EC-282
Self-diagnostic results (SR).....	EC-36
SFT, RE - Wiring diagram.....	AT-163
SFT, RL - Wiring diagram.....	AT-155
SHIFT - Wiring diagram (RE4F03V).....	AT-163
SHIFT - Wiring diagram (RL4F03A).....	AT-155
Shift control (M/T) (RS5F31A).....	MT-13
Shift control (M/T) (RS5F32V).....	MT-33
Shift fork (M/T) (RS5F31A).....	MT-13
Shift fork (M/T) (RS5F32V).....	MT-33
Shift lock system (RE4F03V).....	AT-161
Shift lock system (RL4F03A).....	AT-154
Shift schedule (RE4F03V).....	AT-73
Shift schedule (RL4F03A).....	AT-31
Shift solenoid valve (A/T).....	AT-116
Shock absorber (front).....	FA-25
Shock absorber (rear).....	RA-10
Side trim.....	BT-15
Side window - See Rear side window.....	BT-35
Smart entrance control unit.....	EL-230
SMJ (super multiple junction).....	Foldout page
Spare tire size.....	GI-37
Spark plug replacement (GA).....	MA-24
Spark plug replacement (SR).....	MA-15
Speedometer (with tachometer).....	EL-83
Speedometer (without tachometer).....	EL-90

# ALPHABETICAL INDEX

Spiral cable.....	RS-14
Spot lamp.....	EL-76
Spring (Wheelarch) height.....	FA-5
SROOF - Wiring diagram.....	EL-146
SRS - See Supplemental Restraint System.....	RS-10
SRS - Wiring diagram.....	RS-25
SRS Trouble diagnoses.....	RS-22
S/SIG - Wiring diagram (GA).....	EC-561
S/SIG - Wiring diagram (SR).....	EC-220
Stabilizer bar (front).....	FA-26
Stall test (A/T) (RE4F03V).....	AT-149
Stall test (A/T) (RL4F03A).....	AT-40
Standardized relay.....	EL-4
START - Wiring diagram.....	EL-27
Start signal (GA).....	EC-561
Start signal (SR).....	EC-220
Starter.....	EL-30
Starting system.....	EL-25
Steering gear and linkage inspection.....	MA-30
Steering knuckle.....	FA-8
Steering linkage (Model PR24T).....	ST-21
Steering linkage (Model R24N).....	ST-16
Steering switch.....	EL-45
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force.....	ST-6
Stop lamp.....	EL-60
Striking rod (M/T) (RS5F31A).....	MT-13
Striking rod (M/T) (RS5F32V).....	MT-33
Strut (front).....	FA-25
Sun roof, electric.....	EL-145
Sunroof.....	BT-30
Supplement restraint system - Wiring diagram.....	RS-25
Supplemental Restraint System.....	RS-10
SW/V - Wiring diagram.....	EC-487
Symbols and abbreviations.....	GI-8
Synchronizer (M/T) (RS5F32V).....	MT-32
Synchronizer (M/T) (RS5F31A).....	MT-12
System readiness test (SRT) code.....	EC-273

## T

Tachometer.....	EL-83
Tail lamp.....	EL-60
TAIL/L - Wiring diagram.....	EL-60
Tank fuel temperature sensor.....	EC-401
Temperature control cable and linkage adjustment.....	HA-50
TFTS - Wiring diagram.....	EC-402
THEFT - Wiring diagram.....	EL-207
Theft warning system.....	EL-201
Thermal protector.....	HA-49

Thermo control amp.....	HA-49
Thermostat (GA).....	LC-21
Thermostat (SR).....	LC-10
Three way catalyst (GA).....	EC-434
Three way catalyst (SR).....	EC-160
Three way catalyst precautions.....	GI-6
Throttle bodies (GA).....	EM-63
Throttle bodies (SR).....	EM-8
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment (GA).....	EC-310
Throttle position sensor adjustment (SR).....	EC-63
Throttle position sensor (TPS) (GA).....	EC-360
Throttle position sensor (TPS) (SR).....	EC-100
Throttle position switch (RE4F03V).....	AT-86
Throwout bearing - See Clutch release bearing.....	CL-5
Tie-rod ball joints (Model PR24T).....	ST-24
Tie-rod ball joints (Model R24N).....	ST-18
Tie-rod (Model PR24T).....	ST-24
Tie-rod (Model R24N).....	ST-18
Tightening torque of standard bolts.....	GI-42
Timing chain (GA).....	EM-69
Timing chain (SR).....	EM-16
Tire rotation.....	MA-30
Tire size.....	GI-37
Torque converter clutch solenoid valve (RE4F03V).....	AT-116
Torque converter clutch solenoid valve (RL4F03A).....	AT-36
Torque converter installation.....	AT-178
Torque convertor clutch solenoid valve.....	EC-539
Tow truck towing.....	GI-40
TPS - Wiring diagram (GA).....	EC-363
TPS - Wiring diagram (SR).....	EC-103
TP/SW - Wiring diagram.....	EC-476
Transmission case (M/T) (RS5F31A).....	MT-11
Transmission case (M/T) (RS5F32V).....	MT-31
Transverse link (front).....	FA-27
Tread-FR&RR (Dimensions).....	GI-37
Trim (interior).....	BT-15
Trunk lid.....	BT-7
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid.....	BT-7
Trunk room lamp.....	EL-76
Trunk room trim.....	BT-21
TURN - Wiring diagram.....	EL-68
Turn signal lamp.....	EL-65
Two trip detection logic (GA).....	EC-271
Two trip detection logic (SR).....	EC-34
Two-pole lift.....	GI-40

# ALPHABETICAL INDEX

## U

Under body..... BT-40

## V

Vacuum cut valve..... EC-523  
 Vacuum cut valve bypass valve..... EC-519  
 Vacuum hose (brake system) ..... BR-18  
 Vacuum hose drawing (ECCS) (GA) ..... EC-248  
 Vacuum hose drawing (ECCS) (SR)..... EC-15  
 Valve clearance ..... EM-90  
 Valve guide (GA) ..... EM-85  
 Valve guide (SR) ..... EM-38  
 Valve seat (GA) ..... EM-87  
 Valve seat (SR) ..... EM-39  
 Valve spring (GA) ..... EM-88  
 Valve spring (SR) ..... EM-40  
 Vehicle identification number ..... GI-35  
 Vehicle recovery (freeing a stuck vehicle) ..... GI-41  
 Vehicle speed sensor (VSS) (GA) ..... EC-465  
 Vehicle speed sensor (VSS) (SR)..... EC-163  
 VENT/V - Wiring diagram..... EC-457  
 Viscosity number (SAE) ..... MA-8  
 Viscous coupling (FF M/T) (RS5F32V)..... MT-46  
 Viscous coupling (FF A/T) (RE4F03V)..... AT-290  
 VSS - Wiring diagram (GA)..... EC-467  
 VSS - Wiring diagram (SR)..... EC-165

## W

WARN - Wiring diagram..... EL-100  
 Warning buzzer ..... EL-109  
 Warning chime ..... EL-109  
 Warning lamps ..... EL-97  
 Washer, front ..... EL-122  
 Water cock control rod adjustment ..... HA-50  
 Water pump (GA) ..... LC-20

Water pump (SR) ..... LC-9  
 Water temperature gauge (with tachometer) ..... EL-83  
 Water temperature gauge (without  
 tachometer) ..... EL-90 GI  
 Weatherstrip - See Exterior..... BT-22  
 Wheel alignment (front)..... FA-6 MA  
 Wheel alignment (rear)..... RA-5  
 Wheel balance ..... MA-30 EM  
 Wheel bearing (front axle)..... FA-10 EM  
 Wheel bearing (rear) ..... RA-4  
 Wheel hub and steering knuckle..... FA-8 LC  
 Wheel hub (front) ..... FA-8  
 Wheel hub (rear) ..... RA-6  
 Wheel sensors (ABS)..... BR-38 EC  
 Wheel size..... GI-37  
 Wheelarch height ..... FA-5  
 Wheelbase (Dimensions) ..... GI-37 FE  
 Wide open & closed throttle position (CTP)  
 switch (GA) ..... EC-360 CL  
 Wide open & closed throttle position (CTP)  
 switch (SR)..... EC-100  
 Width (Dimensions) ..... GI-37 MT  
 WINDOW - Wiring diagram..... EL-176  
 Window antenna..... EL-195  
 Window, door (front)..... BT-9 AT  
 Window, door (rear)..... BT-11  
 Window, opera..... BT-35 FA  
 Window, rear ..... BT-34 RA  
 Window, rear side..... BT-35  
 Window, side - See Rear side window ..... BT-35 RA  
 Windshield ..... BT-33  
 Windshield washer - See Front washer..... EL-122  
 Windshield wiper - See Front wiper..... EL-122 BR  
 WIPER - Wiring diagram..... EL-124  
 Wiper and washer ..... EL-122  
 Wiper, front..... EL-122 ST  
 Wiring diagrams ..... GI-9  
 Withdrawal lever (clutch)..... CL-5 RS  
 Wrist pin - See Piston pin inspection (GA) ..... EM-98  
 Wrist pin - See Piston pin inspection (SR) ..... EM-51 BT