



SUPER MULTIPLE JUNCTION (SMJ)

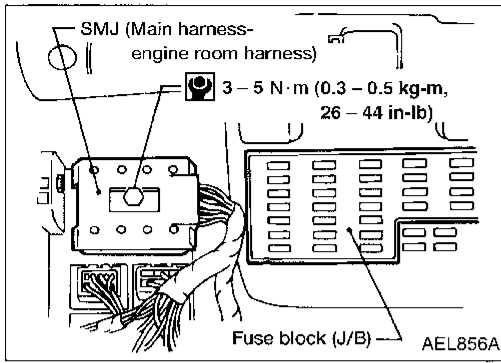

INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.


 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 44 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

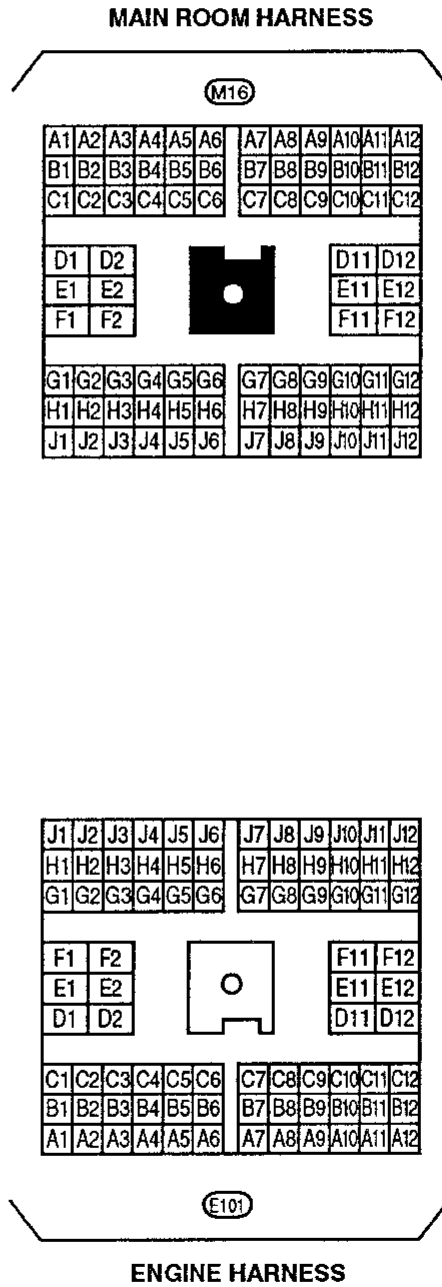


FUSE BLOCK - JUNCTION BOX (J/B)

Terminal Arrangement

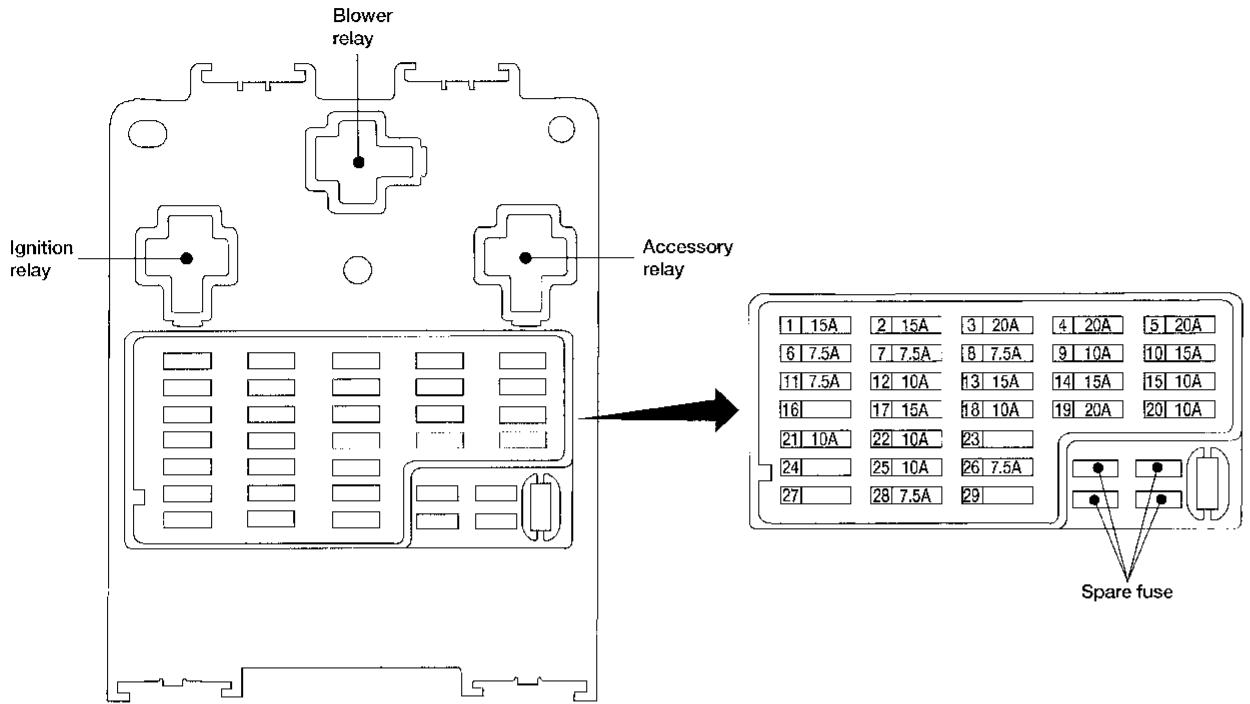


To main harness

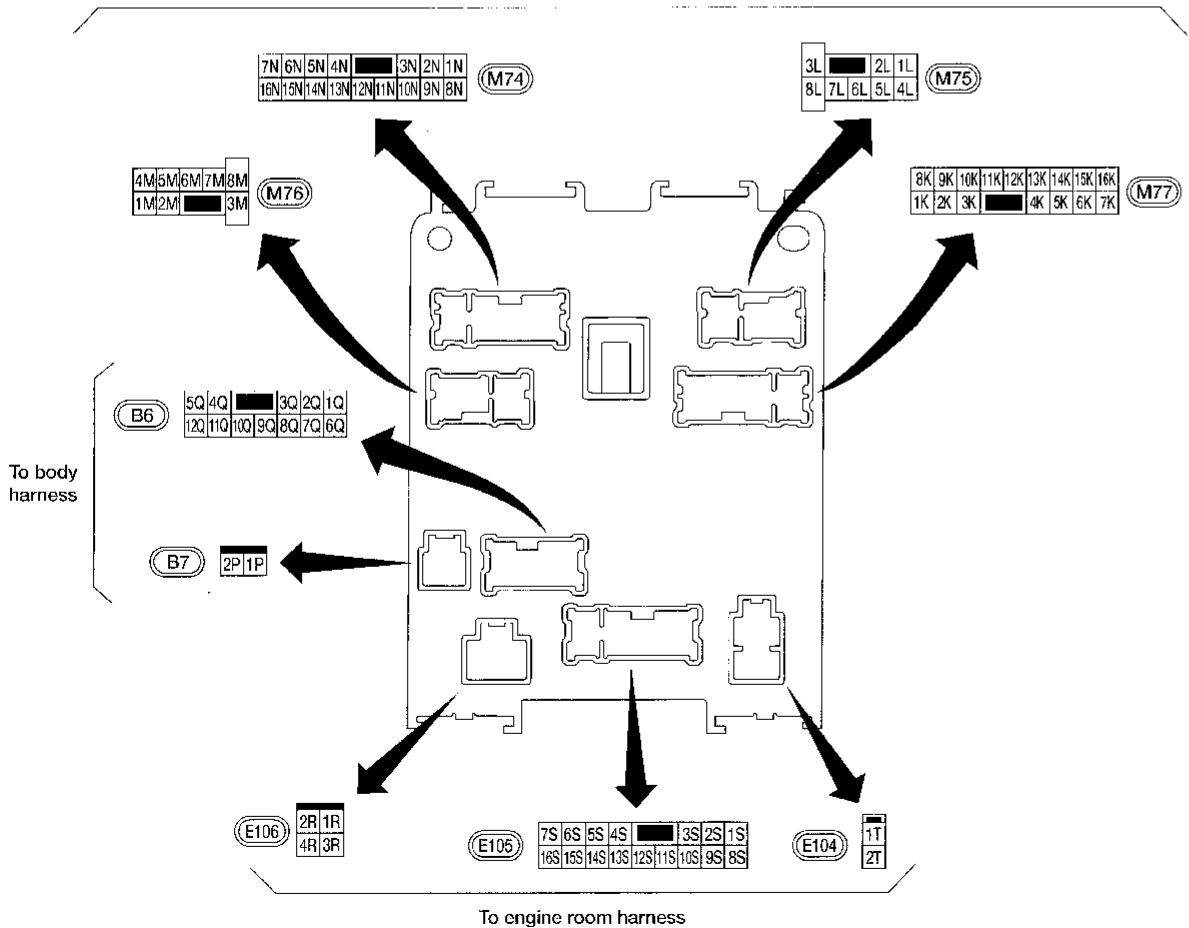


FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Fusible link box (E15)

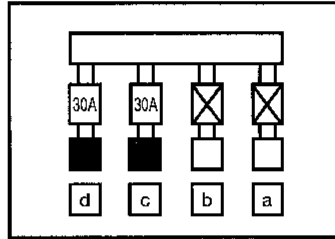


Fusible link box (E17)

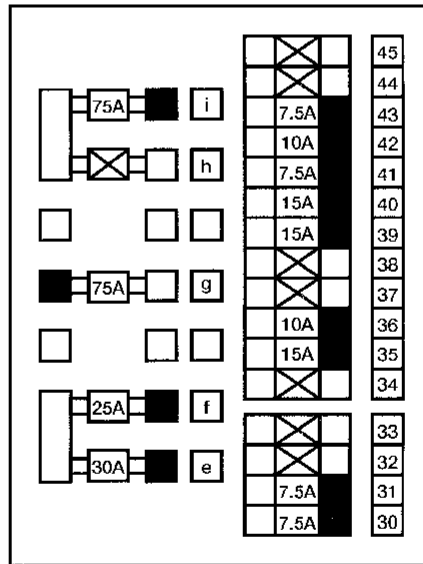


ELECTRICAL UNITS

Terminal Arrangement


ECM (ECGS CONTROL MODULE) (F24)

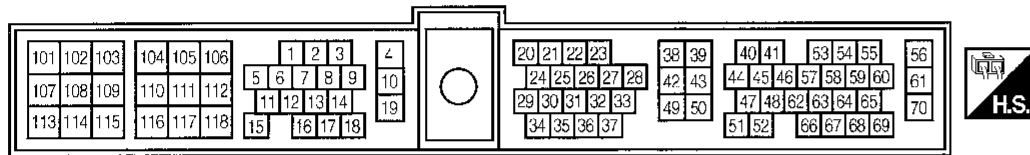

ABS CONTROL UNIT (B107)

 


AIRBAG DIAGNOSIS SENSOR UNIT (Z4)

 

View from harness side

 SMART ENTRANCE CONTROL UNIT (M37)



JOINT CONNECTOR (J/C)

Terminal Arrangement

