

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS - Wiring diagram	BR-44
ABS (anti-lock brake system).....	BR-33
ABS sensor rotor.....	FA-9
Absolute pressure sensor	EC-121
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component layout.....	HA-14
A/C compressor clutch removal and installation	HA-65
A/C compressor mounting.....	HA-64
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-8
A/C control linkage adjustment (manual A/C).....	HA-34
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (manual A/C)	HA-24
A/C harness layout (manual A/C)	HA-17
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-60
A/C HFC134a (R134a) system service tools.....	HA-9
A/C HFC134a system service equipment precaution	HA-11
A/C lubricant (R134a).....	HA-62
A/C lubrication oil	HA-62
A/C operational check.....	HA-25
A/C performance chart.....	HA-48
A/C performance test diagnoses.....	HA-46
A/C pressure switch	HA-13
A/C relay.....	HA-44
A/C service data specification.....	HA-71
A/C switch	HA-43
A/C symptom chart (manual A/C).....	HA-24
A/C trouble diagnoses (manual A/C)	HA-24
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag	RS-17
Air bag disposal.....	RS-21
Air bag precautions	GI-2
Air bleeding for brake system	BR-5
Air cleaner filter replacement	MA-14
Air conditioner - wiring diagram	HA-21
Air conditioner cut control	EC-20
Air conditioning - See A/C.....	HA-2
Air flow meter - See Mass air flow sensor.....	EC-112
Air mix door control linkage adjustment.....	HA-34
Air spoiler, rear.....	BT-29
AIRREG - Wiring diagram.....	EC-466
Alternator	EL-31
Angular tightening application.....	EM-2
Antenna	EL-116
Anti-lock brake system - See ABS.....	BR-33
Anti-lock brake system - Wiring diagram.....	BR-44
AP/SEN - Wiring diagram	EC-121
ASCD - Wiring diagram.....	EL-124
ASCD (automatic speed control device).....	EL-120
A/T - Wiring diagram	AT-13
A/T diagnosis communication line	EC-430
A/T fluid temperature sensor.....	AT-88
A/T removal and installation.....	AT-192
A/T self-diagnoses.....	AT-42
A/T shift lock system	AT-182
A/T shift lock system - Wiring diagram	AT-183
A/T trouble diagnoses	AT-53
ATDIAG - Wiring diagram	EC-430
Audio	EL-113
AUDIO - Wiring diagram	EL-114
Audio and A/C control removal and installation - See Instrument panel.....	BT-13
Automatic speed control system - See ASCD..	EL-120
Automatic transaxle number	GI-37
Automatic transmission fluid replacement	MA-21
Auxiliary air control (AAC).....	EC-306

B

BACK/L - Wiring diagram	EL-53
Back-up lamp	EL-53
Back-up lamp switch (M/T)	MT-7
Ball joint front axle.....	FA-26
Battery	EL-18
Baulk ring (M/T).....	MT-11
Blower motor	HA-30
Blower resistor.....	HA-30
Board-on lift.....	GI-40
Body alignment.....	BT-42
Boring/honing cylinder block	EM-57
BPT valve	EC-264, EC-269
Brake booster.....	BR-15
Brake control valve (Proportioning valve).....	BR-8
Brake fluid change	BR-4
Brake fluid level.....	MA-21
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-21
Brake lines and cables inspection	MA-21
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications.....	EL-227
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPS/V - Wiring diagram.....	EC-405, EC-410

ALPHABETICAL INDEX

C

Camshaft inspection..... EM-39
 Camshaft position sensor (CMPS)..... EC-250
 Canister - See EVAP canister..... EC-22
 CANI/V - Wiring diagram..... EC-416
 CHARGE - Wiring diagram..... EL-32
 Charging system..... EL-31
 Chassis and body maintenance..... MA-19
 CIGAR - Wiring diagram..... EL-106
 Cigarette lighter..... EL-106
 Circuit breaker..... EL-14
 CKPS - Wiring diagram..... EC-245, EC-342
 Clearance lamp..... EL-54
 Closed loop control..... EC-326
 Closed throttle position switch..... EC-311
 Clutch cable..... CL-4
 Clutch cover..... CL-8
 Clutch disc..... CL-7
 Clutch pedal..... CL-4
 Clutch release bearing..... CL-6
 Clutch release mechanism..... CL-6
 Clutch withdrawal lever..... CL-6
 CMPS - Wiring diagram..... EC-250
 Coil spring (front)..... FA-24
 Coil spring (rear)..... RA-11
 Collision diagnosis..... RS-47
 Combination lamp, rear, removal and
 installation..... BT-27
 Combination meter..... EL-74
 Combination meter (needle type)..... EL-74
 Combination meter removal and installation -
 See Instrument panel..... BT-13
 Combination switch..... EL-38
 Compression pressure..... EM-12
 Compressor clutch removal and installation..... HA-65
 Compressor mounting..... HA-64
 Compressor precaution..... HA-7
 Compressor special service tool..... HA-8
 Connecting rod..... EM-55
 Connecting rod bearing clearance..... EM-59
 Connecting rod bushing clearance..... EM-60
 Connector inspection..... GI-17
 Console box - See Instrument panel..... BT-13
 CONSULT for ABS..... BR-51
 CONSULT for ECCS..... EC-62
 CONSULT general information..... GI-33
 Control lever (M/T)..... MT-9
 Control valve (A/T)..... AT-221
 Converter housing installation..... AT-193
 Coolant mixture ratio..... MA-9
 Coolant replacement..... MA-11
 COOL/F - Wiring diagram..... EC-438

Cooling circuit (engine)..... LC-8
 Cooling fan..... LC-13
 Cooling fan control..... EC-438
 Cooling fan motor..... HA-17, EC-451
 Cooling fan relay..... HA-17, EC-451
 Coupling sleeve (M/T)..... MT-11
 Crank angle sensor built into distributor - See
 Camshaft position sensor..... EC-250
 Crankcase emission control system - See
 positive crankcase ventilation..... EC-32
 Crankcase ventilation system - See positive
 crankcase ventilation..... EC-32
 Crankshaft..... EM-57
 Crankshaft position sensor (OBD)..... EC-245, EC-342
 Crankshaft position sensor (OBD) cog
 chipping..... EC-342
 Cruise control - See ASCD..... EL-120
 Cylinder block..... EM-53
 Cylinder block boring..... EM-57
 Cylinder head..... EM-35
 Cylinder head bolt tightening..... EM-26

D

Data link connector for Consult..... EC-33
 Daytime light system..... EL-45
 Daytime running light - See Daytime light
 system..... EL-45
 DEF - Wiring diagram..... EL-108
 Detonation sensor - See Knock sensor..... EC-241
 Diagnosis sensor unit..... RS-16
 Diagnostic trouble code (DTC) chart..... EC-87
 Diagnostic trouble code (DTC) for ECCS
 OBD system..... EC-2
 Differential gear (FF A/T)..... AT-269
 Differential gear (FF M/T)..... MT-25
 Dimensions..... GI-38
 Distributor..... EC-19
 Distributor ignition (DI) system..... EC-19
 D/LOCK - Wiring diagram..... EL-152
 Dome light - See Interior lamp..... EL-68
 Door, front..... BT-10
 Door glass..... BT-10, BT-12
 Door lock..... BT-10, BT-12
 Door mirror..... BT-41
 Door, rear..... BT-12
 Door trim..... BT-19
 Drive belt inspection..... MA-10
 Drive plate runout..... EM-61
 Drive shaft (front)..... FA-14
 Dropping resistor (A/T)..... AT-134
 DTC WORK SUPPORT..... EC-71

ALPHABETICAL INDEX

DTRL - Wiring diagram EL-48
Dual pressure switch..... HA-44

E

ECCS basic inspection..... EC-82
ECCS circuit diagram..... EC-9
ECCS component parts location..... EC-11
ECCS fail-safe system EC-88
ECCS on board diagnostic system..... EC-42
ECCS relay..... EC-107
ECCS symptom matrix chart..... EC-89
ECCS system diagram and chart EC-10
ECM input/output signal..... EC-97
ECTS - Wiring diagram..... EC-135, EC-152
EGR control (EGRC) - BPT valve..... EC-265
EGR control (EGRC) - solenoid valve EC-347
EGR control valve EC-262, EC-363
EGR temperature sensor EC-352
EGRC1 - Wiring diagram EC-256
EGRC/V - Wiring diagram..... EC-347
EGR/TS - Wiring diagram EC-352
Electric sun roof EL-117
Electrical diagnoses GI-20
Electrical units location..... EL-206
Electronic ignition (EI) system..... EC-19
Electronic ignition system..... EC-19
Engine compartment..... BT-42
Engine control circuit diagram..... EC-9
Engine control module (ECM)..... EC-316
Engine coolant temperature sensor
(ECTS) EC-135, EC-152
Engine oil filter replacement..... MA-15
Engine oil precautions..... GI-5
Engine oil replacement..... MA-14
Engine outer component parts..... EM-9
Engine removal EM-49
Engine room - See Engine compartment BT-42
Engine serial number GI-37
EVAP canister EC-22
EVAP canister purge control solenoid
valve EC-416, EC-422
EVAP canister purge control valve EC-416, EC-422
EVAP canister purge volume control
valve..... EC-22, EC-285, EC-377
EVAP canister vent control
valve..... EC-291, EC-385, EC-399
EVAP control system pressure sensor EC-296
EVAP control system purge flow monitoring
diagnosis EC-390
EVAP control system (small leak)
diagnosis..... EC-24, EC-274, EC-365
EVAP system close mode..... EC-24

EVAP vapor lines inspection..... MA-18
Evaporative emission (EVAP) system..... EC-22
Exhaust gas recirculation (EGR) valve..... EC-256
Exhaust system FE-6
Exhaust system inspection..... MA-19
Exterior BT-23
Exterior lamp EL-53

F

Fan switch HA-30
F/FOG - Wiring diagram..... EL-57
FICD - Wiring diagram EC-470
Final drive (FF A/T) AT-269
Final drive (FF M/T) MT-25
Finisher, interior - See Trim..... BT-16
Finisher, trunk lid BT-26
Floor trim BT-16
Flow charts GI-30
Fluid temperature sensor (A/T)..... AT-88
Fluids MA-8
Flywheel (clutch) CL-8
Flywheel runout..... EM-61
Fog lamp, front..... EL-56
Fog lamp, front, removal and installation..... BT-5
Fork rod (M/T) MT-12
Forward clutch..... AT-245
FPCM - Wiring diagram EC-328
F/PUMP - Wiring diagram EC-458
Freeze frame data..... EC-44
FRO2 - Wiring diagram EC-157
FRO2/H - Wiring diagram EC-188
Front axle FA-9
Front bumper..... BT-5
Front disc brake BR-18
Front door..... BT-10
Front fog lamp EL-56
Front fog lamp removal and installation..... BT-5
Front heated oxygen sensor (HO2S)..... EC-157
Front heated oxygen sensor (HO2S) heater EC-188
Front passenger air bag..... RS-19
Front seat BT-30
Front seat belt RS-3
Front suspension..... FA-23
Front washer EL-96
Front wiper EL-96
FUEL - Wiring diagram EC-221, EC-227
Fuel cut control (at no load & high engine
speed) EC-21
Fuel filler lid BT-8
Fuel filter..... EC-11, EC-33
Fuel filter replacement..... MA-13
Fuel gauge EL-76

ALPHABETICAL INDEX

Fuel injection system.....	EC-221, EC-227
Fuel injector.....	EC-452
Fuel line inspection.....	MA-13
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-33
Fuel pressure regulator.....	EC-34
Fuel pressure release.....	EC-33
Fuel pump.....	EC-458
Fuel pump and gauge.....	FE-5
Fuel pump control module.....	EC-328
Fuel pump dropping resistor.....	EC-458
Fuel pump relay.....	EC-458
Fuel system.....	FE-3
Fuel tank vacuum relief valve.....	EC-23
Fuse.....	EL-14
Fuse block.....	Foldout page
Fusible link.....	EL-14

G

Garage jack and safety stand.....	GI-40
Gauges.....	EL-73
Gear components (M/T).....	MT-11
Generator.....	EL-31
Generic scan tool (GST).....	EC-76
Glass.....	BT-10, BT-12
Grille - See Exterior.....	BT-5
Ground distribution.....	EL-15

H

Harness connector.....	EL-3
Harness connector inspection.....	GI-17
Harness layout.....	EL-209
Hazard warning lamp.....	EL-60
Headlamp.....	EL-41
Headlamp aiming control.....	EL-44
Headlining - See Roof trim.....	BT-21
Heated oxygen sensor (HO2S) (front).....	EC-157
Heated oxygen sensor (HO2S) heater (front).....	EC-188
Heated oxygen sensor (HO2S) heater (rear).....	EC-217
Heated oxygen sensor (rear).....	EC-192
HEATER - Wiring diagram.....	HA-20
Heater system - Wiring diagram.....	HA-20
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-60
HFC134a (R134a) system service tools.....	HA-9
HFC134a system service equipment precaution.....	HA-11
High clutch.....	AT-240
H/LAMP - Wiring diagram.....	EL-42

Hood.....	BT-5
Horn.....	EL-105
HORN - Wiring diagram.....	EL-105
How to erase DTC for ECCS OBD system.....	EC-52
Hydraulic lash adjuster inspection.....	EM-44

I

IACV - air regulator.....	EC-466
IACV-AAC valve inspection.....	EC-310
IACV-FICD solenoid valve.....	EC-470
IATS - Wiring diagram.....	EC-129
Identification plate.....	GI-36
Idle air control (IAC) system.....	EC-306
Idle air control valve (IACV).....	EC-306
Idle mixture ratio.....	EC-35
Idle speed.....	EC-35
Ignition coil.....	EC-341
Ignition timing.....	EC-35
Ignition wire inspection.....	EC-240
IGN/SG - Wiring diagram.....	EC-335
ILL - Wiring diagram.....	EL-66
Illumination.....	EL-65
Inhibitor switch.....	AT-81, EC-433
INJECT - Wiring diagram.....	EC-452
Injector.....	EC-454
Injector removal and installation.....	EC-34
Input shaft (FF M/T).....	MT-16
Instrument panel.....	BT-13
Intake air temperature sensor.....	EC-129
Intake door control linkage adjustment.....	HA-37
Intake door motor.....	HA-37
Intake manifold.....	EM-9
Interior.....	BT-16
Interior lamp.....	EL-68
Interior lamp on-off control.....	EL-68
INT/L - Wiring diagram.....	EL-70

J

Jacking points.....	GI-39, GI-40
Joint connector (J/C).....	Foldout page
Junction box (J/B).....	Foldout page

K

Keyless entry system - See Multi-remote control system.....	EL-165
Knock sensor (KS).....	EC-241
Knuckle spindle.....	FA-9
KS - Wiring diagram.....	EC-241

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

L

Length (Dimensions).....	GI-38
License lamp.....	EL-54
Lifting points.....	GI-39
Line pressure solenoid valve.....	AT-119
Line pressure test (A/T).....	AT-61
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-206
Lock, door.....	BT-10, BT-12
Low and reverse brake.....	AT-251
Lubricant (R134a) A/C.....	HA-62
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-62
Lubrication-locks, hinges and hood latches.....	MA-24
Luggage compartment trim.....	BT-22

M

MAFS - Wiring diagram.....	EC-112
Magnet clutch.....	HA-65
MAIN - Wiring diagram.....	EC-107
Main drive gear (M/T).....	MT-11
Mainshaft (M/T).....	MT-19
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-195
Malfunction indicator lamp (MIL).....	EC-54
Manual transaxle number.....	GI-37
Manual transmission oil replacement.....	MA-19
MAP/BARO switch solenoid valve.....	EC-318
Mass air flow sensor (MAFS).....	EC-112
Master cylinder (brake).....	BR-12
Meter.....	EL-73
METER - Wiring diagram.....	EL-75
MIL & Data link connectors circuit.....	EC-474
MIL/DL - Wiring diagram.....	EC-474
MIRROR - Wiring diagram.....	EL-118
Mirror, door.....	BT-41
Mirror, out side.....	BT-41
Misfire.....	EC-236
Mode door control linkage adjustment.....	HA-32
Model variation.....	GI-35
Molding - See Exterior.....	BT-23
M/T major overhaul.....	MT-10
M/T removal and installation.....	MT-8
Mud guard - See Exterior.....	BT-28
MULTI - Wiring diagram.....	EL-168
Multiport fuel injection (MFI) system.....	EC-17
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-165

N

Neutral position switch.....	EC-433
Neutral position switch (M/T).....	MT-7
NVH troubleshooting (BR).....	BR-3
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-7
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (M/T).....	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-4

O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-13
Oil pressure (engine).....	LC-4
Oil pump (A/T).....	AT-217
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-7
Oil seal replacement (engine).....	EM-33
Opera window.....	BT-39
ORVR (On-board Refueling Vapor Recovery)....	EC-27
Out side mirror.....	BT-41
Overdrive control switch.....	AT-180
Overrun clutch.....	AT-245
Overrun clutch solenoid valve.....	AT-119
Oversize piston.....	EM-57

P

Parking brake control.....	BR-31
Parking lamp.....	EL-54
Park/Neutral position switch.....	EC-433
PCV (positive crankcase ventilation).....	EC-32
PGC/V - Wiring diagram.....	EC-285
Pilot bushing replacement.....	EM-61
Piston assembly.....	EM-62
Piston pin inspection.....	EM-54
Piston ring inspection.....	EM-55
Piston to bore clearance.....	EM-56
PNP/SW - Wiring diagram.....	EC-433
POWER - Wiring diagram.....	EL-8
Power door lock.....	EL-149
Power door mirror.....	EL-118
Power steering fluid level.....	ST-5, MA-23
Power steering gear.....	ST-13
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-462
Power steering oil pump.....	ST-18

ALPHABETICAL INDEX

Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6
Power transistor.....	EC-341
Power transistor & ignition coil.....	EC-335
Power window.....	EL-143
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-296
Pressure plate - See Clutch cover.....	CL-7
Pressure test (A/T).....	AT-61
PST/SW - Wiring diagram.....	EC-462

R

Radiator.....	LC-13
Radiator fan - See Cooling fan.....	LC-13
Radio - See Audio.....	EL-113
Rear air spoiler.....	BT-29
Rear axle.....	RA-7
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-27
Rear disc brake.....	BR-23
Rear door.....	BT-12
Rear heated oxygen sensor (HO2S).....	EC-192
Rear heated oxygen sensor (HO2S) heater.....	EC-217
Rear seat.....	BT-31
Rear seat belt.....	RS-3
Rear side window.....	BT-39
Rear suspension.....	RA-9
Rear window.....	BT-38
Rear window defogger.....	EL-107
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-6
Refrigerant discharging evacuating charging.....	HA-60
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-56
Refrigeration cycle.....	HA-13
Release bearing (clutch).....	CL-6
Resistor.....	EC-341
Reverse clutch.....	AT-236
Reverse idler shaft (M/T).....	MT-11
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-7
Reverse main gear (M/T).....	MT-11
Revolution sensor (A/T).....	AT-92
Road wheel size.....	GI-38
Roof trim.....	BT-21
Room lamp - See Interior lamp.....	EL-68
Rotor disc (front).....	FA-9
RRO2 - Wiring diagram.....	EC-192
RRO2/H - Wiring diagram.....	EC-217

S

SAE J1930 terminology list.....	GI-44	GI
Seal - See Exterior.....	BT-23	
Seat belt, front.....	RS-3	MA
Seat belt inspection.....	MA-24	
Seat belt, rear.....	RS-3	
Seat, front.....	BT-30	EM
Seat, rear.....	BT-31	
Self-diagnostic results.....	EC-54	LC
SHIFT - Wiring diagram.....	AT-183	
Shift control components (M/T).....	MT-12	
Shift fork (M/T).....	MT-12	EC
Shift lever.....	MT-9	
Shift lock system.....	AT-182	
Shift schedule.....	AT-294	FE
Shift solenoid valve (A/T).....	AT-100, AT-110	
Shift solenoid valve B (A/T).....	AT-100	CL
Shock absorber (front).....	FA-24	
Shock absorber (rear).....	RA-11	
Side trim.....	BT-16	MT
Side window - See Rear side window.....	BT-39	
Smart entrance control unit.....	EL-204	
SMJ (super multiple junction).....	Foldout page	AT
Spare tire size.....	GI-38	
Spark plug replacement.....	MA-15	FA
Speedometer.....	EL-79	
Spiral cable.....	RS-17	
Spring (Wheelarch) height.....	FA-6	RA
SROOF - Wiring diagram.....	EL-117	
SRS - See Supplemental Restraint System.....	RS-13	
SRS - Wiring diagram.....	RS-30	BR
SRS Trouble diagnoses.....	RS-25	
S/SIG - Wiring diagram.....	EC-455	
Stabilizer bar (front).....	FA-25	ST
Stall test (A/T).....	AT-58	
Standardized relay.....	EL-4	RS
START - Wiring diagram.....	EL-25	
Start signal.....	EC-455	
Starter.....	EL-28	BT
Starting system.....	EL-23	
Steering gear and linkage inspection.....	MA-23	
Steering knuckle.....	FA-9	HA
Steering linkage.....	ST-13	
Steering switch.....	EL-40	EL
Steering wheel and column.....	ST-9	
Steering wheel play.....	ST-7	
Steering wheel turning force.....	ST-6	
Stop lamp.....	EL-54	
Striking rod (M/T).....	MT-12	
Strut (front).....	FA-24	
Strut (rear).....	RA-11	
Sun roof, electric.....	EL-117	

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
IDX

ALPHABETICAL INDEX

Sunroof.....	BT-32
Supplement restraint system - Wiring diagram	RS-30
Supplemental Restraint System.....	RS-13
SW/V - Wiring diagram	EC-318
Symbols and abbreviations	GI-8
Synchronizer (M/T).....	MT-11
System readiness test (SRT) code	EC-44

T

Tachometer.....	EL-78
Tail lamp	EL-54
TAIL/L - Wiring diagram	EL-54
Tank fuel temperature sensor	EC-232
TCM circuit diagram.....	AT-12
TCM inspection table	AT-76
Temperature control cable and linkage adjustment.....	HA-34
TFTS - Wiring diagram.....	EC-232
THEFT - Wiring diagram	EL-184
Theft warning system	EL-179
Thermal protector.....	HA-44
Thermo control amp	HA-44
Thermostat	LC-11
Three way catalyst	EC-270
Three way catalyst precautions	GI-5
Throttle bodies.....	EM-10
Throttle drum adjustment	FE-2
Throttle position sensor adjustment.....	EC-82
Throttle position sensor (TPS)	EC-140
Throttle position switch.....	AT-149, AT-181, EC-311
Throwout bearing - See Clutch release bearing	CL-6
Tie-rod	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts	GI-43
Timing chain	EM-18
Tire rotation	MA-23
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-119
Torque converter installation	AT-193
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-140
TP/SW - Wiring diagram	EC-311
Transmission case (M/T).....	MT-10
Transverse link (front)	FA-26
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-16
Trouble diagnoses	GI-20
Trunk lid.....	BT-8
Trunk lid finisher	BT-26
Trunk lid opener - See Trunk lid	BT-8

Trunk room lamp.....	EL-68
Trunk room trim.....	BT-22
TURN - Wiring diagram.....	EL-62
Turn signal lamp.....	EL-60
Two trip detection logic	EC-42
Two-pole lift	GI-41

U

Under body.....	BT-44
-----------------	-------

V

Vacuum cut valve	EC-415
Vacuum cut valve bypass valve.....	EC-405, EC-410
Vacuum hose (brake system)	BR-17
Vacuum hose drawing (ECCS)	EC-15
Valve guide.....	EM-41
Valve seat.....	EM-42
Valve spring.....	EM-44
Vehicle identification number	GI-36
Vehicle recovery (freeing a stuck vehicle)	GI-42
Vehicle speed sensor (VSS)	EC-302
VENT/V - Wiring diagram.....	EC-291, EC-385, EC-399
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-302

W

WARN - Wiring diagram.....	EL-85
Warning lamps	EL-82
Washer, front.....	EL-96
Water pump.....	LC-9
Water temperature gauge	EL-76
Weatherstrip - See Exterior.....	BT-23
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-23
Wheel bearing (front axle).....	FA-7, FA-11
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-9
Wheel hub (rear)	RA-7
Wheel sensors (ABS).....	BR-36
Wheel size	GI-38
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position (CTP) switch	EC-140
Width (Dimensions)	GI-38
WINDOW - Wiring diagram.....	EL-146
Window, door.....	BT-10, BT-12

ALPHABETICAL INDEX

Window, opera.....	BT-39	WIPER - Wiring diagram.....	EL-98
Window, rear	BT-38	Wiper and washer	EL-96
Window, rear side.....	BT-39	Wiper, front.....	EL-96
Window, side - See Rear side window	BT-39	Wiring diagram (cell code) list.....	EL-228
Windshield.....	BT-37	Wiring diagrams	GI-9
Windshield washer - See Front washer.....	EL-96	Withdrawal lever (clutch).....	CL-6
Windshield wiper - See Front wiper.....	EL-96	Wrist pin - See Piston pin inspection.....	EM-54

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX