

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS - Wiring diagram	BR-44
ABS (anti-lock brake system).....	BR-33
ABS sensor rotor.....	FA-9
Absolute pressure sensor	EC-122
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component location.....	HA-14
A/C compressor clutch removal and installation	HA-66
A/C compressor mounting.....	HA-65
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-8
A/C control linkage adjustment (manual A/C).....	HA-34
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (manual A/C)	HA-24
A/C harness layout (manual A/C)	HA-17
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-61
A/C HFC134a (R134a) system service tools.....	HA-9
A/C HFC134a system service equipment precaution	HA-11
A/C lubricant (R134a).....	HA-63
A/C lubrication oil	HA-63
A/C operational check.....	HA-25
A/C performance chart.....	HA-49
A/C performance test diagnoses.....	HA-47
A/C pressure switch	HA-13
A/C relay.....	HA-44
A/C service data specification.....	HA-72
A/C switch	HA-43
A/C symptom chart (manual A/C)	HA-24
A/C trouble diagnoses (manual A/C)	HA-24
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	RS-15
Air bag disposal.....	RS-19
Air bag precautions	GI-2
Air bleeding for brake system	BR-5
Air cleaner filter replacement	MA-14
Air conditioner - Wiring diagram	HA-21
Air conditioner cut control	EC-20
Air conditioning - See A/C.....	HA-2
Air flow meter - See Mass air flow sensor.....	EC-112
Air mix door control linkage adjustment.....	HA-34
Air spoiler, rear.....	BT-27
AIRREG - Wiring diagram.....	EC-483
Alternator - See Generator.....	EL-33
Angular tightening application	EM-2
Antenna	EL-118

Anti-lock brake system - See ABS.....	BR-33
Anti-lock brake system - Wiring diagram.....	BR-44
AP/SEN - Wiring diagram	EC-122
ASCD - Wiring diagram.....	EL-126
ASCD (automatic speed control device).....	EL-122
A/T - Wiring diagram	AT-13
A/T diagnosis communication line	EC-447
A/T fluid temperature sensor.....	AT-88
A/T self-diagnoses.....	AT-42
A/T shift lock system	AT-183
A/T shift lock system - Wiring diagram	AT-184
A/T trouble diagnoses	AT-53
ATDIAG - Wiring diagram	EC-447
Audio	EL-115
AUDIO - Wiring diagram	EL-116
Audio and A/C control removal and installation - See Instrument panel.....	BT-13
Automatic speed control system - See ASCD..	EL-122
Automatic transaxle number	GI-37
Automatic transmission fluid replacement	MA-21
Auxiliary air control (AAC).....	EC-319

B

BACK/L - Wiring diagram.....	EL-55
Back-up lamp	EL-55
Back-up lamp switch (M/T)	MT-8
Ball joint front axle.....	FA-26
Basic inspection	EC-82
Battery	EL-20
Baulk ring (M/T).....	MT-12
Blower motor	HA-30
Blower resistor.....	HA-30
Board-on lift.....	GI-40
Body alignment.....	BT-39
Boring/honing cylinder block.....	EM-57
BPT valve	EC-275, EC-280
Brake booster	BR-15
Brake control valve (Proportioning valve).....	BR-8
Brake fluid change	BR-4
Brake fluid level.....	MA-21
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-21
Brake lines and cables inspection	MA-21
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications.....	EL-226
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPS/V - Wiring diagram.....	EC-421, EC-426

ALPHABETICAL INDEX

C

<p>Camshaft inspection..... EM-39</p> <p>Camshaft position sensor (CMPS)..... EC-260</p> <p>Canister - See EVAP canister..... EC-22</p> <p>CANI/V - Wiring diagram..... EC-432</p> <p>CHARGE - Wiring diagram..... EL-34</p> <p>Charging system..... EL-33</p> <p>Chassis and body maintenance..... MA-19</p> <p>CHIME - Wiring diagram..... EL-93</p> <p>CIGAR - Wiring diagram..... EL-108</p> <p>Cigarette lighter..... EL-108</p> <p>Circuit breaker..... EL-16</p> <p>CKPS - Wiring diagram..... EC-255, EC-358</p> <p>Clearance lamp..... EL-56</p> <p>Closed loop control..... EC-342</p> <p>Closed throttle position switch..... EC-325</p> <p>Clutch cable..... CL-4</p> <p>Clutch cover..... CL-8</p> <p>Clutch disc..... CL-7</p> <p>Clutch pedal..... CL-4</p> <p>Clutch release bearing..... CL-6</p> <p>Clutch release mechanism..... CL-6</p> <p>Clutch withdrawal lever..... CL-6</p> <p>CMPS - Wiring diagram..... EC-260</p> <p>Coil spring (front)..... FA-24</p> <p>Coil spring (rear)..... RA-11</p> <p>Collision diagnosis..... RS-45</p> <p>Combination lamp, rear, removal and installation..... BT-26</p> <p>Combination meter..... EL-76</p> <p>Combination meter (needle type)..... EL-76</p> <p>Combination meter removal and installation - See Instrument panel..... BT-13</p> <p>Combination switch..... EL-40</p> <p>Compression pressure..... EM-12</p> <p>Compressor clutch removal and installation..... HA-66</p> <p>Compressor mounting..... HA-65</p> <p>Compressor precaution..... HA-7</p> <p>Compressor special service tool..... HA-8</p> <p>Connecting rod..... EM-55</p> <p>Connecting rod bearing clearance..... EM-59</p> <p>Connecting rod bushing clearance..... EM-60</p> <p>Connector inspection..... GI-17</p> <p>Console box - See Instrument panel..... BT-13</p> <p>CONSULT for ABS..... BR-51</p> <p>CONSULT for engine..... EC-62</p> <p>CONSULT general information..... GI-33</p> <p>Control lever (M/T)..... MT-10</p> <p>Control valve (A/T)..... AT-223</p> <p>Converter housing installation..... AT-195</p> <p>Coolant mixture ratio..... MA-9</p> <p>Coolant replacement..... MA-11</p>	<p>COOL/F - Wiring diagram..... EC-455</p> <p>Cooling circuit (engine)..... LC-8</p> <p>Cooling fan..... LC-13 GI</p> <p>Cooling fan control..... EC-455</p> <p>Cooling fan motor..... EC-468</p> <p>Cooling fan relay..... EC-468 MA</p> <p>Coupling sleeve (M/T)..... MT-12</p> <p>Crank angle sensor built into distributor - See Camshaft position sensor..... EC-260 EM</p> <p>Crankcase emission control system - See positive crankcase ventilation..... EC-32 LC</p> <p>Crankcase ventilation system - See positive crankcase ventilation..... EC-32</p> <p>Crankshaft..... EM-57 EC</p> <p>Crankshaft position sensor (OBD)..... EC-255, EC-358</p> <p>Crankshaft position sensor (OBD) cog chipping..... EC-358 FE</p> <p>Cruise control - See ASCD..... EL-122</p> <p>Cylinder block..... EM-53 CL</p> <p>Cylinder block boring..... EM-57</p> <p>Cylinder head..... EM-35</p> <p>Cylinder head bolt tightening..... EM-26 MT</p>
<div style="border: 1px solid black; padding: 5px; display: inline-block; margin: 0 auto;"> <h2 style="margin: 0;">D</h2> </div>	
<p>Coil spring (rear)..... RA-11</p> <p>Collision diagnosis..... RS-45</p> <p>Combination lamp, rear, removal and installation..... BT-26</p> <p>Combination meter..... EL-76</p> <p>Combination meter (needle type)..... EL-76</p> <p>Combination meter removal and installation - See Instrument panel..... BT-13</p> <p>Combination switch..... EL-40</p> <p>Compression pressure..... EM-12</p> <p>Compressor clutch removal and installation..... HA-66</p> <p>Compressor mounting..... HA-65</p> <p>Compressor precaution..... HA-7</p> <p>Compressor special service tool..... HA-8</p> <p>Connecting rod..... EM-55</p> <p>Connecting rod bearing clearance..... EM-59</p> <p>Connecting rod bushing clearance..... EM-60</p> <p>Connector inspection..... GI-17</p> <p>Console box - See Instrument panel..... BT-13</p> <p>CONSULT for ABS..... BR-51</p> <p>CONSULT for engine..... EC-62</p> <p>CONSULT general information..... GI-33</p> <p>Control lever (M/T)..... MT-10</p> <p>Control valve (A/T)..... AT-223</p> <p>Converter housing installation..... AT-195</p> <p>Coolant mixture ratio..... MA-9</p> <p>Coolant replacement..... MA-11</p>	<p>Data link connector for CONSULT..... EC-33 FA</p> <p>Daytime light system..... EL-47 RA</p> <p>Daytime running light - See Daytime light system..... EL-47</p> <p>DEF - Wiring diagram..... EL-110</p> <p>Detonation sensor - See Knock sensor..... EC-250</p> <p>Diagnosis sensor unit..... RS-14 BR</p> <p>Diagnostic trouble code (DTC) for OBD system..... EC-2 ST</p> <p>Diagnostic trouble code (DTC) inspection priority chart..... EC-87</p> <p>Differential gear (FF A/T)..... AT-271 RS</p> <p>Differential gear (FF M/T)..... MT-26</p> <p>Dimensions..... GI-38</p> <p>Distributor..... EC-19 BT</p> <p>Distributor ignition (DI) system..... EC-19</p> <p>D/LOCK - Wiring diagram..... EL-154</p> <p>Dome light - See Interior lamp..... EL-70 HA</p> <p>Door, front..... BT-11</p> <p>Door glass..... BT-11, BT-12 EL</p> <p>Door lock..... BT-11, BT-12</p> <p>Door mirror..... BT-38</p> <p>Door, rear..... BT-12 IDX</p> <p>Door trim..... BT-18</p> <p>Drive belt inspection..... MA-10</p> <p>Drive plate runout..... EM-61</p> <p>Drive shaft (front)..... FA-14</p> <p>Dropping resistor (A/T)..... AT-134</p>

ALPHABETICAL INDEX

DTC work support EC-71
DTRL - Wiring diagram EL-50
Dual pressure switch HA-44

E

ECCS relay EC-107
ECM input/output signal EC-97
ECTS - Wiring diagram EC-137, EC-157
EGR control (EGRC) - BPT valve EC-276
EGR control (EGRC) - solenoid valve EC-363
EGR valve EC-274, EC-379
EGR temperature sensor EC-368
EGRC1 - Wiring diagram EC-267
EGRC/V - Wiring diagram EC-363
EGR/TS - Wiring diagram EC-368
Electric sun roof EL-119
Electrical diagnoses GI-20
Electrical ignition system EC-19
Electrical units location EL-208
Electronic ignition (EI) system EC-19
Engine compartment BT-39
Engine control circuit diagram EC-9
Engine control component parts location EC-11
Engine control module (ECM) EC-331
Engine control system diagram and chart EC-10
Engine coolant temperature sensor
(ECTS) EC-137, EC-157
Engine fail-safe system EC-88
Engine oil filter replacement MA-15
Engine oil precautions GI-5
Engine oil replacement MA-14
Engine outer component parts EM-9
Engine removal EM-49
Engine room - See Engine compartment BT-39
Engine serial number GI-37
EVAP canister EC-22
EVAP canister purge control solenoid
valve EC-432, EC-438
EVAP canister purge control valve EC-432, EC-438
EVAP canister purge volume control solenoid
valve EC-438
EVAP canister purge volume control
valve EC-22, EC-296, EC-393
EVAP canister vent control
valve EC-302, EC-401, EC-415
EVAP control system pressure sensor EC-307
EVAP control system purge flow monitoring
diagnosis EC-406
EVAP control system (small leak)
diagnosis EC-24, EC-285, EC-381
EVAP system close mode EC-24
EVAP vapor lines inspection MA-18

Evaporative emission (EVAP) system EC-22
Exhaust gas recirculation (EGR) valve EC-267
Exhaust system FE-6
Exhaust system inspection MA-19
Exterior BT-22
Exterior lamp EL-55

F

Fan switch HA-30
F/FOG - Wiring diagram EL-59
FICD - Wiring diagram EC-487
Final drive (FF A/T) AT-271
Final drive (FF M/T) MT-26
Finisher, interior - See Trim BT-16
Finisher, trunk lid BT-25
Floor trim BT-16
Flow charts GI-30
Fluid temperature sensor (A/T) AT-88
Fluids MA-8
Flywheel (clutch) CL-8
Flywheel runout EM-61
Fog lamp, front EL-58
Fog lamp, front, removal and installation BT-5
Fork rod (M/T) MT-13
Forward clutch AT-247
FPCM - Wiring diagram EC-344
F/PUMP - Wiring diagram EC-475
Freeze frame data EC-44
FRO2 - Wiring diagram EC-163
FRO2/H - Wiring diagram EC-195
Front axle FA-9
Front bumper BT-5
Front disc brake BR-18
Front door BT-11
Front fog lamp EL-58
Front fog lamp removal and installation BT-5
Front heated oxygen sensor (HO2S) EC-163
Front heated oxygen sensor (HO2S) heater EC-195
Front passenger air bag RS-17
Front seat BT-28
Front seat belt RS-3
Front suspension FA-23
Front washer EL-98
Front wiper EL-98
FUEL - Wiring diagram EC-230, EC-236
Fuel cut control (at no load & high engine
speed) EC-21
Fuel filler lid BT-8
Fuel filter EC-11, EC-33
Fuel filter replacement MA-13
Fuel gauge EL-78
Fuel injection system EC-230, EC-236

ALPHABETICAL INDEX

Fuel injector.....	EC-469
Fuel line inspection	MA-13
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-33
Fuel pressure regulator.....	EC-34
Fuel pressure release	EC-33
Fuel pump	EC-475
Fuel pump and gauge.....	FE-5
Fuel pump control module	EC-344
Fuel pump dropping resistor	EC-475
Fuel pump relay	EC-475
Fuel system.....	FE-3
Fuel tank vacuum relief valve	EC-23
Fuel temperature sensor.....	EC-241
Fuse.....	EL-16
Fuse block.....	Foldout page
Fusible link	EL-16

G

Garage jack and safety stand.....	GI-40
Gauges.....	EL-75
Gear components (M/T).....	MT-12
Generator	EL-33
Generic scan tool (GST).....	EC-76
Glass	BT-11, BT-12
Grille - See Exterior.....	BT-5
Ground distribution.....	EL-17

H

Harness connector	EL-3
Harness connector inspection.....	GI-17
Harness layout	EL-211
Hazard warning lamp	EL-62
Headlamp	EL-43
Headlamp aiming control	EL-46
Headlining - See Roof trim.....	BT-20
Heated oxygen sensor (HO2S) (front).....	EC-163
Heated oxygen sensor (HO2S) heater (front)....	EC-195
Heated oxygen sensor (HO2S) heater (rear) ...	EC-226
Heated oxygen sensor (rear)	EC-199
HEATER - Wiring diagram	HA-20
Heater system - Wiring diagram	HA-20
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-61
HFC134a (R134a) system service tools.....	HA-9
HFC134a system service equipment precaution	HA-11
High clutch.....	AT-242
H/LAMP - Wiring diagram	EL-44

Hood.....	BT-5
Horn.....	EL-107
HORN - Wiring diagram.....	EL-107
How to erase DTC for OBD system	EC-52
Hydraulic lash adjuster inspection	EM-44

I

IACV - air regulator	EC-483, EC-486
IACV-AAC valve	EC-324
IACV-FICD solenoid valve.....	EC-487
IATS - Wiring diagram.....	EC-131
Identification plate	GI-36
Idle air control (IAC) system	EC-319
Idle air control valve (IACV).....	EC-319
Idle mixture ratio.....	EC-35
Idle speed.....	EC-35
Ignition coil	EC-357
Ignition timing	EC-35
Ignition wire inspection.....	EC-249
IGN/SG - Wiring diagram	EC-351
ILL - Wiring diagram.....	EL-68
Illumination	EL-67
INJECT - Wiring diagram	EC-469
Injector.....	EC-471
Injector removal and installation	EC-34
Input shaft (FF M/T)	MT-17
Instrument panel.....	BT-13
Intake air temperature sensor	EC-131
Intake door control linkage adjustment.....	HA-37
Intake door motor.....	HA-37
Intake manifold.....	EM-9
Interior	BT-16
Interior lamp	EL-67
Interior lamp on-off control.....	EL-70
INT/L - Wiring diagram.....	EL-72

J

Jacking points.....	GI-39, GI-40
Joint connector (J/C).....	Foldout page
Junction box (J/B)	Foldout page

K

Keyless entry system - See Multi-remote control system.....	EL-167
Knock sensor (KS).....	EC-250
Knuckle spindle.....	FA-9
KS - Wiring diagram.....	EC-250

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-38
License lamp	EL-56
Lifting points	GI-39
Line pressure solenoid valve	AT-119
Line pressure test (A/T)	AT-61
Liquid gasket application	EM-2
Location of electrical units	EL-208
Lock, door	BT-11, BT-12
Low and reverse brake	AT-253
Lubricant (R134a) A/C	HA-63
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication oil A/C	HA-63
Lubrication-locks, hinges and hood latches	MA-24
Luggage compartment trim	BT-21

M

MAFS - Wiring diagram	EC-112
Magnet clutch	HA-66
MAIN - Wiring diagram	EC-107
Main drive gear (M/T)	MT-12
Mainshaft (M/T)	MT-20
Maintenance	MA-3
Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-197
Malfunction indicator lamp (MIL)	EC-54
Manual transaxle number	GI-37
Manual transmission oil replacement	MA-19
MAP/BARO switch solenoid valve	EC-333
Mass air flow sensor (MAFS)	EC-112
Master cylinder (brake)	BR-12
Meter	EL-75
METER - Wiring diagram	EL-77
MIL & Data link connectors circuit	EC-491
MIL/DL - Wiring diagram	EC-491
MIRROR - Wiring diagram	EL-120
Mirror, door	BT-38
Mirror, out side	BT-38
Misfire	EC-245
Mode door control linkage adjustment	HA-32
Model variation	GI-35
Molding - See Exterior	BT-22
M/T major overhaul	MT-11
M/T removal and installation	MT-9
Mud guard - See Exterior	BT-27
MULTI - Wiring diagram	EL-170
Multipoint fuel injection (MFI) system	EC-17
Multipoint fuel injection precautions	GI-5
Multi-remote control system	EL-167

N

NVH troubleshooting (BR)	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (FA)	FA-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA)	RA-3
NVH troubleshooting (ST)	ST-4

O

Oil change (capacity)	MA-8
Oil change (interval)	MA-5
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-219
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-33
On board diagnostic system	EC-42
ORVR (On-board Refueling Vapor Recovery)	EC-27
Out side mirror	BT-38
Overdrive control switch	AT-181
Overrun clutch	AT-247
Overrun clutch solenoid valve	AT-119
Oversize piston	EM-57

P

Parking brake control	BR-31
Parking lamp	EL-56
Park/neutral position (PNP) switch	EC-450
Park/neutral position (PNP) switch (A/T)	AT-81
Park/neutral position (PNP) switch (M/T)	MT-8
PCV (positive crankcase ventilation)	EC-32
PGC/V - Wiring diagram	EC-296
Pilot bushing replacement	EM-61
Piston assembly	EM-62
Piston pin inspection	EM-54
Piston ring inspection	EM-55
Piston to bore clearance	EM-56
PNP/SW - Wiring diagram	EC-450
POWER - Wiring diagram	EL-10
Power door lock	EL-151
Power door mirror	EL-120
Power steering fluid level	MA-23, ST-5
Power steering gear	ST-13
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-479
Power steering oil pump	ST-18

ALPHABETICAL INDEX

Power steering system bleeding.....	ST-6
Power supply routing.....	EL-8
Power transistor.....	EC-357
Power transistor & ignition coil.....	EC-351
Power window.....	EL-145
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-307
Pressure plate - See Clutch cover.....	CL-8
Pressure test (A/T).....	AT-61
PST/SW - Wiring diagram.....	EC-479

R

Radiator.....	LC-13
Radiator fan - See Cooling fan.....	LC-13
Radio - See Audio.....	EL-115
Rear air spoiler.....	BT-27
Rear axle.....	RA-7
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-26
Rear disc brake.....	BR-22
Rear door.....	BT-12
Rear heated oxygen sensor (HO2S).....	EC-199
Rear heated oxygen sensor (HO2S) heater.....	EC-226
Rear seat.....	BT-29
Rear seat belt.....	RS-3
Rear side window.....	BT-37
Rear suspension.....	RA-9
Rear window.....	BT-36
Rear window defogger.....	EL-109
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-4
Refrigerant discharging evacuating charging.....	HA-61
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-57
Refrigeration cycle.....	HA-13
Release bearing (clutch).....	CL-6
Removal and installation (A/T).....	AT-194
Resistor.....	EC-357
Reverse clutch.....	AT-238
Reverse idler shaft (M/T).....	MT-12
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-8
Reverse main gear (M/T).....	MT-12
Revolution sensor (A/T).....	AT-92
Road wheel size.....	GI-38
Roof trim.....	BT-20
Room lamp.....	EL-70
Room lamp - See Interior lamp.....	EL-70
Rotor disc (front).....	FA-9
RRO2 - Wiring diagram.....	EC-199
RRO2/H - Wiring diagram.....	EC-226

S

SAE J1930 terminology list.....	GI-44	GI
Seal - See Exterior.....	BT-22	
Seat belt, front.....	RS-3	MA
Seat belt inspection.....	MA-24, RS-8	
Seat belt, rear.....	RS-3	
Seat, front.....	BT-28	EM
Seat, rear.....	BT-29	
Self-diagnostic results.....	EC-54	LC
SFT, RE - Wiring diagram.....	AT-184	
SHIFT - Wiring diagram.....	AT-184	
Shift control components (M/T).....	MT-13	EC
Shift fork (M/T).....	MT-13	
Shift lever.....	MT-10	
Shift lock system.....	AT-183	FE
Shift schedule.....	AT-296	
Shift solenoid valve A (A/T).....	AT-100, AT-110	CL
Shift solenoid valve B (A/T).....	AT-100	
Shock absorber (front).....	FA-24	
Shock absorber (rear).....	RA-11	MT
Side trim.....	BT-16	
Smart entrance control unit.....	EL-206	
SMJ (super multiple junction).....	Foldout page	AT
Spare tire size.....	GI-38	
Spark plug replacement.....	MA-15	FA
Speedometer.....	EL-81	
Spiral cable.....	RS-15	RA
Spring (Wheelarch) height.....	FA-6	
SROOF - Wiring diagram.....	EL-119	
SRS - See Supplemental Restraint System.....	RS-11	
SRS - Wiring diagram.....	RS-28	BR
SRS Trouble diagnoses.....	RS-23	
S/SIG - Wiring diagram.....	EC-472	ST
Stabilizer bar (front).....	FA-25	
Stall test (A/T).....	AT-58	
Standardized relay.....	EL-5	RS
START - Wiring diagram.....	EL-27	
Start signal.....	EC-472	
Starter.....	EL-30	BT
Starting system.....	EL-25	
Steering gear and linkage inspection.....	MA-23	HA
Steering knuckle.....	FA-9	
Steering linkage.....	ST-13	
Steering switch.....	EL-42	EL
Steering wheel and column.....	ST-9	
Steering wheel play.....	ST-7	
Steering wheel turning force.....	ST-6	IDX
Stop lamp.....	EL-56	
Striking rod (M/T).....	MT-13	
Strut (front).....	FA-24	
Strut (rear).....	RA-11	
Sun roof, electric.....	EL-119	

ALPHABETICAL INDEX

Sunroof.....	BT-30
Supplemental Restraint System.....	RS-11
Supplemental restraint system - Wiring diagram	RS-28
SW/V - Wiring diagram	EC-333
Symbols and abbreviations.....	GI-8
Symptom matrix chart.....	EC-89
Synchronizer (M/T).....	MT-12
System readiness test (SRT) code.....	EC-44

T

Tachometer.....	EL-80
Tail lamp	EL-56
TAIL/L - Wiring diagram	EL-56
Tank fuel temperature sensor	EC-241
TCM circuit diagram.....	AT-12
TCM inspection table	AT-76
Temperature control cable and linkage adjustment.....	HA-34
TFTS - Wiring diagram.....	EC-241
THEFT - Wiring diagram.....	EL-186
Theft warning system.....	EL-181
Thermal protector.....	HA-44
Thermo control amp.....	HA-44
Thermostat	LC-11
Three way catalyst.....	EC-281
Three way catalyst precautions	GI-5
Throttle bodies.....	EM-10
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment.....	EC-82
Throttle position sensor (TPS).....	EC-142
Throttle position switch.....	AT-149, AT-182, EC-325
Throwout bearing - See Clutch release bearing	CL-6
Tie-rod	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts	GI-43
Timing chain	EM-18
Tire rotation	MA-23
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-119
Torque converter installation	AT-195
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-142
TP/SW - Wiring diagram	EC-325
Transmission case (M/T).....	MT-11
Transverse link (front)	FA-26
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-16
Trouble diagnoses.....	GI-20
Trunk lid.....	BT-8
Trunk lid finisher.....	BT-25

Trunk lid opener - See Trunk lid.....	BT-8
Trunk room lamp.....	EL-70
Trunk room trim.....	BT-21
TURN - Wiring diagram.....	EL-64
Turn signal lamp.....	EL-62
Two trip detection logic	EC-42
Two-pole lift.....	GI-41

U

Under body.....	BT-41
-----------------	-------

V

Vacuum cut valve.....	EC-431
Vacuum cut valve bypass valve.....	EC-421, EC-426
Vacuum hose (brake system)	BR-17
Vacuum hose drawing (Engine control).....	EC-15
Valve clearance.....	EM-41
Valve guide.....	EM-41
Valve seat.....	EM-42
Valve spring.....	EM-44
Vehicle identification number	GI-36
Vehicle recovery (freeing a stuck vehicle)	GI-42
Vehicle speed sensor (VSS)	EC-314
VENT/V - Wiring diagram.....	EC-302, EC-401, EC-415
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-314

W

WARN - Wiring diagram.....	EL-87
Warning chime	EL-92
Warning lamps	EL-84
Washer, front.....	EL-98
Water pump.....	LC-9
Water temperature gauge	EL-78
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-23
Wheel bearing (front axle).....	FA-7, FA-11
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-9
Wheel hub (rear)	RA-7
Wheel sensors (ABS).....	BR-36
Wheel size.....	GI-38
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position switch.....	EC-142
Width (Dimensions)	GI-38

ALPHABETICAL INDEX

WINDOW - Wiring diagram.....	EL-148	Wiper and washer	EL-98
Window, door.....	BT-11, BT-12	Wiper, front	EL-98
Window, rear	BT-36	Wiring Diagram (Cell code) list	EL-227
Windshield.....	BT-35	Wiring diagrams	GI-9
Windshield washer - See Front washer.....	EL-98	Withdrawal lever (clutch).....	CL-6
Windshield wiper - See Front wiper.....	EL-98	Wrist pin - See Piston pin inspection.....	EM-54
WIPER - Wiring diagram.....	EL-100		

GI
MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

