

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram	EC-455, 1108, 1767
ABS - Wiring diagram.....	BR-43
ABS sensor rotor	AX-23
Absolute pressure	
sensor	EC-183, 855, 1127, 1516
A/C - Wiring diagram	HA-23
A/C air flow	HA-17
A/C component layout	HA-15
A/C compressor clutch removal and installation	HA-67
A/C compressor mounting	HA-66
A/C compressor precaution.....	HA-6
A/C compressor special service tool	HA-9
A/C control linkage adjustment (manual A/C)	HA-32
A/C control operation (manual A/C)	HA-16
A/C diagnostic work flow (manual A/C).....	HA-25
A/C HFC134a (R134a) system	
identification	HA-4
A/C HFC134a (R134a) system	
introduction.....	HA-14
A/C HFC134a (R134a) system	
precaution.....	HA-2
A/C HFC134a (R134a) system	
service procedure.....	HA-61
A/C HFC134a (R134a) system	
service tools	HA-10
A/C HFC134a system service	
equipment precaution.....	HA-6
A/C lubricant (R134a).....	HA-63
A/C lubrication oil.....	HA-63
A/C operational check	HA-26
A/C performance chart	HA-52
A/C performance test diagnoses	HA-52
A/C pressure switch.....	HA-14
A/C push control	HA-16
A/C relay	HA-49
A/C service data specification	HA-81
A/C switch.....	HA-16
A/C trouble diagnoses (manual A/C)	HA-19
A/C, M - Wiring diagram.....	HA-23
Accelerator control system.....	FE-3
Accelerator wire adjustment.....	FE-3
Air bag	RS-13
Air bag disposal	RS-26
Air bag precautions.....	GI-3
Air bleeding (hydraulic clutch).....	CL-7
Air bleeding for brake system.....	BR-8
Air cleaner filter replacement.....	MA-20, 29
Air conditioner - Wiring diagram.....	HA-23
Air conditioner cut control	EC-47, 724, 1384
Air control cable adjustment.....	HA-34
Air flow meter - See Mass air flow sensor	EC-174, 846, 1507
Air mix door control linkage adjustment.....	HA-35

Air spoiler, rear	BT-31
Alternator	SC-33
Angular tightening application.....	EM-4, 77
Antenna	EL-164
Anti-lock brake system	
- Wiring diagram.....	BR-43
AP/SEN - Wiring diagram.....	EC-856, 1129
ASCD (automatic speed control device)	EL-170
ASCD - Wiring diagram.....	EL-175
A/T - Wiring diagram - AT - FTS	AT-117
A/T - Wiring diagram - AT - MAIN	AT-107
A/T - Wiring diagram - AT - PNP/SW	AT-111
A/T - Wiring diagram - AT - VSS A/T	AT-123
A/T control	EC-469, 1122, 1781
A/T diagnosis communication line	EC-655, 1317, 1891
A/T fluid temperature sensor.....	AT-120
A/T shift lock system	AT-263
A/T shift lock system - Wiring diagram	AT-264
A/T trouble diagnoses	AT-56
A/T Wiring diagram - AT - ENG SS.....	AT-127
A/T Wiring diagram AT - 1ST	AT-133
A/T Wiring diagram AT - 2ND	AT-140
A/T Wiring diagram AT - 3RD	AT-146
A/T Wiring diagram AT - 4TH	AT-152
A/T Wiring diagram AT - BA/FTS	AT-200
A/T Wiring diagram AT - LPSV.....	AT-174
A/T Wiring diagram AT - NONDTC	AT-213
A/T Wiring diagram AT - OVRCV.....	AT-195
A/T Wiring diagram AT - SSV/A	AT-179
A/T Wiring diagram AT - SSV/B	AT-183
A/T Wiring diagram AT - TCCSIG	AT-165
A/T Wiring diagram AT - TCV	AT-159
A/T Wiring diagram AT - TPS	AT-188
A/T Wiring diagram AT - VSSMTR	AT-207
AT/C - Wiring diagram	EC-470, 1123, 1782
ATDIAG - Wiring diagram	EC-656, 1318, 1892
Audio	EL-159
AUDIO - Wiring diagram	EL-160
Audio and A/C control removal and installation - See Instrument panel.....	BT-21
Automatic speed control system - See ASCD	EL-170
Automatic transaxle number	GI-47
Automatic transmission fluid replacement	MA-36
Auxiliary air control (AAC) valve	EC-452, 1105, 1764

B

Back-up lamp	EL-52
Back-up lamp switch (M/T).....	MT-10
BACK/L - Wiring diagram.....	EL-52
Ball joint (front)	SU-13

ALPHABETICAL INDEX

Base idle air volume	CL-14
initializing	EC-83, 755, 1419
Basic inspection	EC-127, 798, 1461
Battery.....	SC-4
Battery/Starting/Charging System	
Tester	SC-7, 14, 26
Baulk ring (M/T)	MT-18
Bi-level door control linkage	
adjustment.....	HA-34
Blower motor.....	HA-41
Blower resistor.....	HA-41
Blower unit.....	HA-72
Board-on lift.....	GI-48
Body alignment.....	BT-51
Boring/honing cylinder block	EM-134
Brake booster	BR-17
Brake control valve	
(Proportioning valve)	BR-11
Brake fluid change.....	BR-7
Brake fluid level.....	MA-37
Brake fluid level and line check.....	BR-7
Brake hydraulic line	BR-9
Brake inspection.....	MA-37
Brake lines and cables inspection	MA-37
Brake pedal.....	BR-12
Bulb specifications.....	EL-344
Bumper, front.....	BT-13
Bumper, rear.....	BT-16
BYPS/V - Wiring	
diagram.....	EC-641, 1301, 1308, 1875, 1882
C	
Camshaft inspection	EM-35, 111
Camshaft position sensor	
(CMPS)	EC-359, 1011, 1672
Canister-See EVAP	
canister	EC-48, 725, 1385
CHARGE - Wiring diagram.....	SC-25
Charging system.....	SC-24
Chassis and body maintenance.....	MA-35
CHIME - Wiring diagram	EL-116
CIGAR - Wiring diagram	EL-142
Cigarette lighter	EL-142
Circuit breaker	EL-19
CKPS - Wiring	
diagram.....	EC-355, 559, 1007, 1668, 1809
Closed loop control.....	EC-521, 1172, 1788
Closed throttle position	
switch	EC-461, 1114, 1773
Clutch cover	CL-17
Clutch disc.....	CL-17
Clutch fluid level.....	MA-35
Clutch master cylinder	CL-8
Clutch operating cylinder.....	CL-11
Clutch pedal	CL-6
Clutch release bearing	CL-14
Clutch release mechanism.....	CL-14
Clutch withdrawal lever	CL-14
CMPS - Wiring diagram	EC-360, 1012, 1674
Coil spring (front).....	SU-9
Coil spring (rear).....	SU-21
Collision diagnosis	RS-63
Combination lamp, front, removal and	
installation	BT-13
Combination lamp, rear, removal and	
installation	BT-31
Combination meter	EL-85
Combination meter removal and	
installation - See Instrument panel.....	BT-21
Combination switch	EL-32
Component Location (manual A/C)	HA-19
Compression pressure	EM-16, 88
Compressor clutch removal and	
installation	HA-67
Compressor mounting	HA-66
Compressor precaution	HA-6
Compressor special service tool	HA-9
Connecting rod.....	EM-56, 133
Connecting rod bearing	
clearance	EM-60, 137
Connecting rod bushing	
clearance	EM-61, 138
Connector inspection	GI-21
Console box - See Instrument panel	BT-21
CONSULT-II for ABS	BR-48
CONSULT-II for engine	EC-107, 778, 1442
CONSULT-II general information	GI-40
Control lever (M/T).....	MT-16
Control units (terminal arrangement)	EL-349
Control valve (A/T)	AT-303
Converter housing installation	AT-373
COOL/F - Wiring	
diagram.....	EC-329, 330, 533, 534, 981, 982, 1176, 1177, 1643, 1793
Coolant mixture ratio	MA-15
Coolant replacement	MA-17, 26
Cooling circuit (engine)	LC-10, 28
Cooling fan.....	LC-15, 33
Cooling fan control	EC-530, 1173, 1790
Cooling fan control system	LC-18, 36
Cooling fan motor	EC-1807
Cooling fan relay	EC-546, 1189, 1806
Cooling unit (A/C evaporator).....	HA-73
Coupling sleeve (M/T)	MT-18
Crank angle sensor built into distributor	
- See Camshaft position	
sensor	EC-359, 1011, 1672
Crankcase emission control system	
- See positive crankcase	
ventilation.....	EC-65, 741, 1401
Crankcase ventilation system	
- See Positive crankcase	
ventilation.....	EC-65, 741, 1401
Crankshaft	EM-58, 135

ALPHABETICAL INDEX

Crankshaft position sensor
(OBD)EC-354, 558, 1006, 1667, 1808
Crankshaft position sensor (OBD)
cog chippingEC-558, 1808
Cruise control - See ASCDEL-170
Cylinder blockEM-53, 130
Cylinder block boringEM-134
Cylinder headEM-31, 105
Cylinder head bolt tighteningEM-42, 120

D

Data link connector for
CONSULT-II.EC-67, 107, 743, 778, 1403, 1442
Daytime light systemEL-40
Daytime running light - See Daytime
light systemEL-40
DEF - Wiring diagramEL-146
Detonation sensor - See Knock
sensorEC-350, 1002, 1663
Diagnosis sensor unitRS-19
Diagnostic trouble code (DTC) for OBD
systemEC-22, 86, 700, 758, 1361, 1422
Diagnostic trouble code (DTC)
inspection priority chartEC-143, 813, 1475
Differential gear (FF A/T)AT-353
Differential gear (FF M/T)MT-20, 40
DimensionsGI-47
DistributorEC-46, 723, 1383
Distributor ignition (DI)
systemEC-46, 723, 1383
D/LOCK - Wiring diagramEL-199
Dome light - See Interior lampEL-64
Door glassBT-19
Door mirrorBT-49
Door trimBT-27
Door, frontBT-19
Door, rearBT-20
Drive belt inspectionMA-16, 25
Drive plate runoutEM-62, 139
Drive shaft (front)AX-10
Dropping resistor (A/T)AT-177
DTC work supportEC-119, 790, 1453
DTRL - Wiring diagramEL-44

E

ECM input/output signalEC-154, 824, 1486
ECTS - Wiring diagramEC-193, 210, 868,
884, 1526, 1542
EGR temperature
sensorEC-563, 1239, 1813
EGR/TS - Wiring
diagramEC-566, 1242, 1816

EGRC1 - Wiring
diagramEC-369, 377, 573, 1021,
1029, 1249, 1683, 1691, 1823
Electric sun roofEL-165
Electrical diagnosesGI-24
Electrical ignition systemEC-46, 723, 1383
Electrical unitEL-349
Electrical units locationEL-321
Electronic ignition (EI)
systemEC-46, 723, 1383
Engine compartmentBT-52
Engine control circuit
diagramEC-39, 717, 1376
Engine control component
parts locationEC-34, 712, 1373
Engine control module
(ECM)EC-472, 1125, 1784
Engine control system
diagram and chartEC-41, 719, 1378
Engine coolant temperature sensor
(ECTS)EC-191, 208, 866, 882, 1524, 1540
Engine fail-safe systemEC-144, 814, 1476
Engine oil filter replacementMA-21, 30
Engine oil precautionsGI-7
Engine oil replacementMA-20, 29
Engine outer component partsEM-12, 84
Engine removalEM-49, 127
Engine room - See Engine
compartmentBT-52
Engine serial numberGI-46
EVAP canisterEC-49, 726, 1386
EVAP canister purge volume control solenoid
valveEC-400, 595, 1052, 1255, 1714, 1829
EVAP canister vent control
valveEC-406, 607, 627, 1058,
1267, 1287, 1720, 1841, 1861
EVAP control system (small leak)
diagnosisEC-51, 385, 425, 577, 727,
1037, 1077, 1253, 1388, 1699, 1739, 1827
EVAP control system pressure
sensorEC-413, 1065, 1727
EVAP control system purge flow
monitoring diagnosisEC-615, 1275, 1849
EVAP system close modeEC-51, 727, 1388
EVAP vapor lines inspectionMA-23, 33
Evaporative emission (EVAP)
systemEC-48, 725, 1385
Exhaust gas recirculation (EGR)
valveEC-365, 571, 1017, 1247, 1679, 1821
Exhaust systemFE-15
Exhaust system inspectionMA-35
ExteriorBT-31

F

Fan switchHA-41
F/FOG - Wiring diagramEL-54

ALPHABETICAL INDEX

Final drive (FF A/T)	AT-353	
Final drive (FF M/T).....	MT-20, 40	
Finisher, interior - See Trim.....	BT-25	
Finisher, trunk lid	BT-30	
Floor trim	BT-25	
Fluid temperature sensor (A/T)	AT-120	
Fluids	MA-13	
Flywheel (clutch)	CL-18	
Flywheel runout.....	EM-62, 139	
Fog lamp, front.....	EL-53	
Fog lamp, front, removal and installation.....	BT-13	
Fork rod (M/T).....	MT-19	
Forward clutch.....	AT-328	
F/PUMP - Wiring diagram.....	EC-674, 1334, 1915	
Freeze frame data.....	EC-86, 758, 1422	
FRO2 - Wiring diagram	EC-216, 238, 248, 1193, 1198, 1213, 1221, 1548, 1567, 1575	
FRO2/H - Wiring diagram	EC-256, 1225, 1581	
Front axle	AX-2	
Front bumper.....	BT-13	
Front combination lamp removal and installation.....	BT-13	
Front disc brake.....	BR-20	
Front door.....	BT-19	
Front fog lamp	EL-53	
Front fog lamp removal and installation.....	BT-13	
Front heated oxygen sensor (HO2S).....	EC-213, 222, 228, 235, 246, 1190, 1195, 1200, 1205, 1210, 1218, 1545, 1552, 1558, 1564, 1573	
Front heated oxygen sensor (HO2S) heater	EC-254, 1223, 1579	
Front passenger air bag	RS-24	
Front seat	BT-37	
Front seat belt.....	RS-4	
Front suspension	SU-2	
Front washer	EL-135	
Front wiper	EL-135	
FUEL - Wiring diagram	EC-303, 312, 959, 966, 1621, 1628	
Fuel cut control (at no load & high engine speed)	EC-48, 725, 1385	
Fuel filter	EC-743	
Fuel gauge	EL-85	
Fuel injection system.....	EC-301, 310, 957, 964, 1619, 1626	
Fuel injector.....	EC-664, 1324, 1905	
Fuel line inspection	MA-19, 29	
Fuel precautions	GI-8	
Fuel pressure check.....	EC-67, 743, 1403	
Fuel pressure regulator	EC-68, 1404	
Fuel pressure release	EC-67, 743, 1403	
Fuel pump	EC-673, 1333, 1914	
Fuel pump relay	EC-673, 1333, 1914	
Fuel system.....	FE-5	
Fuel tank temperature sensor	EC-319, 971, 1633	
Fuel tank vacuum relief valve.....	EC-49, 726, 1386	
Fuse.....	EL-19	
Fuse block	EL-347	
Fusible link	EL-19	
G		
Fog lamp and safety stand.....	GI-49	
Gauges	EL-85	
Gear components (M/T)	MT-18	
Generator.....	SC-33	
Generator - See Alternator	SC-33	
Generic scan tool (GST)	EC-121, 792, 1455	
Grease.....	MA-13	
Ground distribution	EL-20	
H		
Harness connector	EL-5	
Harness connector inspection	GI-21	
Harness layout	EL-324	
Hazard warning lamp	EL-56	
Headlamp	EL-35	
Headlamp removal and installation.....	BT-13	
Headlining - See Roof trim.....	BT-29	
Heated oxygen sensor (HO2S) (front)	EC-213, 222, 228, 235, 246, 1190, 1195, 1200, 1205, 1210, 1218, 1545, 1552, 1558, 1564, 1573	
Heated oxygen sensor (HO2S) heater (front)	EC-254, 1223, 1579	
Heated oxygen sensor (HO2S) heater (rear).....	EC-295, 917, 952, 1614	
Heated oxygen sensor (rear)	EC-260, 269, 278, 287, 887, 895, 903, 911, 922, 930, 938, 946, 1584, 1592, 1600, 1608	
HEATER - Wiring diagram.....	HA-22	
Heater mirror	EL-168	
Heater system - Wiring diagram.....	HA-22	
Heater unit (heater core)	HA-71	
Height (Dimensions)	GI-47	
HFC134a (R134a) system identification.....	HA-4	
HFC134a (R134a) system introduction	HA-14	
HFC134a (R134a) system precaution.....	HA-2	
HFC134a (R134a) system service procedure	HA-61	
HFC134a (R134a) system service tools	HA-10	
HFC134a system service equipment precaution.....	HA-6	
High clutch.....	AT-323	
H/LAMP - Wiring diagram	EL-36	

ALPHABETICAL INDEX

H/MIRROR - Wiring diagram	EL-168
Hood.....	BT-13
Horn.....	EL-141
HORN - Wiring diagram.....	EL-141
How to erase DTC for OBD system.....	EC-98, 769, 1433
Hydraulic lash adjuster inspection.....	EM-116

I

IACV-AAC valve	EC-452, 1105, 1764
IATS - Wiring diagram.....	EC-187, 862, 1520
Identification plate.....	GI-46
Idle air control (IAC) system.....	EC-452, 1105, 1764
Idle air control valve (IACV)	EC-452, 1105, 1764
Idle mixture ratio.....	EC-71, 746, 1407
Idle speed.....	EC-71, 746, 1407
IGN/SG - Wiring diagram	EC-548, 1229, 1900
Ignition coil.....	EC-1904
Ignition control system	EC-547, 1228, 1899
Ignition timing	EC-71, 746, 1407
Ignition wire inspection	EC-1662
ILL - Wiring diagram.....	EL-62
Illumination	EL-61
INJECT - Wiring diagram	EC-665, 1325, 1906
Injector removal and installation	EC-68, 744, 1404
Input shaft (FF M/T)	MT-18, 27
Instrument panel.....	BT-21
INT/L - Wiring diagram	EL-68
Intake air temparature sensor	EC-185, 860, 1518
Intake door control linkage adjustment.....	HA-32
Intake door motor	HA-29
Intake manifold.....	EM-12, 84
Interior	BT-25
Interior lamp	EL-64

J

Jacking points	GI-49
Joint connector (J/C)	EL-350
Junction box (J/B)	EL-347

K

Keyless entry system - See Multi-remote control system	EL-226
Knock sensor (KS)	EC-350, 351, 1002, 1003, 1663, 1664

Knuckle spindle.....	AX-5
----------------------	------

L

Length (Dimensions).....	GI-47
License lamp	EL-49
Lifting points.....	GI-50
Line pressure solenoid valve.....	AT-157
Line pressure test (A/T).....	AT-66
Liquid gasket application.....	EM-4, 77
LOAD - Wiring diagram.....	EC-688, 1348, 1930
Location of electrical units.....	EL-321
Low and reverse brake.....	AT-335
Lubricant (R134a) A/C	HA-63
Lubricants	MA-13
Lubrication circuit (engine).....	LC-4, 22
Lubrication oil A/C.....	HA-63
Lubrication-locks, hinges and hood latches	MA-40
Luggage room lamp	EL-64

M

MAFS - Wiring diagram	EC-178, 850, 1511
Magnet clutch	HA-67
MAIN - Wiring diagram.....	EC-168, 839, 1500
Main drive gear (M/T)	MT-18
Mainshaft (M/T)	MT-18, 32
Maintenance (engine)	MA-16, 25
MAJOR OVERHAUL	AT-277
Malfunction indicator lamp (MIL).....	EC-100, 771, 1435
Manual air conditioner - Wiring diagram.....	HA-23
Manual transaxle number	GI-47
Manual transmission oil replacement	MA-35
Mass air flow sensor (MAFS).....	EC-174, 846, 1507
Master cylinder (clutch)	CL-8
Meter	EL-85
METER - Wiring diagram	EL-92
MIL & Data link connectors circuit.....	EC-697, 1358, 1942
MIL/DL - Wiring diagram	EC-697, 1358, 1942
MIRROR - Wiring diagram	EL-167
Mirror defogger	EL-168
Mirror, door	BT-49
Misfire	EC-343, 995, 1656
Model variation	GI-44
Molding - See Exterior	BT-31
M/T major overhaul.....	MT-17
M/T removal and installation	MT-12
MULTI - Wiring diagram	EL-231
Multi-remote control system	EL-226

ALPHABETICAL INDEX

- Multiport fuel injection (MFI)
system EC-44, 721, 1381
Multiport fuel injection
precautions GI-6

N

- NATS (Nissan anti-theft system) EL-301
NATS - Wiring diagram EL-303
Neutral position switch EC-658, 1320, 1894
NVH troubleshooting (AX) AX-3
NVH troubleshooting (BR) BR-6
NVH troubleshooting (CL) CL-4
NVH troubleshooting (EM) EM-10, 82
NVH troubleshooting (M/T) MT-6
NVH troubleshooting (ST) ST-5
NVH troubleshooting (SU) SU-16
NVIS (Nissan vehicle
immobilizer system) EL-301

O

- Oil change (capacity) MA-13
Oil pan (engine) EM-17, 89
Oil pressure (engine) LC-5, 22
Oil pump (A/T) AT-299
Oil pump (engine) LC-5, 23
Oil pump regulator valve (engine) LC-7, 24
Oil seal replacement (engine) EM-29, 102
On board diagnostic
system EC-85, 757, 1421
Operating cylinder (clutch) CL-11
ORVR (On-board Refueling
Vapor Recovery) EC-55, 1391
Overdrive control switch AT-261
Overrun clutch AT-328
Oversize piston EM-134

P

- Park/Neutral position
switch EC-658, 1320, 1894
Park/neutral position switch (A/T) AT-110
Park/neutral position switch (M/T) MT-10
Parking brake control BR-36
Parking drum brake BR-32
Parking lamp EL-49
PCV (positive crankcase
ventilation) EC-65, 741, 1401
PGC/V - Wiring diagram EC-402, 598, 1054,
1258, 1716, 1832
Pilot bushing replacement EM-138
Piston assembly EM-62, 139
Piston pin inspection EM-55, 132

- Piston ring inspection EM-56, 132
Piston to bore clearance EM-57, 134
PNP/SW - Wiring
diagram EC-660, 1322, 1896
POWER - Wiring diagram EL-11
Power door lock EL-195
Power door mirror EL-167
Power steering fluid level MA-39, ST-7
Power steering gear ST-15
Power steering hydraulic pressure ST-9
Power steering oil pressure
switch EC-679, 1339, 1920
Power steering oil pump ST-21, 24
Power steering system bleeding ST-7
Power supply routing EL-9
Power transistor EC-1904
Power transistor &
ignition coil EC-547, 1228, 1899
Power window EL-190
PRE/SE - Wiring
diagram EC-415, 1067, 1729
Precautions (General) GI-4
Pressure plate - See Clutch cover CL-17
Pressure test (A/T) AT-66
PST/SW - Wiring
diagram EC-680, 1340, 1921

R

- Radiator LC-15, 33
Radiator fan - See Cooling fan LC-15, 33
Radio - See Audio EL-159
Rear air spoiler BT-31
Rear axle AX-21
Rear axle (disc brake type) AX-23
Rear axle (drum brake type) AX-23
Rear bumper BT-16
Rear combination lamp
removal and installation BT-31
Rear disc brake BR-24
Rear door BT-20
Rear drum brake BR-32
Rear heated oxygen sensor
(HO2S) EC-260, 269, 278, 287,
887, 895, 903, 911, 922, 930, 938, 946, 1584,
1592, 1600, 1608
Rear heated oxygen sensor
(HO2S) heater EC-295, 917, 952, 1614
Rear seat BT-39
Rear seat belt RS-6
Rear suspension SU-16
Rear window BT-46
Rear window defogger EL-143
Refrigerant pressure sensor HA-49
Refrigerant connection precaution HA-4
Refrigerant general precaution HA-3
Refrigerant lines HA-75

ALPHABETICAL INDEX

Refrigerant pressure	
sensor	EC-683, 1343, 1925
Refrigeration cycle	HA-14
Release bearing (clutch)	CL-14
Removal and installation (A/T)	AT-274
Resistor	EC-1904
Reverse clutch	AT-319
Reverse idler shaft (M/T)	MT-17
Reverse lamp switch (M/T)	
- See Back-up lamp switch (M/T)	MT-10
Reverse main gear (M/T)	MT-18
Road wheel size	GI-47
Roof trim	BT-29
Room lamp - See Interior lamp	EL-64
RRO2 - Wiring diagram	EC-262, 271, 280, 289, 889, 897, 905, 913, 924, 932, 940, 948, 1586, 1594, 1602, 1610
RRO2/H - Wiring diagram	EC-297, 919, 954, 1616

S

SAE J1930 terminology list	GI-53
Seal - See Exterior	BT-31
Seat belt inspection	MA-40, RS-8
Seat belt pre-tensioner	RS-3, 20
Seat belt pre-tensioner disposal	RS-26
Seat belt, front	RS-4
Seat belt, rear	RS-6
Seat, front	BT-37
Seat, rear	BT-39
SHIFT - Wiring diagram	AT-264
Shift control components (M/T)	MT-19
Shift fork (M/T)	MT-19
Shift lever	MT-16
Shift lock system	AT-263
Shift schedule	AT-378
Shift solenoid valve A (A/T)	AT-135, 148
Shift solenoid valve B (A/T)	AT-135
Shock absorber (front)	SU-10
Shock absorber (rear)	SU-21
Side air bag	RS-25
Side trim	BT-25
Smart entrance control unit	EL-287
Spare tire size	GI-47
Spark plug replacement	MA-22, 31
Speedometer	EL-85
Spiral cable	RS-21
Spring (Wheelarch) height	SU-6
SROOF - Wiring diagram	EL-166
SRS - See Supplemental Restraint System	RS-13
SRS - Wiring diagram	RS-39
SRS Trouble diagnoses	RS-33
S/SIG - Wiring diagram	EC-670, 1330, 1911
Stabilizer bar (front)	SU-11
Stall test (A/T)	AT-62

Standardized relay	EL-7
START - Wiring diagram	SC-11
Start signal	EC-669, 1329, 1910
Starter	SC-20
Starting system	SC-10
Steering gear, linkage and transfer gear inspection	MA-39
Steering linkage	ST-15
Steering switch	EL-34
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-51
STOP/L - Wiring diagram	EL-51
Striking rod (M/T)	MT-19
Strut (front)	SU-9
Strut (rear)	SU-20
Sub-gear (M/T)	MT-18
Sunroof, electric	EL-165
Sunroof	BT-40
Supplemental Restraint System	RS-13
Supplemental restraint system	
- Wiring diagram	RS-39
S/VCSW - Wiring diagram	EC-523, 1152
Swirl control valve control	
solenoid valve	EC-487, 510, 1147, 1159
Swirl control valve control	
vacuum check switch	EC-523, 1152
SWL/V - Wiring diagram	EC-487, 510, 1147, 1159
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-145, 815, 1477
Synchronizer (M/T)	MT-18
System readiness test	
(SRT) code	EC-87, 759, 1423

T

Tachometer	EL-85
Tail lamp	EL-49
TAIL/L - Wiring diagram	EL-49
TCM circuit diagram	AT-15
TCM inspection table	AT-103
Temperature control cable and linkage adjustment	HA-35
TFTS - Wiring diagram	EC-321, 973, 1635
THEFT - Wiring diagram	EL-262
Theft warning system	EL-256
Thermal protector	HA-70
Thermostat	LC-13, 31
Three way catalyst	EC-381, 1033, 1695
Three way catalyst precautions	GI-6
Throttle position sensor (TPS)	EC-196, 871, 1529
Throttle position sensor adjustment	EC-127, 798, 1461

ALPHABETICAL INDEX

Throttle position switch.....	AT-193, 261, EC-461, 1114, 1773
Throwout bearing - See Clutch release bearing.....	CL-14
Tie-rod	ST-19
Tie-rod ball joints	ST-19
Tightening torque of standard bolts	GI-52
Time control system	EL-294
Timing chain.....	EM-20, 94
Tire rotation	MA-37
Tire size	GI-47
TLID - Wiring diagram.....	EL-169
Torque converter installation	AT-275
Tow truck towing	GI-51
TP/SW - Wiring diagram.....	EC-463, 1116, 1775
TPS - Wiring diagram.....	EC-201, 876, 1534
Transmission case (M/T)	MT-17
Tread-FR&RR (Dimensions).....	GI-47
Trim	BT-25
Trouble diagnoses	GI-34
Trunk lid.....	BT-16
Trunk lid finisher	BT-30
Trunk lid opener - See Trunk lid	BT-16
Trunk lid opener, electric.....	EL-169
Trunk lid trim	BT-30
Trunk room lamp	EL-64
Trunk room trim	BT-30
TURN - Wiring diagram.....	EL-58
Turn signal lamp.....	EL-56
Two trip detection logic	EC-85, 757, 1421
Two-pole lift.....	GI-50

U

Under body.....	BT-55
-----------------	-------

V

Vacuum cut valve bypass valve.....	EC-639, 645, 1299, 1305, 1873, 1879
Vacuum hose (brake system).....	BR-19
Vacuum hose drawing (Engine control).....	EC-42, 1379
Valve clearance	EM-45
Valve guide	EM-37, 112
Valve lifter.....	EM-40
Valve seat.....	EM-38, 114
Valve spring.....	EM-40, 115

Vehicle identification number	GI-45
Vehicle recovery (freeing a stuck vehicle).....	GI-51
Vehicle speed sensor (VSS).....	EC-448, 1101, 1760
Vent mode switch	HA-16
VENT/V - Wiring diagram.....	EC-408, 609, 630, 1060, 1269, 1290, 1722, 1843, 1864
Viscosity number (SAE)	MA-14
Viscous coupling (FF M/T).....	MT-11
VSS - Wiring diagram.....	EC-450, 1103, 1762

W

WARN - Wiring diagram.....	EL-105
Warning chime	EL-113
Warning lamps	EL-103
Washer, front	EL-135
Water pump	LC-12, 30
Water temperature gauge	EL-85
Weatherstrip - See Exterior.....	BT-31
Wheel alignment (front)	SU-6
Wheel alignment (rear)	SU-18
Wheel balance.....	MA-37
Wheel bearing (front)	AX-4
Wheel bearing (rear).....	AX-22
Wheel hub (front)	AX-5
Wheel hub (rear).....	AX-23
Wheel sensors (ABS)	BR-79
Wheel size	GI-47
Wheelarch height.....	SU-6
Wheelbase (Dimensions).....	GI-47
Wide open & closed throttle position switch	EC-196, 871, 1529
Width (Dimensions).....	GI-47
Window, rear	BT-46
Windshield	BT-46
Windshield washer - See Front washer.....	EL-135
Windshield wiper - See Front wiper.....	EL-135
WIPER - Wiring diagram.....	EL-137
Wiper and washer	EL-135
Wiper, front	EL-135
Wiring Diagram (Cell code) list	EL-345
Wiring diagrams	GI-11
Withdrawal lever (clutch).....	CL-14
Wrist pin - See Piston pin inspection.....	EM-55, 132

IDX

NOTES