

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram	MTC-28	A/T Wiring diagram AT - TCCSIG	AT-163 , AT-546
A/C air flow	MTC-23	A/T Wiring diagram AT - TCV	AT-156 , AT-541
A/C component layout	MTC-21	A/T Wiring diagram AT - TPS	AT-186 , AT-571
A/C compressor clutch removal and installation .	MTC-72	A/T Wiring diagram AT - VSSMTR .	AT-204 , AT-588 , AT-593
A/C compressor mounting	MTC-71	AAC/V - Wiring diagram	EC-422 , EC-974
A/C compressor precaution	MTC-8	ABS - Wiring diagram	BRC-10
A/C compressor special service tool	MTC-11	ABS sensor rotor	RAX-6
A/C control linkage adjustment (manual A/C) .	MTC-43	Absolute pressure sensor	EC-743 , EC-997
A/C control operation (manual A/C)	MTC-22	Accelerator control system	ACC-2
A/C diagnostic work flow (manual A/C)	MTC-35	Accelerator pedal position (APP) sensor	EC-1475 , EC-1482 , EC-1684
A/C HFC134a (R134a) system identification	MTC-4	Accelerator pedal released position learning	EC-1253
A/C HFC134a (R134a) system introduction ...	MTC-16	Accelerator wire adjustment	ACC-2 , ACS-23
A/C HFC134a (R134a) system precaution	MTC-3	Air bag	SRS-3
A/C HFC134a (R134a) system service procedure	MTC-85	Air bag disposal	SRS-47
A/C HFC134a (R134a) system service tools ..	MTC-12	Air bag precautions	GI-3
A/C HFC134a system service equipment precaution ...	MTC-8	Air bleeding (hydraulic clutch)	CL-7
A/C lubricant (R134a)	MTC-18	Air bleeding for brake system	BR-7
A/C lubrication oil	MTC-18	Air cleaner and air duct	EM-91
A/C operational check	MTC-37	Air cleaner filter replacementQG18DE	MA-18
A/C performance chart	MTC-63	Air cleaner filter replacementQR25DE	MA-25
A/C performance test diagnoses	MTC-63	Air conditioner - Wiring diagram	MTC-28
A/C pressure switch	MTC-16	Air conditioner cut control	EC-1240
A/C push control	MTC-22	Air control cable adjustment	MTC-45
A/C rearay	MTC-60	Air flow meter - See Mass air flow sensor	EC-172 , EC-1364 , EC-1371 , EC-1604
A/C service data specification	MTC-97	Air fuel ratio sensor 1 ...	EC-1075 , EC-1080 , EC-1085 , EC-1091 , EC-1097 , EC-1102
A/C switch	MTC-22	Air fuel ratio sensor 1 heater	EC-993
A/C, M - Wiring diagram	MTC-28	Air mix door control linkage adjustment	MTC-47
A/F - Wiring diagram	EC-1078 , EC-1082 , EC-1088 , EC-1094 , EC-1100 , EC-1105	Air spoiler, rear	EI-23
A/FH - Wiring diagram	EC-994	Alternator	SC-30
A/T - Wiring diagram	AT-413	Angular tightening application	EM-4 , EM-81
A/T - Wiring diagram - AT - FTS	AT-120 , AT-503	Antenna	AV-10
A/T - Wiring diagram - AT - MAIN	AT-111 , AT-492	Anti-lock brake system - Wiring diagram	BRC-10
A/T - Wiring diagram - AT - PNP/SW .	AT-115 , AT-497	APPS1 - Wiring diagram	EC-1484
A/T - Wiring diagram - AT - VSS A/T .	AT-125 , AT-510	APPS2 - Wiring diagram	EC-1686
A/T control	EC-435 , EC-988	APPS3 - Wiring diagram	EC-1477
A/T diagnosis communication line ...	EC-538 , EC-1162	ASC/BS - Wiring diagram	EC-1754
A/T fluid temperature sensor	AT-123 , AT-501	ASC/SW - Wiring diagram	EC-1747
A/T self-diagnoses	AT-437 , AT-445 , AT-446	ASCBOF - Wiring diagram	EC-1824
A/T shift lock system	AT-253 , AT-650	ASCD	EC-1850
A/T shift lock system - Wiring diagram	AT-254 , AT-651	ASCD - Wiring diagram	ACS-8
A/T trouble diagnoses	AT-56	ASCD (automatic speed control device)	ACS-3
A/T Wiring diagram - AT - ENG SS ...	AT-129 , AT-514	ASCIND - Wiring diagram	EC-1832
A/T Wiring diagram AT - 1ST	AT-134 , AT-519	AT/C - Wiring diagram	EC-436 , EC-989
A/T Wiring diagram AT - 2ND	AT-139 , AT-524	ATDIAG - Wiring diagram	EC-539 , EC-1163
A/T Wiring diagram AT - 3RD	AT-144 , AT-529	Audio	AV-2
A/T Wiring diagram AT - 4TH	AT-149 , AT-534	AUDIO - Wiring diagram	AV-4
A/T Wiring diagram AT - BA/FTS	AT-198 , AT-581	Audio and A/C control removal and installation - See Instrument panel	IP-11
A/T Wiring diagram AT - CAN	AT-597	Automatic speed control system - See ASCD ..	ACS-3
A/T Wiring diagram AT - LPSV	AT-171 , AT-554	Automatic transaxle number	GI-48
A/T Wiring diagram AT - NONDTC	AT-210 , AT-603	Automatic transmission fluid replacement	MA-31
A/T Wiring diagram AT - OVRCSV	AT-193 , AT-576	Axle	MA-35
A/T Wiring diagram AT - SSV/A	AT-177 , AT-560		
A/T Wiring diagram AT - SSV/B	AT-181 , AT-565		

ALPHABETICAL INDEX

B

Back door window [GW-11](#)
 BACK/L - Wiring diagram [LT-22](#)
 Back-up lamp [LT-22](#)
 Back-up lamp switch (M/T) [MT-13](#)
 Back-up lamp switch (M/T)Back-up lamp switch ... [MT-77](#), [MT-136](#)
 Ball joint (front) [FSU-15](#)
 BARO - Wiring diagram [EC-744](#)
 Barometric pressure (BARO) sensor [EC-743](#)
 Base idle air volume initialing [EC-56](#), [EC-622](#)
 Basic inspection [EC-87](#), [EC-652](#), [EC-1289](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#), [SC-24](#)
 Baulk ring (M/T) [MT-20](#), [MT-83](#), [MT-142](#)
 Bi-level door control linkage adjustment [MTC-45](#)
 Block heater [EM-142](#)
 Blower motor [MTC-53](#)
 Blower resistor [MTC-53](#)
 Blower unit [MTC-82](#)
 Board-on lift [GI-40](#)
 Body alignment [BL-117](#)
 Brake booster [BR-16](#)
 Brake control valve (Proportioning valve) [BR-10](#)
 Brake fluid change [BR-6](#)
 Brake fluid level [MA-32](#)
 Brake fluid level and line check [BR-6](#)
 Brake hydraulic line [BR-8](#)
 Brake inspectionDisc Brake [MA-32](#)
 Brake inspectionDrum Brake [MA-33](#)
 Brake lines and cables inspection [MA-32](#)
 Brake lining wear temporary checkingDisc Brake . [MA-33](#)
 Brake lining wear temporary checkingDrum Brake [MA-34](#)
 Brake pedal [BR-11](#)
 Brake switch [EC-1767](#)
 BRK/SW - Wiring diagram [EC-1768](#)
 Bulb specifications [LT-72](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-19](#)
 BYPS/V - Wiring diagram [EC-527](#), [EC-1148](#), [EC-1155](#), [EC-1731](#), [EC-1739](#)

C

Camshaft [EM-111](#)
 Camshaft inspection [EM-40](#), [EM-113](#)
 Camshaft position sensor (PHASE) . [EC-306](#), [EC-852](#), [EC-1504](#)
 CAN - Wiring diagram [EC-1349](#), [LAN-4](#)
 CAN (Controller Area Network) [LAN-3](#)
 CAN communication [EC-1241](#), [EC-1348](#), [AT-596](#)
 Canister-See EVAP canister [EC-1839](#)
 CHARGE - Wiring diagram [SC-23](#)
 Charging system [SC-22](#)
 Chassis and body maintenance [MA-9](#), [MA-29](#)

CHIME - Wiring diagram [DI-37](#)
 CIGAR - Wiring diagram [WW-10](#)
 Cigarette lighter [WW-10](#)
 Circuit breaker [PG-48](#)
 Closed loop control [EC-610](#), [EC-1238](#), [EC-1659](#)
 Closed loop control (Bank 1) [EC-479](#), [EC-1045](#)
 Closed loop control (Bank 2) [EC-479](#), [EC-1045](#)
 Closed throttle position switch [EC-428](#), [EC-980](#)
 Clutch cover [CL-17](#), [CL-33](#)
 Clutch disc [CL-17](#), [CL-33](#)
 Clutch fluid level [MA-29](#)
 Clutch master cylinder [CL-9](#), [CL-26](#)
 Clutch operating cylinder [CL-11](#), [CL-28](#)
 Clutch pedal [CL-7](#), [CL-24](#)
 Clutch release bearing [CL-14](#), [CL-31](#)
 Clutch release mechanism [CL-14](#), [CL-31](#)
 Clutch withdrawal lever [CL-14](#), [CL-31](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear) [RSU-11](#)
 Combination lamp, front, removal and installation [EI-14](#)
 Combination lamp, rear, removal and installation [EI-23](#)
 Combination meter [DI-3](#)
 Combination meter removal and installation - See Instrument panel [IP-11](#)
 Combination switch [LT-4](#)
 Component Location (manual A/C) [MTC-25](#)
 Compression pressure [EM-13](#)
 Compressor clutch removal and installation ... [MTC-72](#)
 Compressor mounting [MTC-71](#)
 Compressor precaution [MTC-8](#)
 Compressor special service tool [MTC-11](#)
 Connecting rod [EM-61](#)
 Connecting rod bearing clearance [EM-66](#)
 Connecting rod bushing clearance [EM-67](#)
 Connector inspection [GI-23](#)
 Console box - See Instrument panel [IP-11](#)
 CONSULT for ABS [BRC-16](#)
 CONSULT for engine [EC-122](#), [EC-686](#), [EC-1314](#)
 CONSULT general information [GI-36](#)
 Control lever (M/T) [MT-14](#)
 Control valve (A/T) [AT-299](#)
 Controller Area Network (CAN) [LAN-3](#)
 Converter housing installation [AT-386](#), [AT-758](#)
 COOL/F - Wiring diagram ... [EC-279](#), [EC-484](#), [EC-825](#), [EC-1063](#), [EC-1452](#), [EC-1664](#)
 Coolant mixture ratio [MA-14](#)
 Coolant overtemperarute enrichment protection .. [EC-275](#), [EC-1448](#)
 Coolant replacementQG18DE [MA-15](#)
 Coolant replacementQR25DE [MA-22](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan motor [EC-1461](#), [EC-1673](#)
 Cooling fan relay [EC-1073](#)
 Cooling unit (A/C evaporator) [MTC-83](#)
 Coupling sleeve (M/T) [MT-20](#), [MT-83](#), [MT-142](#)
 Crankcase emission control system - See positive crankcase ventilation [EC-1217](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-591](#), [EC-1217](#), [EC-1848](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Crankshaft [EM-63](#), [EM-143](#)
Crankshaft position sensor (POS) [EC-300](#), [EC-847](#),
[EC-1497](#)
Cruise control - See ASCD [ACS-3](#)
Cylinder block [EM-58](#), [EM-142](#)
Cylinder block boring [EM-162](#)
Cylinder head [EM-36](#), [EM-129](#)

D

D/LOCK - Wiring diagram [BL-15](#)
Data link connector [EC-577](#), [EC-1835](#)
Data link connector for Consult . [EC-125](#), [EC-623](#), [EC-689](#), [EC-1316](#)
Daytime light system [LT-10](#)
Daytime running light - See Daytime light system .. [LT-10](#)
DEF - Wiring diagram [GW-20](#)
Detonation sensor - See Knock sensor [EC-843](#)
Diagnosis sensor unit [SRS-37](#)
Diagnostic trouble code (DTC) for OBD system [EC-63](#),
[EC-628](#), [EC-1221](#), [EC-1262](#)
Diagnostic trouble code (DTC) inspection priority chart
[EC-85](#), [EC-650](#), [EC-1286](#)
Differential gear (FF A/T) [AT-362](#)
Differential gear (FF M/T) [MT-22](#), [MT-57](#), [MT-86](#), [MT-145](#)
Dimensions [GI-48](#)
Distributor ignition (DI) system [EC-38](#)
DLC - Wiring diagram [EC-1835](#)
Dome light - See Interior lamp [LT-34](#)
Door adjustment (front) [BL-32](#)
Door adjustment (rear) [BL-32](#)
Door glass [BL-31](#), [BL-32](#), [GW-5](#), [GW-11](#), [GW-13](#)
Door glass Fitting Adjustment [BL-32](#)
Door mirror [GW-14](#), [GW-16](#)
Door trim [EI-32](#)
Door, front [BL-32](#), [GW-12](#)
Door, rear [BL-32](#), [GW-13](#)
Drive belt [EM-89](#)
Drive belt inspectionQG18DE [MA-15](#)
Drive belt inspectionQR25DE [MA-22](#)
Drive plate runout [EM-68](#)
Drive shaft [MA-36](#)
Drive shaft (front) [FAX-5](#), [FAX-12](#)
Dropping resistor (A/T) [AT-175](#), [AT-552](#)
DTC work support [EC-135](#), [EC-698](#), [EC-1325](#)
DTRL - Wiring diagram [LT-14](#)

E

ECM input/output signal [EC-113](#), [EC-677](#), [EC-1304](#)
ECM power supply [EC-148](#), [EC-712](#), [EC-1340](#), [EC-1600](#)
ECM/PW - Wiring diagram [EC-1601](#)
ECTS - Wiring diagram [EC-188](#), [EC-203](#), [EC-756](#), [EC-771](#), [EC-1384](#)
EGR function [EC-321](#), [EC-494](#), [EC-866](#), [EC-1110](#)
EGR temperature sensor [EC-335](#), [EC-884](#)

EGR volume control valve . [EC-322](#), [EC-328](#), [EC-495](#),
[EC-877](#)
EGR/TS - Wiring diagram [EC-338](#), [EC-887](#)
EGRC/V - Wiring diagram [EC-330](#)
EGRC1 - Wiring diagram ... [EC-325](#), [EC-498](#), [EC-870](#),
[EC-1113](#)
EGVC/V - Wiring diagram [EC-879](#)
Electric throttle control actuator [EC-1614](#), [EC-1616](#)
Electrical diagnoses [GI-23](#)
Electrical load signal circuit [EC-569](#), [EC-1191](#), [EC-1816](#)
Electrical units location [PG-45](#)
Electronic ignition (EI) system [EC-1239](#)
Engine compartment [BL-118](#)
Engine control circuit diagram ... [EC-111](#), [EC-675](#), [EC-1302](#)
Engine control component parts location [EC-106](#), [EC-670](#), [EC-1298](#)
Engine control module (ECM) ... [EC-438](#), [EC-991](#), [EC-1593](#)
Engine control system diagram and chart . [EC-33](#), [EC-607](#), [EC-1234](#)
Engine coolant temperature sensor (ECTS) .. [EC-186](#),
[EC-201](#), [EC-754](#), [EC-769](#), [EC-1382](#), [EC-1387](#)
Engine fail-safe system [EC-86](#), [EC-652](#), [EC-1288](#)
Engine oil filter replacementQG18DE [MA-20](#)
Engine oil filter replacementQR25DE [MA-26](#)
Engine oil precautions [GI-7](#)
Engine oil replacementQG18DE [MA-19](#)
Engine oil replacementQR25DE [MA-25](#)
Engine outer component parts [EM-15](#)
Engine removal [EM-54](#), [EM-138](#)
Engine room - See Engine compartment [BL-118](#)
Engine serial number [GI-47](#)
ETC1 - Wiring diagram [EC-1617](#)
ETC2 - Wiring diagram [EC-1625](#)
ETC3 - Wiring diagram [EC-1629](#)
EVAP canister [EC-581](#), [EC-1204](#)
EVAP canister purge volume control solenoid valve
[EC-364](#), [EC-503](#), [EC-922](#), [EC-1121](#), [EC-1529](#), [EC-1694](#), [EC-1839](#)
EVAP canister vent control valve [EC-369](#), [EC-510](#), [EC-515](#), [EC-928](#), [EC-1130](#), [EC-1136](#), [EC-1535](#), [EC-1702](#),
[EC-1709](#)
EVAP control system (small leak) diagnosis .. [EC-353](#),
[EC-383](#), [EC-393](#), [EC-501](#), [EC-908](#), [EC-944](#), [EC-1119](#),
[EC-1520](#), [EC-1557](#), [EC-1565](#), [EC-1717](#)
EVAP control system pressure sensor ... [EC-375](#), [EC-934](#), [EC-1542](#), [EC-1549](#)
EVAP control system purge flow monitoring diagnosis .
[EC-345](#), [EC-897](#), [EC-1514](#)
EVAP system close mode [EC-1205](#)
EVAP vapor lines inspectionQG18DE [MA-21](#)
EVAP vapor lines inspectionQR25DE [MA-28](#)
Evaporative emission (EVAP) system .. [EC-1836](#), [EC-1839](#)
Exhaust gas recirculation (EGR) valve [EC-1111](#)
Exhaust system [EX-3](#)
Exhaust system inspection [MA-29](#)

ALPHABETICAL INDEX

Exterior [EI-23](#)

F

F/FOG - Wiring diagram [LT-24](#)
F/PUMP - Wiring diagram [EC-555](#), [EC-1177](#), [EC-1802](#)
Fan switch [MTC-53](#)
Final drive (FF A/T) [AT-362](#)
Final drive (FF M/T) [MT-22](#), [MT-57](#), [MT-86](#), [MT-145](#)
Finisher, interior - See Trim [EI-29](#)
Finisher, trunk lid [EI-34](#)
Floor trim [EI-29](#)
Flow charts [GI-26](#)
FLS1 - Wiring diagram [EC-406](#), [EC-958](#), [EC-1575](#)
FLS2 - Wiring diagram [EC-413](#), [EC-965](#), [EC-1582](#)
FLS3 - Wiring diagram [EC-523](#), [EC-1144](#), [EC-1727](#)
Fluid temperature sensor (A/T) [AT-123](#), [AT-501](#)
Fluids [MA-13](#)
Flywheel (clutch) [CL-18](#), [CL-34](#)
Flywheel runout [EM-68](#)
Fog lamp, front [LT-23](#)
Fog lamp, front, removal and installation [EI-14](#)
Fork rod (M/T) [MT-21](#), [MT-85](#), [MT-144](#)
Forward clutch [AT-330](#)
Freeze frame data [EC-64](#), [EC-629](#), [EC-1263](#)
Front axle [FAX-5](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [EI-14](#)
Front disc brake [BR-19](#)
Front door [BL-32](#), [GW-12](#)
Front fog lamp [LT-23](#)
Front fog lamp removal and installation [EI-14](#)
Front heated oxygen sensor (HO2S) heater ... [EC-993](#)
Front passenger air bag [SRS-44](#)
Front seat [SE-3](#)
Front seat belt [SB-3](#)
Front washer [WW-3](#)
Front wiper [WW-3](#)
FTTS - Wiring diagram [EC-272](#), [EC-818](#), [EC-1445](#)
FUEL - Wiring diagram [EC-804](#), [EC-811](#), [EC-1432](#), [EC-1438](#)
Fuel cut control (at no load high engine speed) [EC-612](#), [EC-1240](#)
Fuel gauge [DI-3](#)
Fuel injection system ... [EC-645](#), [EC-802](#), [EC-809](#), [EC-1430](#), [EC-1436](#)
Fuel injection system (Bank 1) [EC-252](#), [EC-261](#)
Fuel injection system (Bank 2) [EC-252](#), [EC-261](#)
Fuel injector [EC-546](#), [EC-1169](#)
Fuel injector and fuel tube [EM-22](#), [EM-106](#)
Fuel level sensor .. [EC-405](#), [EC-410](#), [EC-412](#), [EC-522](#), [EC-957](#), [EC-962](#), [EC-964](#), [EC-1143](#), [EC-1574](#), [EC-1579](#), [EC-1581](#), [EC-1726](#)
Fuel line inspection [FL-2](#), [MA-18](#)
Fuel line inspectionQR25DE [MA-25](#)
Fuel precautions [GI-3](#), [GI-5](#)
Fuel pressure check [EC-58](#), [EC-1255](#)
Fuel pressure release [EC-58](#), [EC-623](#), [EC-1255](#)
Fuel pump [EC-554](#), [EC-1176](#), [EC-1801](#)

Fuel pump and gaugeQG18DE (Calif. CA model) [FL-7](#)
Fuel pump and gaugeQG18DE (except Calif. CA model) [FL-3](#)
Fuel tank temperature sensor [EC-270](#), [EC-816](#), [EC-1442](#), [EC-1444](#)
Fuel tank vacuum relief valve [EC-581](#), [EC-1204](#)
Fuel tankRemoval and Installtion [FL-10](#)
FUELB1 - Wiring diagram [EC-254](#), [EC-263](#)
FUELB2 - Wiring diagram [EC-255](#), [EC-264](#)
Fuse [PG-48](#)
Fuse block [PG-58](#)
Fusible link [PG-48](#)

G

Garage jack and safety stand [GI-39](#)
Gauges [DI-3](#)
Gear components (M/T) [MT-20](#), [MT-83](#), [MT-142](#)
Generator [SC-30](#)
Generator - See Alternator [SC-30](#)
Generic scan tool (GST) ... [EC-137](#), [EC-700](#), [EC-1327](#)
Ground distribution [PG-12](#)

H

H/LAMP - Wiring diagram [LT-7](#)
H/MIRROR - Wiring diagram [GW-15](#)
Harness connector [PG-49](#)
Harness connector inspection [GI-23](#)
Hazard warning lamp [LT-26](#)
Headlamp [LT-6](#)
Headlamp removal and installation [EI-14](#)
Headlining - See Roof trim [EI-33](#)
Heated oxygen sensor (HO2S) heater (front) .. [EC-993](#)
Heated oxygen sensor 1 [EC-1395](#), [EC-1401](#), [EC-1410](#), [EC-1633](#), [EC-1639](#)
Heated oxygen sensor 1 (bank 1) ... [EC-208](#), [EC-216](#), [EC-226](#), [EC-450](#), [EC-456](#)
Heated oxygen sensor 1 (bank 2) ... [EC-208](#), [EC-216](#), [EC-226](#), [EC-450](#), [EC-456](#)
Heated oxygen sensor 1 heater [EC-1354](#)
Heated oxygen sensor 1 heater (bank 1) [EC-160](#)
Heated oxygen sensor 1 heater (bank 2) [EC-160](#)
Heated oxygen sensor 2 [EC-725](#), [EC-776](#), [EC-782](#), [EC-1031](#), [EC-1038](#), [EC-1417](#), [EC-1423](#), [EC-1645](#), [EC-1652](#)
Heated oxygen sensor 2 (bank 1) ... [EC-235](#), [EC-243](#), [EC-462](#), [EC-470](#)
Heated oxygen sensor 2 (bank 2) ... [EC-235](#), [EC-243](#), [EC-462](#), [EC-470](#)
Heated oxygen sensor 2 heater [EC-1359](#)
Heated oxygen sensor 2 heater (bank 1) [EC-166](#)
Heated oxygen sensor 2 heater (bank 2) [EC-166](#)
Heated oxygen sensor 3 [EC-729](#), [EC-789](#), [EC-795](#), [EC-1046](#), [EC-1053](#)
Heated oxygen sensor 3 heater [EC-729](#)
HEATER - Wiring diagram [MTC-27](#)
Heater mirror [GW-15](#)
Heater system - Wiring diagram [MTC-27](#)

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Heater unit (heater core) [MTC-81](#)
Height (Dimensions) [GI-48](#)
HFC134a (R134a) system identification [MTC-4](#)
HFC134a (R134a) system introduction [MTC-16](#)
HFC134a (R134a) system precaution [MTC-3](#)
HFC134a (R134a) system service procedure [MTC-85](#)
HFC134a (R134a) system service tools [MTC-12](#)
HFC134a system service equipment precaution [MTC-8](#)
High clutch [AT-324](#)
HO2S1 - Wiring diagram . [EC-1397](#), [EC-1404](#), [EC-1413](#)
HO2S1H - Wiring diagram [EC-1356](#)
HO2S2 - Wiring diagram .. [EC-778](#), [EC-785](#), [EC-1034](#),
[EC-1041](#), [EC-1419](#), [EC-1425](#), [EC-1647](#), [EC-1654](#)
HO2S2H - Wiring diagram [EC-726](#), [EC-1361](#)
HO2S3 - Wiring diagram .. [EC-791](#), [EC-798](#), [EC-1049](#),
[EC-1056](#)
HO2S3H - Wiring diagram [EC-731](#)
Hood [EI-14](#)
Horn [WW-9](#)
HORN - Wiring diagram [WW-9](#)
How to erase DTC [EC-637](#), [EC-638](#)
How to erase DTC for OBD system [EC-73](#), [EC-637](#),
[EC-1271](#)

I

IACV-AAC valve [EC-420](#), [EC-971](#)
IATS - Wiring diagram [EC-182](#), [EC-750](#), [EC-1379](#)
Identification plate [GI-47](#)
Idle air volume learning [EC-1253](#)
Idle mixture ratio [EC-42](#), [EC-614](#), [EC-1243](#)
Idle speed [EC-42](#), [EC-613](#), [EC-614](#), [EC-1243](#), [EC-1289](#)
Idle speed control (ISC) ... [EC-420](#), [EC-971](#), [EC-1589](#),
[EC-1591](#)
IGN/SG - Wiring diagram [EC-313](#), [EC-858](#)
Ignition coil [EM-103](#), [EC-857](#), [EC-1772](#)
Ignition control system [EC-312](#), [EC-1772](#)
Ignition timing [EC-42](#), [EC-613](#), [EC-614](#), [EC-1243](#), [EC-1289](#)
IGNSYS - Wiring diagram [EC-1773](#)
ILL - Wiring diagram [LT-32](#)
Illumination [LT-31](#)
INJECT - Wiring diagram [EC-547](#), [EC-1170](#), [EC-1792](#)
Injector [EC-1169](#), [EC-1791](#)
Input shaft (FF M/T) ... [MT-20](#), [MT-40](#), [MT-83](#), [MT-142](#)
Instrument panel [IP-11](#)
INT/L - Wiring diagram [LT-36](#), [LT-56](#)
Intake air temperature sensor ... [EC-180](#), [EC-748](#), [EC-1377](#), [EC-1390](#)
Intake door control linkage adjustment [MTC-43](#)
Intake door motor [MTC-40](#)
Intake manifold [EM-15](#), [EM-93](#)
Intake valve timing control [EC-154](#), [EC-719](#), [EC-1351](#)
Intake valve timing control position sensor [EC-445](#),
[EC-1026](#)
Intake valve timing control solenoid valve [EC-440](#), [EC-1003](#), [EC-1610](#)
Interior [EI-29](#)
Interior lamp [LT-34](#)

IVC - Wiring diagram [EC-442](#), [EC-1611](#)
IVC/V - Wiring diagram [EC-722](#), [EC-1005](#)
IVCS - Wiring diagram [EC-156](#), [EC-446](#), [EC-1027](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-5](#)

J

Jacking points [GI-39](#)
Joint connector (J/C) [PG-52](#)
Junction box (J/B) [PG-58](#)

K

Keyless entry system - See Multi-remote control system
[BL-35](#)
Knock sensor (KS) [EC-296](#), [EC-843](#), [EC-1493](#)
KS - Wiring diagram [EC-297](#), [EC-844](#), [EC-1494](#)

L

Length (Dimensions) [GI-48](#)
License lamp [LT-19](#)
Lifting points [GI-38](#), [GI-40](#)
Line pressure solenoid valve [AT-154](#), [AT-552](#)
Line pressure test (A/T) [AT-67](#), [AT-461](#)
Liquid gasket application [EM-4](#), [EM-82](#)
LOAD - Wiring diagram ... [EC-570](#), [EC-1191](#), [EC-1192](#)
Location of electrical units [PG-45](#)
Low and reverse brake [AT-338](#)
Lubricant (R134a) A/C [MTC-18](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [MTC-18](#)
Lubrication-locks, hinges and hood latches [MA-36](#)
Luggage room lamp [LT-34](#)

M

M/T major overhaul [MT-19](#), [MT-86](#), [MT-145](#)
M/T oil replacementM/T oil replacement ... [MT-75](#), [MT-134](#)
M/T removal and installation [MT-16](#)
MAFS - Wiring diagram [EC-175](#), [EC-738](#), [EC-1367](#),
[EC-1373](#), [EC-1606](#)
Magnet clutch [MTC-72](#)
MAIN - Wiring diagram [EC-148](#), [EC-712](#), [EC-1340](#)
Main drive gear (M/T) [MT-20](#)
Mainshaft (M/T) [MT-20](#), [MT-47](#), [MT-83](#), [MT-142](#)
Maintenance [MA-5](#)
Maintenance (engine)QG18DE [MA-15](#)
Maintenance (engine)QR25DE [MA-22](#)
Malfunction indicator lamp (MIL) . [EC-75](#), [EC-577](#), [EC-639](#), [EC-1273](#), [EC-1596](#)
Manifold absolute pressure (MAP) sensor [EC-997](#)
Manual air conditioner - Wiring diagram [MTC-28](#)
Manual transaxle number [GI-48](#)
Manual transmission oil replacement [MA-29](#)
MAP - Wiring diagram [EC-999](#)
Mass air flow sensor (MAFS) [EC-172](#), [EC-734](#), [EC-](#)

ALPHABETICAL INDEX

[1364](#), [EC-1371](#), [EC-1604](#)

Master cylinder (clutch) [CL-9](#), [CL-26](#)
 Meter [DI-3](#)
 METER - Wiring diagram [DI-11](#)
 MIL - Wiring diagram [EC-1597](#)
 MIL data link connectors circuit [EC-1200](#)
 MIL/DL - Wiring diagram [EC-577](#), [EC-1200](#)
 MIRROR - Wiring diagram [GW-14](#)
 Mirror defogger [GW-15](#)
 Mirror, door [GW-14](#), [GW-16](#)
 Mirror, out side [GW-16](#)
 Misfire [EC-290](#), [EC-836](#), [EC-1488](#)
 Model variation [GI-45](#)
 Molding - See Exterior [EI-23](#)
 MULTI - Wiring diagram [BL-40](#)
 Multiport fuel injection (MFI) system .. [EC-36](#), [EC-609](#),
[EC-1237](#)
 Multiport fuel injection precautions [GI-3](#), [GI-6](#)
 Multi-remote control system [BL-35](#)

N

NATS - Wiring diagram [BL-98](#)
 NATS (Nissan anti-theft system) [BL-96](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (EM) [EM-9](#), [EM-87](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (WT) [WT-2](#)
 NVIS (Nissan vehicle immobilizer system) [BL-96](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#), [GI-5](#)

O

O2H1B1 - Wiring diagram [EC-161](#)
 O2H1B2 - Wiring diagram [EC-162](#)
 O2H2B1 - Wiring diagram [EC-167](#)
 O2H2B2 - Wiring diagram [EC-168](#)
 O2S1B1 - Wiring diagram ... [EC-210](#), [EC-219](#), [EC-229](#)
 O2S1B2 - Wiring diagram ... [EC-211](#), [EC-220](#), [EC-230](#)
 O2S2B1 - Wiring diagram .. [EC-237](#), [EC-246](#), [EC-464](#),
[EC-473](#)
 O2S2B2 - Wiring diagram .. [EC-238](#), [EC-247](#), [EC-465](#),
[EC-474](#)
 Oil change (capacity) [MA-13](#)
 Oil pan (engine) [EM-19](#), [EM-100](#)
 Oil pump (A/T) [AT-294](#)
 Oil pump (engine) [LU-8](#), [LU-19](#)
 Oil pump regulator valve (engine) [LU-10](#)
 Oil seal replacement (engine) [EM-33](#)
 On board diagnostic system [EC-1258](#)
 Operating cylinder (clutch) [CL-11](#), [CL-28](#)
 ORVR (On-board Refueling Vapor Recovery) [EC-584](#),
[EC-1207](#), [EC-1842](#)
 Overdrive control switch [AT-251](#), [AT-645](#)
 Overheat [EC-481](#), [EC-821](#), [EC-1060](#)
 Overrun clutch [AT-330](#)
 Overrun clutch solenoid valve [AT-574](#)

P

Park/Neutral position switch [EC-541](#), [EC-1165](#), [EC-1763](#)
 Park/neutral position switch (A/T) [AT-114](#), [AT-495](#)
 Park/neutral position switch (M/T) [MT-13](#)
 Park/neutral position switch (M/T)Park/neutral position
 switch (M/T) [MT-77](#), [MT-136](#)
 Parking brake control [PB-2](#)
 Parking drum brake [BR-32](#)
 Parking lamp [LT-19](#)
 PCV (positive crankcase ventilation) [EC-591](#), [EC-1217](#),
[EC-1848](#)
 Periodic maintenance [MA-7](#)
 PGC/V - Wiring diagram [EC-365](#), [EC-505](#), [EC-924](#), [EC-1123](#),
[EC-1531](#), [EC-1696](#)
 PHASE - Wiring diagram ... [EC-307](#), [EC-853](#), [EC-1505](#)
 Piston assembly [EM-68](#)
 Piston pin inspection [EM-60](#)
 Piston ring inspection [EM-61](#)
 Piston to bore clearance [EM-62](#), [EM-162](#)
 PNP/SW - Wiring diagram [EC-543](#), [EC-1167](#), [EC-1765](#)
 POS - Wiring diagram [EC-301](#), [EC-848](#), [EC-1499](#)
 POWER - Wiring diagram [PG-4](#)
 Power door lock [BL-12](#)
 Power door mirror [GW-14](#)
 Power steering fluid level [PS-8](#), [MA-34](#)
 Power steering gear [PS-15](#)
 Power steering hydraulic pressure [PS-9](#)
 Power steering oil pressure switch . [EC-560](#), [EC-1182](#),
[EC-1806](#)
 Power steering oil pump [PS-21](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-2](#)
 Power transistor [EC-857](#)
 Power window [GW-6](#)
 Power window main switch [GW-6](#)
 PRE/SE - Wiring diagram . [EC-377](#), [EC-936](#), [EC-1544](#),
[EC-1551](#)
 Precautions (General) [GI-3](#)
 Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
 Pressure test (A/T) [AT-67](#), [AT-461](#)
 PST/SW - Wiring diagram [EC-561](#), [EC-1183](#), [EC-1807](#)

R

Radiator [CO-14](#)
 Radio - See Audio [AV-2](#)
 Rear air spoiler [EI-23](#)
 Rear axle [RAX-5](#)
 Rear axle (disc brake type) [RAX-6](#)
 Rear axle (drum brake type) [RAX-6](#)
 Rear bumper [EI-19](#)
 Rear combination lamp removal and installation . [EI-23](#)
 Rear disc brake [BR-23](#)
 Rear door [BL-32](#), [GW-13](#)
 Rear drum brake [BR-32](#)
 Rear seat [SE-5](#)
 Rear seat belt [SB-5](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Rear suspension	RSU-6	Stall test (A/T)	AT-63 , AT-457
Rear window	GW-3	Standardized relay	PG-56
Rear window defogger	GW-17	START - Wiring diagram	SC-10
Refrigerant connection precaution	MTC-5	Start signal	EC-551 , EC-1173 , EC-1797
Refrigerant general precaution	MTC-4	Starter	SC-18
Refrigerant lines	MTC-85	Starting system	SC-9
Refrigerant pressure sensor ...	EC-564 , EC-1186 , EC-1811 , MTC-61	Steering gear and linkage inspection	MA-34
Refrigeration cycle	MTC-16	Steering linkage	PS-15
Release bearing (clutch)	CL-14 , CL-31	Steering wheel and column	PS-11
Remote keyless entry system	BL-35	Steering wheel play	PS-7
Removal and installation (A/T)	AT-266	Steering wheel turning force	PS-9
Reverse clutch	AT-318	Stop lamp	LT-21
Reverse idler shaft (M/T)	MT-19 , MT-83 , MT-142	Stop lamp switch	EC-1767
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-13	STOP/L - Wiring diagram	LT-21
Reverse main gear (M/T)	MT-20 , MT-83 , MT-142	Striking rod (M/T)	MT-21
Revolution sensor (A/T)	AT-508	Strut (front)	FSU-9
Road wheel size	GI-49	Strut (rear)	RSU-9
Rocker cover	EM-109	Sub-gear (M/T)	MT-20
Roof trim	EI-33	Sunroof	RF-11
Room lamp - See Interior lamp	LT-34	Supplemental restraint system - Wiring diagram	SRS-14
RP/SEN - Wiring diagram	EC-565 , EC-1187 , EC-1812	Suspension	MA-35

S

S/SIG - Wiring diagram ...	EC-552 , EC-1174 , EC-1798	Swirl control valve control solenoid valve	EC-1008 , EC-1019
SAE J1979 - Mode 1 - 7	EC-1258	Swirl control valve control position sensor ...	EC-1013 , EC-1019
Seal - See Exterior	EI-23	Swirl control valve control solenoid valve	EC-1008 , EC-1019
Seat belt inspection	SB-7 , MA-37	SWL/S - Wiring diagram	EC-1014 , EC-1022
Seat belt pre-tensioner disposal	SRS-47	SWL/V - Wiring diagram	EC-1008 , EC-1010 , EC-1019
Seat belt, front	SB-3	Symbols and abbreviations	GI-8 , GI-9 , GI-21
Seat belt, rear	SB-5	Symptom matrix chart	EC-101 , EC-666 , EC-1294
Seat, front	SE-3	Synchronizer (M/T)	MT-20 , MT-83 , MT-142
Seat, rear	SE-5	System readiness test (SRT) code ...	EC-65 , EC-630 , EC-1263
SEN/PW - Wiring diagram	EC-1691		
SHIFT - Wiring diagram	AT-254 , AT-651		
Shift control components (M/T)	MT-21 , MT-85 , MT-144		
Shift control components (M/T)Shift control components (M/T)	MT-78 , MT-137		
Shift fork (M/T)	MT-21 , MT-85 , MT-144		
Shift lever	MT-14		
Shift lock system	AT-253 , AT-650		
Shift schedule	AT-392 , AT-765		
Shift solenoid valve A (A/T) ..	AT-136 , AT-146 , AT-558		
Shift solenoid valve B (A/T)	AT-136 , AT-563		
Shock absorber (front)	FSU-10		
Shock absorber (rear)	RSU-11		
Side trim	EI-29		
Smart entrance control unit	BCS-3		
Spare tire size	GI-49		
Spark plug replacementQG18DE	MA-20		
Spark plug replacementQR25DE	MA-27		
Specification value	EC-1335		
Speedometer	DI-3		
SROOF - Wiring diagram	RF-12		
SRS - Wiring diagram	SRS-14		
SRS Trouble diagnoses	SRS-8		
Stabilizer bar (front)	FSU-12		

T

Tachometer	DI-3
Tail lamp	LT-19
TAIL/L - Wiring diagram	LT-19
TCM circuit diagram	AT-18 , AT-413
TCM inspection table	AT-107 , AT-489
Temperature control cable and linkage adjustment	MTC-47
Theft warning system	BL-65
Thermal protector	MTC-79
Thermostat	CO-12 , CO-30
Three way catalyst function	EC-893 , EC-1510
Three way catalyst function (Bank 1)	EC-341
Three way catalyst function (Bank 2)	EC-341
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor	EC-1628
Throttle control motor relay	EC-1623
Throttle position sensor (TPS) ..	EC-191 , EC-759 , EC-1462 , EC-1469 , EC-1674 , EC-1680 , EC-1682
Throttle position sensor adjustment ...	EC-87 , EC-652
Throttle position switch	AT-191 , AT-252 , AT-645
Throttle valve closed position learning	EC-1253
Throwout bearing - See Clutch release bearing	CL-14 ,

ALPHABETICAL INDEX

CL-31	Vent mode switch MTC-22	A
Tie-rod PS-19	VENT/V - Wiring diagram ... EC-370 , EC-511 , EC-518 , EC-929 , EC-1131 , EC-1138 , EC-1537 , EC-1704 , EC-1712	B
Tie-rod ball joints PS-19	VIAS - Wiring diagram EC-1785	C
Tightening torque of standard bolts GI-43	Viscosity number (SAE) MA-14	D
Time control system BCS-10	VSS - Wiring diagram EC-417 , EC-969	E
Timing chain EM-24 , EM-121	W	F
Tire rotation MA-31	WARN - Wiring diagram DI-26	G
Tire size GI-49	Warning chime DI-34	H
TLID - Wiring diagram BL-34	Warning lamps DI-24	I
Top tether strap child restraint SB-10	Washer, front WW-3	J
Torque converter installation AT-267 , AT-664 , AT-758	Water pump CO-10	K
Torque convertor clutch solenoid valve AT-539	Water temperature gauge DI-3	L
Tow truck towing GI-41	Weatherstrip - See Exterior EI-23	A
Towing point GI-42	Wheel alignment (front) FSU-6	B
TP/SW - Wiring diagram EC-430 , EC-982	Wheel alignment (rear) RSU-7	C
TPS - Wiring diagram EC-195 , EC-763	Wheel balance MA-31	D
TPS1 - Wiring diagram EC-1471	Wheel bearing (front axle) FAX-10	E
TPS2 - Wiring diagram EC-1676	Wheel bearing (front) FAX-5	F
TPS3 - Wiring diagram EC-1464	Wheel bearing (rear) RAX-5	G
Transmission case (M/T) MT-19 , MT-82 , MT-141	Wheel hub (front) FAX-6 , FAX-9	H
Tread-FR0R (Dimensions) GI-48	Wheel hub (rear) RAX-6	I
Trim EI-29	Wheel sensors (ABS) BRC-44	J
Trouble diagnoses GI-9 , GI-23	Wheel size GI-49	K
Trunk lid EI-19	Wheelbase (Dimensions) GI-48	L
Trunk lid finisher EI-34	Width (Dimensions) GI-48	A
Trunk lid opener - See Trunk lid EI-19	WINDOW - Wiring diagram GW-8	B
Trunk lid opener, electric BL-34	Window, back door GW-11	C
Trunk lid trim EI-34	Window, door GW-5 , GW-11	D
Trunk room lamp LT-34	Window, rear GW-3	E
Trunk room trim EI-34	Windshield GW-3	F
TURN - Wiring diagram LT-28	Windshield washer - See Front washer WW-3	G
Turn signal lamp LT-26	Windshield wiper - See Front wiper WW-3	H
Two trip detection logic EC-60 , EC-625 , EC-1258	WIPER - Wiring diagram WW-5	I
Two-pole lift GI-40	Wiper and washer WW-3	J
U	Wiper, front WW-3	K
Under body BL-121	Wiring Diagram - VEHSEC - BL-72	L
V	Wiring Diagram (Cell code) list PG-41	A
Vacuum cut valve EC-1839	Wiring diagrams GI-8 , GI-13	B
Vacuum cut valve bypass valve EC-526 , EC-531 , EC-1147 , EC-1152 , EC-1729 , EC-1736 , EC-1839	Withdrawal lever (clutch) CL-14 , CL-31	C
Vacuum hose (brake system) BR-18	Wrist pin - See Piston pin inspection EM-60	D
Vacuum hose drawing (Engine control) EC-34 , EC-1235		E
Valve clearance EM-50 , EM-118		F
Valve guide EM-42 , EM-134		G
Valve lifter EM-46		H
Valve seat EM-44 , EM-135		I
Valve spring EM-45 , EM-137		J
Variable induction air control system (VIAS) . EC-1783		K
Vehicle identification number GI-46		L
Vehicle recovery (freeing a stuck vehicle) GI-42		A
VEHICLE SECURITY (THEFT WARNING) SYSTEM .. BL-65		B
Vehicle speed sensor (VSS) EC-416 , EC-968 , EC-1585		C