

SECTION **PB**
PARKING BRAKE SYSTEM

A
B
C
D
E
PB
G
H
I
J
K
L
M

CONTENTS

PARKING BRAKE CONTROL	2	Inspection	2
Components	2	Adjustment	3
Removal and Installation	2	SERVICE DATA AND SPECIFICATIONS (SDS)	4
		Parking Brake	4


PARKING BRAKE CONTROL

Adjustment

EFS001EL

Pay attention to the following points after adjustment.

- There is no drag when control lever is being released.
 - Be sure that toggle lever returns to stopper when parking brake lever is released.
1. Loosen parking brake cable.
 2. Depress brake pedal fully more than five times.
 3. Operate control lever 10 times or more with a full stroke [215.2 mm (8.47 in)].
 4. Adjust control lever by turning adjusting nut.
 5. Pull control lever with specified amount of force. Check lever stroke and ensure smooth operation.

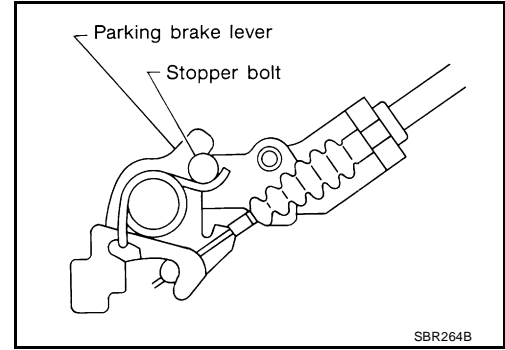

Number of notches : 6 - 7 [196 N (20 kg, 44 lb)]

6. Bend warning lamp switch plate. Warning lamp should come on when lever is pulled or depressed one notch. It should go off when the lever is fully released.

A
B
C
D
E
G
H
I
J
K
L
M

PB

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PF0:00030

Parking Brake

EFS001EM

Type	Lever
Number of notches [under force of 196 N (20 kg, 44 lb)]	6 - 7
Number of notches when warning lamp comes on	1