

SECTION **IDX**



# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram..... EC-291  
 ABS - Wiring diagram ..... BR-40, BR-65  
 ABS (anti-lock brake system)..... BR-31  
 Absolute pressure sensor ..... EC-108  
 A/C - Wiring diagram ..... HA-20  
 A/C air flow..... HA-15  
 A/C component layout..... HA-14  
 A/C compressor clutch removal and installation..... HA-56  
 A/C compressor description..... HA-6  
 A/C compressor mounting..... HA-55  
 A/C compressor precaution..... HA-6  
 A/C compressor special service tool..... HA-7  
 A/C control operation (manual A/C)..... HA-13  
 A/C diagnostic work flow (manual A/C) ..... HA-24  
 A/C harness layout (manual A/C) ..... HA-16  
 A/C HFC134a (R134a) system introduction ..... HA-12  
 A/C HFC134a (R134a) system precaution ..... HA-2  
 A/C HFC134a (R134a) system service  
   procedure..... HA-48, HA-51  
 A/C HFC134a (R134a) system service tools..... HA-8  
 A/C HFC134a system service equipment  
   precaution ..... HA-8  
 A/C lubricant (R134a)..... HA-53  
 A/C operational check..... HA-22  
 A/C performance chart..... HA-40  
 A/C performance test diagnoses..... HA-38  
 A/C pressure switch ..... HA-12  
 A/C relay..... HA-36  
 A/C trouble diagnoses (manual A/C) ..... HA-24  
 Accelerator control system..... FE-3  
 Accelerator wire adjustment..... FE-3  
 Air bag..... RS-9  
 Air bag disposal..... RS-23  
 Air bag precautions ..... GI-2  
 Air bleeding for brake system ..... BR-6  
 Air bleeding (hydraulic clutch)..... CL-7  
 Air cleaner filter replacement ..... MA-12  
 Air conditioner cut control ..... EC-18  
 Air conditioning - See A/C..... HA-12  
 Air flow meter - See Mass air flow sensor..... EC-99  
 Alternator..... EL-28  
 Angular tightening application..... EM-2  
 Antenna ..... EL-119  
 Anti-lock brake system - See ABS..... BR-31  
 Anti-lock brake system - Wiring diagram ..... BR-40  
 AP/SEN - Wiring diagram ..... EC-108  
 ASCD - Wiring diagram..... EL-126  
 ASCD (automatic speed control device)..... EL-121  
 A/T - Wiring diagram ..... AT-7  
 A/T IND - Wiring diagram..... EL-91  
 AT indicator lamp ..... EL-91  
 A/T removal and installation..... AT-48  
 A/T shift lock system..... AT-39

A/T shift lock system - Wiring diagram..... AT-40  
 A/T trouble diagnoses ..... AT-23  
 Audio ..... EL-114  
 AUDIO - Wiring diagram ..... EL-115  
 Audio and A/C control removal and installation -  
   See Instrument panel ..... BT-11  
 Auto lock free running hub..... FA-17  
 Automatic speed control system - See ASCD..... EL-121  
 Automatic transmission fluid replacement ..... MA-17  
 Automatic transmission number..... GI-38  
 Auxiliary air control (AAC)..... EC-291  
 Axle housing (rear)..... RA-7

## B

Back window ..... BT-22, BT-33  
 BACK/L - Wiring diagram..... EL-53  
 Back-up lamp ..... EL-53  
 Back-up lamp switch (M/T) ..... MT-7  
 Ball joint front axle..... FA-35  
 Battery ..... EL-17  
 Balk ring (M/T)..... MT-12  
 Blower motor ..... HA-28  
 Blower relay..... HA-16  
 Blower resistor..... HA-28  
 Body alignment..... BT-37  
 Body mounting ..... BT-36  
 Boring/honing cylinder block ..... EM-44  
 BPT valve ..... EC-254  
 Brake booster ..... BR-17  
 Brake control valve (Proportioning valve)..... BR-11  
 Brake fluid change ..... BR-5  
 Brake fluid level..... MA-20  
 Brake fluid level and line check ..... BR-5  
 Brake hydraulic line..... BR-7  
 Brake inspection..... MA-20  
 Brake lines and cables inspection ..... MA-20  
 Brake master cylinder ..... BR-14  
 Brake pedal ..... BR-12  
 Bulb specifications..... EL-222  
 Bumper, front..... BT-5  
 Bumper, rear..... BT-8  
 BYPS/V - Wiring diagram..... EC-378

## C

Cab body..... BT-36  
 Camshaft inspection..... EM-30  
 Camshaft position sensor (CMPS)..... EC-236  
 Camshaft position sensor (PHASE)..... EC-236  
 Canister - See EVAP canister ..... EC-20  
 Center bearing assembly (propeller shaft)..... PD-11  
 Center bearing disassembly (propeller shaft)..... PD-10  
 CHARGE - Wiring diagram ..... EL-29

# ALPHABETICAL INDEX

Charging system .....	EL-28
Chassis and body maintenance .....	MA-16
CHIME - Wiring diagram .....	EL-95
CIGAR - Wiring diagram .....	EL-113
Cigarette lighter .....	EL-113
Circuit breaker .....	EL-13
CKPS - Wiring diagram .....	EC-231, EC-322
Closed loop control .....	EC-313
Closed throttle position switch .....	EC-297
Clutch cover .....	CL-13
Clutch disc .....	CL-12
Clutch fluid level .....	MA-16
Clutch master cylinder .....	CL-8
Clutch operating cylinder .....	CL-9
Clutch pedal .....	CL-5
Clutch release bearing .....	CL-10
Clutch withdrawal lever .....	CL-10
CMPS - Wiring diagram .....	EC-236
Collision diagnosis .....	RS-51
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-22
Combination meter .....	EL-69
Combination meter removal and installation - See Instrument panel .....	BT-11
Combination switch .....	EL-33
Compression pressure .....	EM-13
Compressor clutch removal and installation .....	HA-56
Compressor description .....	HA-6
Compressor mounting .....	HA-55
Compressor precaution .....	HA-6
Compressor special service tool .....	HA-7
Connecting rod .....	EM-43
Connecting rod bearing clearance .....	EM-47
Connecting rod bushing clearance .....	EM-48
Connector inspection .....	GI-17
Console box - See Instrument panel .....	BT-12
CONSULT for ABS .....	BR-71
CONSULT for ECCS .....	EC-54
CONSULT general information .....	GI-33
Control lever (M/T) .....	MT-14
Control lever transfer .....	TF-8
Control valve (A/T) .....	AT-70
Converter housing installation .....	AT-50
Coolant mixture ratio .....	MA-9
Coolant replacement .....	MA-11
Cooling circuit (engine) .....	LC-7
Cooling fan .....	LC-12
Counter gear (M/T) .....	MT-12
Counter gear transfer .....	TF-10
Coupling sleeve (M/T) .....	MT-12
Crank angle sensor built into distributor - See Camshaft position sensor .....	EC-236
Crankcase emission control system - See positive crankcase ventilation .....	EC-25

Crankcase ventilation system - See positive crankcase ventilation .....	EC-25
Crankshaft .....	EM-45
Crankshaft position sensor (OBD) .....	EC-231, EC-322
Crankshaft position sensor (OBD) cog chipping... ..	EC-231
Crankshaft position sensor (POS) .....	EC-231
Crankshaft position sensor (POS) chipping .....	EC-231
Crankshaft position sensor (REF) .....	EC-231
Crash zone sensor .....	RS-14
Cruise control - See ASCD .....	EL-121
Cylinder block .....	EM-41
Cylinder block boring .....	EM-44
Cylinder head .....	EM-28
Cylinder head bolt tightening .....	EM-23

## D

Data link connector for Consult .....	EC-54, EC-422
Daytime light system .....	EL-41
Daytime running light - See Daytime light system .....	EL-41
Detonation sensor - See Knock sensor .....	EC-227
Diagnosis sensor unit .....	RS-14
Diagnostic trouble code (DTC) chart .....	EC-75
Differential carrier assembly .....	PD-29, PD-46, PD-64
Differential carrier disassembly .....	PD-35, PD-53
Differential gear oil replacement .....	MA-19
Dimensions .....	GI-39
Distributor .....	EC-17
Distributor ignition (DI) system .....	EC-17
D/LOCK - Wiring diagram .....	EL-151
Dome light - See Interior lamp .....	EL-61
Door, front .....	BT-10
Door glass .....	BT-10
Door glass fitting adjustment .....	BT-10
Door lock .....	BT-10
Door mirror .....	BT-35
Door trim .....	BT-17
Drive belt inspection .....	MA-10
Drive pinion diff. inspection .....	PD-39, PD-57
Drive pinion height .....	PD-41, PD-59
Drive plate runout .....	EM-48
Drive shaft (front) .....	FA-22
Drive shaft (rear) .....	RA-7
DTRL - Wiring diagram .....	EL-44
Dual pressure switch .....	HA-36

## E

ECCS basic inspection .....	EC-71
ECCS circuit diagram .....	EC-9
ECCS component parts location .....	EC-10
ECCS fail-safe system .....	EC-76
ECCS on board diagnostic system .....	EC-35

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# ALPHABETICAL INDEX

ECCS relay.....	EC-94	Final drive disassembly.....	PD-35, PD-53
ECCS symptom matrix chart.....	EC-77	Final drive pre-inspection.....	PD-35, PD-53
ECCS system diagram and chart.....	EC-12	Final drive removal and installation.....	PD-15
ECM input/output signal.....	EC-84	Floor trim.....	BT-14
ECTS - Wiring diagram.....	EC-121, EC-139	Flow charts.....	GI-30
EGR control (EGRC) - BPT valve.....	EC-250	Fluids.....	MA-8
EGR control (EGRC) - solenoid valve.....	EC-327	Flywheel (clutch).....	CL-13
EGR control valve.....	EC-248, EC-254, EC-343	Flywheel runout.....	EM-48
EGR temperature sensor.....	EC-332	Fork rod (M/T).....	MT-14
EGRC1 - Wiring diagram.....	EC-242, EC-338	Forward clutch.....	AT-88
EGRC/V - Wiring diagram.....	EC-327	F/PUMP - Wiring diagram.....	EC-410
EGR/TS - Wiring diagram.....	EC-332	Freeze frame data.....	EC-35
Electrical diagnoses.....	GI-20	FRO2 - Wiring diagram.....	EC-144
Electrical unit.....	EL-202	FRO2/H - Wiring diagram.....	EC-175
Electrical units location.....	EL-202	Front axle.....	FA-14
Electronic ignition (EI) system.....	EC-17	Front bumper.....	BT-5
Electronic ignition system.....	EC-17	Front combination lamp removal and installation.....	BT-5
Engine compartment.....	BT-38	Front disc brake.....	BR-20
Engine control module (ECM).....	EC-302	Front door.....	BT-10
Engine coolant temperature sensor (ECTS).....	EC-121, EC-139	Front drive shaft transfer.....	TF-10
Engine oil filter replacement.....	MA-13	Front final drive disassembly (4WD).....	PD-17
Engine oil precautions.....	GI-5	Front final drive pre-inspection (4WD).....	PD-17
Engine oil replacement.....	MA-13	Front final drive removal and installation (4WD)....	PD-14
Engine outer component parts.....	EM-10	Front heated oxygen sensor (HO2S).....	EC-144
Engine removal.....	EM-38	Front heated oxygen sensor (HO2S) heater.....	EC-175
Engine room - See Engine compartment.....	BT-38	Front heated oxygen sensor (HO2S) monitor.....	EC-162
Engine serial number.....	GI-38	Front oxygen sensor (O2S) monitor.....	EC-46
EVAP canister.....	EC-20	Front seat.....	BT-26
EVAP canister purge control solenoid valve.....	EC-270, EC-355	Front seat belt.....	RS-4
EVAP canister purge volume control solenoid valve.....	EC-355	Front suspension.....	FA-27
EVAP canister purge volume control valve.....	EC-270	Fuel cut control (at no load & high engine speed).....	EC-19
EVAP canister vent control valve.....	EC-276	Fuel damper.....	EC-410
EVAP control system pressure sensor.....	EC-281	Fuel filter replacement.....	MA-12
EVAP control system purge flow monitoring diagnosis.....	EC-367	Fuel injection system.....	EC-15
EVAP control system (small leak) diagnosis.....	EC-22, EC-260	Fuel injector.....	EC-27, EC-404
EVAP system close mode.....	EC-22, EC-56	Fuel line inspection.....	MA-12
EVAP vapor lines inspection.....	MA-15	Fuel precautions.....	GI-6
Evaporative emission (EVAP) system.....	EC-20	Fuel pressure check.....	EC-26
Exhaust gas recirculation (EGR) valve... ..	EC-242, EC-338	Fuel pressure regulator.....	EC-26
Exhaust system.....	FE-8	Fuel pressure release.....	EC-26
Exhaust system inspection.....	MA-16	Fuel pump.....	EC-410
Extension tube diff.....	PD-20	Fuel pump and gauge.....	FE-7
Exterior.....	BT-22	Fuel pump relay.....	EC-410
		Fuel system.....	FE-4
		Fuel tank vacuum relief valve.....	EC-21
		Fuel temperature sensor.....	EC-218
		Fuse.....	EL-13
		Fusible link.....	EL-13

## F

Fan switch.....	HA-28
Fast idle cam (FIC).....	EC-28
Fast idle cam (FIC) inspection and adjustment.....	EC-28
FICD - Wiring diagram.....	EC-418

## G

Garage jack and safety stand.....	GI-41
Gauges.....	EL-69

# ALPHABETICAL INDEX

Gear components (M/T).....	MT-12
Generator.....	EL-28
Generic scan tool (GST).....	EC-65
Glass.....	BT-10
Governor valve assembly.....	AT-81
Grease.....	MA-8
Grille - See Exterior.....	BT-5
Ground clearance.....	GI-39
Ground distribution.....	EL-14

## H

Harness connector.....	EL-3
Harness connector inspection.....	GI-17
Harness layout.....	EL-205
Hazard warning lamp.....	EL-54
Headlamp.....	EL-36
Headlamp aiming control.....	EL-39
Headlamp leveler - See Headlamp aiming control.....	EL-39
Headlining - See Roof trim.....	BT-20
Heated oxygen sensor heater.....	EC-154, EC-160, EC-168, EC-175
Heated oxygen sensor (HO2S) (front).....	EC-144
Heated oxygen sensor (HO2S) heater (front).....	EC-144, EC-175
Heated oxygen sensor (HO2S) heater (rear).....	EC-204
Heated oxygen sensor monitor (HO2S) (front).....	EC-162
Heated oxygen sensor (rear).....	EC-179
HEATER - Wiring diagram.....	HA-19
Height (Dimensions).....	GI-39
HFC134a (R134a) system introduction.....	HA-12
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-48, HA-51
HFC134a (R134a) system service tools.....	HA-8
HFC134a system service equipment precaution.....	HA-8
High clutch.....	AT-86
H/LAMP - Wiring diagram.....	EL-37
Hood.....	BT-5
Horn.....	EL-112
HORN - Wiring diagram.....	EL-112

## I

IACV-AAC valve inspection.....	EC-291
IACV-FICD solenoid valve.....	EC-418
IATS - Wiring diagram.....	EC-115
Identification plate.....	GI-37
Idle air control valve (IACV).....	EC-291
Idle mixture ratio.....	EC-29
Idle speed.....	EC-29

Ignition coil.....	EC-315	GI
Ignition timing.....	EC-29	
Ignition wire inspection.....	EC-226	
IGN/SG - Wiring diagram.....	EC-315	MA
ILL - Wiring diagram.....	EL-60	
Illumination.....	EL-59	EM
Inhibitor switch.....	AT-37, EC-388	
INJECT - Wiring diagram.....	EC-404	
Injector.....	EC-406	LC
Injector removal and installation.....	EC-27	
Instrument panel.....	BT-11	
Intake air temperature sensor.....	EC-115	EC
Intake manifold.....	EM-10	
Interior.....	BT-14	
Interior lamp.....	EL-61	FE
Interior lamp on-off control.....	EL-62	
INT/L - Wiring diagram.....	EL-68	GL

## J

Jacking points.....	GI-40	MT
Journal bearing assembly (propeller shaft).....	PD-12	AT
Journal bearing disassembly (propeller shaft).....	PD-11	
Jump seat.....	BT-29	TF

## K

Keyless entry system - See Multi-remote control system.....	EL-162	PD
Knock sensor (KS).....	EC-227	FA
Knuckle spindle.....	FA-19	
KS - Wiring diagram.....	EC-227	RA

## L

Leaf spring (rear).....	RA-15	BR
Length (Dimensions).....	GI-39	ST
License lamp.....	EL-51	
Lifting points.....	GI-40	RS
Line pressure test (A/T).....	AT-26	
Liquid gasket application.....	EM-2	
LKUP - Wiring diagram.....	EC-393	BT
Location of electrical units.....	EL-202	
Lock, door.....	BT-10	
Low and reverse brake.....	AT-92	HA
LSV (Load sensing valve).....	BR-9	
Lubricant (R134a) A/C.....	HA-53	
Lubricants.....	MA-8	EL
Lubrication circuit (engine).....	LC-4	
Lubrication-locks, hinges and hood latches.....	MA-22	
Luggage room lamp.....	EL-68	IDX

# ALPHABETICAL INDEX

## M

MAFS - Wiring diagram.....	EC-99
Magnet clutch.....	HA-56
MAIN - Wiring diagram.....	EC-94
Main drive gear (M/T).....	MT-12
Main gear transfer.....	TF-10
Mainshaft (M/T).....	MT-12
Mainshaft transfer.....	TF-10
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
Major overhaul.....	AT-51
Malfunction indicator lamp (MIL).....	EC-46
Manual lock free running hub.....	FA-16
Manual steering gear.....	ST-15
Manual transmission number.....	GI-38
Manual transmission oil replacement.....	MA-16
MAP/BARO switch solenoid valve.....	EC-304
Mass air flow sensor (MAFS).....	EC-99
Master cylinder (brake).....	BR-14
Master cylinder (clutch).....	CL-8
Meter.....	EL-69
METER - Wiring diagram.....	EL-74
MIL & Data link connectors circuit.....	EC-422
MIL/DL - Wiring diagram.....	EC-422
MIRROR - Wiring diagram.....	EL-120
Mirror, door.....	BT-35
Mirror, out side.....	BT-35
Misfire.....	EC-222
Model variation.....	GI-35
Molding - See Exterior.....	BT-22
M/T major overhaul.....	MT-11
M/T removal and installation.....	MT-8
Mud guard - See Exterior.....	BT-25
MULTI - Wiring diagram.....	EL-166
Multiport fuel injection (MFI) system.....	EC-15
Multiport fuel injection precautions.....	GI-5
Multiport fuel injection system inspection.....	EC-15
Multi-remote control system.....	EL-162

## N

Neutral position switch.....	EC-388
Neutral position switch (M/T).....	MT-7
NVH troubleshooting (BR).....	BR-4
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-8
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (PD).....	PD-6
NVH troubleshooting (RA).....	RA-4
NVH troubleshooting (ST).....	ST-5

## O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-6
Oil pan (engine).....	EM-14
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-6
Oil pump (A/T).....	AT-66
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-25
Oil seal replacement (front final drive 4WD).....	PD-13
Operating cylinder (clutch).....	CL-9
Out side mirror.....	BT-35
Overdrive control switch.....	AT-36
Overrun clutch.....	AT-88
Oversize piston.....	EM-44

## P

Pantograph jack.....	GI-40
Parking brake control.....	BR-29
Parking lamp.....	EL-50
Park/Neutral position switch.....	EC-388
PCV filter replacement.....	MA-15
PCV (positive crankcase ventilation).....	EC-25
PCV system inspection.....	MA-15
PGC/V - Wiring diagram.....	EC-270, EC-355
Pilot bushing replacement.....	EM-50
Pinion bearing preload diff.....	PD-24
Pinion gear height diff.....	PD-24, PD-41, PD-59
Piston assembly.....	EM-48
Piston pin inspection.....	EM-42
Piston ring inspection.....	EM-43
Piston to bore clearance.....	EM-44
PNP/SW - Wiring diagram.....	EC-388
POWER - Wiring diagram.....	EL-8
Power door lock.....	EL-147
Power door mirror.....	EL-120
Power steering fluid level.....	ST-6, MA-21
Power steering gear.....	ST-21, ST-29
Power steering hydraulic pressure.....	ST-10
Power steering oil pressure switch.....	EC-415
Power steering oil pump.....	ST-36
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-6
Power transistor.....	EC-315
Power transistor & ignition coil.....	EC-315
Power window.....	EL-142
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-281
Pressure plate - See Clutch cover.....	CL-13
Pressure test (A/T).....	AT-26
Propeller shaft.....	PD-7
Propeller shaft inspection.....	MA-18

# ALPHABETICAL INDEX

Propeller shaft on vehicle service..... PD-9  
 Propeller shaft vibration ..... PD-9  
 PST/SW - Wiring diagram..... EC-415

## R

R134a - See HFC134a ..... HA-2  
 Radiator ..... LC-11  
 Radiator fan - See Cooling fan ..... LC-12  
 Radio - See Audio ..... EL-114  
 Rear axle ..... RA-7  
 Rear axle (drum brake type) ..... RA-8  
 Rear body ..... BT-36  
 Rear bumper ..... BT-8  
 Rear combination lamp removal and installation..... BT-22  
 Rear cover packing replacement diff. .... PD-13  
 Rear drum brake ..... BR-25  
 Rear heated oxygen sensor (HO2S) ..... EC-179  
 Rear heated oxygen sensor (HO2S) heater ..... EC-204  
 Rear seat ..... BT-29  
 Rear seat belt ..... RS-5  
 Rear side window ..... BT-32  
 Rear suspension ..... RA-14  
 Rear wheel anti-lock brake system (R-ABS) ..... BR-31  
 Rear window ..... BT-33  
 Refrigerant connection precaution ..... HA-3  
 Refrigerant discharging evacuating charging..... HA-51  
 Refrigerant general precaution..... HA-3  
 Refrigerant lines ..... HA-47  
 Refrigeration cycle..... HA-12  
 Release bearing (clutch) ..... CL-10  
 Resistor ..... EC-321  
 Reverse clutch..... AT-82  
 Reverse idler shaft (M/T) ..... MT-12  
 Reverse lamp switch (M/T) - See Back-up lamp  
     switch (M/T) ..... MT-7  
 Reverse main gear (M/T) ..... MT-12  
 Ring gear diff. inspection ..... PD-39, PD-57  
 Road wheel size ..... GI-39  
 Roof trim ..... BT-20  
 Room lamp ..... EL-61  
 Room lamp - See Interior lamp ..... EL-61  
 ROOM/L - Wiring diagram ..... EL-64  
 Rotor disc (front) ..... FA-17

## S

SAE J1930 terminology list ..... GI-47  
 SAE J1979 - Mode 1 ~ 7 ..... EC-35  
 Seal - See Exterior ..... BT-22  
 Seat belt, front ..... RS-4  
 Seat belt inspection ..... MA-23  
 Seat belt, rear ..... RS-5  
 Seat, front ..... BT-26

Seat, rear ..... BT-29  
 Self-diagnostic results ..... EC-46  
 SHIFT - Wiring diagram ..... AT-40  
 Shift control components (M/T) ..... MT-14  
 Shift control (TF) ..... TF-11  
 Shift fork (M/T) ..... MT-14  
 Shift lever ..... MT-14  
 Shift lock system ..... AT-39  
 Shift schedule ..... AT-122  
 Shock absorber (front) ..... FA-29  
 Shock absorber (rear) ..... RA-15  
 Side bearing preload diff. .... PD-40, PD-58  
 Side bearing preload (front final drive 4WD) ..... PD-23  
 Side shaft diff. .... PD-20  
 Side trim ..... BT-14  
 Smart entrance control unit ..... EL-162, EL-197  
 Spare tire size ..... GI-39  
 Spark plug replacement ..... MA-14  
 Spiral cable ..... RS-15  
 Spot lamp ..... EL-68  
 SRS - See Supplemental Restraint System ..... RS-9  
 SRS - Wiring diagram ..... RS-32  
 SRS Trouble diagnoses ..... RS-27  
 S/SIG - Wiring diagram ..... EC-407  
 Stabilizer bar (front) ..... FA-31  
 Stall test (A/T) ..... AT-23  
 Standardized relay ..... EL-4  
 START - Wiring diagram ..... EL-23  
 Start signal ..... EC-407  
 Starter ..... EL-21  
 Starting system ..... EL-21  
 Steering gear and linkage inspection ..... MA-21  
 Steering gear oil level ..... MA-21  
 Steering knuckle ..... FA-19  
 Steering linkage ..... ST-39  
 Steering switch ..... EL-35  
 Steering wheel and column ..... ST-11  
 Steering wheel play ..... ST-8  
 Steering wheel turning force ..... ST-8  
 Stop lamp ..... EL-52  
 STOP/L - Wiring diagram ..... EL-52  
 Striking rod (M/T) ..... MT-14  
 Sunroof ..... BT-30  
 Supplement restraint system - Wiring diagram ..... RS-32  
 Supplemental Restraint System ..... RS-9  
 SW/V - Wiring diagram ..... EC-304  
 Symbols and abbreviations ..... GI-8  
 Synchronizer (M/T) ..... MT-12  
 System readiness test (SRT) code ..... EC-35

## T

Tail lamp ..... EL-50  
 TAIL/L - Wiring diagram ..... EL-50  
 Tank fuel temperature sensor ..... EC-218

# ALPHABETICAL INDEX

Tension rod (front).....	FA-33
TFTS - Wiring diagram.....	EC-218
THEFT - Wiring diagram.....	EL-183
Theft warning system.....	EL-177
Thermal protector.....	HA-36
Thermo control amp.....	HA-36
Thermostat.....	LC-9
Three way catalyst.....	EC-255
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-10
Throttle chambers.....	EM-10
Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-71
Throttle position sensor (TPS).....	EC-126
Throttle position switch.....	EC-297
Throwout bearing - See Clutch release bearing.....	CL-10
Thrust washer selection diff. ....	PD-71, PD-72, PD-73
Tie-rod.....	ST-39
Tie-rod ball joints.....	ST-39
Tightening torque of standard bolts.....	GI-46
Timing chain.....	EM-16
Tire rotation.....	MA-19
Tire size.....	GI-39
Tooth contact diff. ....	PD-45, PD-63
Tooth contact (front final drive 4WD).....	PD-28
Torque converter clutch solenoid valve.....	AT-34
Torque converter installation.....	AT-50
Torque convertor clutch solenoid valve... EC-393, EC-397	
Torsion bar spring.....	FA-29
Towing point.....	GI-45
TPS - Wiring diagram.....	EC-126
TP/SW - Wiring diagram.....	EC-297
Transfer case.....	TF-9
Transfer fluid replacement.....	MA-18
Transfer oil replacement.....	MA-18
Transfer overhaul.....	TF-9
Transfer removal and installation.....	TF-7
Transfer serial number.....	GI-38
Transmission case (M/T).....	MT-11
Tread-FR&RR (Dimensions).....	GI-39
Trim.....	BT-14
Trouble diagnoses.....	GI-20
Trunk room lamp.....	EL-68
TURN - Wiring diagram.....	EL-56
Turn signal lamp.....	EL-54
Two trip detection logic.....	EC-35
Two-pole lift.....	GI-42

## U

Under body.....	BT-40
Upper link (front susp.).....	FA-32

## V

Vacuum cut valve.....	EC-387
Vacuum cut valve bypass valve.....	EC-383
Vacuum hose (brake system).....	BR-19
Vacuum hose drawing (ECCS).....	EC-13
Valve clearance.....	EM-35
Valve guide.....	EM-31
Valve seat.....	EM-33
Valve spring.....	EM-34
Vehicle identification number.....	GI-37
Vehicle speed sensor (VSS).....	EC-287
Vent mode switch.....	HA-13
VENT/V - Wiring diagram.....	EC-276
Viscosity number (SAE).....	MA-9
VSS - Wiring diagram.....	EC-287

## W

WARN - Wiring diagram.....	EL-87
Warning chime.....	EL-92
Warning lamps.....	EL-84
Washer, front.....	EL-104
Water pump.....	LC-8
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (front).....	FA-9
Wheel balance.....	MA-19
Wheel bearing (front axle).....	FA-7
Wheel bearing (rear).....	RA-6
Wheel hub (front).....	FA-17
Wheel sensors (ABS).....	BR-32, BR-57
Wheel sensors (TCS).....	BR-57
Wheel size.....	GI-39
Wheelbase (Dimensions).....	GI-39
Wide open & closed throttle position (CTP) switch.....	EC-297
Width (Dimensions).....	GI-39
WINDOW - Wiring diagram.....	EL-144
Window, back.....	BT-22, BT-33
Window, door.....	BT-10
Window, rear.....	BT-33
Windshield.....	BT-31
WIPER - Wiring diagram.....	EL-106
Wiper and washer.....	EL-104
Wiper, front.....	EL-104
Wiring diagram (cell code) list.....	EL-223
Wiring diagrams.....	GI-9
Withdrawal lever (clutch).....	CL-10
Wrist pin - See Piston pin inspection.....	EM-42