

# ALPHABETICAL INDEX

## SECTION **IDX**

**A   B   C   D   E   F   G   H   I   J   K   L   M**

**N   O   P   Q   R   S   T   U   V   W   X   Y   Z**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

---

## A

AAC/V - Wiring diagram.....	EC-308
ABS - Wiring diagram .....	BR-40, BR-65
ABS (anti-lock brake system).....	BR-31
Absolute pressure sensor .....	EC-113
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component layout.....	HA-15
A/C compressor clutch removal and installation....	HA-59
A/C compressor description.....	HA-7
A/C compressor mounting.....	HA-58
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-10
A/C control operation (manual A/C) .....	HA-14
A/C diagnostic work flow (manual A/C) .....	HA-25
A/C HFC134a (R134a) system introduction .....	HA-13
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-51, HA-54
A/C HFC134a (R134a) system service tools.....	HA-8
A/C HFC134a system service equipment precaution .....	HA-8
A/C lubricant (R134a).....	HA-56
A/C operational check.....	HA-23
A/C performance chart.....	HA-43
A/C performance test diagnoses.....	HA-41
A/C pressure switch .....	HA-13
A/C relay.....	HA-38
A/C trouble diagnoses (manual A/C) .....	HA-25
Accelerator control system.....	FE-3
Accelerator wire adjustment.....	FE-3
Air bag .....	RS-9
Air bag disposal.....	RS-23
Air bag precautions .....	GI-2
Air bleeding for brake system .....	BR-7
Air bleeding (hydraulic clutch).....	CL-7
Air cleaner filter replacement .....	MA-14
Air conditioner cut control .....	EC-21
Air conditioning - See A/C.....	HA-13
Air flow meter - See Mass air flow sensor.....	EC-104
Alternator .....	EL-36
Angular tightening application.....	EM-2
Antenna .....	EL-132
Anti-lock brake system - See ABS.....	BR-31
Anti-lock brake system - Wiring diagram .....	BR-40
AP/SEN - Wiring diagram .....	EC-113
ASCD - Wiring diagram.....	EL-138
ASCD (automatic speed control device).....	EL-134
A/T - Wiring diagram .....	AT-7
A/T IND - Wiring diagram.....	EL-103
AT indicator lamp .....	EL-103
A/T shift lock system .....	AT-39
A/T shift lock system - Wiring diagram .....	AT-40
A/T trouble diagnoses .....	AT-23

Audio .....	EL-126
AUDIO - Wiring diagram .....	EL-127
Audio and A/C control removal and installation - See Instrument panel .....	BT-19
Auto lock free running hub.....	FA-18
Automatic speed control system - See ASCD .....	EL-134
Automatic transmission fluid replacement .....	MA-19
Automatic transmission number.....	GI-38
Auxiliary air control (AAC).....	EC-308
Axle housing (rear).....	RA-7

## B

Back window .....	BT-30, BT-41
BACK/L - Wiring diagram.....	EL-61
Back-up lamp .....	EL-61
Back-up lamp switch (M/T) .....	MT-7
Ball joint front axle.....	FA-38
Basic inspection .....	EC-74
Battery .....	EL-25
Baulk ring (M/T).....	MT-12
Blower motor .....	HA-29
Blower relay.....	HA-17
Blower resistor.....	HA-29
Body alignment.....	BT-45
Body mounting .....	BT-44
Boring/honing cylinder block .....	EM-45
BPT valve .....	EC-270
Brake booster .....	BR-18
Brake control valve (Proportioning valve).....	BR-12
Brake fluid change .....	BR-6
Brake fluid level.....	MA-22
Brake fluid level and line check .....	BR-6
Brake hydraulic line.....	BR-8
Brake inspection .....	MA-22
Brake lines and cables inspection .....	MA-22
Brake master cylinder .....	BR-15
Brake pedal .....	BR-13
Bulb specifications.....	EL-234
Bumper, front.....	BT-13
Bumper, rear .....	BT-16
BYP/S/V - Wiring diagram.....	EC-397

## C

Cab body.....	BT-44
Camshaft inspection.....	EM-31
Camshaft position sensor (CMPS).....	EC-252
Camshaft position sensor (PHASE).....	EC-252
Canister - See EVAP canister.....	EC-23
CHARGE - Wiring diagram .....	EL-37
Charging system .....	EL-36
Chassis and body maintenance.....	MA-18
CHIME - Wiring diagram .....	EL-107

# ALPHABETICAL INDEX

CIGAR - Wiring diagram .....	EL-125	GI
Cigarette lighter .....	EL-125	
Circuit breaker .....	EL-17	MA
CKPS - Wiring diagram .....	EC-247, EC-340	
Closed loop control .....	EC-331	EM
Closed throttle position switch .....	EC-314	
Clutch cover .....	CL-14	LC
Clutch disc .....	CL-13	
Clutch fluid level .....	MA-18	
Clutch master cylinder .....	CL-8	EC
Clutch operating cylinder .....	CL-9	
Clutch pedal .....	CL-5	
Clutch release bearing .....	CL-10	
Clutch withdrawal lever .....	CL-10	FE
CMPS - Wiring diagram .....	EC-252	
Collision diagnosis .....	RS-52	CL
Combination lamp, front, removal and installation .....	BT-13	
Combination lamp, rear, removal and installation .....	BT-30	
Combination meter .....	EL-81	
Combination meter removal and installation - See Instrument panel .....	BT-19	MT
Combination switch .....	EL-41	
Component Location (manual A/C) .....	HA-17	AT
Compression pressure .....	EM-14	
Compressor clutch removal and installation .....	HA-59	TF
Compressor description .....	HA-7	
Compressor mounting .....	HA-58	
Compressor precaution .....	HA-7	FA
Compressor special service tool .....	HA-10	
Connecting rod .....	EM-44	
Connecting rod bearing clearance .....	EM-48	RA
Connecting rod bushing clearance .....	EM-49	
Connector inspection .....	GI-17	BR
Console box - See Instrument panel .....	BT-20	
CONSULT for ABS .....	BR-71	ST
CONSULT for engine .....	EC-57	
CONSULT general information .....	GI-33	RS
Control lever (M/T) .....	MT-14	
Control valve (A/T) .....	AT-70	BT
Converter housing installation .....	AT-50	
Coolant mixture ratio .....	MA-9	HA
Coolant replacement .....	MA-12	
Cooling circuit (engine) .....	LC-7	IDX
Cooling fan .....	LC-12	
Counter gear (M/T) .....	MT-12	
Coupling sleeve (M/T) .....	MT-12	
Crank angle sensor built into distributor - See Camshaft position sensor .....	EC-252	
Crankcase emission control system - See positive crankcase ventilation .....	EC-28	
Crankcase ventilation system - See positive crankcase ventilation .....	EC-28	
Crankshaft .....	EM-46	
Crankshaft position sensor (OBD) .....	EC-247, EC-340	
Crankshaft position sensor (OBD) cog chipping .....	EC-247	
Crankshaft position sensor (POS) .....	EC-247	
Crankshaft position sensor (POS) chipping .....	EC-247	
Crankshaft position sensor (REF) .....	EC-247	
Crash zone sensor .....	RS-14	
Cruise control - See ASCD .....	EL-134	
Cylinder block .....	EM-42	
Cylinder block boring .....	EM-45	
Cylinder head .....	EM-28	
<b>D</b>		
Data link connector for Consult .....	EC-57, EC-441	
Daytime light system .....	EL-50	
Daytime running light - See Daytime light system .....	EL-50	
Detonation sensor - See Knock sensor .....	EC-243	
Diagnosis sensor unit .....	RS-14	
Diagnostic trouble code (DTC) inspection priority chart .....	EC-80	
Differential gear oil replacement .....	MA-21	
Dimensions .....	GI-39	
Distributor .....	EC-20	
Distributor ignition (DI) system .....	EC-20	
D/LOCK - Wiring diagram .....	EL-163	
Dome light - See Interior lamp .....	EL-73	
Door, front .....	BT-18	
Door glass .....	BT-18	
Door glass Fitting Adjustment .....	BT-18	
Door lock .....	BT-18	
Door mirror .....	BT-43	
Door trim .....	BT-25	
Drive belt inspection .....	MA-10	
Drive plate runout .....	EM-49	
Drive shaft (front) .....	FA-25	
Drive shaft (rear) .....	RA-7	
DTRL - Wiring diagram .....	EL-53	
Dual pressure switch .....	HA-37	
<b>E</b>		
ECCS relay .....	EC-99	
ECM input/output signal .....	EC-89	
ECTS - Wiring diagram .....	EC-126, EC-145	
EGR control (EGRC) - BPT valve .....	EC-266	
EGR control (EGRC) - solenoid valve .....	EC-345	
EGR control valve .....	EC-264, EC-270, EC-361	
EGR temperature sensor .....	EC-350	
EGRC1 - Wiring diagram .....	EC-258, EC-356	
EGRC/V - Wiring diagram .....	EC-345	
EGR/TS - Wiring diagram .....	EC-350	
Electrical diagnoses .....	GI-20	
Electrical ignition system .....	EC-20	
Electrical unit .....	EL-214	

# ALPHABETICAL INDEX

---

Electrical units location.....	EL-214	FRO2/H - Wiring diagram .....	EC-186
Electronic ignition (EI) system.....	EC-20	Front axle .....	FA-15
Engine compartment .....	BT-46	Front bumper.....	BT-13
Engine control circuit diagram.....	EC-12	Front combination lamp removal and installation.....	BT-13
Engine control component parts location.....	EC-13	Front disc brake .....	BR-21
Engine control module (ECM).....	EC-320	Front door.....	BT-18
Engine control system diagram and chart .....	EC-15	Front heated oxygen sensor (HO2S).....	EC-150
Engine coolant temperature sensor (ECTS).....	EC-126, EC-145	Front heated oxygen sensor (HO2S) heater .....	EC-186
Engine fail-safe system.....	EC-81	Front heated oxygen sensor (HO2S) monitor.....	EC-171
Engine oil filter replacement.....	MA-15	Front oxygen sensor (O2S) monitor .....	EC-49
Engine oil precautions.....	GI-5	Front passenger air bag.....	RS-19
Engine oil replacement.....	MA-15	Front seat .....	BT-34
Engine outer component parts.....	EM-11	Front seat belt .....	RS-4
Engine removal .....	EM-39	Front suspension.....	FA-30
Engine room - See Engine compartment .....	BT-46	FUEL - Wiring diagram .....	EC-224
Engine serial number .....	GI-38	Fuel cut control (at no load & high engine speed).....	EC-22
EVAP canister .....	EC-23	Fuel damper .....	EC-429
EVAP canister purge control solenoid valve.....	EC-286 , EC-373	Fuel filter replacement.....	MA-14
EVAP canister purge volume control solenoid valve.....	EC-373	Fuel injection system.....	EC-18
EVAP canister purge volume control valve.....	EC-286	Fuel injector.....	EC-30, EC-423
EVAP canister vent control valve.....	EC-292	Fuel line inspection .....	MA-14
EVAP control system pressure sensor .....	EC-297	Fuel precautions.....	GI-6
EVAP control system purge flow monitoring diagnosis.....	EC-386	Fuel pressure check.....	EC-29
EVAP control system (small leak) diagnosis.....	EC-25, EC-276	Fuel pressure regulator .....	EC-29
EVAP system close mode.....	EC-25, EC-59	Fuel pressure release .....	EC-29
EVAP vapor lines inspection .....	MA-17	Fuel pump .....	EC-429
Evaporative emission (EVAP) system.....	EC-23	Fuel pump and gauge.....	FE-7
Exhaust gas recirculation (EGR) valve... <td>EC-258, EC-356</td> <td>Fuel pump relay .....</td> <td>EC-429</td>	EC-258, EC-356	Fuel pump relay .....	EC-429
Exhaust system .....	FE-8	Fuel system.....	FE-4
Exhaust system inspection.....	MA-18	Fuel tank vacuum relief valve .....	EC-24
Exterior .....	BT-30	Fuel temperature sensor .....	EC-234

## **F**

Fan switch .....	HA-29
Fast idle cam (FIC) .....	EC-31
Fast idle cam (FIC) inspection and adjustment.....	EC-31
F/FOG - Wiring diagram.....	EL-63
FICD - Wiring diagram .....	EC-437
Floor trim .....	BT-22
Flow charts.....	GI-30
Fluids.....	MA-8
Flywheel (clutch) .....	CL-14
Flywheel runout .....	EM-49
Fog lamp, front .....	EL-62
Fork rod (M/T) .....	MT-14
Forward clutch.....	AT-88
F/PUMP - Wiring diagram .....	EC-429
Freeze frame data.....	EC-38
FRO2 - Wiring diagram .....	EC-150

## **G**

Garage jack and safety stand.....	GI-41
Gauges .....	EL-81
Gear components (M/T) .....	MT-12
Generator .....	EL-36
Generic scan tool (GST) .....	EC-68
Glass .....	BT-18
Governor valve assembly.....	AT-81
Grease.....	MA-8
Grille - See Exterior.....	BT-13
Ground clearance (Dimensions) .....	GI-39
Ground distribution .....	EL-18

## **H**

Harness connector .....	EL-5
Harness connector inspection.....	GI-17

# ALPHABETICAL INDEX

Harness layout .....	EL-217
Hazard warning lamp .....	EL-66
Headlamp .....	EL-44
Headlamp aiming control .....	EL-47
Headlamp leveler - See Headlamp aiming control .....	EL-47
Headlining - See Roof trim.....	BT-28
Heated oxygen sensor heater...EC-161, EC-177, EC-186	
Heated oxygen sensor (HO2S) (front).....	EC-150
Heated oxygen sensor (HO2S) heater (front).....	EC-150
Heated oxygen sensor (HO2S) heater (rear) .....	EC-220
Heated oxygen sensor monitor (HO2S) (front)....	EC-171
Heated oxygen sensor (rear) .....	EC-190
HEATER - Wiring diagram .....	HA-20
Height (Dimensions).....	GI-39
HFC134a (R134a) system introduction.....	HA-13
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-51, HA-54
HFC134a (R134a) system service tools .....	HA-8
HFC134a system service equipment precaution.....	HA-8
High clutch.....	AT-86
H/LAMP - Wiring diagram .....	EL-45
Hood.....	BT-13
Horn.....	EL-124
HORN - Wiring diagram.....	EL-124

## I

IACV-AAC valve .....	EC-308
IACV-FICD solenoid valve.....	EC-437
IATS - Wiring diagram.....	EC-120
Identification plate .....	GI-37
Idle air control valve (IACV) .....	EC-308
Idle mixture ratio.....	EC-32
Idle speed.....	EC-32
Ignition coil .....	EC-333
Ignition timing .....	EC-32
Ignition wire inspection.....	EC-242
IGN/SG - Wiring diagram.....	EC-333
ILL - Wiring diagram.....	EL-72
Illumination .....	EL-71
INJECT - Wiring diagram.....	EC-423
Injector .....	EC-425
Injector removal and installation .....	EC-30
Instrument panel.....	BT-19
Intake air temperature sensor.....	EC-120
Intake manifold.....	EM-11
Interior .....	BT-22
Interior lamp .....	EL-73
Interior lamp on-off control .....	EL-75
INT/L - Wiring diagram.....	EL-80

## J

Jacking points.....	GI-40
Jump seat.....	BT-37

## K

Keyless entry system - See Multi-remote control system.....	EL-174
Knock sensor (KS) .....	EC-243
Knuckle spindle .....	FA-22
KS - Wiring diagram.....	EC-243

## L

Leaf spring (rear).....	RA-15
Length (Dimensions) .....	GI-39
License lamp .....	EL-59
Lifting points .....	GI-40
Line pressure test (A/T) .....	AT-26
Liquid gasket application.....	EM-2
LKUP - Wiring diagram .....	EC-412
Location of electrical units.....	EL-214
Lock, door.....	BT-18
Low and reverse brake .....	AT-92
LSV (Load sensing valve).....	BR-10
Lubricant (R134a) A/C.....	HA-56
Lubricants .....	MA-8
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-24
Luggage room lamp .....	EL-80

## M

MAFS - Wiring diagram.....	EC-104
Magnet clutch .....	HA-59
MAIN - Wiring diagram.....	EC-99
Main drive gear (M/T).....	MT-12
Mainshaft (M/T) .....	MT-12
Maintenance .....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-51
Malfunction indicator lamp (MIL).....	EC-49
Manual lock free running hub .....	FA-17
Manual steering gear .....	ST-16
Manual transmission number.....	GI-38
Manual transmission oil replacement.....	MA-18
MAP/BARO switch solenoid valve .....	EC-322
Mass air flow sensor (MAFS).....	EC-104
Master cylinder (brake) .....	BR-15
Master cylinder (clutch).....	CL-8
Meter .....	EL-81

# ALPHABETICAL INDEX

---

METER - Wiring diagram.....	EL-86	Park/neutral position switch (M/T).....	MT-7
MIL & Data link connectors circuit .....	EC-441	PCV (positive crankcase ventilation) .....	EC-28
MIL/DL - Wiring diagram .....	EC-441	PGC/V - Wiring diagram .....	EC-286, EC-373
MIRROR - Wiring diagram.....	EL-133	Pilot bushing replacement.....	EM-51
Mirror, door .....	BT-43	Piston assembly .....	EM-49
Mirror, out side .....	BT-43	Piston pin inspection .....	EM-43
Misfire.....	EC-238	Piston ring inspection .....	EM-44
Model variation.....	GI-35	Piston to bore clearance .....	EM-45
Molding - See Exterior .....	BT-30	PNP/SW - Wiring diagram .....	EC-407
M/T major overhaul .....	MT-11	POWER - Wiring diagram.....	EL-12
M/T removal and installation .....	MT-8	Power door lock .....	EL-159
Mud guard - See Exterior.....	BT-33	Power door mirror .....	EL-133
MULTI - Wiring diagram .....	EL-178	Power steering fluid level .....	ST-7, MA-23
Multiport fuel injection (MFI) system .....	EC-18	Power steering gear.....	ST-22, ST-30
Multiport fuel injection precautions.....	GI-5	Power steering hydraulic pressure.....	ST-11
Multiport fuel injection system inspection .....	EC-18	Power steering oil pressure switch .....	EC-434
Multi-remote control system.....	EL-174	Power steering oil pump .....	ST-37

## **N**

Neutral position switch .....	EC-407
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM) .....	EM-9
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (M/T) .....	MT-4
NVH troubleshooting (RA).....	RA-4
NVH troubleshooting (ST).....	ST-6

## **O**

Oil change (capacity) .....	MA-8
Oil change (interval) .....	MA-6
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pump (A/T).....	AT-66
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine) .....	EM-25
On board diagnostic system .....	EC-38
Operating cylinder (clutch) .....	CL-9
Out side mirror .....	BT-43
Overdrive control switch.....	AT-36
Overrun clutch.....	AT-88
Oversize piston.....	EM-45

## **P**

Pantograph jack .....	GI-40
Parking brake control .....	BR-29
Parking lamp .....	EL-58
Park/Neutral position switch.....	EC-407
Park/neutral position switch (A/T) .....	AT-37

Park/neutral position switch (M/T).....	MT-7
PCV (positive crankcase ventilation) .....	EC-28
PGC/V - Wiring diagram .....	EC-286, EC-373
Pilot bushing replacement.....	EM-51
Piston assembly .....	EM-49
Piston pin inspection .....	EM-43
Piston ring inspection .....	EM-44
Piston to bore clearance .....	EM-45
PNP/SW - Wiring diagram .....	EC-407
POWER - Wiring diagram.....	EL-12
Power door lock .....	EL-159
Power door mirror .....	EL-133
Power steering fluid level .....	ST-7, MA-23
Power steering gear.....	ST-22, ST-30
Power steering hydraulic pressure.....	ST-11
Power steering oil pressure switch .....	EC-434
Power steering oil pump .....	ST-37
Power steering system bleeding.....	ST-8
Power supply routing.....	EL-10
Power transistor .....	EC-333
Power transistor & ignition coil.....	EC-333
Power window .....	EL-154
Precautions (General) .....	GI-3
PRE/SE - Wiring diagram .....	EC-297
Pressure plate - See Clutch cover.....	CL-14
Pressure test (A/T) .....	AT-26
Propeller shaft inspection .....	MA-20
PST/SW - Wiring diagram.....	EC-434

## **R**

R134a - See HFC134a .....	HA-2
Radiator.....	LC-11
Radiator fan - See Cooling fan .....	LC-12
Radio - See Audio.....	EL-126
Rear axle.....	RA-7
Rear axle (drum brake type).....	RA-8
Rear body.....	BT-44
Rear bumper .....	BT-16
Rear combination lamp removal and installation....	BT-30
Rear drum brake .....	BR-25
Rear heated oxygen sensor (HO2S) .....	EC-190
Rear heated oxygen sensor (HO2S) heater .....	EC-220
Rear seat.....	BT-37
Rear seat belt.....	RS-5
Rear side window .....	BT-40
Rear suspension .....	RA-14
Rear wheel anti-lock brake system (R-ABS) .....	BR-31
Rear window.....	BT-41
Refrigerant connection precaution .....	HA-4
Refrigerant discharging evacuating charging.....	HA-54
Refrigerant general precaution.....	HA-3
Refrigerant lines .....	HA-50
Refrigeration cycle.....	HA-13
Release bearing (clutch) .....	CL-10

# ALPHABETICAL INDEX

Removal and installation (A/T).....	AT-48	Steering linkage.....	ST-40	GI
Resistor .....	EC-339	Steering switch .....	EL-43	
Reverse clutch.....	AT-82	Steering wheel and column.....	ST-12	MA
Reverse idler shaft (M/T) .....	MT-12	Steering wheel play.....	ST-9	
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	MT-7	Steering wheel turning force .....	ST-9	
Reverse main gear (M/T) .....	MT-12	Stop lamp .....	EL-60	EM
RO2H-L - Wiring diagram .....	EC-190	STOP/L - Wiring diagram .....	EL-60	
Road wheel size.....	GI-39	Striking rod (M/T) .....	MT-14	LC
Roof trim.....	BT-28	Sub-gear (M/T) .....	MT-12	
Room lamp.....	EL-73	Sunroof .....	BT-38	
Room lamp - See Interior lamp.....	EL-73	Supplemental Restraint System.....	RS-9	EC
ROOM/L - Wiring diagram .....	EL-76	Supplemental restraint system - Wiring diagram....	RS-32	
Rotor disc (front) .....	FA-20	SW/V - Wiring diagram .....	EC-322	FE
RRO2/H - Wiring diagram .....	EC-220	Symbols and abbreviations .....	GI-8	
		Symptom matrix chart .....	EC-82	
		Synchronizer (M/T).....	MT-12	
		System readiness test (SRT) code .....	EC-38	CL

## S

SAE J1930 terminology list.....	GI-47
SAE J1979 - Mode 1 - 7 .....	EC-38
Seal - See Exterior.....	BT-30
Seat belt, front.....	RS-4
Seat belt inspection.....	RS-6, MA-25
Seat belt, rear.....	RS-5
Seat, front.....	BT-34
Seat, rear.....	BT-37
Self-diagnostic results .....	EC-49
SHIFT - Wiring diagram .....	AT-40
Shift control components (M/T).....	MT-14
Shift fork (M/T) .....	MT-14
Shift lever .....	MT-14
Shift lock system .....	AT-39
Shift schedule.....	AT-122
Shock absorber (front) .....	FA-32
Shock absorber (rear) .....	RA-15
Side trim .....	BT-22
Smart entrance control unit.....	EL-174, EL-209
Spare tire size .....	GI-39
Spark plug replacement .....	MA-16
Spiral cable.....	RS-15
Spot lamp .....	EL-80
SRS - See Supplemental Restraint System .....	RS-9
SRS - Wiring diagram .....	RS-32
SRS Trouble diagnoses .....	RS-27
S/SIG - Wiring diagram.....	EC-426
Stabilizer bar (front).....	FA-34
Stall test (A/T) .....	AT-23
Standardized relay .....	EL-7
START - Wiring diagram .....	EL-31
Start signal .....	EC-426
Starter.....	EL-29
Starting system.....	EL-29
Steering gear and linkage inspection.....	MA-23
Steering gear oil level .....	MA-23
Steering knuckle.....	FA-22

## T

Tail lamp .....	EL-58
TAIL/L - Wiring diagram .....	EL-58
Tank fuel temperature sensor .....	EC-234
Tension rod (front).....	FA-36
TFTS - Wiring diagram .....	EC-234
THEFT - Wiring diagram .....	EL-195
Theft warning system.....	EL-189
Thermal protector .....	HA-37
Thermo control amp .....	HA-37
Thermostat .....	LC-10
Three way catalyst .....	EC-271
Three way catalyst precautions .....	GI-5
Throttle bodies.....	EM-11
Throttle chambers .....	EM-11
Throttle drum adjustment .....	FE-3
Throttle position sensor adjustment .....	EC-74
Throttle position sensor (TPS) .....	EC-131
Throttle position switch.....	EC-314
Throwout bearing - See Clutch release bearing.....	CL-10
Tie-rod .....	ST-40
Tie-rod ball joints .....	ST-40
Tightening torque of standard bolts .....	GI-46
Timing chain .....	EM-17
Tire rotation .....	MA-21
Tire size .....	GI-39
Torque converter clutch solenoid valve.....	AT-34
Torque converter installation .....	AT-50
Torque convertor clutch solenoid valve... EC-412, EC-416	
Torsion bar spring.....	FA-32
Towing point .....	GI-45
TPS - Wiring diagram.....	EC-131
TP/SW - Wiring diagram .....	EC-314
Transfer fluid replacement .....	MA-20
Transfer oil replacement .....	MA-20
Transfer serial number .....	GI-38

# ALPHABETICAL INDEX

Transmission case (M/T).....	MT-11
Tread-FR&RR (Dimensions) .....	GI-39
Trim .....	BT-22
Trouble diagnoses.....	GI-20
Trunk room lamp .....	EL-80
TURN - Wiring diagram.....	EL-68
Turn signal lamp.....	EL-66
Two trip detection logic .....	EC-38
Two-pole lift .....	GI-42

## U

Under body.....	BT-48
Upper link (front susp.).....	FA-35

## V

Vacuum cut valve.....	EC-406
Vacuum cut valve bypass valve.....	EC-402
Vacuum hose (brake system) .....	BR-20
Vacuum hose drawing (Engine control) .....	EC-16
Valve clearance .....	EM-36
Valve guide .....	EM-32
Valve lifter .....	EM-36
Valve seat.....	EM-34
Valve spring.....	EM-35
Vehicle identification number .....	GI-37
Vehicle speed sensor (VSS) .....	EC-303
Vent mode switch.....	HA-14
VENT/V - Wiring diagram.....	EC-292
Viscosity number (SAE) .....	MA-9
VSS - Wiring diagram .....	EC-303

## W

WARN - Wiring diagram.....	EL-99
Warning chime .....	EL-104
Warning lamps .....	EL-96
Washer, front.....	EL-116
Water pump.....	LC-9
Weatherstrip - See Exterior.....	BT-30
Wheel alignment (front).....	FA-9
Wheel balance.....	MA-21
Wheel bearing (front axle).....	FA-7
Wheel bearing (rear) .....	RA-6
Wheel hub (front) .....	FA-20
Wheel sensors (ABS).....	BR-32, BR-57
Wheel sensors (TCS).....	BR-57
Wheel size.....	GI-39
Wheelbase (Dimensions) .....	GI-39
Wide open & closed throttle position switch.....	EC-314
Width (Dimensions) .....	GI-39
WINDOW - Wiring diagram.....	EL-156
Window, back .....	BT-30, BT-41
Window, door.....	BT-18
Window, rear .....	BT-41
Windshield.....	BT-39
WIPER - Wiring diagram.....	EL-118
Wiper and washer .....	EL-116
Wiper, front .....	EL-116
Wiring Diagram (Cell code) list .....	EL-235
Wiring diagrams .....	GI-9
Withdrawal lever (clutch).....	CL-10
Wrist pin - See Piston pin inspection.....	EM-43