

# ALPHABETICAL INDEX

## SECTION **IDX**

**A   B   C   D   E   F   G   H   I   J   K   L   M**

**N   O   P   Q   R   S   T   U   V   W   X   Y   Z**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

---

## A

AAC/V - Wiring diagram.....	EC-410
ABS - Wiring diagram .....	BR-40
ABS (anti-lock brake system).....	BR-29
Absolute pressure sensor .....	EC-151
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component layout.....	HA-15
A/C compressor clutch removal and installation.....	HA-60
A/C compressor description.....	HA-7
A/C compressor mounting.....	HA-58
A/C compressor precaution.....	HA-7
A/C control operation (manual A/C).....	HA-14
A/C diagnostic work flow (manual A/C) .....	HA-25
A/C HFC134a (R134a) system introduction .....	HA-13
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-51, HA-54
A/C HFC134a (R134a) system service tools.....	HA-8
A/C HFC134a system service equipment precaution .....	HA-8
A/C lubricant (R134a).....	HA-56
A/C operational check.....	HA-23
A/C performance chart.....	HA-43
A/C performance test diagnoses.....	HA-41
A/C pressure switch .....	HA-13
A/C relay.....	HA-38
A/C trouble diagnoses (manual A/C) .....	HA-25
Accelerator control system.....	FE-3
Accelerator wire adjustment.....	FE-3
Actuator lever (Transfer) .....	TF-9
Air bag .....	RS-9
Air bag disposal.....	RS-22
Air bag precautions .....	GI-2
Air bleeding for brake system .....	BR-7
Air bleeding (hydraulic clutch).....	CL-7
Air cleaner filter replacement .....	MA-14
Air conditioner cut control .....	EC-29
Air conditioning - See A/C .....	HA-13
Air flow meter - See Mass air flow sensor.....	EC-141
Alternator .....	EL-34
Angular tightening application.....	EM-3
Anti-lock brake system - See ABS.....	BR-29
Anti-lock brake system - Wiring diagram .....	BR-40
AP/SEN - Wiring diagram .....	EC-154
ASCD - Wiring diagram.....	EL-138
ASCD (automatic speed control device).....	EL-134
A/T - Wiring diagram - AT - FTS .....	AT-107
A/T - Wiring diagram - AT - MAIN.....	AT-96
A/T - Wiring diagram - AT - PNP/SW.....	AT-101
A/T - Wiring diagram - AT - VSS A/T .....	AT-113
A/T control .....	EC-421
A/T diagnosis communication line .....	EC-532
A/T fluid temperature sensor.....	AT-110

A/T IND - Wiring diagram.....	EL-102
AT indicator lamp .....	EL-102
A/T shift lock system.....	AT-257
A/T shift lock system - Wiring diagram .....	AT-258
A/T Wiring diagram - AT - ENG SS .....	AT-118
A/T Wiring diagram AT - 1ST.....	AT-124
A/T Wiring diagram AT - 2ND .....	AT-130
A/T Wiring diagram AT - 3RD .....	AT-136
A/T Wiring diagram AT - 4TH.....	AT-143
A/T Wiring diagram AT - BA/FTS .....	AT-197
A/T Wiring diagram AT - LPSV .....	AT-167
A/T Wiring diagram AT - NONDTC .....	AT-209
A/T Wiring diagram AT - OVRCSV .....	AT-192
A/T Wiring diagram AT - SSV/A.....	AT-173
A/T Wiring diagram AT - SSV/B .....	AT-178
A/T Wiring diagram AT - TCCSIG .....	AT-158
A/T Wiring diagram AT - TCV .....	AT-152
A/T Wiring diagram AT - TPS.....	AT-184
A/T Wiring diagram AT - VSSMTR.....	AT-203
AT/C - Wiring diagram.....	EC-423
ATDIAG - Wiring diagram .....	EC-533
Audio .....	EL-125
AUDIO - Wiring diagram .....	EL-126
Audio and A/C control removal and installation - See Instrument panel .....	BT-19
Auto lock free running hub .....	FA-15
Automatic speed control system - See ASCD .....	EL-134
Automatic transmission fluid replacement .....	MA-19
Automatic transmission number .....	GI-39
Auxiliary air control (AAC).....	EC-406
Axle housing (rear).....	RA-7

## B

Back window .....	BT-30, BT-40
BACK/L - Wiring diagram .....	EL-58
Back-up lamp .....	EL-58
Back-up lamp switch (M/T) .....	MT-6
Ball joint front axle.....	FA-33
Basic inspection .....	EC-96
Battery .....	EL-24
Baulk ring (M/T).....	MT-10
Blower motor .....	HA-29
Blower relay.....	HA-17
Blower resistor.....	HA-29
Body alignment.....	BT-44
Body mounting .....	BT-43
BPT valve .....	EC-359
Brake booster .....	BR-16
Brake control valve (Proportioning valve).....	BR-10
Brake fluid change .....	BR-6
Brake fluid level.....	MA-22
Brake fluid level and line check .....	BR-6
Brake hydraulic line.....	BR-8
Brake inspection .....	MA-22

# ALPHABETICAL INDEX

---

Brake lines and cables inspection .....	MA-22	Connector inspection.....	GI-17
Brake master cylinder .....	BR-13	Console box - See Instrument panel .....	BT-20
Brake pedal .....	BR-11	CONSULT for ABS .....	BR-46
Bulb specifications.....	EL-230	CONSULT for engine .....	EC-76
Bumper, front.....	BT-13	CONSULT general information .....	GI-35
Bumper, rear.....	BT-16	Control lever (M/T) .....	MT-12
BYPS/V - Wiring diagram.....	EC-518, EC-527	Control valve (A/T) .....	AT-289
<b>C</b>		Converter housing installation.....	AT-268
Cab body .....	BT-43	Coolant mixture ratio.....	MA-9
Camshaft inspection.....	EM-29	COOL/F - Wiring diagram .....	EC-311
Camshaft position sensor (CMPS).....	EC-340	Cooling circuit (engine) .....	LC-8
Canister - See EVAP canister.....	EC-30	Cooling fan .....	LC-13
Center bearing assembly (propeller shaft).....	PD-11	Cooling fan control .....	EC-307
Center bearing disassembly (propeller shaft) .....	PD-10	Cooling fan motor.....	EC-320
Center case (Transfer) .....	TF-10	Cooling fan relay .....	EC-320
CHARGE - Wiring diagram .....	EL-35	Counter gear (M/T).....	MT-10
Charging system .....	EL-34	Counter gear (Transfer) .....	TF-11
Chassis and body maintenance.....	MA-18	Coupling sleeve (M/T) .....	MT-10
CHIME - Wiring diagram .....	EL-106	Crank angle sensor built into distributor - See Camshaft position sensor .....	EC-340
CIGAR - Wiring diagram .....	EL-124	Crankcase emission control system - See positive crankcase ventilation.....	EC-36
Cigarette lighter .....	EL-124	Crankshaft .....	EM-47
Circuit breaker .....	EL-16	Crankshaft position sensor (OBD) .....	EC-334
CKPS - Wiring diagram.....	EC-336, EC-453	Crankshaft position sensor (OBD) cog chipping...	EC-451
Closed loop control (Left bank).....	EC-442	Crash zone sensor .....	RS-14
Closed loop control (Right bank) .....	EC-442	Cruise control - See ASCD .....	EL-134
Closed throttle position switch .....	EC-414	Cylinder block .....	EM-42
Clutch cover .....	CL-13	Cylinder block boring .....	EM-46
Clutch disc.....	CL-12	Cylinder head .....	EM-25
Clutch fluid level .....	MA-18	Cylinder head bolt tightening .....	EM-36
Clutch master cylinder.....	CL-8	<b>D</b>	
Clutch operating cylinder.....	CL-9	Data link connector for Consult.....	EC-76
Clutch pedal .....	CL-5	Daytime light system .....	EL-47
Clutch release bearing .....	CL-10	Daytime running light - See Daytime light system.....	EL-47
Clutch withdrawal lever .....	CL-10	Detonation sensor - See Knock sensor .....	EC-328
CMPS - Wiring diagram .....	EC-343	Diagnosis sensor unit .....	RS-14
Collision diagnosis.....	RS-51	Diagnostic trouble code (DTC) for OBD system.....	EC-8, EC-55
Combination lamp, front, removal and installation.....	BT-13	Diagnostic trouble code (DTC) inspection priority chart .....	EC-113
Combination lamp, rear, removal and installation .....	BT-30	Differential carrier assembly .....	PD-31, PD-54
Combination meter .....	EL-78	Differential carrier disassembly .....	PD-38
Combination meter removal and installation - See Instrument panel .....	BT-19	Differential gear oil replacement .....	MA-21
Combination switch .....	EL-39	Dimensions .....	GI-40
Component Location (manual A/C).....	HA-17	Distributor .....	EC-28
Compression pressure .....	EM-12	Distributor ignition (DI) system .....	EC-28
Compressor clutch removal and installation .....	HA-60	D/LOCK - Wiring diagram .....	EL-163
Compressor description .....	HA-7	Dome light - See Interior lamp .....	EL-70
Compressor mounting.....	HA-58	Door, front .....	BT-18
Compressor precaution.....	HA-7	Door glass .....	BT-18
Connecting rod .....	EM-44	Door glass Fitting Adjustment .....	BT-18
Connecting rod bearing clearance .....	EM-49		
Connecting rod bushing clearance .....	EM-50		

# ALPHABETICAL INDEX

---

Door lock .....	BT-18
Door mirror .....	BT-42
Door trim.....	BT-25
Drive belt inspection.....	MA-10
Drive chain (Transfer) .....	TF-11
Drive pinion diff. inspection .....	PD-23, PD-42
Drive pinion height .....	PD-25, PD-49
Drive plate runout.....	EM-50
Drive shaft (front) .....	FA-22
Dropping resistor (A/T).....	AT-170
DTC work support .....	EC-86
DTRL - Wiring diagram .....	EL-50

## **E**

ECM input/output signal.....	EC-124
ECTS - Wiring diagram.....	EC-172, EC-190
EGR control (EGRC) - BPT valve.....	EC-359
EGR control (EGRC) - solenoid valve .....	EC-457
EGR control valve .....	EC-348, EC-469
EGR temperature sensor .....	EC-462
EGRC1 - Wiring diagram .....	EC-352, EC-472
EGRC/V - Wiring diagram.....	EC-459
EGR/TS - Wiring diagram .....	EC-466
Electrical diagnoses .....	GI-20
Electrical ignition system.....	EC-28
Electrical unit.....	EL-213
Electrical units location.....	EL-213
Engine compartment .....	BT-45
Engine control circuit diagram.....	EC-22
Engine control component parts location.....	EC-20
Engine control module (ECM).....	EC-426
Engine control system diagram and chart .....	EC-23
Engine coolant temperature sensor (ECTS).....	EC-170, EC-188
Engine fail-safe system.....	EC-114
Engine oil filter replacement.....	MA-15
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-10
Engine removal .....	EM-39
Engine room - See Engine compartment .....	BT-45
Engine serial number .....	GI-39
EVAP canister .....	EC-31
EVAP canister purge volume control solenoid valve.....	EC-30, EC-378, EC-487
EVAP canister vent control valve.....	EC-385, EC-495, EC-509
EVAP control system pressure sensor .....	EC-392
EVAP control system purge flow monitoring diagnosis.....	EC-501
EVAP control system (small leak) diagnosis.....	EC-368, EC-477
EVAP vapor lines inspection .....	MA-17
Evaporative emission (EVAP) system.....	EC-30

Exhaust gas recirculation (EGR) valve... EC-348, EC-469	
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-18
Exterior .....	BT-30

## **F**

Fan switch .....	HA-29
Fast idle cam (FIC) inspection and adjustment.....	EC-39
F/FOG - Wiring diagram.....	EL-60
FICD - Wiring diagram .....	EC-568
Final drive disassembly.....	PD-38
Final drive pre-inspection .....	PD-38
Final drive removal and installation .....	PD-16
Floor trim .....	BT-22
Flow charts .....	GI-30
Fluid temperature sensor (A/T) .....	AT-110
Fluids.....	MA-8
Flywheel (clutch) .....	CL-13
Flywheel runout .....	EM-50
FO2H-L - Wiring diagram .....	EC-238
FO2H-R Wiring diagram.....	EC-237
Fog lamp, front .....	EL-59
Fork rod (M/T) .....	MT-12
Forward clutch.....	AT-308
F/PUMP - Wiring diagram .....	EC-556
Freeze frame data.....	EC-56
FRO2LH - Wiring diagram .....	EC-197, EC-220, EC-231
FRO2RH - Wiring diagram.....	EC-196, EC-219, EC-230
Front axle .....	FA-13
Front bumper.....	BT-13
Front case (Transfer) .....	TF-10
Front combination lamp removal and installation .....	BT-13
Front disc brake .....	BR-19
Front door.....	BT-18
Front drive shaft (Transfer) .....	TF-11
Front final drive disassembly (4WD).....	PD-18
Front final drive pre-inspection (4WD) .....	PD-18
Front final drive removal and installation (4WD) ....	PD-15
Front fog lamp .....	EL-59
Front heated oxygen sensor heater (Left bank) ...	EC-235
Front heated oxygen sensor heater (Right bank) .....	EC-235
Front heated oxygen sensor (HO2S) (Left bank) .....	EC-193, EC-202, EC-209, EC-216, EC-227
Front heated oxygen sensor (HO2S) (Right bank) .....	EC-193, EC-202, EC-209, EC-216, EC-227
Front oxygen sensor (O2S) monitor .....	EC-68
Front passenger air bag .....	RS-18
Front seat .....	BT-34
Front seat belt .....	RS-4
Front suspension.....	FA-5
Fuel cut control (at no load & high engine speed).....	EC-30

# ALPHABETICAL INDEX

Fuel filter replacement.....	MA-13
Fuel injection system (Left bank).....	EC-285, EC-294
Fuel injection system (Right bank).....	EC-285, EC-294
Fuel line inspection .....	MA-13
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-37
Fuel pressure regulator.....	EC-38
Fuel pressure release .....	EC-37
Fuel pump .....	EC-555
Fuel pump and gauge.....	FE-7
Fuel pump relay .....	EC-560
Fuel system.....	FE-4
Fuel tank vacuum relief valve .....	EC-31
FUELLH - Wiring diagram.....	EC-288, EC-297
FUELRH - Wiring diagram.....	EC-287, EC-296
Fuse.....	EL-16
Fusible link .....	EL-16

## **G**

Garage jack and safety stand.....	GI-42
Gauges.....	EL-78
Gear components (M/T).....	MT-10
Generator .....	EL-34
Generic scan tool (GST).....	EC-90
Glass .....	BT-18
Grease.....	MA-8
Grille - See Exterior.....	BT-13
Ground clearance (Dimensions) .....	GI-40
Ground distribution.....	EL-17

## **H**

Harness connector .....	EL-5
Harness connector inspection.....	GI-17
Harness layout .....	EL-216
Hazard warning lamp .....	EL-63
Headlamp .....	EL-42
Headlamp aiming control .....	EL-45
Headlamp leveler - See Headlamp aiming control .....	EL-45
Headlining - See Roof trim.....	BT-28
HEATER - Wiring diagram .....	HA-20
Height (Dimensions).....	GI-40
HFC134a (R134a) system introduction.....	HA-13
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-51, HA-54

HFC134a (R134a) system service tools.....	HA-8
HFC134a system service equipment precaution.....	HA-8
High clutch.....	AT-306
H/LAMP - Wiring diagram .....	EL-43
Hood.....	BT-13
Horn.....	EL-123

HORN - Wiring diagram .....	EL-123
How to erase DTC for OBD system .....	EC-65
Hydraulic lash adjuster inspection .....	EM-34

## **I**

IACV-AAC valve .....	EC-406
IACV-FICD solenoid valve.....	EC-567
IATS - Wiring diagram.....	EC-166
Identification plate .....	GI-38
Idle air control valve (IACV) .....	EC-406
Idle mixture ratio.....	EC-41
Idle speed.....	EC-41
Ignition control system .....	EC-444
Ignition timing .....	EC-41
Ignition wire inspection .....	EC-327
IGN/SG - Wiring diagram .....	EC-446
ILL - Wiring diagram.....	EL-69
Illumination .....	EL-68
INJECT - Wiring diagram .....	EC-546
Injector .....	EC-545
Injector removal and installation .....	EC-38
Instrument panel.....	BT-19
Intake air temperature sensor.....	EC-163
Interior .....	BT-22
Interior lamp .....	EL-70
Interior lamp on-off control .....	EL-72
INT/L - Wiring diagram .....	EL-77

## **J**

Jacking points.....	GI-41
Journal bearing assembly (propeller shaft).....	PD-12
Journal bearing disassembly (propeller shaft) .....	PD-11
Jump seat.....	BT-36

## **K**

Keyless entry system - See Multi-remote control system.....	EL-174
Knock sensor (KS) .....	EC-328
Knuckle spindle .....	FA-19
KS - Wiring diagram.....	EC-330

## **L**

Leaf spring (rear).....	RA-14
Length (Dimensions) .....	GI-40
License lamp .....	EL-56
Lifting points .....	GI-41
Limited slip diff. adjustment.....	PD-45
Limited slip diff. assembly .....	PD-46

# ALPHABETICAL INDEX

---

Limited slip diff. disassembly .....	PD-43
Limited slip diff. inspection .....	PD-44
Line pressure solenoid valve .....	AT-149, AT-164, AT-169
Line pressure test (A/T) .....	AT-62
Liquid gasket application.....	EM-3
Location of electrical units.....	EL-213
Lock, door.....	BT-18
Low and reverse brake .....	AT-312
Lubricant (R134a) A/C.....	HA-56
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-24
Luggage room lamp .....	EL-77

## **M**

MAFS - Wiring diagram.....	EC-146
Magnet clutch.....	HA-60
MAIN - Wiring diagram.....	EC-134
Main drive gear (M/T).....	MT-10
Main gear (Transfer) .....	TF-11
Mainshaft (M/T) .....	MT-10
Mainshaft (Transfer) .....	TF-11
Maintenance .....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-270
Major overhaul (Transfer).....	TF-10
Malfunction indicator lamp (MIL).....	EC-67
Manual lock free running hub .....	FA-14
Manual transmission number .....	GI-39
Manual transmission oil replacement.....	MA-18
MAP/BARO switch solenoid valve .....	EC-428
Mass air flow sensor (MAFS).....	EC-141
Master cylinder (brake) .....	BR-13
Master cylinder (clutch).....	CL-8
Meter .....	EL-78
METER - Wiring diagram.....	EL-83
MIL & Data link connectors circuit .....	EC-573
MIL/DL - Wiring diagram .....	EC-573
MIRROR - Wiring diagram.....	EL-133
Mirror, door .....	BT-42
Mirror, out side .....	BT-42
Misfire.....	EC-321
Model variation.....	GI-37
Molding - See Exterior .....	BT-30
M/T major overhaul .....	MT-9
M/T removal and installation .....	MT-7
Mud guard - See Exterior.....	BT-33
MULTI - Wiring diagram .....	EL-178
Multiport fuel injection (MFI) system .....	EC-26
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-174

## **N**

NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (CL) .....	CL-3
NVH troubleshooting (EM) .....	EM-8
NVH troubleshooting (FA) .....	FA-4
NVH troubleshooting (M/T) .....	MT-4
NVH troubleshooting (PD).....	PD-7
NVH troubleshooting (RA) .....	RA-4
NVH troubleshooting (ST) .....	ST-5
NVH troubleshooting (Transfer) .....	TF-4

## **O**

Oil change (capacity) .....	MA-8
Oil change (interval) .....	MA-6
Oil pan (engine).....	EM-13
Oil pressure (engine).....	LC-4
Oil pump (A/T).....	AT-285
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine) .....	EM-23
Oil seal replacement (front final drive 4WD).....	PD-13
On board diagnostic system .....	EC-54
Operating cylinder (clutch) .....	CL-9
Out side mirror .....	BT-42
Overdrive control switch .....	AT-255
Overrun clutch .....	AT-308
Overrun clutch solenoid valve....	AT-149, AT-164, AT-194
Oversize piston.....	EM-46

## **P**

Pantograph jack .....	GI-41
Parking brake control .....	BR-27
Parking lamp .....	EL-55
Park/Neutral position switch .....	EC-535
Park/neutral position switch (A/T) .....	AT-104, AT-255
Park/neutral position switch (M/T).....	MT-6
PCV (positive crankcase ventilation) .....	EC-36
PGC/V - Wiring diagram .....	EC-381, EC-490
Pilot bushing replacement.....	EM-52
Pinion bearing preload diff. ....	PD-25
Pinion gear height diff. ....	PD-25, PD-49
Piston assembly .....	EM-50
Piston pin inspection .....	EM-43
Piston ring inspection .....	EM-44
Piston to bore clearance .....	EM-45
PNP/SW - Wiring diagram .....	EC-538
POWER - Wiring diagram .....	EL-11
Power door lock .....	EL-159
Power door mirror .....	EL-133
Power steering fluid level .....	ST-6, MA-23

# ALPHABETICAL INDEX

Power steering gear .....	ST-15	RO2H-R - Wiring diagram.....	EC-280	GI
Power steering hydraulic pressure.....	ST-10	Road wheel size.....	GI-40	
Power steering oil pressure switch .....	EC-561	Roof trim.....	BT-28	MA
Power steering oil pump .....	ST-22	Room lamp.....	EL-70	
Power steering system bleeding.....	ST-7	Room lamp - See Interior lamp.....	EL-70	
Power supply routing.....	EL-9	ROOM/L - Wiring diagram .....	EL-73	EM
Power transistor & ignition coil.....	EC-444	Rotor disc (front) .....	FA-17	
Power window .....	EL-154	RRO2LH - Wiring diagram.....	EC-247, EC-256, EC-265, EC-273	LC
Precautions (General) .....	GI-3	RRO2RH - Wiring diagram.....	EC-246, EC-255, EC-264, EC-272	EC
PRE/SE - Wiring diagram .....	EC-395			FE
Pressure plate - See Clutch cover.....	CL-13			CL
Pressure test (A/T) .....	AT-62			MT
Propeller shaft .....	PD-8	SAE J1930 terminology list.....	GI-47	
Propeller shaft inspection.....	MA-20	Seal - See Exterior.....	BT-30	
Propeller shaft on vehicle service.....	PD-9	Seat belt, front.....	RS-4	
Propeller shaft vibration .....	PD-9	Seat belt inspection.....	MA-25	
PST/SW - Wiring diagram.....	EC-562	Seat belt, rear.....	RS-5	
	<b>R</b>	Seat, front.....	BT-34	
R134a - See HFC134a .....	HA-2	Seat, rear.....	BT-36	
Radiator .....	LC-12	Self-diagnostic results .....	EC-68	AT
Radiator fan - See Cooling fan .....	LC-13	SHIFT - Wiring diagram .....	AT-258	TF
Radio - See Audio .....	EL-125	Shift control components (M/T).....	MT-12	
Rear axle .....	RA-7	Shift control (Transfer) .....	TF-12	
Rear axle (drum brake type) .....	RA-8	Shift fork (M/T) .....	MT-12	
Rear body .....	BT-43	Shift lever .....	MT-12	
Rear bumper .....	BT-16	Shift lock system .....	AT-257	
Rear case (Transfer) .....	TF-10	Shift schedule.....	AT-344	
Rear combination lamp removal and installation.....	BT-30	Shift solenoid valve A (A/T) .....	AT-126, AT-138, AT-149, AT-164, AT-175	FA
Rear drum brake .....	BR-23	Shift solenoid valve B (A/T) .....	AT-126, AT-132, AT-149, AT-164, AT-180	RA
Rear heated oxygen sensor (HO2S).....	EC-242, EC-252, EC-261, EC-270	Shock absorber (front) .....	FA-28	BR
Rear heated oxygen sensor (HO2S) heater.....	EC-278	Shock absorber (rear) .....	RA-14	
Rear seat .....	BT-36	Side bearing preload (front final drive 4WD) .....	PD-24	
Rear seat belt.....	RS-5	Side trim .....	BT-22	
Rear side window.....	BT-39	Smart entrance control unit.....	EL-174, EL-209	ST
Rear suspension .....	RA-13	Spare tire size .....	GI-40	
Rear window.....	BT-40	Spark plug replacement .....	MA-15	
Refrigerant connection precaution .....	HA-4	Spiral cable.....	RS-15	
Refrigerant discharging evacuating charging.....	HA-54	Spot lamp .....	EL-77	RS
Refrigerant general precaution.....	HA-3	SRS - See Supplemental Restraint System .....	RS-9	
Refrigerant lines .....	HA-50	SRS - Wiring diagram .....	RS-31	BT
Refrigeration cycle.....	HA-13	SRS Trouble diagnoses .....	RS-26	
Release bearing (clutch) .....	CL-10	S/SIG - Wiring diagram.....	EC-551	
Removal and installation (A/T).....	AT-267	Stabilizer bar (front).....	FA-30	
Removal and installation (Transfer) .....	TF-8	Stall test (A/T) .....	AT-59	HA
Reverse clutch.....	AT-302	Standardized relay .....	EL-7	
Reverse idler shaft (M/T) .....	MT-10	START - Wiring diagram .....	EL-30	
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	MT-6	Start signal .....	EC-550	EL
Reverse main gear (M/T) .....	MT-10	Starter.....	EL-28	
Revolution sensor (A/T) .....	AT-115	Starting system.....	EL-28	
Ring gear diff. inspection .....	PD-23, PD-42	Steering gear and linkage inspection.....	MA-23	
RO2H-L - Wiring diagram .....	EC-281	Steering knuckle.....	FA-19	IDX

# ALPHABETICAL INDEX

---

Steering linkage.....	ST-25
Steering switch.....	EL-41
Steering wheel and column.....	ST-11
Steering wheel play.....	ST-8
Steering wheel turning force .....	ST-8
Stop lamp .....	EL-57
STOP/L - Wiring diagram.....	EL-57
Striking rod (M/T) .....	MT-12
Sub-gear (M/T).....	MT-10
Sunroof.....	BT-37
Supplemental Restraint System.....	RS-9
Supplemental restraint system - Wiring diagram....	RS-31
SW/V - Wiring diagram .....	EC-432
Symbols and abbreviations.....	GI-8
Symptom matrix chart.....	EC-115
Synchronizer (M/T).....	MT-10
System readiness test (SRT) code.....	EC-56

## **T**

Tail lamp .....	EL-55
TAIL/L - Wiring diagram .....	EL-55
Tank fuel temperature sensor .....	EC-302
TCM circuit diagram.....	AT-13
TCM inspection table .....	AT-92
TFTS - Wiring diagram.....	EC-304
THEFT - Wiring diagram.....	EL-195
Theft warning system.....	EL-189
Thermal protector .....	HA-37
Thermo control amp.....	HA-37
Thermostat .....	LC-11
Three way catalyst function (Left bank).....	EC-364
Three way catalyst function (Right bank) .....	EC-364
Three way catalyst precautions .....	GI-5
Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-96
Throttle position sensor (TPS) .....	EC-175
Throttle position switch.....	AT-189, AT-256, EC-414
Throwout bearing - See Clutch release bearing.....	CL-10
Tie-rod .....	ST-25
Tie-rod ball joints.....	ST-25
Tightening torque of standard bolts .....	GI-46
Timing belt.....	EM-16
Tire rotation .....	MA-21
Tire size.....	GI-40
Tooth contact diff. ....	PD-52
Tooth contact (front final drive 4WD) .....	PD-30
Torque converter clutch solenoid valve.....	AT-149, AT-154, AT-164
Torque converter installation .....	AT-268
Torsion bar spring.....	FA-28
Towing point .....	GI-45
TPS - Wiring diagram.....	EC-181
TP/SW - Wiring diagram .....	EC-416
Transfer case .....	TF-10

## **U**

Under body.....	BT-47
Upper link (front susp.).....	FA-31

## **V**

Vacuum cut valve .....	EC-30, EC-531
Vacuum cut valve bypass valve.....	EC-30, EC-516, EC-523
Vacuum hose (brake system) .....	BR-18
Vacuum hose drawing (Engine control) .....	EC-24
Valve clearance .....	EM-31
Valve guide.....	EM-31
Valve seat.....	EM-32
Valve spring.....	EM-33
Vehicle identification number .....	GI-38
Vehicle speed sensor (VSS) .....	EC-401
Vent mode switch.....	HA-14
VENT/V - Wiring diagram.....	EC-387, EC-497, EC-512
Viscosity number (SAE) .....	MA-9
VSS - Wiring diagram .....	EC-404

## **W**

WARN - Wiring diagram.....	EL-96
Warning chime .....	EL-103
Warning lamps .....	EL-93
Washer, front .....	EL-115
Water pump.....	LC-10
Weatherstrip - See Exterior.....	BT-30
Wheel alignment (front).....	FA-7
Wheel balance.....	MA-21
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear) .....	RA-6
Wheel hub (front) .....	FA-17
Wheel sensors (ABS).....	BR-32
Wheel size.....	GI-40
Wheelbase (Dimensions) .....	GI-40

## ALPHABETICAL INDEX

---

Wide open & closed throttle position switch .....	EC-175	WIPER - Wiring diagram.....	EL-117
Width (Dimensions) .....	GI-40	Wiper and washer .....	EL-115
WINDOW - Wiring diagram.....	EL-156	Wiper, front.....	EL-115
Window, back .....	BT-30, BT-40	Wiring Diagram (Cell code) list .....	EL-231
Window, door.....	BT-18	Wiring diagrams .....	GI-9
Window, rear .....	BT-40	Withdrawal lever (clutch).....	CL-10
Windshield .....	BT-38	Wrist pin - See Piston pin inspection .....	EM-43

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

## **NOTES**