

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LC

EC
FE
CL

MT
AT

TF
PD

AX
SU

BR
ST

RS
BT

HA
SC

EL

IDX

ALPHABETICAL INDEX

A

- AAC/V - Wiring diagram EC-419, 1013
 ABS (anti-lock brake system) BR-35, 66
 ABS - Wiring diagram BR-46, 80
 ABS sensor rotor AX-13
 Absolute pressure sensor EC-147, 733
 A/C air flow HA-17
 A/C component layout HA-18
 A/C compressor clutch removal and
 installation HA-77
 A/C compressor description HA-15
 A/C compressor precaution HA-7
 A/C compressor special service
 tool HA-11, 14
 A/C control linkage adjustment (manual
 A/C) HA-47
 A/C control operation (manual A/C) HA-16
 A/C diagnostic work flow (manual A/C) HA-30
 A/C HFC134a (R134a) system
 precaution HA-3
 A/C HFC134a (R134a) system service
 tools HA-12
 A/C HFC134a system service equipment
 precaution HA-7
 A/C lubricant (R134a) HA-73
 A/C lubrication oil HA-73
 A/C operational check HA-31
 A/C pressure switch HA-57
 A/C relay HA-57
 A/C service data specification HA-91
 A/C switch HA-16
 A/C symptom chart (manual A/C) HA-30
 A/C trouble diagnoses (manual A/C) HA-19
 A/C, M - Wiring diagram HA-22, 24, 28
 Accelerator control system FE-3
 Accelerator wire adjustment FE-3
 Actuator lever (Transfer) TF-11
 Air bag RS-12, 21
 Air bag disposal RS-28
 Air bag precautions GI-3
 Air bleeding (hydraulic clutch) CL-5, 7
 Air bleeding for brake system BR-10
 Air cleaner filter replacement MA-21, 30
 Air conditioner cut control EC-33, 612
 Air flow meter - See Mass air flow
 sensor EC-137, 724
 Air spoiler, rear BT-36
 Alternator SC-23
 Angular tightening application EM-4
 Antenna - See Power antenna EL-126
 Anti-lock brake system - See ABS BR-35, 66
 Anti-lock brake system - Wiring
 diagram BR-46, 80
 AP/SEN - Wiring diagram EC-150, 736
 ASCD (automatic speed control
 device) EL-128

- ASCD - Wiring diagram EL-134
 A/T - Wiring diagram AT-10
 A/T - Wiring diagram - AT - FTS AT-246
 A/T - Wiring diagram - AT - MAIN AT-235
 A/T - Wiring diagram - AT - PNP/SW AT-240
 A/T - Wiring diagram - AT - VSS A/T AT-252
 A/T control EC-1024
 A/T diagnosis communication line EC-1139
 A/T fluid temperature sensor AT-249
 A/T shift lock system AT-51, 392
 A/T shift lock system - Wiring
 diagram AT-53, 393
 A/T trouble diagnoses AT-26
 A/T Wiring diagram - AT - ENG SS AT-257
 A/T Wiring diagram AT - 1ST AT-263
 A/T Wiring diagram AT - 2ND AT-269
 A/T Wiring diagram AT - 3RD AT-275
 A/T Wiring diagram AT - 4TH AT-282
 A/T Wiring diagram AT - BA/FTS AT-332
 A/T Wiring diagram AT - LPSV AT-303
 A/T Wiring diagram AT - NONDTC AT-344
 A/T Wiring diagram AT - OVRCSV AT-327
 A/T Wiring diagram AT - SSV/A AT-308
 A/T Wiring diagram AT - SSV/B AT-313
 A/T Wiring diagram AT - TCCSIG AT-295
 A/T Wiring diagram AT - TCV AT-289
 A/T Wiring diagram AT - TPS AT-319
 A/T Wiring diagram AT - VSSMTR AT-338
 AT/C - Wiring diagram EC-1026
 ATDIAG - Wiring diagram EC-1140
 Audio EL-119
 AUDIO - Wiring diagram EL-120
 Audio and A/C control removal and
 installation - See Instrument panel BT-21
 Auto lock free running hub AX-9
 Automatic speed control system - See
 ASCD EL-128
 Automatic transmission fluid
 replacement MA-36
 Automatic transmission number GI-44
 Auxiliary air control (AAC)
 valve EC-416, 1010

B

- Back door BT-15
 Back door opener - See Back door BT-15
 Back window BT-36, 50
 Back-up lamp EL-47
 Back-up lamp switch (M/T) MT-9, 44
 BACK/L - Wiring diagram EL-47
 Ball joint (front) SU-21
 Basic inspection EC-96, 680
 Battery SC-3
 Baulk ring (M/T) MT-15, 49
 Blower resistor HA-41
 Body alignment BT-54

ALPHABETICAL INDEX

Body mounting	BT-53	
Boring/honing cylinder block	EM-49, 108	
BPT valve	EC-943	GI
Brake booster	BR-21	
Brake control valve (Proportioning valve)	BR-13	MA
Brake fluid change	BR-8	EM
Brake fluid level	MA-39	
Brake fluid level and line check	BR-8	
Brake hydraulic line	BR-11	
Brake inspection	MA-40	
Brake lines and cables inspection	MA-39	
Brake master cylinder	BR-18	
Brake pedal	BR-16	
Bulb specifications	EL-266	
Bumper, front	BT-12	
Bumper, rear	BT-15	
BYPS/V - Wiring diagram	EC-525, 533, 1126, 1133	
C		
Camshaft inspection	EM-34, 90	
Camshaft position sensor (CMPS)	EC-319, 922	
Canister-See EVAP canister	EC-34, 613	
Center bearing assembly (propeller shaft)	PD-9	MT
Center bearing disassembly (propeller shaft)	PD-8	AT
Center case (Transfer)	TF-12	
CHARGE - Wiring diagram	SC-20	
Charging system	SC-19	TF
Chassis and body maintenance	MA-35	
CHIME - Wiring diagram	EL-94	
CIGAR - Wiring diagram	EL-117	
Cigarette lighter	EL-117	
Circuit breaker	EL-15	
CKPS - Wiring diagram	EC-315, 459, 918, 1056	
Closed loop control	EC-447	
Closed loop control (Left bank)	EC-1044	
Closed loop control (Right bank)	EC-1044	
Closed throttle position switch	EC-422, 1016	
Clutch cover	CL-12, 13	
Clutch disc	CL-12	
Clutch fluid level	MA-35	
Clutch master cylinder	CL-8	
Clutch operating cylinder	CL-9	
Clutch pedal	CL-5, 6	
Clutch release bearing	CL-10	
Clutch release mechanism	CL-10	
Clutch withdrawal lever	CL-10	
CMPS - Wiring diagram	EC-322, 925	
Collision diagnosis	RS-71	
Combination lamp, front, removal and installation	BT-12	
Combination lamp, rear, removal and installation	BT-36	
Combination meter	EL-65	
Combination meter removal and installation - See Instrument panel	BT-21	
Combination switch	EL-29	
Component Location (manual A/C)	HA-19	
Compression pressure	EM-16, 72	
Compressor clutch removal and installation	HA-77	
Compressor description	HA-15	LC
Compressor precaution	HA-7	
Compressor special service tool	HA-11, 14	
Connecting rod	EM-48, 107	
Connecting rod bearing clearance	EM-52, 112	
Connecting rod bushing clearance	EM-53, 112	
Connector inspection	GI-21	
Console box - See Instrument panel	BT-21	
CONSULT for ABS	BR-86	
CONSULT for engine	EC-79, 662	
CONSULT-II general information	GI-38	
Control lever (M/T)	MT-17, 51	
Control valve (A/T)	AT-84, 424	
Converter housing installation	AT-64, 403	
COOL/F - Wiring diagram	EC-894, 1153	
Coolant mixture ratio	MA-16	
Coolant replacement	MA-18, 27	
Cooling circuit (engine)	LC-10, 27	
Cooling fan	LC-16, 33	
Cooling fan control	EC-557, 1150	
Counter gear (M/T)	MT-15, 49	
Counter gear (Transfer)	TF-13, 23	
Coupling sleeve (M/T)	MT-15, 49	
Crank angle sensor built into distributor - See Camshaft position sensor	EC-319, 922	
Crankcase emission control system - See positive crankcase ventilation	EC-39, 619	
Crankcase ventilation system - See Positive crankcase ventilation	EC-39	ST
Crankshaft	EM-50, 109	
Crankshaft position sensor (OBD)	EC-313, 457, 916	
Crankshaft position sensor (OBD) cog chipping	EC-457, 1054	
Cruise control - See ASCD	EL-128	BT
Cylinder block	EM-46, 104	
Cylinder block boring	EM-49, 109	
Cylinder head	EM-31, 86	
Cylinder head bolt tightening	EM-98	
D		
Data link connector for CONSULT	EC-40, 662	
Daytime light system	EL-37	EL

ALPHABETICAL INDEX

Daytime running light - See Daytime light system EL-37
Detonation sensor - See Knock sensor EC-309, 912
Diagnosis sensor unit RS-18
Diagnostic trouble code (DTC) for OBD system EC-13, 591, 638
Diagnostic trouble code (DTC) inspection priority chart EC-110, 697
Differential carrier assembly PD-32, 58, 81, 102, 129
Differential carrier disassembly PD-71, 92, 115
Differential gear oil replacement MA-38
Dimensions GI-44
Distributor EC-31, 611
Distributor ignition (DI) system EC-31, 611
D/LOCK - Wiring diagram EL-168
Dome light - See Interior lamp EL-60
Door glass BT-18
Door glass Fitting Adjustment BT-18
Door lock BT-18
Door mirror BT-52
Door trim BT-31
Door, front BT-18
Drive belt inspection MA-17, 26
Drive chain (Transfer) TF-13
Drive pinion diff. inspection PD-24, 49, 74, 95, 118
Drive pinion height PD-26, 52, 76, 97, 124
Drive plate runout EM-54, 113
Drive shaft (front) AX-16
Dropping resistor (A/T) AT-305
DTC work support EC-88, 672
DTRL - Wiring diagram EL-40

E

ECM input/output signal EC-121, 708
ECTS - Wiring diagram EC-170, 188, 752, 771
EGR control (EGRC) - BPT valve EC-339, 943
EGR control (EGRC) - solenoid valve EC-463, 1061
EGR control valve EC-929, 1073
EGR temperature sensor EC-470, 1066
EGR/TS - Wiring diagram EC-473, 1069
EGRC/V - Wiring diagram EC-465, 1063
EGRC1 - Wiring diagram EC-331, 479, 933, 1076
Electrical diagnoses GI-24
Electrical ignition system EC-31, 611
Electrical unit EL-274
Electrical units location EL-236
Electronic ignition (EI) system EC-31
Engine compartment BT-55

Engine control circuit diagram EC-25, 605
Engine control component parts location EC-23, 603
Engine control module (ECM) EC-429, 1029
Engine control system diagram and chart EC-26, 606
Engine coolant temperature sensor (ECTS) EC-168, 187, 750, 769
Engine fail-safe system EC-111, 698
Engine oil filter replacement MA-22, 31
Engine oil precautions GI-7
Engine oil replacement MA-21, 30
Engine outer component parts EM-13, 70
Engine removal EM-43, 101
Engine room - See Engine compartment BT-55
Engine serial number GI-43
EVAP canister EC-34, 614
EVAP canister purge volume control solenoid valve EC-487, 613, 968, 1085
EVAP canister purge volume control valve EC-367, 487
EVAP canister vent control valve EC-375, 499, 515, 975, 1097, 1116
EVAP control system (small leak) diagnosis EC-36, 352, 485, 957, 1083
EVAP control system pressure sensor EC-383, 981
EVAP control system purge flow monitoring diagnosis EC-505, 1104
EVAP system close mode EC-36
EVAP vapor lines inspection MA-24, 33
Evaporative emission (EVAP) system EC-34, 613
Exhaust gas recirculation (EGR) valve EC-327, 476, 929, 1073
Exhaust system FE-9
Exterior BT-36

F

Fast idle cam (FIC) inspection and adjustment EC-622
F/FOG - Wiring diagram EL-49
FICD - Wiring diagram EC-583, 1183
Final drive disassembly PD-70, 91, 114
Final drive pre-inspection PD-70, 91, 114
Final drive removal and installation PD-70, 91, 114
Finisher, interior - See Trim BT-25
Floor trim BT-25
Flow charts GI-24
Fluid temperature sensor (A/T) AT-249
Fluids MA-13
Flywheel (clutch) CL-12, 13
Flywheel runout EM-54, 113

ALPHABETICAL INDEX

FO2H-L - Wiring diagram	EC-822	
FO2H-R - Wiring diagram.....	EC-821	
Fog lamp, front.....	EL-48	
Fog lamp, front, removal and installation.....	BT-12	
Fork rod (M/T)	MT-17, 51	
Forward clutch.....	AT-101, 443	
F/PUMP - Wiring diagram	EC-572, 1172	
Freeze frame data.....	EC-58, 639	
FRO2 - Wiring diagram	EC-195, 216, 226	
FRO2/H - Wiring diagram.....	EC-233	
FRO2LH - Wiring diagram.....	EC-778, 802, 814	
FRO2RH - Wiring diagram	EC-777, 801, 813	
Front axle	AX-2	
Front bumper.....	BT-12	
Front case (Transfer)	TF-12, 25	
Front combination lamp removal and installation.....	BT-12	
Front disc brake.....	BR-24	
Front door.....	BT-18	
Front drive shaft (Transfer)	TF-13, 22	
Front final drive disassembly (4WD).....	PD-19, 45	
Front final drive pre-inspection (4WD).....	PD-19, 45	
Front final drive removal and installation (4WD).....	PD-18, 44	
Front fog lamp	EL-48	
Front fog lamp removal and installation.....	BT-12	
Front heated oxygen sensor (HO2S)	EC-191, 199, 206, 213, 224	
Front heated oxygen sensor (HO2S) (Left bank)	EC-774, 782, 790, 798, 811	
Front heated oxygen sensor (HO2S) (Right bank)	EC-774, 782, 790, 798, 811	
Front heated oxygen sensor (HO2S) heater	EC-231	
Front heated oxygen sensor heater (Left bank)	EC-819	
Front heated oxygen sensor heater (Right bank).....	EC-819	
Front oxygen sensor (O2S) monitor.....	EC-654	
Front passenger air bag	RS-12, 24	
Front seat	BT-42	
Front seat belt.....	RS-5	
Front suspension	SU-2	
Front washer	EL-105	
Front wiper	EL-105	
FUEL - Wiring diagram.....	EC-281, 289	
Fuel cut control (at no load & high engine speed)	EC-33, 613	
Fuel filler lid	BT-15	
Fuel filter.....	EC-40	
Fuel gauge	EL-65	
Fuel injection system.....	EC-279, 287	
Fuel injection system (Left bank)	EC-870, 878	GI
Fuel injection system (Right bank)	EC-870, 878	GI
Fuel injector	EC-562	MA
Fuel precautions	GI-7	EM
Fuel pressure check	EC-40, 620	LC
Fuel pressure regulator	EC-41, 621	LC
Fuel pressure release.....	EC-40, 620	LC
Fuel pump	EC-571, 1171	EC
Fuel pump and gauge.....	FE-7	FE
Fuel pump relay.....	EC-571	FE
Fuel system.....	FE-5	CL
Fuel tank temperature sensor	EC-294, 885	CL
Fuel tank vacuum relief valve	EC-35, 614	MT
FUELLH - Wiring diagram	EC-873, 881	AT
FUELRH - Wiring diagram	EC-872, 880	AT
Fuse.....	EL-15	TF
Fuse block	EL-271	PD
Fusible link	EL-15	PD
G		
Garage jack and safety stand.....	GI-46	AX
Gauges	EL-65	SU
Gear components (M/T)	MT-15, 49	BR
Generator.....	SC-23	ST
Generator - See Alternator	SC-23	RS
Generic scan tool (GST)	EC-90, 674	BT
Glass	BT-18	HA
Governor valve assembly.....	AT-94	SC
Grease.....	MA-13	EL
Ground distribution	EL-16	IDX
H		
Harness connector	EL-4	
Harness connector inspection	GI-21	
Harness layout	EL-239	
Hazard warning lamp	EL-52	
Headlamp	EL-32	
Headlining - See Roof trim.....	BT-33	
Heated oxygen sensor (HO2S) (front)	EC-191, 199, 206, 213, 224	
Heated oxygen sensor (HO2S) heater (front).....	EC-231	
Heated oxygen sensor (HO2S) heater (rear).....	EC-274	
Heated oxygen sensor (rear)	EC-236, 246, 256, 266	
Height (Dimensions)	GI-44	
HFC134a (R134a) system precaution.....	HA-3	
HFC134a (R134a) system service tools.....	HA-12	
HFC134a system service equipment precaution.....	HA-7	

ALPHABETICAL INDEX

High clutch.....	AT-99, 441
H/LAMP - Wiring diagram	EL-33
Hood.....	BT-12
Horn	EL-116
HORN - Wiring diagram	EL-116
How to erase DTC for OBD system.....	EC-69, 651
Hydraulic lash adjuster inspection	EM-96

I

IACV-AAC valve	EC-416, 1010
IACV-FICD solenoid valve	EC-582, 1182
IATS - Wiring diagram	EC-164, 747
Identification plate	GI-42
Idle air control (IAC) system.....	EC-416
Idle air control valve (IACV)	EC-416, 1010
Idle mixture ratio.....	EC-42, 624
Idle speed	EC-42, 624
IGN/SG - Wiring diagram	EC-451, 1048
Ignition control system.....	EC-449, 1046
Ignition timing	EC-42, 624
ILL - Wiring diagram.....	EL-58
Illumination	EL-57
INJECT - Wiring diagram	EC-563, 1163
Injector	EC-1162
Injector removal and installation.....	EC-41, 621
Instrument panel.....	BT-21
INT/L - Wiring diagram.....	EL-63
Intake air temperature sensor	EC-162, 745
Intake door control linkage adjustment	HA-47
Intake manifold.....	EM-13, 70
Interior	BT-25
Interior lamp	EL-60

J

Jacking points	GI-46
Joint connector (J/C)	EL-273
Journal bearing assembly (propeller shaft)	PD-10
Journal bearing disassembly (propeller shaft)	PD-9
Jump seat.....	BT-45
Junction box (J/B)	EL-271

K

Keyless entry system - See Multi-remote control system.....	EL-183
Knock sensor (KS)	EC-309, 310, 912
Knuckle spindle.....	AX-14
KS - Wiring diagram	EC-913

L

Leaf spring (rear)	SU-29
Length (Dimensions)	GI-44
License lamp	EL-45
Lifting points	GI-47
Limited slip diff. adjustment	PD-121
Limited slip diff. assembly	PD-123
Limited slip diff. disassembly	PD-119
Limited slip diff. inspection	PD-120
Line pressure solenoid valve	AT-286, 300, 305
Line pressure test (A/T)	AT-29, 211
Liquid gasket application.....	EM-5, 21
Location of electrical units.....	EL-236
Lock, door.....	BT-18
Low and reverse brake	AT-105, 447
LSV (Load sensing valve)	BR-14
Lubricant (R134a) A/C	HA-73
Lubricants	MA-13
Lubrication circuit (engine).....	LC-5, 20
Lubrication oil A/C.....	HA-73
Lubrication-locks, hinges and hood latches.....	MA-42
Luggage room lamp	EL-60

M

MAFS - Wiring diagram	EC-141, 728
Magnet clutch	HA-77
MAIN - Wiring diagram.....	EC-130, 718
Main drive gear (M/T)	MT-15, 49
Main gear (Transfer)	TF-13, 23
Mainshaft (M/T)	MT-15, 49
Mainshaft (Transfer)	TF-13, 20
Maintenance (engine)	MA-17, 26
MAJOR OVERHAUL	AT-65, 405
Major overhaul (Transfer)	TF-11
Malfunction indicator lamp (MIL)	EC-70, 653
Manual air conditioner - Wiring diagram	HA-22, 24, 28
Manual lock free running hub	AX-9
Manual transmission number.....	GI-43
Manual transmission oil replacement.....	MA-35
MAP/BARO switch solenoid valve	EC-431, 1031
Mass air flow sensor (MAFS)	EC-137, 724
Master cylinder (brake)	BR-18
Master cylinder (clutch)	CL-8
Meter	EL-65
METER - Wiring diagram	EL-70
MIL & Data link connectors circuit	EC-588, 1188
MIL/DL - Wiring diagram.....	EC-588, 1188
MIRROR - Wiring diagram	EL-127
Mirror, door	BT-52

ALPHABETICAL INDEX

Mirror, outside.....	BT-52
Misfire	EC-300, 903
Model variation.....	GI-40
Molding - See Exterior	BT-36
M/T major overhaul	MT-14, 48
M/T removal and installation	MT-10, 45
MULTI - Wiring diagram.....	EL-188
Multi-remote control system	EL-183
Multiport fuel injection (MFI) system.....	EC-29, 609
Multiport fuel injection precautions	GI-5

N

Neutral position switch.....	EC-541
NVH troubleshooting (AX)	AX-25
NVH troubleshooting (BR)	BR-7
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (EM)	EM-11, 68
NVH troubleshooting (M/T).....	MT-6, 40
NVH troubleshooting (PD)	PD-4
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-3

O

Oil change (capacity)	MA-13
Oil pan (engine)	EM-18, 74
Oil pressure (engine)	LC-6, 21
Oil pump (A/T)	AT-80, 420
Oil pump (engine)	LC-6, 21
Oil pump regulator valve (engine)	LC-7, 23
Oil seal replacement (engine).....	EM-28, 84
Oil seal replacement (front final drive 4WD)	PD-15, 41
Oil seal replacement (front of final drive).....	PD-112
On board diagnostic system.....	EC-56, 637
Operating cylinder (clutch)	CL-9
Outside mirror.....	BT-52
Overdrive control switch.....	AT-44, 390
Overrun clutch	AT-101, 443
Overrun clutch solenoid valve	AT-329
Oversize piston	EM-50, 109

P

Pantograph jack.....	GI-46
Park/Neutral position switch	EC-541, 1142
Park/neutral position switch (A/T)	AT-46, 242, 390
Park/neutral position switch (M/T).....	MT-9, 44
Parking brake control.....	BR-33
Parking lamp	EL-45

PCV (positive crankcase ventilation).....	EC-39, 619
PCV filter replacement	MA-24
PGC/V - Wiring diagram.....	EC-370, 490, 971, 1088
Pilot bushing replacement	EM-56, 115
Pinion bearing preload diff.	PD-26, 52
Pinion gear height diff.	PD-26, 52, 76, 97, 124
Piston assembly	EM-54, 113
Piston pin inspection	EM-47, 106
Piston ring inspection	EM-48, 106
Piston to bore clearance	EM-49, 108
PNP/SW - Wiring diagram.....	EC-544, 1144
POWER - Wiring diagram	EL-10
Power antenna	EL-126
Power door lock	EL-163
Power door mirror	EL-127
Power steering fluid level	MA-41, ST-7
Power steering gear	ST-14, 21
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch	EC-578, 1177
Power steering oil pump	ST-24
Power steering system bleeding	ST-8
Power supply routing.....	EL-8
Power transistor & ignition coil.....	EC-449, 1046
Power window	EL-155
PRE/SE - Wiring diagram.....	EC-386, 983
Precautions (General).....	GI-4
Pressure plate - See Clutch cover.....	CL-12
Pressure test (A/T)	AT-29, 211
Propeller shaft	PD-3, 5, 6
Propeller shaft greasing	MA-38
Propeller shaft inspection	MA-37
Propeller shaft on vehicle service	PD-7
Propeller shaft vibration	PD-7
PST/SW - Wiring diagram	EC-579, 1178

R

Radiator.....	LC-14, 32
Radiator fan - See Cooling fan.....	LC-16, 33
Radio - See Audio	EL-119
Rear air spoiler	BT-36
Rear axle	AX-23
Rear body	BT-53
Rear bumper	BT-15
Rear case (Transfer)	TF-12, 26
Rear combination lamp removal and installation	BT-36
Rear cover packing replacement diff.	PD-42, 89
Rear drum brake	BR-28
Rear heated oxygen sensor (HO2S).....	EC-236, 246, 256, 266, 825, 835, 845, 855

ALPHABETICAL INDEX

- Rear heated oxygen sensor (HO2S)
heater EC-274, 863
- Rear seat BT-45
- Rear seat belt RS-7
- Rear side window BT-49
- Rear suspension SU-25
- Rear window BT-50
- Refrigerant connection precaution HA-4
- Refrigerant discharging evacuating
charging HA-71
- Refrigerant general precaution HA-3
- Refrigerant lines HA-84
- Refrigeration cycle HA-15
- Release bearing (clutch) CL-10
- Removal and installation (A/T) AT-62, 402
- Removal and installation (Transfer) TF-10
- Reverse clutch AT-95, 437
- Reverse idler shaft (M/T) MT-15, 49
- Reverse lamp switch (M/T) - See Back-up
lamp switch (M/T) MT-9, 44
- Reverse main gear (M/T) MT-15, 49
- Revolution sensor (A/T) AT-254
- Ring gear diff. inspection PD-24, 49,
74, 95, 118
- RO2H-L - Wiring diagram EC-866
- RO2H-R - Wiring diagram EC-865
- Road wheel size GI-45
- Roof trim BT-33
- Room lamp - See Interior lamp EL-60
- RRO2 - Wiring diagram EC-239, 249,
259, 268
- RRO2/H - Wiring diagram EC-276
- RRO2LH - Wiring
diagram EC-829, 839, 849, 858
- RRO2RH - Wiring
diagram EC-828, 838, 848, 857
- S**
- SAE J1930 terminology list GI-51
- Seal - See Exterior BT-36
- Seat belt inspection MA-43, RS-9
- Seat belt pre-tensioner RS-12, 18
- Seat belt pre-tensioner disposal RS-28
- Seat belt, front RS-5
- Seat belt, rear RS-7
- Seat, front BT-42
- Seat, rear BT-45
- Self-diagnostic results EC-70, 654
- SHIFT - Wiring diagram AT-53, 393
- Shift control (Transfer) TF-14, 27
- Shift control components (M/T) MT-17, 51
- Shift fork (M/T) MT-17, 51
- Shift lever MT-17, 51
- Shift lock system AT-51, 392
- Shift schedule AT-135, 479
- Shift solenoid valve A
(A/T) AT-265, 277, 286, 310
- Shift solenoid valve B
(A/T) AT-265, 270, 286, 315
- Shock absorber (front) SU-14
- Shock absorber (rear) SU-28
- Side bearing preload (front final drive
4WD) PD-25, 50
- Side bearing preload diff. PD-75, 96
- Side shaft diff. PD-23, 48
- Side trim BT-25
- Smart entrance control unit EL-232
- SMJ (super multiple junction) EL-269
- Spare tire size GI-45
- Spark plug replacement MA-23, 32
- Speedometer EL-65
- Spiral cable RS-21
- Spot lamp EL-60
- SRS - See Supplemental Restraint
System RS-12
- SRS - Wiring diagram RS-40
- SRS Trouble diagnoses RS-34
- S/SIG - Wiring diagram EC-568, 1168
- Stabilizer bar (front) SU-17
- Stabilizer bar (rear) SU-30
- Stall test (A/T) AT-26, 208
- Standardized relay EL-6
- START - Wiring diagram SC-11
- Start signal EC-567, 1167
- Starter SC-15
- Starting system SC-7
- Steering gear, linkage and transfer gear
inspection MA-41
- Steering linkage ST-27
- Steering switch EL-31
- Steering wheel and column ST-10
- Steering wheel play ST-6
- Steering wheel turning force ST-8
- Stop lamp EL-46
- STOP/L - Wiring diagram EL-46
- Striking rod (M/T) MT-17, 51
- Sub-gear (M/T) MT-15, 49
- Sunroof BT-47
- Supplemental Restraint System RS-12
- Supplemental restraint system - Wiring
diagram RS-40
- SW/V - Wiring diagram EC-434, 1034
- Symbols and abbreviations GI-10
- Symptom matrix chart EC-112, 699
- Synchronizer (M/T) MT-15, 49
- System readiness test (SRT)
code EC-58, 639
- T**
- Tachometer EL-65
- Tail lamp EL-45

ALPHABETICAL INDEX

TAIL/L - Wiring diagram	EL-45
TCM circuit diagram	AT-150
TCM inspection table.....	AT-231
TFTS - Wiring diagram.....	EC-296, 887
THEFT - Wiring diagram	EL-211
Theft warning system.....	EL-205
Thermostat.....	LC-13, 30
Three way catalyst.....	EC-347
Three way catalyst function (Left bank)	EC-951
Three way catalyst function (Right bank)	EC-951
Three way catalyst precautions	GI-6
Throttle bodies	EM-13, 70
Throttle chambers	EM-13, 70
Throttle drum adjustment.....	FE-3
Throttle position sensor (TPS)	EC-173, 755
Throttle position sensor adjustment.....	EC-96, 680
Throttle position switch	AT-324, 391, EC-422, 1016
Throwout bearing - See Clutch release bearing.....	CL-10
Thrust washer selection diff.	PD-37, 85
Tie-rod	ST-27
Tie-rod ball joints	ST-27
Tightening torque of standard bolts	GI-50
Timing belt.....	EM-77
Timing chain	EM-20
Tire rotation	MA-39
Tire size	GI-45
Tooth contact (front final drive 4WD)	PD-31, 57
Tooth contact diff.	PD-80, 101, 128
Torque converter installation	AT-64, 403
Torque converter clutch solenoid valve	AT-41, 291, 300
Torsion bar spring	SU-15
Tow truck towing	GI-47
Towing point.....	GI-49
TP/SW - Wiring diagram	EC-424, 1018
TPS - Wiring diagram.....	EC-178, 760
Transfer case	TF-12
Transfer oil replacement	MA-37
Transfer serial number.....	GI-43
Transmission case (M/T).....	MT-14, 48
Transmission serial number	GI-43, 44
Tread-FR&RR (Dimensions)	GI-44
Trim	BT-25
Trouble diagnoses	GI-34
TURN - Wiring diagram.....	EL-54
Turn signal lamp.....	EL-52
Two trip detection logic.....	EC-56, 637
Two-pole lift.....	GI-47

U

Under body.....	BT-57
-----------------	-------

V

Vacuum cut valve	EC-613
Vacuum cut valve bypass valve.....	EC-523, 530, 613, 1124, 1130
Vacuum hose (brake system).....	BR-23
Vacuum hose drawing (Engine control)	EC-27, 607
Valve clearance	EM-40, 117
Valve guide.....	EM-35, 92
Valve lifter.....	EM-39
Valve seat.....	EM-37, 93
Valve spring.....	EM-39, 95
Vehicle identification number	GI-42
Vehicle recovery (freeing a stuck vehicle)	GI-49
Vehicle speed sensor (VSS)	EC-412, 1006
VENT/V - Wiring diagram	EC-377, 977, 1099, 1119
Viscosity number (SAE)	MA-15
VSS - Wiring diagram.....	EC-414, 1008

W

WARN - Wiring diagram.....	EL-81
Warning chime	EL-91
Warning lamps	EL-80
Washer, front	EL-105
Water pump	LC-12, 29
Water temperature gauge	EL-65
Weatherstrip - See Exterior.....	BT-36
Wheel alignment (front)	SU-7
Wheel balance.....	MA-39
Wheel bearing (front)	AX-4
Wheel bearing (rear).....	AX-26
Wheel hub (front)	AX-12
Wheel sensors (ABS)	BR-94
Wheel size	GI-45
Wheelbase (Dimensions).....	GI-44
Wide open & closed throttle position switch	EC-173, 755
Width (Dimensions).....	GI-44
WINDOW - Wiring diagram.....	EL-158
Window, back	BT-36, 50
Window, door.....	BT-18
Window, opera.....	BT-53
Window, rear	BT-50
Windshield	BT-48
WIPER - Wiring diagram.....	EL-108
Wiper, front	EL-105

ALPHABETICAL INDEX

- Wiring Diagram (Cell code) listEL-267
Wiring diagramsGI-11
Withdrawal lever (clutch).....CL-10
Wrist pin - See Piston pin
 inspection.....EM-47, 106