

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-437, 1020, 1600
ABS - Wiring diagramBR-47, 80, 120
ABS sensor rotorAX-13
Absolute pressure sensor.....EC-177
A/C air flowHA-19
A/C component layoutHA-20
A/C compressor clutch removal
and installationHA-70
A/C compressor descriptionHA-17
A/C compressor precautionHA-8
A/C compressor special
service tool.....HA-12, 16
A/C control linkage adjustment
(manual A/C)HA-42
A/C control operation
(manual A/C)HA-18
A/C diagnostic work flow
(manual A/C)HA-28
A/C HFC134a (R134a)
system precautionHA-3
A/C HFC134a (R134a)
system service tools.....HA-13
A/C HFC134a system service
equipment precaution.....HA-8
A/C lubricant (R134a)HA-66
A/C lubrication oil.....HA-66
A/C operational checkHA-29
A/C pressure switch.....HA-51
A/C relayHA-51
A/C service data specificationHA-87
A/C switch.....HA-18
A/C symptom chart (manual A/C).....HA-28
A/C trouble diagnoses (manual A/C).....HA-21
A/C, M - Wiring diagram.....HA-26
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Air bagRS-12, 19
Air bag disposalRS-27
Air bag precautionsGI-3
Air bleeding (hydraulic clutch).....CL-7
Air bleeding for brake system.....BR-11
Air cleaner filter replacement.....MA-21, 32
Air conditioner cut controlEC-39, 637, 1209
Air flow meter - See Mass
air flow sensorEC-167, 772, 1345
Air spoiler, rearBT-35
AlternatorSC-38
Antenna - See Power antenna.....EL-153
Anti-lock brake system - Wiring
diagramBR-47, 80, 120
ASCD (automatic speed control
device)EL-155
ASCD - Wiring diagram.....EL-160
A/T - Wiring diagramAT-10
A/T - Wiring diagram - AT - FTSAT-254

A/T - Wiring diagram -
AT - MAINAT-243
A/T - Wiring diagram -
AT - PNP/SWAT-248
A/T - Wiring diagram -
AT - VSS A/T.....AT-260
A/T controlEC-1030, 1610
A/T diagnosis communication
lineEC-1137, 1717
A/T fluid temperature sensorAT-257
A/T shift lock systemAT-53, 403
A/T shift lock system - Wiring
diagramAT-55, 404
A/T trouble diagnosesAT-27
A/T Wiring diagram - AT - ENG SS.....AT-264
A/T Wiring diagram AT - 1STAT-270
A/T Wiring diagram AT - 2ND.....AT-276
A/T Wiring diagram AT - 3RD.....AT-282
A/T Wiring diagram AT - 4THAT-289
A/T Wiring diagram AT - BA/FTSAT-338
A/T Wiring diagram AT - LPSV.....AT-309
A/T Wiring diagram AT - NONDTCAT-355
A/T Wiring diagram AT - OVRCSV.....AT-333
A/T Wiring diagram AT - SSV/AAT-314
A/T Wiring diagram AT - SSV/BAT-319
A/T Wiring diagram AT - TCCSIGAT-302
A/T Wiring diagram AT - TCV.....AT-296
A/T Wiring diagram AT - TPS.....AT-325
A/T Wiring diagram
AT - VSSMTRAT-344
AT/C - Wiring diagram.....EC-1032, 1612
ATDIAG - Wiring diagram.....EC-1138, 1718
AudioEL-138
AUDIO - Wiring diagramEL-141
Audio and A/C control removal and
installation - See Instrument panel.....BT-20
Auto lock free running hubAX-10
Automatic speed control system -
See ASCD.....EL-155
Automatic transmission fluid
replacementMA-39
Automatic transmission numberGI-44
Auxiliary air control (AAC)
valve.....EC-434, 1017, 1597

B

Back doorBT-15
Back door opener - See Back doorBT-15
Back windowBT-35, 47
Back-up lampEL-50
Back-up lamp switch (M/T).....MT-8, 40
BACK/L - Wiring diagramEL-50
Ball joint (front)SU-20
Basic inspectionEC-111, 712, 1284
Battery.....SC-4

ALPHABETICAL INDEX

Battery/Starting/Charging		
System Tester	SC-7, 18, 31	
Baulk ring (M/T).....	MT-12, 45	
Blower motor.....	HA-37	
Blower resistor.....	HA-37	
Body alignment.....	BT-51	
Body mounting	BT-50	
Boring/horning cylinder block.....	EM-47, 118	
Brake booster	BR-22	
Brake control valve		
(Proportioning valve).....	BR-14	
Brake fluid change.....	BR-9	
Brake fluid level.....	MA-43	
Brake fluid level and line check.....	BR-9	
Brake hydraulic line	BR-12	
Brake inspection.....	MA-43	
Brake lines and cables inspection	MA-43	
Brake master cylinder.....	BR-19	
Brake pedal.....	BR-17	
Bulb specifications.....	EL-275	
Bumper, front.....	BT-12	
Bumper, rear.....	BT-15	
BYPS/V - Wiring diagram.....	EC-540, 548, 1124, 1131, 1704, 1711	
C		
Camshaft inspection.....	EM-32, 95	
Camshaft position sensor		
(CMPS)	EC-299, 912, 1492	
Canister-See EVAP		
canister	EC-40, 638, 1210	
Center bearing assembly		
(propeller shaft)	PD-11	
Center bearing disassembly		
(propeller shaft).....	PD-10	
Center case (Transfer)	TF-11	
CHARGE - Wiring diagram.....	SC-29	
Charging system.....	SC-28	
Chassis and body maintenance.....	MA-38	
CHIME - Wiring diagram	EL-107	
CIGAR - Wiring diagram	EL-125	
Cigarette lighter.....	EL-125	
Circuit breaker.....	EL-17	
CKPS - Wiring diagram.....	EC-295, 492, 908, 1084, 1488, 1664	
Closed loop control.....	EC-483	
Closed loop control		
(Left bank).....	EC-1075, 1655	
Closed loop control		
(Right bank)	EC-1075, 1655	
Closed throttle position		
switch.....	EC-440, 1023, 1603	
Clutch cover.....	CL-12, 13	
Clutch disc.....	CL-12	
Clutch fluid level.....	MA-38	
Clutch master cylinder	CL-8	
Clutch operating cylinder	CL-9	
Clutch pedal.....	CL-5, 6	
Clutch release bearing.....	CL-10	GI
Clutch release mechanism.....	CL-10	
Clutch withdrawal lever.....	CL-10	
CMPS - Wiring diagram	EC-302, 915, 1495	MA
Collision diagnosis.....	RS-61	
Combination lamp, front, removal		
and installation.....	BT-12	EM
Combination lamp, rear, removal		
and installation.....	BT-35	LC
Combination meter	EL-74	
Combination meter removal and		
installation - See Instrument panel.....	BT-20	EC
Combination switch	EL-32	
COMPAS - Wiring diagram	EL-90	FE
Compass	EL-89	
Component Location (manual A/C)	HA-21	
Compression pressure.....	EM-15, 77	CL
Compressor clutch removal and		
installation	HA-70	
Compressor description.....	HA-17	MT
Compressor precaution	HA-8	
Compressor special service tool	HA-12, 16	AT
Connecting rod.....	EM-46, 117	
Connecting rod bearing		
clearance	EM-50, 122	TF
Connecting rod bushing		
clearance	EM-51, 122	
Connector inspection	GI-20	PD
Console box - See Instrument		
panel	BT-20	
CONSULT for ABS	BR-85, 126	AX
CONSULT for engine	EC-94, 694, 1265	
CONSULT-II general		
information.....	GI-38	SU
Control lever (M/T)	MT-13, 47	
Control valve (A/T)	AT-87, 437	BR
Converter housing installation.....	AT-66, 416	
Coolant mixture ratio	MA-15	
Coolant replacement.....	MA-17, 28	ST
Cooling circuit (engine).....	LC-10, 27	
Cooling fan.....	LC-16, 34	
Cooling fan control	EC-485, 1077, 1657	RS
Cooling unit (A/C		
evaporator).....	HA-85	
Counter gear (M/T).....	MT-12, 45	BT
Counter gear (Transfer)	TF-12, 22	
Coupling sleeve (M/T)	MT-12, 45	
Crank angle sensor built into distributor -		
See Camshaft position sensor.....	EC-299, 912, 1492	HA
Crankcase emission control system -		
See positive crankcase ventilation.....	EC-55, 654, 1226	SC
Crankcase ventilation system - See		
Positive crankcase ventilation.....	EC-55	EL
Crankshaft	EM-48, 119	

ALPHABETICAL INDEX

Crankshaft position sensor (OBD).....EC-293,
490, 906, 1486
Crankshaft position sensor
(OBD) cog chipping.....EC-490, 1082, 1662
Cruise control - See ASCD.....EL-155
Cylinder block.....EM-44, 114
Cylinder block boring.....EM-47, 119
Cylinder head.....EM-29, 91
Cylinder head bolt tightening.....EM-104

D

Data link connector for
Consult.....EC-57, 694, 1265
Daytime light system.....EL-40
Daytime running light - See Daytime
light system.....EL-40
DEF - Wiring diagram.....EL-129
Detonation sensor - See
Knock sensor.....EC-289, 902, 1482
Diagnosis sensor unit.....RS-17
Diagnostic trouble code (DTC)
for OBD system.....EC-18, 613,
673, 1185, 1244
Diagnostic trouble code (DTC)
inspection priority chart.....EC-125, 726, 1299
Differential carrier assembly.....PD-34, 59, 87
Differential carrier disassembly.....PD-48, 72
Differential gear oil replacement.....MA-42
Dimensions.....GI-44
Distributor.....EC-37, 636, 1208
Distributor ignition (DI)
system.....EC-37, 636, 1208
D/LOCK - Wiring diagram.....EL-190
Dome light - See Interior lamp.....EL-64
Door glass.....BT-18
Door glass Fitting Adjustment.....BT-18
Door lock.....BT-18
Door mirror.....BT-49
Door trim.....BT-30
Door, front.....BT-18
Drive belt inspection.....MA-16, 26
Drive chain (Transfer).....TF-12
Drive pinion diff. inspection.....PD-26, 51, 75
Drive pinion height.....PD-28, 53, 82
Drive plate runout.....EM-52, 123
Drive shaft (front).....AX-16
Dropping resistor (A/T).....AT-311
DTC work support.....EC-103, 704, 1275
DTRL - Wiring diagram.....EL-43

E

ECM input/output signal.....EC-136, 737, 1310
ECTS - Wiring diagram.....EC-186, 205, 788,
806, 1361, 1379

EGR control (EGRC) - BPT valve.....EC-319
EGR control (EGRC) - solenoid valve.....EC-496
EGR temperature sensor.....EC-327
EGR/TS - Wiring diagram.....EC-330
EGRC/V - Wiring diagram.....EC-498
EGRC1 - Wiring diagram.....EC-311, 506
Electrical diagnoses.....GI-23
Electrical ignition system.....EC-37, 636, 1208
Electrical unit.....EL-283
Electrical units location.....EL-245
Electronic ignition (EI) system.....EC-37
Engine compartment.....BT-52
Engine control circuit
diagram.....EC-31, 630, 1202
Engine control component
parts location.....EC-29, 628, 1200
Engine control module
(ECM).....EC-447, 1035, 1615
Engine control system
diagram and chart.....EC-32, 631, 1203
Engine coolant temperature sensor
(ECTS).....EC-184, 203, 786,
804, 1359, 1377
Engine fail-safe system.....EC-126, 727, 1300
Engine oil filter replacement.....MA-22, 33
Engine oil precautions.....GI-7
Engine oil replacement.....MA-21, 32
Engine outer component parts.....EM-12, 74
Engine removal.....EM-41, 111
Engine room - See Engine
compartment.....BT-52
Engine serial number.....GI-43
EVAP canister.....EC-40, 639, 1211
EVAP canister purge volume
control solenoid valve.....EC-511, 638, 950,
1091, 1210, 1530, 1671
EVAP canister purge volume control
valve.....EC-366, 511
EVAP canister vent control
valve.....EC-373, 522, 528,
957, 1103, 1110, 1537, 1683, 1690
EVAP control system (small leak)
diagnosis.....EC-42, 350, 405,
936, 987, 1089, 1516, 1567, 1669
EVAP control system pressure
sensor.....EC-380, 963, 1543
EVAP control system purge flow
monitoring diagnosis.....EC-339, 924, 1504
EVAP system close mode.....EC-42
EVAP vapor lines inspection.....MA-23, 36
Evaporative emission (EVAP)
system.....EC-40, 638, 1210
Exhaust gas recirculation
(EGR) valve.....EC-307, 503
Exhaust system.....FE-8
Exterior.....BT-35

ALPHABETICAL INDEX

F

Fan switch.....HA-36
 Fast idle cam (FIC) inspection
 and adjustmentEC-659, 1230
 F/FOG - Wiring diagram.....EL-52
 FICD - Wiring diagramEC-605, 1177, 1757
 Final drive disassemblyPD-47, 71
 Final drive pre-inspectionPD-47, 71
 Final drive removal and installation.....PD-47, 71
 Finisher, interior - See Trim.....BT-24
 Floor trimBT-24
 Flow charts.....GI-23
 Fluid temperature sensor (A/T)AT-257
 FluidsMA-13
 Flywheel (clutch)CL-12, 13
 Flywheel runout.....EM-52, 123
 Fog lamp, front.....EL-51
 Fog lamp, front, removal and
 installationBT-12
 Fork rod (M/T)MT-13, 47
 Forward clutch.....AT-104, 456
 F/PUMP - Wiring
 diagramEC-594, 1166, 1746
 Freeze frame data.....EC-74, 673, 1244
 FRO2 - Wiring diagramEC-212, 220, 232
 FRO2/H - Wiring diagram.....EC-159
 Front axleAX-2
 Front bumper.....BT-12
 Front case (Transfer).....TF-11, 24
 Front combination lamp removal
 and installationBT-12
 Front disc brake.....BR-26
 Front door.....BT-18
 Front drive shaft (Transfer)TF-12, 21
 Front final drive disassembly (4WD)PD-21
 Front final drive pre-inspection (4WD)PD-21
 Front final drive removal and
 installation (4WD).....PD-20
 Front fog lamp.....EL-51
 Front fog lamp removal and installation.....BT-12
 Front heated oxygen sensor
 (HO2S)EC-210, 217, 228, 449, 456
 Front heated oxygen sensor
 (HO2S) (Left bank)EC-811, 819, 833,
 1037, 1046, 1385, 1393, 1407, 1617, 1626
 Front heated oxygen sensor
 (HO2S) (Right bank)EC-811, 819, 833,
 1037, 1046, 1385, 1393, 1407, 1617, 1626
 Front heated oxygen sensor
 (HO2S) heater.....EC-157
 Front heated oxygen sensor
 heater (Left bank)EC-757, 1330
 Front heated oxygen sensor
 heater (Right bank)EC-757, 1330
 Front oxygen sensor (O2S)
 monitorEC-688, 1258

Front passenger air bag.....RS-12, 22
 Front seatBT-41
 Front seat belt.....RS-5
 Front suspensionSU-2
 Front washer.....EL-118
 Front wiper.....EL-118
 FUEL - Wiring diagram.....EC-256, 263
 Fuel cut control (at no load &
 high engine speed)EC-39, 638, 1210
 Fuel filler lid.....BT-15
 Fuel filterEC-57
 Fuel gaugeEL-74
 Fuel injection system.....EC-254, 261
 Fuel injection system
 (Left bank)EC-864, 873, 1438, 1447
 Fuel injection system
 (Right bank)EC-864, 873, 1438, 1447
 Fuel injectorEC-583
 Fuel precautionsGI-7
 Fuel pressure check.....EC-57, 656, 1228
 Fuel pressure regulatorEC-58, 657, 1229
 Fuel pressure releaseEC-57, 656, 1228
 Fuel pump.....EC-592, 1164, 1744
 Fuel pump and gauge.....FE-7
 Fuel pump relayEC-592
 Fuel system.....FE-4
 Fuel tank temperature
 sensorEC-268, 881, 1455
 Fuel tank vacuum relief
 valve.....EC-41, 639, 1211
 Fuse.....EL-17
 Fuse block.....EL-280
 Fusible linkEL-17

G

Garage jack and safety stand.....GI-46
 Gauges.....EL-74
 Gear components (M/T)MT-12, 45
 Generator.....SC-38
 Generator - See AlternatorSC-38
 Generic scan tool (GST)EC-105, 706, 1278
 GlassBT-18
 Governor valve assembly.....AT-97
 Grease.....MA-13

H

Harness connectorEL-6
 Harness connector inspectionGI-20
 Harness layoutEL-248
 Hazard warning lampEL-55
 HeadlampEL-35
 Headlining - See Roof trim.....BT-32
 Heated oxygen sensor
 (HO2S) (front).....EC-210, 217, 228, 449, 456

ALPHABETICAL INDEX

Heated oxygen sensor (HO2S)
 heater (front)EC-157
 Heated oxygen sensor (HO2S)
 heater (rear)EC-162
 Heated oxygen sensor
 (rear)EC-236, 244, 463, 473
 HEATER - Wiring diagram.....HA-25
 Heater system - Wiring diagram.....HA-25
 Heater unit (heater core)HA-84
 Height (Dimensions)GI-44
 HFC134a (R134a) system precaution.....HA-3
 HFC134a (R134a) system service
 tools.....HA-13
 HFC134a system service equipment
 precaution.....HA-8
 High clutch.....AT-102, 454
 H/LAMP - Wiring diagramEL-36
 HoodBT-12
 Horn.....EL-124
 HORN - Wiring diagramEL-124
 How to erase DTC for OBD
 system.....EC-87, 686, 1257
 Hydraulic lash adjuster inspectionEM-101

I

IACV-AAC valveEC-434, 1017, 1597
 IACV-FICD solenoid
 valve.....EC-604, 1176, 1756
 IATS - Wiring diagram.....EC-181, 783, 1356
 Identification.....HA-4
 Identification plateGI-42
 Idle air control (IAC) system.....EC-434
 Idle air control valve
 (IACV)EC-434, 1017, 1597
 Idle mixture ratio.....EC-59, 660, 1231
 Idle speed.....EC-59, 660, 1231
 IGN/SG - Wiring diagramEC-576, 1150, 1730
 Ignition control system.....EC-574, 1149, 1729
 Ignition timingEC-59, 660, 1231
 ILL - Wiring diagram.....EL-62
 IlluminationEL-61
 INJECT - Wiring diagramEC-584, 1156, 1736
 InjectorEC-1155, 1735
 Injector removal and
 installation.....EC-58, 657, 1229
 Instrument panel.....BT-20
 Intake air temperature
 sensorEC-179, 781, 1354
 Intake door control linkage
 adjustment.....HA-42
 Intake manifold.....EM-12, 74
 InteriorBT-24
 Interior lampEL-64

J

Jacking pointsGI-46
 Joint connector (J/C).....EL-282
 Journal bearing assembly
 (propeller shaft)PD-12
 Journal bearing disassembly
 (propeller shaft)PD-10
 Jump seat.....BT-42
 Junction box (J/B)EL-280

K

Keyless entry system - See Multi-remote
 control system.....EL-200
 Knock sensor (KS)EC-289, 290, 902, 1482
 Knuckle spindle.....AX-14
 KS - Wiring diagramEC-903, 1483

L

Leaf spring (rear)SU-29
 Length (Dimensions).....GI-44
 License lampEL-48
 Lifting points.....GI-47
 Limited slip diff. adjustmentPD-79
 Limited slip diff. assemblyPD-80
 Limited slip diff. disassemblyPD-76
 Limited slip diff. inspectionPD-78
 Line pressure solenoid
 valve.....AT-293, 306, 311
 Line pressure test (A/T)AT-30, 205
 Liquid gasket application.....EM-19
 Location of electrical units.....EL-245
 Lock, door.....BT-18
 Low and reverse brakeAT-108, 460
 LSV (Load sensing valve)BR-15
 Lubricant (R134a) A/CHA-66
 LubricantsMA-13
 Lubrication circuit (engine).....LC-5, 20
 Lubrication oil A/C.....HA-66
 Lubrication-locks, hinges and
 hood latchesMA-47
 Luggage room lampEL-64

M

MAFS - Wiring diagram.....EC-171, 776, 1349
 Magnet clutchHA-70
 MAIN - Wiring diagram.....EC-150, 751, 1324
 Main drive gear (M/T).....MT-12, 45
 Main gear (Transfer)TF-12, 22
 Mainshaft (M/T)MT-12, 45

ALPHABETICAL INDEX

Mainshaft (Transfer).....TF-12, 19
 Maintenance (engine)MA-16, 26
 MAJOR OVERHALL.....AT-68, 418
 Major overhaul (Transfer).....TF-10
 Malfunction indicator lamp
 (MIL).....EC-88, 687, 1258
 Manual air conditioner -
 Wiring diagramHA-26
 Manual transmission number.....GI-43
 Manual transmission oil replacement.....MA-38
 Mass air flow sensor
 (MAFS).....EC-167, 772, 1345
 Master cylinder (brake).....BR-19
 Master cylinder (clutch).....CL-8
 MeterEL-74
 METER - Wiring diagramEL-79
 MIL & Data link connectors
 circuit.....EC-610, 1182, 1762
 MIL/DL - Wiring diagramEC-610, 1182, 1762
 MIRROR - Wiring diagramEL-154
 Mirror defogger.....EL-126
 Mirror, doorBT-49
 Mirror, out sideBT-49
 MisfireEC-280, 893, 1473
 Mode door control linkage
 adjustment.....HA-39
 Model variation.....GI-40
 Molding - See ExteriorBT-35
 M/T major overhaul.....MT-11, 44
 M/T removal and installationMT-9, 41
 MULTI - Wiring diagramEL-204
 Multi-remote control system.....EL-200
 Multiport fuel injection (MFI)
 system.....EC-35, 634, 1206
 Multiport fuel injection precautionsGI-5

N

Neutral position switch.....EC-555
 NVH troubleshooting (AX)AX-4, 27
 NVH troubleshooting (BR)BR-8
 NVH troubleshooting (CL).....CL-4
 NVH troubleshooting (EM).....EM-10, 72
 NVH troubleshooting (M/T).....MT-6, 36
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-3

O

Oil change (capacity)MA-13
 Oil pan (engine)EM-16, 79
 Oil pressure (engine)LC-6, 21
 Oil pump (A/T).....AT-83, 433
 Oil pump (engine)LC-6, 21
 Oil pump regulator valve (engine)LC-7, 23

Oil seal replacement (engine).....EM-26, 89
 Oil seal replacement (front final
 drive 4WD)PD-17 GI
 Oil seal replacement (front of final
 drive)PD-45, 69 MA
 On board diagnostic
 system.....EC-73, 672, 1243 EM
 Operating cylinder (clutch)CL-9 EM
 ORVR (On-board Refueling
 Vapor Recovery)EC-45, 644, 1216 LC
 Out side mirrorBT-49 LC
 Overdrive control switchAT-46, 400
 Overrun clutchAT-104, 456 EC
 Overrun clutch solenoid valveAT-335 EC
 Oversize piston.....EM-48, 119 FE

P

Pantograph jackGI-46 CL
 Park/Neutral position
 switchEC-555, 1140, 1720 MT
 Park/neutral position
 switch (A/T).....AT-48, 250, 401 AT
 Park/neutral position
 switch (M/T)MT-8, 40 TF
 Parking brake control.....BR-35 TF
 Parking lampEL-48 PD
 PCV (positive crankcase
 ventilation).....EC-55, 654, 1226 AX
 PCV filter replacementMA-24 AX
 PGC/V - Wiring diagramEC-369, 514, 953,
 1094, 1533, 1674 SU
 Pilot bushing replacement.....EM-54, 125 BR
 Pinion bearing preload diff.....PD-28 ST
 Pinion gear height diff.PD-28, 53, 82 SU
 Piston assemblyEM-52, 123 BR
 Piston pin inspectionEM-45, 116 BR
 Piston ring inspectionEM-46, 116 ST
 Piston to bore clearanceEM-47, 118 ST
 PNP/SW - Wiring
 diagramEC-558, 1143, 1723 RS
 POWER - Wiring diagramEL-12 RS
 Power antennaEL-153 BT
 Power door lockEL-186 BT
 Power door mirrorEL-154 HA
 Power steering fluid levelMA-45, ST-8 HA
 Power steering gearST-15 SC
 Power steering hydraulic pressure.....ST-9 SC
 Power steering oil pressure
 switchEC-600, 1171, 1751 EL
 Power steering oil pumpST-18 EL
 Power steering system bleeding.....ST-8 EL
 Power supply routing.....EL-10 EL
 Power transistor & ignition
 coil.....EC-574, 1149, 1729 EL
 Power windowEL-176 EL
 PRE/SE - Wiring diagramEC-383, 965, 1545 EL

ALPHABETICAL INDEX

Precautions for Leak detection dye.....HA-4
 Precautions (General).....GI-4
 Pressure plate - See Clutch cover.....CL-12
 Pressure test (A/T).....AT-30, 205
 Propeller shaft.....PD-3, 5, 6
 Propeller shaft greasing.....MA-41
 Propeller shaft inspection.....MA-41
 Propeller shaft on vehicle service.....PD-8
 Propeller shaft vibration.....PD-8
 PST/SW - Wiring
 diagram.....EC-601, 1172, 1752

R

Radiator.....LC-14, 32
 Radiator fan - See Cooling fan.....LC-16, 34
 Radio - See Audio.....EL-138
 Rear air spoiler.....BT-35
 Rear axle.....AX-25
 Rear body.....BT-50
 Rear bumper.....BT-15
 Rear case (Transfer).....TF-11, 25
 Rear combination lamp removal
 and installation.....BT-35
 Rear cover packing replacement
 diff.PD-18, 45
 Rear drum brake.....BR-30
 Rear heated oxygen
 sensor (HO2S).....EC-236, 244, 463, 473,
 844, 854, 1055, 1065, 1418, 1428, 1635,
 1645
 Rear heated oxygen sensor
 (HO2S) heater.....EC-162, 764, 1337
 Rear seat.....BT-42
 Rear seat belt.....RS-6
 Rear side window.....BT-46
 Rear suspension.....SU-24
 Rear window.....BT-47
 Rear window defogger.....EL-126
 Refrigerant connection precaution.....HA-4
 Refrigerant discharging evacuating
 charging.....HA-64
 Refrigerant general precaution.....HA-3
 Refrigerant lines.....HA-77
 Refrigeration cycle.....HA-17
 Release bearing (clutch).....CL-10
 Removal and installation (A/T).....AT-64, 414
 Removal and installation (Transfer).....TF-9
 Reverse clutch.....AT-98, 450
 Reverse idler shaft (M/T).....MT-12, 45
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T).....MT-8, 40
 Reverse main gear (M/T).....MT-12, 45
 Revolution sensor (A/T).....AT-262
 Ring gear diff. inspection.....PD-26, 51, 75
 Road wheel size.....GI-45
 Roof trim.....BT-32

Room lamp - See Interior lamp.....EL-64
 ROOM/L - Wiring diagram.....EL-68
 RRO2 - Wiring
 diagram.....EC-238, 247, 466, 476
 RRO2/H - Wiring
 diagram.....EC-164

S

SAE J1930 terminology list.....GI-52
 S/CHGR - Wiring diagram.....EC-1470
 Seal - See Exterior.....BT-35
 Seat belt inspection.....MA-48, RS-8
 Seat belt pre-tensioner.....RS-12, 17
 Seat belt pre-tensioner disposal.....RS-27
 Seat belt, front.....RS-5
 Seat belt, rear.....RS-6
 Seat, front.....BT-41
 Seat, rear.....BT-42
 Self-diagnostic results.....EC-88, 688, 1258
 SHIFT - Wiring diagram.....AT-55, 404
 Shift control (Transfer).....TF-13, 26
 Shift control components (M/T).....MT-13, 47
 Shift fork (M/T).....MT-13, 47
 Shift lever.....MT-13, 47
 Shift lock system.....AT-53, 403
 Shift schedule.....AT-138, 492
 Shift solenoid valve A
 (A/T).....AT-272, 284, 293, 316
 Shift solenoid valve B
 (A/T).....AT-272, 277, 293, 321
 Shock absorber (front).....SU-14
 Shock absorber (rear).....SU-28
 Side bearing preload (front final
 drive 4WD).....PD-27
 Side bearing preload diff.PD-52
 Side shaft diff.PD-25
 Side trim.....BT-24
 Smart entrance control unit.....EL-240
 SMJ (super multiple junction).....EL-278
 Spare tire size.....GI-45
 Spark plug replacement.....MA-22, 34
 Speedometer.....EL-74
 Spiral cable.....RS-19
 Spot lamp.....EL-64
 SRS - See Supplemental
 Restraint System.....RS-12
 S/SIG - Wiring diagram.....EC-589, 1161, 1741
 Stabilizer bar (front).....SU-17
 Stabilizer bar (rear).....SU-30
 Stall test (A/T).....AT-27, 202
 Standardized relay.....EL-8
 START - Wiring diagram.....SC-14
 Start signal.....EC-588, 1160, 1740
 Starter.....SC-25
 Starting system.....SC-10

ALPHABETICAL INDEX

Steering gear, linkage and transfer gear inspection.....	MA-44
Steering linkage.....	ST-21
Steering switch.....	EL-34
Steering wheel and column.....	ST-11
Steering wheel play.....	ST-6
Steering wheel turning force.....	ST-9
Stop lamp.....	EL-49
STOP/L - Wiring diagram.....	EL-49
Striking rod (M/T).....	MT-13, 47
Sub-gear (M/T).....	MT-12, 45
Sunroof.....	BT-44
Supercharger.....	EC-1467
Supercharger bypass (SCB) valve control solenoid valve.....	EC-1467
Supplemental Restraint System.....	RS-12
Symbols and abbreviations.....	GI-10
Symptom matrix chart.....	EC-127, 728, 1301
Synchronizer (M/T).....	MT-12, 45
System readiness test (SRT) code.....	EC-75, 674, 1245

T

Tachometer.....	EL-74
Tail lamp.....	EL-48
TAIL/L - Wiring diagram.....	EL-48
TCM circuit diagram.....	AT-153
TCM inspection table.....	AT-239
Temperature control cable and linkage adjustment.....	HA-62
THEFT - Wiring diagram.....	EL-223
Theft warning system.....	EL-217
Thermal protector.....	HA-51
Thermo control amp.....	HA-52
Thermometer.....	EL-89
Thermostat.....	LC-13, 31
Three way catalyst.....	EC-334
Three way catalyst function (Left bank).....	EC-919, 1499
Three way catalyst function (Right bank).....	EC-919, 1499
Three way catalyst precautions.....	GI-6
Throttle bodies.....	EM-12, 74
Throttle chambers.....	EM-12, 74
Throttle drum adjustment.....	FE-3
Throttle position sensor (TPS).....	EC-189, 791, 1364
Throttle position sensor adjustment.....	EC-111, 712, 1284
Throttle position switch.....	AT-330, 401, EC-440, 1023, 1603
Throwout bearing - See Clutch release bearing.....	CL-10
Tie-rod.....	ST-21
Tie-rod ball joints.....	ST-21
Tightening torque of standard bolts.....	GI-50

Timing belt.....	EM-82
Timing chain.....	EM-18
Tire rotation.....	MA-43
Tire size.....	GI-45
Tooth contact (front final drive 4WD).....	PD-33
Tooth contact diff.....	PD-58, 86
Torque converter installation.....	AT-66, 416
Torque convertor clutch solenoid valve.....	AT-43, 298, 306
Torsion bar spring.....	SU-14
Tow truck towing.....	GI-47
Towing point.....	GI-49
TP/SW - Wiring diagram.....	EC-442, 1025, 1605
TPS - Wiring diagram.....	EC-194, 796, 1369
Transfer case.....	TF-11
Transfer oil replacement.....	MA-40
Transfer serial number.....	GI-43
Transmission case (M/T).....	MT-11, 44
Transmission serial number.....	GI-43, 44
Tread-FR&RR (Dimensions).....	GI-44
Trim.....	BT-24
Trouble diagnoses.....	GI-33
Turbine revolution sensor.....	AT-346
TURN - Wiring diagram.....	EL-57
Turn signal lamp.....	EL-55
Two trip detection logic.....	EC-73, 672, 1243
Two-pole lift.....	GI-47

U

Under body.....	BT-54
-----------------	-------

V

Vacuum cut valve.....	EC-638, 1210
Vacuum cut valve bypass valve.....	EC-538, 545, 638, 1122, 1128, 1210, 1702, 1708
Vacuum hose (brake system).....	BR-24
Vacuum hose drawing (Engine control).....	EC-33, 632, 1204
Valve clearance.....	EM-38, 127
Valve guide.....	EM-33, 96
Valve lifter.....	EM-37
Valve seat.....	EM-35, 98
Valve spring.....	EM-37, 100
Vehicle identification number.....	GI-42
Vehicle recovery (freeing a stuck vehicle).....	GI-49
Vehicle speed sensor (VSS).....	EC-430, 1013, 1593
VENT/V - Wiring diagram.....	EC-375, 959, 1105, 1113, 1539, 1685, 1693
Viscosity number (SAE).....	MA-14
VSS - Wiring diagram.....	EC-432, 1015, 1595

ALPHABETICAL INDEX

W

WARN - Wiring diagram.....	EL-95
Warning chime	EL-104
Warning lamps	EL-94
Washer, front	EL-118
Water pump	LC-12, 29
Water temperature gauge	EL-74
Weatherstrip - See Exterior.....	BT-35
Wheel alignment (front)	SU-7
Wheel balance.....	MA-42
Wheel bearing (front)	AX-5
Wheel bearing (rear).....	AX-27
Wheel hub (front)	AX-12
Wheel sensors (ABS).....	BR-93, 132, 151
Wheel size	GI-45
Wheelbase (Dimensions).....	GI-44
Wide open & closed throttle position switch	EC-189, 791, 1364
Width (Dimensions).....	GI-44
WINDOW - Wiring diagram.....	EL-180
Window, back.....	BT-35, 47
Window, door.....	BT-18
Window, opera.....	BT-50
Window, rear	BT-47
Windshield.....	BT-45
WIPER - Wiring diagram.....	EL-120
Wiper, front	EL-118
Wiring Diagram (Cell code) list	EL-276
Wiring diagrams	GI-11
Withdrawal lever (clutch).....	CL-10
Wrist pin - See Piston pin inspection.....	EM-45, 116