

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

A/C air flow ..... [MTC-21](#)  
A/C component layout ..... [MTC-16](#)  
A/C compressor precaution ..... [MTC-8](#)  
A/C compressor special service tool [MTC-11](#), [MTC-14](#)  
A/C control operation (manual A/C) ..... [MTC-20](#)  
A/C diagnostic work flow (manual A/C) ..... [MTC-22](#)  
A/C HFC134a (R134a) system precaution ..... [MTC-3](#)  
A/C HFC134a (R134a) system service tools .. [MTC-12](#)  
A/C HFC134a system service equipment precaution ... [MTC-8](#)  
A/C lubricant (R134a) ..... [MTC-17](#)  
A/C lubrication oil ..... [MTC-17](#)  
A/C operational check ..... [MTC-30](#)  
A/C pressure switch ..... [MTC-47](#)  
A/C reray ..... [MTC-47](#)  
A/C switch ..... [MTC-20](#)  
A/C symptom chart (manual A/C) ..... [MTC-22](#)  
A/C, M - Wiring diagram ..... [MTC-28](#)  
A/T - Wiring diagram ..... [AT-10](#)  
A/T control ..... [EC-999](#), [EC-1587](#)  
A/T fluid temperature sensor ..... [AT-260](#)  
A/T shift lock system ..... [AT-51](#), [AT-395](#)  
A/T shift lock system - Wiring diagram [AT-53](#), [AT-396](#)  
A/T trouble diagnoses ..... [AT-26](#)  
A/T Wiring diagram AT - 1ST ..... [AT-273](#)  
A/T Wiring diagram AT - 2ND ..... [AT-278](#)  
A/T Wiring diagram AT - 3RD ..... [AT-283](#)  
A/T Wiring diagram AT - 4TH ..... [AT-289](#)  
A/T Wiring diagram AT - BA/FTS ..... [AT-336](#)  
A/T Wiring diagram AT - ENG SS ..... [AT-267](#)  
A/T Wiring diagram AT - FTS ..... [AT-257](#)  
A/T Wiring diagram AT - LPSV ..... [AT-308](#)  
A/T Wiring diagram AT - MAIN ..... [AT-246](#)  
A/T Wiring diagram AT - NONDTC ..... [AT-353](#)  
A/T Wiring diagram AT - OVRCSV ..... [AT-331](#)  
A/T Wiring diagram AT - PNP/SW ..... [AT-251](#)  
A/T Wiring diagram AT - SSV/A ..... [AT-313](#)  
A/T Wiring diagram AT - SSV/B ..... [AT-318](#)  
A/T Wiring diagram AT - TCCSIG ..... [AT-301](#)  
A/T Wiring diagram AT - TCV ..... [AT-295](#)  
A/T Wiring diagram AT - TPS ..... [AT-324](#)  
A/T Wiring diagram AT - VSS A/T ..... [AT-263](#)  
A/T Wiring diagram AT - VSSMTR ..... [AT-342](#)  
AAC/V - Wiring diagram [EC-394](#), [EC-399](#), [EC-404](#), [EC-988](#), [EC-1576](#)  
ABS - Wiring diagram ..... [BRC-13](#), [BRC-15](#)  
ABS (anti-lock brake system) ..... [BRC-7](#), [BRC-57](#)  
ABS input/output signal inspection .. [BRC-21](#), [BRC-72](#)  
ABS sensor rotor ..... [FAX-15](#)  
Accelerator control system ..... [ACC-2](#)  
Accelerator wire adjustment ..... [ACC-2](#)  
Air bag ..... [SRS-42](#)  
Air bag disposal ..... [SRS-52](#)  
Air bleeding (hydraulic clutch) ..... [CL-6](#)  
Air bleeding for brake system ..... [BR-10](#)  
Air cleaner filter replacement ..... [MA-20](#), [MA-30](#)  
Air conditioner cut control ... [EC-34](#), [EC-602](#), [EC-1203](#)

Air spoiler, rear ..... [EI-30](#)  
Alternator ..... [SC-36](#)  
Antenna - See Power antenna ..... [AV-18](#)  
Anti-lock brake system - See ABS ..... [BRC-7](#), [BRC-57](#)  
Anti-lock brake system - Wiring diagram ..... [BRC-13](#), [BRC-15](#)  
ASCD - Wiring diagram ..... [ACS-8](#)  
ASCD (automatic speed control device) ..... [ACS-3](#)  
AT/C - Wiring diagram ..... [EC-1000](#), [EC-1588](#)  
ATDIAG - Wiring diagram ..... [EC-1123](#), [EC-1699](#)  
Audio ..... [AV-3](#)  
AUDIO - Wiring diagram ..... [AV-6](#)  
Audio and A/C control removal and installation - See Instrument panel ..... [IP-10](#)  
Auto lock free running hub ..... [FAX-11](#)  
Automatic speed control system - See ASCD .. [ACS-3](#)  
Automatic transmission fluid replacement ..... [MA-38](#)  
Automatic transmission number ..... [GI-47](#)

## B

Back door ..... [EI-15](#)  
Back door opener - See Back door ..... [EI-15](#)  
Back window ..... [GW-13](#), [EI-30](#)  
BACK/L - Wiring diagram ..... [LT-19](#)  
Back-up lamp ..... [LT-19](#)  
Back-up lamp switch (M/T) ..... [MT-9](#), [MT-46](#)  
Ball joint (front) ..... [FSU-26](#)  
Basic inspection ..... [EC-74](#), [EC-646](#), [EC-1247](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-17](#), [SC-29](#)  
Baulk ring (M/T) ..... [MT-14](#), [MT-53](#)  
Blower motor ..... [MTC-41](#)  
Blower resistor ..... [MTC-41](#)  
Body alignment ..... [BL-64](#)  
Body mounting ..... [EI-36](#)  
Boring/horning cylinder block ..... [EM-52](#), [EM-135](#)  
Brake booster ..... [BR-19](#)  
Brake fluid change ..... [BR-9](#)  
Brake fluid level ..... [MA-41](#)  
Brake fluid level and line check ..... [BR-9](#)  
Brake inspection ..... [MA-42](#)  
Brake lines and cables inspection ..... [MA-41](#)  
Brake master cylinder ..... [BR-14](#)  
Brake pedal ..... [BR-7](#)  
Bulb specifications ..... [LT-43](#)  
Bumper, front ..... [EI-12](#)  
Bumper, rear ..... [EI-15](#)  
BYPS/V - Wiring diagram . [EC-503](#), [EC-510](#), [EC-1106](#), [EC-1113](#), [EC-1682](#), [EC-1689](#)

## C

Camshaft inspection ..... [EM-35](#), [EM-110](#)  
Camshaft position sensor (CMPS) .. [EC-868](#), [EC-1478](#)  
CAN communication ..... [BRC-60](#)  
Center bearing assembly (propeller shaft) ..... [PR-11](#)  
Center bearing disassembly (propeller shaft) ..... [PR-9](#)

# ALPHABETICAL INDEX

Center case (Transfer) .....	<a href="#">TF-13</a>	Cylinder head .....	<a href="#">EM-32</a> , <a href="#">EM-102</a>	
CHARGE - Wiring diagram .....	<a href="#">SC-27</a>	Cylinder head bolt tightening .....	<a href="#">EM-119</a>	A
Charging system .....	<a href="#">SC-26</a>			
Chassis and body maintenance .....	<a href="#">MA-36</a>	<b>D</b>		
CHIME - Wiring diagram .....	<a href="#">DI-38</a>			
CIGAR - Wiring diagram .....	<a href="#">WW-9</a>	D/LOCK - Wiring diagram .....	<a href="#">BL-16</a>	B
Cigarette lighter .....	<a href="#">WW-9</a>	Data link connector for Consult ...	<a href="#">EC-46</a> , <a href="#">EC-677</a> , <a href="#">EC-1278</a>	C
Circuit breaker .....	<a href="#">PG-16</a>	Daytime light system .....	<a href="#">LT-10</a>	
CKPS - Wiring diagram	<a href="#">EC-265</a> , <a href="#">EC-447</a> , <a href="#">EC-864</a> , <a href="#">EC-1049</a> , <a href="#">EC-1474</a> , <a href="#">EC-1638</a>	Daytime running light - See Daytime light system ..	<a href="#">LT-10</a>	
Closed loop control .....	<a href="#">EC-32</a> , <a href="#">EC-600</a> , <a href="#">EC-1201</a>	DEF - Wiring diagram .....	<a href="#">GW-30</a>	D
Closed throttle position switch .....	<a href="#">EC-992</a> , <a href="#">EC-1580</a>	Diagnosis sensor unit .....	<a href="#">SRS-39</a>	
Clutch cover .....	<a href="#">CL-12</a> , <a href="#">CL-13</a>	Diagnostic trouble code (DTC) for OBD system	<a href="#">EC-18</a> , <a href="#">EC-584</a> , <a href="#">EC-623</a> , <a href="#">EC-1185</a> , <a href="#">EC-1223</a>	E
Clutch disc .....	<a href="#">CL-12</a>	Diagnostic trouble code (DTC) inspection priority chart	<a href="#">EC-72</a> , <a href="#">EC-645</a> , <a href="#">EC-1246</a>	
Clutch fluid level .....	<a href="#">MA-36</a>	Differential carrier disassembly .....	<a href="#">RFD-15</a> , <a href="#">RFD-50</a>	F
Clutch master cylinder .....	<a href="#">CL-8</a>	Differential gear oil replacement .....	<a href="#">MA-40</a>	
Clutch operating cylinder .....	<a href="#">CL-9</a>	Dimensions .....	<a href="#">GI-47</a>	G
Clutch pedal .....	<a href="#">CL-5</a> , <a href="#">CL-6</a>	Distributor ignition (DI) system ....	<a href="#">EC-33</a> , <a href="#">EC-601</a> , <a href="#">EC-1202</a>	
Clutch release bearing .....	<a href="#">CL-10</a>	Dome light - See Interior lamp .....	<a href="#">LT-33</a>	H
Clutch release mechanism .....	<a href="#">CL-10</a>	Door glass .....	<a href="#">GW-24</a>	
Clutch withdrawal lever .....	<a href="#">CL-10</a>	Door glass Fitting Adjustment .....	<a href="#">GW-24</a>	
CMPS - Wiring diagram ....	<a href="#">EC-271</a> , <a href="#">EC-870</a> , <a href="#">EC-1480</a>	Door lock .....	<a href="#">GW-24</a>	
Collision diagnosis .....	<a href="#">SRS-58</a>	Door trim .....	<a href="#">EI-24</a>	I
Combination lamp, front, removal and installation	<a href="#">EI-12</a>	Door, front .....	<a href="#">GW-24</a>	
Combination lamp, rear, removal and installation	<a href="#">EI-30</a>	Drive belt inspection .....	<a href="#">MA-15</a> , <a href="#">MA-24</a>	J
Combination meter .....	<a href="#">DI-3</a>	Drive chain (Transfer) .....	<a href="#">TF-14</a>	
Combination meter removal and installation - See Instrument panel .....	<a href="#">IP-10</a>	Drive pinion diff. inspection .....	<a href="#">FFD-18</a> , <a href="#">RFD-56</a>	
Combination switch .....	<a href="#">LT-3</a>	Drive pinion height .....	<a href="#">FFD-21</a> , <a href="#">RFD-25</a> , <a href="#">RFD-59</a>	
COMPAS - Wiring diagram .....	<a href="#">DI-21</a>	Drive plate runout .....	<a href="#">EM-58</a> , <a href="#">EM-140</a>	
Compass .....	<a href="#">DI-20</a>	Drive shaft (front) .....	<a href="#">FAX-20</a>	
Component Location (manual A/C) .....	<a href="#">MTC-23</a>	Dropping resistor (A/T) .....	<a href="#">AT-310</a>	K
Compression pressure .....	<a href="#">EM-102</a>	DTC work support .....	<a href="#">EC-109</a> , <a href="#">EC-684</a> , <a href="#">EC-1285</a>	
Compressor precaution .....	<a href="#">MTC-8</a>	DTRL - Wiring diagram .....	<a href="#">LT-13</a>	L
Compressor special service tool ....	<a href="#">MTC-11</a> , <a href="#">MTC-14</a>			
Connecting rod .....	<a href="#">EM-51</a> , <a href="#">EM-134</a>	<b>E</b>		
Connecting rod bearing clearance ....	<a href="#">EM-56</a> , <a href="#">EM-139</a>	ECM input/output signal .....	<a href="#">EC-91</a> , <a href="#">EC-667</a> , <a href="#">EC-1268</a>	IDX
Connecting rod bushing clearance ....	<a href="#">EM-57</a> , <a href="#">EM-140</a>	ECM power supply .....	<a href="#">EC-121</a> , <a href="#">EC-697</a> , <a href="#">EC-1298</a>	
Console box - See Instrument panel .....	<a href="#">IP-10</a>	ECTS - Wiring diagram	<a href="#">EC-156</a> , <a href="#">EC-176</a> , <a href="#">EC-740</a> , <a href="#">EC-1347</a>	
CONSULT for ABS .....	<a href="#">BRC-21</a> , <a href="#">BRC-72</a>	EGR/TS - Wiring diagram .....	<a href="#">EC-296</a> , <a href="#">EC-893</a>	
CONSULT for engine .....	<a href="#">EC-99</a> , <a href="#">EC-675</a> , <a href="#">EC-1276</a>	EGRC/V - Wiring diagram .....	<a href="#">EC-453</a> , <a href="#">EC-1054</a>	
Control lever (M/T) .....	<a href="#">MT-16</a> , <a href="#">MT-57</a>	EGRC1 - Wiring diagram ....	<a href="#">EC-281</a> , <a href="#">EC-461</a> , <a href="#">EC-879</a> , <a href="#">EC-1062</a>	
Control valve (A/T) .....	<a href="#">AT-88</a> , <a href="#">AT-431</a>	Engine compartment .....	<a href="#">BL-65</a>	
Converter housing installation .....	<a href="#">AT-64</a> , <a href="#">AT-408</a>	Engine control circuit diagram ....	<a href="#">EC-90</a> , <a href="#">EC-666</a> , <a href="#">EC-1267</a>	
Coolant mixture ratio .....	<a href="#">MA-14</a>	Engine control component parts location ..	<a href="#">EC-88</a> , <a href="#">EC-663</a> , <a href="#">EC-1264</a>	
Coolant replacement .....	<a href="#">MA-16</a> , <a href="#">MA-26</a>	Engine control system diagram and chart .	<a href="#">EC-29</a> , <a href="#">EC-597</a> , <a href="#">EC-1198</a>	
Cooling circuit (engine) .....	<a href="#">CO-7</a> , <a href="#">CO-22</a>	Engine coolant temperature sensor (ECTS) ...	<a href="#">EC-154</a> , <a href="#">EC-174</a> , <a href="#">EC-738</a> , <a href="#">EC-760</a> , <a href="#">EC-763</a> , <a href="#">EC-1345</a>	
Cooling fan .....	<a href="#">CO-16</a> , <a href="#">CO-32</a>	Engine fail-safe system .....	<a href="#">EC-73</a> , <a href="#">EC-646</a> , <a href="#">EC-1247</a>	
Cooling unit (A/C evaporator) .....	<a href="#">MTC-72</a>	Engine oil filter replacement .....	<a href="#">MA-21</a> , <a href="#">MA-31</a>	
Counter gear (M/T) .....	<a href="#">MT-14</a> , <a href="#">MT-53</a>			
Counter gear (Transfer) .....	<a href="#">TF-14</a>			
Coupling sleeve (M/T) .....	<a href="#">MT-14</a> , <a href="#">MT-53</a>			
Crankshaft .....	<a href="#">EM-53</a> , <a href="#">EM-136</a>			
Crankshaft position sensor (OBD) cog chipping ...	<a href="#">EC-1048</a> , <a href="#">EC-1637</a>			
Crash zone sensor .....	<a href="#">SRS-40</a>			
Cruise control - See ASCD .....	<a href="#">ACS-3</a>			
Cylinder block .....	<a href="#">EM-48</a> , <a href="#">EM-131</a>			
Cylinder block boring .....	<a href="#">EM-52</a> , <a href="#">EM-136</a>			

# ALPHABETICAL INDEX

Engine oil precautions ..... [GI-6](#)  
Engine oil replacement ..... [MA-20](#), [MA-30](#)  
Engine outer component parts ..... [EM-13](#), [EM-80](#)  
Engine removal ..... [EM-46](#), [EM-128](#)  
Engine room - See Engine compartment ..... [BL-65](#)  
Engine serial number ..... [GI-46](#)  
EVAP canister ..... [EC-567](#), [EC-1167](#), [EC-1743](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-468](#), [EC-921](#), [EC-1068](#), [EC-1511](#), [EC-1644](#)  
EVAP canister vent control valve .... [EC-928](#), [EC-1077](#),  
[EC-1083](#), [EC-1518](#), [EC-1653](#), [EC-1659](#)  
EVAP control system (small leak) diagnosis .. [EC-366](#),  
[EC-487](#), [EC-568](#), [EC-909](#), [EC-949](#), [EC-1066](#), [EC-1091](#),  
[EC-1499](#), [EC-1538](#), [EC-1642](#), [EC-1667](#)  
EVAP control system pressure sensor .... [EC-934](#), [EC-940](#), [EC-1524](#), [EC-1530](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-304](#), [EC-901](#), [EC-1491](#)  
EVAP system close mode ..... [EC-568](#)  
EVAP vapor lines inspection ..... [MA-23](#), [MA-35](#)  
Exhaust system ..... [EX-3](#)  
Exterior ..... [EI-30](#)

## F

F/FOG - Wiring diagram ..... [LT-21](#)  
F/PUMP - Wiring diagram [EC-549](#), [EC-1150](#), [EC-1726](#)  
Fan switch ..... [MTC-41](#)  
Fast idle cam (FIC) inspection and adjustment [EC-615](#),  
[EC-1216](#)  
FICD - Wiring diagram .... [EC-559](#), [EC-1159](#), [EC-1735](#)  
Final drive disassembly ..... [RFD-15](#), [RFD-50](#)  
Final drive pre-inspection ..... [RFD-49](#)  
Final drive removal and installation .. [RFD-10](#), [RFD-47](#)  
Finisher, interior - See Trim ..... [EI-18](#)  
Floor trim ..... [EI-18](#)  
Flow charts ..... [GI-25](#)  
FLS1 - Wiring diagram ..... [EC-378](#), [EC-971](#), [EC-1559](#)  
FLS2 - Wiring diagram ..... [EC-384](#), [EC-977](#), [EC-1565](#)  
FLS3 - Wiring diagram .... [EC-499](#), [EC-1102](#), [EC-1678](#)  
Fluid temperature sensor (A/T) ..... [AT-260](#)  
Fluids ..... [MA-12](#)  
Flywheel (clutch) ..... [CL-12](#), [CL-13](#)  
Flywheel runout ..... [EM-58](#), [EM-140](#)  
Fog lamp, front ..... [LT-20](#)  
Fog lamp, front, removal and installation ..... [EI-12](#)  
Fork rod (M/T) ..... [MT-16](#), [MT-57](#)  
Forward clutch ..... [AT-110](#), [AT-453](#)  
Freeze frame data ..... [EC-53](#), [EC-623](#), [EC-1224](#)  
Front bumper ..... [EI-12](#)  
Front case (Transfer) ..... [TF-13](#)  
Front combination lamp removal and installation [EI-12](#)  
Front disc brake ..... [BR-25](#)  
Front door ..... [GW-24](#)  
Front drive shaft (Transfer) ..... [TF-14](#)  
Front final drive disassembly (4WD) ..... [FFD-13](#)  
Front final drive pre-inspection (4WD) ..... [FFD-12](#)  
Front final drive removal and installation (4WD) [FFD-9](#)  
Front fog lamp ..... [LT-20](#)

Front fog lamp removal and installation ..... [EI-12](#)  
Front oxygen sensor (O2S) monitor [EC-634](#), [EC-1235](#)  
Front passenger air bag ..... [SRS-46](#)  
Front seat ..... [SE-2](#)  
Front seat belt ..... [SB-4](#)  
Front washer ..... [WW-3](#)  
Front wiper ..... [WW-3](#)  
FTTS - Wiring diagram [EC-241](#), [EC-245](#), [EC-838](#), [EC-842](#), [EC-1445](#), [EC-1449](#)  
FUEL - Wiring diagram ..... [EC-227](#), [EC-234](#)  
Fuel cut control (at no load high engine speed) [EC-34](#),  
[EC-602](#), [EC-1203](#)  
Fuel filler lid ..... [EI-15](#)  
Fuel filter ..... [EC-47](#)  
Fuel gauge ..... [DI-3](#)  
Fuel level sensor .. [EC-377](#), [EC-381](#), [EC-383](#), [EC-498](#),  
[EC-970](#), [EC-974](#), [EC-976](#), [EC-1101](#), [EC-1558](#), [EC-1562](#), [EC-1564](#), [EC-1677](#)  
Fuel line inspection ..... [FL-2](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-47](#), [EC-617](#), [EC-1218](#)  
Fuel pressure regulator ..... [EC-48](#), [EC-617](#), [EC-1219](#)  
Fuel pressure release ..... [EC-46](#), [EC-616](#), [EC-1218](#)  
Fuel system ..... [FL-2](#)  
Fuel tank temperature sensor ... [EC-836](#), [EC-841](#), [EC-1443](#), [EC-1448](#)  
Fuel tank vacuum relief valve . [EC-567](#), [EC-1167](#), [EC-1743](#)  
FUELB1 - Wiring diagram [EC-822](#), [EC-830](#), [EC-1429](#),  
[EC-1437](#)  
FUELB2 - Wiring diagram [EC-823](#), [EC-831](#), [EC-1430](#),  
[EC-1438](#)  
Fuse ..... [PG-16](#)  
Fuse and fusible link box ..... [PG-64](#)  
Fuse block ..... [PG-63](#)  
Fusible link ..... [PG-16](#)

## G

Garage jack and safety stand ..... [GI-37](#)  
Gauges ..... [DI-3](#)  
Gear components (M/T) ..... [MT-14](#), [MT-53](#)  
Generator ..... [SC-36](#)  
Generator - See Alternator ..... [SC-36](#)  
Generic scan tool (GST) ... [EC-110](#), [EC-685](#), [EC-1286](#)  
Glass ..... [GW-24](#)  
Governor valve assembly ..... [AT-101](#)  
Grease ..... [MA-12](#)  
Ground distribution ..... [PG-17](#)

## H

H/LAMP - Wiring diagram ..... [LT-6](#)  
Harness connector ..... [PG-4](#)  
Harness layout ..... [PG-33](#)  
Hazard warning lamp ..... [LT-24](#)  
Headlamp ..... [LT-5](#)  
Headlining - See Roof trim ..... [EI-26](#)  
Heated oxygen sensor 1 .... [EC-186](#), [EC-192](#), [EC-202](#),

# ALPHABETICAL INDEX

## [EC-416](#), [EC-421](#)

Heated oxygen sensor 1 (bank 1) .... [EC-768](#), [EC-777](#), [EC-790](#), [EC-1007](#), [EC-1014](#), [EC-1375](#), [EC-1384](#), [EC-1397](#), [EC-1595](#), [EC-1602](#)  
Heated oxygen sensor 1 (bank 2) .... [EC-777](#), [EC-790](#), [EC-1007](#), [EC-1014](#), [EC-1375](#), [EC-1384](#), [EC-1397](#), [EC-1595](#), [EC-1602](#)  
Heated oxygen sensor 1 heater ..... [EC-126](#)  
Heated oxygen sensor 1 heater (bank 1) [EC-703](#), [EC-1304](#)  
Heated oxygen sensor 1 heater (bank 2) [EC-703](#), [EC-1304](#)  
Heated oxygen sensor 2 .... [EC-209](#), [EC-216](#), [EC-426](#), [EC-433](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-801](#), [EC-810](#), [EC-1021](#), [EC-1032](#), [EC-1408](#), [EC-1417](#), [EC-1609](#), [EC-1620](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-801](#), [EC-810](#), [EC-1021](#), [EC-1032](#), [EC-1408](#), [EC-1417](#), [EC-1609](#), [EC-1620](#)  
Heated oxygen sensor 2 heater ..... [EC-131](#)  
Heated oxygen sensor 2 heater (bank 1) [EC-711](#), [EC-1318](#)  
Heated oxygen sensor 2 heater (bank 2) [EC-711](#), [EC-1318](#)  
HEATER - Wiring diagram ..... [MTC-27](#)  
Heater system - Wiring diagram ..... [MTC-27](#)  
Heater unit (heater core) ..... [MTC-63](#)  
Height (Dimensions) ..... [GI-47](#)  
HFC134a (R134a) system precaution ..... [MTC-3](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-8](#)  
High clutch ..... [AT-108](#), [AT-450](#)  
Hood ..... [EI-12](#)  
Horn ..... [WW-10](#)  
HORN - Wiring diagram ..... [WW-10](#)  
How to erase DTC for OBD system ... [EC-61](#), [EC-632](#), [EC-1233](#)  
Hydraulic lash adjuster inspection ..... [EM-116](#)

## I

IATS - Wiring diagram . [EC-151](#), [EC-181](#), [EC-735](#), [EC-1342](#)  
Identification ..... [MTC-5](#)  
Identification plate ..... [GI-45](#)  
Idle mixture ratio ..... [EC-36](#), [EC-604](#), [EC-1205](#)  
Idle speed ..... [EC-36](#), [EC-604](#), [EC-1205](#)  
IGN/SG - Wiring diagram [EC-533](#), [EC-1135](#), [EC-1711](#)  
Ignition timing ..... [EC-36](#), [EC-604](#), [EC-1205](#)  
ILL - Wiring diagram ..... [LT-31](#)  
Illumination ..... [LT-30](#)  
INJECT - Wiring diagram [EC-540](#), [EC-1141](#), [EC-1717](#)  
Instrument panel ..... [IP-10](#)  
Intake air temperature sensor ... [EC-149](#), [EC-179](#), [EC-733](#), [EC-1340](#), [EC-1367](#), [EC-1370](#)  
Intake manifold ..... [EM-13](#), [EM-80](#)  
Interior ..... [EI-18](#)  
Interior lamp ..... [LT-33](#)

## J

Jacking points ..... [GI-37](#)  
Journal bearing assembly (propeller shaft) ..... [PR-12](#)  
Journal bearing disassembly (propeller shaft) ... [PR-10](#)  
Jump seat ..... [SE-3](#)  
Junction box (J/B) ..... [PG-63](#)

## K

Keyless entry system - See Multi-remote control system [BL-28](#)  
Knock sensor (KS) ..... [EC-260](#)  
Knuckle spindle ..... [FAX-17](#)  
KS - Wiring diagram ..... [EC-859](#), [EC-1469](#)

## L

Leaf spring (rear) ..... [RSU-10](#)  
Length (Dimensions) ..... [GI-47](#)  
License lamp ..... [LT-17](#)  
Lifting points ..... [GI-38](#)  
Limited slip diff. adjustment ..... [RFD-22](#), [RFD-58](#)  
Limited slip diff. assembly ..... [RFD-31](#), [RFD-65](#)  
Limited slip diff. disassembly ..... [RFD-19](#), [RFD-55](#)  
Limited slip diff. inspection ..... [RFD-21](#), [RFD-57](#)  
Line pressure solenoid valve [AT-292](#), [AT-305](#), [AT-310](#)  
Line pressure test (A/T) ..... [AT-29](#), [AT-214](#)  
Liquid gasket application ..... [EM-5](#), [EM-20](#), [EM-73](#)  
Lock, door ..... [GW-24](#)  
Low and reverse brake ..... [AT-115](#), [AT-458](#)  
Low tire pressure warning system ..... [WT-7](#)  
Low tire pressure warning system - trouble diagnoses [WT-9](#), [WT-17](#)  
Low tire pressure warning system - Wiring diagram ..... [WT-9](#)  
Lubricant (R134a) A/C ..... [MTC-17](#)  
Lubricants ..... [MA-12](#)  
Lubrication circuit (engine) ..... [LU-5](#), [LU-14](#)  
Lubrication oil A/C ..... [MTC-17](#)  
Lubrication-locks, hinges and hood latches ..... [MA-45](#)  
Luggage room lamp ..... [LT-33](#)

## M

M/T major overhaul ..... [MT-12](#), [MT-51](#)  
M/T removal and installation ..... [MT-10](#), [MT-48](#)  
MAFS - Wiring diagram [EC-139](#), [EC-145](#), [EC-723](#), [EC-729](#), [EC-1330](#), [EC-1336](#)  
Main drive gear (M/T) ..... [MT-14](#), [MT-53](#)  
Main gear (Transfer) ..... [TF-14](#)  
Mainshaft (M/T) ..... [MT-14](#), [MT-53](#)  
Mainshaft (Transfer) ..... [TF-14](#)  
MAJOR OVERHALL ..... [AT-66](#), [AT-410](#)  
Major overhaul (Transfer) ..... [TF-12](#)  
Malfunction indicator lamp (MIL) . [EC-62](#), [EC-634](#), [EC-1235](#)  
Manual air conditioner - Wiring diagram ..... [MTC-28](#)  
Manual transmission number ..... [GI-46](#)

# ALPHABETICAL INDEX

---

Manual transmission oil replacement .....	<a href="#">MA-36</a>	Pilot bushing replacement .....	<a href="#">EM-61</a> , <a href="#">EM-143</a>
Mass air flow sensor (MAFS) ....	<a href="#">EC-136</a> , <a href="#">EC-143</a> , <a href="#">EC-720</a> , <a href="#">EC-727</a> , <a href="#">EC-1327</a> , <a href="#">EC-1334</a>	Pinion bearing preload diff. ....	<a href="#">FFD-21</a>
Master cylinder (brake) .....	<a href="#">BR-14</a>	Pinion gear height diff. ....	<a href="#">FFD-21</a> , <a href="#">RFD-25</a> , <a href="#">RFD-59</a>
Master cylinder (clutch) .....	<a href="#">CL-8</a>	Piston assembly .....	<a href="#">EM-58</a> , <a href="#">EM-141</a>
Meter .....	<a href="#">DI-3</a>	Piston pin inspection .....	<a href="#">EM-50</a> , <a href="#">EM-133</a>
METER - Wiring diagram .....	<a href="#">DI-8</a>	Piston ring inspection .....	<a href="#">EM-51</a> , <a href="#">EM-133</a>
MIRROR - Wiring diagram .....	<a href="#">GW-26</a>	Piston to bore clearance .....	<a href="#">EM-52</a> , <a href="#">EM-135</a>
Mirror defogger .....	<a href="#">GW-27</a>	PNP/SW - Wiring diagram	<a href="#">EC-519</a> , <a href="#">EC-1129</a> , <a href="#">EC-1705</a>
Misfire .....	<a href="#">EC-850</a> , <a href="#">EC-1460</a>	POWER - Wiring diagram .....	<a href="#">PG-11</a>
Mode door control linkage adjustment .....	<a href="#">MTC-33</a>	Power antenna .....	<a href="#">AV-18</a>
Molding - See Exterior .....	<a href="#">EI-30</a>	Power steering fluid level .....	<a href="#">PS-7</a> , <a href="#">MA-43</a>
MULTI - Wiring diagram .....	<a href="#">BL-32</a>	Power steering hydraulic pressure .....	<a href="#">PS-9</a>
Multiport fuel injection (MFI) system ...	<a href="#">EC-31</a> , <a href="#">EC-599</a> , <a href="#">EC-1200</a>	Power steering oil pump .....	<a href="#">PS-17</a>
Multiport fuel injection precautions .....	<a href="#">GI-5</a>	Power steering system bleeding .....	<a href="#">PS-8</a>
Multi-remote control system .....	<a href="#">BL-28</a>	Power supply routing .....	<a href="#">PG-9</a>

## N

---

NVH troubleshooting (AX) .....	<a href="#">FAX-4</a>
NVH troubleshooting (BR) .....	<a href="#">BR-6</a>
NVH troubleshooting (CL) .....	<a href="#">CL-4</a>
NVH troubleshooting (EM) .....	<a href="#">EM-11</a> , <a href="#">EM-78</a>
NVH troubleshooting (M/T) .....	<a href="#">MT-6</a> , <a href="#">MT-41</a>
NVH troubleshooting (PD) .....	<a href="#">PR-3</a>
NVH troubleshooting (WT)NVH troubleshooting (WT) .	<a href="#">WT-3</a>

## O

---

Oil change (capacity) .....	<a href="#">MA-12</a>
Oil pan (engine) .....	<a href="#">EM-16</a> , <a href="#">EM-88</a>
Oil pressure (engine) .....	<a href="#">LU-7</a> , <a href="#">LU-15</a>
Oil pump (A/T) .....	<a href="#">AT-83</a> , <a href="#">AT-426</a>
Oil pump (engine) .....	<a href="#">LU-8</a> , <a href="#">LU-16</a>
Oil pump regulator valve (engine) .....	<a href="#">LU-9</a> , <a href="#">LU-17</a>
Oil seal replacement (engine) .....	<a href="#">EM-28</a> , <a href="#">EM-99</a>
Operating cylinder (clutch) .....	<a href="#">CL-9</a>
ORVR (On-board Refueling Vapor Recovery) .....	<a href="#">EC-1172</a> , <a href="#">EC-1748</a>
Overdrive control switch .....	<a href="#">AT-44</a> , <a href="#">AT-392</a>
Overheat .....	<a href="#">EC-248</a> , <a href="#">EC-442</a> , <a href="#">EC-845</a> , <a href="#">EC-1044</a> , <a href="#">EC-1452</a> , <a href="#">EC-1633</a>
Overrun clutch .....	<a href="#">AT-110</a> , <a href="#">AT-453</a>
Overrun clutch solenoid valve .....	<a href="#">AT-333</a>
Oversize piston .....	<a href="#">EM-53</a>

## P

---

Pantograph jack .....	<a href="#">GI-37</a>
Park/neutral position switch (A/T) .	<a href="#">AT-46</a> , <a href="#">AT-254</a> , <a href="#">AT-393</a>
Park/neutral position switch (M/T) .....	<a href="#">MT-9</a> , <a href="#">MT-46</a>
Parking brake control .....	<a href="#">PB-2</a>
Parking lamp .....	<a href="#">LT-17</a>
PCV filter replacement .....	<a href="#">MA-23</a>
PGC/V - Wiring diagram	<a href="#">EC-328</a> , <a href="#">EC-470</a> , <a href="#">EC-923</a> , <a href="#">EC-1070</a> , <a href="#">EC-1513</a> , <a href="#">EC-1646</a>

---

Precautions for Leak detection dye .....	<a href="#">MTC-4</a>
Precautions (General) .....	<a href="#">GI-3</a>
Pressure plate - See Clutch cover .....	<a href="#">CL-12</a>
Pressure test (A/T) .....	<a href="#">AT-29</a> , <a href="#">AT-214</a>
Propeller shaft .....	<a href="#">PR-6</a> , <a href="#">PR-7</a>
Propeller shaft greasing .....	<a href="#">MA-39</a>
Propeller shaft inspection .....	<a href="#">MA-39</a>
Propeller shaft on vehicle service .....	<a href="#">PR-4</a>
Propeller shaft vibration .....	<a href="#">PR-4</a>
PST/SW - Wiring diagram	<a href="#">EC-555</a> , <a href="#">EC-1155</a> , <a href="#">EC-1731</a>

## R

---

Radiator .....	<a href="#">CO-14</a> , <a href="#">CO-30</a>
Radiator fan - See Cooling fan .....	<a href="#">CO-16</a> , <a href="#">CO-32</a>
Radio - See Audio .....	<a href="#">AV-3</a>
Rear air spoiler .....	<a href="#">EI-30</a>
Rear body .....	<a href="#">EI-36</a>
Rear bumper .....	<a href="#">EI-15</a>
Rear case (Transfer) .....	<a href="#">TF-13</a>
Rear combination lamp removal and installation	<a href="#">EI-30</a>
Rear cover packing replacement diff. ....	<a href="#">RFD-9</a>
Rear drum brake .....	<a href="#">BR-30</a>
Rear seat .....	<a href="#">SE-3</a>
Rear seat belt .....	<a href="#">SB-6</a>
Rear side window .....	<a href="#">GW-11</a>
Rear window .....	<a href="#">GW-13</a>
Rear window defogger .....	<a href="#">GW-27</a>
Refrigerant connection precaution .....	<a href="#">MTC-5</a>
Refrigerant discharging evacuating charging ..	<a href="#">MTC-64</a>
Refrigerant general precaution .....	<a href="#">MTC-4</a>
Refrigerant lines .....	<a href="#">MTC-64</a>
Refrigerant pressure sensor .....	<a href="#">MTC-48</a>
Refrigeration cycle .....	<a href="#">MTC-15</a>
Release bearing (clutch) .....	<a href="#">CL-10</a>
Removal and installation (A/T) .....	<a href="#">AT-62</a> , <a href="#">AT-407</a>
Removal and installation (Transfer) .....	<a href="#">TF-11</a>
Reverse clutch .....	<a href="#">AT-103</a> , <a href="#">AT-445</a>
Reverse idler shaft (M/T) .....	<a href="#">MT-14</a> , <a href="#">MT-53</a>
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	<a href="#">MT-9</a> , <a href="#">MT-46</a>

# ALPHABETICAL INDEX

Reverse main gear (M/T) ..... [MT-14](#), [MT-53](#)  
 Revolution sensor (A/T) ..... [AT-265](#)  
 Ring gear diff. inspection ..... [FFD-18](#), [RFD-56](#)  
 Road wheel size ..... [GI-48](#)  
 Roof trim ..... [EI-26](#)  
 Room lamp - See Interior lamp ..... [LT-33](#)  
 ROOM/L - Wiring diagram ..... [LT-37](#)

## S

S/CHGR - Wiring diagram ..... [EC-1314](#)  
 S/SIG - Wiring diagram ... [EC-545](#), [EC-1146](#), [EC-1722](#)  
 Seal - See Exterior ..... [EI-30](#)  
 Seat belt inspection ..... [SB-8](#), [MA-46](#)  
 Seat belt pre-tensioner ..... [SRS-39](#)  
 Seat belt pre-tensioner disposal ..... [SRS-52](#)  
 Seat belt, front ..... [SB-4](#)  
 Seat belt, rear ..... [SB-6](#)  
 Seat, front ..... [SE-2](#)  
 Seat, rear ..... [SE-3](#)  
 Self-diagnostic results ..... [EC-62](#), [EC-634](#), [EC-1235](#)  
 Sheft warning system ..... [BL-43](#)  
 SHIFT - Wiring diagram ..... [AT-53](#), [AT-396](#)  
 Shift control (Transfer) ..... [TF-15](#)  
 Shift control components (M/T) ..... [MT-16](#), [MT-57](#)  
 Shift fork (M/T) ..... [MT-16](#), [MT-57](#)  
 Shift lever ..... [MT-16](#), [MT-57](#)  
 Shift lock system ..... [AT-51](#), [AT-395](#)  
 Shift schedule ..... [AT-150](#), [AT-496](#)  
 Shift solenoid valve A (A/T) . [AT-275](#), [AT-285](#), [AT-292](#),  
[AT-315](#)  
 Shift solenoid valve B (A/T) . [AT-275](#), [AT-280](#), [AT-292](#),  
[AT-320](#)  
 Shock absorber (front) ..... [FSU-16](#)  
 Shock absorber (rear) ..... [RSU-9](#)  
 Side bearing preload (front final drive 4WD) ... [FFD-19](#)  
 Side bearing preload diff. .... [RFD-23](#)  
 Side shaft diff. .... [FFD-17](#)  
 Side trim ..... [EI-18](#)  
 Smart entrance control unit ..... [BCS-4](#)  
 SMJ (super multiple junction) ..... [PG-61](#)  
 Spare tire size ..... [GI-48](#)  
 Spark plug replacement ..... [MA-22](#), [MA-32](#)  
 Speedometer ..... [DI-3](#)  
 Spiral cable ..... [SRS-42](#)  
 Spot lamp ..... [LT-33](#)  
 Stabilizer bar (front) ..... [FSU-20](#)  
 Stabilizer bar (rear) ..... [RSU-12](#)  
 Stall test (A/T) ..... [AT-26](#), [AT-211](#)  
 Standardized relay ..... [PG-7](#)  
 START - Wiring diagram ..... [SC-13](#)  
 Starter ..... [SC-23](#)  
 Starting system ..... [SC-9](#)  
 Steering gear, linkage and transfer gear inspection ....  
[MA-43](#)  
 Steering linkage ..... [PS-20](#)  
 Steering wheel and column ..... [PS-10](#)  
 Steering wheel play ..... [PS-6](#)  
 Steering wheel turning force ..... [PS-8](#)

Stop lamp ..... [LT-18](#)  
 STOP/L - Wiring diagram ..... [LT-18](#)  
 Striking rod (M/T) ..... [MT-16](#), [MT-57](#)  
 Sub-gear (M/T) ..... [MT-14](#), [MT-53](#)  
 Sunroof ..... [RF-10](#)  
 Symbols and abbreviations ..... [GI-21](#)  
 Symptom matrix chart ..... [EC-84](#), [EC-659](#), [EC-1260](#)  
 Synchronizer (M/T) ..... [MT-14](#), [MT-53](#)  
 System readiness test (SRT) code .... [EC-53](#), [EC-624](#),  
[EC-1225](#)

## T

Tachometer ..... [DI-3](#)  
 Tail lamp ..... [LT-17](#)  
 TAIL/L - Wiring diagram ..... [LT-17](#)  
 TCM circuit diagram ..... [AT-165](#)  
 TCM inspection table ..... [AT-242](#)  
 TCS (traction control system) ..... [BRC-57](#)  
 Temperature control cable and linkage adjustment .....  
[MTC-58](#)  
 THEFT - Wiring diagram ..... [BL-49](#)  
 Thermal protector ..... [MTC-48](#)  
 Thermometer ..... [DI-20](#)  
 Thermostat ..... [CO-13](#), [CO-28](#)  
 Three way catalyst function (Bank 1) [EC-896](#), [EC-1485](#)  
 Three way catalyst function (Bank 2) [EC-896](#), [EC-1485](#)  
 Three way catalyst precautions ..... [GI-5](#)  
 Throttle bodies ..... [EM-13](#), [EM-80](#)  
 Throttle chambers ..... [EM-13](#), [EM-80](#)  
 Throttle drum adjustment ..... [ACC-2](#)  
 Throttle position sensor (TPS) ... [EC-159](#), [EC-168](#), [EC-743](#),  
[EC-752](#), [EC-1350](#), [EC-1359](#)  
 Throttle position sensor adjustment .... [EC-74](#), [EC-646](#),  
[EC-1247](#)  
 Throttle position switch [EC-992](#), [EC-1580](#), [AT-328](#), [AT-394](#)  
 Throwout bearing - See Clutch release bearing [CL-10](#)  
 Tie-rod ..... [PS-20](#)  
 Tie-rod ball joints ..... [PS-20](#)  
 Timing belt ..... [EM-91](#)  
 Timing chain ..... [EM-19](#)  
 Tire rotation ..... [MA-41](#)  
 Tire size ..... [GI-48](#)  
 Tooth contact (front final drive 4WD) ..... [FFD-25](#)  
 Tooth contact diff. .... [RFD-29](#), [RFD-63](#)  
 Torque converter installation ..... [AT-64](#), [AT-408](#)  
 Torque convertor clutch solenoid valve [AT-41](#), [AT-297](#),  
[AT-305](#)  
 Torsion bar spring ..... [FSU-17](#)  
 Tow truck towing ..... [GI-39](#)  
 Towing point ..... [GI-40](#)  
 TP/SW - Wiring diagram ... [EC-409](#), [EC-994](#), [EC-1582](#)  
 TPS - Wiring diagram . [EC-162](#), [EC-170](#), [EC-746](#), [EC-754](#),  
[EC-1353](#), [EC-1361](#)  
 Traction control system - See TCS ..... [BRC-57](#)  
 Transfer case ..... [TF-13](#)  
 Transfer oil replacement ..... [MA-38](#)  
 Transfer serial number ..... [GI-46](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

## ALPHABETICAL INDEX

Transmission case (M/T) .....	<a href="#">MT-12</a> , <a href="#">MT-51</a>	Window, rear .....	<a href="#">GW-13</a>
Transmission serial number .....	<a href="#">GI-46</a> , <a href="#">GI-47</a>	WIPER - Wiring diagram .....	<a href="#">WW-5</a>
Tread-FR&RR (Dimensions) .....	<a href="#">GI-47</a>	Wiper, front .....	<a href="#">WW-3</a>
Trim .....	<a href="#">EI-18</a>	Wiring Diagram (Cell code) list .....	<a href="#">PG-58</a>
Trouble diagnoses .....	<a href="#">GI-8</a>	Wiring diagrams .....	<a href="#">GI-13</a>
Turbine revolution sensor .....	<a href="#">AT-344</a>	Withdrawal lever (clutch) .....	<a href="#">CL-10</a>
TURN - Wiring diagram .....	<a href="#">LT-26</a>	Wrist pin - See Piston pin inspection ..	<a href="#">EM-50</a> , <a href="#">EM-133</a>
Turn signal lamp .....	<a href="#">LT-24</a>	WT-T/WARN - Wiring diagram .....	<a href="#">WT-9</a>
Two trip detection logic .....	<a href="#">EC-49</a> , <a href="#">EC-619</a> , <a href="#">EC-1220</a>		
Two-pole lift .....	<a href="#">GI-38</a>		

### U

Under body .....	<a href="#">BL-67</a>
------------------	-----------------------

### V

Vacuum cut valve bypass valve .....	<a href="#">EC-507</a> , <a href="#">EC-1104</a> , <a href="#">EC-1110</a> , <a href="#">EC-1680</a> , <a href="#">EC-1686</a>
Vacuum hose (brake system) .....	<a href="#">BR-23</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-30</a> , <a href="#">EC-598</a> , <a href="#">EC-1199</a>
Valve clearance .....	<a href="#">EM-43</a> , <a href="#">EM-145</a>
Valve guide .....	<a href="#">EM-37</a> , <a href="#">EM-112</a>
Valve lifter .....	<a href="#">EM-41</a>
Valve seat .....	<a href="#">EM-39</a> , <a href="#">EM-114</a>
Valve spring .....	<a href="#">EM-40</a> , <a href="#">EM-115</a>
VDC (vehicle dynamics control) .....	<a href="#">BRC-57</a>
VDC -Wiring diagram .....	<a href="#">BRC-65</a> , <a href="#">BRC-66</a>
Vehicle identification number .....	<a href="#">GI-45</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-40</a>
VENT/V - Wiring diagram .....	<a href="#">EC-333</a> , <a href="#">EC-930</a> , <a href="#">EC-1079</a> , <a href="#">EC-1086</a> , <a href="#">EC-1520</a> , <a href="#">EC-1655</a> , <a href="#">EC-1662</a>
Viscosity number (SAE) .....	<a href="#">MA-14</a>
VSS - Wiring diagram .....	<a href="#">EC-389</a> , <a href="#">EC-982</a> , <a href="#">EC-1570</a>

### W

WARN - Wiring diagram .....	<a href="#">DI-26</a>
Warning chime .....	<a href="#">DI-35</a>
Warning lamps .....	<a href="#">DI-25</a>
Washer, front .....	<a href="#">WW-3</a>
Water pump .....	<a href="#">CO-10</a> , <a href="#">CO-25</a>
Water temperature gauge .....	<a href="#">DI-3</a>
Weatherstrip - See Exterior .....	<a href="#">EI-30</a>
Wheel alignment (front) .....	<a href="#">FSU-10</a>
Wheel balance .....	<a href="#">MA-41</a>
Wheel bearing (front) .....	<a href="#">FAX-5</a>
Wheel bearing (rear) .....	<a href="#">RAX-6</a>
Wheel hub (front) .....	<a href="#">FAX-14</a>
Wheel sensor (VDC) .....	<a href="#">BRC-128</a>
Wheel sensors (ABS) .....	<a href="#">BRC-48</a> , <a href="#">BRC-128</a>
Wheel size .....	<a href="#">GI-48</a>
Wheelbase (Dimensions) .....	<a href="#">GI-47</a>
Width (Dimensions) .....	<a href="#">GI-47</a>
WINDOW - Wiring diagram .....	<a href="#">GW-18</a>
Window, back .....	<a href="#">GW-13</a> , <a href="#">EI-30</a>
Window, door .....	<a href="#">GW-24</a>
Window, opera .....	<a href="#">EI-36</a>