

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator	BR-32
ABS circuit diagram.....	BR-38
ABS component parts and connector locations.....	BR-37
ABS control unit	BR-30
ABS hydraulic circuit	BR-31
ABS self-diagnosis	BR-36
ABS symptom chart	BR-34
ABS system components.....	BR-31
ABS trouble diagnoses.....	BR-33
ABS wheel sensors.....	BR-30
ABS wiring diagram.....	BR-39
Absolute pressure sensor	EC-99
A/C air flow.....	HA-13
A/C circuit diagram.....	HA-29
A/C component layout.....	HA-12
A/C compressor clutch removal and installation....	HA-52
A/C compressor mounting.....	HA-51
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-6
A/C control linkage adjustment	HA-42
A/C control operation	HA-14
A/C diagnostic work flow.....	HA-15
A/C harness layout.....	HA-28
A/C HFC134a (R134a) system identification.....	HA-3
A/C HFC134a (R134a) system introduction	HA-3
A/C HFC134a (R134a) system precaution	HA-4
A/C HFC134a (R134a) system service procedure.....	HA-47
A/C HFC134a (R134a) system service tools.....	HA-7
A/C HFC134a system service equipment precaution	HA-9
A/C lubricant (R134a).....	HA-49
A/C operational check.....	HA-16
A/C performance chart.....	HA-24
A/C performance test diagnoses.....	HA-22
A/C relay.....	HA-42
A/C service data specification.....	HA-56
A/C switch	HA-41
A/C symptom chart.....	HA-18
A/C trouble diagnoses.....	HA-15
A/C wiring diagram.....	HA-31
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	RS-10
Air bag disposal.....	RS-13
Air bag module.....	RS-10
Air bag precautions	GI-2
Air bleeding for brake system	BR-5
Air cleaner filter replacement.....	MA-12
Air conditioner cut control	EC-15
Air conditioning - See A/C.....	HA-11
Air control cable adjustment.....	HA-43
Air flow meter - See Mass air flow sensor.....	EC-94

Air mix door control linkage adjustment.....	HA-43
Alternator.....	EL-28
Angular tightening application.....	EM-2
Antenna.....	EL-126
Anti-freeze coolant mixture ratio	MA-9
ASCD (automatic speed control device).....	EL-129
AT removal and installation	AT-39
AT shift lock system	AT-29
AT trouble diagnoses	AT-9
Audio	EL-119
Audio and A/C control removal and installation - See Instrument panel	BT-10
Auto lock free running hub.....	FA-18
Automatic transmission fluid replacement	MA-17
Automatic transmission number.....	GI-35
Auxiliary air control (AAC).....	EC-210
Axle housing (rear).....	RA-5

B

Back window	BT-28
Back-up lamp	EL-48
Back-up lamp switch (MT)	MT-4
Ball joint front axle.....	FA-44
Battery	EL-15
Baulk ring (MT).....	MT-8
Belt inspection (drive belt).....	MA-10
Blower motor	HA-41
Blower relay.....	HA-42
Blower resistor.....	HA-41
Body alignment.....	BT-34
Body mounting	BT-33
Boring/horing cylinder block.....	EM-35
Brake booster.....	BR-16
Brake control valve (Proportioning valve).....	BR-8
Brake fluid change	BR-4
Brake fluid level.....	MA-20
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-20
Brake lines and cables inspection	MA-20
Brake master cylinder	BR-13
Brake pedal	BR-11
Bumper, front.....	BT-6
Bumper, rear.....	BT-7

C

Cab body.....	BT-32
Camshaft inspection.....	EM-19
Camshaft position sensor (CMPS).....	EC-162
Camshaft position sensor inspection	EC-165
Cargo space.....	GI-36
Center bearing assembly (propeller shaft).....	PD-11

ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft).....	PD-10
Charging system	EL-25
Chassis and body maintenance.....	MA-16
Cigarette lighter.....	EL-118
Circuit breaker.....	EL-11
Clearance lamp	EL-50
Clock.....	EL-118
Closed loop control	EC-129
Closed throttle position switch	EC-214
Clutch cover	CL-13
Clutch damper.....	CL-9
Clutch disc.....	CL-12
Clutch fluid level	MA-16
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal	CL-4
Clutch pedal free play	CL-5
Clutch pedal height	CL-5
Clutch release bearing	CL-10
Clutch withdrawal lever	CL-10
Combination lamp, front, removal and installation	BT-6
Combination meter.....	EL-66
Combination meter (needle type).....	EL-66
Combination meter removal and installation - See Instrument panel	BT-10
Combination switch	EL-32
Compression pressure	EM-7
Compressor clutch removal and installation.....	HA-52
Compressor mounting.....	HA-51
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod.....	EM-34
Connecting rod bearing clearance.....	EM-38
Connecting rod bushing clearance	EM-39
Console box - See Instrument panel	BT-10
CONSULT for ECCS.....	EC-41
CONSULT general information	GI-31
Control lever (MT).....	MT-10
Control lever transfer.....	TF-7
Control valve (AT)	AT-60
Converter housing installation.....	AT-40
Coolant replacement.....	MA-11
Cooling circuit (engine)	LC-7
Cooling fan	LC-12
Counter gear (MT).....	MT-8
Counter gear transfer	TF-9
Coupling sleeve (MT).....	MT-8
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-162
Crankcase ventilation system - See positive crankcase ventilation	EC-21
Crankshaft assembly.....	EM-40
Crankshaft bearing clearance	EM-36
Crankshaft inspection.....	EM-36

Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-158
Crankshaft position sensor (OBD) DTC0802, P0335 inspection	EC-161
Cruise control - See ASCD	EL-129
Cylinder block.....	EM-32
Cylinder block boring.....	EM-35
Cylinder head	EM-16

D

Data link connector for Consult.....	EC-41
Daytime light system.....	EL-38
Daytime running light - See Daytime light system.....	EL-38
Defroster door control rod adjustment	HA-43
Diagnostic trouble code (DTC) chart	EC-63
Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-297
Differential carrier assembly (C200)	PD-75
Differential carrier assembly (front final drive 4WD).....	PD-30
Differential carrier assembly (H190A).....	PD-52
Differential carrier assembly (H233B).....	PD-96
Differential carrier disassembly (C200).....	PD-58
Differential carrier disassembly (H190A)	PD-36
Differential carrier disassembly (H233B)	PD-81
Differential gear oil replacement	MA-19
Dimensions.....	GI-36
Distributor ignition (Di) system.....	EC-14
Dome light - See Interior lamp.....	EL-63
Door, front.....	BT-9
Door glass	BT-9
Door lock	BT-9
Door mirror	BT-30
Door trim.....	BT-13
Drive pinion diff. inspection (C200).....	PD-62
Drive pinion diff. inspection (H190A)	PD-40
Drive pinion diff. inspection (H233B)	PD-85
Drive pinion height (C200).....	PD-70
Drive pinion height (H190A).....	PD-47
Drive pinion height (H233B).....	PD-92
Drive plate runout.....	EM-39
Drive shaft (front)	FA-28
Dual pressure switch.....	HA-41

E

ECCS basic inspection.....	EC-60
ECCS circuit diagram.....	EC-6
ECCS component parts location.....	EC-8
ECCS fail-safe system	EC-78
ECCS on board diagnostic system.....	EC-31
ECCS relay inspection.....	EC-91

ALPHABETICAL INDEX

ECCS symptom matrix chart.....	EC-79
ECCS system diagram and chart	EC-7
ECM input/output signal inspection.....	EC-85
EGR control (EGRC) - BPT valve.....	EC-174
EGR control (EGRC) - solenoid valve	EC-251
EGR temperature sensor.....	EC-254
EGR temperature sensor inspection.....	EC-258
EGR valve inspection.....	EC-173
EGRC - BPT valve inspection.....	EC-174
EGRC-solenoid valve inspection.....	EC-253
Electrical unit.....	EL-151
Electrical units location.....	EL-151
Engine compartment	BT-34
Engine control module (ECM).....	EC-3
Engine coolant temperature sensor (ECTS).....	EC-110
Engine coolant temperature sensor (ECTS) P0115, DTC0103	EC-110
Engine coolant temperature sensor (ECTS) P0125, DTC0908	EC-119
Engine coolant temperature sensor inspection.....	EC-113
Engine oil filter replacement.....	MA-13
Engine oil precautions.....	GI-4
Engine oil replacement.....	MA-13
Engine outer component parts.....	EM-6
Engine removal	EM-29
Engine room - See Engine compartment	BT-34
Engine serial number	GI-35
EVAP canister	EC-17
EVAP canister inspection	EC-17
EVAP canister purge control.....	EC-17
EVAP canister purge control solenoid valve	EC-189
EVAP canister purge control valve	EC-189
EVAP canister purge control valve inspection	EC-196
EVAP canister purge volume control valve.....	EC-264
EVAP canister vent control valve.....	EC-197
EVAP control system pressure sensor	EC-202
EVAP control system purge flow monitoring diagnosis.....	EC-271
EVAP control system (small leak) diagnosis	EC-179
EVAP shut valve.....	EC-18
EVAP vapor lines inspection.....	MA-15
Evaporative emission (EVAP) system.....	EC-17
Exhaust gas recirculation (EGR) system.....	EC-166
Exhaust gas recirculation (EGR) valve.....	EC-166
Exhaust system.....	FE-7
Exhaust system inspection.....	MA-16
Exterior.....	BT-17
Exterior lamp.....	EL-48

F

Fan switch	HA-41
Fast idle cam (FIC) inspection and adjustment.....	EC-24
Final drive disassembly (C200).....	PD-58
Final drive disassembly (H190A)	PD-36

Final drive disassembly (H233B)	PD-81
Final drive pre-inspection (C200).....	PD-58
Final drive pre-inspection (H190A)	PD-36
Final drive pre-inspection (H233B)	PD-81
Final drive removal and installation (rear final drive).....	PD-16
Finisher, rear panel	BT-13
Floor trim	BT-13
Fluids.....	MA-8
Flywheel runout.....	EM-39
Fork rod (MT)	MT-10
Forward clutch.....	AT-78
Freeze frame data.....	EC-32
Front axle	FA-15
Front bumper.....	BT-6
Front combination lamp removal and installation	BT-6
Front door.....	BT-9
Front drive shaft transfer.....	TF-9
Front final drive disassembly (4WD).....	PD-18
Front final drive pre-inspection (4WD)	PD-18
Front final drive removal and installation (4WD)	PD-15
Front heated oxygen sensor (HO2S) monitor.....	EC-33
Front oxygen sensor (O2S).....	EC-124
Front seat	BT-23
Front seat belt	RS-3
Front suspension.....	FA-34
Front washer	EL-93
Front wiper	EL-92
Fuel cut control (at no load & high engine speed).....	EC-16
Fuel filter replacement.....	MA-12
Fuel gauge	EL-70
Fuel injection system (lean side)	EC-142
Fuel injection system (rich side)	EC-147
Fuel injector.....	EC-280
Fuel line inspection	MA-12
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-22
Fuel pressure regulator.....	EC-22
Fuel pressure release	EC-22
Fuel pump	EC-285
Fuel pump control	EC-285
Fuel pump inspection	EC-288
Fuel pump relay inspection	EC-288
Fuel system.....	FE-3
Fuel temperature sensor.....	EC-151
Fuse.....	EL-11
Fuse block.....	Foldout page
Fusible link	EL-11

G

Garage jack and safety stand.....	GI-38
Gauges.....	EL-65

ALPHABETICAL INDEX

Gears (MT).....	MT-8
Generator	EL-28
Generic scan tool (GST).....	EC-54
Glass	BT-9
Governor valve assembly.....	AT-71
Grease.....	MA-8
Ground clearance (Dimensions)	GI-36
Ground distribution.....	EL-12

H

Harness connector	EL-3
Harness layout	EL-153
Hazard warning lamp	EL-52
Headlamp	EL-35
Headlamp aiming control	EL-46
Headlining - See Roof trim.....	BT-15
Heated oxygen sensor (HO2S).....	EC-124
Heated oxygen sensor (HO2S) (front).....	EC-124
Heated oxygen sensor (rear)	EC-133
Heater wiring diagram	HA-30
Height (Dimensions).....	GI-36
HFC134a (R134a) system identification	HA-3
HFC134a (R134a) system introduction.....	HA-3
HFC134a (R134a) system precaution	HA-4
HFC134a (R134a) system service procedure	HA-47
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-76
Hood.....	BT-6
Horn.....	EL-118
How to follow flow chart in trouble diagnoses	GI-28
How to perform efficient diagnosis for an electrical incident	GI-17
How to read wiring diagrams	GI-8
How to use this manual	GI-6
Hydraulic lash adjuster inspection	EM-28

I

IACV - FICD solenoid valve inspection.....	EC-295
IACV-AAC valve inspection.....	EC-213
IACV-FICD solenoid valve.....	EC-292
Idle mixture ratio inspection	EC-25
Idle speed inspection	EC-25
Ignition coil inspection.....	EC-246
Ignition timing inspection.....	EC-25
Illumination	EL-58
Inhibitor switch.....	AT-25
Inhibitor switch inspection	EC-220
Injector inspection	EC-282
Injector removal and installation	EC-23
Instrument panel.....	BT-10
Intake air temperature sensor	EC-105

Intake air temperature sensor inspection.....	EC-109
Intake door control linkage adjustment.....	HA-43
Intake manifold.....	EM-6
Interior	BT-13
Interior lamp	EL-58

J

Jacking points.....	GI-37
Joint connector (J/C)	Foldout page
Journal bearing assembly (propeller shaft).....	PD-12
Journal bearing disassembly (propeller shaft).....	PD-11
Jump seat.....	BT-24

K

Knuckle spindle	FA-25
-----------------------	-------

L

Leaf spring (rear).....	RA-10
Length (Dimensions)	GI-36
License lamp	EL-50
Lifting points	GI-37
Limited slip diff. adjustment (C200)	PD-65
Limited slip diff. adjustment (H233B).....	PD-88
Limited slip diff. assembly (C200).....	PD-67
Limited slip diff. assembly (H190).....	PD-43
Limited slip diff. assembly (H233B)	PD-89
Limited slip diff. disassembly (C200)	PD-63
Limited slip diff. disassembly (H190)	PD-42
Limited slip diff. disassembly (H233B).....	PD-86
Limited slip diff. inspection (C200).....	PD-64
Limited slip diff. inspection (H190).....	PD-42
Limited slip diff. inspection (H233B)	PD-87
Limited slip differential oil.....	MA-8
Line pressure test (AT).....	AT-18
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-151
Lock, door.....	BT-9
Low and reverse brake	AT-82
LSV (Load sensing valve).....	BR-9
Lubricant (R134a) A/C.....	HA-49
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-22

M

Magnet clutch.....	HA-52
Main drive gear (MT).....	MT-8
Main gear transfer	TF-9

ALPHABETICAL INDEX

Mainshaft (MT)	MT-8
Mainshaft transfer.....	TF-9
Maintenance (engine).....	MA-10
Maintenance general.....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL).....	EC-33
Manual lock free running hub.....	FA-17
Manual steering gear.....	ST-14
Manual transmission number.....	GI-35
Manual transmission oil replacement.....	MA-16
Map lamp.....	EL-63
MAP/BARO switch solenoid valve.....	EC-224
Mass air flow sensor inspection.....	EC-98
Mass air flow sensor (MAFS).....	EC-94
Master cylinder (brake).....	BR-13
Master cylinder (clutch).....	CL-7
Meter.....	EL-65
Mirror, door.....	BT-30
Misfire.....	EC-154
Mode door control linkage adjustment.....	HA-43
Model variation.....	GI-32
Molding - See Exterior.....	BT-17
MT overhaul.....	MT-7
MT removal and installation.....	MT-5
Mud guard - See Exterior.....	BT-17
Multiport fuel injection (MFI) system.....	EC-12
Multiport fuel injection precautions.....	GI-4

N

Neutral position switch inspection.....	EC-220
Neutral position switch (MT).....	MT-4

O

Oil change (capacity).....	MA-8
Oil pan (engine).....	EM-8
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-6
Oil pump (AT).....	AT-56
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-14
Oil seal replacement (front final drive 4WD).....	PD-13
Oil seal replacement (front of final drive).....	PD-13
Operating cylinder (clutch).....	CL-8
Overdrive control switch.....	AT-24
Overrun clutch.....	AT-78
Oversize piston.....	EM-46
Oxygen sensor (O2S) (front).....	EC-124

P

Pantograph jack.....	GI-37
Parking brake control.....	BR-28
Park/Neutral position switch.....	EC-220
PCV filter replacement.....	MA-15
PCV (positive crankcase ventilation) inspection.....	EC-21
Pilot bushing replacement.....	EM-41
Pinion bearing preload diff. (front final drive 4WD).....	PD-25
Pinion gear height diff. (C200).....	PD-70
Pinion gear height diff. (front final drive 4WD).....	PD-25
Pinion gear height diff. (H190A).....	PD-47
Pinion gear height diff. (H233B).....	PD-92
Piston assembly.....	EM-39
Piston pin inspection.....	EM-33
Piston ring inspection.....	EM-34
Piston to bore clearance.....	EM-35
Power door lock.....	EL-107
Power door mirror.....	EL-116
Power steering fluid level.....	ST-5, MA-21
Power steering gear.....	ST-20
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-289
Power steering oil pressure switch inspection.....	EC-291
Power steering oil pump.....	ST-35
Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-242
Power transistor inspection.....	EC-246
Power window.....	EL-101
Precautions (General).....	GI-2
Pressure plate - See Clutch cover.....	CL-13
Pressure test (AT).....	AT-18
Propeller shaft.....	PD-7
Propeller shaft inspection.....	MA-18
Propeller shaft on vehicle service.....	PD-9
Propeller shaft vibration.....	PD-9

R

R134a - See HFC134a.....	HA-3
Radiator.....	LC-11
Radiator fan - See Cooling fan.....	LC-12
Radio - See Audio.....	EL-119
Rear axle.....	RA-5
Rear body.....	BT-32
Rear bumper.....	BT-7
Rear cover packing replacement diff.....	PD-14
Rear heated oxygen sensor (HO2S).....	EC-124, EC-133
Rear heated oxygen sensor (HO2S) heater.....	EC-138
Rear panel finisher.....	BT-13
Rear seat belt.....	RS-3
Rear side window.....	BT-29

ALPHABETICAL INDEX

Rear suspension	RA-9
Rear wheel anti-lock brake system (R-ABS)	BR-30
Refrigerant connection precaution	HA-5
Refrigerant discharging evacuating charging	HA-47
Refrigerant general precaution	HA-4
Refrigerant lines	HA-46
Refrigeration cycle	HA-11
Release bearing (clutch)	CL-10
Resistor inspection	EC-246
Reverse clutch	AT-72
Reverse gear (MT)	MT-8
Reverse idler shaft (MT)	MT-8
Reverse lamp switch (MT) - See Back-up lamp switch (MT)	MT-4
Ring gear diff. inspection (C200)	PD-62
Ring gear diff. inspection (H190A)	PD-40
Ring gear diff. inspection (H233B)	PD-85
Road wheel size	GI-36
Roof trim	BT-15
Room lamp	EL-63
Room lamp - See Interior lamp	EL-63
Rotor disc (front)	FA-24

S

SAE J1930 terminology list	GI-43
Screw jack	GI-37
Seal - See Exterior	BT-17
Seat belt, front	RS-3
Seat belt inspection	MA-23
Seat belt, rear	RS-3
Seat, front	BT-23
Shift control (MT)	MT-10
Shift control (TF)	TF-10
Shift fork (MT)	MT-10
Shift lock system	AT-29
Shift schedule	AT-11
Shock absorber (front)	FA-36
Shock absorber (rear)	RA-10
Side bearing preload diff. (C200)	PD-69
Side bearing preload diff. (H190A)	PD-46
Side bearing preload (front final drive 4WD)	PD-24
Side trim	BT-13
Side window - See Rear side window	BT-29
SMJ (super multiple junction)	Foldout page
Spare tire size	GI-36
Spark plug replacement	MA-14
Speedometer	EL-72
Spiral cable	RS-10
Spot lamp	EL-63
SRS - See Supplemental Restraint System	RS-6
SRS trouble diagnoses	RS-17
SRS wiring diagram	RS-20
Stabilizer bar (front)	FA-39
Stall test (AT)	AT-16

Standardized relay	EL-4
Starter	EL-22
Starting system	EL-19
Steering gear and linkage inspection	MA-21
Steering gear oil level	MA-21
Steering knuckle	FA-25
Steering linkage	ST-38
Steering switch	EL-34
Steering wheel and column	ST-10
Steering wheel play	ST-7
Steering wheel turning force	ST-7
Stop lamp	EL-50
Striking rod (MT)	MT-10
Sunroof	BT-25
Supplemental Restraint System	RS-6
Swirl control valve control solenoid valve	EC-230
Swirl control valve control vacuum check switch	EC-238
Symbols and abbreviations	GI-7
Synchronizer (MT)	MT-8

T

Tachometer	EL-71
Tail lamp	EL-50
Tank fuel temperature sensor	EC-151
Temperature control cable and linkage adjustment	HA-43
Tension rod (front)	FA-42
Thermal protector	HA-42
Thermo control amp	HA-42
Thermostat	LC-9
Three way catalyst	EC-176
Three way catalyst precautions	GI-4
Throttle bodies	EM-6
Throttle chambers	EM-6
Throttle drum adjustment	FE-2
Throttle position sensor adjustment	EC-60
Throttle position sensor inspection	EC-118
Throttle position sensor (TPS)	EC-114
Throwout bearing - See Clutch release bearing	CL-10
Tie-rod	ST-38
Tie-rod ball joints	ST-38
Tightening torque of standard bolts	GI-42
Timing chain	EM-10
Tire rotation	MA-19
Tire size	GI-36
Tooth contact diff. (C200)	PD-74
Tooth contact diff. (H190A)	PD-51
Tooth contact diff. (H233B)	PD-95
Tooth contact (front final drive 4WD)	PD-29
Torque converter clutch solenoid valve	AT-27
Torque converter installation	AT-40
Torque convertor clutch solenoid valve DTC0904, P1550	EC-278
Torsion bar spring	FA-36

ALPHABETICAL INDEX

Tow truck towing	GI-40
Towing point	GI-41
Transfer case	TF-8
Transfer gear oil	MA-8
Transfer oil replacement	MA-18
Transfer overhaul	TF-8
Transfer removal and installation	TF-6
Transfer serial number	GI-35
Transmission case (MT).....	MT-7
Transmission serial number	GI-35
Tread-FR&RR (Dimensions)	GI-36
Trim	BT-13
Turn signal lamp.....	EL-52
Two trip detection logic	EC-31
Two-pole lift	GI-39

U

Under body.....	BT-36
Upper link (front susp.).....	FA-40

V

Vacuum cut valve	EC-263
Vacuum cut valve bypass valve	EC-259
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (ECCS)	EC-10
Valve clearance	EM-23
Valve guide inspection	EM-21
Valve seat inspection	EM-22
Valve spring inspection	EM-24
Vehicle identification number	GI-34
Vehicle recovery (Freeing a stuck vehicle).....	GI-41
Vehicle speed sensor (VSS)	EC-206

Ventilator door control rod adjustment	HA-42
Viscosity number (SAE)	MA-9

W

Warning chime	EL-82
Warning lamps	EL-76
Washer, front	EL-93
Water cock control rod adjustment	HA-43
Water pump	LC-8
Water temperature gauge	EL-69
Weatherstrip - See Exterior.....	BT-17
Wheel alignment (front).....	FA-8
Wheel balance.....	MA-19
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear)	RA-4
Wheel hub (front)	FA-24
Wheel sensors (ABS).....	BR-30
Wheel size.....	GI-36
Wheelbase (Dimensions)	GI-36
Wide open & closed throttle position (CTP) switch	EC-114
Width (Dimensions)	GI-36
Window antenna.....	EL-126
Window, back	BT-28
Window, door.....	BT-9
Window, rear side.....	BT-29
Window, side - See Rear side window	BT-29
Windshield	BT-26
Windshield washer - See Front washer.....	EL-93
Windshield wiper - See Front wiper.....	EL-92
Wiper and washer	EL-92
Wiper, front.....	EL-92
Withdrawal lever (clutch).....	CL-10
Wrist pin - See Piston pin inspection.....	EM-33