


SUPER MULTIPLE JUNCTION (SMJ)

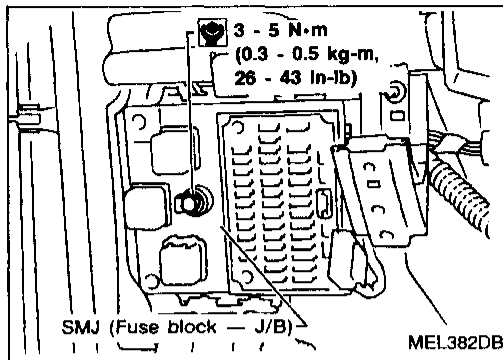


INSTALLATION

To install FUSE BLOCK (J/B) and SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

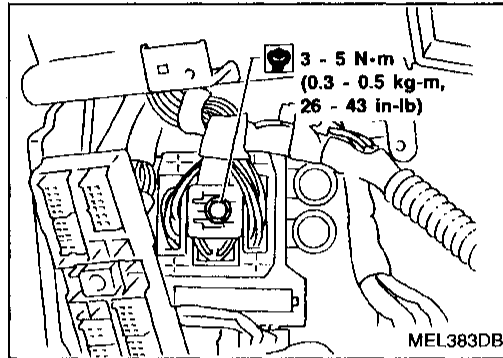


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement




MAIN HARNESS

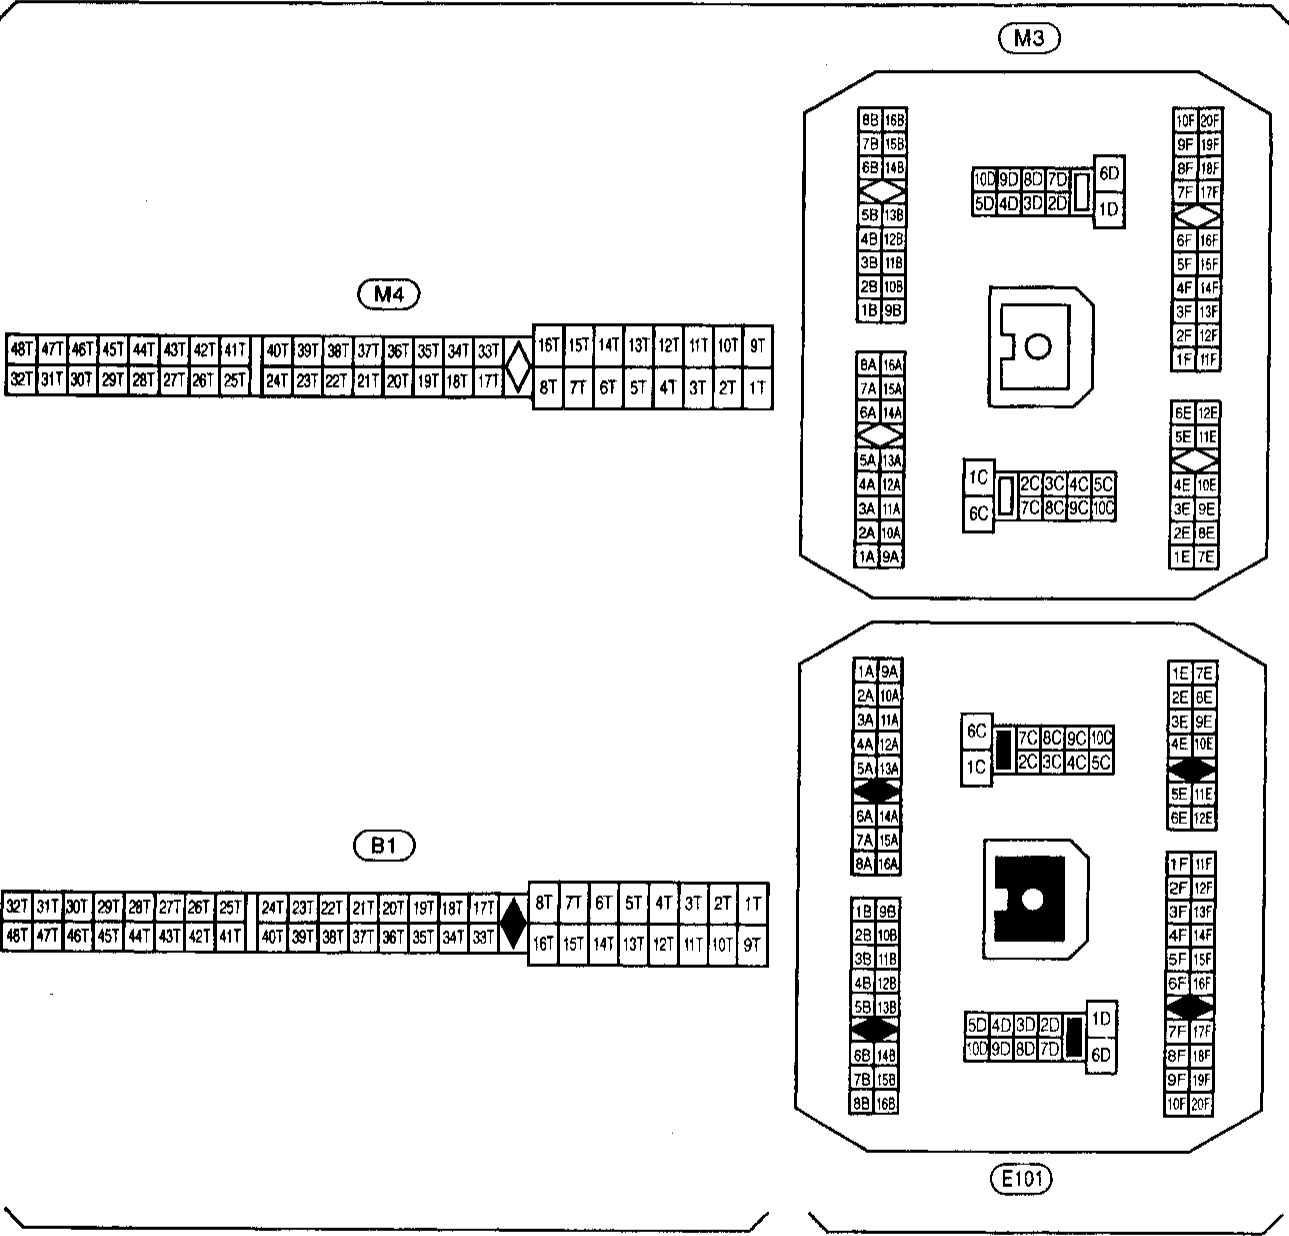


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

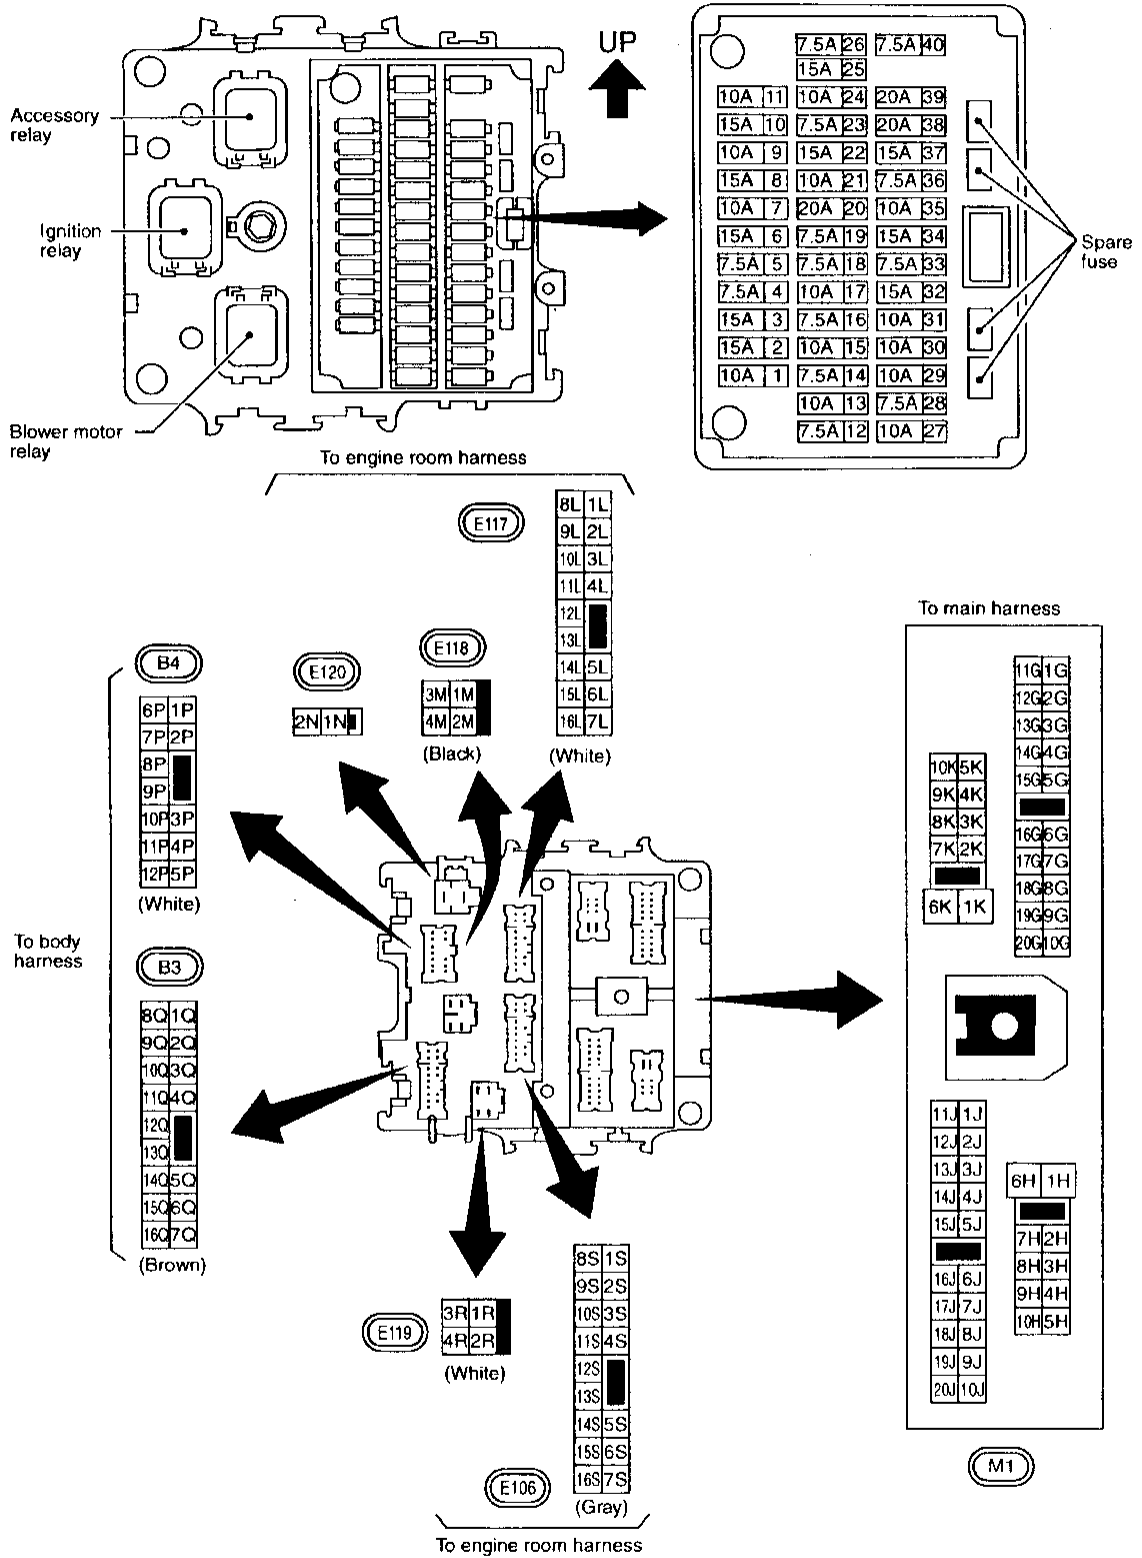

FUSE AND FUSIBLE LINK BOX


Terminal Arrangement

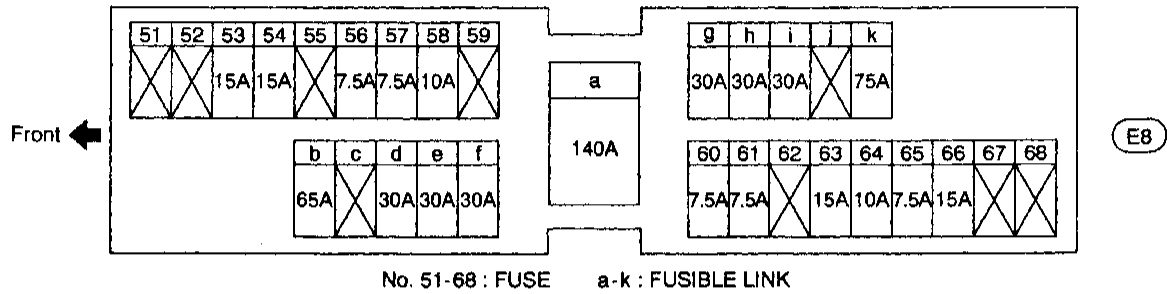


ELECTRICAL UNITS

Terminal Arrangement


ECM (ECCS CONTROL MODULE) (F101)

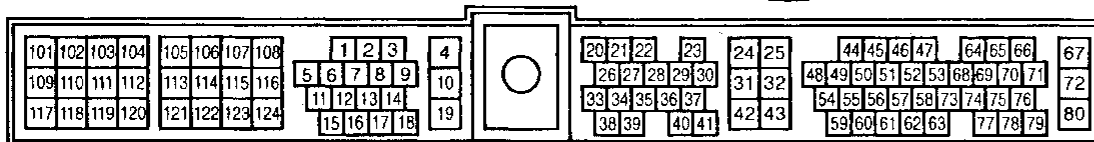


A/T CONTROL UNIT (F103)

 


ABS CONTROL UNIT (E114)

 


BCM (BODY CONTROL MODULE)

 

A/C AUTO AMP. (In BCM)

 

AIR BAG DIAGNOSIS SENSOR UNIT (Z4)

 


JOINT CONNECTOR (J/C)

Terminal Arrangement



J/C-1 (E9)

 
J/C-2 (E10)



J/C-5 (E48)


J/C-7 (E50)

 (White)



J/C-3 (E11)


 
J/C-4 (E12)



J/C-6 (E49)



J/C-8 (E51)

  (Gray)





J/C-9 (E104)

  (Sky blue)





J/C-10 (M80)

  (Sky blue)



J/C-11 (F106)

  (Gray)



J/C-12 (F107)

(Blue)