

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS sensor rotorAX-19
Absolute pressure sensorEC-196
A/C air flowHA-25
A/C component layoutHA-19
A/C compressor clutch removal and
installationHA-112
A/C compressor precautionHA-7
A/C compressor special service toolHA-10
A/C control operation (auto A/C)HA-23
A/C diagnostic work flow (auto A/C)HA-46
A/C HFC134a (R134a) system
precautionHA-2
A/C HFC134a (R134a) system service
procedureHA-107
A/C HFC134a (R134a) system service
toolsHA-11
A/C HFC134a system service equip-
ment precautionHA-7
A/C lubricant (R134a)HA-109
A/C operational checkHA-47
A/C performance chartHA-84
A/C performance test diagnosesHA-82
A/C relayHA-80
A/C self-diagnoses (auto A/C)HA-36
A/C service data specificationHA-124
A/C system description (auto A/C)HA-23
A/C trouble diagnoses (auto A/C)HA-27
A/C, A - Wiring diagramHA-30
Accelerator control systemFE-3
Accelerator pedal position (APP)
sensorEC-296, 303, 552
Air bagRS-14
Air bag disposalRS-26
Air bag precautionsGI-3
Air bleeding for brake systemBR-9
Air cleaner filter replacementMA-16
Air conditioner cut controlEC-35
Air flow meter - See Mass air flow
sensorEC-183, 190, 457
Air mix door control linkage adjustmentHA-62
Air mix. door motorHA-60, 106
Air spoiler, rearBT-41
AlternatorSC-30
Ambient sensorHA-93
Angular tightening applicationEM-3
Antenna - See Power antennaEL-204
ASCD (automatic speed control device)EL-260
A/T - Wiring diagramAT-16
A/T - Wiring diagram - AT - FTSAT-113
A/T - Wiring diagram - AT - MAINAT-102
A/T - Wiring diagram - AT - PNP/SWAT-107
A/T - Wiring diagram - AT - VSS A/TAT-119, 215
A/T fluid temperature sensorAT-111
A/T IND - Wiring diagramEL-158
AT indicator lampEL-158
A/T self-diagnosesAT-41, 51
A/T shift lock systemAT-272

A/T shift lock system - Wiring diagramAT-273
A/T trouble diagnosesAT-57
A/T Wiring diagram - AT - ENG SSAT-124
A/T Wiring diagram AT - 1STAT-130
A/T Wiring diagram AT - 2NDAT-136
A/T Wiring diagram AT - 3RDAT-142
A/T Wiring diagram AT - 4THAT-149
A/T Wiring diagram AT - BA/FTSAT-199
A/T Wiring diagram AT - CANAT-211
A/T Wiring diagram AT - LPSVAT-171
A/T Wiring diagram AT - NONDTCAT-222
A/T Wiring diagram AT - OVRCSVAT-194
A/T Wiring diagram AT - SSV/AAT-177
A/T Wiring diagram AT - SSV/BAT-182
A/T Wiring diagram AT - TCCSIGAT-162
A/T Wiring diagram AT - TCVAT-156
A/T Wiring diagram AT - TPSAT-188
A/T Wiring diagram AT - VSSMTRAT-206
AudioEL-194
AUDIO - Wiring diagramEL-196
Audio and A/C control removal and
installation - See Instrument panelBT-29
AUT/DP - Wiring diagramEL-221
Auto air conditioner - Wiring diagramHA-30
Auto anti-dazzling inside mirrorEL-213
Automatic amplifierHA-34, 50
Automatic drive positionerEL-216
Automatic speed control system - See
ASCDEL-260
Automatic transmission fluid
replacementMA-21
Automatic transmission numberGI-45

B

Back-up lampEL-75
BACK/L - Wiring diagramEL-75
Ball joint (front)SU-13
Basic inspectionEC-119
BatterySC-4
Battery/Starting/Charging System
TesterSC-7, 13, 23
B/COMP - Wiring diagramEL-142
Blower and cooling unitHA-117
Blower motorHA-66
Board computerEL-140
Board-on liftGI-47
Body alignmentBT-63
Brake boosterBR-20
Brake fluid changeBR-8
Brake fluid levelMA-23
Brake fluid level and line checkBR-8
Brake hydraulic lineBR-10
Brake inspectionMA-23
Brake lines and cables inspectionMA-23
Brake master cylinderBR-14, 17
Brake pedalBR-12
Brake switchEC-681
BRK/SW - Wiring diagramEC-682
Bulb specificationsEL-500

ALPHABETICAL INDEX

Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-630, 637

C

Camshaft inspectionEM-46
 Camshaft position sensor (PHASE).....EC-329
 CAN (Controller Area Network)EL-443, 445, 458
 CAN - Wiring diagramEL-446, 459
 CAN communicationAT-100, BR-61, 100,
 EL-443, 445, 458
 Canister - See EVAP canisterEC-36
 CHARGE - Wiring diagramSC-22
 Charging systemSC-21
 Chassis and body maintenanceMA-20
 CHIME - Wiring diagram.....EL-162
 CIGAR - Wiring diagram.....EL-181
 Cigarette lighter.....EL-181
 Circuit breaker.....EL-19
 ClockEL-182
 CLOCK - Wiring diagram.....EL-182
 Closed loop control (Bank 1)EC-518
 Closed loop control (Bank 2)EC-518
 Coil spring (front).....SU-9
 Coil spring (rear)SU-22
 Collision diagnosis.....RS-63
 Combination lamp, rear, removal and
 installationBT-41
 Combination meter.....EL-124
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-29
 Combination switch.....EL-32
 COMPAS - Wiring diagramEL-148
 CompassEL-146
 Component Location (auto A/C).....HA-27
 Compression pressure.....EM-13
 Compressor clutch removal and
 installationHA-112
 Compressor precautionHA-7
 Compressor special service toolHA-10
 Connecting rod.....EM-67
 Connecting rod bearing clearance.....EM-71
 Connecting rod bushing clearanceEM-72
 Connector inspection.....GI-21
 Console box - See Instrument panelBT-29
 CONSULT for engineEC-99
 CONSULT for TCSBR-47
 Control valve (A/T)AT-310
 Controller Area Network (CAN)EL-443, 445, 458
 Converter housing installation.....AT-371
 COOL/F - Wiring diagramEC-528
 Coolant mixture ratio.....MA-12
 Coolant replacement.....MA-14
 Cooling circuit (engine).....LC-12
 Cooling fan controlEC-524
 Cooling fan control systemLC-22
 CORNER - Wiring diagram.....EL-88
 Cornering lampEL-86

Crankcase emission control system -
 See positive crankcase ventilationEC-51
 Crankshaft.....EM-69
 Crankshaft position sensor (POS)EC-322
 Crash zone sensorRS-19
 Cruise control - See ASCDEL-260
 Cylinder blockEM-64
 Cylinder head.....EM-42
 Cylinder head bolt tighteningEM-53

D

Data link connector for Consult.....EC-99
 Daytime light system.....EL-52
 Daytime running light - See Daytime
 light systemEL-52
 DEF - Wiring diagramEL-184
 Detonation sensor - See Knock sensorEC-317
 Diagnostic sensor unit.....RS-18
 Diagnostic trouble code (DTC) for OBD
 systemEC-9, 76
 Diagnostic trouble code (DTC) inspec-
 tion priority chart.....EC-124
 Differential gear (FF A/T)AT-354
 DimensionsGI-46
 DLC - Wiring diagramEC-750
 D/LOCK - Wiring diagram.....EL-278
 Dome light - See Interior lampEL-99
 Door glass.....BT-21
 Door lock.....BT-25
 Door mirror.....BT-61
 Door trimBT-36
 Door, frontBT-20
 Door, rearBT-20
 Drive plate runoutEM-73
 Drive shaft (front).....AX-9
 Dropping resistor (A/T).....AT-169
 DTC work support.....EC-111
 DTRL - Wiring diagramEL-56

E

ECM input/output signalEC-136
 ECM power supplyEC-453
 ECM/PW - Wiring diagram.....EC-454
 ECTS - Wiring diagramEC-204
 Electric sun roofEL-207
 Electric throttle control actuatorEC-463, 465
 Electrical diagnoses.....GI-24
 Electrical ignition system.....EC-34
 Electrical unitFoldout
 Electrical units locationEL-473
 EMNT - Wiring diagram.....EC-724
 Engine compartment.....BT-64
 Engine control circuit diagram.....EC-28
 Engine control component parts
 locationEC-24
 Engine control module (ECM).....EC-447

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Engine control system diagram and chart.....	EC-29
Engine coolant temperature sensor (ECTS).....	EC-202, 207
Engine fail-safe system	EC-125
Engine mounting control (Front)	EC-723
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-16
Engine outer component parts	EM-9
Engine removal	EM-60
Engine room - See Engine compartment.....	BT-64
Engine serial number	GI-45
EVAP canister.....	EC-37
EVAP canister purge volume control solenoid valve.....	EC-36, 368, 579
EVAP canister vent control valve	EC-375, 592, 600
EVAP control system (small leak) diagnosis	EC-353, 409, 564, 609
EVAP control system pressure sensor	EC-382, 388
EVAP control system purge flow monitoring diagnosis.....	EC-343
EVAP vapor lines inspection.....	MA-19
Evaporative emission (EVAP) system.....	EC-36
Exhaust system	FE-9
Exhaust system inspection	MA-20
Exterior.....	BT-41

F

Fan control amp.	HA-68
F/FOG - Wiring diagram	EL-77
Final drive (FF A/T)	AT-354
Finisher, interior - See Trim	BT-33
Finisher, trunk lid.....	BT-40
F/LID - Wiring diagram	EL-214
Floor trim.....	BT-33
FLS1 - Wiring diagram	EC-425
FLS2 - Wiring diagram	EC-431
Fluid temperature sensor (A/T)	AT-111
Fluids.....	MA-11
Fog lamp, front.....	EL-76
Fog lamp, front, removal and installation	BT-13
Forward clutch.....	AT-332
F/PUMP - Wiring diagram	EC-717
Freeze frame data	EC-77
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-23
Front door	BT-20
Front fog lamp.....	EL-76
Front fog lamp removal and installation	BT-13
Front passenger air bag.....	RS-23
Front seat.....	BT-47

Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-175
Front wiper	EL-175
FTTS - Wiring diagram.....	EC-281
Fuel cut control (at no load & high engine speed).....	EC-36
Fuel gauge	EL-124
Fuel injection system (Bank 1)	EC-261, 269
Fuel injection system (Bank 2)	EC-261, 269
Fuel level sensor.....	EC-424, 428
Fuel lid opener, electric.....	EL-214
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check.....	EC-56
Fuel pressure release	EC-56
Fuel pump	EC-716
Fuel system	FE-4
Fuel tank temperature sensor.....	EC-276, 279
Fuel tank vacuum relief valve	EC-37
FUELB1 - Wiring diagram.....	EC-263, 271
FUELB2 - Wiring diagram.....	EC-264, 272
Fuse	EL-19
Fuse block	Foldout
Fusible link	EL-19

G

Garage jack and safety stand	GI-48
Gauges.....	EL-124
Generator - See Alternator	SC-30
Generic scan tool (GST).....	EC-113
Glass	BT-21
Grease.....	MA-11
Ground distribution.....	EL-20

H

Harness connector	EL-7
Harness connector inspection	GI-21
Harness layout	EL-477
Hazard warning lamp.....	EL-81
Headlamp.....	EL-38
Headlamp removal and installation	BT-13
Headlining - See Roof trim	BT-38
Heated oxygen sensor 1 (bank 1).....	EC-214, 222, 234, 484, 491
Heated oxygen sensor 1 (bank 2).....	EC-214, 222, 234, 484, 491
Heated oxygen sensor 1 heater (bank 1).....	EC-170
Heated oxygen sensor 1 heater (bank 2).....	EC-170
Heated oxygen sensor 2 (bank 1).....	EC-243, 251, 498, 508
Heated oxygen sensor 2 (bank 2).....	EC-243, 251, 498, 508

ALPHABETICAL INDEX

Heated oxygen sensor 2 heater (bank 1).....	EC-176
Heated oxygen sensor 2 heater (bank 2).....	EC-176
Heated seat.....	BT-49, EL-251
Heated steering.....	EL-35
Heater unit (heater core)	HA-116
Height (Dimensions)	GI-46
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure.....	HA-107
HFC134a (R134a) system service tools	HA-11
HFC134a system service equipment precaution	HA-7
High clutch.....	AT-327
H/LAMP - Wiring diagram	EL-42
Homelink universal transceiver	EL-367
Hood.....	BT-13
Horn	EL-180
HORN - Wiring diagram.....	EL-180
How to erase DTC for OBD system.....	EC-89
HSEAT - Wiring diagram.....	EL-251
H/STRG - Wiring diagram.....	EL-37

I

IATS - Wiring diagram	EC-199
Identification plate.....	GI-45
Idle mixture ratio.....	EC-59
Idle speed.....	EC-59
Ignition control system	EC-695
Ignition timing	EC-59
IGNSYS - Wiring diagram	EC-696
ILL - Wiring diagram	EL-93
Illumination	EL-91
I/MIRR - Wiring diagram	EL-213
In vehicle sensor	HA-97
INJECT - Wiring diagram	EC-707
Injector.....	EC-706
Injector removal and installation	EC-57
Instrument panel	BT-29
INT/L - Wiring diagram.....	EL-103
Intake air temperature sensor.....	EC-198, 210
Intake door control linkage adjustment	HA-65
Intake door motor	HA-63
Intake manifold	EM-11
Intake sensor	HA-104
Integrated homelink transmitter	EL-367
Interior	BT-33
Interior lamp	EL-99
Interior lamp on-off control.....	EL-101
IVIS (Infiniti vehicle immobilizer system).....	EL-370

J

Jacking points.....	GI-48
Joint connector (J/C)	Foldout

Junction box (J/B).....	Foldout
-------------------------	---------

K

KEYLES - Wiring diagram	EL-298
Keyless entry system - See Multi-re- mote control system	EL-293
Knock sensor (KS)	EC-317
Knuckle spindle	AX-5
KS - Wiring diagram.....	EC-318

L

Length (Dimensions)	GI-46
License lamp.....	EL-65
Lifting points	GI-49
Line pressure solenoid valve	AT-169
Line pressure test (A/T)	AT-67
Liquid gasket application	EM-3
LOAD - Wiring diagram	EC-745
Location of electrical units	EL-473
Lock, door	BT-25
Low and reverse brake	AT-337
Lubricant (R134a) A/C.....	HA-109
Lubricants.....	MA-11
Lubrication circuit (engine)	LC-4
Lubrication-locks, hinges and hood latches	MA-25

M

MAFS - Wiring diagram	EC-186, 192, 459
Magnet clutch.....	HA-75, 112
MAIN - Wiring diagram.....	EC-152
Maintenance (engine)	MA-13
MAJOR OVERHALL.....	AT-284
Malfunction indicator lamp (MIL).....	EC-449
Mass air flow sensor (MAFS)	EC-183, 190, 457
Master cylinder (brake)	BR-14, 17
Meter	EL-124
METER - Wiring diagram.....	EL-128
MIL - Wiring diagram.....	EC-450
MIRROR - Wiring diagram.....	EL-212
Mirror defogger	EL-183
Mirror, door.....	BT-61
Misfire	EC-309
Mode door control linkage adjustment.....	HA-58
Mode door motor.....	HA-53
Model variation	GI-43
Molding - See Exterior	BT-41
MULTI - Wiring diagram.....	EL-298
Multi-remote control system.....	EL-293
Multiport fuel injection (MFI) system	EC-32
Multiport fuel injection precautions.....	GI-6

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

EL

IDX

ALPHABETICAL INDEX

N

NATS (Nissan anti-theft system) precautions	GI-4
NATS - Wiring diagram	EL-372
NAVI - wiring diagram	EL-400
Navigation System	EL-390
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-7
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-4
NVIS (Nissan vehicle immobilizer system)	EL-370
NVIS (Nissan vehicle immobilizer system) precautions	GI-4

O

O2H1B1 - Wiring diagram	EC-172
O2H1B2 - Wiring diagram	EC-173
O2H2B1 - Wiring diagram	EC-178
O2H2B2 - Wiring diagram	EC-179
O2S1B1 - Wiring diagram	EC-216, 225, 237
O2S1B2 - Wiring diagram	EC-217, 226, 238
O2S2B1 - Wiring diagram	EC-245, 254, 501, 511
O2S2B2 - Wiring diagram	EC-246, 255, 502, 512
Oil change (capacity)	MA-11
Oil cooler (engine)	LC-9
Oil pan (engine)	EM-14
Oil pressure (engine)	LC-6
Oil pump (A/T)	AT-306
Oil pump (engine)	LC-6
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-39
On board diagnostic system	EC-75
ORVR (On-board Refueling Vapor Recovery)	EC-42
Overdrive control switch	AT-265
Overheat	EC-524
Overrun clutch	AT-332
Overrun clutch solenoid valve	AT-192

P

P/ANT - Wiring diagram	EL-204
Park/Neutral position switch	EC-671
Park/neutral position switch (A/T)	AT-105
Parking brake control	BR-35
Parking lamp	EL-65
PCV (positive crankcase ventilation)	EC-51
PGC/V - Wiring diagram	EC-370, 582
PHASE - Wiring diagram	EC-331
PHONE - Wiring diagram	EL-215
Piston assembly	EM-73
Piston pin inspection	EM-66
Piston ring inspection	EM-66
Piston to bore clearance	EM-68

PNP/SW - Wiring diagram	EC-673
POS - Wiring diagram	EC-324
POWER - Wiring diagram	EL-12
Power antenna	EL-204
Power door lock	EL-276
Power door mirror	EL-212
Power seat	EL-250
Power steering fluid level	MA-24, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pump	ST-25
Power steering pressure (PSP) sensor	EC-442
Power steering system bleeding	ST-7
Power supply routing	EL-11
Power transistor & ignition coil	EC-695
Power window	EL-261
PRE/SE - Wiring diagram	EC-384, 390
Precautions (General)	GI-4
Pressure test (A/T)	AT-67
PS/SEN - Wiring diagram	EC-443

R

Radiator	LC-21, 22
Radio - See Audio	EL-194
Rear air spoiler	BT-41
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-41
Rear disc brake	BR-27
Rear door	BT-20
Rear seat	BT-50
Rear seat belt	RS-7
Rear sunshade	EL-254
Rear suspension	SU-16
Rear window	BT-59
Rear window defogger	EL-183
Refrigerant pressure sensor	HA-80
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-107
Refrigerant general precaution	HA-3
Refrigerant lines	HA-118
Refrigerant pressure sensor	EC-727
Refrigeration cycle	HA-14
Remote keyless entry system	EL-293
Removal and installation (A/T)	AT-281
Reverse clutch	AT-324
Revolution sensor (A/T)	AT-117
Road wheel size	GI-46
Roof trim	BT-38
Room lamp - See Interior lamp	EL-99
RP/SEN - Wiring diagram	EC-728

ALPHABETICAL INDEX

S

SAE J1930 terminology list	GI-53
Seal - See Exterior	BT-41
SEAT - Wiring diagram	EL-250
Seat belt inspection	MA-26, RS-9
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-26
Seat belt, front	RS-5
Seat belt, rear	RS-7
Seat, front	BT-47
Seat, rear	BT-50
SHADE - Wiring diagram	EL-256
SHIFT - Wiring diagram	AT-273
Shift lock system	AT-272
Shift schedule	AT-377
Shift solenoid valve A (A/T)	AT-175
Shift solenoid valve B (A/T)	AT-180
Shock absorber (front)	SU-10
Shock absorber (rear)	SU-22
Side air bag	RS-25
Side trim	BT-33
Smart entrance control unit	EL-357
SMJ (super multiple junction)	Foldout
Spare tire size	GI-46
Spark plug replacement	MA-18
Speedometer	EL-124
Spiral cable	RS-21
Spot lamp	EL-99
Spring (Wheelarch) height	SU-6
SROOF - Wiring diagram	EL-208
SRS - See Supplemental Restraint System	RS-14
SRS - Wiring diagram	RS-39
S/SIG - Wiring diagram	EC-713
Stabilizer bar (front)	SU-11
Stall test (A/T)	AT-63
Standardized relay	EL-9
START - Wiring diagram	SC-11
Start signal	EC-712
Starter	SC-19
Starting system	SC-10
Steering gear and linkage inspection	MA-24
Steering linkage	ST-15
Steering switch	EL-34
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Step lamp	EL-99
STEP/L - Wiring diagram	EL-103
Stop lamp	EL-73
STOP/L - Wiring diagram	EL-73
Strut (front)	SU-9
Strut (rear)	SU-20
Sunload sensor	HA-100
Sunroof	BT-51
Sunroof, electric	EL-207
Supplemental Restraint System	RS-14

Supplemental restraint system - Wiring diagram	RS-39
Symbols and abbreviations	GI-10
Symptom matrix chart	EC-126
System readiness test (SRT) code	EC-77

GI

T

Tachometer	EL-124
Tail lamp	EL-65
TAIL/L - Wiring diagram	EL-67
TCM circuit diagram	AT-16
TCM inspection table	AT-97
TCS (traction control system)	BR-37
TCS - Wiring diagram	BR-42
TCS component parts and connector location	BR-41
TCS control unit	BR-39
TCS system components	BR-38
TCS trouble diagnoses	BR-55, 132
TCS wheel sensors	BR-41
Telephone	EL-215
THEFT - Wiring diagram	EL-332
Theft warning system	EL-324
Thermometer	EL-146
Thermostat	LC-19
Three way catalyst precautions	GI-6
Throttle body	EM-11
Throttle control motor	EC-479
Throttle control motor relay	EC-473
Throttle position sensor (TPS)	EC-284, 290, 542, 548, 550
Throttle position switch	AT-185
Tie-rod	ST-15
Tie-rod ball joints	ST-19
Tightening torque of standard bolts	GI-51
Timing chain	EM-21
Tire rotation	MA-23
Tire size	GI-46
TLID - Wiring diagram	EL-214
Torque converter clutch solenoid valve	AT-154
Torque converter installation	AT-282, 371
Tow truck towing	GI-50
Traction control system - See TCS	BR-37
Traction control system - Wiring diagram	BR-42
TRANSMT - Wiring diagram	EL-367
Tread-FR&RR (Dimensions)	GI-46
Trim	BT-33
TRNSCV - Wiring diagram	EL-367
Trouble diagnoses	GI-34
Trunk lid	BT-16
Trunk lid finisher	BT-40
Trunk lid opener - See Trunk lid	BT-16
Trunk lid opener, electric	EL-214
Trunk lid trim	BT-40
Trunk room lamp	EL-99
Trunk room trim	BT-40
Turbine revolution sensor	AT-213
TURN - Wiring diagram	EL-83

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Turn signal lampEL-81
 Two trip detection logicEC-75
 Two-pole liftGI-49

U

Under bodyBT-66

V

Vacuum cut valveEC-36
 Vacuum cut valve bypass valve.....EC-36, 628, 634
 Vacuum hose (brake system).....BR-22
 Vacuum hose drawing (Engine control)EC-30
 Valve clearance.....EM-56
 Valve guide.....EM-48
 Valve seat.....EM-49
 Valve spring.....EM-50
 Vanity mirror lampEL-99
 Vehicle recovery (freeing a stuck
 vehicle).....GI-50
 Vehicle security (theft warning) systemEL-324
 Vehicle speed sensor (VSS)EC-434
 VEHSEC - Wiring Diagram.....EL-332
 VENT/V - Wiring diagramEC-377, 594, 603
 Ventilation air filterHA-123
 VIASEC-676, 687
 VIAS - Wiring diagramEC-689
 Viscosity number (SAE)MA-11
 VSS - Wiring diagramEC-436

W

WARN - Wiring diagramEL-150
 Warning chimeEL-160
 Warning lampsEL-149
 Washer, front.....EL-175
 Water pumpLC-14
 Water temperature gaugeEL-124
 Weatherstrip - See ExteriorBT-41
 Wheel alignment (front).....SU-6
 Wheel alignment (rear).....SU-18
 Wheel balanceMA-21
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-5
 Wheel hub (rear)AX-19
 Wheel sensor (VDC)BR-172
 Wheel sensors (TCS).....BR-172
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-46
 Width (Dimensions)GI-46
 WINDOW - Wiring diagramEL-265
 Window, rearBT-59
 Windshield.....BT-59
 WIPER - Wiring diagramEL-177
 Wiper, front.....EL-175
 Wiring Diagram (Cell code) list.....EL-501
 Wiring diagramsGI-11
 Wrist pin - See Piston pin inspection.....EM-66