

SECTION **ATC**

AUTOMATIC AIR CONDITIONER

A
B
C
D
E
F
G
H
I
K
L
M

CONTENTS

<p>PRECAUTIONS 5</p> <p>Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 5</p> <p>Precautions for Working with HFC-134a (R-134a).... 6</p> <p style="padding-left: 20px;">CONTAMINATED REFRIGERANT 6</p> <p>General Refrigerant Precautions 7</p> <p>Lubricant Precautions 7</p> <p>Precautions for Refrigerant Connection 8</p> <p style="padding-left: 20px;">ABOUT ONE-TOUCH JOINT 8</p> <p style="padding-left: 20px;">FEATURES OF NEW TYPE REFRIGERANT CONNECTION 10</p> <p style="padding-left: 20px;">O-RING AND REFRIGERANT CONNECTION.... 11</p> <p>Precautions for Servicing Compressor 13</p> <p>Precautions for Service Equipment 13</p> <p style="padding-left: 20px;">RECOVERY/RECYCLING EQUIPMENT 13</p> <p style="padding-left: 20px;">ELECTRONIC LEAK DETECTOR 13</p> <p style="padding-left: 20px;">VACUUM PUMP 13</p> <p style="padding-left: 20px;">MANIFOLD GAUGE SET 13</p> <p style="padding-left: 20px;">SERVICE HOSES 14</p> <p style="padding-left: 20px;">SERVICE COUPLERS 14</p> <p style="padding-left: 20px;">REFRIGERANT WEIGHT SCALE 14</p> <p style="padding-left: 20px;">CALIBRATING ACR4 WEIGHT SCALE 14</p> <p style="padding-left: 20px;">CHARGING CYLINDER 15</p> <p>Precautions for Leak Detection Dye 15</p> <p style="padding-left: 20px;">IDENTIFICATION 15</p> <p style="padding-left: 20px;">IDENTIFICATION LABEL FOR VEHICLE 15</p> <p>Wiring Diagrams and Trouble Diagnosis 15</p> <p>PREPARATION 16</p> <p>Special Service Tools 16</p> <p>HFC-134a (R-134a) Service Tools and Equipment.. 16</p> <p>Commercial Service Tools 19</p> <p>REFRIGERATION SYSTEM 20</p> <p>Refrigerant Cycle 20</p> <p style="padding-left: 20px;">REFRIGERANT FLOW 20</p> <p style="padding-left: 20px;">FREEZE PROTECTION 20</p> <p>Refrigerant System Protection 20</p> <p style="padding-left: 20px;">REFRIGERANT PRESSURE SENSOR 20</p> <p style="padding-left: 20px;">PRESSURE RELIEF VALVE 20</p> <p>Component Layout 21</p>	<p>LUBRICANT 22</p> <p>Maintenance of Lubricant Quantity in Compressor.. 22</p> <p style="padding-left: 20px;">LUBRICANT 22</p> <p style="padding-left: 20px;">LUBRICANT RETURN OPERATION 22</p> <p style="padding-left: 20px;">LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR 23</p> <p style="padding-left: 20px;">LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT 23</p> <p>AIR CONDITIONER CONTROL 25</p> <p>Description of Air Conditioner LAN Control System.. 25</p> <p>System Construction 25</p> <p>OPERATION 25</p> <p>TRANSMISSION DATA AND TRANSMISSION ORDER 26</p> <p>AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL) 27</p> <p>FAN SPEED CONTROL 27</p> <p>INTAKE DOOR CONTROL 27</p> <p>OUTLET DOOR CONTROL 27</p> <p>MAGNET CLUTCH CONTROL 27</p> <p>SELF-DIAGNOSTIC SYSTEM 27</p> <p>Description of Control System 28</p> <p>Control Operation 28</p> <p style="padding-left: 20px;">DISPLAY SCREEN 29</p> <p style="padding-left: 20px;">AUTO SWITCH 29</p> <p style="padding-left: 20px;">TEMPERATURE DIAL (POTENTIO TEMPERATURE CONTROL) (DRIVER SIDE) 29</p> <p style="padding-left: 20px;">TEMPERATURE DIAL (POTENTIO TEMPERATURE CONTROL) (PASSENGER SIDE) 29</p> <p style="padding-left: 20px;">RECIRCULATION (REC) SWITCH 29</p> <p style="padding-left: 20px;">FRESH (FRE) SWITCH 29</p> <p style="padding-left: 20px;">DEFROSTER (DEF) SWITCH 29</p> <p style="padding-left: 20px;">REAR WINDOW DEFOGGER SWITCH 29</p> <p style="padding-left: 20px;">OFF SWITCH 29</p> <p style="padding-left: 20px;">A/C SWITCH 29</p> <p style="padding-left: 20px;">MODE SWITCH 29</p> <p style="padding-left: 20px;">FAN CONTROL DIAL 29</p> <p style="padding-left: 20px;">DUAL SWITCH (WITH LEFT AND RIGHT VENTILATION TEMPERATURE SEPARATELY</p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

ATC

CONTROL SYSTEM)	29	INSPECTION FLOW	84
Fail-safe Function	30	SYSTEM DESCRIPTION	85
Discharge Air Flow	31	COMPONENT DESCRIPTION	86
System Description	32	DIAGNOSTIC PROCEDURE FOR MODE	
SWITCHES AND THEIR CONTROL FUNCTION..	32	DOOR MOTOR	86
CAN Communication System Description	33	Air Mix Door Motor Circuit	87
CAN Communication Unit For 2WD Models	33	INSPECTION FLOW	87
TYPE 1/TYPE 2/TYPE 3/TYPE 4/TYPE 5/TYPE		SYSTEM DESCRIPTION	88
6/TYPE 7/TYPE 8	34	COMPONENT DESCRIPTION	89
TYPE 9/TYPE 10/TYPE 11/TYPE 12/TYPE 13/		DIAGNOSTIC PROCEDURE FOR AIR MIX	
TYPE 14/TYPE 15/TYPE 16	39	DOOR	89
CAN Communication Unit For AWD Models	44	Air Mix Door Motor PBR Circuit	89
TYPE 17/TYPE 18/TYPE 19/TYPE 20/TYPE 21/		DIAGNOSTIC PROCEDURE FOR AIR MIX	
TYPE 22/TYPE 23/TYPE 24	44	DOOR PBR	89
TYPE 25/TYPE 26/TYPE 27/TYPE 28/TYPE 29/		Intake Door Motor Circuit	90
TYPE 30/TYPE 31/TYPE 32	50	INSPECTION FLOW	90
TROUBLE DIAGNOSIS	55	SYSTEM DESCRIPTION	91
CONSULT-II	55	COMPONENT DESCRIPTION	92
CONSULT-II BASIC OPERATION	55	DIAGNOSTIC PROCEDURE FOR INTAKE	
DATA MONITOR	56	DOOR MOTOR	92
How to Perform Trouble Diagnosis for Quick and		Blower Motor Circuit	93
Accurate Repair	57	INSPECTION FLOW	93
WORK FLOW	57	SYSTEM DESCRIPTION	94
SYMPTOM TABLE	57	COMPONENT DESCRIPTION	95
Component Parts and Harness Connector Location..	58	DIAGNOSTIC PROCEDURE FOR BLOWER	
ENGINE COMPARTMENT	58	MOTOR	95
PASSENGER COMPARTMENT	59	COMPONENT INSPECTION	97
Schematic	60	Magnet Clutch Circuit	98
Wiring Diagram —A/C—	61	INSPECTION FLOW	98
Auto Amp. Terminals and Reference Value	66	SYSTEM DESCRIPTION	99
PIN CONNECTOR TERMINAL LAYOUT	66	DIAGNOSTIC PROCEDURE FOR MAGNET	
TERMINALS AND REFERENCE VALUE FOR		CLUTCH	99
UNIFIED METER AND A/C AMP.	66	COMPONENT INSPECTION	103
Self-diagnosis Function	68	Insufficient Cooling	104
DESCRIPTION	68	INSPECTION FLOW	104
FUNCTION CONFIRMATION PROCEDURE	69	PERFORMANCE TEST DIAGNOSES	105
AUXILIARY MECHANISM: TEMPERATURE		PERFORMANCE CHART	107
SETTING TRIMMER	74	TROUBLE DIAGNOSIS FOR UNUSUAL PRES-	
AUXILIARY MECHANISM: FOOT POSITION		SURE	108
SETTING TRIMMER	75	Insufficient Heating	111
AUXILIARY MECHANISM: INLET PORT MEM-		INSPECTION FLOW	111
ORY FUNCTION	75	Noise	112
Operational Check	76	INSPECTION FLOW	112
CHECKING MEMORY FUNCTION	76	Self-diagnosis	113
CHECKING BLOWER	76	INSPECTION FLOW	113
CHECKING DISCHARGE AIR	76	Memory Function	114
CHECKING RECIRCULATION	77	INSPECTION FLOW	114
CHECKING TEMPERATURE DECREASE	77	Ambient Sensor Circuit	115
CHECKING TEMPERATURE INCREASE	77	COMPONENT DESCRIPTION	115
CHECK A/C SWITCH	77	AMBIENT TEMPERATURE INPUT PROCESS..	115
CHECKING AUTO MODE	78	DIAGNOSTIC PROCEDURE FOR AMBIENT	
Power Supply and Ground Circuit for Auto Amp. ...	78	SENSOR	115
INSPECTION FLOW	78	COMPONENT INSPECTION	117
COMPONENT DESCRIPTION	79	In-vehicle Sensor Circuit	118
DIAGNOSTIC PROCEDURE FOR A/C SYSTEM..	79	COMPONENT DESCRIPTION	118
LAN System Circuit	81	DIAGNOSTIC PROCEDURE FOR IN-VEHICLE	
DIAGNOSTIC PROCEDURE FOR LAN CIR-		SENSOR	119
CUIT	81	COMPONENT INSPECTION	120
Mode Door Motor Circuit	84	Sunload Sensor Circuit	121

COMPONENT DESCRIPTION	121	MODE DOOR MOTOR	142	
SUNLOAD INPUT PROCESS	121	Removal and Installation	142	A
DIAGNOSTIC PROCEDURE FOR SUNLOAD		REMOVAL	142	
SENSOR	121	INSTALLATION	142	
COMPONENT INSPECTION	123	AIR MIX DOOR MOTOR	143	B
Intake Sensor Circuit	124	Removal and Installation	143	
COMPONENT DESCRIPTION	124	REMOVAL	143	
DIAGNOSTIC PROCEDURE FOR INTAKE SEN-		INSTALLATION	143	
SOR	124	HEATER CORE	144	C
COMPONENT INSPECTION	125	Removal and Installation	144	
CONTROLLER	126	REMOVAL	144	
Removal and Installation of A/C and AV Switch ..	126	INSTALLATION	144	D
REMOVAL	126	DUCTS AND GRILLES	145	
INSTALLATION	126	Removal and Installation	145	
AUTO AMP	127	REMOVAL	145	E
Removal and Installation of Unified Meter and A/C		INSTALLATION	148	
Amp.	127	REFRIGERANT LINES	149	F
REMOVAL	127	HFC-134a (R-134a) Service Procedure	149	
INSTALLATION	127	SETTING OF SERVICE TOOLS AND EQUIP-		
AMBIENT SENSOR	128	MENT	149	
Removal and Installation	128	Components	151	
REMOVAL	128	Removal and Installation of Compressor	152	G
INSTALLATION	128	REMOVAL	152	
IN-VEHICLE SENSOR	129	INSTALLATION	153	
Removal and Installation	129	Removal and Installation of Compressor Clutch ..	153	H
REMOVAL	129	REMOVAL	153	
INSTALLATION	129	INSTALLATION	155	
SUNLOAD SENSOR	130	Removal and Installation of Low-pressure Flexible		
Removal and Installation	130	Hose	156	I
REMOVAL	130	REMOVAL	156	
INSTALLATION	130	INSTALLATION	156	
INTAKE SENSOR	131	Removal and Installation of High-pressure Flexible		ATC
Removal and Installation	131	Hose	157	
REMOVAL	131	REMOVAL	157	
INSTALLATION	132	INSTALLATION	157	K
BLOWER UNIT	133	Removal and Installation of Low-pressure Pipe 1		
Removal and Installation	133	(Engine Compartment)	158	
REMOVAL	133	REMOVAL	158	L
INSTALLATION	133	INSTALLATION	158	
Disassembly and Assembly	134	Removal and Installation of High-pressure Pipe 1		
BLOWER MOTOR	135	(Engine Compartment)	159	
Removal and Installation	135	REMOVAL	159	M
REMOVAL	135	INSTALLATION	160	
INSTALLATION	135	Removal and Installation of Low-pressure Pipe 2		
INTAKE DOOR MOTOR	136	and High-pressure Pipe 2	160	
Removal and Installation	136	REMOVAL	160	
REMOVAL	136	INSTALLATION	161	
INSTALLATION	136	Removal and Installation of Liquid Tank	162	
IN-CABIN MICROFILTER	137	REMOVAL	162	
Removal and Installation	137	INSTALLATION	162	
FUNCTION	137	Removal and Installation of Condenser	163	
REPLACEMENT TIMING	137	REMOVAL	163	
REPLACEMENT PROCEDURES	137	INSTALLATION	163	
HEATER & COOLING UNIT ASSEMBLY	138	Removal and Installation of Refrigerant Pressure		
Removal and Installation	138	Sensor	164	
REMOVAL	138	REMOVAL	164	
INSTALLATION	139	INSTALLATION	164	
Disassembly and Assembly	140	Removal and Installation of Evaporator	164	
		REMOVAL	164	

INSTALLATION	165	DETECTOR	167
Removal and Installation of Expansion Valve	165	CHECKING PROCEDURE	168
REMOVAL	165	SERVICE DATA AND SPECIFICATIONS (SDS) ...	170
INSTALLATION	165	Compressor	170
Checking for Refrigerant Leaks	166	Lubricant	170
Checking System for Leaks Using the Fluorescent Leak Detector	166	Refrigerant	170
Dye Injection	166	Engine Idling Speed	170
Electronic Refrigerant Leak Detector	167	Belt Tension	170
PRECAUTIONS FOR HANDLING LEAK			

PRECAUTIONS

PRECAUTIONS

PF0:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

AJS001BL

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

PRECAUTIONS

Precautions for Working with HFC-134a (R-134a)

AJS000Y8

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed and compressor malfunction is likely to occur, refer to “CONTAMINATED REFRIGERANT” below. To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment (ACR4) (J-39500-INF) and Refrigerant Identifier.
- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor malfunction is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system, using certified service equipment meeting requirements of SAE J2210 HFC-134a (R-134a) recycling equipment, or J2209 HFC-134a (R-134a) recovery equipment. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
 - Do not allow lubricant (Nissan A/C System Oil Type S) to come in contact with styrofoam parts. Damage may result.

CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment.** If your facility does not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact Nissan Customer Affairs for further assistance.

PRECAUTIONS

General Refrigerant Precautions

AJS000Y9

WARNING:

- Do not release refrigerant into the air. Use approved recovery/recycling equipment to capture the refrigerant every time an air conditioning system is discharged.
- Always wear eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.
- Do not store or heat refrigerant containers above 52°C (125°F).
- Do not heat a refrigerant container with an open flame; if container warming is required, place the bottom of the container in a warm pail of water.
- Do not intentionally drop, puncture, or incinerate refrigerant containers.
- Keep refrigerant away from open flames: poisonous gas will be produced if refrigerant burns.
- Refrigerant will displace oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.
- Do not pressure test or leak test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and HFC-134a (R-134a) have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.

Lubricant Precautions

AJS000YA

- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor malfunction is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
- Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system, using certified service equipment meeting requirements of SAE J2210 HFC-134a (R-134a) recycling equipment, or J2209 HFC-134a (R-134a) recovery equipment. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
- Do not allow lubricant (Nissan A/C System Oil Type S) to come in contact with styrofoam parts. Damage may result.

PRECAUTIONS

AJS000YB

Precautions for Refrigerant Connection

A new type refrigerant connection has been introduced to all refrigerant lines except the following location.


- Expansion valve to evaporator
- Refrigerant pressure sensor to condenser

ABOUT ONE-TOUCH JOINT

Description

- One-touch joints are pipe joints which do not require tools during piping connection.
- Unlike conventional connection methods using union nuts and flanges, controlling tightening torque at connection point is not necessary.
- When removing a pipe joint, use a disconnecter.

COMPONENT PARTS

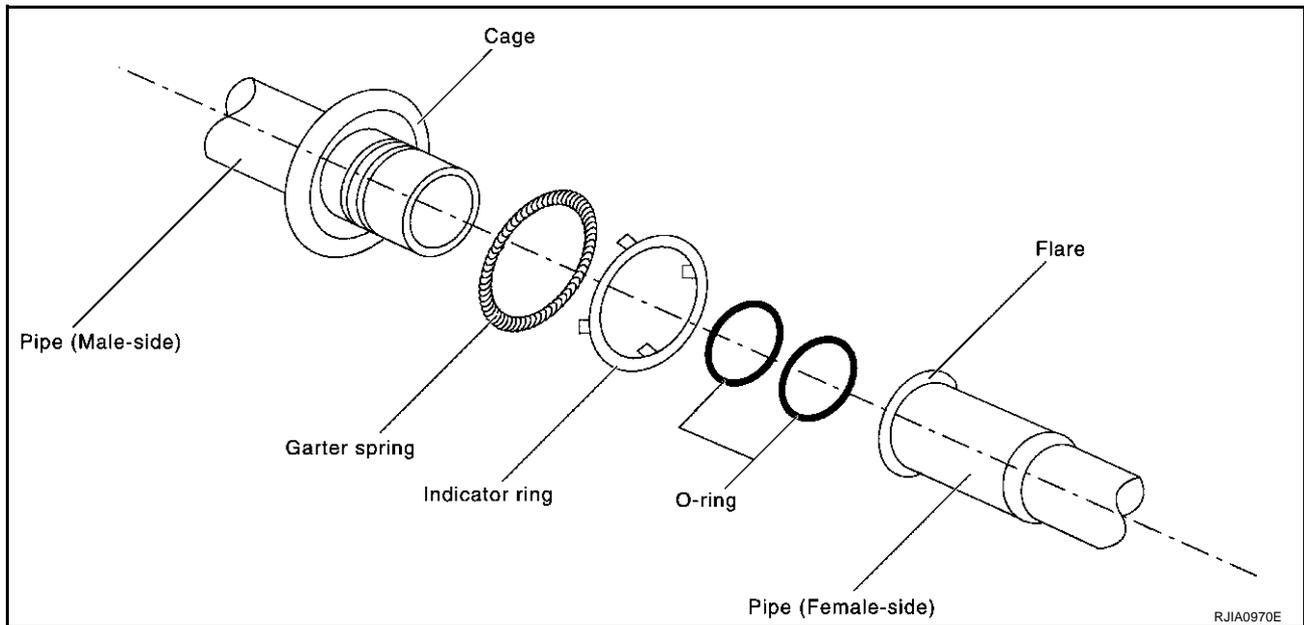

FUNCTIONS OF COMPONENT PARTS


Pipe (Male side)	<ul style="list-style-type: none">● Retains O-rings.● Retains garter spring in cage.
Garter spring	Anchors female side piping.
Indicator ring	When connection is made properly, this is ejected from male-side piping. (This part is no longer necessary after connection.)
O-ring	Seals connection point. (Not reusable)
Pipe (Female side)	<ul style="list-style-type: none">● Seals connection by compressing O-rings.● Anchors piping connection using flare and garter spring.

NOTE:

- Garter spring cannot be removed from cage of male-side piping.
- Indicator ring remains near piping connection point, however, this is not a malfunction. (This is to check piping connection during factory assembly.)


PRECAUTIONS

REMOVAL

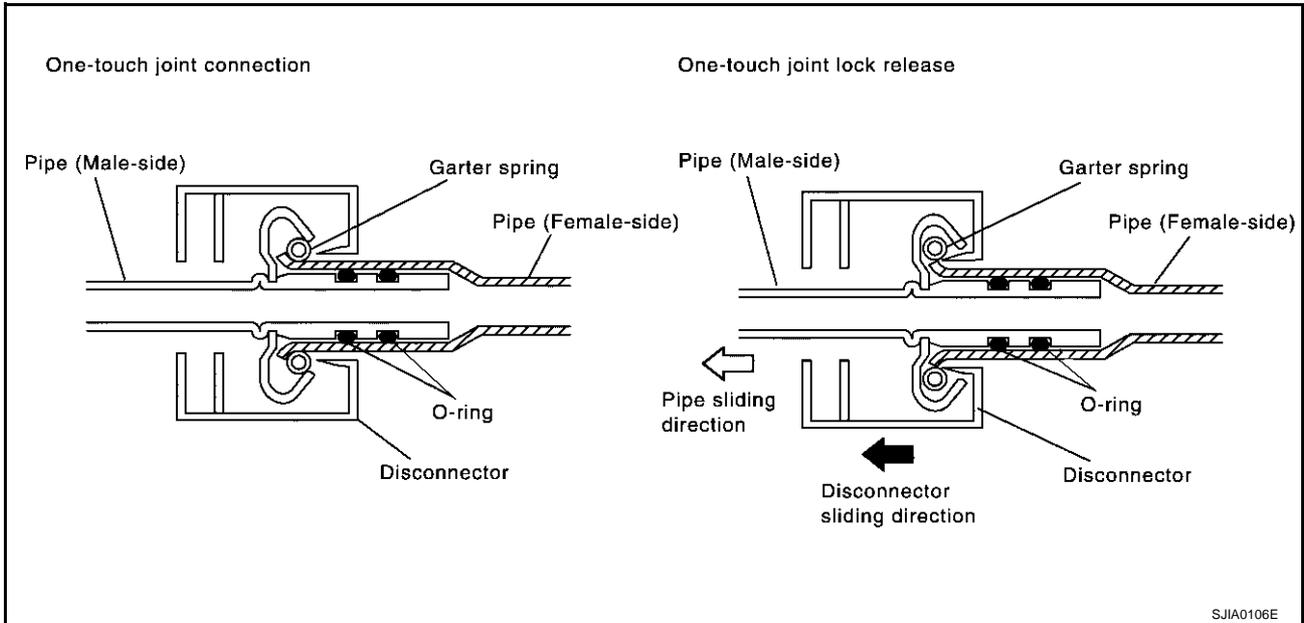

1. Clean piping connection point, and set a disconnecter.
2. Slide disconnecter in axial direction of piping, and stretch garter spring with tapered point of disconnecter.
3. Slide disconnecter farther so that inside diameter of garter spring becomes larger than outside diameter of female-side piping flare. Then male-side piping can be disconnected.

INSTALLATION

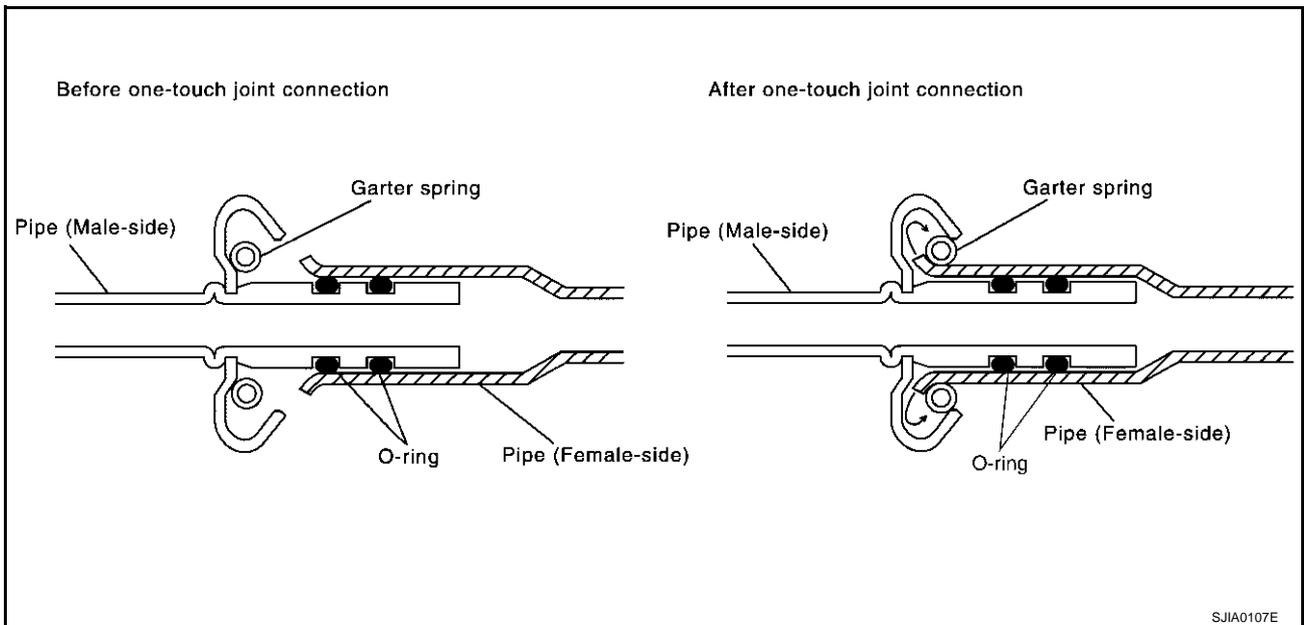

1. Clean piping connection points, and insert male-side piping into female-side piping.
2. Push inserted male-side piping harder so that female-side piping flare stretches garter spring.
3. If inside diameter of garter spring becomes larger than outside diameter of female-side piping flare, garter spring seats on flare. Then, it fits in between male-side piping cage and female-side piping flare to anchor piping connection point.

NOTICE:

When garter spring seats on flare, and fits in between male-side piping cage and female-side piping flare, it clicks.

CAUTION:

- Female-side piping connection point is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert it in axial direction.
- Insert piping securely until a click is heard.

PRECAUTIONS

- After piping connection is completed, pull male-side piping by hand to make sure connection does not come loose.


NOTE:

One-touch joint connection is used in points below.

- Low-pressure pipe 1 to low-pressure pipe 2 (O-ring size: 16)
- High-pressure pipe 1 to high-pressure pipe 2 (O-ring size: 8)


FEATURES OF NEW TYPE REFRIGERANT CONNECTION

- The O-ring has been relocated. It has also been provided with a groove for proper installation. This eliminates the chance of the O-ring being caught in, or damaged by, the mating part. The sealing direction of the O-ring is now set vertically in relation to the contacting surface of the mating part to improve sealing characteristics.
- The reaction force of the O-ring will not occur in the direction that causes the joint to pull out, thereby facilitating piping connections.

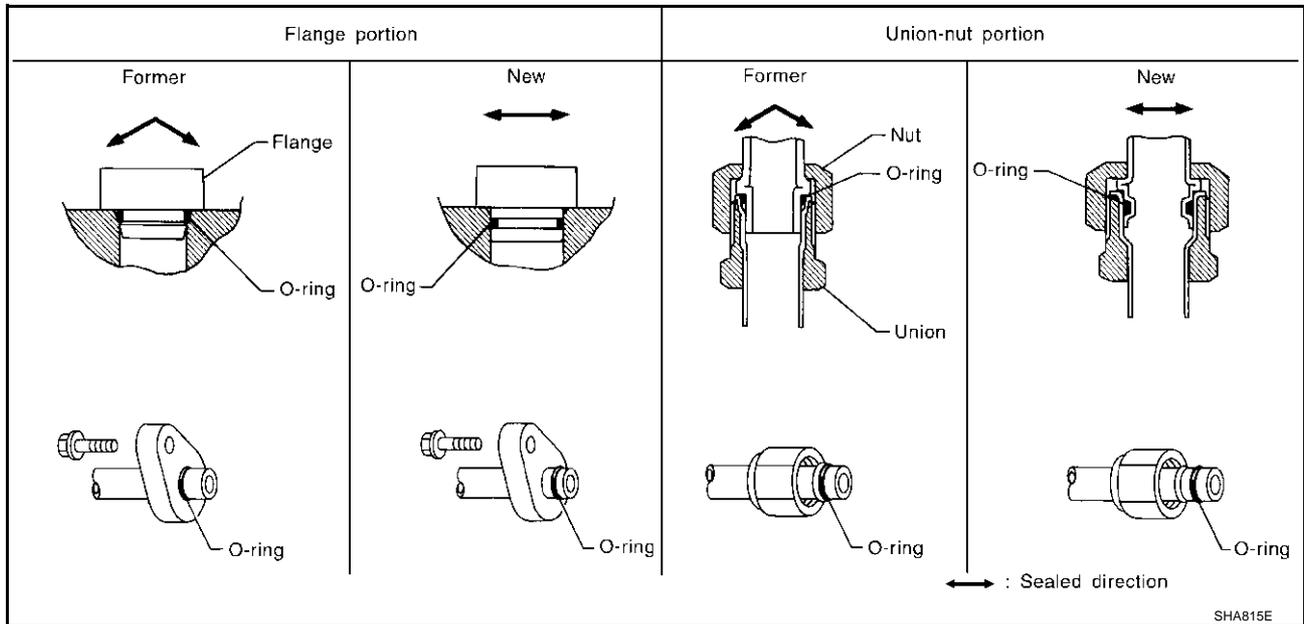

PRECAUTIONS

O-RING AND REFRIGERANT CONNECTION

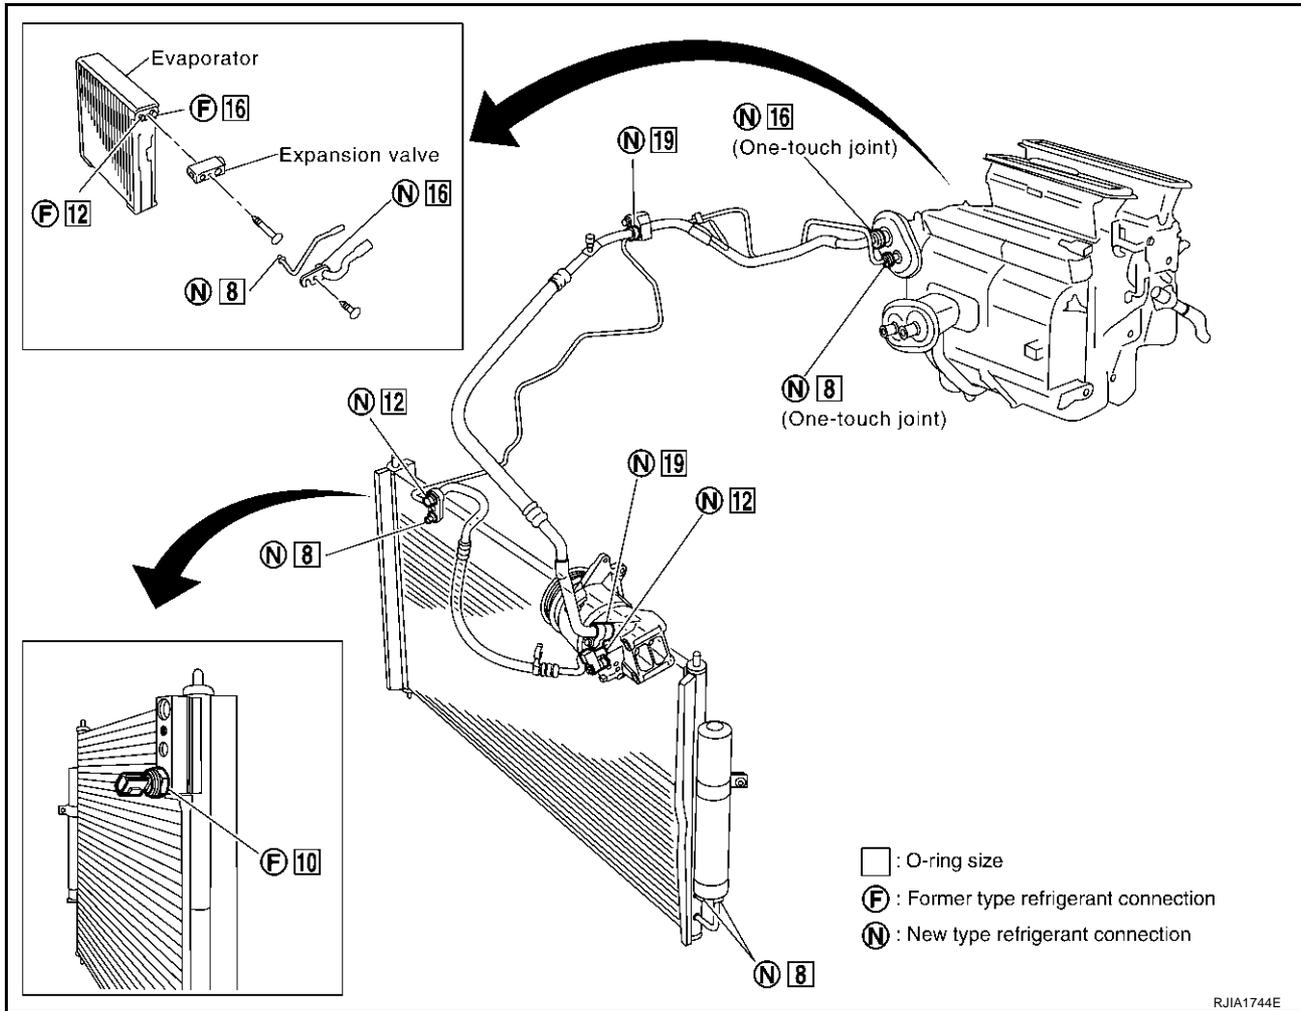

CAUTION:

The new and former refrigerant connections use different O-ring configurations. Do not confuse O-rings since they are not interchangeable. If a wrong O-ring is installed, refrigerant will leak at, or around, the connection.

O-Ring Part Numbers and Specifications

Connection type	Piping connection point		Part number	QTY	O-ring size	
New	Low-pressure pipe 1 to low-pressure pipe 2 (One-touch joint)		92473 N8221	2	16	
	Low-pressure pipe 2 to expansion valve		92473 N8210	1	16	
	High-pressure pipe 1 to high-pressure pipe 2 (One-touch joint)		92471 N8221	2	8	
	High-pressure pipe 2 to expansion valve		92471 N8210	1	8	
	Condenser to high-pressure flexible hose		92472 N8210	1	12	
	Condenser to high-pressure pipe 1		92471 N8210	1	8	
	Low-pressure flexible hose to low-pressure pipe 1		92474 N8210	1	19	
	Compressor to low-pressure flexible hose		92474 N8210	1	19	
	Compressor to high-pressure flexible hose		92472 N8210	1	12	
	Liquid tank to condenser pipe		92471 N8210	Inlet	1	8
		Outlet		1		
Former	Refrigerant pressure sensor to condenser		J2476 89956	1	10	
	Expansion valve to evaporator		Inlet	92475 71L00	1	12
			Outlet	92475 72L00	1	16

A
B
C
D
E
F
G
H
I

ATC

K
L
M

PRECAUTIONS


WARNING:

Make sure all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.

CAUTION:

When replacing or cleaning refrigerant cycle components, observe the following.

- When the compressor is removed, store it in the same position as it is when mounted on the car. Malfunction to do so will cause lubricant to enter the low-pressure chamber.
- When connecting tubes, always use a torque wrench and a back-up wrench.
- After disconnecting tubes, immediately plug all openings to prevent entry of dirt and moisture.
- When installing an air conditioner in the vehicle, connect the pipes as the final stage of the operation. Do not remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Thoroughly remove moisture from the refrigeration system before charging the refrigerant.
- Always replace used O-rings.
- When connecting tube, apply lubricant to circle of the O-rings shown in illustration. Be careful not to apply lubricant to threaded portion.
Lubricant name: Nissan A/C System Oil Type S
Part number: KLH00-PAGS0
- O-ring must be closely attached to dented portion of tube.
- When replacing the O-ring, be careful not to damage O-ring and tube.
- Connect tube until you hear it click, then tighten the nut or bolt by hand until snug. Make sure that the O-ring is installed to tube correctly.
- After connecting line, perform leak test and make sure that there is no leakage from connections. When the gas leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.

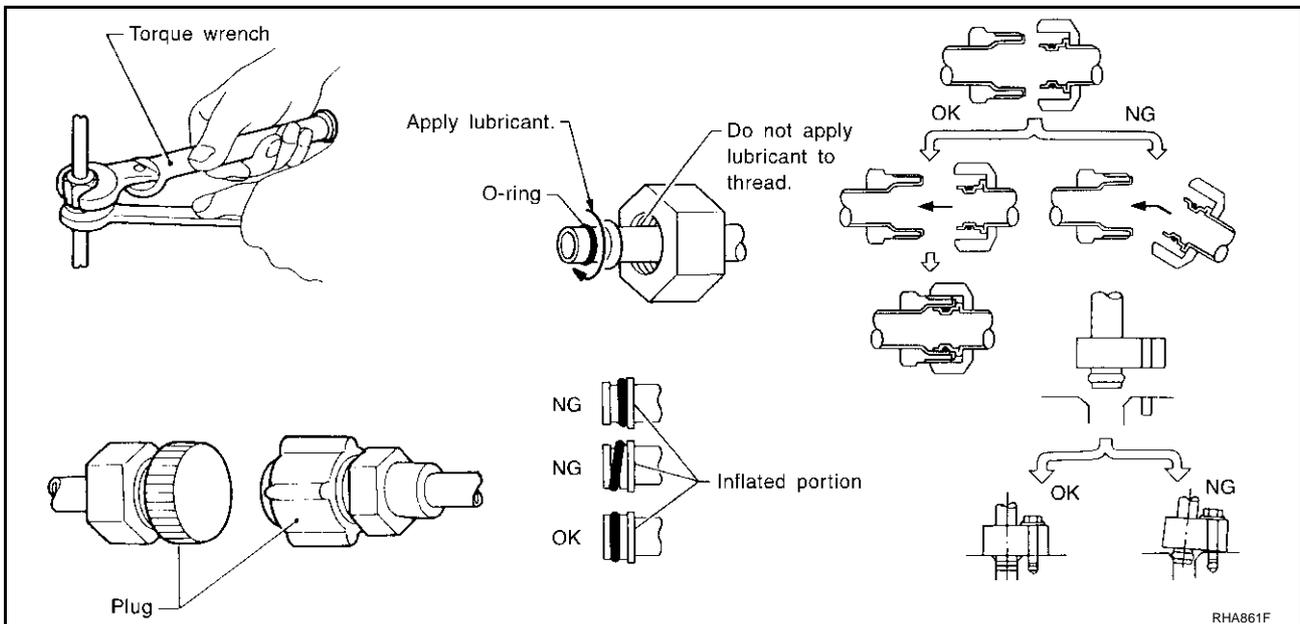

PRECAUTIONS

Precautions for Servicing Compressor

AJS000YC

- Plug all openings to prevent moisture and foreign matter from entering.
- When the compressor is removed, store it in the same position as it is when mounted on the car.
- When replacing or repairing compressor, follow "Maintenance of Lubricant Quantity in Compressor" exactly. Refer to [ATC-22, "Maintenance of Lubricant Quantity in Compressor"](#).
- Keep friction surfaces between clutch and pulley clean. If the surface is contaminated, with lubricant, wipe it off by using a clean waste cloth moistened with thinner.
- After compressor service operation, turn the compressor shaft by hand more than five turns in both directions. This will equally distribute lubricant inside the compressor. After the compressor is installed, let the engine idle and operate the compressor for one hour.
- After replacing the compressor magnet clutch, apply voltage to the new one and check for usual operation.

Precautions for Service Equipment RECOVERY/RECYCLING EQUIPMENT

AJS000YD

Be certain to follow the manufacturers instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

ELECTRONIC LEAK DETECTOR


Be certain to follow the manufacturer's instructions for tester operation and tester maintenance.

VACUUM PUMP

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure. So the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched off after evacuation (vacuuming) and hose is connected to it. To prevent this migration, use a manual valve placed near the hose-to-pump connection, as follows.


- Usually vacuum pumps have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- For pumps without an isolator, use a hose equipped with a manual shut-off valve near the pump end. Close the valve to isolate the hose from the pump.
- If the hose has an automatic shut-off valve, disconnect the hose from the pump. As long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under a no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

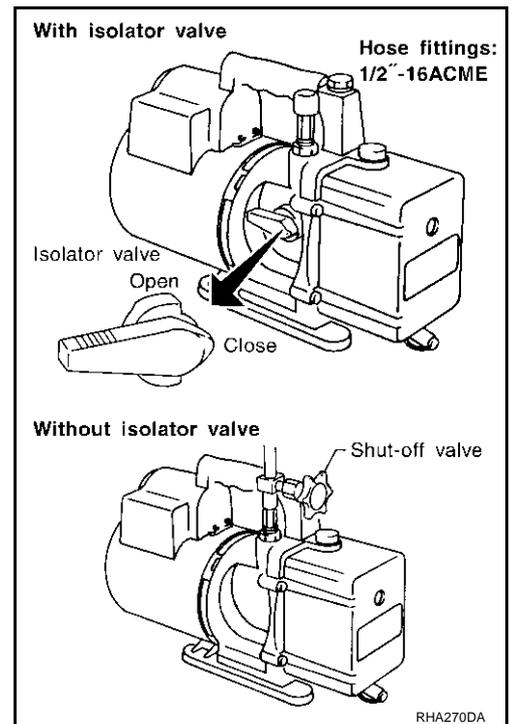

MANIFOLD GAUGE SET


Be certain that the gauge face indicates HFC-134a (R-134a or 134a). Be sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) and specified lubricants.

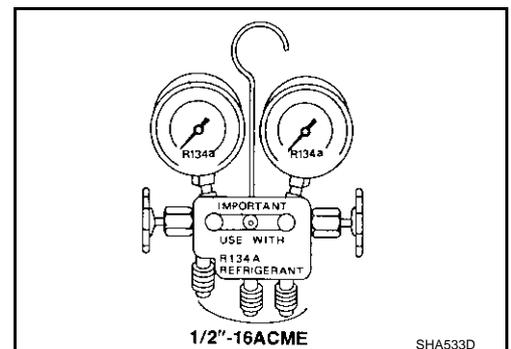

PRECAUTIONS

SERVICE HOSES


Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

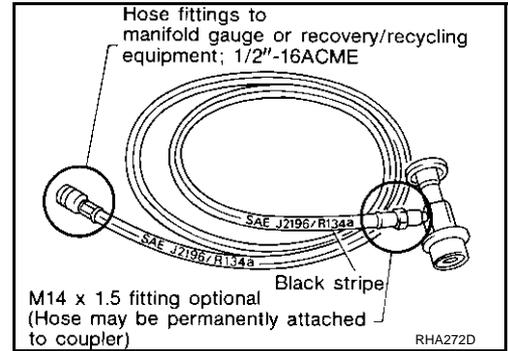

SERVICE COUPLERS


Never attempt to connect HFC-134a (R-134a) service couplers to an CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

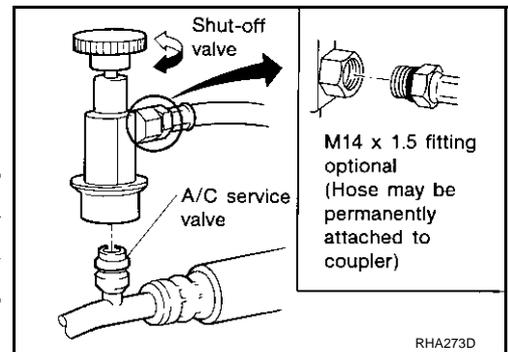

REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified lubricants have been used with the scale. If the scale controls refrigerant flow electronically, the hose fitting must be 1/2" -16 ACME.

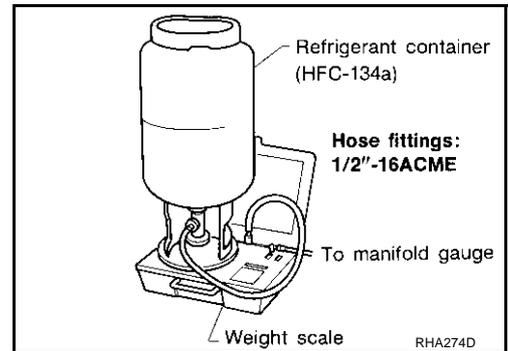

CALIBRATING ACR4 WEIGHT SCALE

Calibrate the scale every three months.

To calibrate the weight scale on the ACR4 (J-39500-INF):

1. Press **Shift/Reset** and **Enter** at the same time.
2. Press **8787** . "A1" will be displayed.
3. Remove all weight from the scale.
4. Press **0** , then press **Enter** . "0.00" will be displayed and change to "A2" .
5. Place a known weight (dumbbell or similar weight), between 4.5 and 8.6 kg (10 and 19 lb.) on the center of the weight scale.
6. Enter the known weight using four digits. (Example 10 lb. = 10.00, 10.5 lb. = 10.50)
7. Press **Enter** — the display returns to the vacuum mode.
8. Press **Shift/Reset** and **Enter** at the same time.
9. Press **6** — the known weight on the scale is displayed.
10. Remove the known weight from the scale. "0.00" will be displayed.
11. Press **Shift/Reset** to return the ACR4 to the program mode.

PRECAUTIONS

CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

Precautions for Leak Detection Dye

AJS000YE

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leaks. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leaks.
- Always wear fluorescence enhancing UV safety goggles to protect your eyes and enhance the visibility of the fluorescent dye.
- The fluorescent dye leak detector is not a replacement for an electronic refrigerant leak detector. The fluorescent dye leak detector should be used in conjunction with an electronic refrigerant leak detector to (J-41995) pin-point refrigerant leaks.
- For your safety and your customer's satisfaction, read and follow all manufacturer's operating instructions and precautions prior to performing the work.
- A compressor shaft seal should not be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leak with an electronic refrigerant leak detector (J-41995).
- Always remove any remaining dye from the leak area after repairs are complete to avoid a misdiagnosis during a future service.
- Do not allow dye to come into contact with painted body panels or interior components. If dye is spilled, clean immediately with the approved dye cleaner. Fluorescent dye left on a surface for an extended period of time cannot be removed.
- Do not spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Do not use more than one refrigerant dye bottle (1/4 ounce /7.4 cc) per A/C system.
- Leak detection dyes for HFC-134a (R-134a) and CFC-12 (R-12) A/C systems are different. Do not use HFC-134a (R-134a) leak detection dye in CFC-12 (R-12) A/C system or CFC-12 (R-12) leak detector dye in HFC-134a (R-134a) A/C systems or A/C system damage may result.
- The fluorescent properties of the dye will remain for over three (3) years unless a compressor malfunction occurs.

IDENTIFICATION

NOTE:

Vehicles with factory installed fluorescent dye have a green label.
Vehicles without factory installed fluorescent dye have a blue label.

IDENTIFICATION LABEL FOR VEHICLE

Vehicles with factory installed fluorescent dye have this identification label on the front side of hood.

AIR CONDITIONER NISSAN		
	REFRIGERANT	COMPRESSOR LUBRICANT
TYPE (PART NO.)	HFC134a (R134a)	Nissan UV Luminous Oil Type S
AMOUNT		[KLHOO-PAGSO]
CAUTION PRECAUTION		
• REFRIGERANT UNDER HIGH PRESSURE.		
• SYSTEM TO BE SERVICED BY QUALIFIED PERSONNEL.		
• IMPROPER SERVICE METHODS MAY CAUSE PERSONAL INJURY.		
• CONSULT SERVICE MANUAL.		
• THIS AIR CONDITIONER SYSTEM COMPLIES WITH SAE J-639.		
Nissan Motor Co., Ltd., TOKYO, Japan		
27090 6P102		
SHA436FA		

Wiring Diagrams and Trouble Diagnosis

AJS000YF

When you read wiring diagrams, refer to the following:

- [GI-14, "How to Read Wiring Diagrams"](#) in GI section.
- [PG-4, "Wiring Diagram - POWER -"](#) in PG section.

When you perform trouble diagnosis, refer to the following:

- [GI-10, "How to Follow Trouble Diagnoses"](#) in GI section.
- [GI-26, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section.

PREPARATION

 

 

PREPARATION

PFP:00002

Special Service Tools

AJS000YG

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

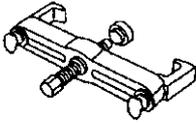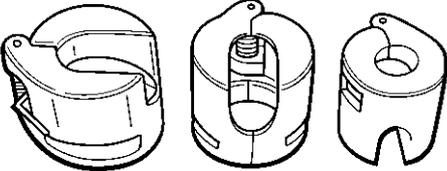Tool number (Kent-Moore No.) Tool name	Description
(J-44614) Clutch disc wrench	 <p style="text-align: center;">RJIA1875E</p> Removing shaft nut and clutch disc
KV99233130 (J-29884) Pulley puller	 <p style="text-align: center;">RJIA1876E</p> Removing pulley
KV99234330 (J-38873) Pulley installer	 <p style="text-align: center;">RJIA1877E</p> Installing pulley
92530 89908 (for high-pressure pipe 1) (-) 92530 89912 (for high-pressure flexible hose) (-) 92530 89916 (for low-pressure pipe 1 and low-pressure flexible hose) (-) Disconnecter tool set (J-45815)	 <p style="text-align: center;"> 92530 89916 (16 mm) 92530 89912 (12 mm) 92530 89908 (8 mm) </p> <p style="text-align: center;">Disconnecter tool set : J-45815</p> <p style="text-align: right;">SJIA0285E</p> Disconnect one-touch joint connection

HFC-134a (R-134a) Service Tools and Equipment

AJS000YH





Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.

Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.





Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.

Adapters that convert one size fitting to another must never be used: refrigerant/lubricant contamination will occur and compressor malfunction will result.



PREPARATION

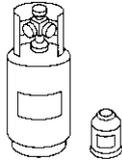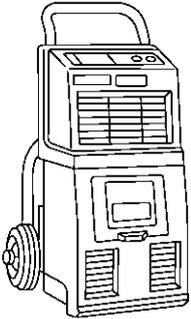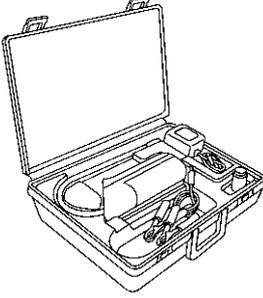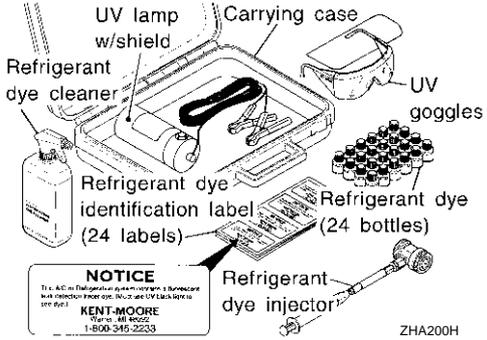Tool number (Kent-Moore No.) Tool name	Description	A
HFC-134a (R-134a) refrigerant  S-NT196	Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size ● Large container 1/2" -16 ACME	B C
KLH00-PAGS0 (-) Nissan A/C System Oil Type S (DH-PS)  S-NT197	Type: Poly alkylene glycol oil (PAG), type S (DH-PS) Application: HFC-134a (R-134a) swash plate compressors (Nissan only) Lubricity: 40 m ℓ (1.4 US fl oz., 1.4 Imp fl oz.)	D E
(J-39500-INF) Recovery/Recycling/ Recharging equipment (ACR4)  RJIA0195E	Function: Refrigerant Recovery and Recycling and Recharging	F G H I
(J-41995) Electrical leak detector  AHA281A	Power supply: ● DC 12V (Cigarette lighter)	ATC K
(J-43926) Refrigerant dye leak detection kit Kit includes: (J-42220) UV lamp and UV safety goggles (J-41459) Refrigerant dye injector (J-41447) HFC-134a (R-134a) Fluorescent leak detection dye (Box of 24, 1/4 ounce bottles) (J-43872) Refrigerant dye cleaner  ZHA200H	Power supply: DC 12V (Battery terminal)	L M

 PREPARATION

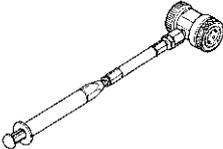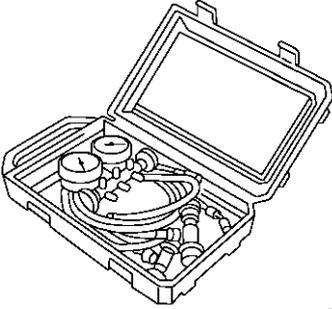
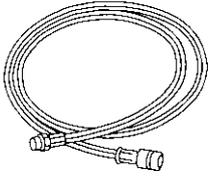
Tool number (Kent-Moore No.) Tool name	Description
(J-42220) UV lamp and UV safety goggles	 <p style="text-align: center;">SHA438F</p> Power supply: DC 12V (Battery terminal) For checking refrigerant leak when fluorescent dye is installed in A/C system. Includes: UV lamp and UV safety goggles
(J-41447) HFC-134a (R-134a) Fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)	 <p style="text-align: center;">Refrigerant dye (24 bottles) SHA439F</p> Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4 cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)
(J-41459) HFC-134a (R-134a) Dye injector Use with J-41447, 1/4 ounce bottle	 <p style="text-align: center;">SHA440F</p> For injecting 1/4 ounce of fluorescent leak detection dye into A/C system
(J-43872) Refrigerant dye cleaner	 <p style="text-align: center;">SHA441F</p> For cleaning dye spills
(J-39183) Manifold gauge set (with hoses and couplers)	 <p style="text-align: center;">RJIA0196E</p> Identification: <ul style="list-style-type: none"> ● The gauge face indicates HFC-134a (R-134a). <li style="padding-left: 20px;">Fitting size: Thread size ● 1/2" -16 ACME
Service hoses <ul style="list-style-type: none"> ● High-pressure side hose (J-39501-72) ● Low-pressure side hose (J-39502-72) ● Utility hose (J-39476-72) 	 <p style="text-align: center;">S-NT201</p> Hose color: <ul style="list-style-type: none"> ● Low hose: Blue with black stripe ● High hose: Red with black stripe ● Utility hose: Yellow with black stripe or green with black stripe Hose fitting to gauge: <ul style="list-style-type: none"> ● 1/2" -16 ACME

PREPARATION

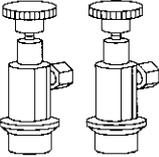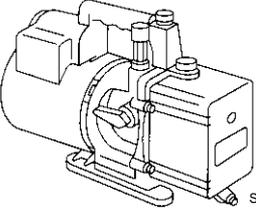Tool number (Kent-Moore No.) Tool name	Description	
Service couplers <ul style="list-style-type: none"> ● High-pressure side coupler (J-39500-20) ● Low-pressure side coupler (J-39500-24) 	 <p style="text-align: center; font-size: small;">S-NT202</p>	Hose fitting to service hose: <ul style="list-style-type: none"> ● M14 x 1.5 fitting is optional or permanently attached.
(J-39650) Refrigerant weight scale	 <p style="text-align: center; font-size: small;">S-NT200</p>	For measuring of refrigerant Fitting size: Thread size <ul style="list-style-type: none"> ● 1/2" -16 ACME
(J-39649) Vacuum pump (Including the isolator valve)	 <p style="text-align: center; font-size: small;">S-NT203</p>	Capacity: <ul style="list-style-type: none"> ● Air displacement: 4 CFM ● Micron rating: 20 microns ● Oil capacity: 482 g (17 oz.) <li style="padding-left: 20px;">Fitting size: Thread size ● 1/2" -16 ACME

Commercial Service Tools

AJS000YI

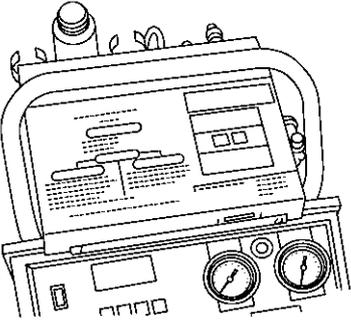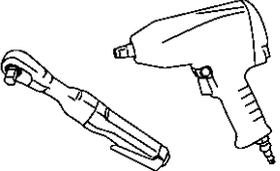Tool name	Description	
Refrigerant identifier equipment	 <p style="text-align: center; font-size: x-small;">RJIA0197E</p>	Checking for refrigerant purity and system contamination
Power tool	 <p style="text-align: center; font-size: x-small;">PBIC0190E</p>	Loosening bolts and nuts

A
B
C
D
E
F
G
H

ATC

I
K
L
M

REFRIGERATION SYSTEM

REFRIGERATION SYSTEM

PFP:KA990

Refrigerant Cycle REFRIGERANT FLOW

AJS000YJ

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation through the evaporator coil is controlled by an externally equalized expansion valve, located inside the evaporator case.

FREEZE PROTECTION

Under usual operating conditions, when the A/C is switched on, the compressor runs continuously, and the evaporator pressure, and therefore, temperature is controlled by the compressor to prevent freeze up.


Refrigerant System Protection REFRIGERANT PRESSURE SENSOR

AJS000YK

The refrigerant system is protected against excessively high- or low-pressure by the refrigerant pressure sensor, located on the condenser. If the system pressure rises above, or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends the voltage signal to the ECM. ECM makes the A/C relay go OFF and stops the compressor when pressure on the high-pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm², 398 psi), or below about 134 kPa (1.4 kg/cm², 20 psi).

PRESSURE RELIEF VALVE

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an unusual level [more than 3,727 kPa(38 kg/cm², 540 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

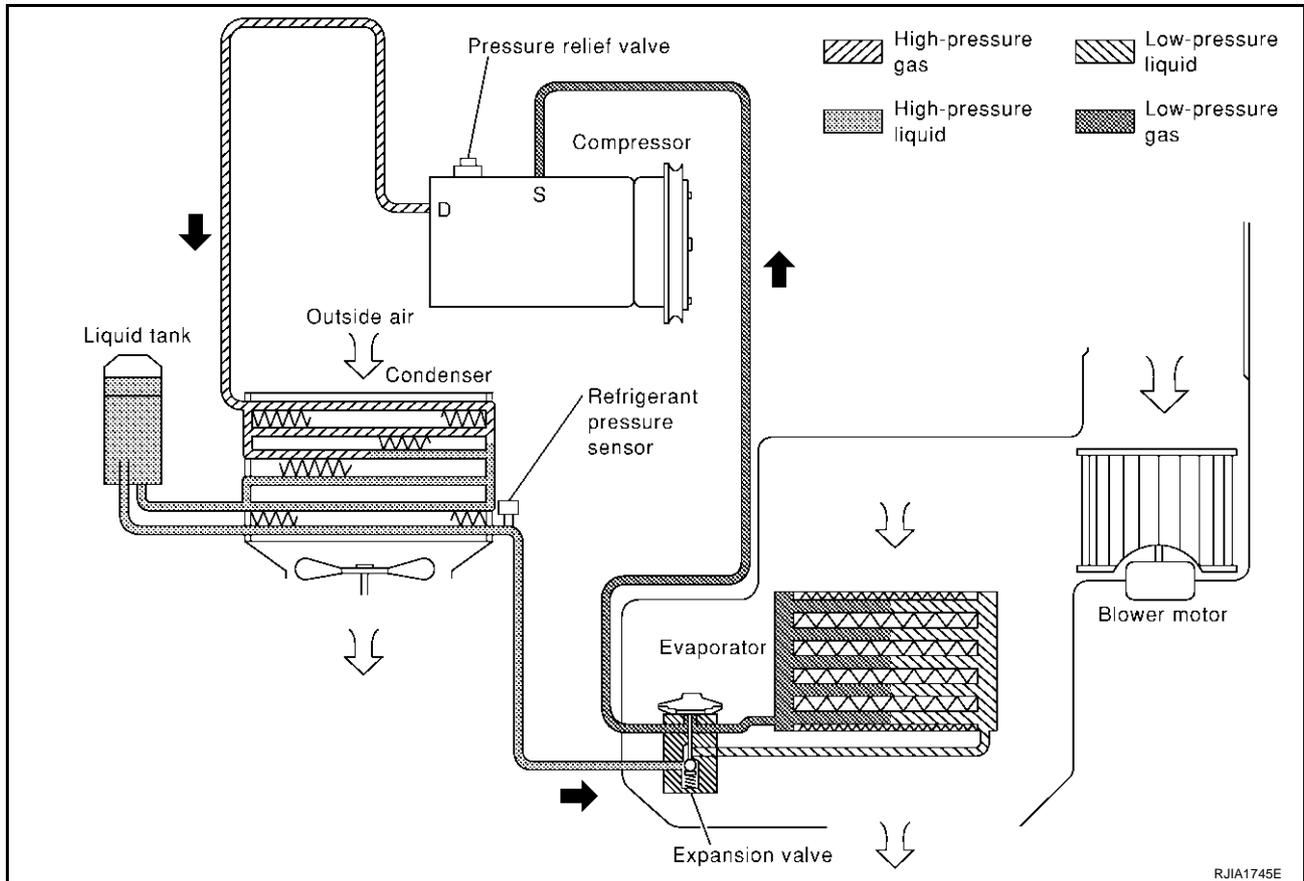


REFRIGERATION SYSTEM

Component Layout

AJS000YM

A
B
C
D
E
F
G
H
I
ATC
K
L
M

SEC.273

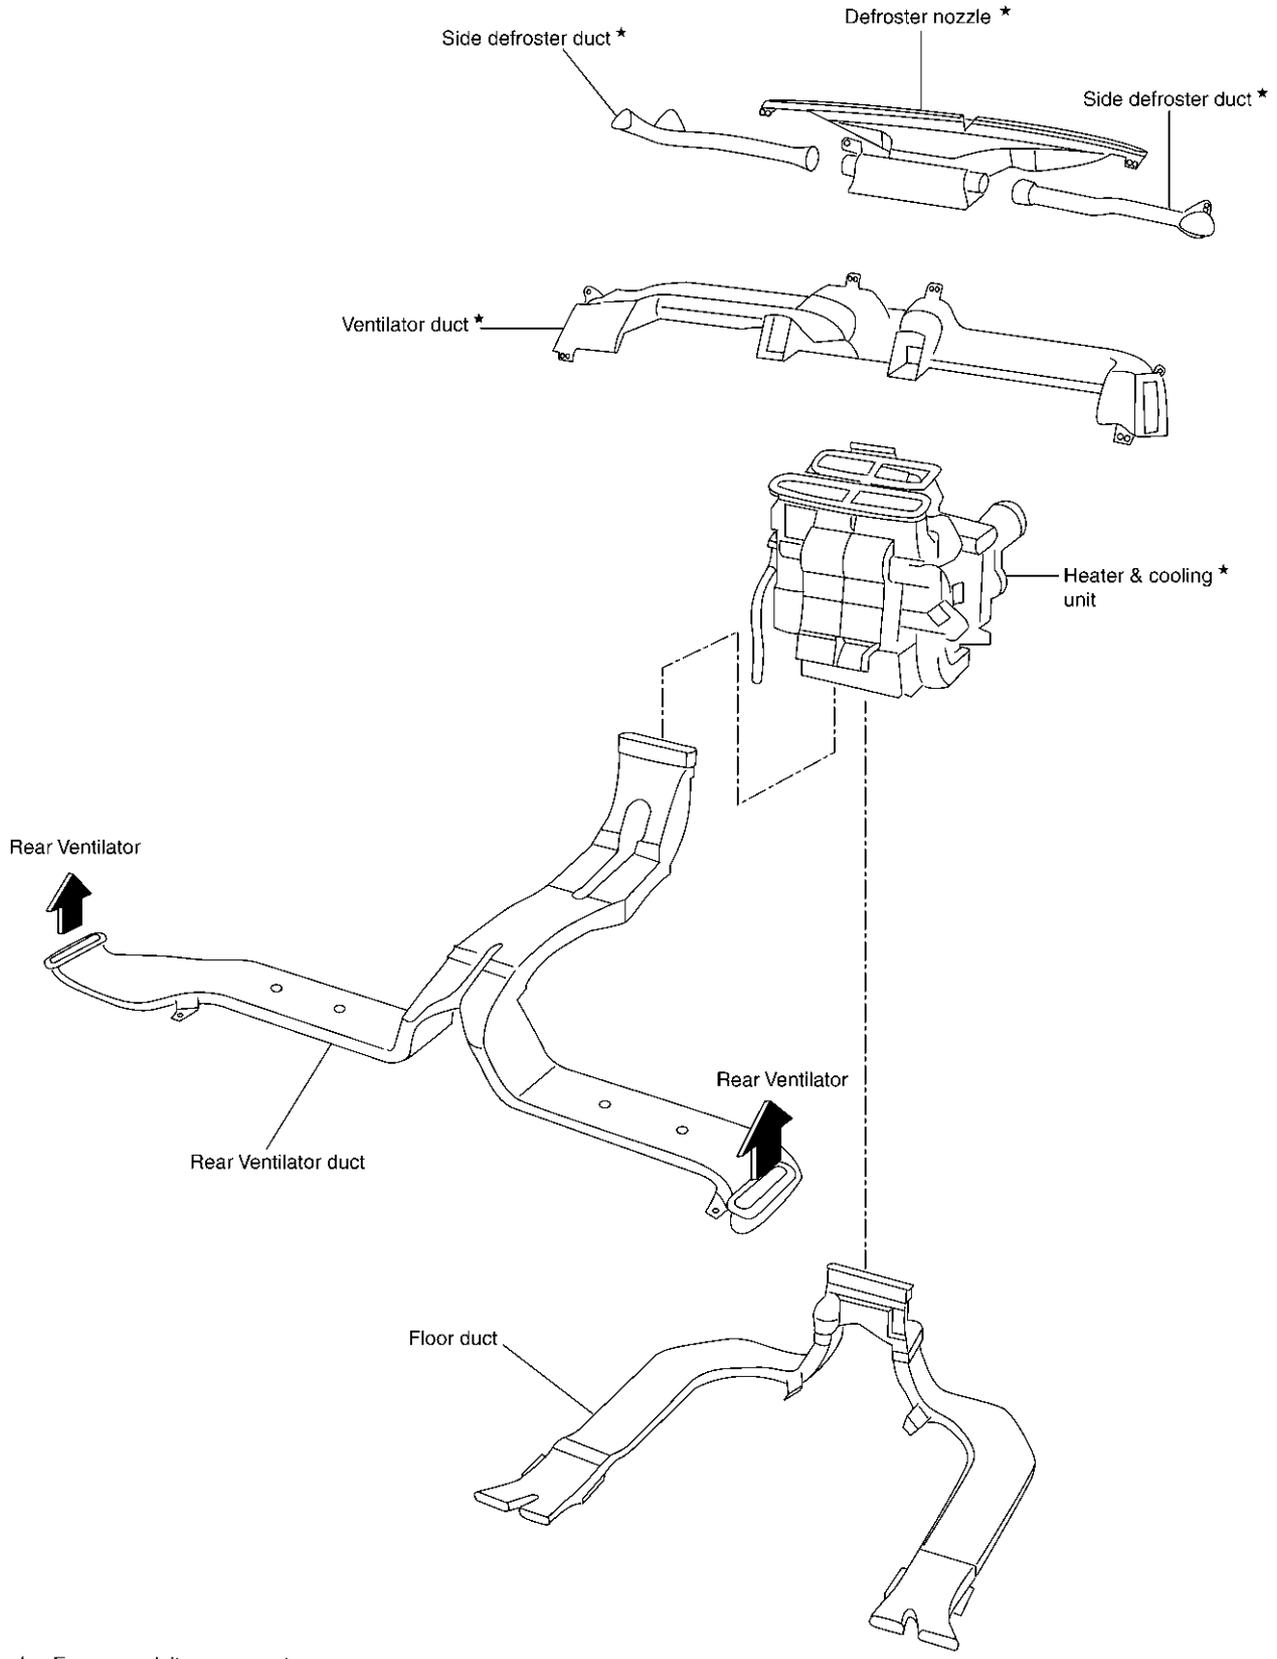

* : For removal, it necessary to remove instrument panel.

RJIA1746E

LUBRICANT

LUBRICANT

PPF:KLG00

Maintenance of Lubricant Quantity in Compressor

AJS000YN

The lubricant in the compressor circulates through the system with the refrigerant. Add lubricant to compressor when replacing any component or after a large gas leakage occurred. It is important to maintain the specified amount.

If lubricant quantity is not maintained properly, the following malfunctions may result:

- Lack of lubricant: May lead to a seized compressor
- Excessive lubricant: Inadequate cooling (thermal exchange interference)

LUBRICANT

Name	:NISSAN A/C System Oil Type S
Part number	:KLH00-PAGS0

LUBRICANT RETURN OPERATION

Adjust the lubricant quantity according to the test group shown below.

1. CHECK LUBRICANT RETURN OPERATION

Can lubricant return operation be performed?

- A/C system works properly.
- There is no evidence of a large amount of lubricant leakage.

YES or NO

YES >> GO TO 2.
NO >> GO TO 3.

2. PERFORM LUBRICANT RETURN OPERATION, PROCEEDING AS FOLLOWS:

1. Start engine, and set the following conditions:
 - Test condition
 - Engine speed: Idling to 1,200 rpm
 - A/C switch: ON
 - Blower speed: Max. position
 - Temp. control: Optional [Set so that intake air temperature is 25 to 30°C (77 to 86°F).]
 - Intake position: Recirculation (REC)
2. Perform lubricant return operation for about 10 minutes.
3. Stop engine.

CAUTION:

If excessive lubricant leakage is noted, do not perform the lubricant return operation.

>> GO TO 3.

3. CHECK COMPRESSOR

Should the compressor be replaced?

YES >> GO TO [ATC-23, "LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT"](#).
NO >> GO TO 4.

LUBRICANT

4. CHECK ANY PART

Is there any part to be replaced? (Evaporator, condenser, liquid tank or in case there is evidence of a large amount of lubricant leakage.)

YES >> GO TO [ATC-23, "LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR"](#) .

NO >> Carry out the A/C performance test.

LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR

After replacing any of the following major components, add the correct amount of lubricant to the system.
Amount of lubricant to be added

Part replaced	Lubricant to be added to system	Remarks
	Amount of lubricant m ℓ (US fl oz., Imp fl oz.)	
Evaporator	75 (2.5, 2.6)	-
Condenser	35 (1.2, 1.2)	-
Liquid tank	10 (0.3, 0.4)	-
In case of refrigerant leak	30 (1.0, 1.1)	Large leak
	-	Small leak *1


*1:If refrigerant leak is small, no addition of lubricant is needed.

LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT

1. Before connecting ACR4 to vehicle, check ACR4 gauges. No refrigerant pressure should be displayed. If NG, recover refrigerant from equipment lines.
2. Connect ACR4 to vehicle. Confirm refrigerant purity in supply tank using ACR4 and refrigerant identifier. If NG, refer to [ATC-6, "CONTAMINATED REFRIGERANT"](#) .
3. Confirm refrigerant purity in vehicle A/C system using ACR4 and refrigerant identifier. If NG, refer to [ATC-6, "CONTAMINATED REFRIGERANT"](#) .
4. Discharge refrigerant into the refrigerant recovery/recycling equipment. Measure lubricant discharged into the recovery/recycling equipment.
5. Drain the lubricant from the old (removed) compressor into a graduated container and recover the amount of lubricant drained.
6. Drain the lubricant from the new compressor into a separate, clean container.
7. Measure an amount of new lubricant installed equal to amount drained from old compressor. Add this lubricant to new compressor through the suction port opening.
8. Measure an amount of new lubricant equal to the amount recovered during discharging. Add this lubricant to new compressor through the suction port opening.
9. If the liquid tank also needs to be replaced, add an additional 5 m ℓ (0.2 US fl oz., 0.2 Imp fl oz.) of lubricant at this time.
Do not add this 5 m ℓ (0.2 US fl oz., 0.2 Imp fl oz.) of lubricant if only replacing the compressor.

LUBRICANT

Lubricant adjusting procedure for compressor replacement

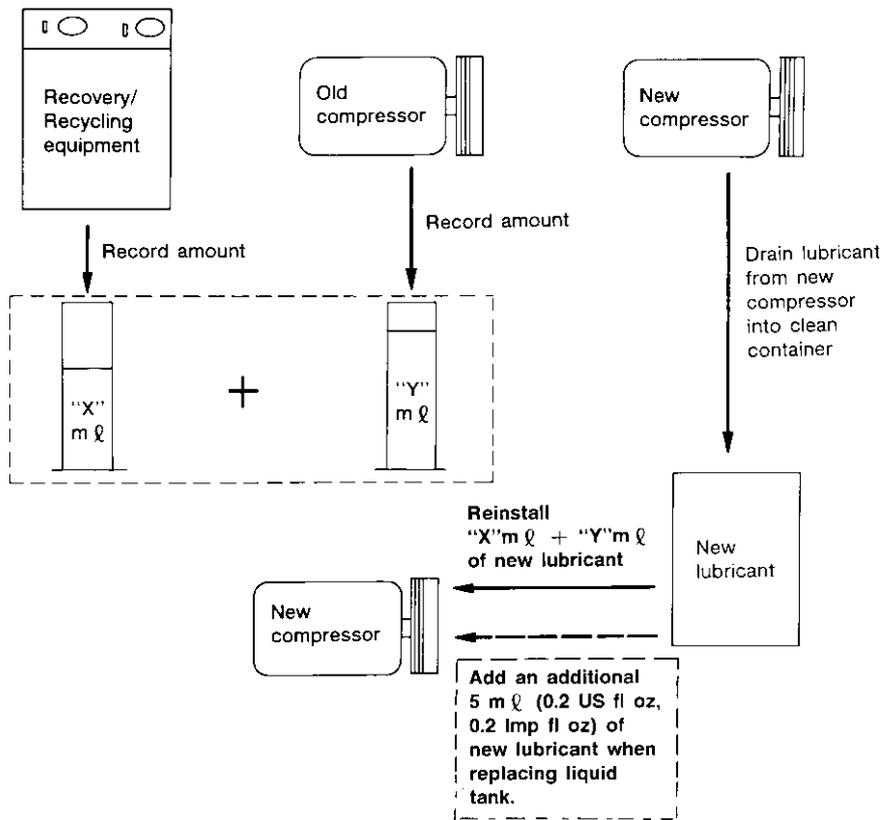

RHA065DD

AIR CONDITIONER CONTROL

AIR CONDITIONER CONTROL


PFP:27500

Description of Air Conditioner LAN Control System

AJS000YO

The LAN (Local Area Network) system consists of unified meter and A/C amp., mode door motor, air mix door motor and intake door motor.

A configuration of these components is shown in the figure below.

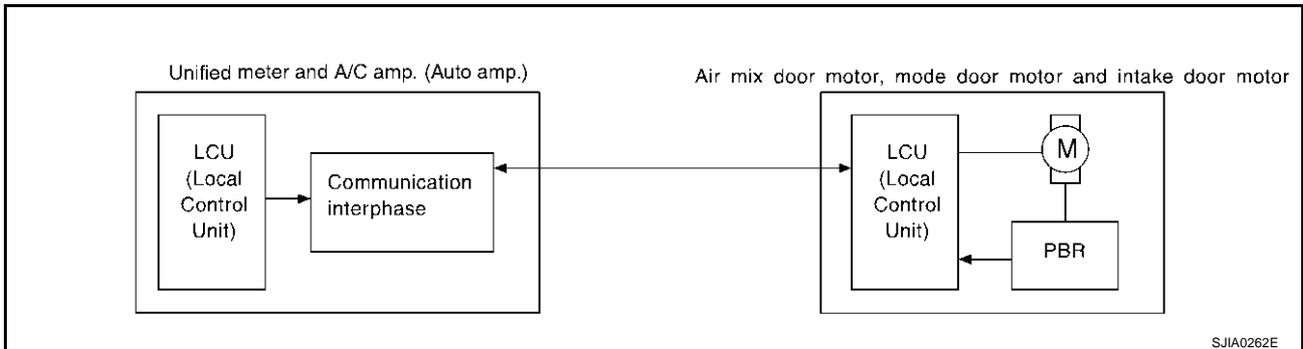

System Construction


AJS000YP

A small network is constructed between the unified meter and A/C amp., air mix door motor, mode door motor and intake door motor. The unified meter and A/C amp. and motors are connected by data transmission lines and motor power supply lines. The LAN network is built through the ground circuits of the each door motor.

Addresses, motor opening angle signals, motor stop signals and error checking messages are all transmitted through the data transmission lines connecting the unified meter and A/C amp. and the each door motor.

The following functions are contained in LCUs built into the air mix door motor, mode door motor and intake door motor.

- Address
- Motor opening angle signals
- Data transmission
- Motor stop and drive decision
- Opening angle sensor (PBR function)
- Comparison
- Decision (Unified meter and A/C amp. indicated value and motor opening angle comparison)

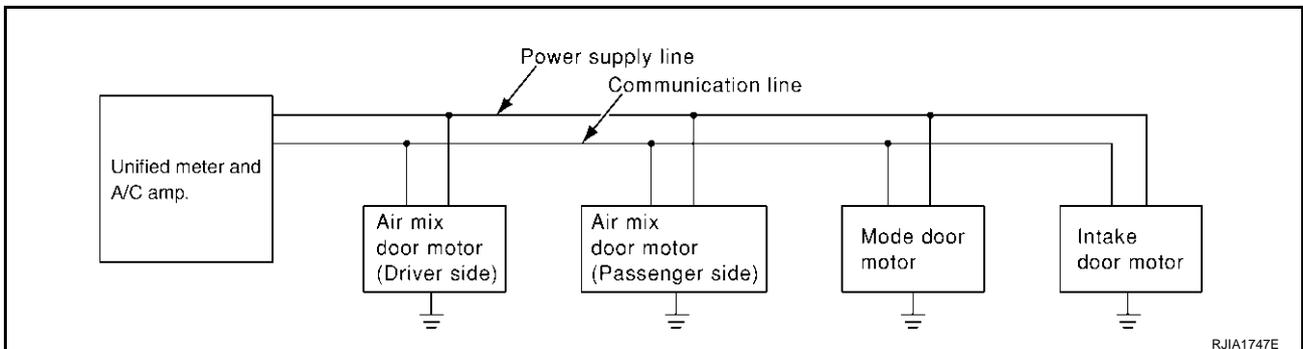

OPERATION


The unified meter and A/C amp. receives data from each of the sensors. The unified meter and A/C amp. sends mode door, air mix door and intake door opening angle data to the mode door motor LCU, air mix door motor LCU and intake door motor LCU.

The mode door motor, air mix door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the unified meter and A/C amp. and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD, DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the unified meter and A/C amp.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

AIR CONDITIONER CONTROL

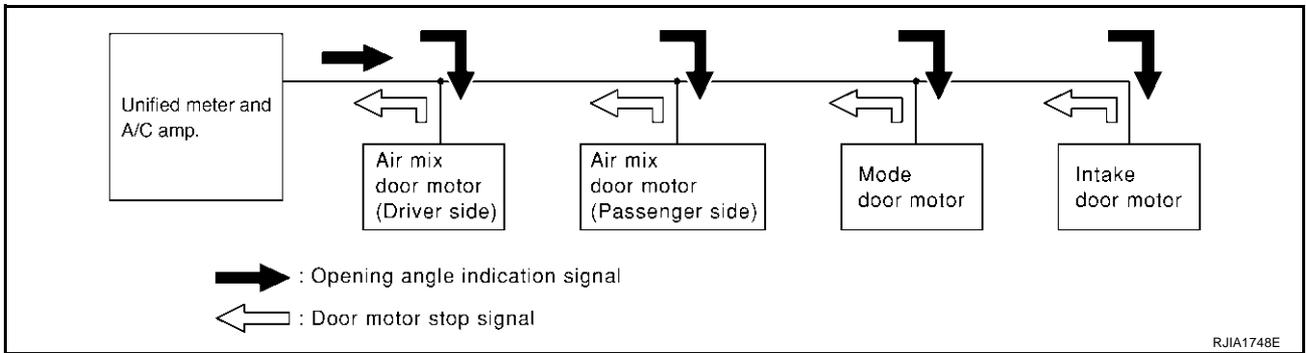

TRANSMISSION DATA AND TRANSMISSION ORDER

Unified meter and A/C amp. data is transmitted consecutively to each of the door motors following the form shown in figure below.

Start: Initial compulsory signal sent to each of the door motors.

Address: Data sent from the unified meter and A/C amp. is selected according to data-based decisions made by the air mix door motor, mode door motor and intake door motor.

If the addresses are identical, the opening angle data and error check signals are received by the door motor LCUs. The LCUs then make the appropriate error decision. If the opening angle data is usual, door control begins.

If an error exists, the received data is rejected and corrected data received. Finally, door control is based upon the corrected opening angle data.

Opening angle:

Data that shows the indicated door opening angle of each door motor.


Error check:

Procedure by which sent and received data is checked for errors. Error data is then compiled. The error check prevents corrupted data from being used by the air mix door motor, mode door motor and intake door motor. Error data can be related to the following symptoms.

- Unusual electrical frequency
- Poor electrical connections
- Signal leakage from transmission lines
- Signal level fluctuation

Stop signal:

At the end of each transmission, a stop operation, in-operation, or internal error message is delivered to the unified meter and A/C amp. This completes one data transmission and control cycle.

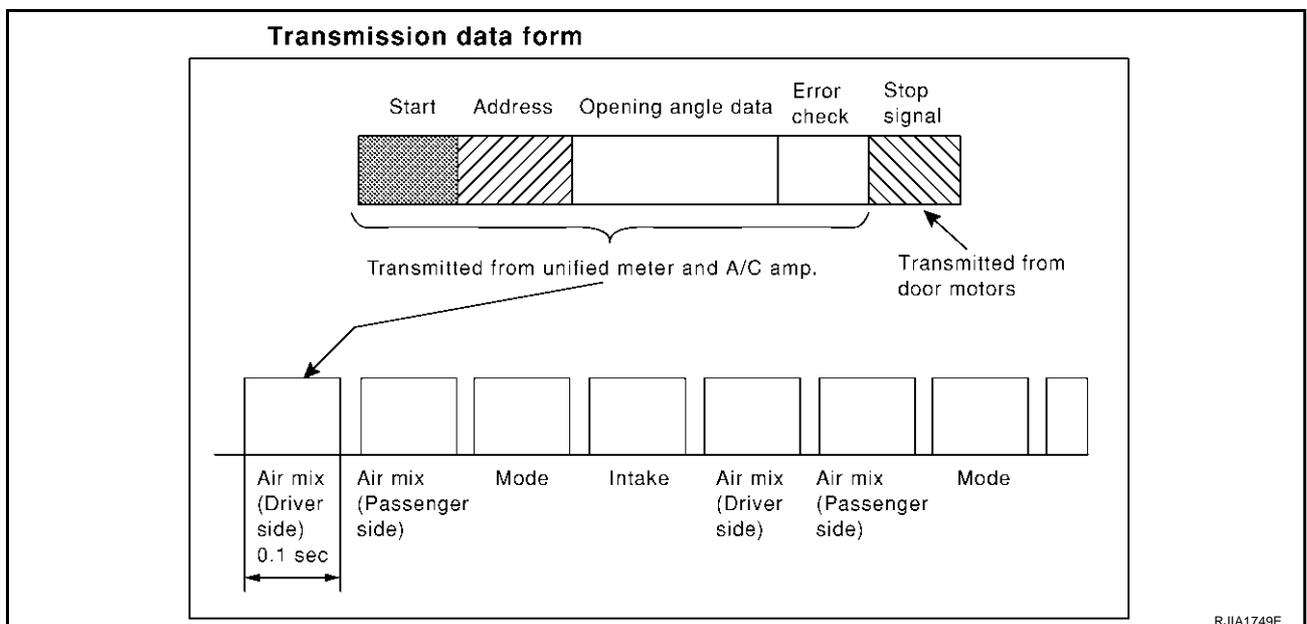

AIR CONDITIONER CONTROL

AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL)

The air mix door is automatically controlled so that in-vehicle temperature is maintained at a predetermined value by: The temperature setting, ambient temperature, in-vehicle temperature and amount of sunload.

FAN SPEED CONTROL

Blower speed is automatically controlled based on temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and air mix door position.

When pressing AUTO switch, the blower motor starts to gradually increase air flow volume.

When engine coolant temperature is low, the blower motor operation is delayed to prevent cool air from flowing.


INTAKE DOOR CONTROL

The intake doors are automatically controlled by: The temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and ON-OFF operation of the compressor.

OUTLET DOOR CONTROL

The outlet door is automatically controlled by: The temperature setting, ambient temperature, in-vehicle temperature, intake temperature and amount of sunload.

MAGNET CLUTCH CONTROL

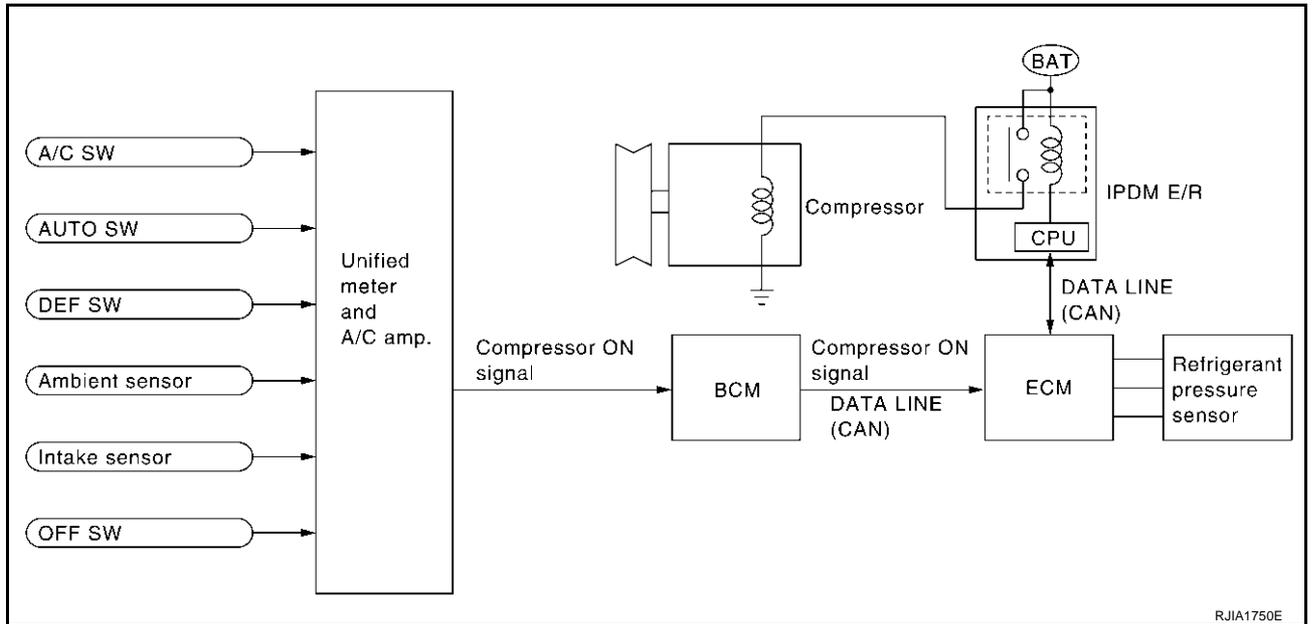

When A/C switch or DEF switch is pressed, unified meter and A/C amp. inputs compressor ON signal to BCM. BCM sends compressor ON signal to ECM, via CAN communication line.

ECM judges whether compressor can be turned ON, based on each sensor status (refrigerant-pressure sensor signal, throttle angle, etc.). If it judges compressor can be turned ON, it sends compressor ON signal to IPDM E/R, via CAN communication line.

Upon receipt of compressor ON signal from ECM, IPDM E/R turns air conditioner relay ON to operate compressor.

SELF-DIAGNOSTIC SYSTEM

The self-diagnostic system is built into the unified meter and A/C amp. to quickly locate the cause of symptoms.


AIR CONDITIONER CONTROL

AJS000YQ

Description of Control System


The control system consists of input sensors, switches, the unified meter and A/C amp. (microcomputer) and outputs.

The relationship of these components is shown in the figure below:

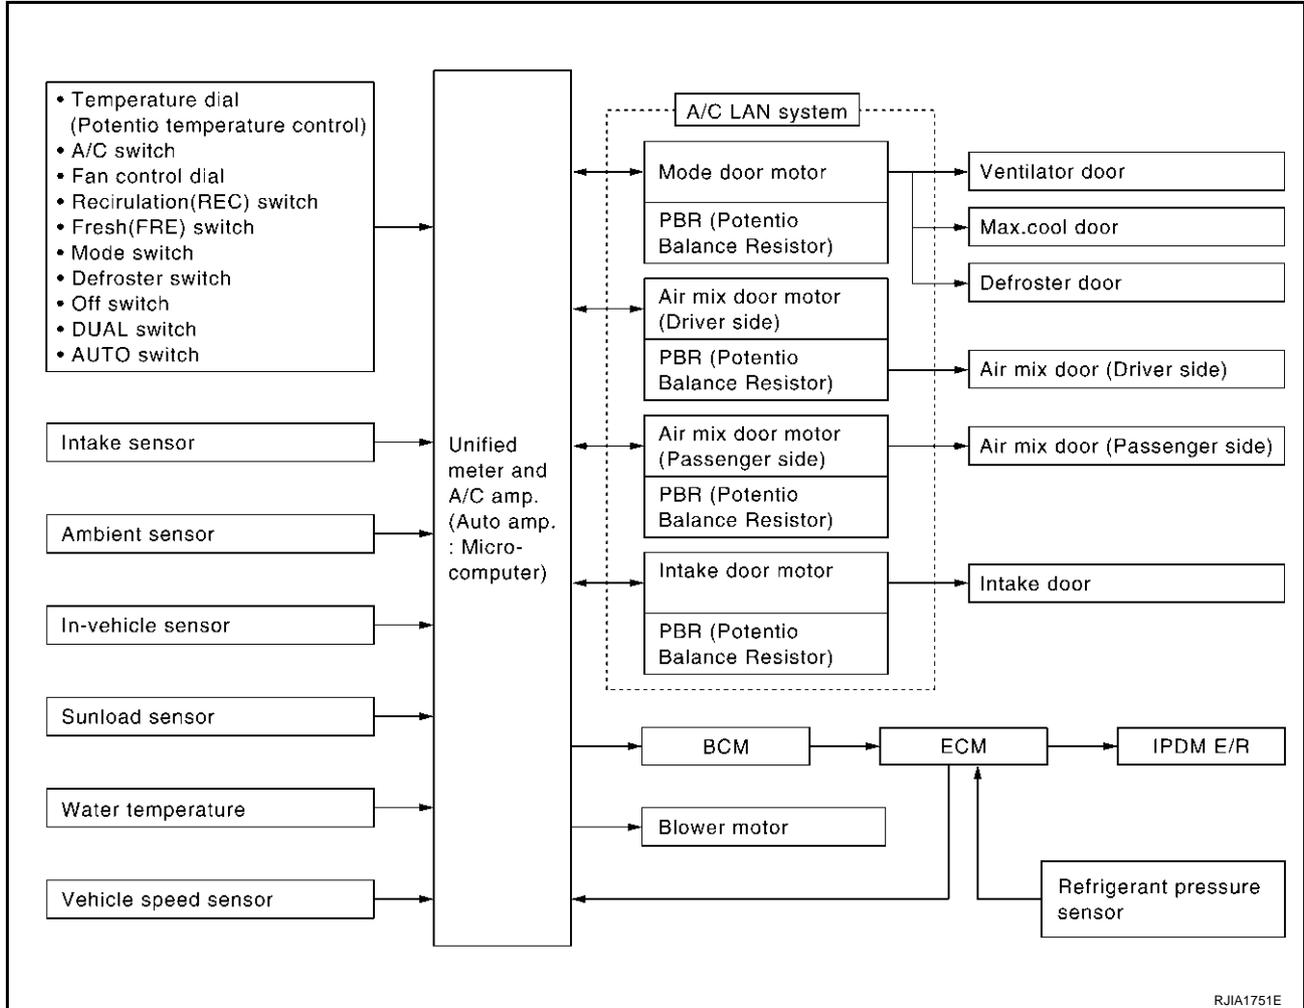

Control Operation

AJS000YR

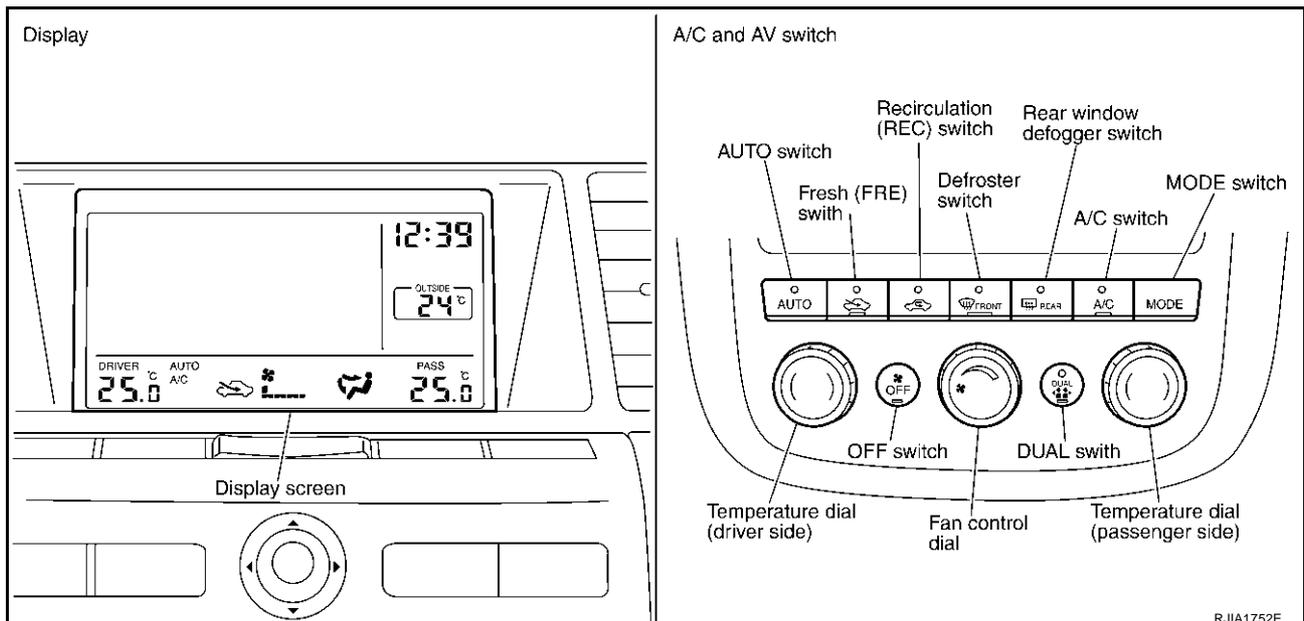

AIR CONDITIONER CONTROL

DISPLAY SCREEN

Displays the operational status of the system.

AUTO SWITCH

- The compressor, intake doors, air mix doors, outlet doors and blower speed are automatically controlled so that the in-vehicle temperature will reach, and be maintained at the set temperature selected by the operator.
- When pressing AUTO switch, air inlet, air outlet, fan speed, and discharge air temperature are automatically controlled.

TEMPERATURE DIAL (POTENTIO TEMPERATURE CONTROL) (DRIVER SIDE)

Increases or decreases the set temperature.

TEMPERATURE DIAL (POTENTIO TEMPERATURE CONTROL) (PASSENGER SIDE)

- Increases or decreases the set temperature.
- When the temperature dial is turned, the dual switch indicator will automatically illuminate.

RECIRCULATION (REC) SWITCH

- When REC switch is ON, REC switch indicator turns ON, and air inlet is fixed to REC.
- When REC switch is ON and is pressed for approximately 1.5 seconds or longer, REC and FRE switch indicators blink twice. Then, automatic control mode is entered. Inlet status is displayed even during automatically controlled.
- When FRE switch is turned ON, or when compressor is turned from ON to OFF, REC switch is automatically turned OFF (fixed to FRE mode). REC mode can be re-entered by pressing REC switch again.
- REC switch is not operated when DEF switch is turned ON, or at the D/F position.

FRESH (FRE) SWITCH

- When FRE switch is ON, FRE switch indicator turns ON, and air inlet is fixed to FRE.
- When FRE switch is ON and is pressed for approximately 1.5 seconds or longer, REC and FRE switch indicators blink twice. Then, automatic control mode is entered. Inlet status is displayed even during automatically controlled.
- When REC switch is turned ON, FRE switch is automatically turned OFF (fixed to REC mode). FRE mode can be re-entered by pressing FRE switch again.

DEFROSTER (DEF) SWITCH

Positions the air outlet doors to the defrost position. Also positions the intake doors to the fresh air position.

REAR WINDOW DEFOGGER SWITCH

When illumination is ON, rear window is defogged.

OFF SWITCH

The compressor and blower are OFF, the intake doors are set to the fresh air position, and the air outlet doors are set to the foot (75% foot and 25% defrost) position.

A/C SWITCH

The compressor is ON or OFF.

(Pressing the A/C switch when the AUTO switch is ON will turn off the A/C switch and compressor.)

MODE SWITCH

Controls the air discharge outlets.

FAN CONTROL DIAL

Manually control the blower speed. Seven speeds are available for manual control (as shown on the display screen).

DUAL SWITCH (WITH LEFT AND RIGHT VENTILATION TEMPERATURE SEPARATELY CONTROL SYSTEM)

- When the DUAL switch indicator is not illuminated and the DUAL switch is pressed, the driver-side setting temperature and passenger-side setting temperature, can each be set independently.
- When DUAL switch indicator is not illuminated and the DUAL switch is pressed, the driver-side setting temperature is applied to both sides.

AIR CONDITIONER CONTROL

Fail-safe Function


AJS000YS

- If a communication error exists between unified meter and A/C amp. and A/C and Audio controller for 30 seconds or longer, air conditioner is controlled under following conditions:
 - Compressor: ON
 - Air outlet: AUTO
 - Air inlet: FRE (Fresh)
 - Blower fan speed: AUTO
 - Set temperature: Setting before communication error occurs.

AIR CONDITIONER CONTROL

Discharge Air Flow

AJS000YT

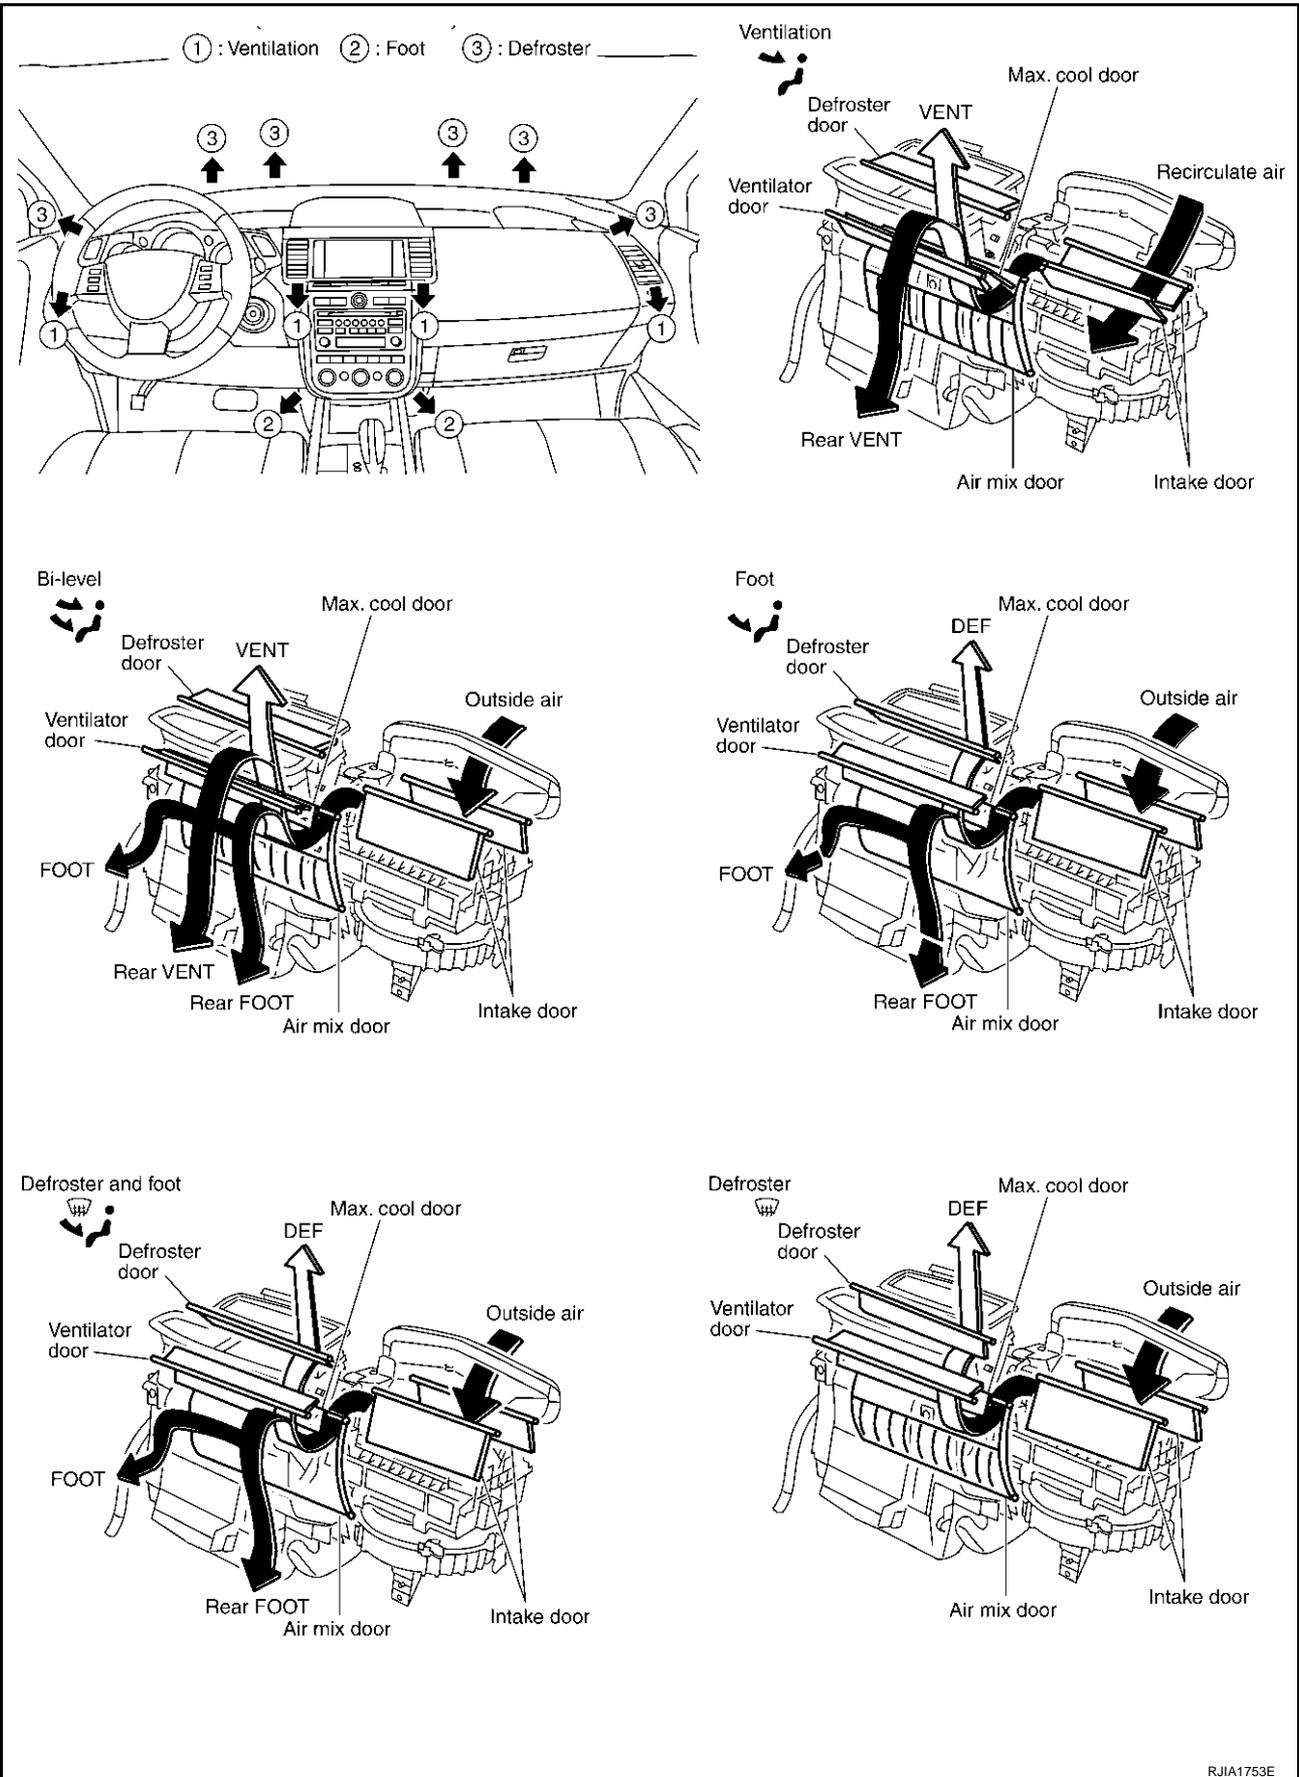

RJIA1753E


A
B
C
D
E
F
G
H
I
K
L
M

ATC

AIR CONDITIONER CONTROL

AJS000YU

System Description SWITCHES AND THEIR CONTROL FUNCTION

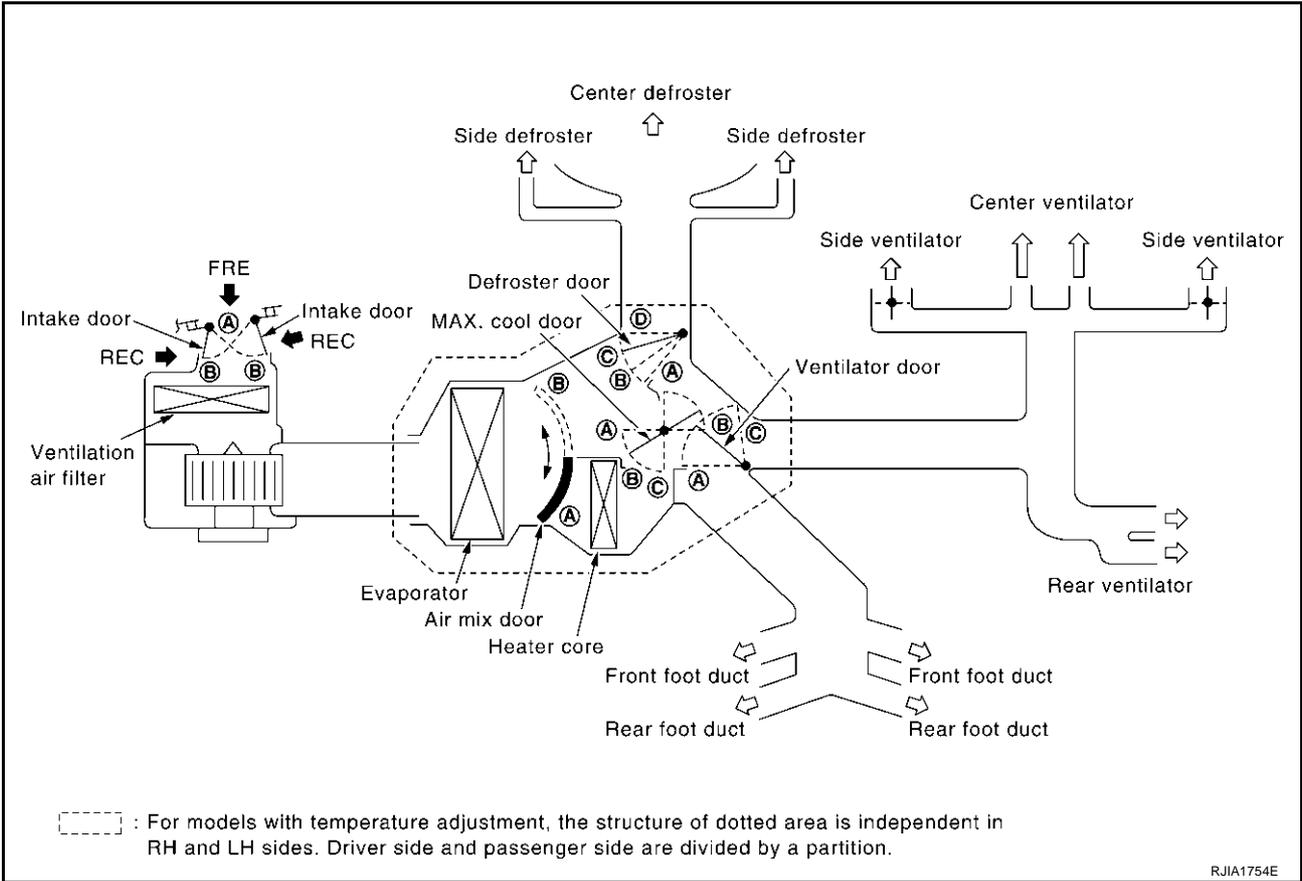

Position or switch	MODE SW				DEF SW		AUTO SW	REC SW	FRE SW	Temperature dial			OFF SW
	VENT	B/L	FOOT	D/F	ON	OFF				18°C (60°F)	~	32°C (90°F)	
Door							AUTO					OFF	
Ventilator door	(A)	(B)	(C)	(C)	(C)							(C)	
MAX. cool door	(A)	(B)	(B)	(B)	(C)							(B)	
Defroster door	(D)	(D)	(D) ^{*1} or (C)	(B)	(A)							(C)	
Intake door					(B)			(A) ^{*2}	(B) ^{*2}			(B)	
Air mix door							AUTO			(A)	AUTO	(B)	

*1: This position is selected only when the mode door is automatically controlled.

*2: Inlet status is displayed even during automatic control.

RJIA1755E

AIR CONDITIONER CONTROL

CAN Communication System Description

AJS001BX

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit For 2WD Models

AJS001BZ

Body type	Wagon															
Axle	2WD															
Engine	VQ35DE															
Transmission	CVT															
Brake control	ABS								VDC							
Low tire pressure warning system		×			×	×		×		×			×	×		×
Navigation system			×		×		×	×			×		×		×	×
Automatic drive positioner				×		×	×	×				×		×	×	×
CAN communication unit																
ECM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
TCM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Low tire pressure warning control unit		×			×	×		×		×			×	×		×
Display unit	×	×		×		×			×	×		×		×		
Display control unit			×		×		×	×			×		×		×	×
Data link connector	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Steering angle sensor									×	×	×	×	×	×	×	×
Driver seat control unit				×		×	×	×				×		×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
CAN communication type	ATC-34. "TYPE 1/TYPE 2/TYPE 3/TYPE 4/TYPE 5/TYPE 6/TYPE 7/TYPE 8"								ATC-39. "TYPE 9/TYPE10/TYPE 11/TYPE 12/TYPE 13/TYPE 14/TYPE 15/TYPE 16"							

×: Applicable

A
B
C
D
E
F
G
H
I
J
K
L
M


ATC

AIR CONDITIONER CONTROL


TYPE 1/TYPE 2/TYPE 3/TYPE 4/TYPE 5/TYPE 6/TYPE 7/TYPE 8

System Diagram


- Type1

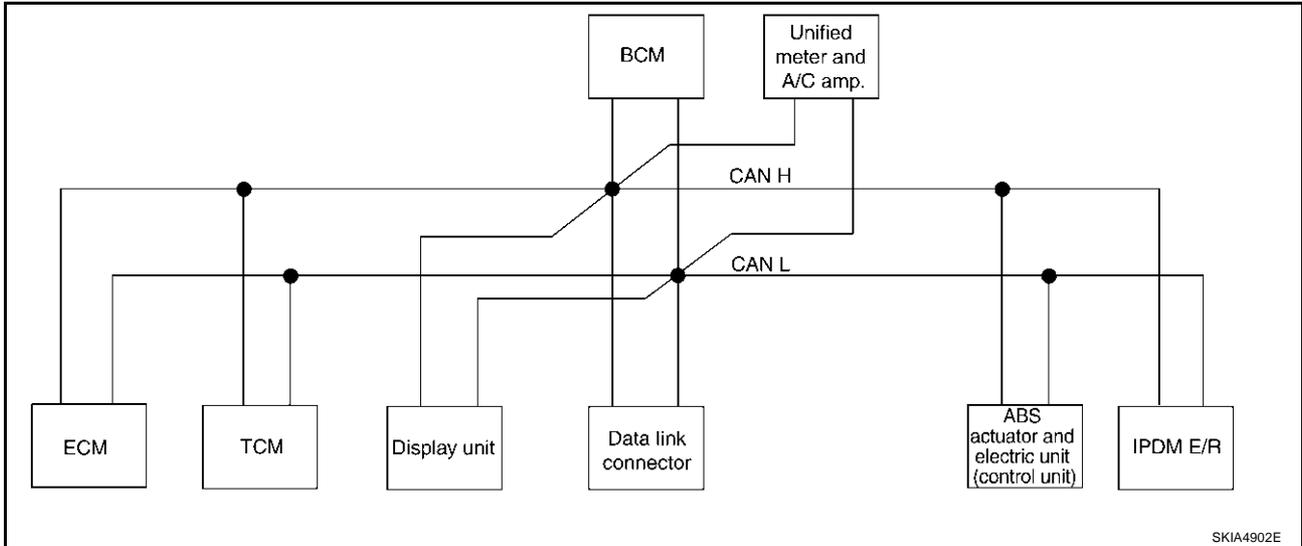

- Type2

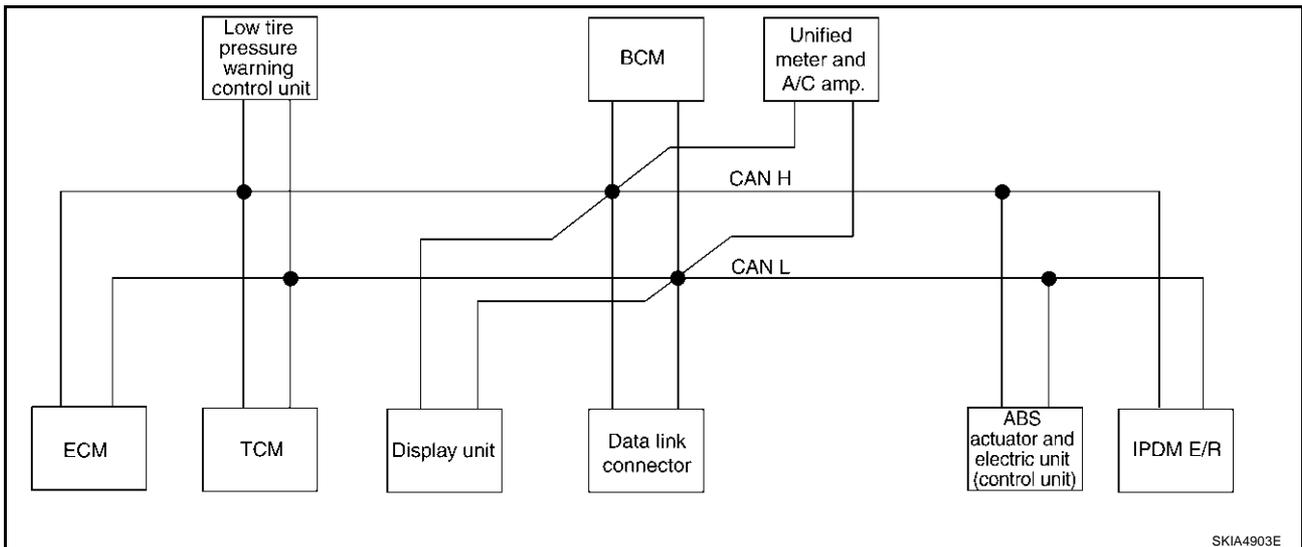


- Type3

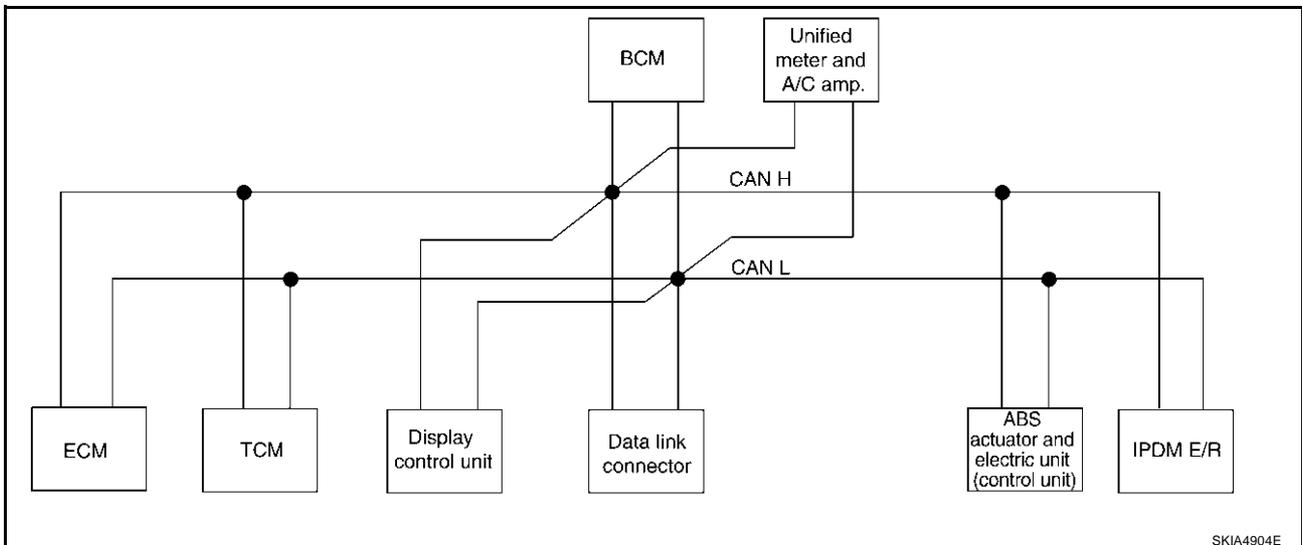


AIR CONDITIONER CONTROL


- Type4

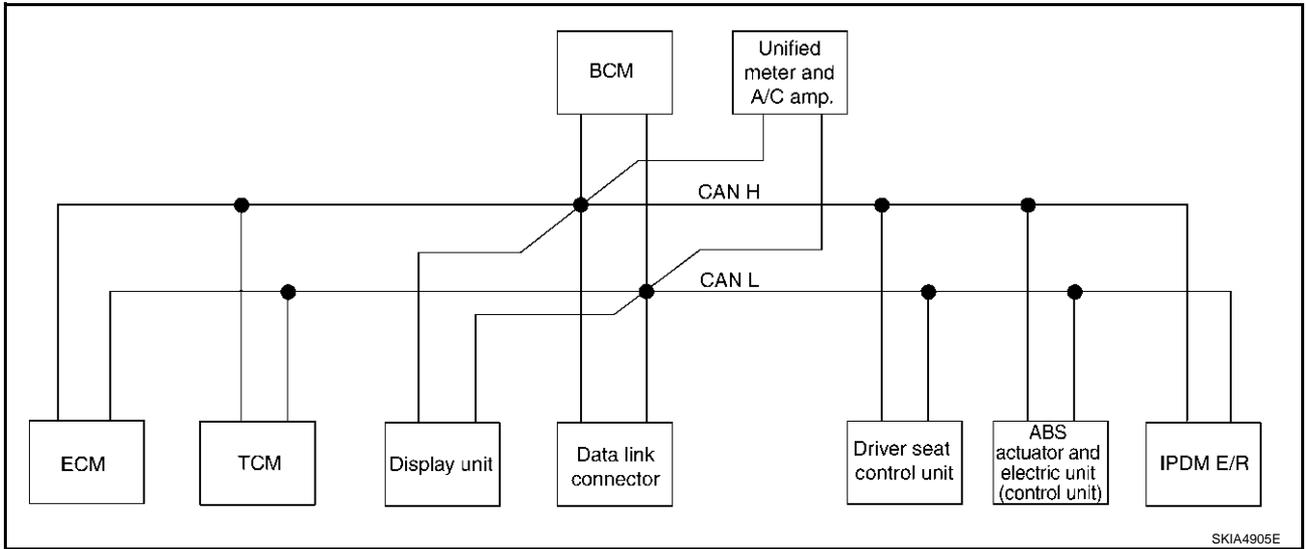

- Type5

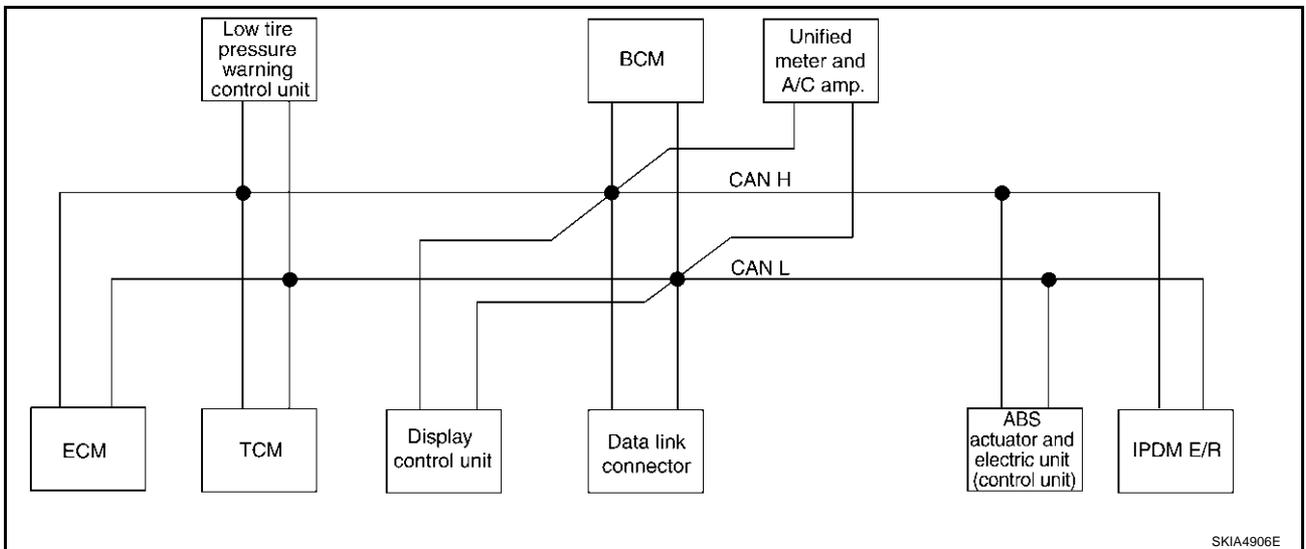

- Type6

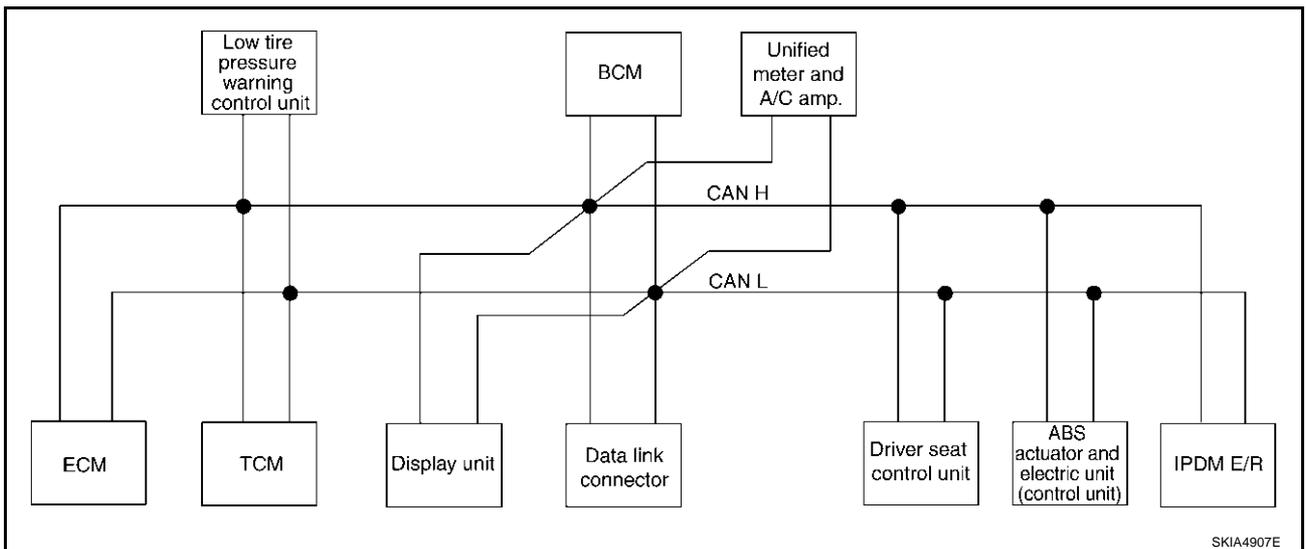


A
B
C
D
E
F
G
H
I
J
K
L
M


ATC

AIR CONDITIONER CONTROL

- Type7

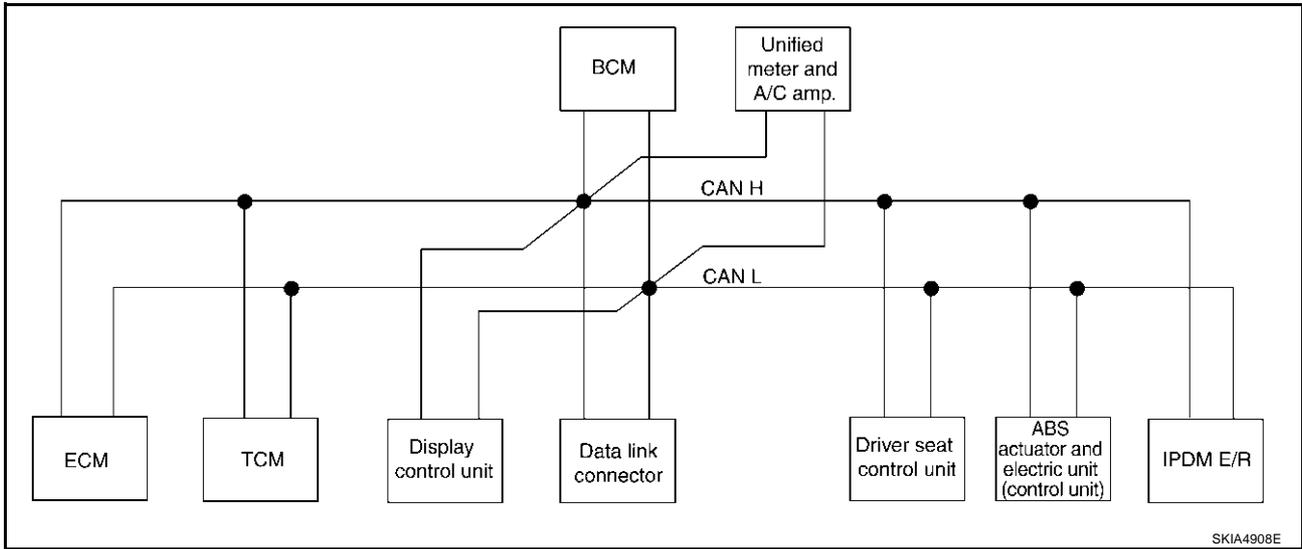

- Type8

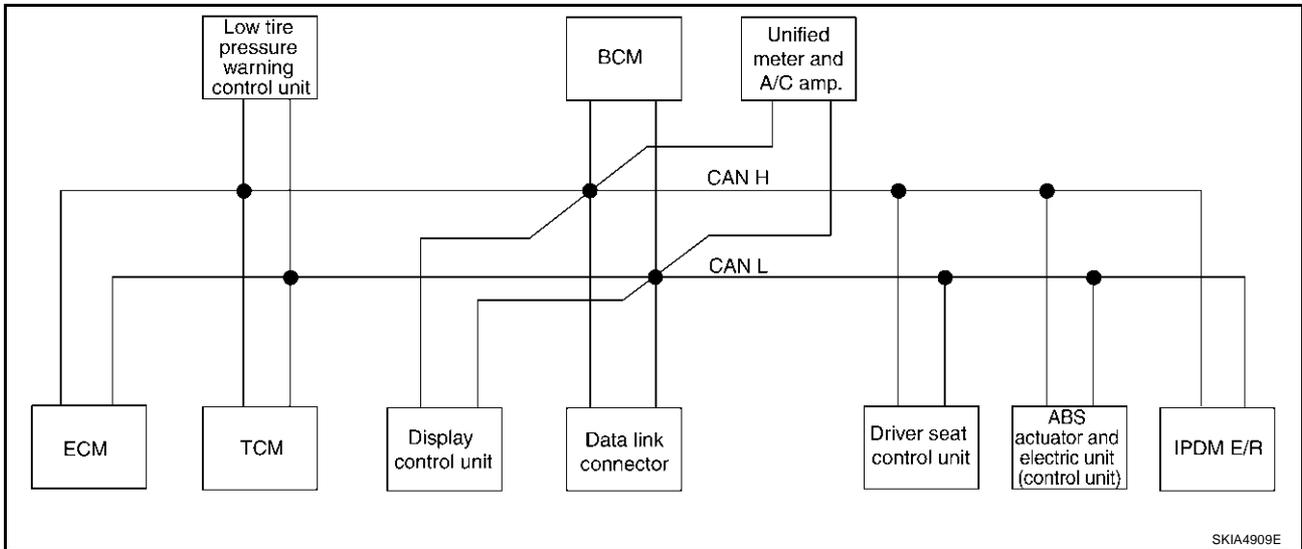

AIR CONDITIONER CONTROL

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Low tire pres- sure warn- ing control unit	Dis- play unit	Dis- play control unit	BCM	Uni- fied meter and A/ C amp.	Driver seat control unit	ABS actua- tor and elec- tric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	R	R			
Engine status signal	T					R				
Engine coolant temperature signal	T						R			
CVT position indicator signal		T					R			
Second position signal		R					T			
Second position indicator signal		T					R			
Engine and CVT integrated control signal	T	R								
	R	T								
Accelerator pedal position signal	T	R								
Closed throttle position signal	T	R								
Wide open throttle position signal	T	R								
Key switch signal						T		R		
Ignition switch signal						T		R		R
P range signal		T						R		
Stop lamp switch signal		R					T			
Fuel consumption monitor signal	T						R			
CVT self-diagnosis signal	R	T								
ABS operation signal		R							T	
Air conditioner switch signal	R					T				
A/C compressor request signal	T									R
A/C compressor feedback signal	T						R			
Blower fan motor switch signal	R					T				
A/C control signal				T	T		R			
				R	R		T			
Cooling fan speed request signal	T									R
Position lights request signal						T	R			R
Low beam request signal						T				R
Low beam status signal	R									T
High beam request signal						T	R			R
High beam status signal	R									T
Front fog lights request signal						T				R
Vehicle speed signal		R					R		T	
	R		R		R	R	T	R		
Sleep request 1 signal						T	R			
Sleep request 2 signal						T				R
Door switch signal						R	T			
				R	R	T	R	R		R
Turn indicator signal						T	R			

A
B
C
D
E
F
G
H
I
K
L
M

ATC

AIR CONDITIONER CONTROL


Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Driver seat control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Key fob ID signal						T		R		
Key fob door unlock signal						T		R		
Seat belt buckle switch signal						R	T			
Oil pressure switch signal						R				T
						T	R			
Buzzer output signal						T	R			
Fuel level sensor signal	R						T			
Fuel level low warning signal				R	R		T			
Malfunction indicator lamp signal	T						R			
ASCD SET lamp signal	T						R			
ASCD CRUISE lamp signal	T						R			
Input shaft revolution signal	R	T								
Output shaft revolution signal	R	T								
Front wiper request signal						T				R
Front wiper stop position signal						R				T
Rear window defogger switch signal						T				R
Rear window defogger control signal	R			R	R					T
Hood switch signal						R				T
Theft warning horn request signal						T				R
Horn chirp signal						T				R
Tire pressure signal			T				R			
Tire pressure data signal			T	R	R					
ABS warning lamp signal							R		T	
Brake warning lamp signal							R		T	
System setting signal				T	T			R		
Parking brake switch signal						R	T			

AIR CONDITIONER CONTROL


TYPE 9/TYPER10/TYPER 11/TYPER 12/TYPER 13/TYPER 14/TYPER 15/TYPER 16

System Diagram


- Type9

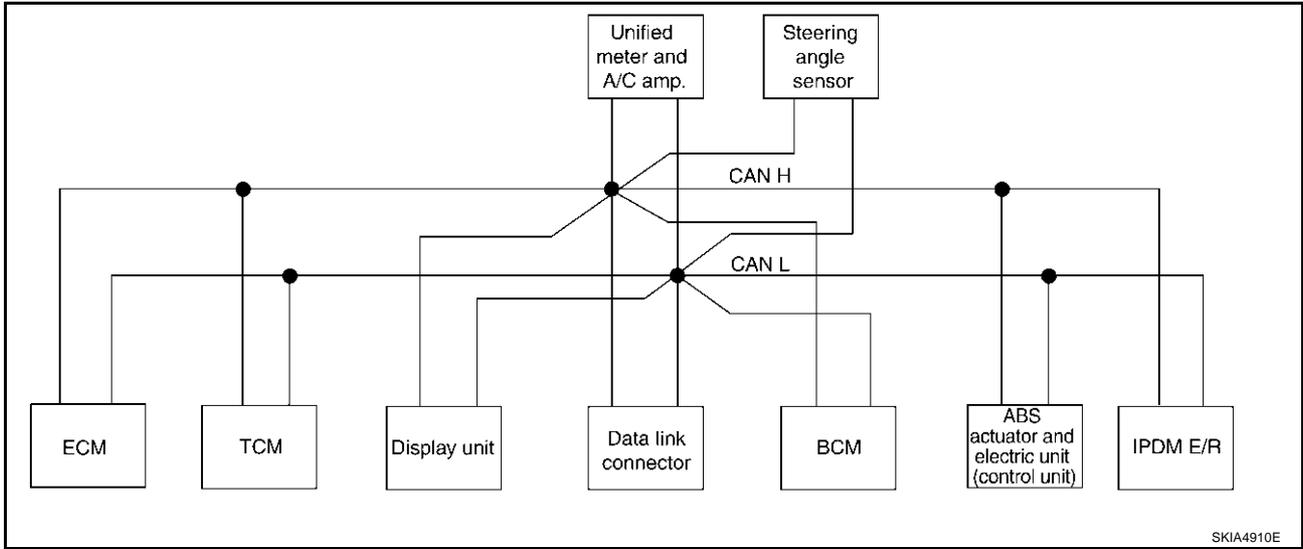

- Type10

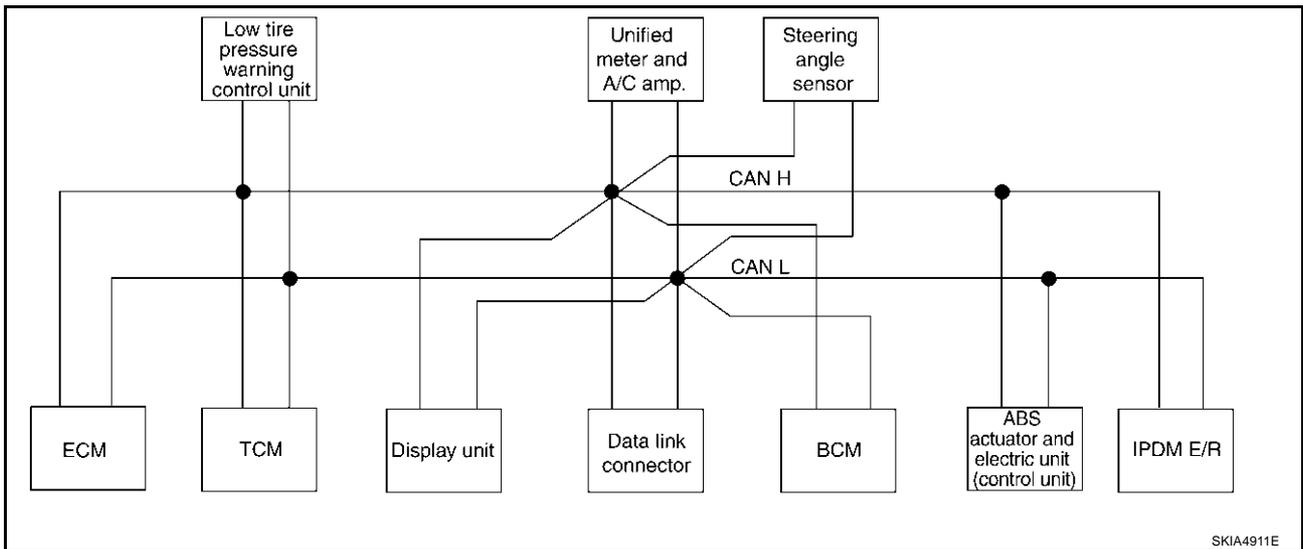

- Type11

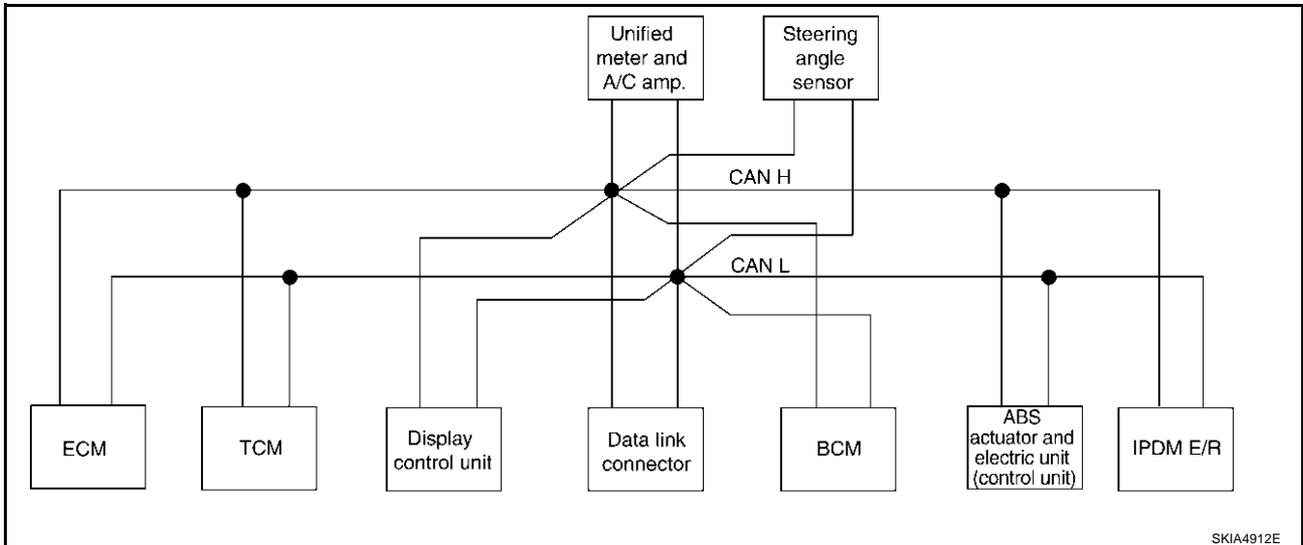


A
B
C
D
E
F
G
H
I
J
K
L
M


ATC

AIR CONDITIONER CONTROL


- Type12

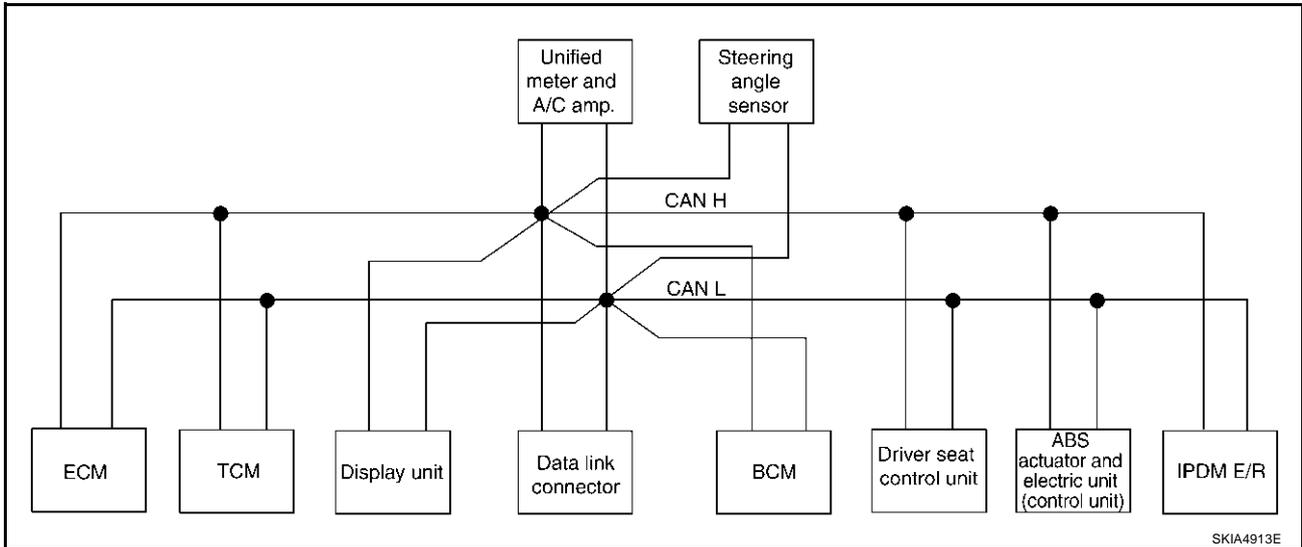

- Type13

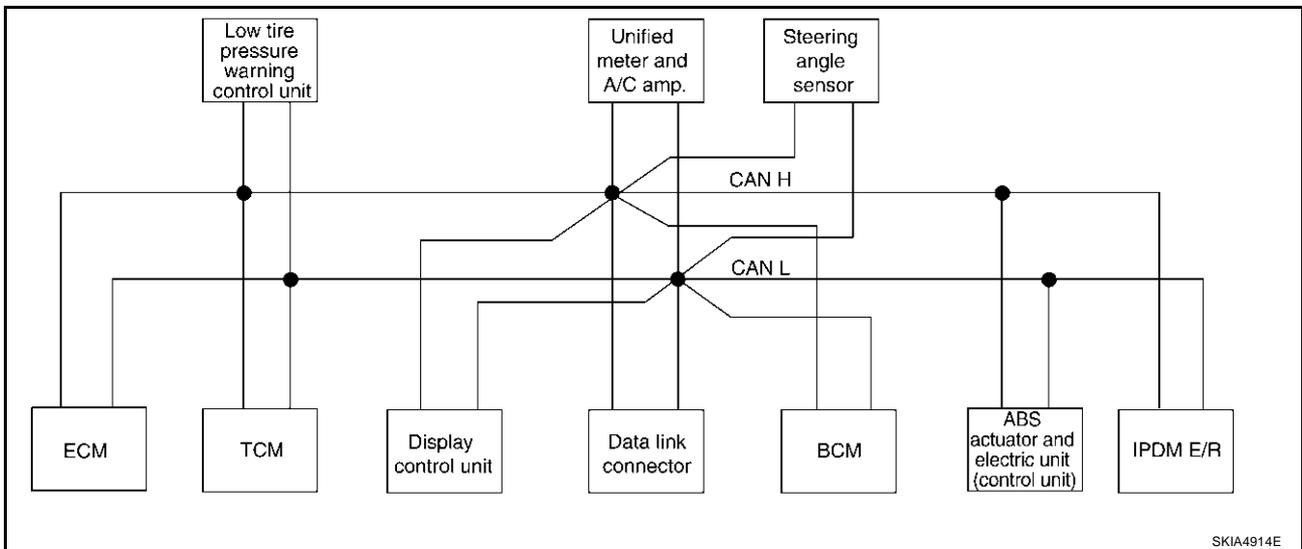


- Type14

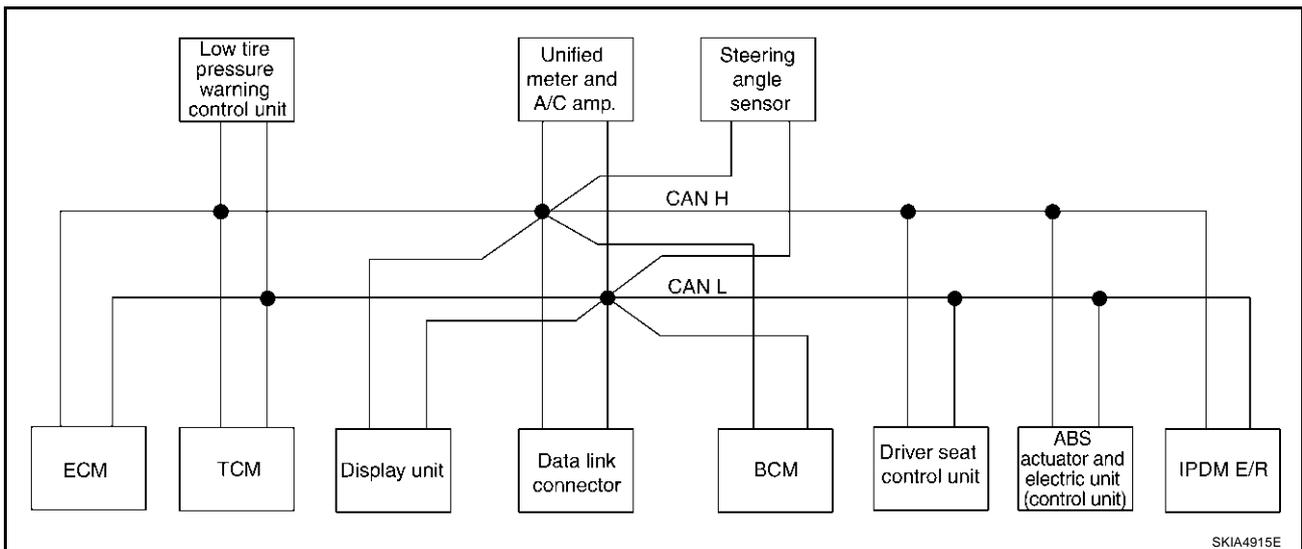


AIR CONDITIONER CONTROL

• Type15

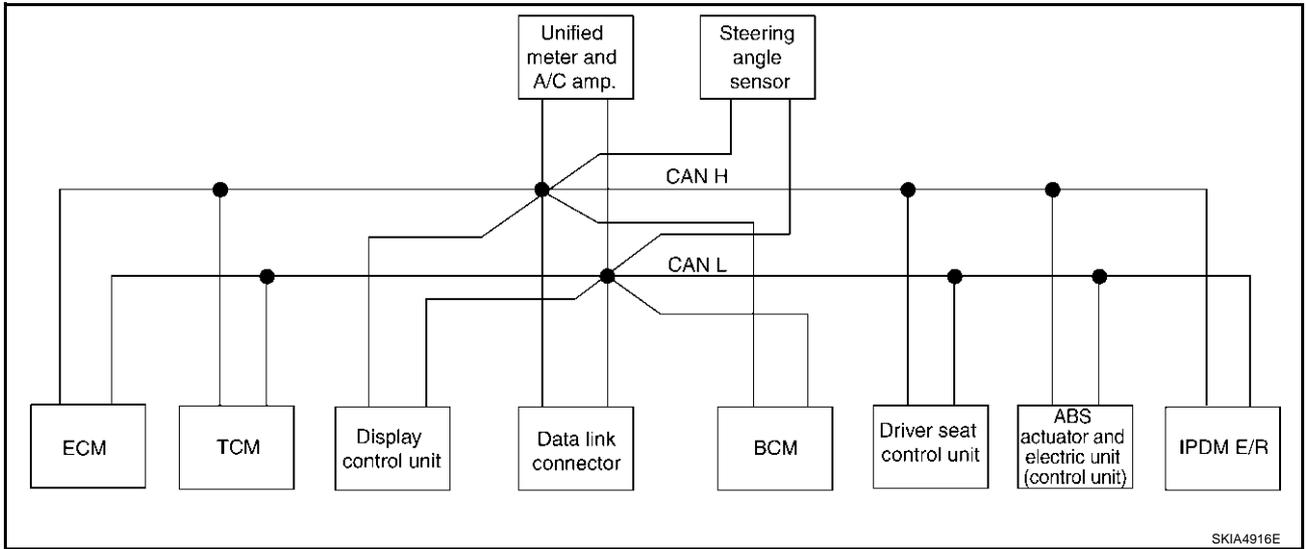

• Type16

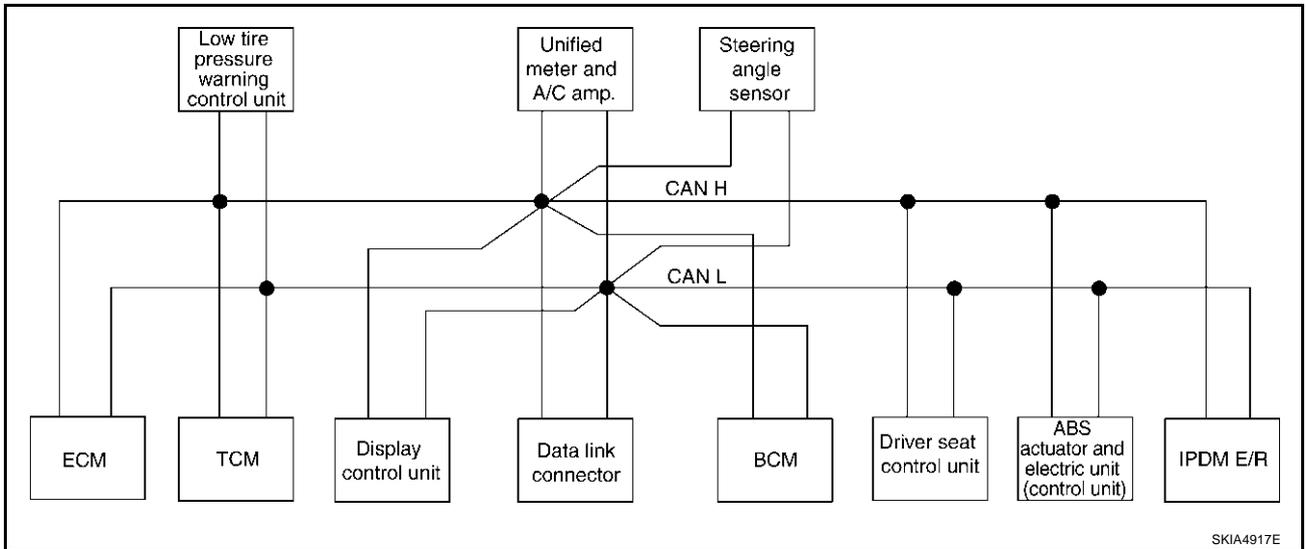

A
B
C
D
E
F
G
H
I
ATC
K
L
M

AIR CONDITIONER CONTROL

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Steering angle sensor	Driver seat control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R			R	R	R			R	
Engine status signal	T					R					
Engine coolant temperature signal	T						R				
Engine and CVT integrated control signal	T	R									
	R	T									
Accelerator pedal position signal	T	R								R	
Closed throttle position signal	T	R									
Wide open throttle position signal	T	R									
Key switch signal						T			R		
Ignition switch signal						T			R		R
P range signal		T							R	R	
Stop lamp switch signal		R					T				
VDC operation signal		R								T	
Second position indicator signal		T					R			R	
Second position signal		R					T				
Fuel consumption monitor signal	T						R				
CVT self-diagnosis signal	R	T									
Input shaft revolution signal	R	T								R	
Output shaft revolution signal	R	T								R	
Air conditioner switch signal	R					T					
A/C compressor request signal	T										R
A/C compressor feedback signal	T						R				
Blower fan motor switch signal	R					T					
A/C control signal				T	T		R				
				R	R		T				
Cooling fan speed request signal	T										R
Position lights request signal						T	R				R
Low beam request signal						T					R
Low beam status signal	R										T
High beam request signal						T	R				R
High beam status signal	R										T
Front fog lights request signal						T					R
Vehicle speed signal		R					R			T	
	R		R		R	R	T		R		
Sleep request 1 signal						T	R				
Sleep request 2 signal						T					R

AIR CONDITIONER CONTROL

Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Steering angle sensor	Driver seat control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Door switch signal						R	T				
Turn indicator signal				R	R	T	R		R		R
Key fob ID signal						T			R		
Key fob door unlock signal						T			R		
Seat belt buckle switch signal						R	T				
Oil pressure switch signal						R					T
Buzzer output signal						T	R				
Fuel level sensor signal	R						T				
Fuel level low warning signal				R	R		T				
Malfunction indicator signal	T						R				
ASCD SET lamp signal	T						R				
ASCD CRUISE lamp signal	T						R				
Front wiper request signal						T					R
Front wiper stop position signal						R					T
Rear window defogger switch signal						T					R
Rear window defogger control signal	R			R	R						T
Hood switch signal						R					T
Theft warning horn request signal						T					R
Horn chirp signal						T					R
Steering angle sensor signal								T		R	
Tire pressure signal			T				R				
Tire pressure data signal			T	R	R						
CVT position indicator signal		T					R			R	
ABS warning lamp signal							R			T	
VDC OFF indicator lamp signal							R			T	
SLIP indicator lamp signal							R			T	
Brake warning lamp signal							R			T	
System setting signal				T	T				R		
Parking brake switch signal						R	T				

A
B
C
D
E
F
G
H
I
J
K
L
M

ATC

AIR CONDITIONER CONTROL

CAN Communication Unit For AWD Models

AJS001C0


Body type	Wagon															
Axle	AWD															
Engine	VQ35DE															
Transmission	CVT															
Brake control	ABS							VDC								
Low tire pressure warning system		×			×	×		×		×			×	×		×
Navigation system			×		×		×	×			×		×		×	×
Automatic drive positioner				×		×	×	×				×		×	×	×
CAN communication unit																
ECM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
TCM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Low tire pressure warning control unit		×			×	×		×		×			×	×		×
Display unit	×	×		×		×			×	×		×		×		
Display control unit			×		×		×	×			×		×		×	×
Data link connector	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Steering angle sensor									×	×	×	×	×	×	×	×
Driver seat control unit				×		×	×	×				×		×	×	×
AWD control unit	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
CAN communication type	<u>ATC-44, "TYPE 17/TYPE 18/TYPE 19/TYPE 20/TYPE 21/TYPE 22/TYPE 23/TYPE 24"</u>								<u>ATC-50, "TYPE 25/TYPE 26/TYPE 27/TYPE 28/TYPE 29/TYPE 30/TYPE 31/TYPE 32"</u>							

×: Applicable

TYPE 17/TYPE 18/TYPE 19/TYPE 20/TYPE 21/TYPE 22/TYPE 23/TYPE 24


System Diagram

- Type17

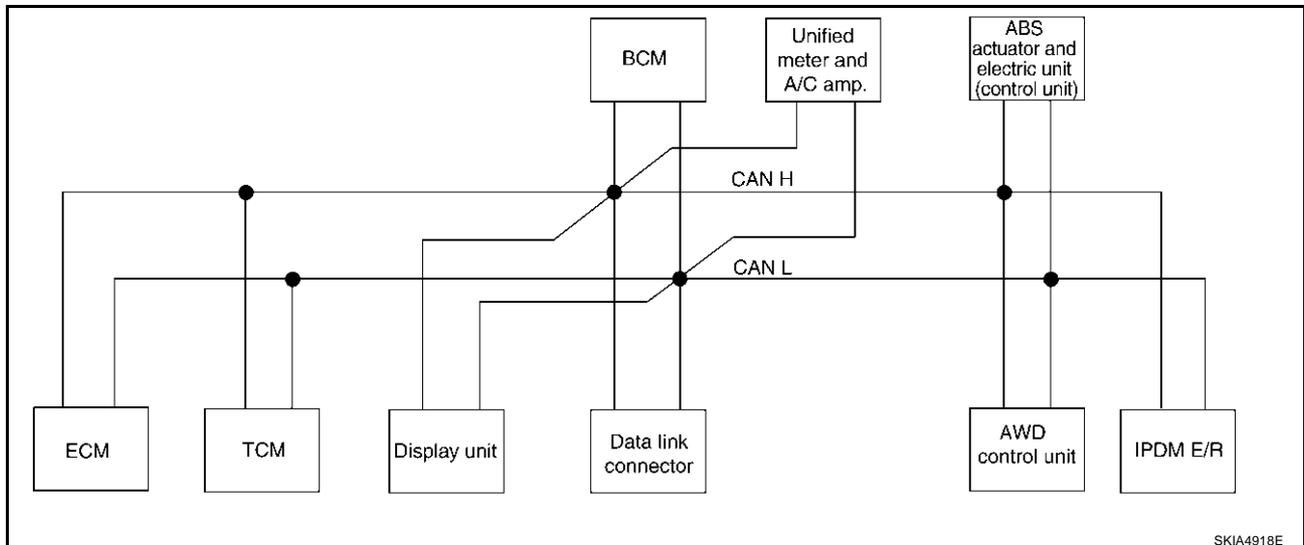


AIR CONDITIONER CONTROL


- Type18

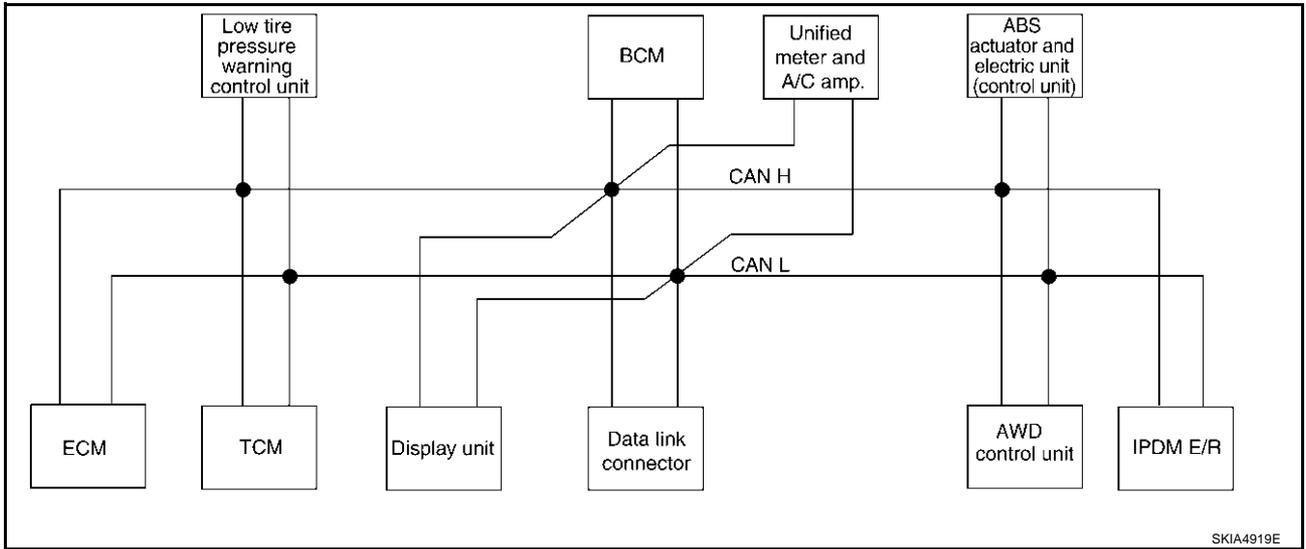

- Type19

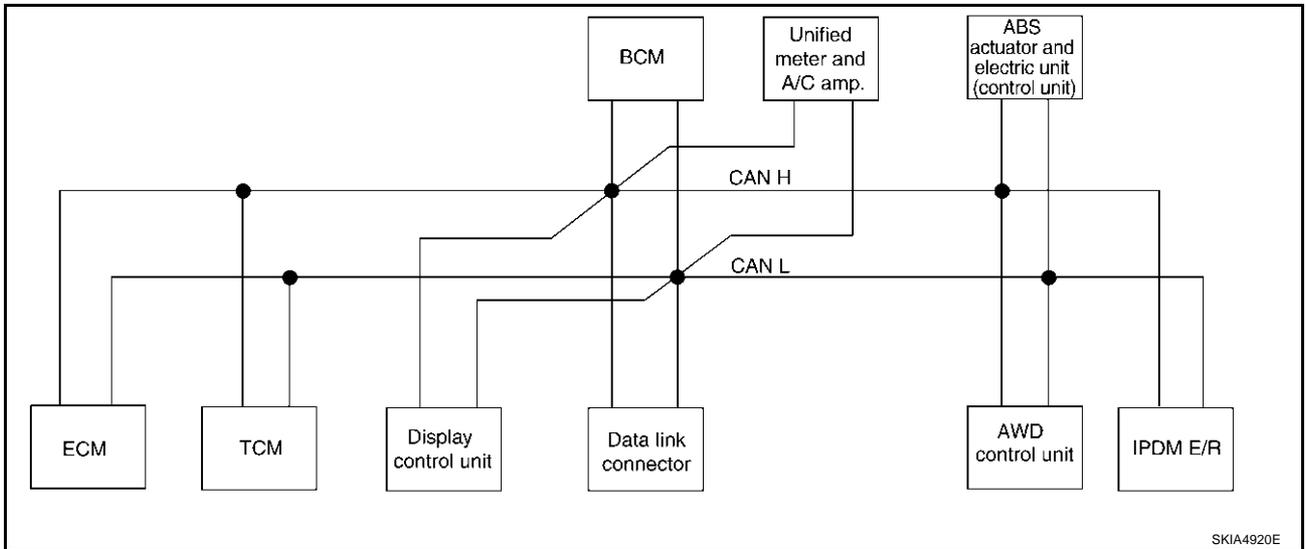

- Type20

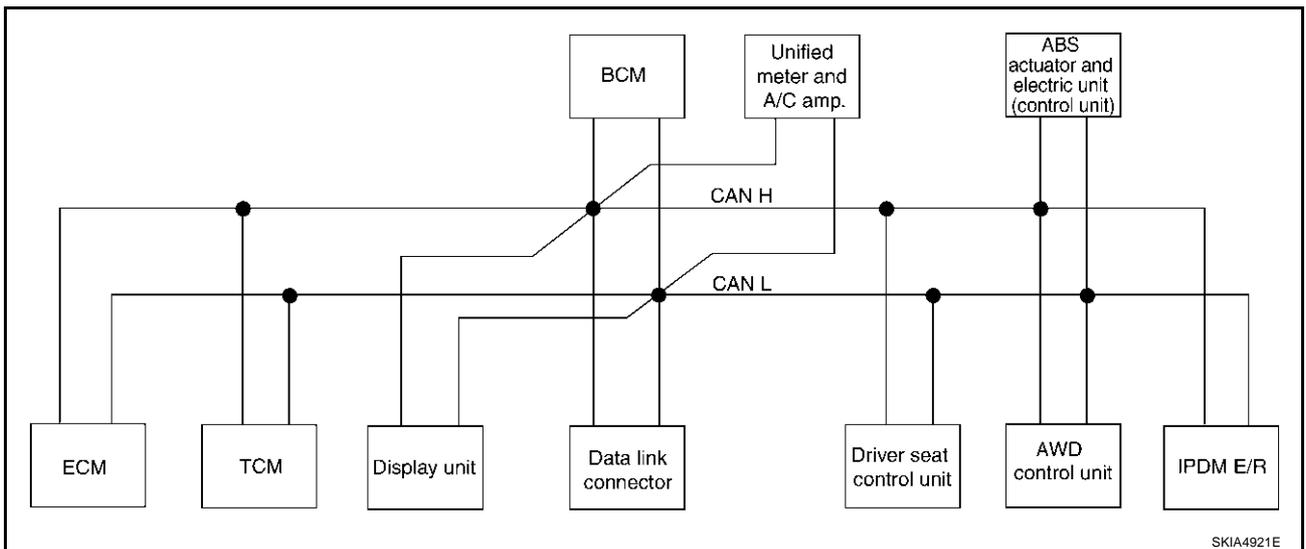


A
B
C
D
E
F
G
H
I
J
K
L
M


ATC

AIR CONDITIONER CONTROL


- Type21

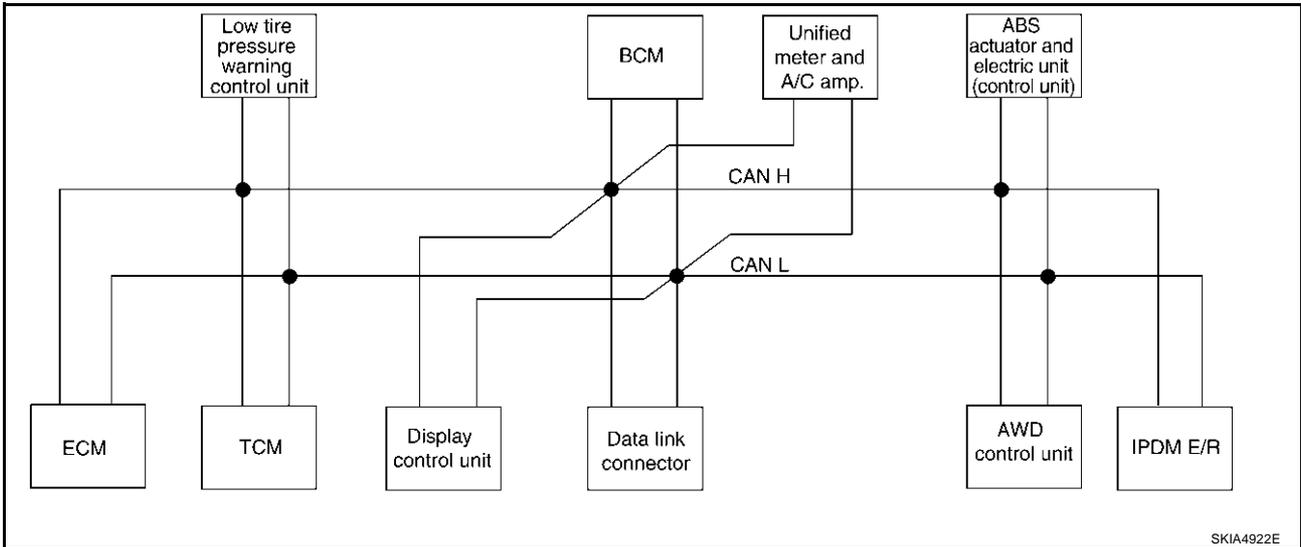

- Type22

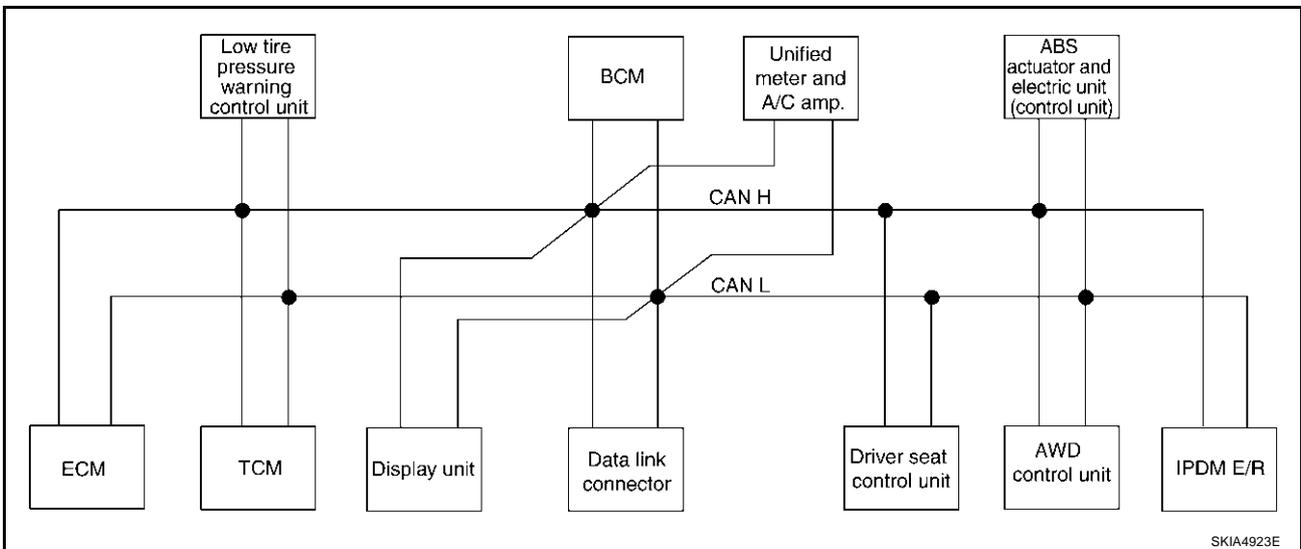


- Type23

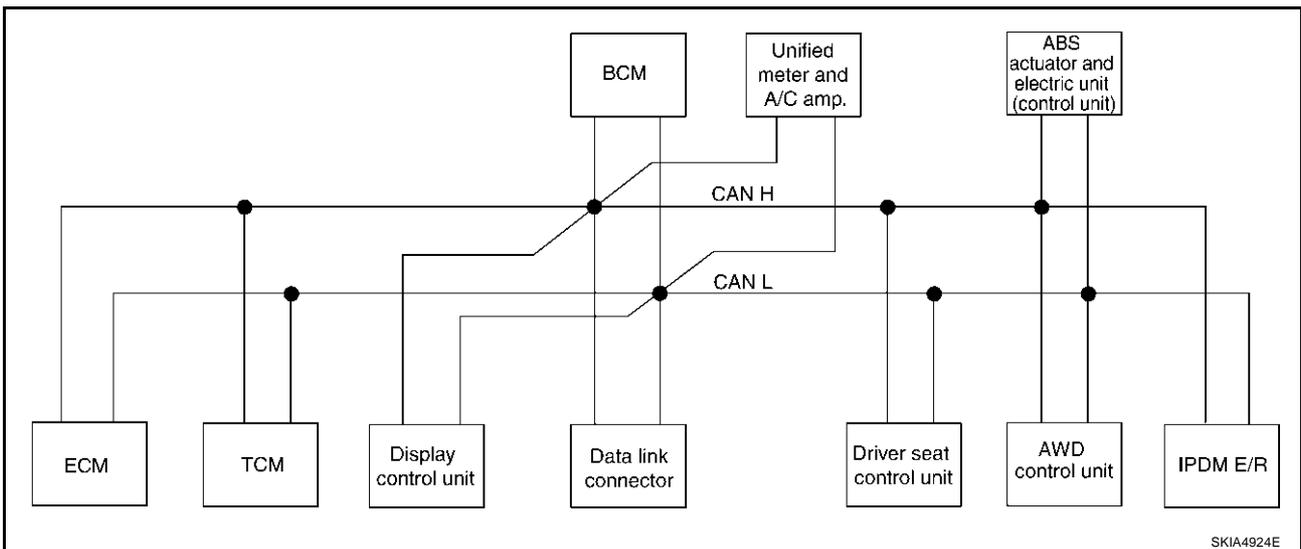

AIR CONDITIONER CONTROL

- Type24

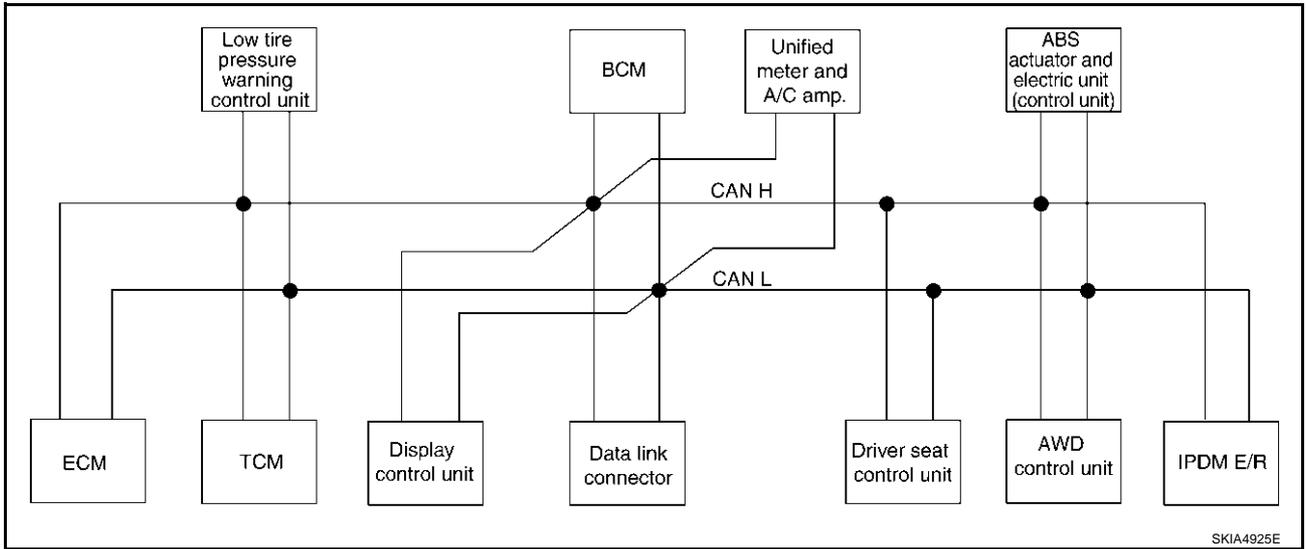

A
B
C
D
E
F
G
H
I
K
L
M

ATC

AIR CONDITIONER CONTROL

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Driver seat control unit	AWD control unit	ABS actuator and electric unit (control unit)	IPDM E/R
CVT position indicator signal		T					R				
Second position signal		R					T				
Second position indicator signal		T					R				
Engine speed signal	T	R	R		R	R	R		R		
Engine status signal	T					R					
Engine coolant temperature signal	T						R				
Accelerator pedal position signal	T	R							R		
Closed throttle position signal	T	R									
Wide open throttle position signal	T	R									
Key switch signal						T		R			
Ignition switch signal						T		R			R
P range signal		T						R			
Stop lamp switch signal		R					T		R		
Fuel consumption monitor signal	T						R				
CVT self-diagnosis signal	R	T									
ABS operation signal		R							R	T	
Air conditioner switch signal	R					T					
A/C compressor request signal	T										R
A/C compressor feedback signal	T						R				
Blower fan motor switch signal	R					T					
A/C control signal				T	T		R				
				R	R		T				
Cooling fan speed request signal	T										R
Position lights request signal						T	R				R
Low beam request signal						T					R
Low beam status signal	R										T
High beam request signal						T	R				R
High beam status signal	R										T
Front fog lights request signal						T					R
Vehicle speed signal		R					R		R	T	
	R		R		R	R	T	R			
Sleep request 1 signal						T	R				
Sleep request 2 signal						T					R
Door switch signal						R	T				
				R	R	T	R	R			R
Key fob ID signal						T		R			
Key fob door unlock signal						T		R			

AIR CONDITIONER CONTROL

Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Driver seat control unit	AWD control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Turn indicator signal						T	R				
Seat belt buckle switch signal						R	T				
Oil pressure switch signal						R					T
						T	R				
Buzzer output signal						T	R				
Fuel level sensor signal	R						T				
Fuel level low warning signal				R	R		T				
Malfunction indicator lamp signal	T						R				
ASCD SET lamp signal	T						R				
ASCD CRUISE lamp signal	T						R				
Input shaft revolution signal	R	T									
Output shaft revolution signal	R	T									
Front wiper request signal						T					R
Front wiper stop position signal						R					T
Rear window defogger switch signal						T					R
Rear window defogger control signal	R			R	R						T
Engine and CVT integrated control signal	T	R									
	R	T									
Hood switch signal						R					T
Theft warning horn request signal						T					R
Horn chirp signal						T					R
Tire pressure signal			T				R				
Tire pressure data signal			T	R	R						
ABS warning lamp signal							R			T	
Brake warning lamp signal							R			T	
System setting signal				T	T			R			
AWD warning lamp signal							R		T		
AWD lock indicator lamp signal							R		T		
AWD lock switch signal							T		R		
Parking brake switch signal						R	T		R		

A
B
C
D
E
F
G
H
I
J
K
L
M


ATC

AIR CONDITIONER CONTROL


TYPE 25/TYPER26/TYPER 27/TYPER 28/TYPER 29/TYPER 30/TYPER 31/TYPER 32

System Diagram


- Type25

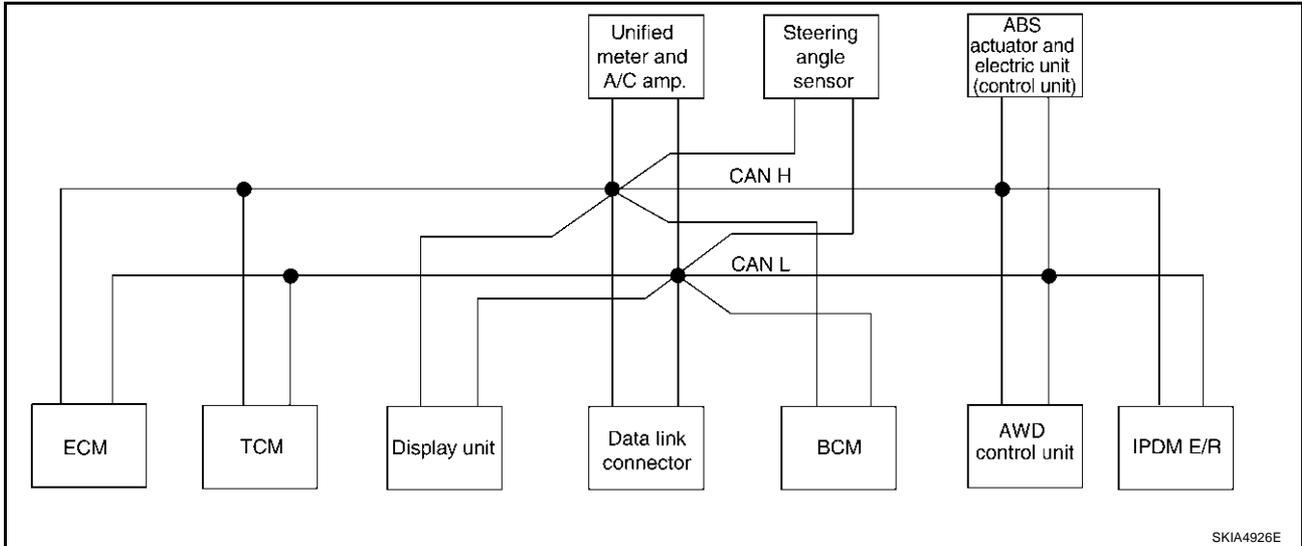

- Type26

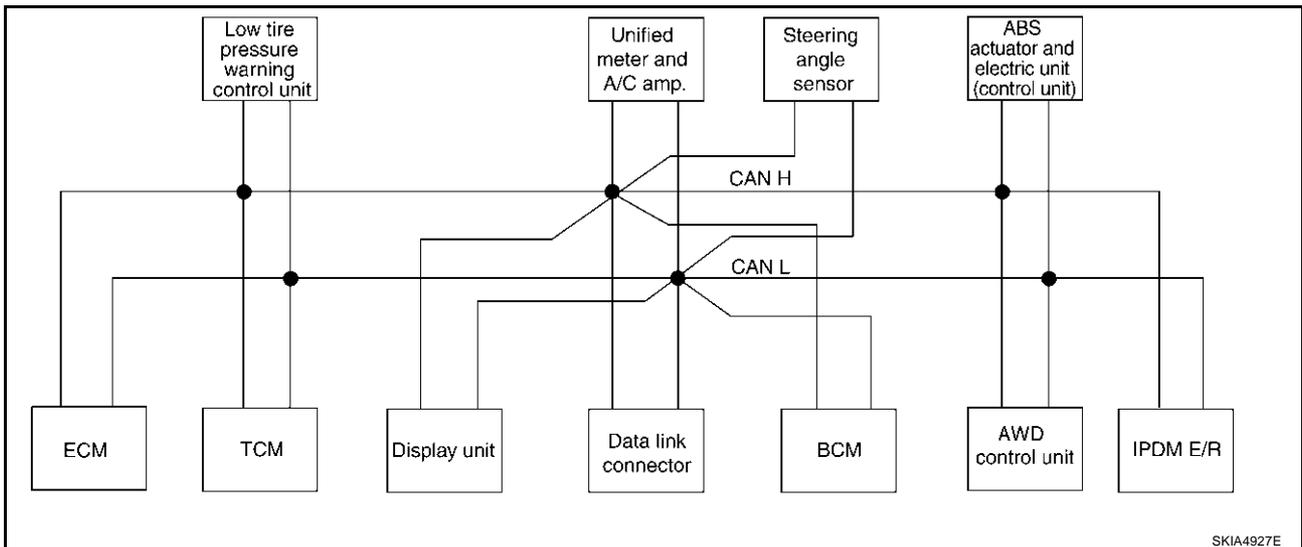


- Type27

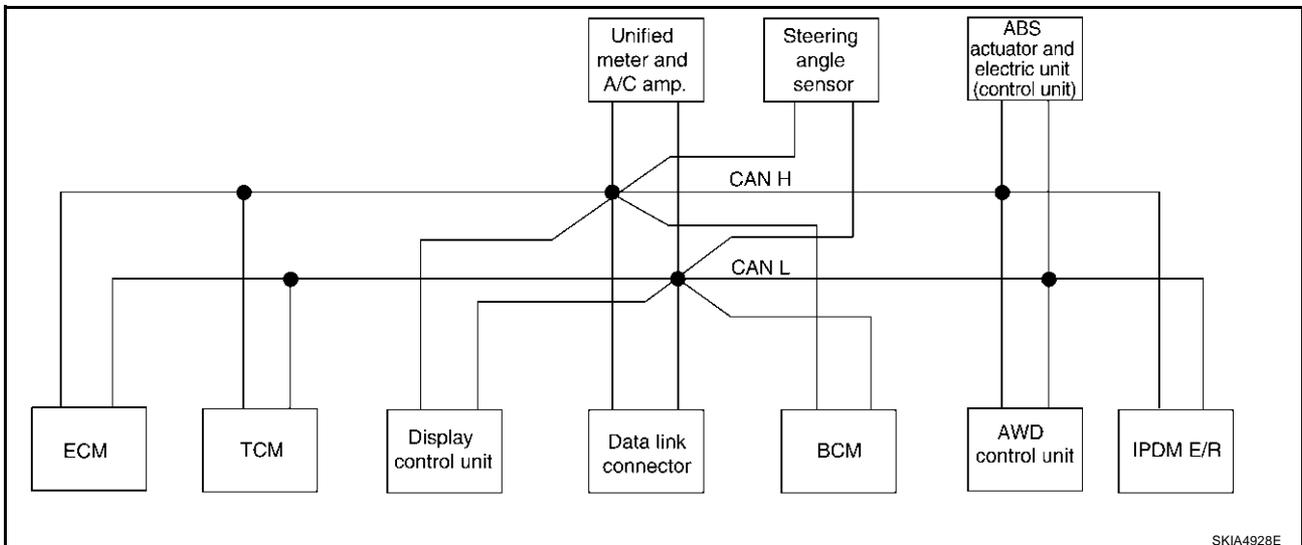


AIR CONDITIONER CONTROL


- Type28

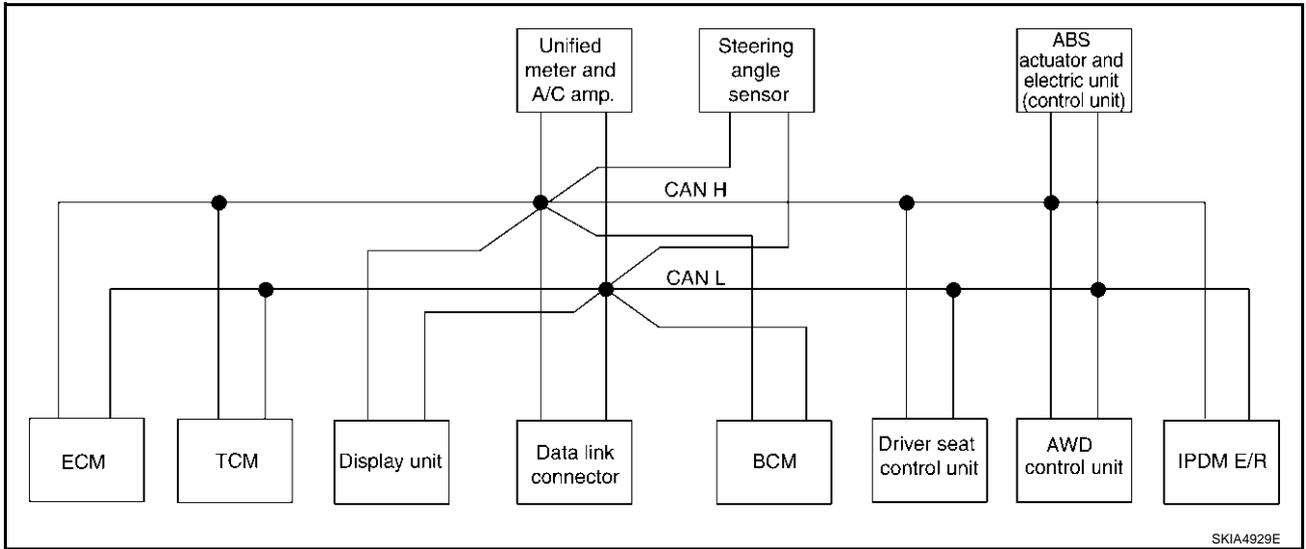

- Type29

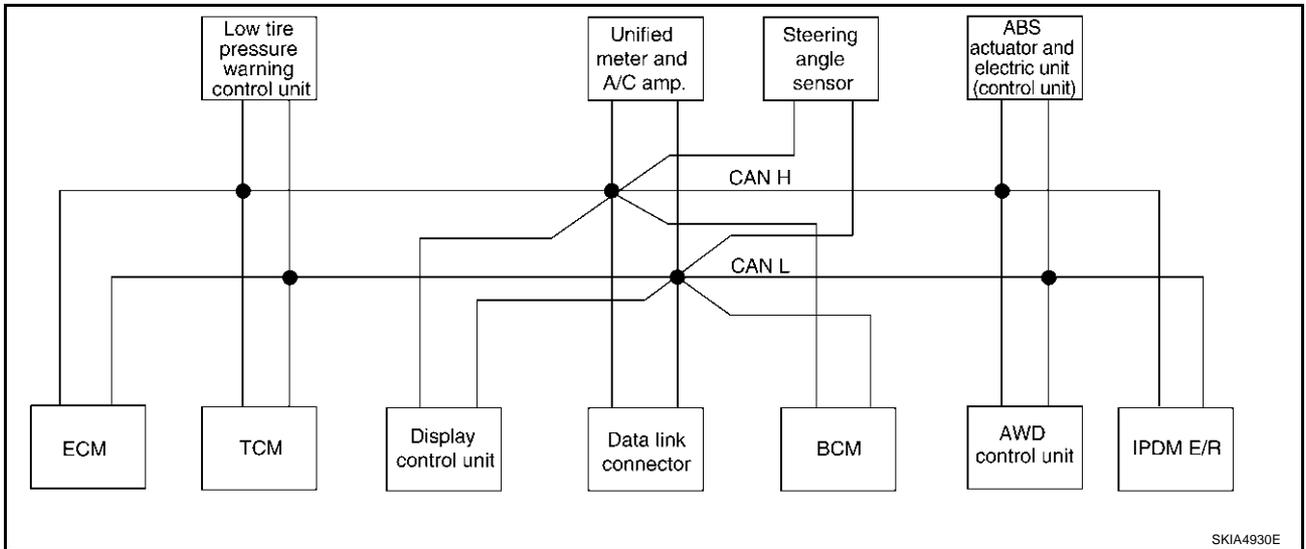

- Type30

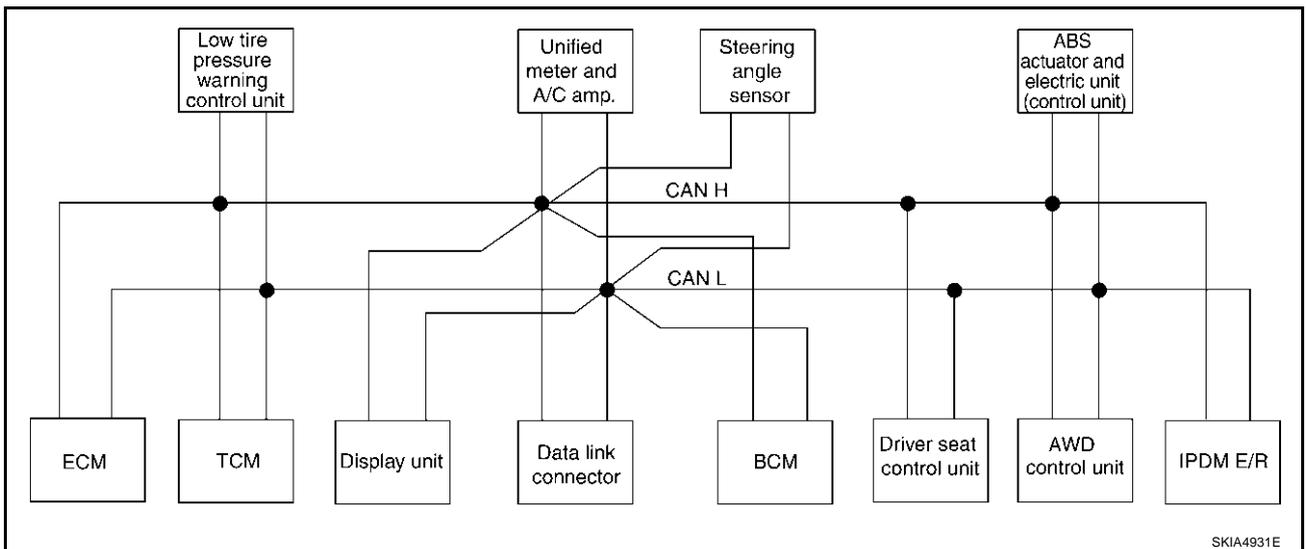


A
B
C
D
E
F
G
H
I
J
K
L
M


ATC

AIR CONDITIONER CONTROL

- Type31

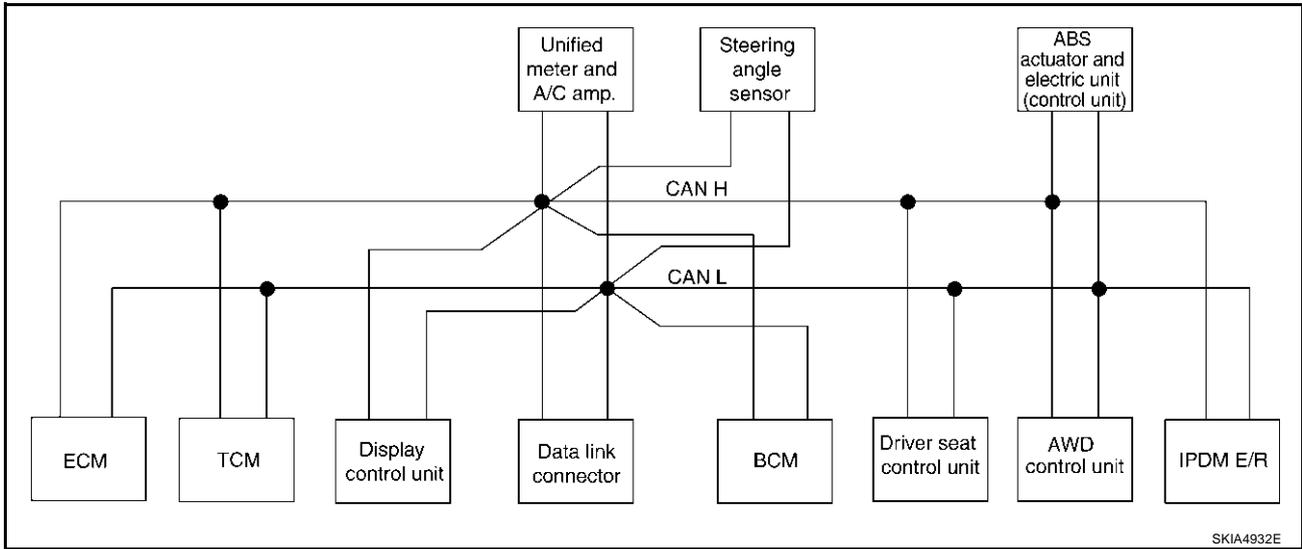

- Type32

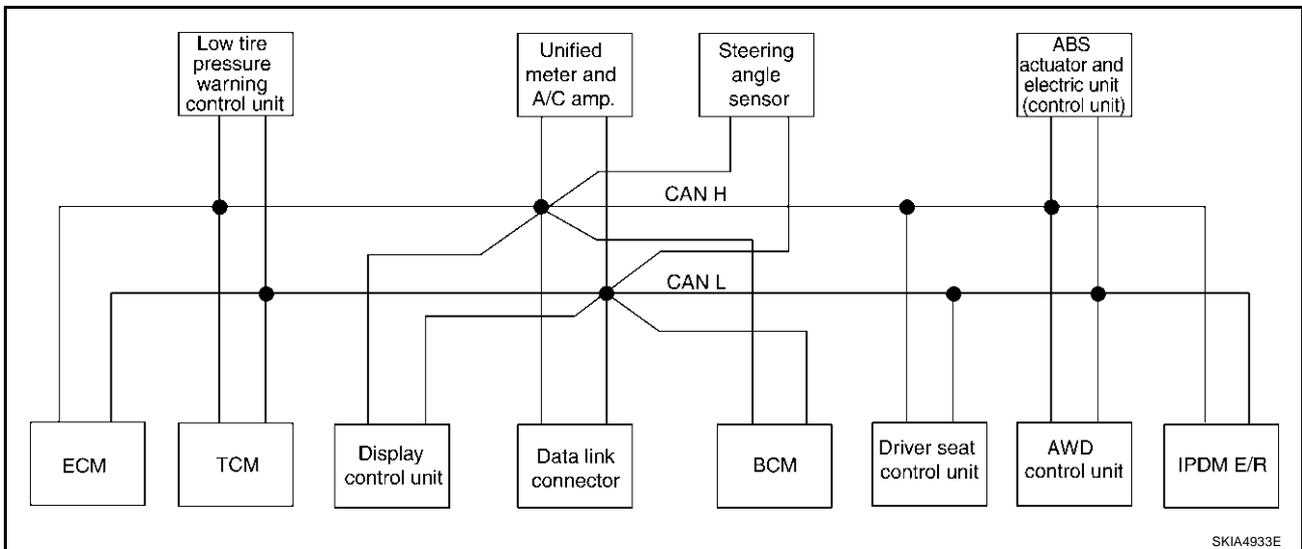

AIR CONDITIONER CONTROL

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Steering angle sensor	Driver seat control unit	AWD control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Engine and CVT integrated control signal	T	R										
	R	T										
Second position signal		R					T					
VDC operation signal		R								R	T	
Stop lamp switch signal		R					T			R		
Key switch signal						T			R			
Ignition switch signal						T			R			R
P range signal		T							R		R	
Closed throttle position signal	T	R										
Wide open throttle position signal	T	R										
Second position indicator signal		T					R				R	
Engine speed signal	T	R			R	R	R			R	R	
Engine status signal	T					R						
Engine coolant temperature signal	T						R					
Accelerator pedal position signal	T	R								R	R	
Fuel consumption monitor signal	T						R					
CVT self-diagnosis signal	R	T										
Input shaft revolution signal	R	T									R	
Output shaft revolution signal	R	T									R	
Air conditioner switch signal	R					T						
A/C compressor request signal	T											R
A/C compressor feedback signal	T						R					T
Blower fan motor switch signal	R					T						
A/C control signal				T	T		R					
				R	R		T					
Cooling fan speed request signal	T											R
Position lights request signal						T	R					R
Low beam request signal						T						R
Low beam status signal	R											T
High beam request signal						T	R					R
High beam status signal	R											T
Front fog lights request signal						T						R
Vehicle speed signal		R					R			R	T	
	R		R		R	R	T		R			
Sleep request 1 signal						T	R					
Sleep request 2 signal						T						R

A
B
C
D
E
F
G
H
I
J
K
L
M

ATC

AIR CONDITIONER CONTROL

Signals	ECM	TCM	Low tire pressure warning control unit	Display unit	Display control unit	BCM	Unified meter and A/C amp.	Steering angle sensor	Driver seat control unit	AWD control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Door switch signal						R	T					
Turn indicator signal				R	R	T	R		R			R
Key fob ID signal						T			R			
Key fob door unlock signal						T			R			
Seat belt buckle switch signal						R	T					
Oil pressure switch signal						R						T
Buzzer output signal						T	R					
Fuel level sensor signal	R						T					
Fuel level low warning signal				R	R		T					
Malfunction indicator signal	T						R					
ASCD SET lamp signal	T						R					
ASCD CRUISE lamp signal	T						R					
Front wiper request signal						T						R
Front wiper stop position signal						R						T
Rear window defogger switch signal						T						R
Rear window defogger control signal	R			R	R							T
Hood switch signal						R						T
Theft warning horn request signal						T						R
Horn chirp signal						T						R
Steering angle sensor signal								T			R	
Tire pressure signal			T				R					
Tire pressure data signal			T	R	R							
CVT position indicator signal		T					R				R	
ABS warning lamp signal							R				T	
VDC OFF indicator lamp signal							R				T	
SLIP indicator lamp signal							R				T	
Brake warning lamp signal							R				T	
System setting signal				T	T				R			
AWD warning lamp signal							R			T		
AWD lock indicator lamp signal							R			T		
AWD lock switch signal							T			R		
Parking brake switch signal						R	T			R		

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PF0:00004

CONSULT-II

AJS000YX

CONSULT-II executes the following functions by combining data reception and command transmission via the communication line from BCM data monitor display.


System part	Check item, diagnosis mode	Description
BCM	Data monitor	Displays BCM input data in real time.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and "CONSULT-II CONVERTER" to the data link connector, and turn the ignition switch ON.

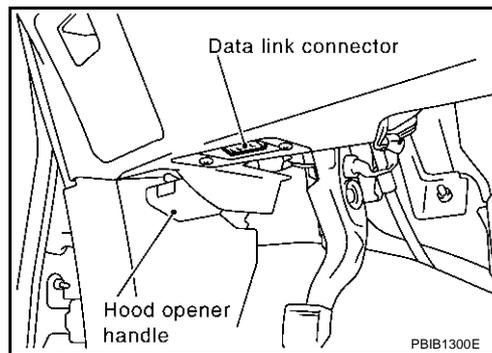

2. Touch "START (NISSAN BASED VHCL)".

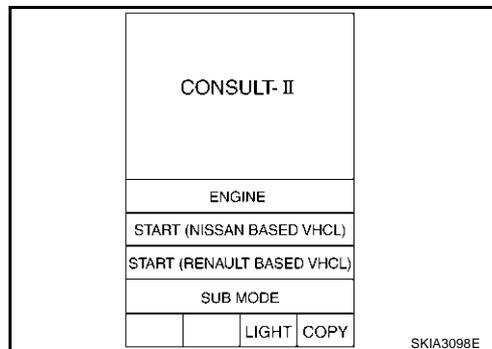

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-38, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

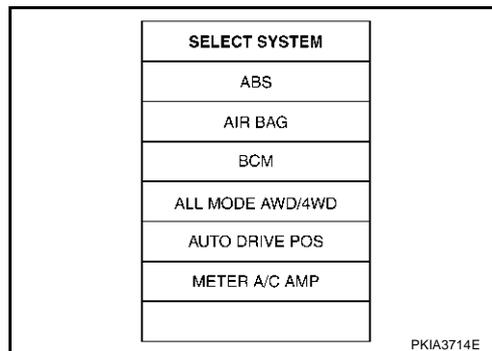

A
B
C
D
E
F
G
H
I
K
L
M


ATC

TROUBLE DIAGNOSIS


DATA MONITOR

Operation Procedure

1. Touch "SIGNAL BUFFER" on "SELECT TEST ITEM" screen.

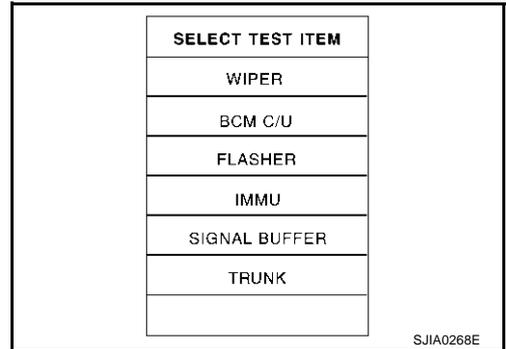

2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.

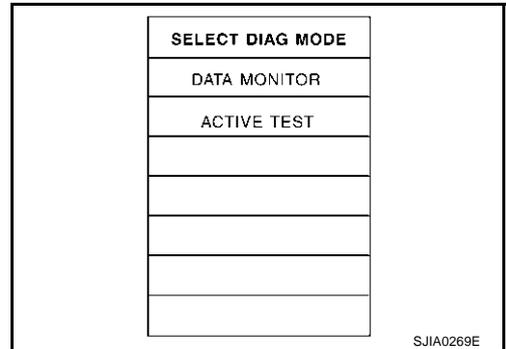


3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "DATA MONITOR" screen.

All signals	Monitors all the items.
Selection from menu	Selects and monitors the individual item selected.

4. Touch "START".

5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.

6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

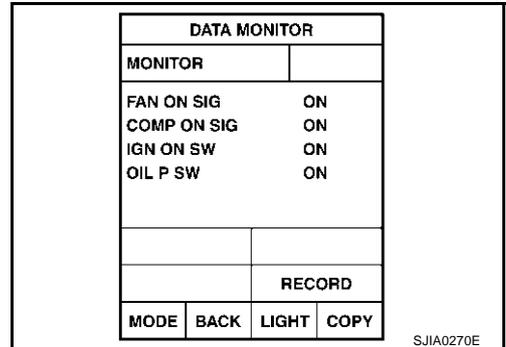

Display Item List


Monitor item name "operation or unit"	Contents
IGN ON SW "ON/OFF"	Displays "IGN Position (ON)/OFF, ACC Position (OFF)" status as judged from ignition switch signal.
COMP ON SIG "ON/OFF"	Displays "COMP (ON)/COMP (OFF)" status as judged from air conditioner switch signal.
FAN ON SIG "ON/OFF"	Displays "FAN (ON)/FAN (OFF)" status as judged from blower fan motor switch signal.

TROUBLE DIAGNOSIS

How to Perform Trouble Diagnosis for Quick and Accurate Repair

AJS000YY

WORK FLOW

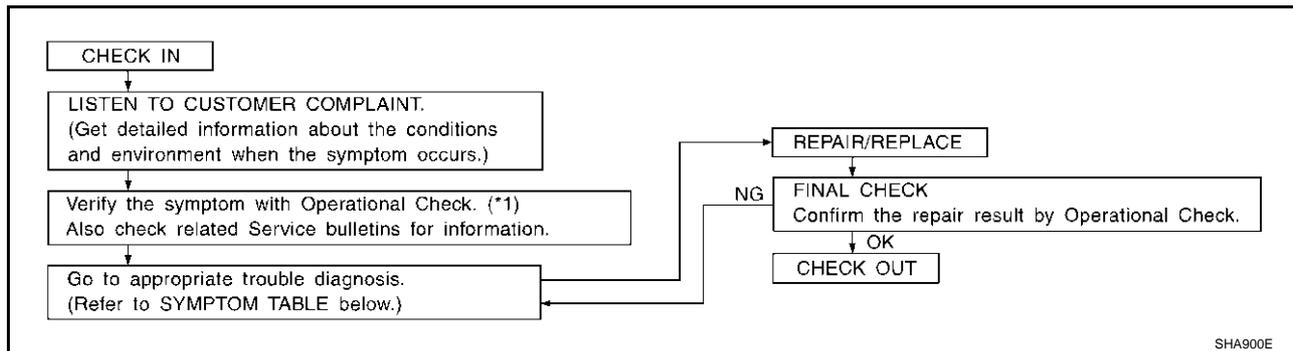

SHA900E

*1 [ATC-76. "Operational Check"](#)





SYMPTOM TABLE

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	ATC-78. "Power Supply and Ground Circuit for Auto Amp."
A/C system cannot be controlled.	<ul style="list-style-type: none"> ● Go to Integrated Display System. ● Go to Navigation System. 	AV-62. "System Description" (Without navigation system) or AV-219. "A/C Does Not Work" (With navigation system)
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor. (LAN)	ATC-84. "Mode Door Motor Circuit"
Mode door motor does not operate normally.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor. (LAN)	ATC-87. "Air Mix Door Motor Circuit"
Air mix door motor does not operate normally.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor. (LAN)	ATC-90. "Intake Door Motor Circuit"
Intake door motor does not operate normally.		
Blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Blower Motor.	ATC-93. "Blower Motor Circuit"
Blower motor operation is malfunctioning under out of starting fan speed control.		
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	ATC-98. "Magnet Clutch Circuit"
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	ATC-104. "Insufficient Cooling"
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	ATC-111. "Insufficient Heating"
Noise	Go to Trouble Diagnosis Procedure for Noise.	ATC-112. "Noise"
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	ATC-113. "Self-diagnosis"
Memory function does not operate.	Go to Trouble Diagnosis Procedure for Memory Function.	ATC-114. "Memory Function"

TROUBLE DIAGNOSIS

Component Parts and Harness Connector Location ENGINE COMPARTMENT


AJS000YZ

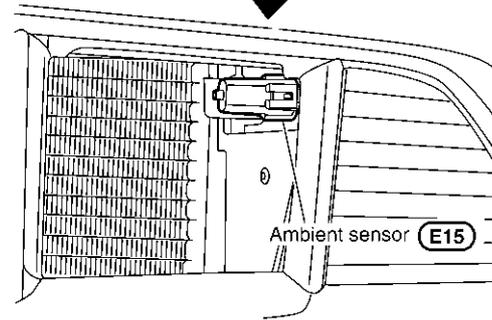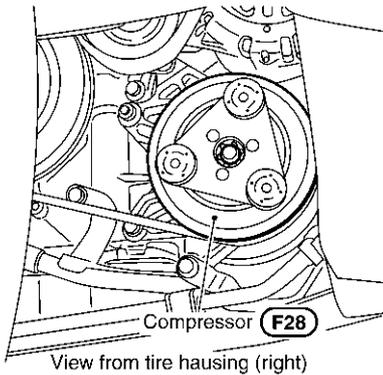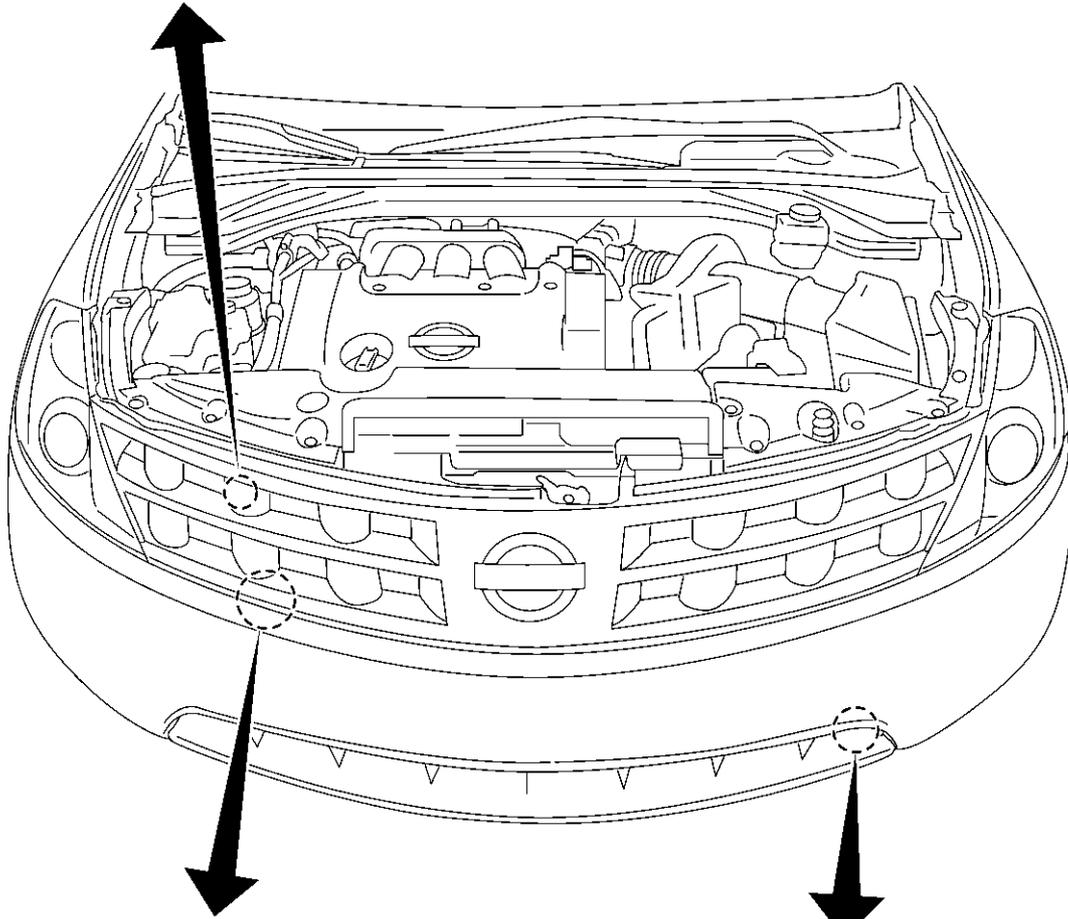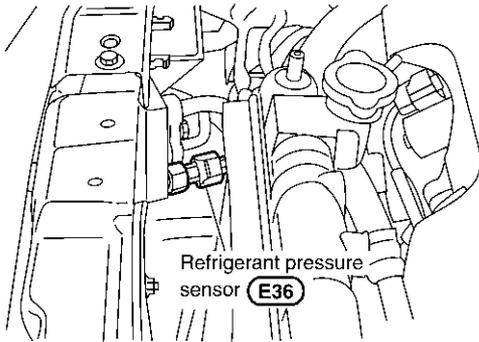

RJIA1756E

TROUBLE DIAGNOSIS

PASSENGER COMPARTMENT

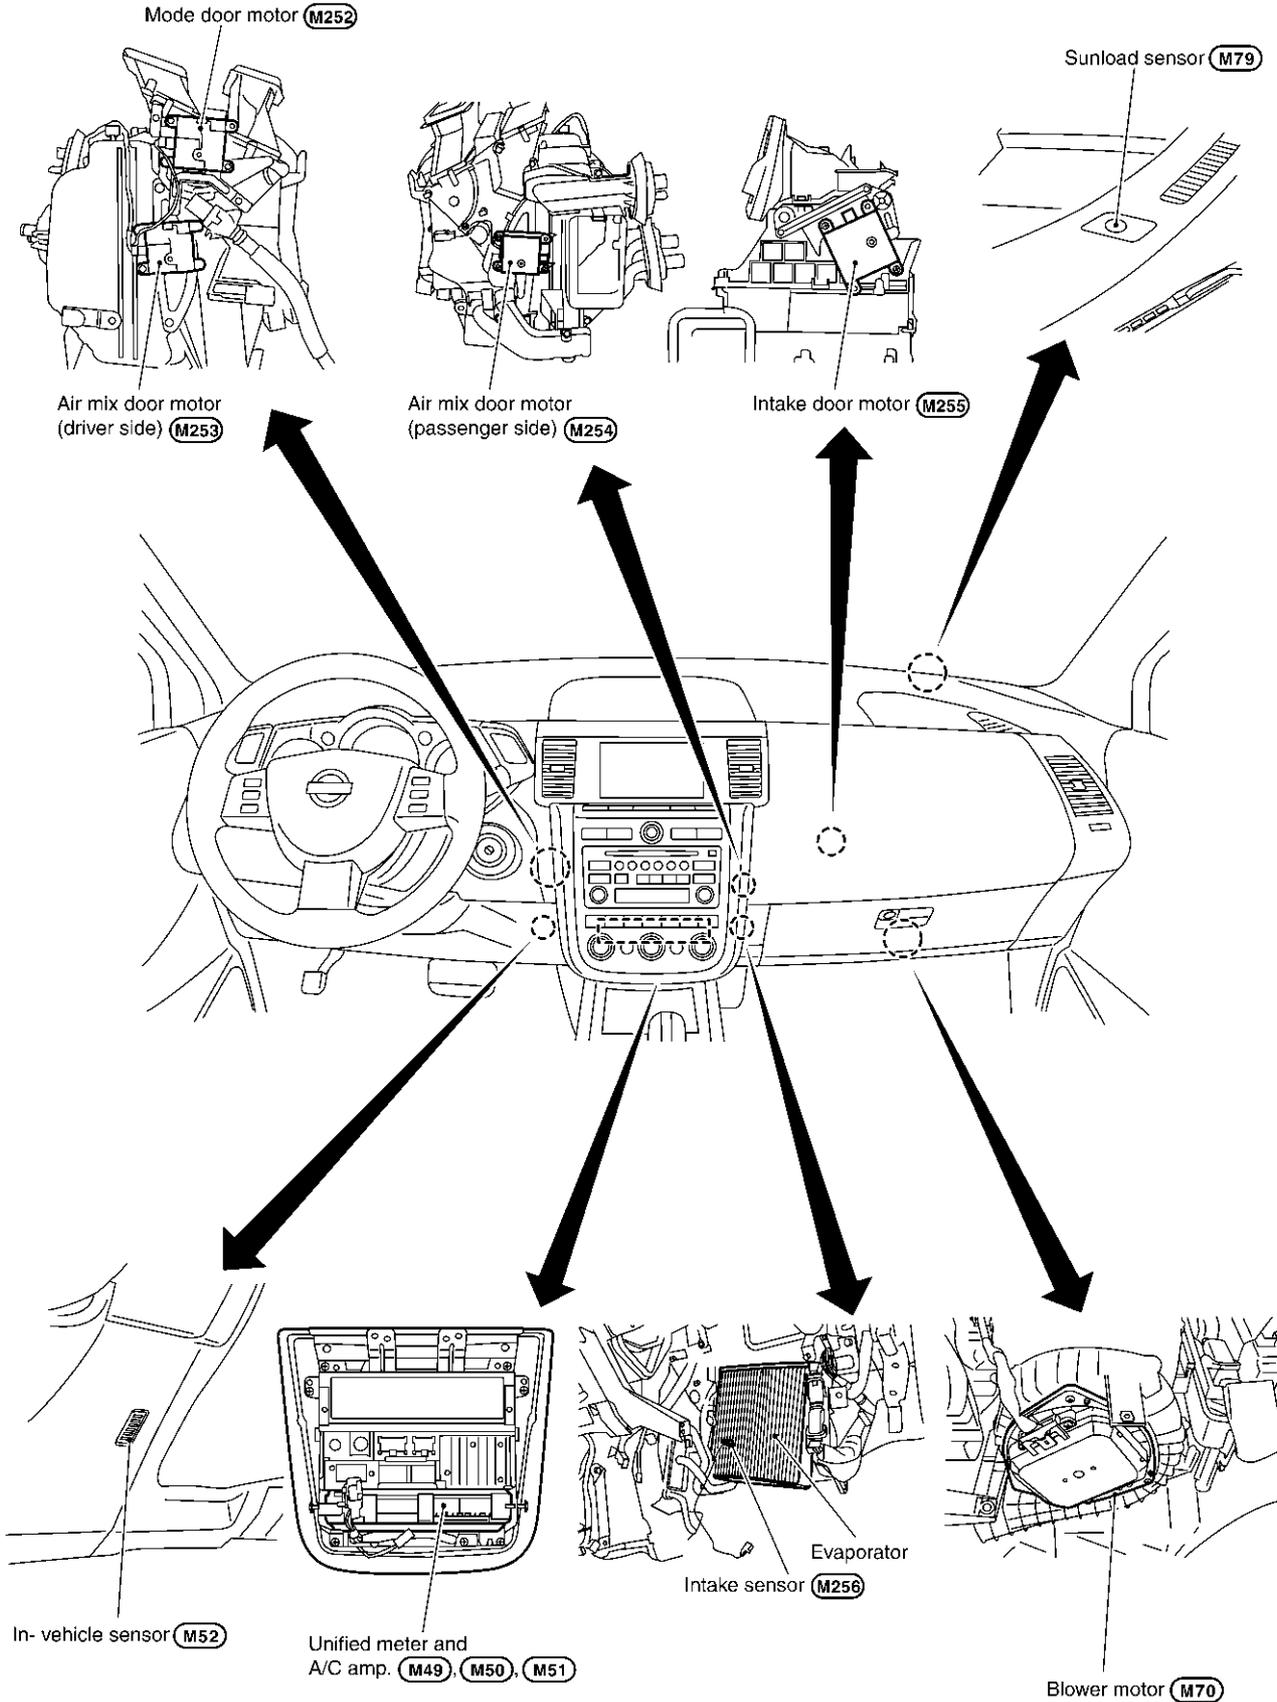

A
B
C
D
E
F
G
H
I
K
L
M


ATC

RJIA1757E

TROUBLE DIAGNOSIS

Schematic

AJS000Z0

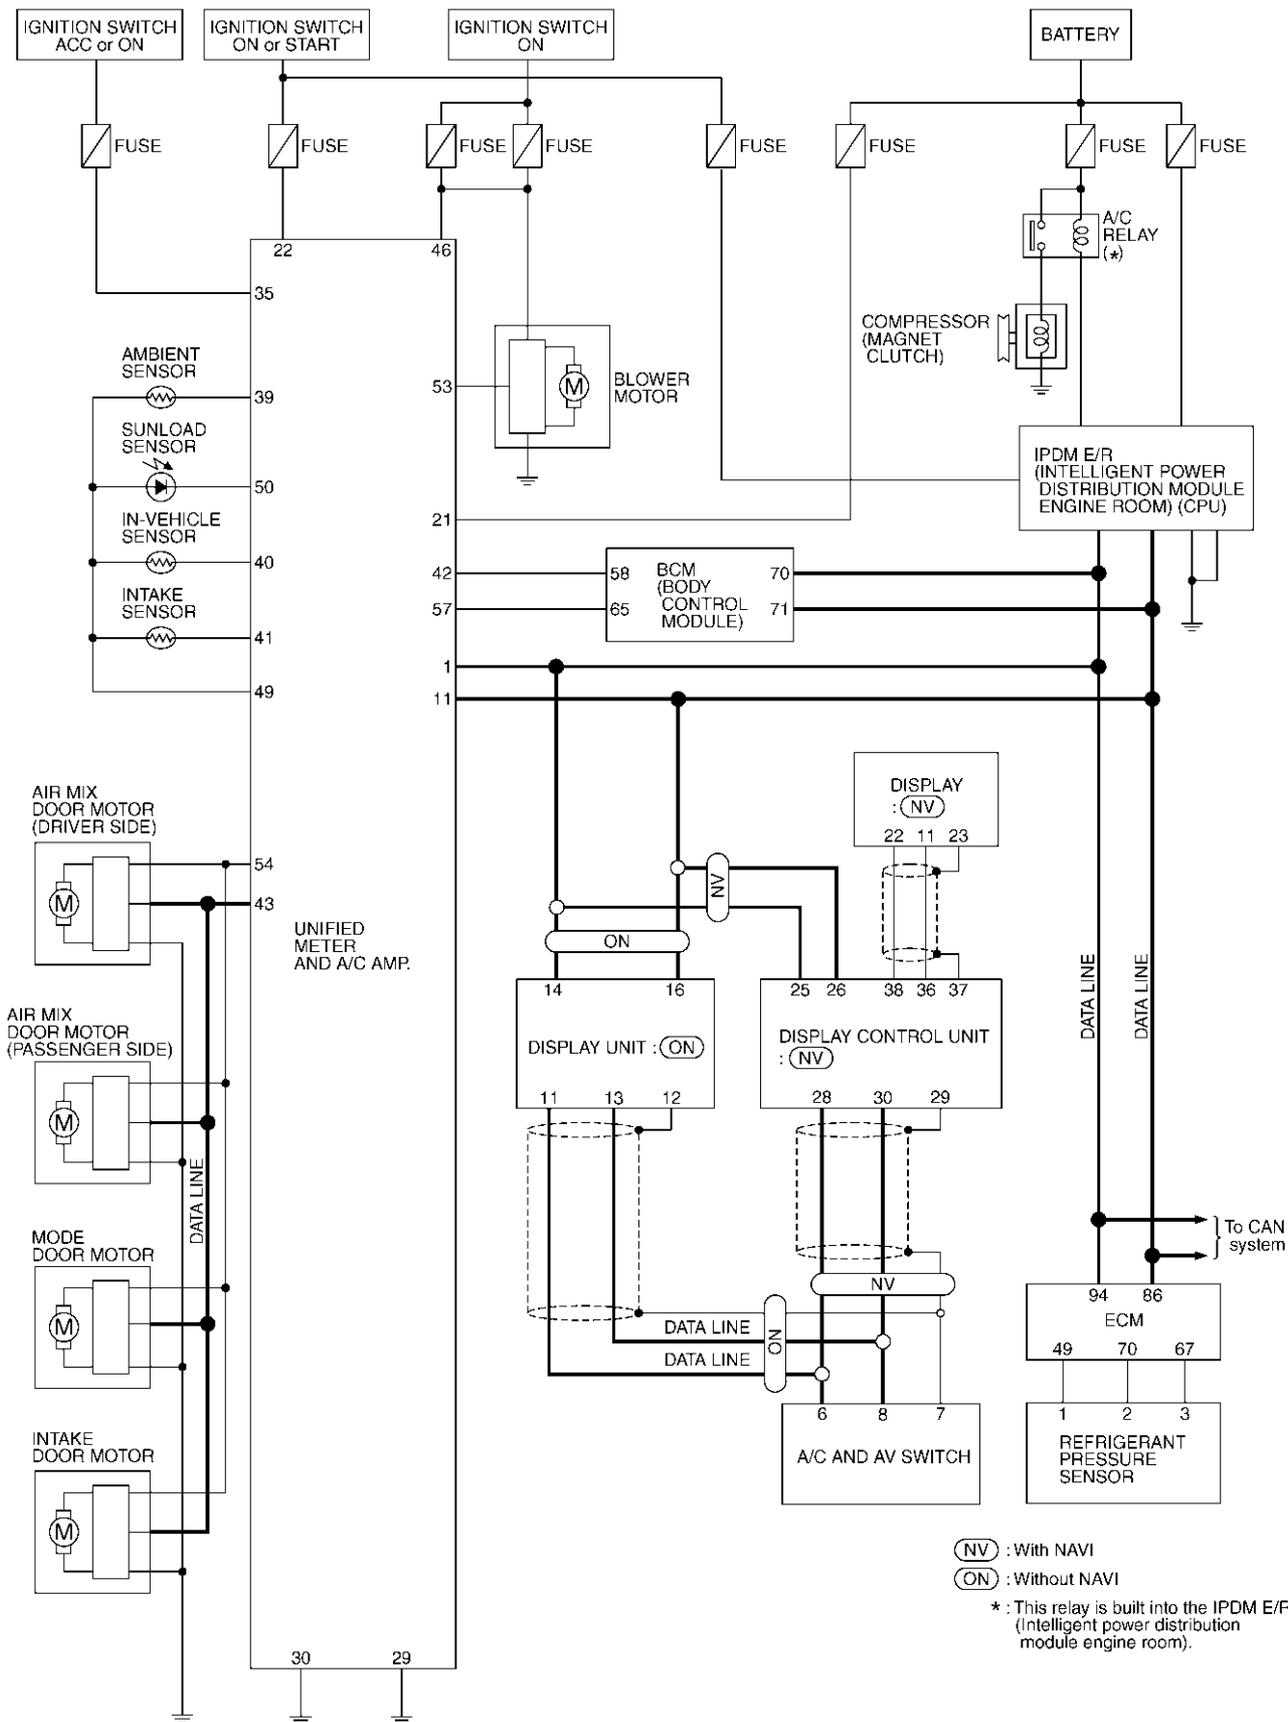


TJWA0048E

TROUBLE DIAGNOSIS

Wiring Diagram —A/C—


AJS000Z1

ATC-A/C-01

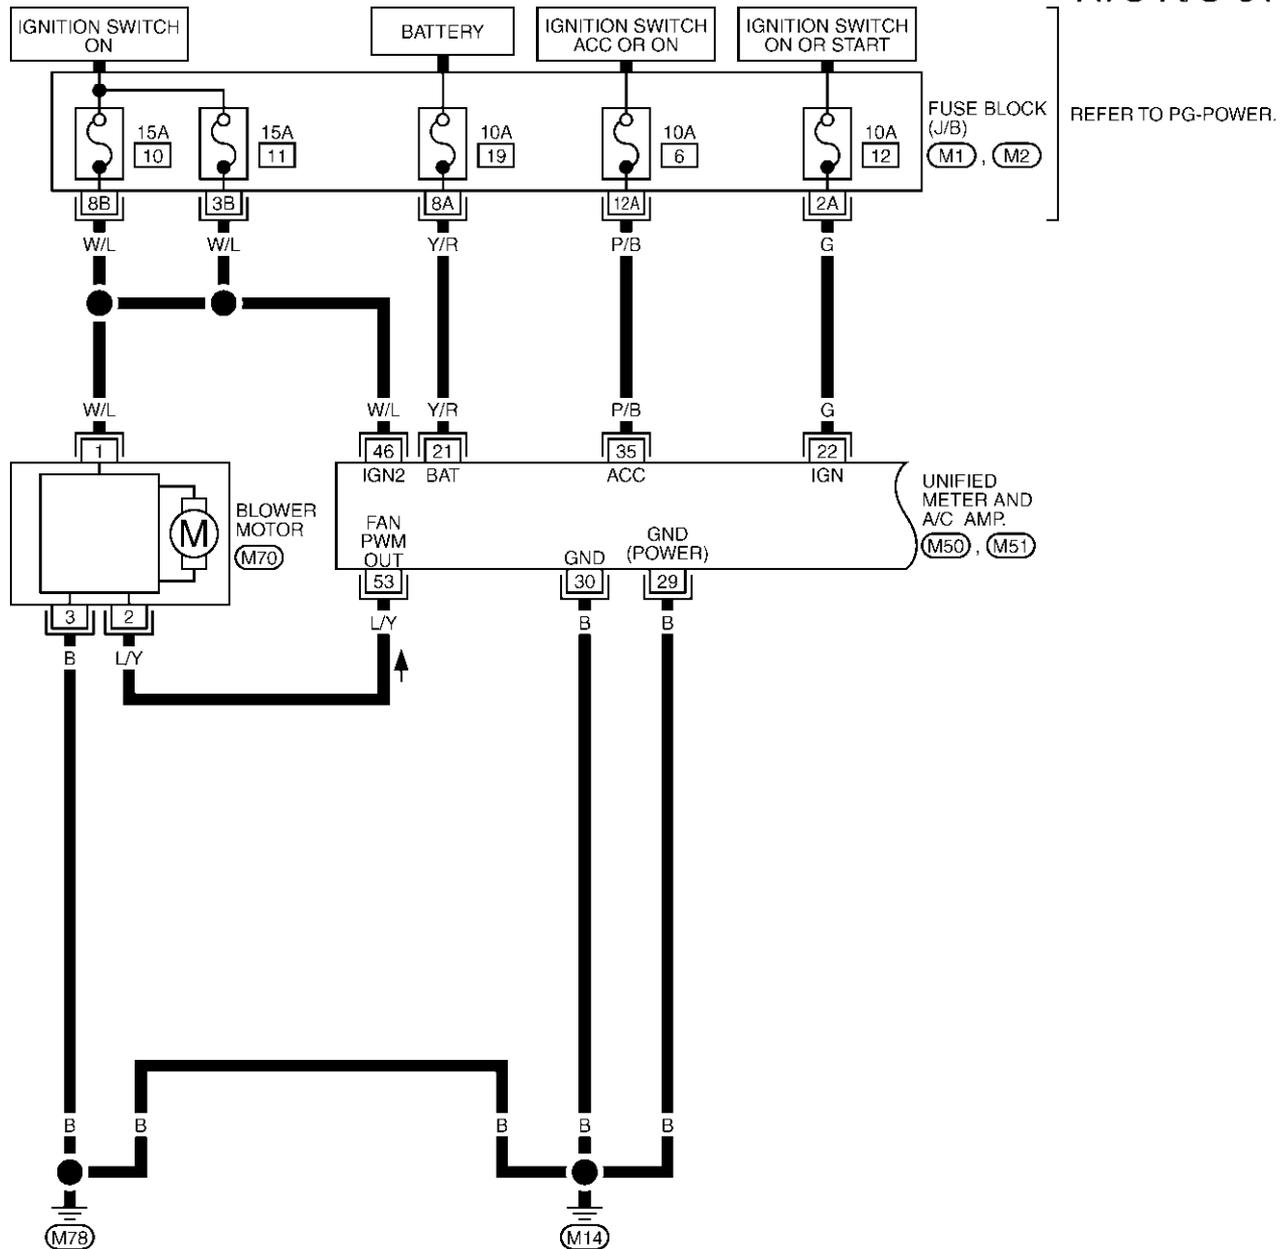

A
B
C
D
E
F
G
H
I
J
K
L
M

 ATC




REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-
 JUNCTION BOX (J/B)

TJWA0049E


TROUBLE DIAGNOSIS

ATC-A/C-03

A
B
C
D
E
F
G
H
I
K
L
M

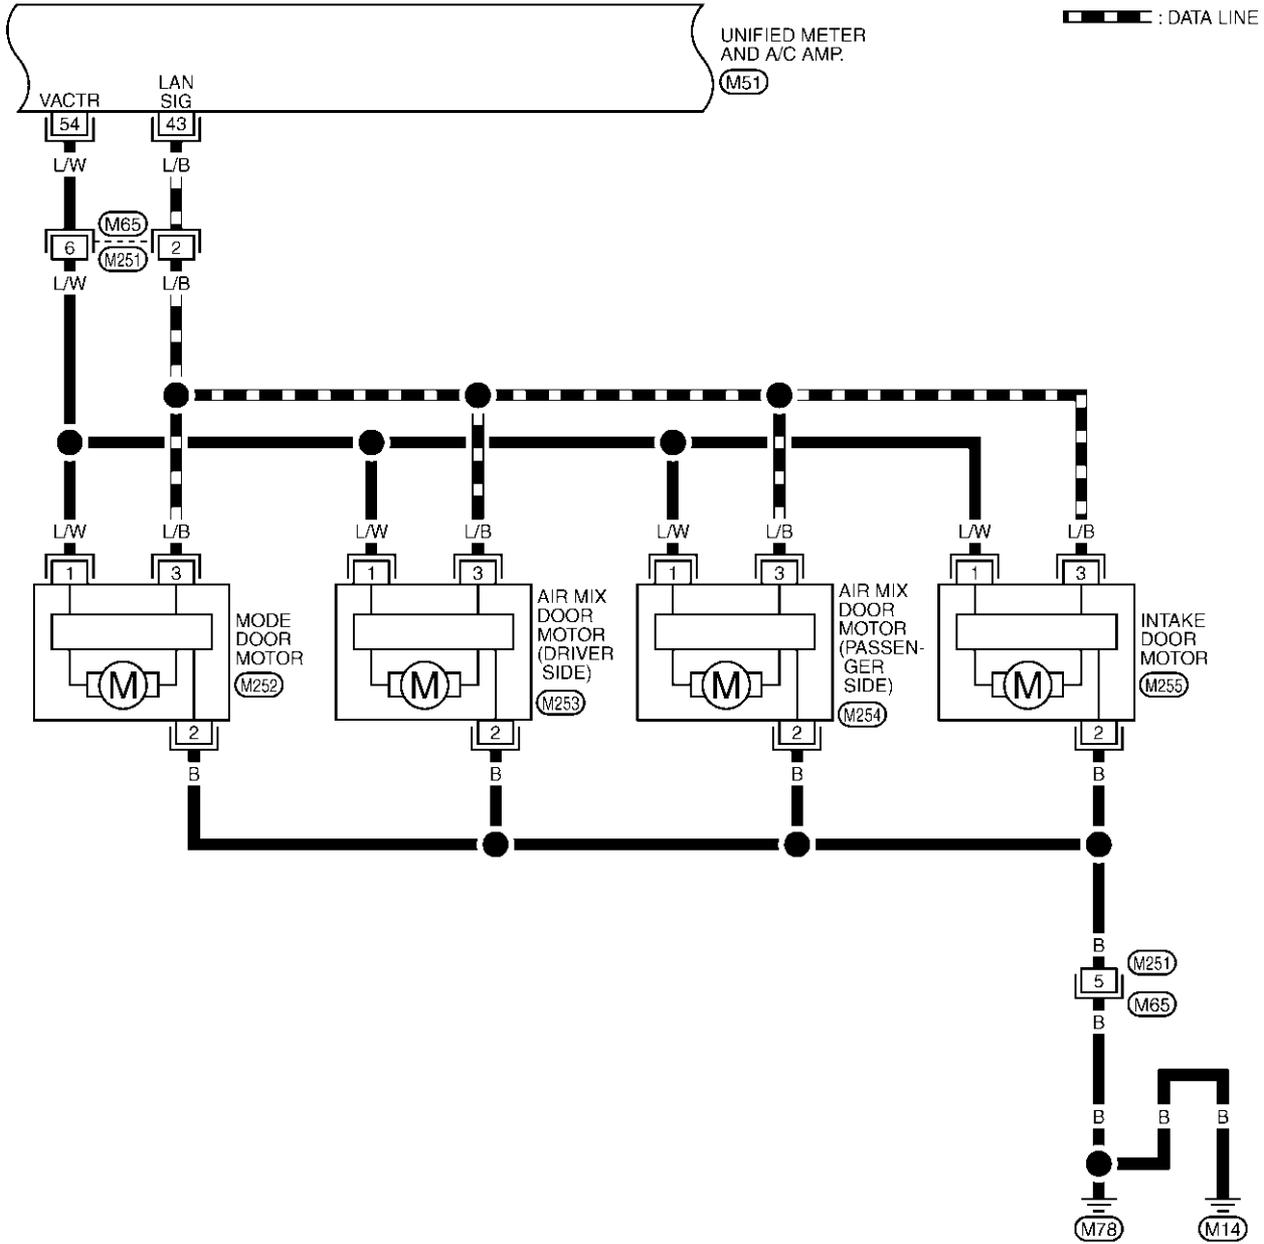

ATC

 




*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TJWA0051E



TROUBLE DIAGNOSIS

ATC-A/C-04

  ▬ : DATA LINE

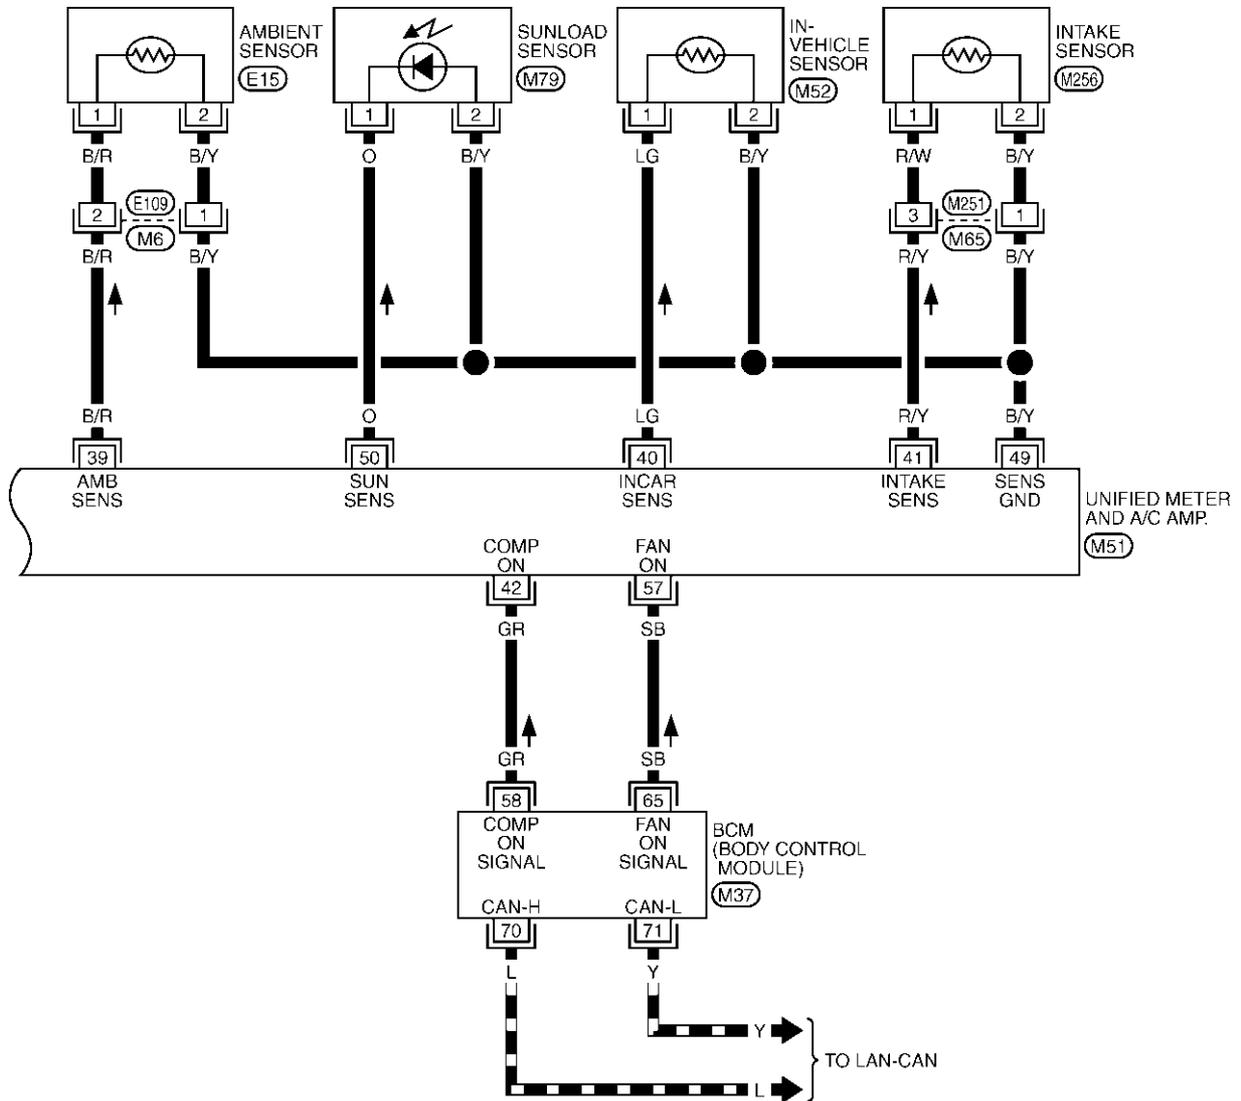

  REFER TO THE FOLLOWING.
 (M37) -ELECTRICAL UNITS



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.





TJWA0052E

TROUBLE DIAGNOSIS

ATC-A/C-05

— : DATA LINE

   REFER TO PG-POWER.

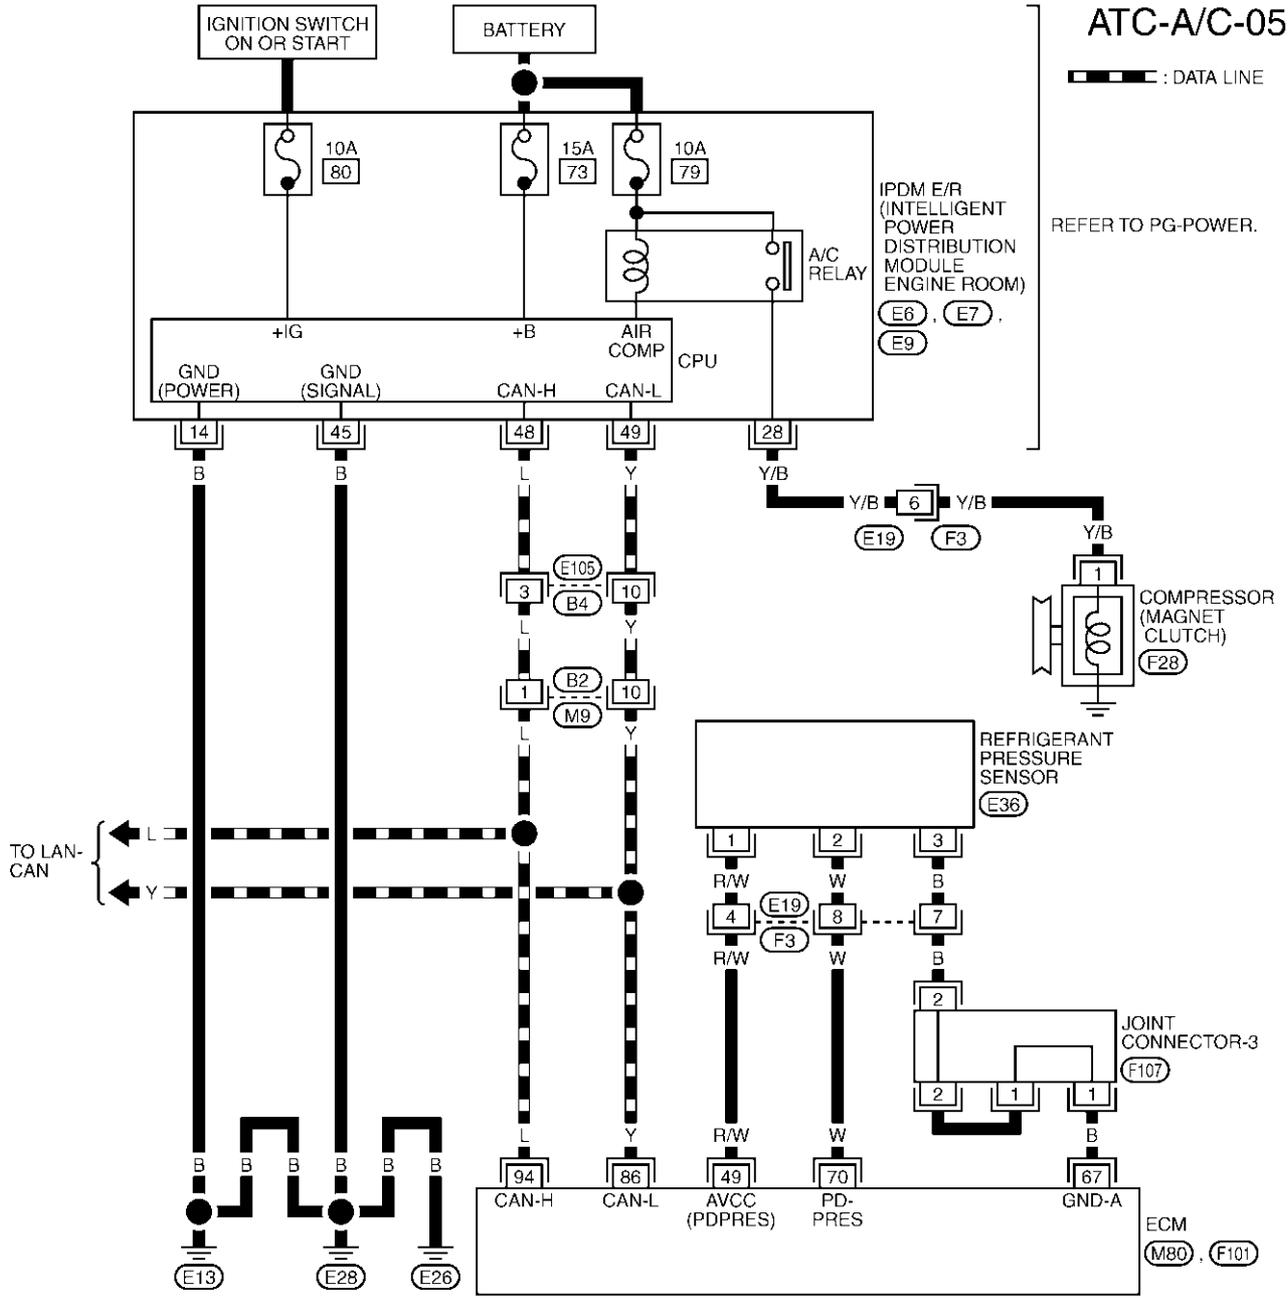

REFER TO THE FOLLOWING.
 (M80), (F101) -ELECTRICAL
 UNITS


TJWA0053E

TROUBLE DIAGNOSIS


Auto Amp. Terminals and Reference Value

AJS0010X

Measure voltage between each terminal and ground by following Terminals and Reference Value for unified meter and A/C amp.

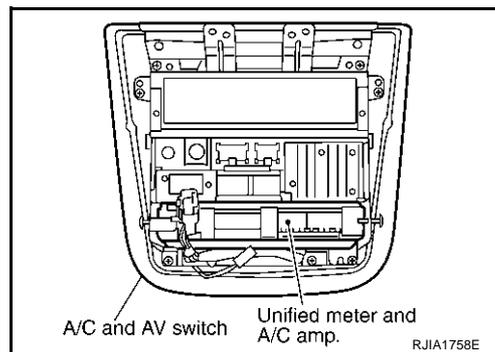


PIN CONNECTOR TERMINAL LAYOUT

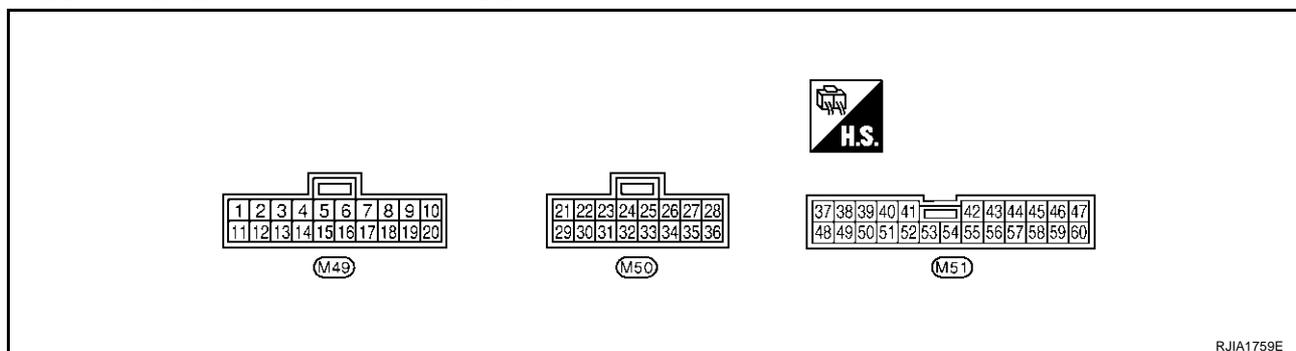

TERMINALS AND REFERENCE VALUE FOR UNIFIED METER AND A/C AMP.

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V)
1	L	CAN H	-	-	-
11	Y	CAN L	-	-	-
21	Y/R	Power supply for BAT	OFF	-	Battery voltage
22	G	Power supply for IGN	ON	-	Battery voltage
29	B	Ground (Power)	ON	-	Approx. 0
30	B	Ground	ON	-	Approx. 0
35	P/B	Power supply for ACC	ACC	-	Battery voltage
39	B/R	Ambient sensor	-	-	-
40	LG	In-vehicle sensor	-	-	-
41	R/Y	Intake sensor	-	-	-
42	GR	Compressor ON signal	ON	A/C switch: ON	Approx. 0
				A/C switch: OFF	Approx. 5
43	L/B	A/C LAN signal	ON	-	<p>HAK0652D</p>
46	W/L	Power supply for IGN2	ON	-	Battery voltage
49	B/Y	Sensor ground	ON	-	Approx. 0
50	O	Sunload sensor	-	-	-

TROUBLE DIAGNOSIS

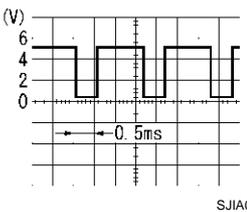Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V)
53	L/Y	Blower motor control signal	ACC or ON	Blower speed: 1 st step	
54	L/W	Power supply for each door motor	ON	-	Battery voltage
57	SB	Blower motor ON signal	ACC or ON	A/C switch: ON (Blower motor operates)	Approx. 0
				A/C switch: OFF	Approx. 5

A
B
C
D
E
F
G
H
I
K
L
M

ATC


TROUBLE DIAGNOSIS

AJS000Z3

Self-diagnosis Function

DESCRIPTION

The self-diagnostic system diagnoses sensors, door motors, blower motor, etc. by system line. Refer to applicable sections (items) for details. Shifting from usual control to the self-diagnostic system is accomplished by starting the engine (turning the ignition switch ON) and pressing "OFF" switch for at least 5 seconds. The "OFF" switch must be pressed within 10 seconds after starting the engine (ignition switch is turned ON). This system will be canceled by either pressing AUTO switch or turning the ignition switch OFF. Shifting from one step to another is accomplished by means of turning temperature dial (driver side), as required. Additionally shifting from STEP-5 to AUXILIARY MECHANISM is accomplished by means of turning  (fan) dial clockwise.

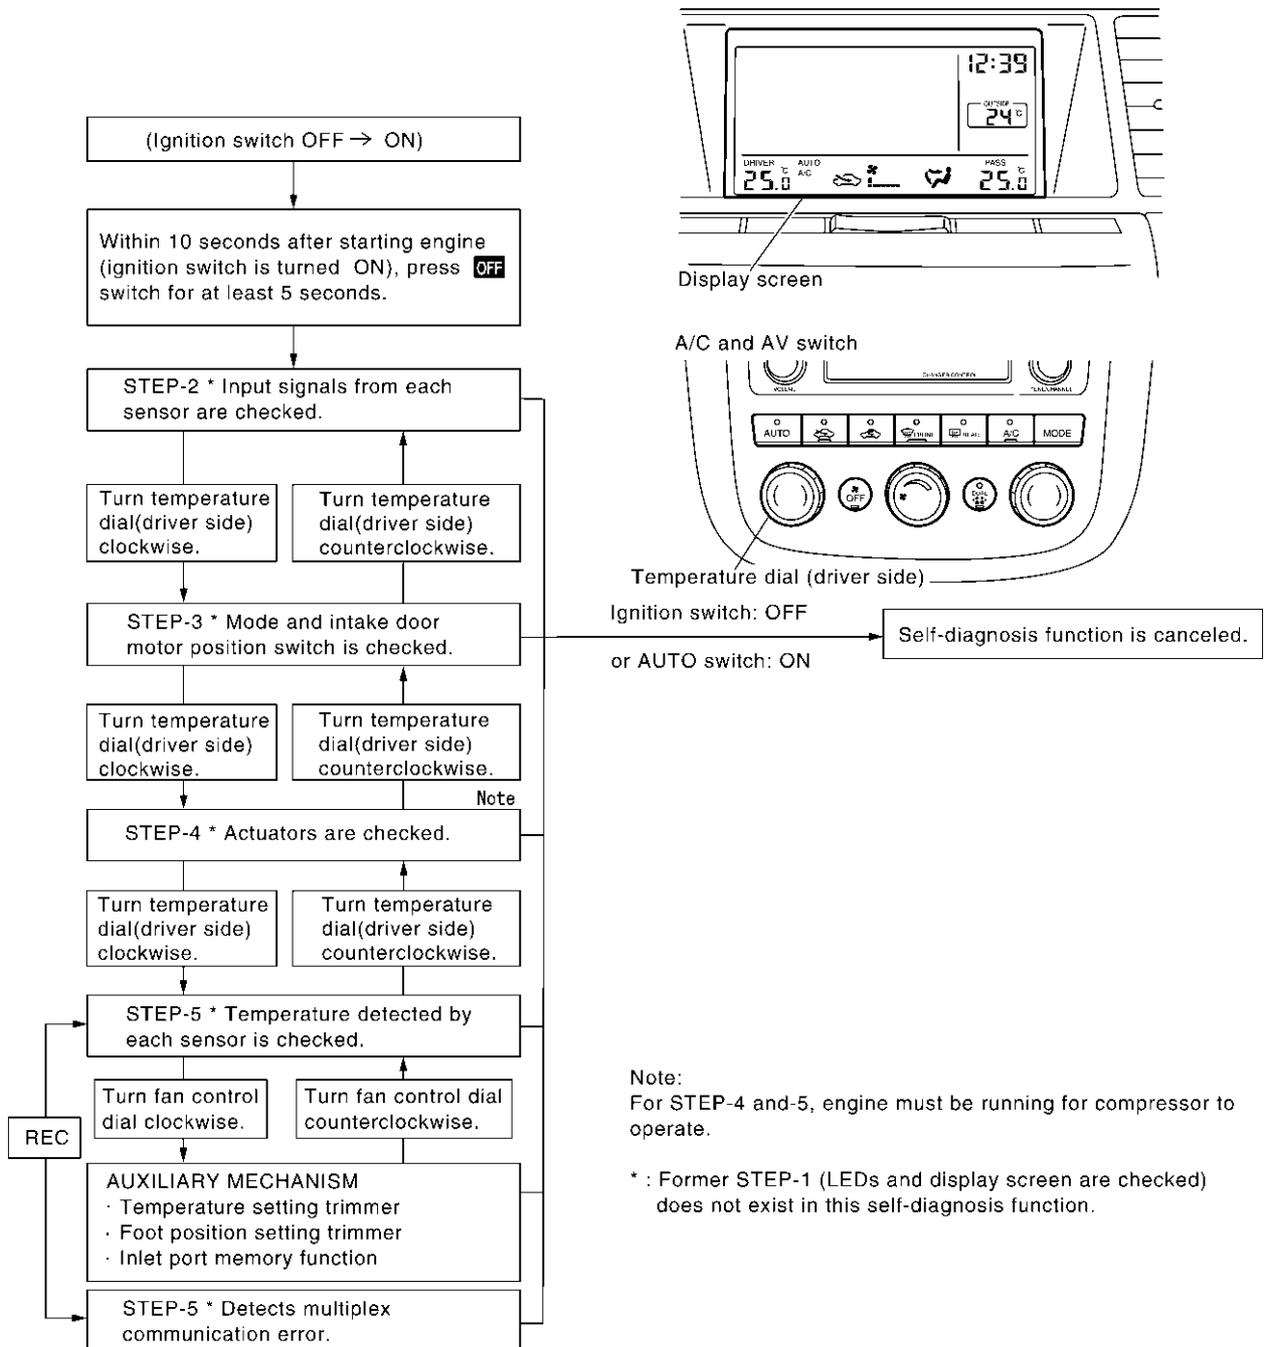

RJIA1760E

TROUBLE DIAGNOSIS

FUNCTION CONFIRMATION PROCEDURE

1. SET IN SELF-DIAGNOSTIC MODE

1. Turn ignition switch ON.
2. Set in self-diagnostic mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press OFF switch for at least 5 seconds.

CAUTION:


- If battery voltage drops below 12V during diagnosis STEP-3, actuator speed becomes slower and as a result, the system may generate an error even when operation is usual. To avoid this, start engine before performing this diagnosis.
- Former STEP-1 (LEDs and display screen are checked) does not exist in this self-diagnosis function.

>> GO TO 2.

2. STEP-2: SENSOR CIRCUITS ARE CHECKED FOR OPEN OR SHORT CIRCUIT

Does code No. 20 appear on the display?

- YES >> GO TO 3.
NO >> GO TO 13.

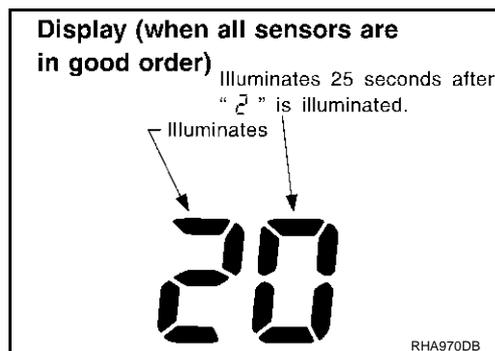

3. CHECK TO ADVANCE SELF-DIAGNOSIS STEP-3

Turn temperature dial (driver side) clockwise.

Advance to self-diagnosis STEP-3?

- YES >> GO TO 4.
NO >> Malfunctioning temperature dial.
>> Replace A/C and AV switch.

4. CHECK TO RETURN SELF-DIAGNOSIS STEP-2

Turn temperature dial (driver side) counterclockwise.

Return to self-diagnosis STEP-2?


- YES >> GO TO 5.
NO >> 1. Malfunctioning temperature dial.
2. Replace A/C and AV switch.

5. STEP-3: MODE DOOR AND INTAKE DOOR POSITIONS ARE CHECKED

Turn temperature dial (driver side) clockwise.

Does code No. 30 appear on the display?

- YES >> GO TO 6.
NO >> GO TO 14.

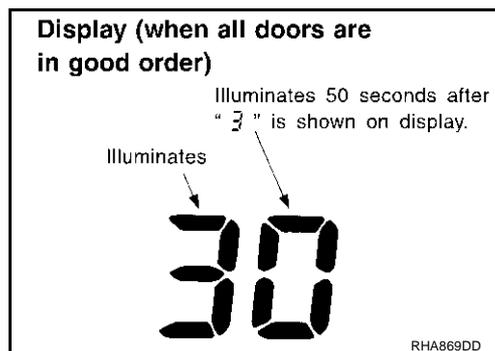


TROUBLE DIAGNOSIS

6. STEP-4: OPERATION OF EACH ACTUATOR IS CHECKED

1. Turn temperature dial (driver side) clockwise.
2. Press DEF switch. Code No. of each actuator test is indicated on the display.

>> GO TO 7.

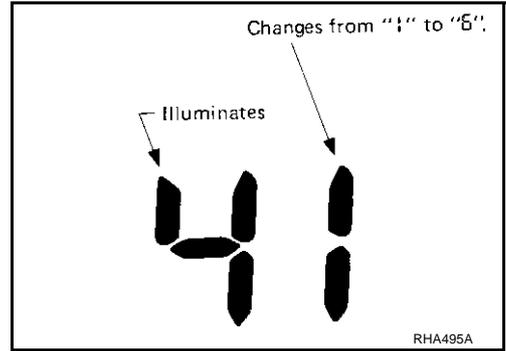

7. CHECK ACTUATORS

Refer to the following chart and confirm discharge air flow, air temperature, blower motor voltage and compressor operation.

Discharge air flow			
Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	-	-
	60%	40%	-
	-	75%(100%)	25% (-)
	-	60%	40%
	-	-	100%

(): Manually control RJIA1761E

	41	42	43	44	45	46
Mode door position	VENT	B/L 1	B/L 2	FOOT*1	D/F	DEF
Intake door position	REC	REC	20%FRE	FRE	FRE	FRE
Air mix door position	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT
Blower fan duty ratio	37%	91%	65%	65%	65%	91%
Compressor	ON	ON	OFF	OFF	ON	ON

Checks must be made visually, by listening to any noise, or by touching air outlets with your hand, etc. for improper operation.

*1: FOOT position during automatic control. Refer to [ATC-75, "AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER"](#) .

OK or NG

OK >> GO TO 8.

- NG >>
- Air outlet does not change.
Go to Mode Door Motor Circuit. Refer to [ATC-84, "Mode Door Motor Circuit"](#) .
 - Intake door does not change.
Go to Intake Door Motor Circuit. Refer to [ATC-90, "Intake Door Motor Circuit"](#) .
 - Blower motor operation is malfunctioning.
Go to Blower Motor Circuit. Refer to [ATC-93, "Blower Motor Circuit"](#) .
 - Magnet clutch does not engage.
Go to Magnet Clutch Circuit. Refer to [ATC-98, "Magnet Clutch Circuit"](#) .
 - Discharge air temperature does not change.
Go to Air Mix Door Motor Circuit. Refer to [ATC-87, "Air Mix Door Motor Circuit"](#) .

TROUBLE DIAGNOSIS

8. STEP-5: TEMPERATURE OF EACH SENSOR IS CHECKED

1. Turn temperature dial (driver side) clockwise.
2. Code No. 51 appears on the display.

>> GO TO 9.

9. CHECK AMBIENT SENSOR

Press  (DEF) switch one time. Temperature detected by ambient sensor is indicated on the display.


NOTE:

If temperature shown on display greatly differs from actual temperature, check sensor circuit first, then inspect sensor.

OK or NG

OK >> GO TO 10.

NG >> Go to Ambient Sensor Circuit. Refer to [ATC-115, "Ambient Sensor Circuit"](#).

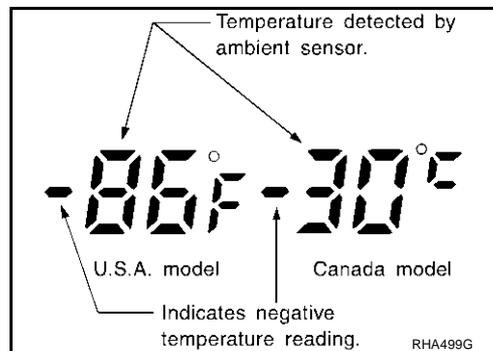

10. CHECK IN-VEHICLE SENSOR

Press  (DEF) switch a second time. Temperature detected by in-vehicle sensor is indicated on the display.


NOTE:

If temperature shown on display greatly differs from actual temperature, check sensor circuit first, then inspect sensor.

OK or NG

OK >> GO TO 11.

NG >> Go to In-vehicle Sensor Circuit. Refer to [ATC-118, "In-vehicle Sensor Circuit"](#).

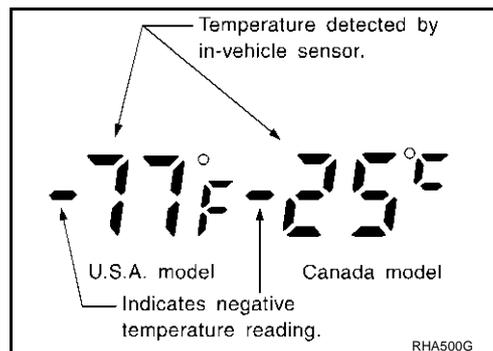

11. CHECK INTAKE SENSOR

Press  (DEF) switch a third time. Temperature detected by intake sensor is indicated on the display.


NOTE:

If temperature shown on display greatly differs from actual temperature, check sensor circuit first, then inspect sensor.

OK or NG

OK >> GO TO 12.

NG >> Go to Intake Sensor Circuit. Refer to [ATC-124, "Intake Sensor Circuit"](#).

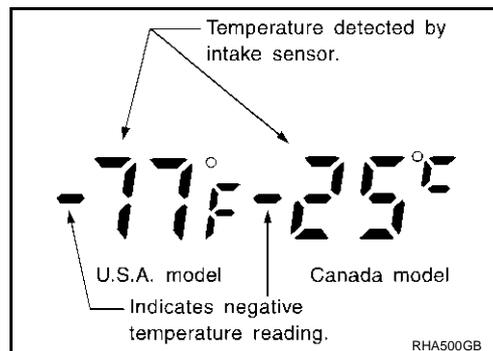

TROUBLE DIAGNOSIS

12. CHECK CAN COMMUNICATION ERROR

1. Press  (REC) switch.
2. CAN communication error between unified meter and A/C amp. and DISPLAY UNIT or DISPLAY CONTROL UNIT is detected.

OK or NG

- OK >> 1. Turn ignition switch OFF or AUTO switch ON.
2. INSPECTION END
- NG >> Go to CAN communication. Refer to [DI-34, "CAN Communication System Description"](#) .
- Unified meter and A/C amp. - DISPLAY UNIT
 - Unified meter and A/C amp. - DISPLAY CONTROL UNIT

Display	CAN communication error
	In good order
	Display unit or Display control unit ↳ Unified meter and A/C amp.
	Unified meter and A/C amp. ↳ Display unit or Display control unit

RJIA1762E

13. CHECK MALFUNCTIONING SENSOR

Refer to the following chart for malfunctioning code No.

(If two or more sensors malfunction, corresponding code Nos. blink respectively twice.)

*1: Perform self-diagnosis STEP-2 under sunshine.

When performing indoors, aim a light (more than 60W) at sunload sensor, otherwise Code No. 25 will indicate despite that sunload sensor is functioning properly.

Code No.	Malfunctioning sensor (Including circuits)	Reference page
21 / -21	Ambient sensor	*2
22 / -22	In-vehicle sensor	*3
24 / -24	Intake sensor	*4
25 / -25	Sunload sensor *1	*5
26 / -26	Air mix door motor PBR (Driver side)	*6
27 / -27	Air mix door motor PBR (Passenger side)	

*2: [ATC-115, "DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR"](#) .

*3: [ATC-119, "DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR"](#) .


*4: [ATC-124, "DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR"](#) .


*5: [ATC-121, "DIAGNOSTIC PROCEDURE FOR SUNLOAD SENSOR"](#) .

*6: [ATC-81, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

Display (when sensor malfunctions)

Blinks (indicating a shortcircuit)

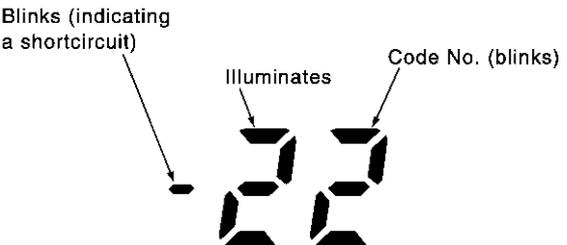

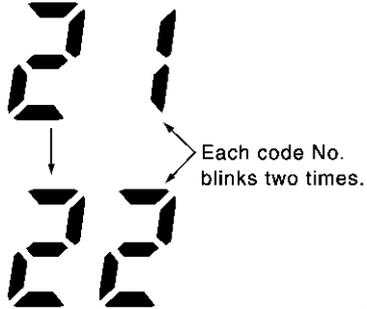

Each code No. blinks two times.

RJIA0493E

>> INSPECTION END

TROUBLE DIAGNOSIS

14. CHECK MALFUNCTIONING DOOR MOTOR POSITION SWITCH

Mode or (and) intake door motor PBR (s) is (are) malfunctioning.

Code No. *1 *2	Mode or intake door position	Reference page
31	VENT	*4
32	B/L 1	
33	B/L 2	
34	FOOT*3	
35	D/F	
36	DEF	
37	FRE	*5
38	20% FRE	
39	REC	

(If two or more mode or intake doors are out of order, corresponding code numbers blink respectively twice.)

*1: If mode door motor harness connector is disconnected, the following display pattern will appear.

31→32→33→34→35→36→Return to 31


*2: If intake door motor harness connector is disconnected, the following display pattern will appear.

37→38→39→Return to 37

*3: FOOT position during automatic control. Refer to [ATC-75, "AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER"](#) .

*4:[ATC-84, "Mode Door Motor Circuit"](#) .

*5:[ATC-90, "Intake Door Motor Circuit"](#) .

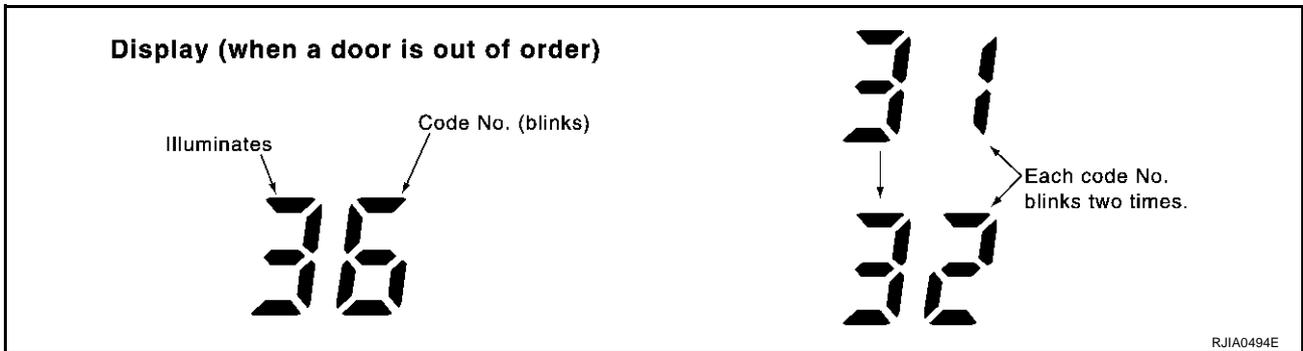

>> INSPECTION END

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER


The trimmer compensates for differences in range of $\pm 3^{\circ}\text{C}$ ($\pm 6^{\circ}\text{F}$) between temperature setting (displayed digitally) and temperature felt by driver.

Operating procedures for this trimmer are as follows:

- Begin Self-diagnosis STEP-5 mode. Refer to [ATC-68, "Self-diagnosis Function"](#).
- Turn fan control dial clockwise to set system in auxiliary mode.
- Display shows 61 in auxiliary mechanism. It takes approximately 3 seconds.
- Turn temperature dial (driver side) as desired. Temperature will change at a rate of 0.5°C (1.0°F) each time a dial is turned.

CAUTION:

A decimal point is not indicated when the display shows " $^{\circ}\text{C}$ ".

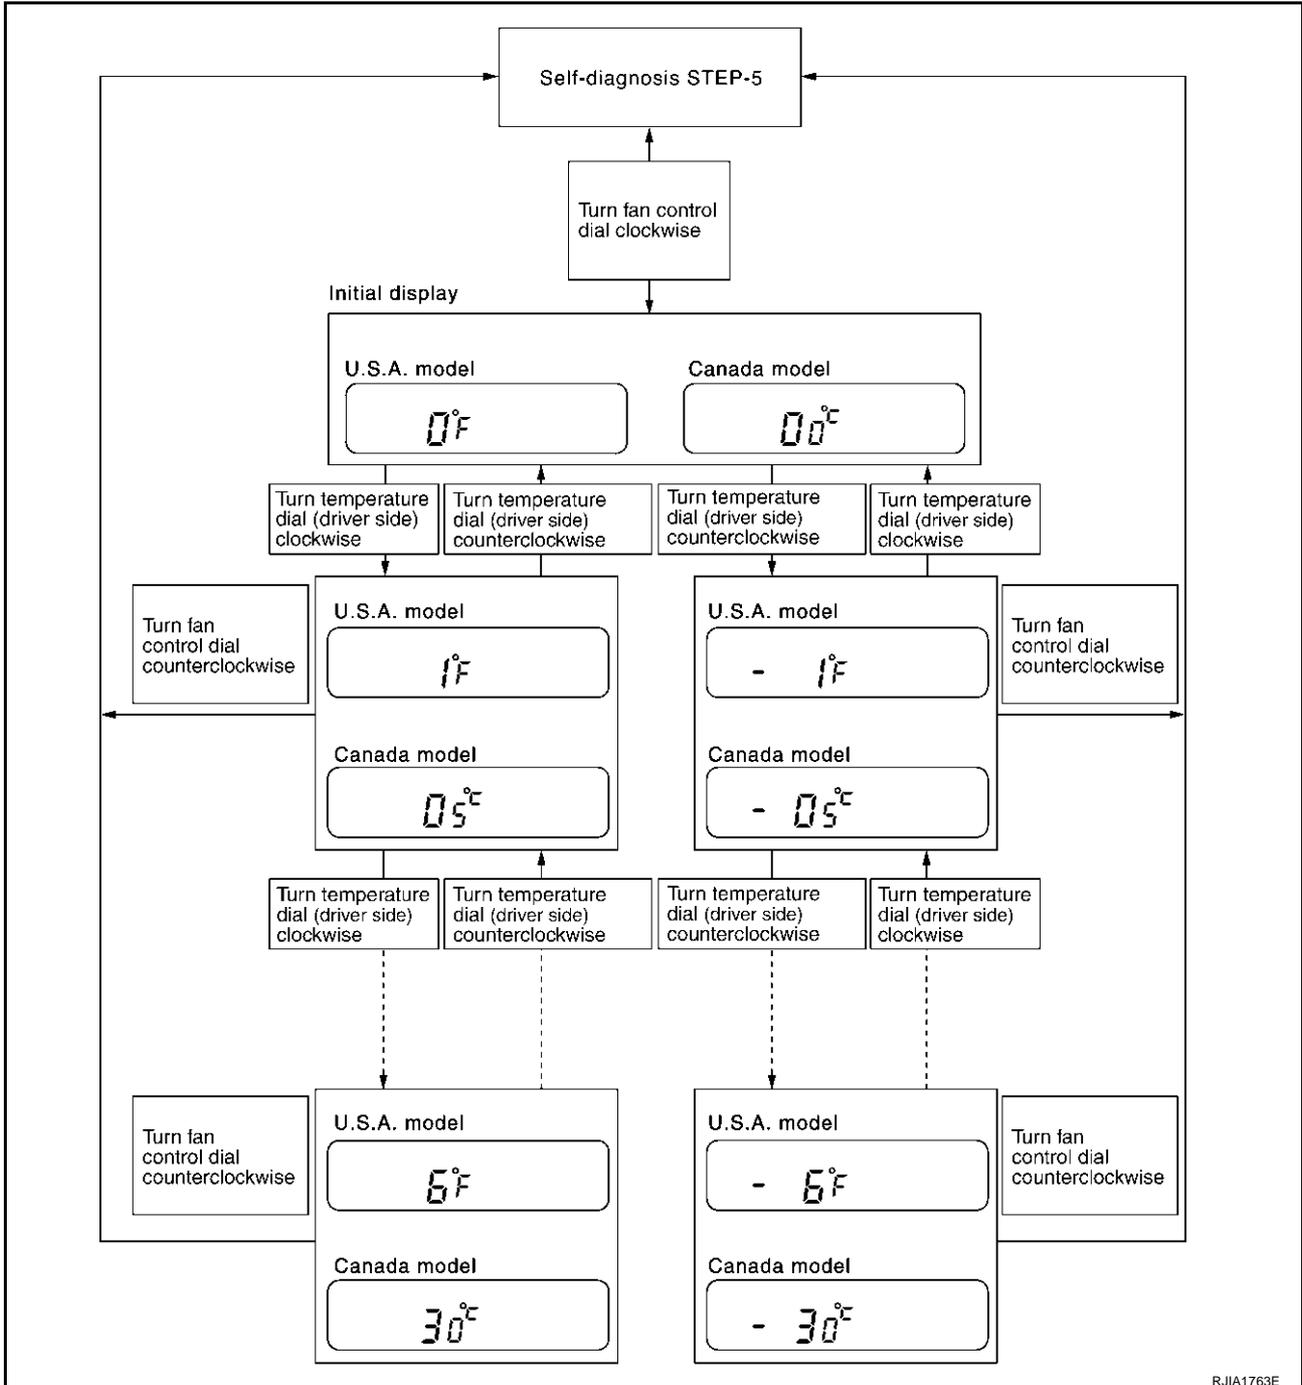

When battery cable is disconnected, trimmer operation is canceled. Temperature set becomes that of initial condition, i.e. 0°C (0°F).

TROUBLE DIAGNOSIS

AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER

Wind distribution ratio in FOOT mode can be set.

Operating procedures for this trimmer are as follows:

- Begin Self-diagnosis STEP-5 mode. Refer to [ATC-68, "Self-diagnosis Function"](#) .
- Turn fan control dial clockwise to set system in auxiliary mode.
- Display shows 61 in auxiliary mechanism. It takes approximately 3 seconds.
- Press the mode switch as desired.

Display	Discharge air flow			
	Automatically controls the mode door		Manually controls the mode door	
	FOOT	DEF	FOOT	DEF
	75%	25%	100%	—
	75%	25%	75%	25%
	100%	—	75%	25%
	100%	—	100%	—

RJIA1764E

AUXILIARY MECHANISM: INLET PORT MEMORY FUNCTION

When ignition key is turned from OFF to ON, inlet port can be set to AUTO or manual.

Operating procedures for this trimmer are as follows:

- Begin Self-diagnosis STEP-5 mode. Refer to [ATC-68, "Self-diagnosis Function"](#) .
- Turn fan control dial clockwise to set system in auxiliary mode.
- Display shows 61 in auxiliary mechanism. It takes approximately 3 seconds.
- Press the recirculation (REC) and fresh (FRE) switch as desired.

Switch	LED status of REC/FRE switch	Setting status	Setting changeover method
REC	ON	Manual REC status is memorized. (Initial setting)	REC SW: ON
	OFF	AUTO control	
FRE	ON	Manual FRE status is memorized.	FRE SW: ON
	OFF	AUTO control (Initial setting)	

TROUBLE DIAGNOSIS

AJS000Z4

Operational Check

The purpose of the operational check is to confirm that the system operates properly.


Conditions : Engine running and at usual operating temperature

CHECKING MEMORY FUNCTION

1. Set the temperature to 32°C (90°F).
2. Press OFF switch.
3. Turn ignition switch OFF.
4. Turn ignition switch ON.
5. Press the AUTO switch.
6. Confirm that the set temperature remains at previous temperature.
7. Press OFF switch.

If NG, go to trouble diagnosis procedure for [ATC-114, "Memory Function"](#).

If OK, continue with next check.

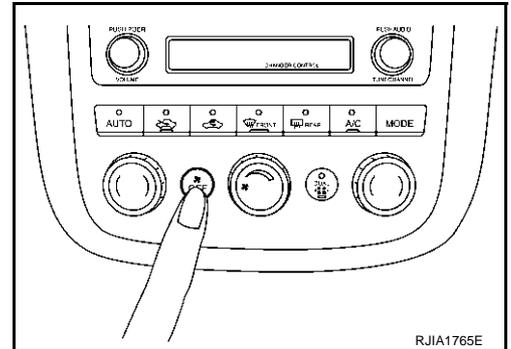


RJIA1765E

CHECKING BLOWER

1. Turn fan control dial clockwise. Blower should operate on low speed. The fan symbol should have one blade lit.
2. Turn fan control dial clockwise again, and continue checking blower speed and fan symbol until all speeds are checked.
3. Leave blower on MAX speed.

If NG, go to trouble diagnosis procedure for [ATC-95, "DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR"](#).


If OK, continue with next check.

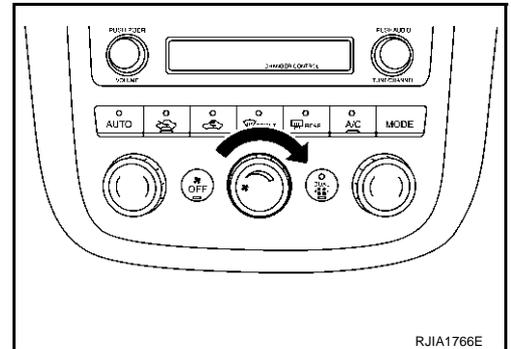

RJIA1766E

CHECKING DISCHARGE AIR

1. Press MODE switch and DEF switch.
2. Each position indicator should change shape.

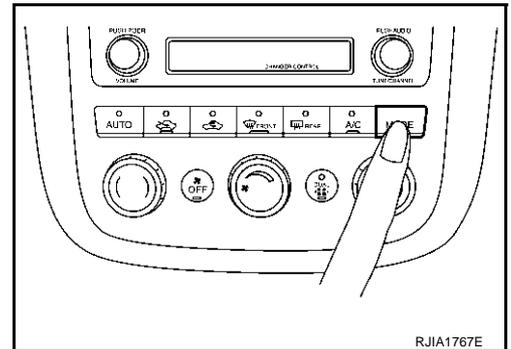

RJIA1767E

3. Confirm that discharge air comes out according to the air distribution table. Refer to [ATC-31, "Discharge Air Flow"](#).

If NG, go to trouble diagnosis procedure for [ATC-84, "Mode Door Motor Circuit"](#).

If OK, continue with next check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at FRESH when the DEF or D/F is selected.

Discharge air flow			
Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	—	—
	60%	40%	—
	—	75%(100%)	25% (—)
	—	60%	40%
	—	—	100%

(): Manually control

RJIA1761E

TROUBLE DIAGNOSIS

CHECKING RECIRCULATION


1. Press recirculation (REC) switch one time. Recirculation indicator should illuminate.
2. Press fresh (FRE) switch one time. Fresh indicator should illuminate.
3. Listen for intake door position change (you should hear blower sound change slightly).

If NG, go to trouble diagnosis procedure for [ATC-90, "Intake Door Motor Circuit"](#) .

If OK, continue with next check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at FRESH when the DEF or D/F is selected.

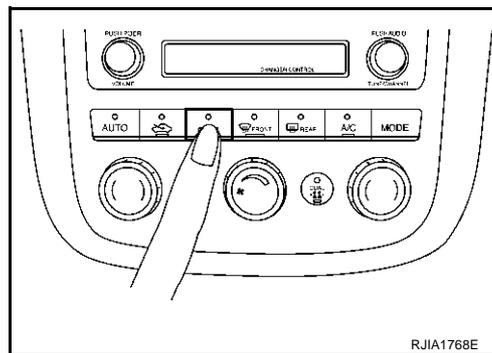


CHECKING TEMPERATURE DECREASE

1. Turn temperature dial (driver side) counterclockwise until 18°C (60°F) is displayed.
2. Check for cold air at discharge air outlets.

If NG, go to trouble diagnosis procedure for [ATC-104, "Insufficient Cooling"](#) .

If OK, continue with next check.

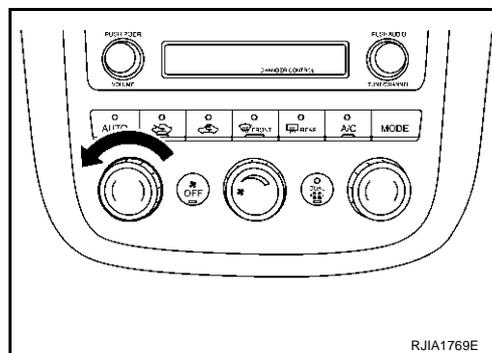


CHECKING TEMPERATURE INCREASE

1. Turn temperature dial (driver side) clockwise until 32°C (90°F) is displayed.
2. Check for hot air at discharge air outlets.

If NG, go to trouble diagnosis procedure for [ATC-111, "Insufficient Heating"](#) .

If OK, continue with next check.

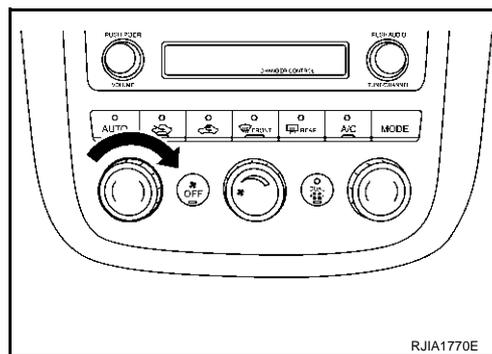


CHECK A/C SWITCH

1. Press AUTO switch and A/C switch.
2. A/C switch indicator will turn ON.
 - Confirm that the compressor clutch engages (sound or visual inspection).

If NG, go to trouble diagnosis procedure for [ATC-98, "Magnet Clutch Circuit"](#) .

If OK, continue with next check.

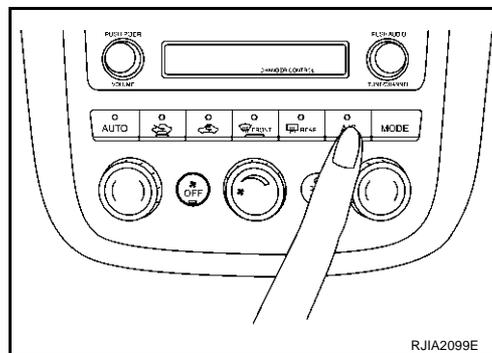


TROUBLE DIAGNOSIS

CHECKING AUTO MODE

1. Press AUTO switch and A/C switch.
2. Display should indicate AUTO.
 - Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle, and set temperatures.)

If NG, go to trouble diagnosis procedure for [ATC-78, "Power Supply and Ground Circuit for Auto Amp."](#) , then if necessary, trouble diagnosis procedure for [ATC-98, "Magnet Clutch Circuit"](#) .

If all operational checks are OK (symptom cannot be duplicated), go to malfunction Simulation Tests in [GI-26, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) and perform tests as outlined to simulate driving conditions environment. If symptom appears, refer to [ATC-57, "SYMPTOM TABLE"](#) and perform applicable trouble diagnosis procedures.

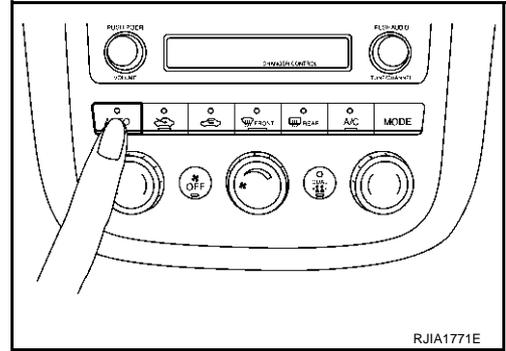


Power Supply and Ground Circuit for Auto Amp.

AJS000Z5

SYMPTOM: A/C system does not come on.

INSPECTION FLOW

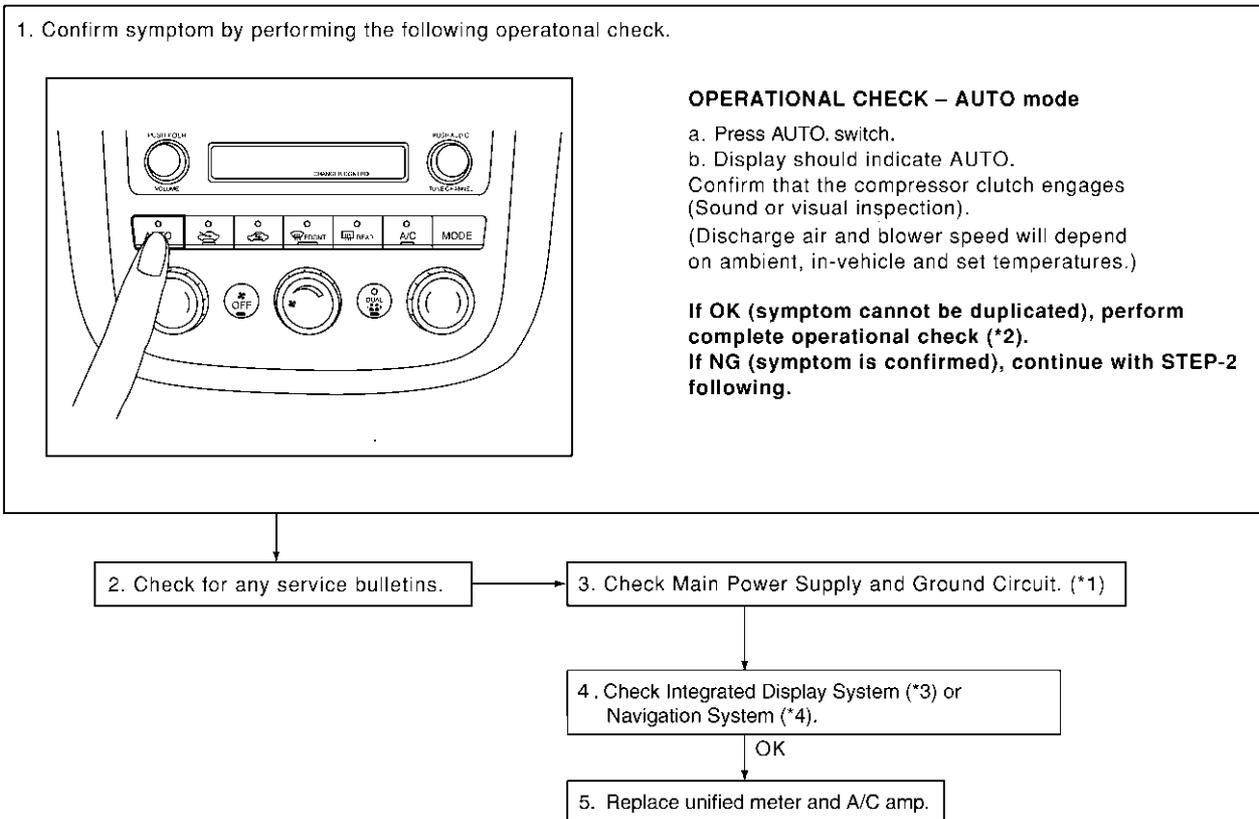

RJIA1772E

*1 [ATC-78, "Power Supply and Ground Circuit for Auto Amp."](#)

*2 [ATC-76, "Operational Check"](#).

*3 [AV-103, "Trouble Diagnosis Chart by Symptom"](#).

*4 [AV-219, "A/C Does Not Work"](#).

TROUBLE DIAGNOSIS


COMPONENT DESCRIPTION

Unified meter and A/C amp. (Automatic Amplifier)

The unified meter and A/C amp. has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, blower motor and compressor are then controlled.


The unified meter and A/C amp. is unitized with control mechanisms. When the various switches and temperature dials are operated, data is input to the unified meter and A/C amp. from the DISPLAY UNIT/DISPLAY CONTROL UNIT using CAN communication.

Self-diagnostic functions are also built into unified meter and A/C amp. to provide quick check of malfunctions in the auto air conditioner system.

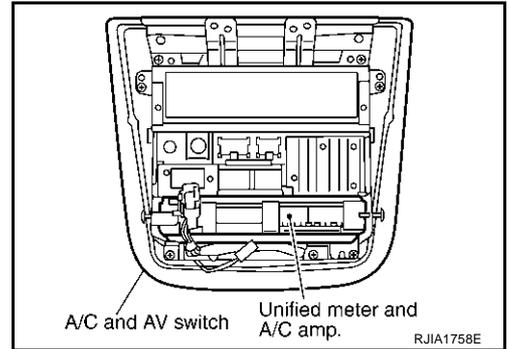


Potential Temperature Control (PTC)

The PTC is built into the A/C and AV switch. It can be set at an interval of 0.5°C (1.0°F) in the 18°C (60°F) to 32°C (90°F) temperature range by turning temperature dial. The set temperature is displayed.

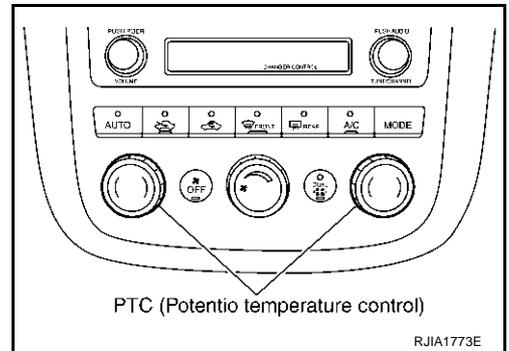

DIAGNOSTIC PROCEDURE FOR A/C SYSTEM

SYMPTOM: A/C system does not come on.

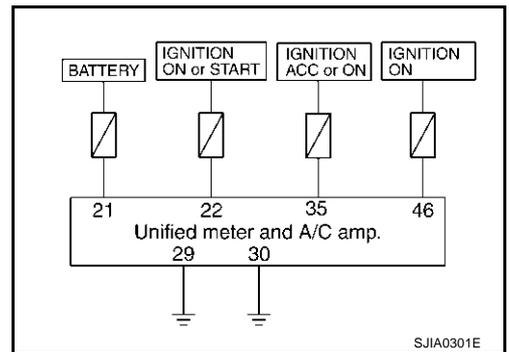


A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

1. CHECK POWER SUPPLY CIRCUIT FOR UNIFIED METER AND A/C AMP.

1. Disconnect unified meter and A/C amp. connector.
2. Check voltage between unified meter and A/C amp. harness connector M50 terminals 21 (Y/R), 22 (G) and 35 (P/B), unified meter and A/C amp. harness connector M51 terminal 46 (W/L) and ground.

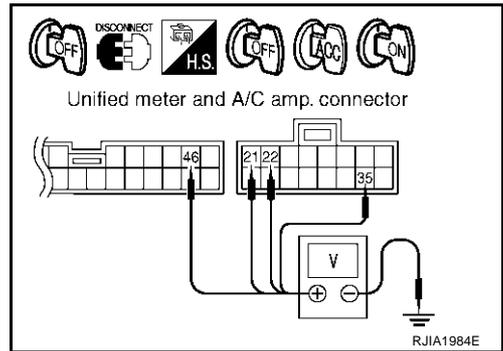

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Auto amp. connector	Terminal No. (wire color)	Ground	Battery voltage	Battery voltage	Battery voltage
M50	21 (Y/R)		Approx. 0V	Approx. 0V	Battery voltage
M50	22 (G)		Approx. 0V	Battery voltage	Battery voltage
M50	35 (P/B)		Approx. 0V	Approx. 0V	Battery voltage
M51	46 (W/L)				Battery voltage

OK or NG

OK >> GO TO 2.

NG >> Check 10A and 15A fuses [Nos. 6, 10, 11, 12 and 19, located in the fuse block (J/B)]. Refer to [PG-87, "FUSE BLOCK - JUNCTION BOX \(J/B\)"](#).

- If fuses are OK, check harness for open circuit. Repair or replace as necessary.
- If fuses are NG, replace fuse and check harness for short circuit. Repair or replace as necessary.

2. CHECK GROUND CIRCUIT FOR UNIFIED METER AND A/C AMP.


1. Turn ignition switch OFF.
2. Check continuity between unified meter and A/C amp. harness connector M50 terminal 29 (B), 30 (B) and ground.

29, 30 – Ground : Continuity should exist.

OK or NG

OK >> Replace unified meter and A/C amp.

NG >> Repair harness or connector.

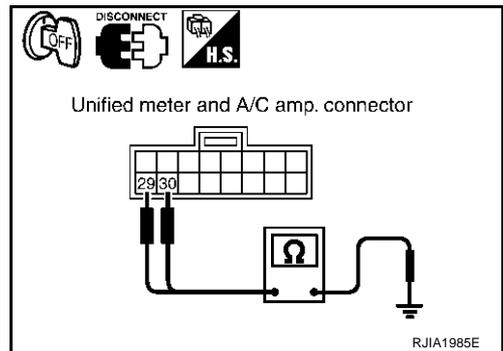


TROUBLE DIAGNOSIS

AJS00026

LAN System Circuit

SYMPTOM: Mode door motor, intake door motor and/or air mix door motor(s) does not operate normally.

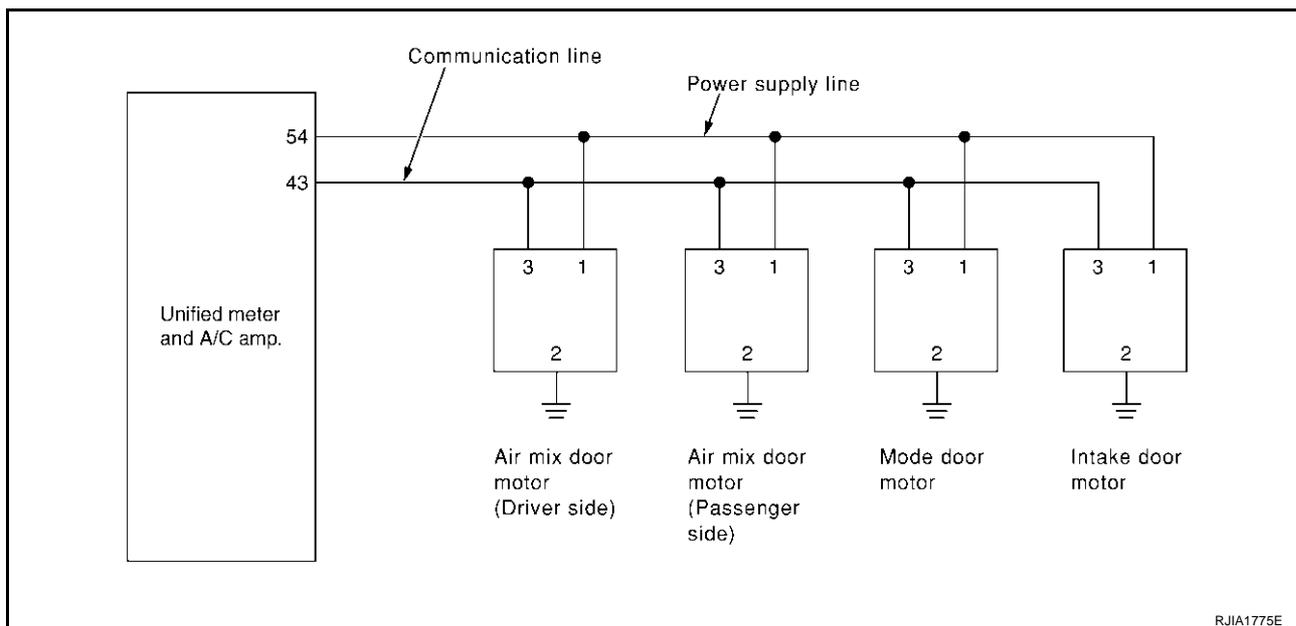

RJIA1775E

DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT


1. CHECK POWER SUPPLY FOR UNIFIED METER AND A/C AMP.

1. Turn ignition switch ON.
2. Check voltage between unified meter and A/C amp. harness connector M51 terminal 54 (L/W) and ground.

54 – Ground : Battery voltage

OK or NG

- OK >> GO TO 2.
 NG >> Replace unified meter and A/C amp.

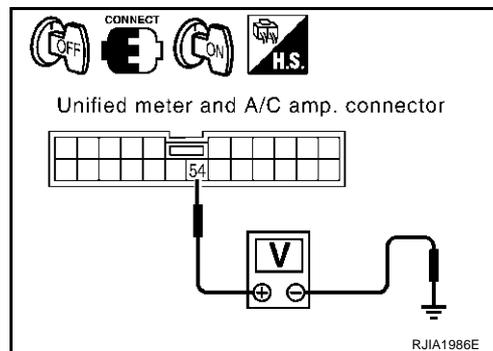


RJIA1986E

2. CHECK SIGNAL FOR UNIFIED METER AND A/C AMP.

Confirm A/C LAN signal between unified meter and A/C amp. harness connector M51 terminal 43 (L/B) and ground using an oscilloscope.

Terminals		(-)	Voltage
(+)	Terminal No. (wire color)		
Auto amp. connector			
M51	43 (L/B)	Ground	

HAK0652D

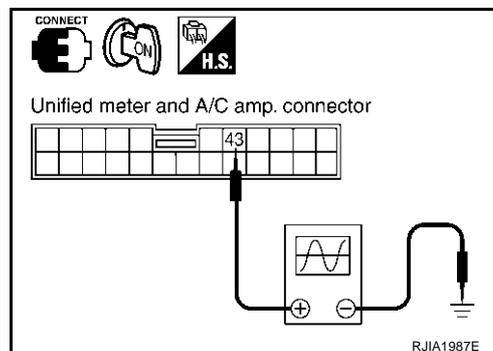

RJIA1987E

OK or NG

- OK >> GO TO 3.
 NG >> Replace unified meter and A/C amp.

TROUBLE DIAGNOSIS


3. CHECK POWER SUPPLY FOR MOTOR

Check voltage between mode door motor harness connector M252 terminal 1 (L/W), driver side air mix door motor harness connector M253 terminal 1 (L/W), passenger side air mix door motor harness connector M254 terminal 1 (L/W), intake door motor harness connector M255 terminal 1 (L/W) and ground.

1 – Ground : **Battery voltage**

OK or NG


- OK >> GO TO 4.
- NG >> Repair harness or connector.

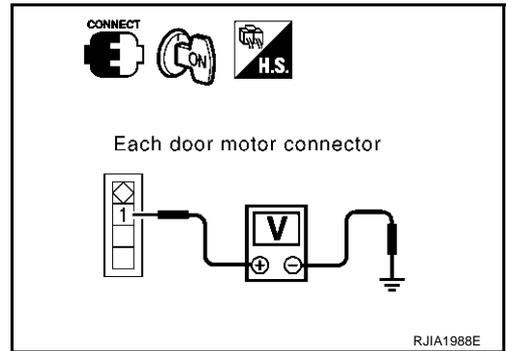

4. CHECK SIGNAL FOR MOTOR

Confirm A/C LAN signal between mode door motor harness connector M252 terminal 3 (L/B), driver side air mix door motor harness connector M253 terminal 3 (L/B), passenger side air mix door motor harness connector M254 terminal 3 (L/B), intake door motor harness connector M255 terminal 3 (L/B) and ground using an oscilloscope.

Door motor	Terminals		(-)	Voltage
	Con- nector	Terminal No. (wire color)		
Mode	M252	3 (L/B)	Ground	
Air mix (Driver side)	M253	3 (L/B)		
Air mix (Passen- ger side)	M254	3 (L/B)		
Intake	M255	3 (L/B)		

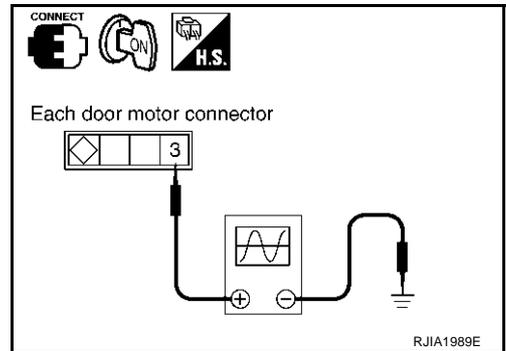

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.


5. CHECK MOTOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door motor connector.
3. Check continuity between mode door motor harness connector M252 terminal 2 (B), driver side air mix door motor harness connector M253 terminal 2 (B), passenger side air mix door motor harness connector M254 terminal 2 (B), intake door motor harness connector M255 terminal 2 (B) and ground.

2 – Ground : **Continuity should exist.**

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

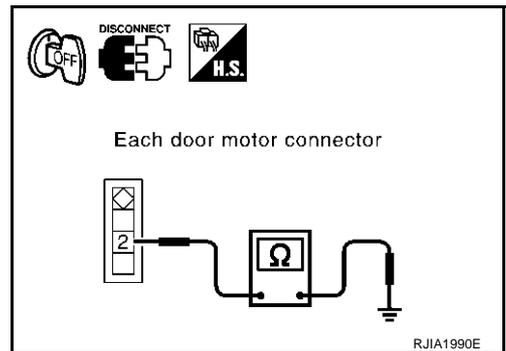

TROUBLE DIAGNOSIS

6. CHECK MOTOR OPERATION

Disconnect and reconnect the motor connector and confirm the motor operation.

OK or NG

- OK >> (Return to operate normally.)
- Poor contact in motor connector.
- NG >> (Does not operate normally.)
- GO TO 7.

7. CHECK MODE DOOR MOTOR OPERATION

1. Disconnect mode door motor and air mix door motor (driver side, passenger side) connector.
2. Reconnect mode door motor connector and confirm the mode door motor operation.

OK or NG

- OK >> (Mode door motor operates normally.)
- GO TO 8.
- NG >> (Mode door motor does not operate normally.)
- Repair mode door motor.

8. CHECK AIR MIX DOOR MOTOR OPERATION

1. Disconnect mode door motor connector.
2. Reconnect air mix door motor connector (driver side, passenger side) and confirm the air mix door motor operation.

OK or NG

- OK >> (Air mix door motor operates normally.)
- GO TO 9.
- NG >> (Air mix door motor does not operate normally.)
- GO TO 10.

9. CHECK INTAKE DOOR MOTOR OPERATION

1. Disconnect air mix door motor connector (driver side, passenger side).
2. Reconnect intake door motor connector and confirm the intake door motor operation.

OK or NG

- OK >> (Intake door motor operates normally.)
- Repair unified meter and A/C amp.
- NG >> (Intake door motor does not operate normally.)
- Repair intake door motor.

10. CHECK AIR MIX DOOR MOTOR OPERATION

1. Disconnect air mix door motor (driver side) connector.
2. Confirm the air mix door motor (passenger side) operation.

OK or NG

- OK >> (Air mix door motor operates normally.)
- Repair driver side air mix door motor.
- NG >> (Air mix door motor does not operate normally.)
- Repair passenger side air mix door motor.

TROUBLE DIAGNOSIS

AJS000Z7


Mode Door Motor Circuit

SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

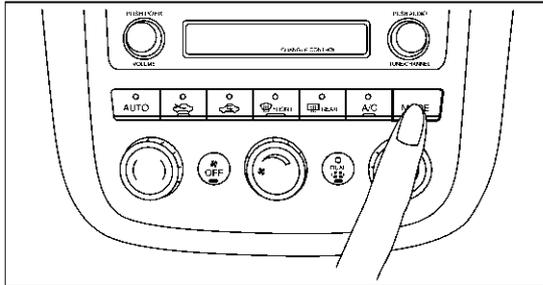

OPERATIONAL CHECK – Discharge air

- Press mode switch and DEF switch.
- Each position indicator should change shape.


Discharge air flow

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	–	–
	60%	40%	–
	–	75%(100%)	25%(–)
	–	60%	40%
	–	–	100%

c. Confirm that discharge air comes out according to the air distribution table at left.
Refer to "Discharge Air Flow" (*1).

NOTE:

- If OK (symptom cannot be duplicated), perform complete operational check (*2).
- If NG (symptom is confirmed), continue with STEP-2 following.
- Confirm that the compressor clutch is engaged (visual inspection) and intake door position is at FRESH when DEF or D/F is selected.

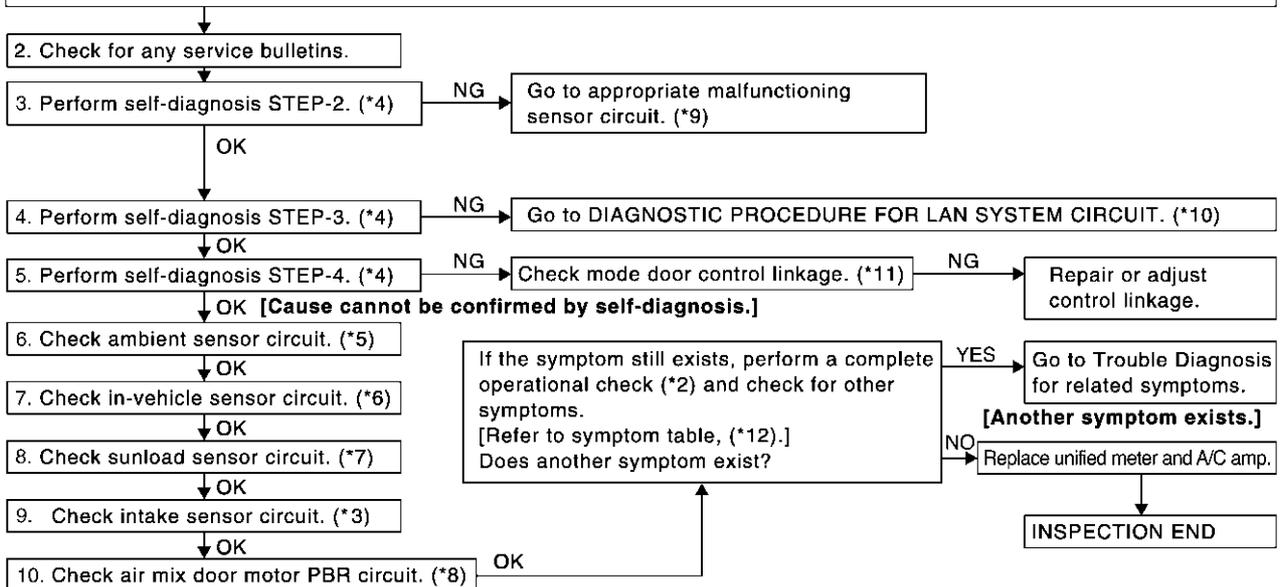

RJIA1776E

*1 [ATC-31, "Discharge Air Flow".](#)

*2 [ATC-76, "Operational Check".](#)

*3 [ATC-124, "Intake Sensor Circuit".](#)

*4 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE",](#) see No. 4 to 6.

*5 [ATC-115, "Ambient Sensor Circuit".](#)

*6 [ATC-118, "In-vehicle Sensor Circuit".](#)

*7 [ATC-121, "Sunload Sensor Circuit".](#)

*8 [ATC-87, "Air Mix Door Motor Circuit".](#)

*9 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE",](#) see No. 13.

*10 [ATC-81, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT".](#)

*11 [ATC-86, "COMPONENT DESCRIPTION".](#)

*12 [ATC-57, "SYMPTOM TABLE".](#)

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts


Mode door control system components are:

- Unified meter and A/C amp.
- Mode door motor (LCU)
- A/C LAN system (PBR built-in mode motor and air mix door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

System Operation


The unified meter and A/C amp. receives data from each of the sensors. The unified meter and A/C amp. sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the unified meter and A/C amp. and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the unified meter and A/C amp.

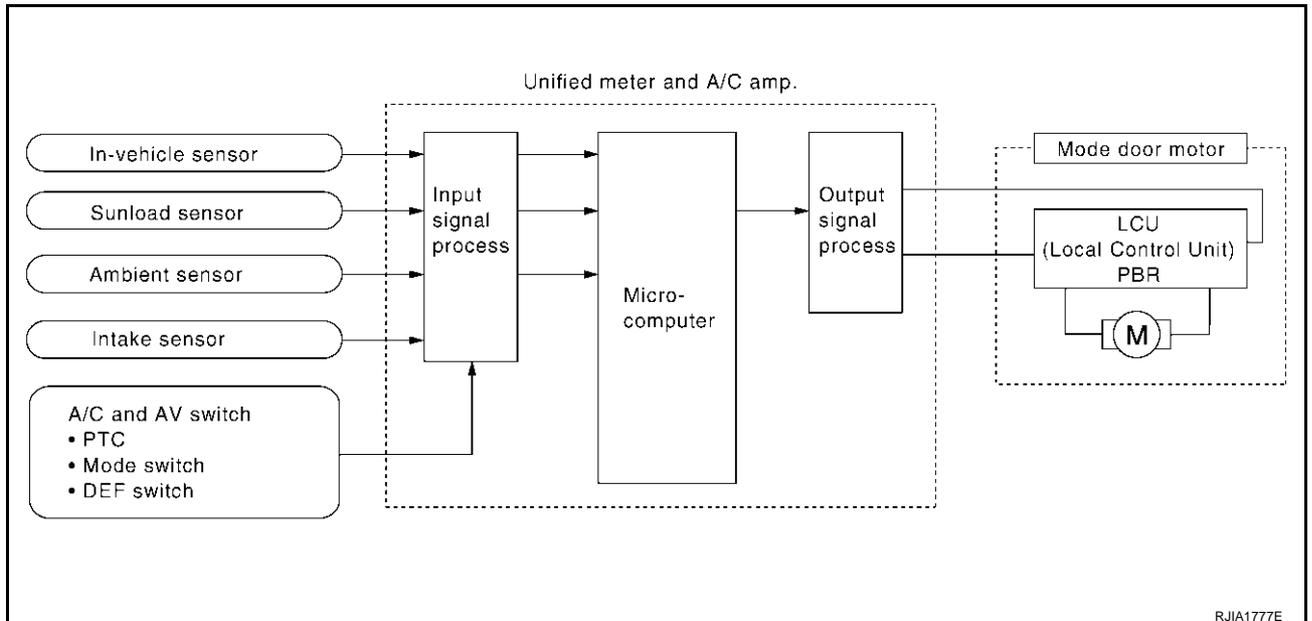

TROUBLE DIAGNOSIS


Mode Door Control Specification

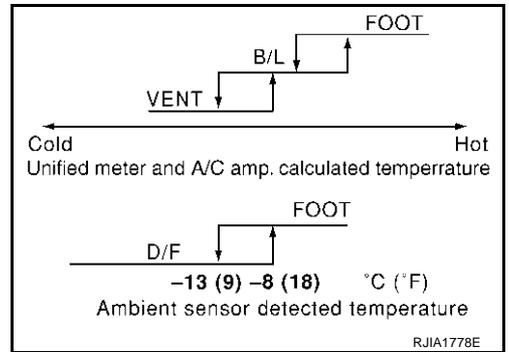

COMPONENT DESCRIPTION

Mode Door Motor

The mode door motor is attached to the heater & cooling unit. It rotates so that air is discharged from the outlet set by the unified meter and A/C amp. Motor rotation is conveyed to a link which activates the mode door.

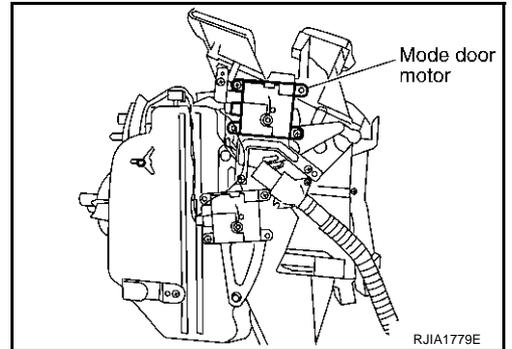

DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR

SYMPTOM: Mode door motor does not operate normally.

Perform diagnostic procedure for [ATC-81, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

TROUBLE DIAGNOSIS

AJS00028

Air Mix Door Motor Circuit

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

OPERATIONAL CHECK


Temperature increase

- Turn temperature dial (driver side) clockwise until 32°C (90°F) is displayed.
- Check for hot air at discharge air outlets.

Temperature decrease

- Turn temperature dial (driver side) counterclockwise until 18°C (60°F) is displayed.
- Check for cold air at discharge air outlets.

**If OK (symptom cannot be duplicated), perform complete operational check (*10).
If NG (symptom is confirmed), continue with STEP-2 following.**

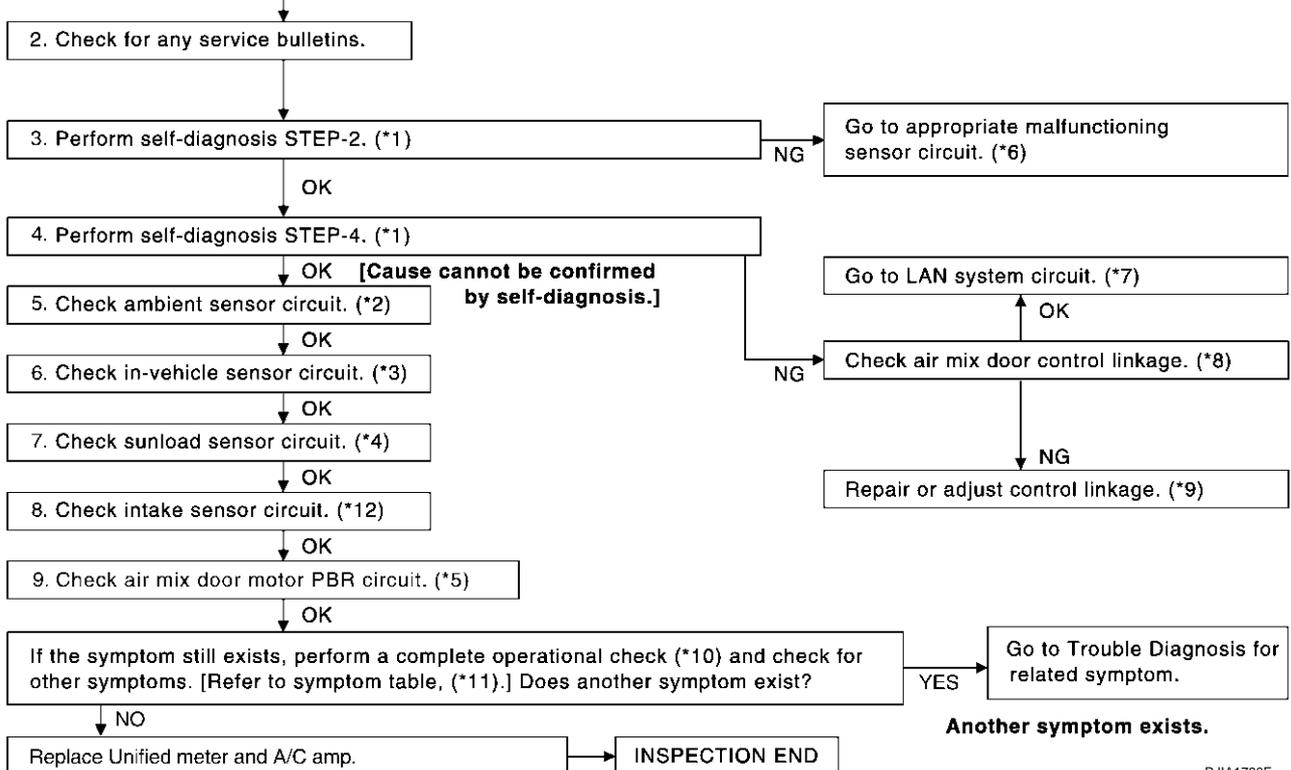

*1 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 4 to 6.

*2 [ATC-115, "Ambient Sensor Circuit"](#).

*3 [ATC-118, "In-vehicle Sensor Circuit"](#).

*4 [ATC-121, "Sunload Sensor Circuit"](#)

*5 [ATC-89, "Air Mix Door Motor PBR Circuit"](#).

*6 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 13.

*7 [ATC-81, "LAN System Circuit"](#).

*8 [ATC-143, "AIR MIX DOOR MOTOR"](#).

*9 [ATC-143, "AIR MIX DOOR MOTOR"](#).

*10 [ATC-76, "Operational Check"](#).

*11 [ATC-57, "SYMPTOM TABLE"](#).

*12 [ATC-124, "Intake Sensor Circuit"](#).

RJIA1780E

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts


Air mix door control system components are:

- Unified meter and A/C amp.
- Air mix door motor (LCU)
- A/C LAN system (PBR built-in mode motor and air mix door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor


System Operation

The unified meter and A/C amp. receives data from each of the sensors. The unified meter and A/C amp. sends air mix door, mode door and intake door motor opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the unified meter and A/C amp. and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the unified meter and A/C amp.

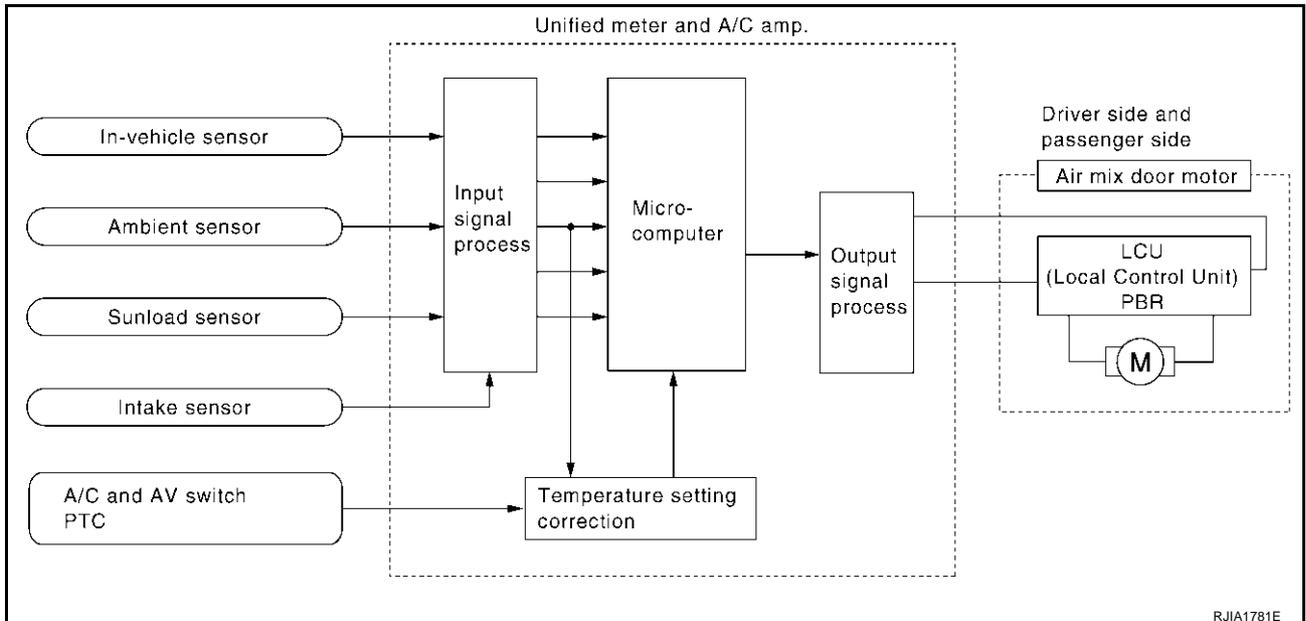

Air Mix Door Control Specification


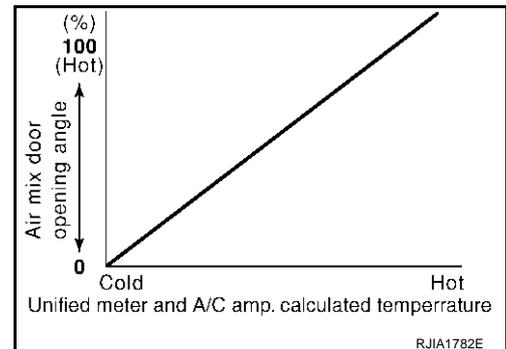


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Air Mix Door Motor

The air mix door motor is attached to the heater & cooling unit. It rotates so that the air mix door is opened or closed to a position set by the unified meter and A/C amp. Motor rotation is then conveyed through a shaft and the air mix door position is then fed back to the unified meter and A/C amp. by PBR built-in air mix door motor.

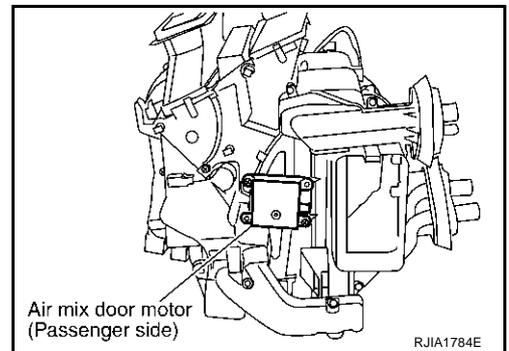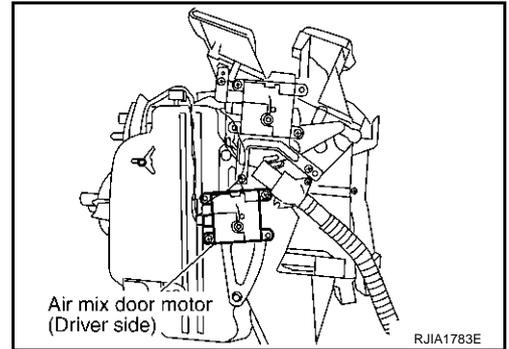

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR

Perform diagnostic procedure for [ATC-81, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

Air Mix Door Motor PBR Circuit

AJS000Z9

SYMPTOM:

- Discharge air temperature does not change.
- PBR circuit is open or shorted.

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR PBR

Perform diagnostic procedure for [ATC-81, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS

AJS0010Y


Intake Door Motor Circuit

SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

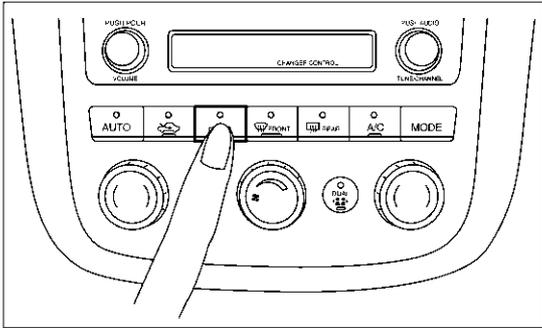


a. Press REC switch.
Recirculation indicator should illuminate.

b. Press FRE switch.
Fresh indicator should illuminate.

c. Listen for intake door position change (you should hear blower sound change slightly).

If OK (symptom cannot be duplicated), perform complete operational check (*9).
If NG (symptom is confirmed), continue with STEP-2 following.

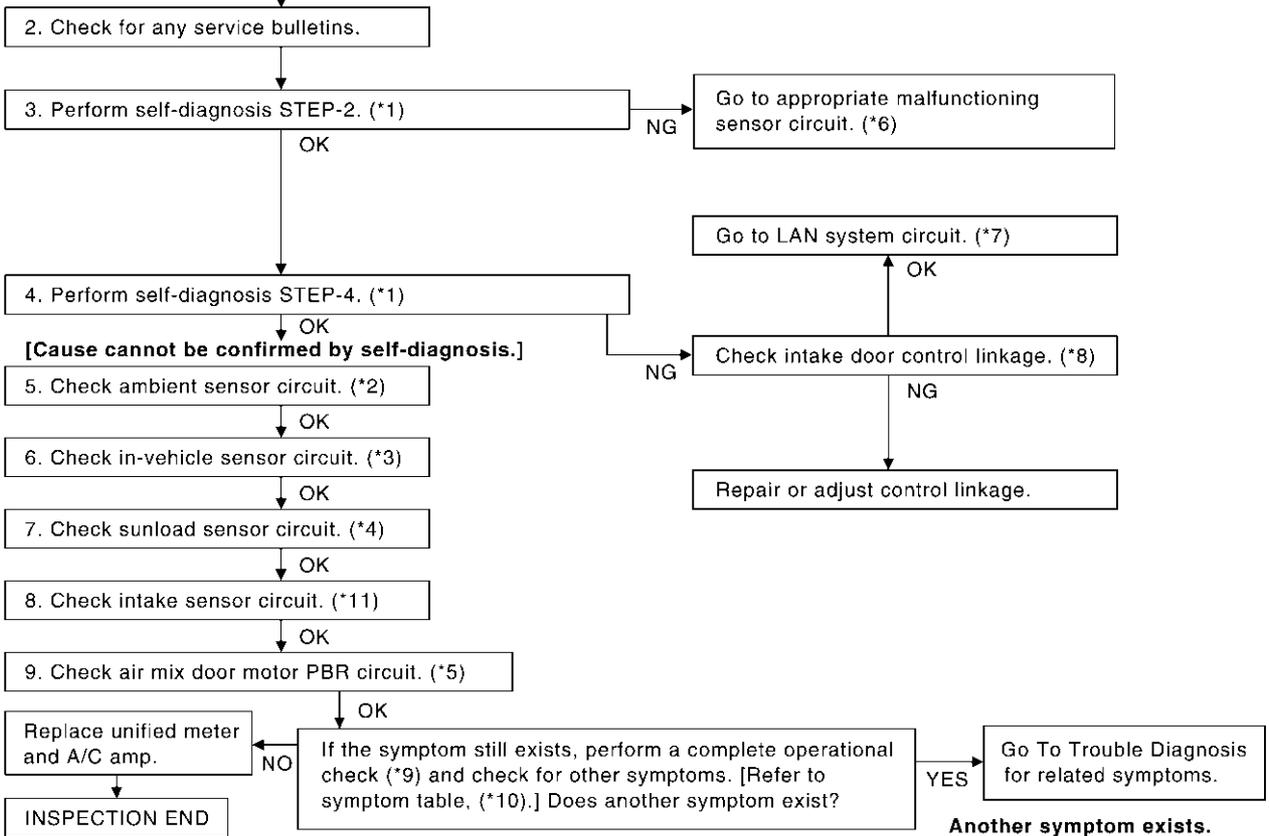

RJIA1785E

*1 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 4 to 6.

*2 [ATC-115, "Ambient Sensor Circuit"](#).

*3 [ATC-118, "In-vehicle Sensor Circuit"](#).

*4 [ATC-121, "Sunload Sensor Circuit"](#).

*5 [ATC-89, "Air Mix Door Motor PBR Circuit"](#).

*6 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 13.

*7 [ATC-81, "LAN System Circuit"](#).

*8 [ATC-136, "INTAKE DOOR MOTOR"](#).

*9 [ATC-76, "Operational Check"](#).

*10 [ATC-57, "SYMPTOM TABLE"](#).

*11 [ATC-124, "Intake Sensor Circuit"](#).

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION


Component Parts

Intake door control system components are:


- Unified meter and A/C amp.
- Intake door motor (LCU)
- A/C LAN system (PBR built-in mode motor and air mix door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

System Operation

The intake door control determines intake door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature. When the DEFROST, or OFF switches are pushed or A/C switch is OFF, the unified meter and A/C amp. sets the intake door at the FRESH position.

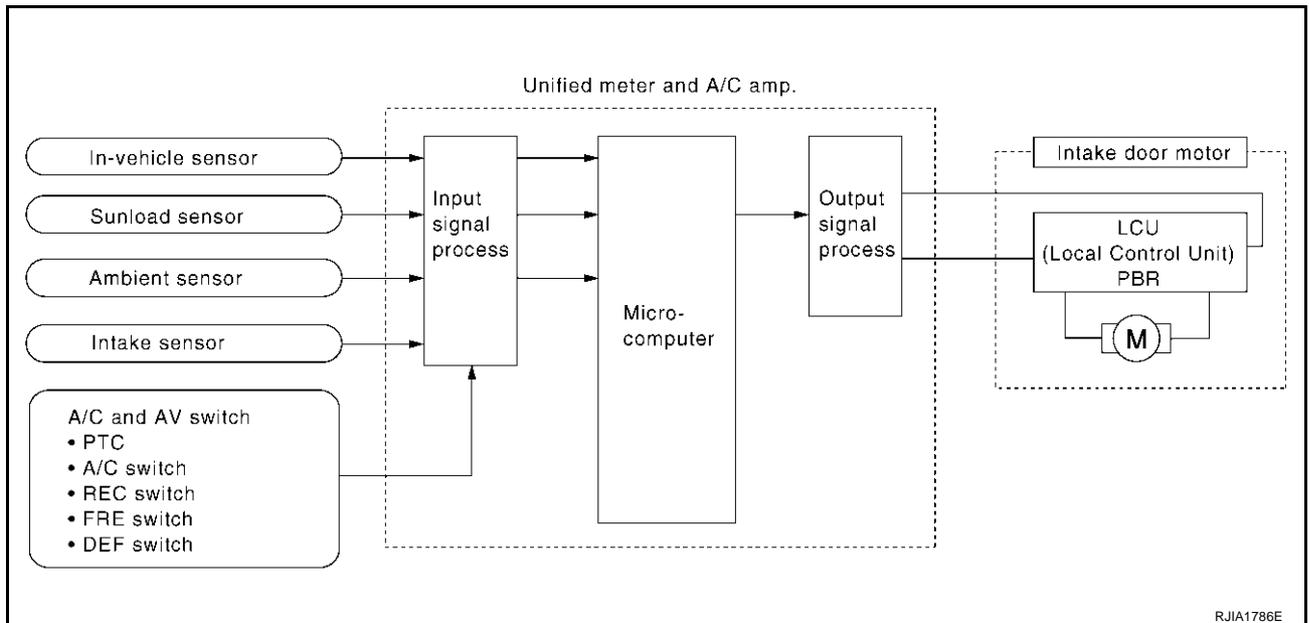

Intake Door Control Specification

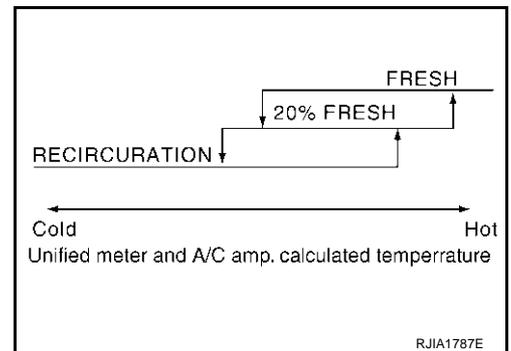


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Intake Door Motor

The intake door motor is attached to the intake unit. It rotates so that air is drawn from inlets set by the unified meter and A/C amp. Motor rotation is conveyed to a lever which activates the intake door.

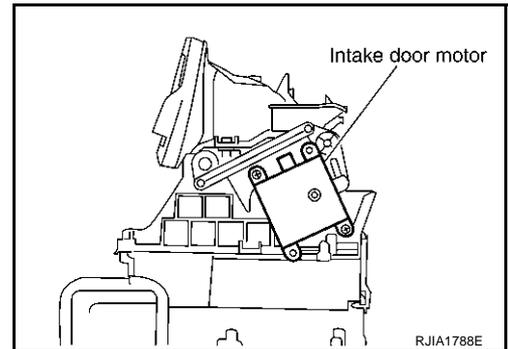

DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR

SYMPTOM: Intake door motor does not operate normally.

Perform diagnostic procedure for [ATC-81, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

TROUBLE DIAGNOSIS


AJS001F4

Blower Motor Circuit

SYMPTOM:

- Blower motor operation is malfunctioning.
- Blower motor operation is malfunctioning under out of starting fan speed control.

INSPECTION FLOW

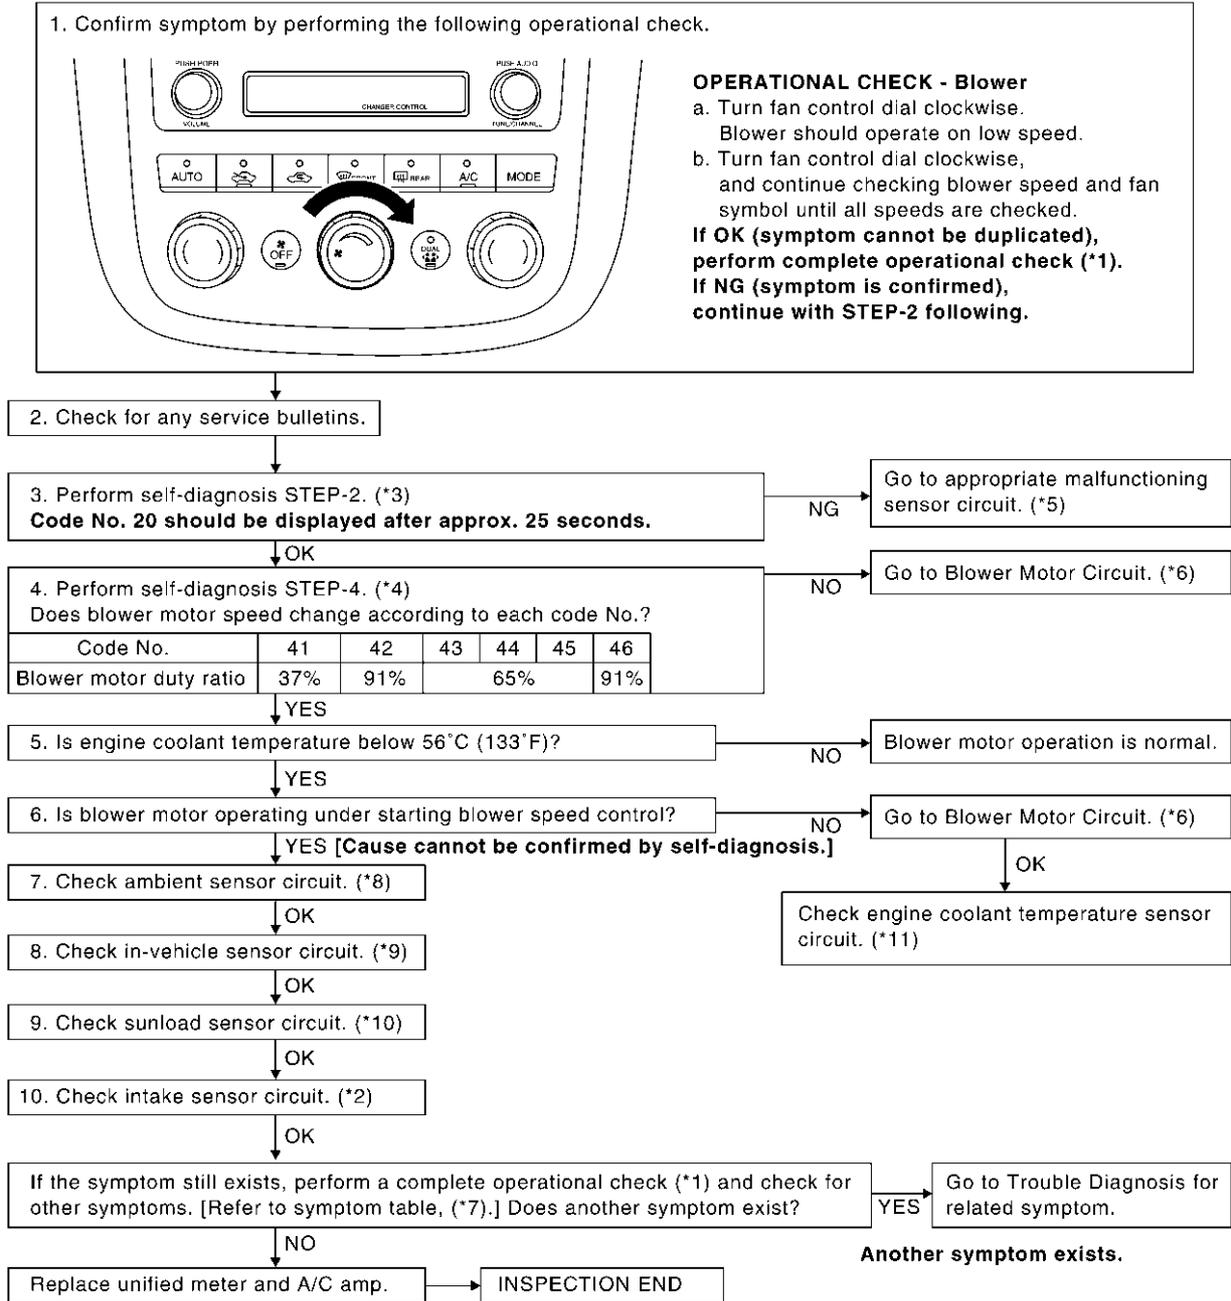

*1 [ATC-76, "Operational Check"](#).

*2 [ATC-124, "Intake Sensor Circuit"](#).

*3 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 4.

*4 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 6.

*5 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 13.

*6 [ATC-95, "DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR"](#).

*7 [ATC-57, "SYMPTOM TABLE"](#).

*8 [ATC-115, "Ambient Sensor Circuit"](#).

*9 [ATC-118, "In-vehicle Sensor Circuit"](#).

*10 [ATC-121, "Sunload Sensor Circuit"](#).

*11 [EC-203, "DTC P0117, P0118 ECT SENSOR"](#).

RJA1789E

TROUBLE DIAGNOSIS


SYSTEM DESCRIPTION

Component Parts

Fan speed control system components are:

- Unified meter and A/C amp.
- A/C LAN system (PBR built-in mode door motor and air mix door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

System Operation

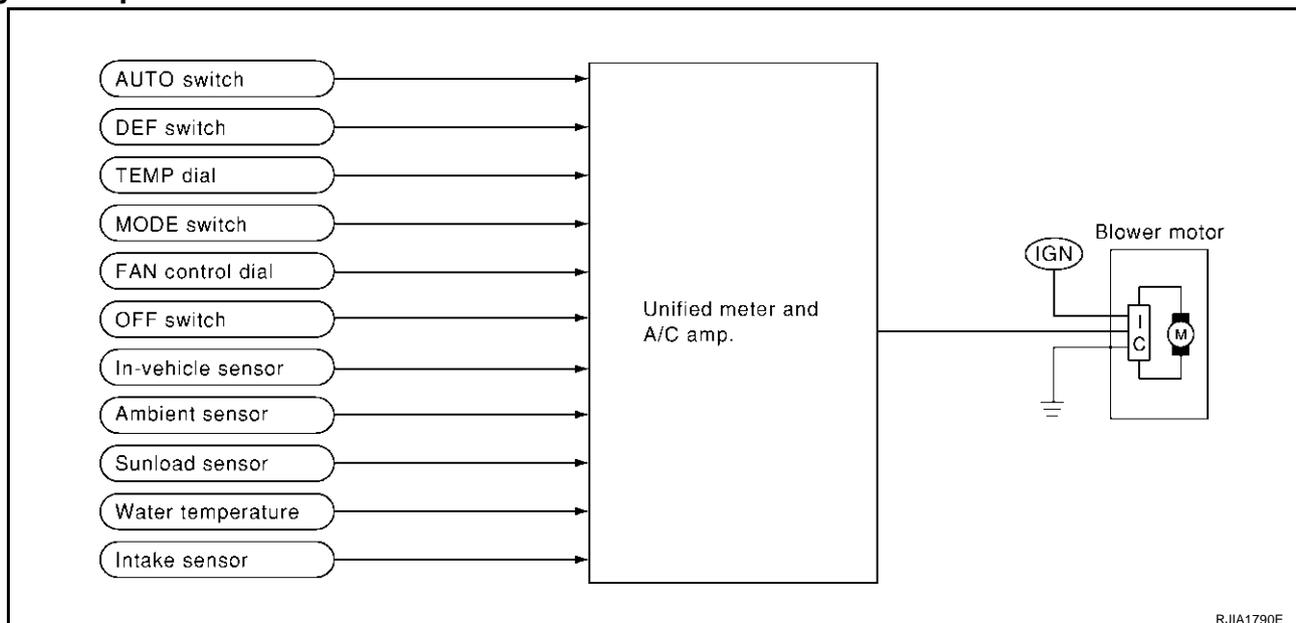

Automatic Mode

In the automatic mode, the blower motor speed is calculated by the unified meter and A/C amp. based on input from the PBR, in-vehicle sensor, sunload sensor, intake sensor and ambient sensor.

When the air flow is increased, the duty ratio of the blower fan motor's drive signal is changed at 8%/sec. to prevent a sudden increase in air flow.

In addition to manual air flow control and the usual automatic air flow control, starting air flow control, low water temperature starting control and high passenger compartment temperature starting control are available.

Starting Fan Speed Control

Start Up From COLD SOAK Condition (Automatic mode)

In a cold start up condition where the engine coolant temperature is below 56°C (133°F), the blower will not operate for a short period of time (up to 150 seconds). The exact start delay time varies depending on the ambient and engine coolant temperature.

In the most extreme case (very low ambient) the blower starting delay will be 150 seconds as described above. After this delay, the blower will operate at low speed until the engine coolant temperature rises above 56°C (133°F), at which time the blower speed will increase to the objective speed.

Start Up From Usual or HOT SOAK Condition (Automatic mode)

The blower will begin operation momentarily after the AUTO switch is pushed. The blower speed will gradually rise to the objective speed over a time period of 3 seconds or less (actual time depends on the objective blower speed).


TROUBLE DIAGNOSIS

Blower Speed Compensation

Sunload

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The low speed will vary depending on the sunload. During conditions of low or no sunload, the blower low speed is usual low speed (duty ratio 25%). During high sunload conditions, the display and A/C auto amp. causes the blower speed to increase (duty ratio 49%).


Fan Speed Control Specification

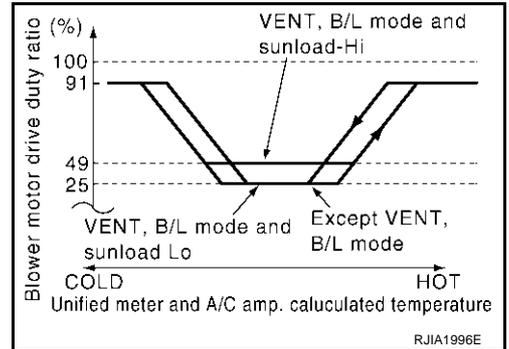

COMPONENT DESCRIPTION


Brush-less Motor

The blower motor utilizes a brush-less motor with a rotating magnet. Quietness is improved over previous motors where the brush was the point of contact and the coil rotated.

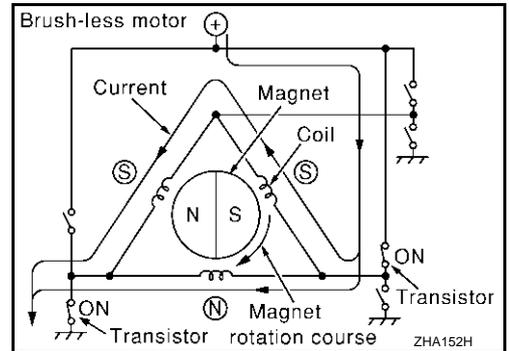

DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning under starting fan speed control.

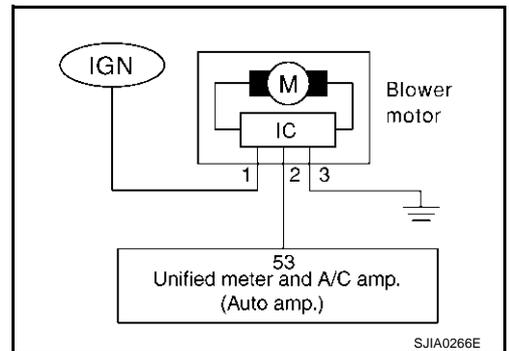

TROUBLE DIAGNOSIS

1. CHECK POWER SUPPLY FOR BLOWER MOTOR

1. Disconnect blower motor connector.
2. Turn ignition switch ON.
3. Check voltage between blower motor harness connector M70 terminal 1 (W/L) and ground.


1 – Ground : **Battery voltage**

OK or NG

OK >> GO TO 2.

NG >> Check power supply circuit and 15A fuses [Nos. 10 and 11, located in the fuse block (J/B)]. Refer to [PG-87](#), "[FUSE BLOCK - JUNCTION BOX \(J/B\)](#)".

- If OK, check for open circuit in wiring harness. Repair or replace as necessary.
- If NG, replace fuse and check wiring harness for short circuit. Repair or replace as necessary.

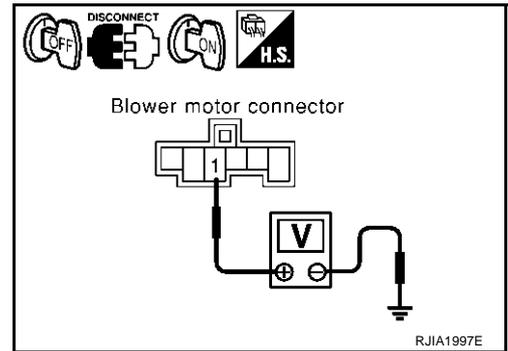

2. CHECK BLOWER MOTOR GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between blower motor harness connector M70 terminal 3 (B) and ground.

3 – Ground : **Continuity should exist.**

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

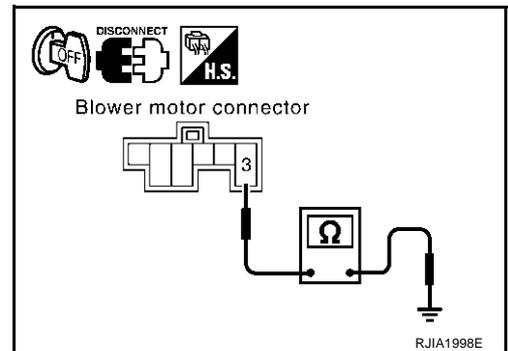

3. CHECK CIRCUIT CONTINUITY BETWEEN BLOWER MOTOR AND UNIFIED METER AND A/C AMP.


1. Disconnect unified meter and A/C amp. connector.
2. Check continuity between blower motor harness connector M70 terminal 2 (L/Y) and unified meter and A/C amp. harness connector M51 terminal 53 (L/Y).

2 – 53 : **Continuity should exist.**

OK or NG


OK >> GO TO 4.

NG >> Repair harness or connector.

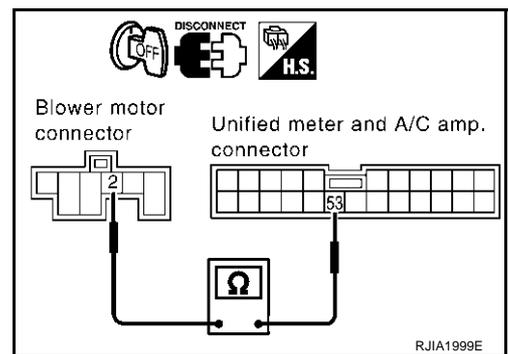

4. CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

1. Reconnect blower motor connector and unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Vary the fan speed between Lo and Hi and confirm the duty ratios between blower motor harness connector M70 terminal 2

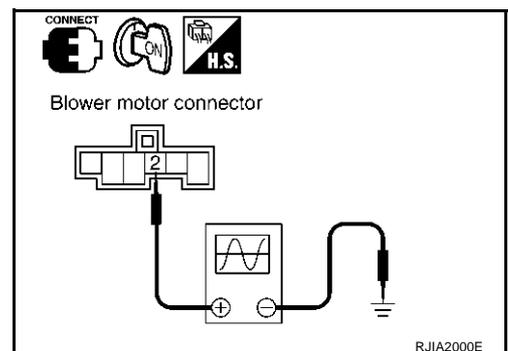

TROUBLE DIAGNOSIS

(L/Y) and ground using an oscilloscope. Usual No. 2 terminal drive signal duty ratios are shown in the table below.

Blower fan speed	1st	2nd	3rd	4th	5th	6th	7th
Blower motor connector M70 terminal No. 2 (Oscilloscope)							
Duty ratio	Approx. 21 - 31%	Approx. 33 - 39%	Approx. 41 - 47%	Approx. 49 - 59%	Approx. 61 - 71%	Approx. 73 - 83%	Approx. 85 - 91%

NOTE: Duty ratio = $\frac{T_x}{\text{Approx. } 1.6 \text{ ms}} \times 100 (\%)$

RJIA1792E

OK or NG

- OK >> GO TO 5.
- NG >> Replace unified meter and A/C amp.

5. CHECK BLOWER MOTOR DRIVE SIGNAL

If the fan air flow does not change, usual No. 2 (L/Y) terminal drive signal duty ratios are shown in the table above.

OK or NG


- OK >> Replace blower motor.
- NG >> INSPECTION END

COMPONENT INSPECTION

Blower Motor

Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the blower unit.

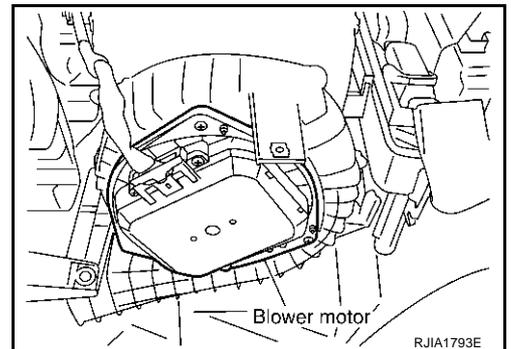


TROUBLE DIAGNOSIS

AJS000ZC

Magnet Clutch Circuit

SYMPTOM: Magnet clutch does not engage.

INSPECTION FLOW

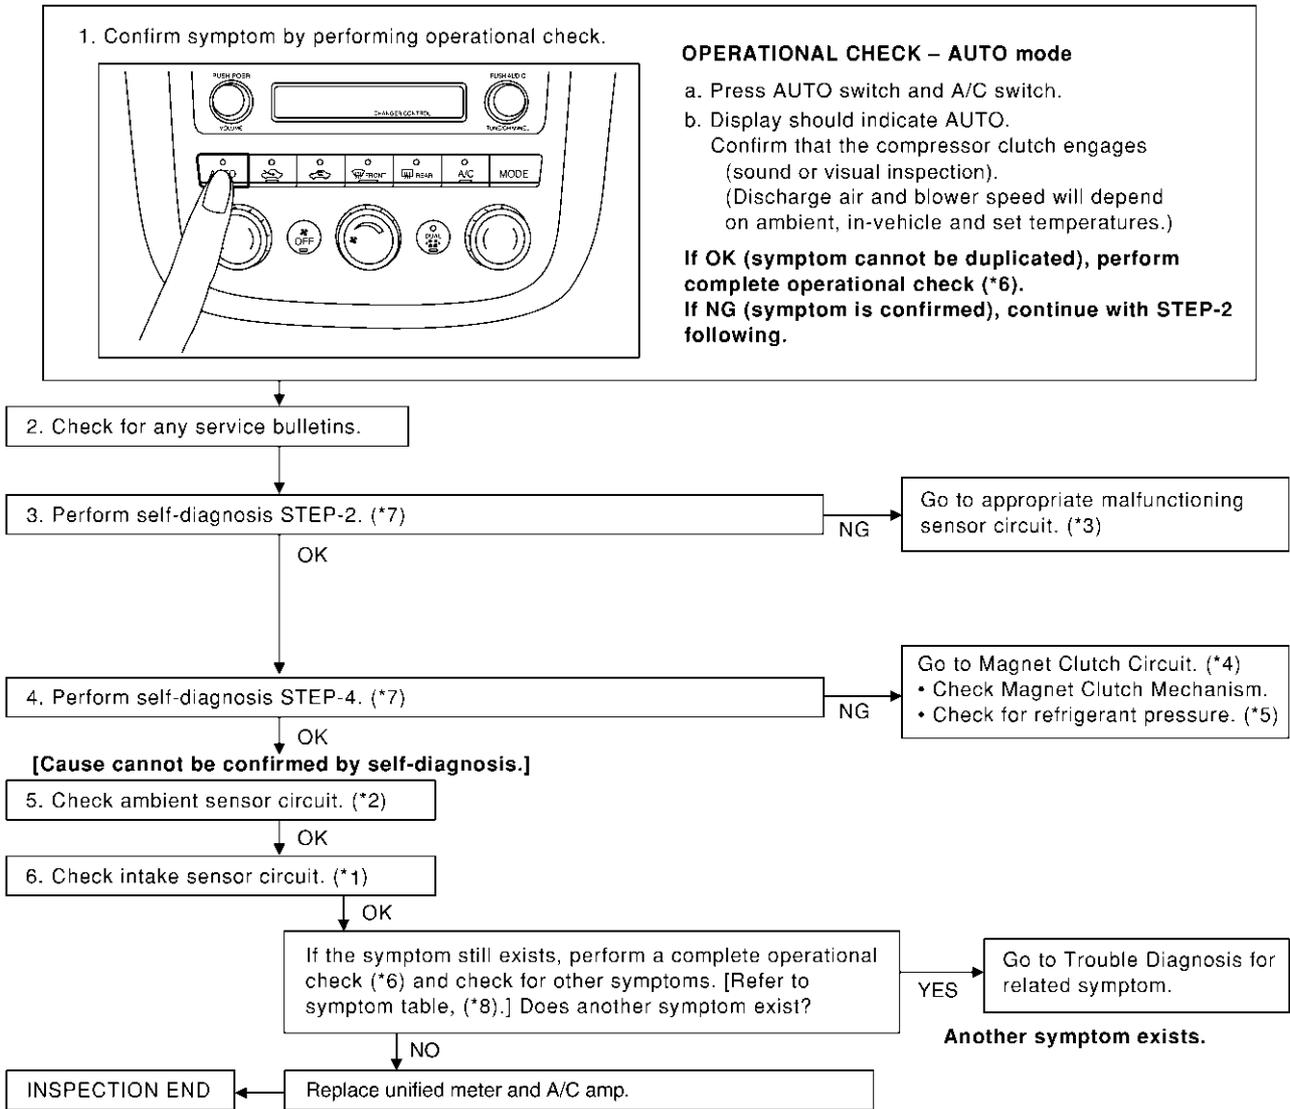

*1 [ATC-124. "Intake Sensor Circuit".](#)

*2 [ATC-115. "Ambient Sensor Circuit".](#)

*3 [ATC-69. "FUNCTION CONFIRMATION PROCEDURE",](#) see No. 13.

*4 [ATC-98. "Magnet Clutch Circuit".](#)

*5 [ATC-108. "TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE".](#)

*6 [ATC-76. "Operational Check".](#)

*7 [ATC-69. "FUNCTION CONFIRMATION PROCEDURE",](#) see No. 4 to 6.

*8 [ATC-57. "SYMPTOM TABLE".](#)

RJIA1794E

TROUBLE DIAGNOSIS


SYSTEM DESCRIPTION

Unified meter and A/C amp. controls compressor operation by intake air temperature and signal from ECM.

Low Temperature Protection Control


Unified meter and A/C amp. will turn the compressor ON or OFF as determined by a signal detected by intake sensor.

When intake air temperature is higher than 4°C (39°F), the compressor turns ON. The compressor turns OFF when intake air temperature is lower than 2.5°C (37°F).

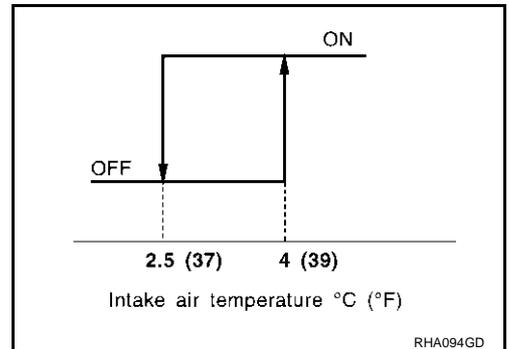

DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

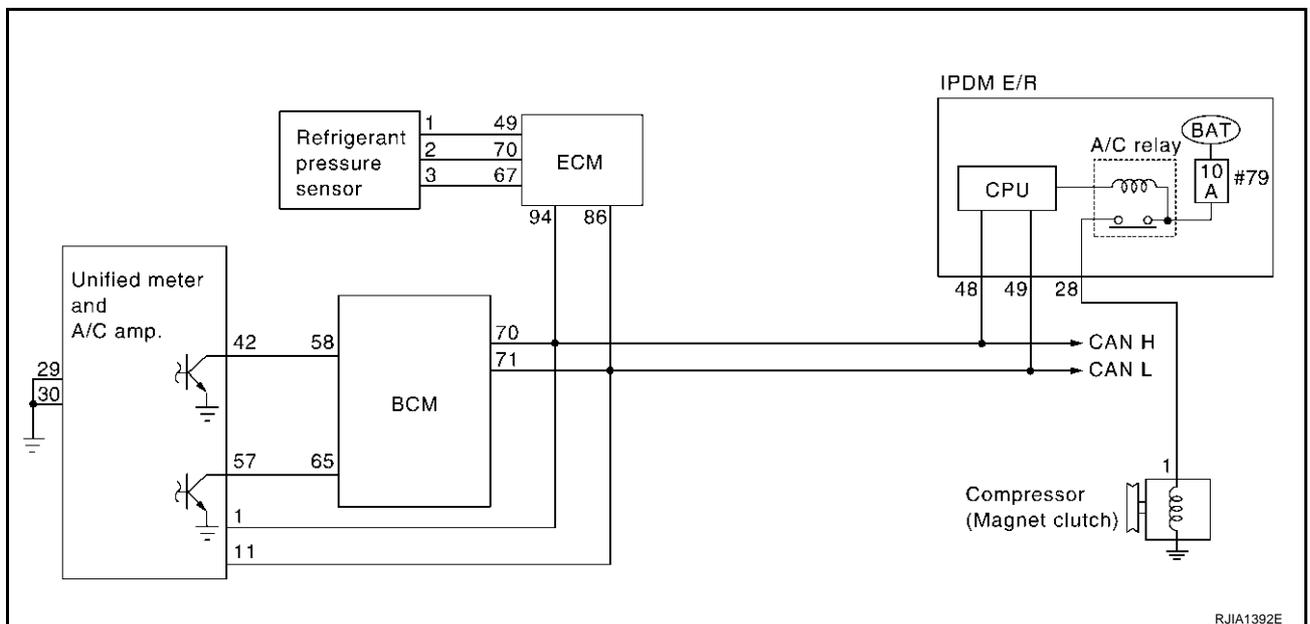

1. CHECK INTAKE SENSOR CIRCUIT

Check intake sensor. Refer to [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 11.

OK or NG

OK >> GO TO 2.

NG >> Malfunctioning intake sensor: Refer to [ATC-124, "Intake Sensor Circuit"](#).

2. PERFORM AUTO ACTIVE TEST

Refer to [PG-41, "Auto Active Test"](#).

Does the magnet clutch operate?

YES >> ● WITH CONSULT-II
GO TO 5.

● WITHOUT CONSULT-II
GO TO 6.

NO >> Check 10A fuse (No. 79, located in IPDM E/R), and GO TO 3.

TROUBLE DIAGNOSIS


3. CHECK CIRCUIT CONTINUITY BETWEEN IPDM E/R AND COMPRESSOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and compressor (magnet clutch) connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 28 (Y/B) and compressor harness connector F28 terminal 1 (Y/B).

28 – 1 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness or connector.

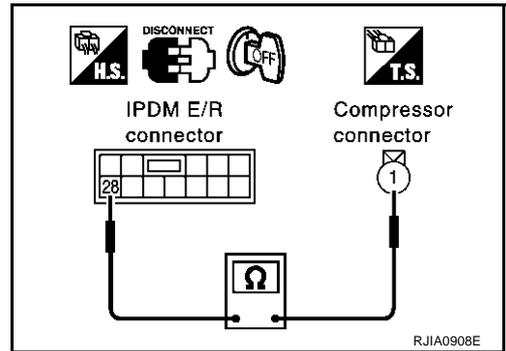


4. CHECK MAGNET CLUTCH CIRCUIT

Check for operation sound when applying battery voltage direct current to terminal.

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Replace magnet clutch. Refer to [ATC-153, "Removal and Installation of Compressor Clutch"](#).

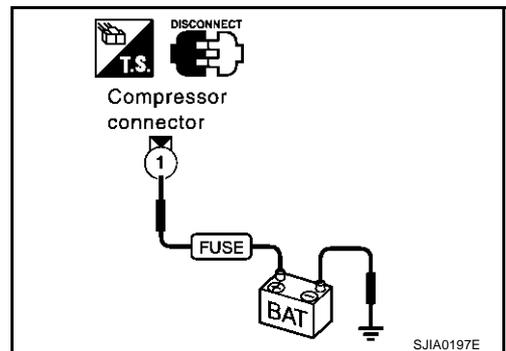

5. CHECK BCM INPUT (COMPRESSOR ON) SIGNAL

Check compressor ON/OFF signal. Refer to [ATC-55, "CONSULT-II"](#).

A/C SW ON : COMP ON SIG ON
A/C SW OFF : COMP ON SIG OFF

OK or NG

- OK >> GO TO 8.
 NG >> GO TO 6.

DATA MONITOR			
MONITOR			
FAN ON SIG	ON		
COMP ON SIG	ON		
IGN ON SW	ON		
OIL P SW	ON		
		RECORD	
MODE	BACK	LIGHT	COPY

The diagram is labeled SJA0270E.


6. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect BCM connector and unified meter and A/C amp. connector.
3. Check continuity between BCM harness connector M37 terminal 58 (GR) and unified meter and A/C amp. harness connector M51 terminal 42 (GR).

58 – 42 : Continuity should exist.

OK or NG

- OK >> GO TO 7.
 NG >> Repair harness or connector.

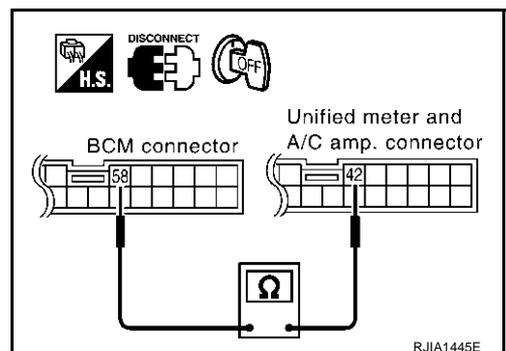


TROUBLE DIAGNOSIS

7. CHECK VOLTAGE FOR UNIFIED METER AND A/C AMP. (COMPRESSOR ON SIGNAL)

1. Reconnect BCM connector and unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector M51 terminal 42 (GR) and ground.

Terminals		(-)	Condition	Voltage
(+) Terminal No. (wire color)				
Auto amp. connector	Terminal No. (wire color)	Ground	A/C switch: ON	Approx. 0V
M51	42 (GR)		A/C switch: OFF	Approx. 5V

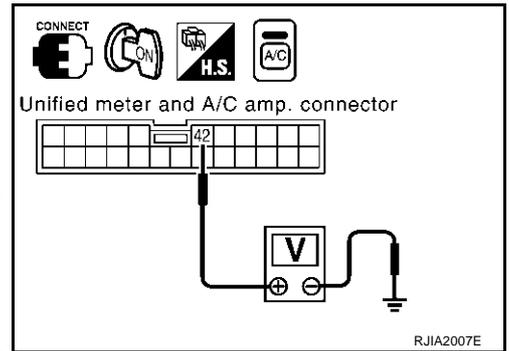

OK or NG

OK >> GO TO 8.

NG-1 >> If the voltage is approx. 5V when A/C switch is ON: Replace unified meter and A/C amp.

NG-2 >> If the voltage is approx. 0V when A/C switch is OFF: Replace BCM.

8. CHECK REFRIGERANT PRESSURE SENSOR


WITH CONSULT-II

1. Start the engine.
2. Check voltage of refrigerant pressure sensor. Refer to [ATC-55, "CONSULT-II"](#).

WITHOUT CONSULT-II

1. Start the engine.
2. Check voltage between ECM harness connector F101 terminal 70 (W) and ground.

Terminals		(-)	Condition	Voltage
(+) Terminal No. (wire color)				
ECM connector	Terminal No. (wire color)	Ground	A/C switch: ON	Approx. 0.36 - 3.88V
F101	70 (W)			

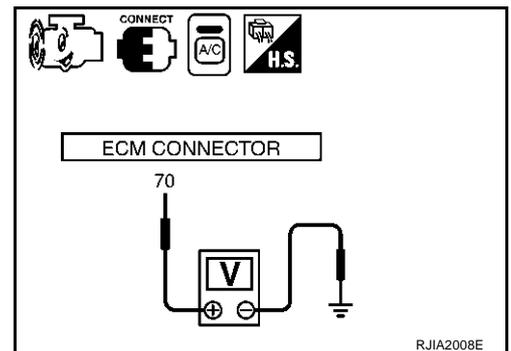

OK or NG

OK >> ● WITH CONSULT-II
GO TO 9.

- WITHOUT CONSULT-II
GO TO 10.

NG >> Refer to [EC-634, "REFRIGERANT PRESSURE SENSOR"](#).

TROUBLE DIAGNOSIS

9. CHECK BCM INPUT (FAN ON) SIGNAL

Check FAN ON/OFF signal. Refer to [ATC-55, "CONSULT-II"](#) .

FAN CONTROL DIAL ON : FAN ON SIG ON
FAN CONTROL DIAL OFF : FAN ON SIG OFF

OK or NG

OK >> GO TO 12.
 NG >> GO TO 10.

DATA MONITOR			
MONITOR			
FAN ON SIG	ON		
COMP ON SIG	ON		
IGN ON SW	ON		
OIL P SW	ON		
RECORD			
MODE	BACK	LIGHT	COPY

SJIA0270E


10. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect BCM connector and unified meter and A/C amp. connector.
3. Check continuity between BCM harness connector M37 terminal 65 (SB) and unified meter and A/C amp. harness connector M51 terminal 57 (SB).

65 – 57 : Continuity should exist.

OK or NG

OK >> GO TO 11.
 NG >> Repair harness or connector.

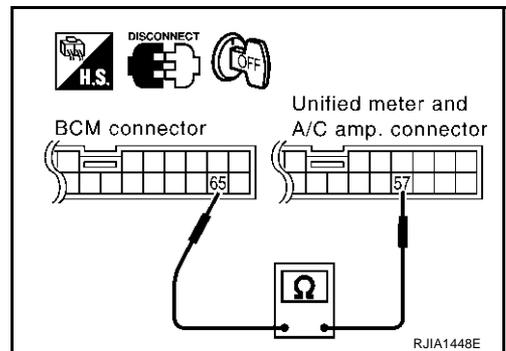


11. CHECK VOLTAGE FOR UNIFIED METER AND A/C AMP. (FAN ON SIGNAL)

1. Reconnect BCM connector and unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector M51 terminal 57 (SB) and ground.

Terminals		(-)	Condition	Voltage
(+) Auto amp. connector				
Terminal No. (wire color)				
M51	57 (SB)	Ground	A/C switch: ON Blower motor operates	Approx. 0V
			A/C switch: OFF	Approx. 5V

OK or NG

OK >> GO TO 12.
 NG-1 >> If the voltage is approx. 5V when blower motor is ON: Replace unified meter and A/C amp.
 NG-2 >> If the voltage is approx. 0V when blower motor is OFF: Replace BCM. Refer to [BCS-36, "Removal and Installation of BCM"](#) .

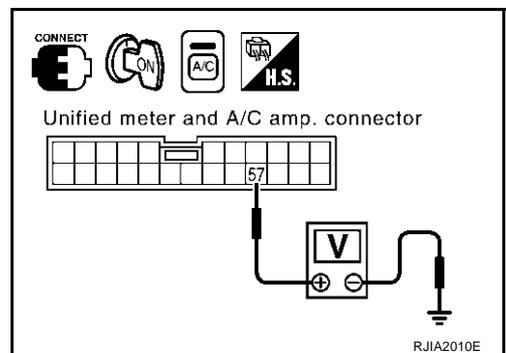

TROUBLE DIAGNOSIS

12. CHECK CAN COMMUNICATION

Check CAN communication. Refer to [ATC-33. "CAN Communication System Description"](#) .

- BCM – ECM
- ECM – IPDM E/R
- ECM – Unified meter and A/C amp.

OK or NG


OK >> INSPECTION END

NG >> Repair or replace malfunctioning part(s).

COMPONENT INSPECTION

Refrigerant Pressure Sensor

The refrigerant pressure sensor is attached to the condenser.

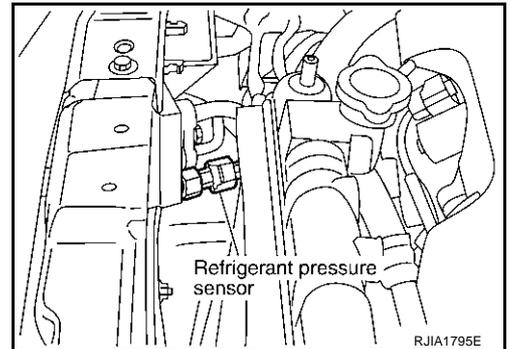

A

B

C

D

E

F

G

H

I

ATC

K

L

M

TROUBLE DIAGNOSIS


AJS000ZD

Insufficient Cooling

SYMPTOM: Insufficient cooling

INSPECTION FLOW


1. Confirm symptom by performing the following operational check.

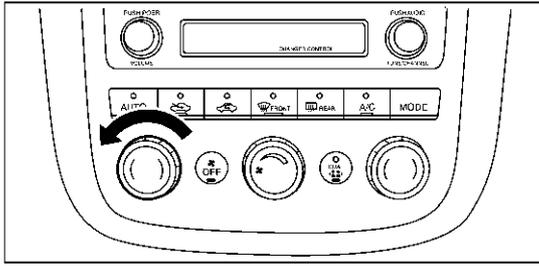

OPERATIONAL CHECK – Temperature decrease

- Turn temperature dial counterclockwise until 18°C (60°F) is displayed.
- Check for cold air at discharge air outlets.

If OK (symptom cannot be duplicated), perform complete operational check (*10).
If NG (symptom is confirmed), continue with STEP-2 following.

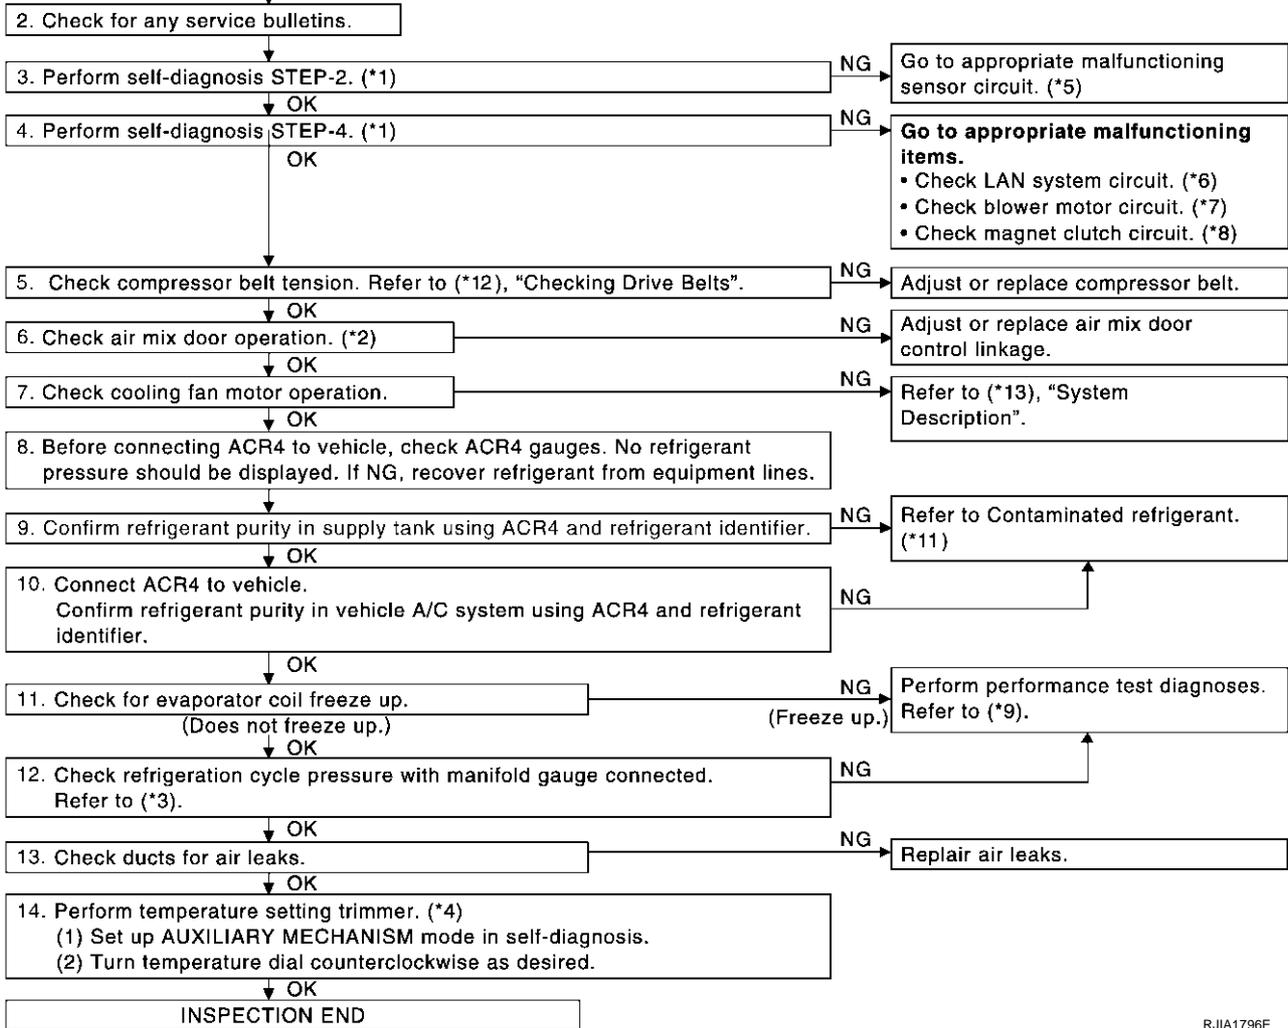

RJIA1796E

*1 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 4 to 6.

*2 [ATC-87, "Air Mix Door Motor Circuit"](#).

*3 [ATC-107, "Test Reading"](#).

*4 [ATC-74, "AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER"](#).

*5 [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 13.

*6 [ATC-81, "LAN System Circuit"](#).

*7 [ATC-93, "Blower Motor Circuit"](#).

*8 [ATC-98, "Magnet Clutch Circuit"](#).

*9 [ATC-105, "PERFORMANCE TEST DIAGNOSES"](#).

*10 [ATC-76, "Operational Check"](#).


*11 [ATC-6, "CONTAMINATED REFRIGERANT"](#)

*12 [EM-11, "Checking Drive Belts"](#).

*13 [EC-495, "System Description"](#).

TROUBLE DIAGNOSIS

PERFORMANCE TEST DIAGNOSES

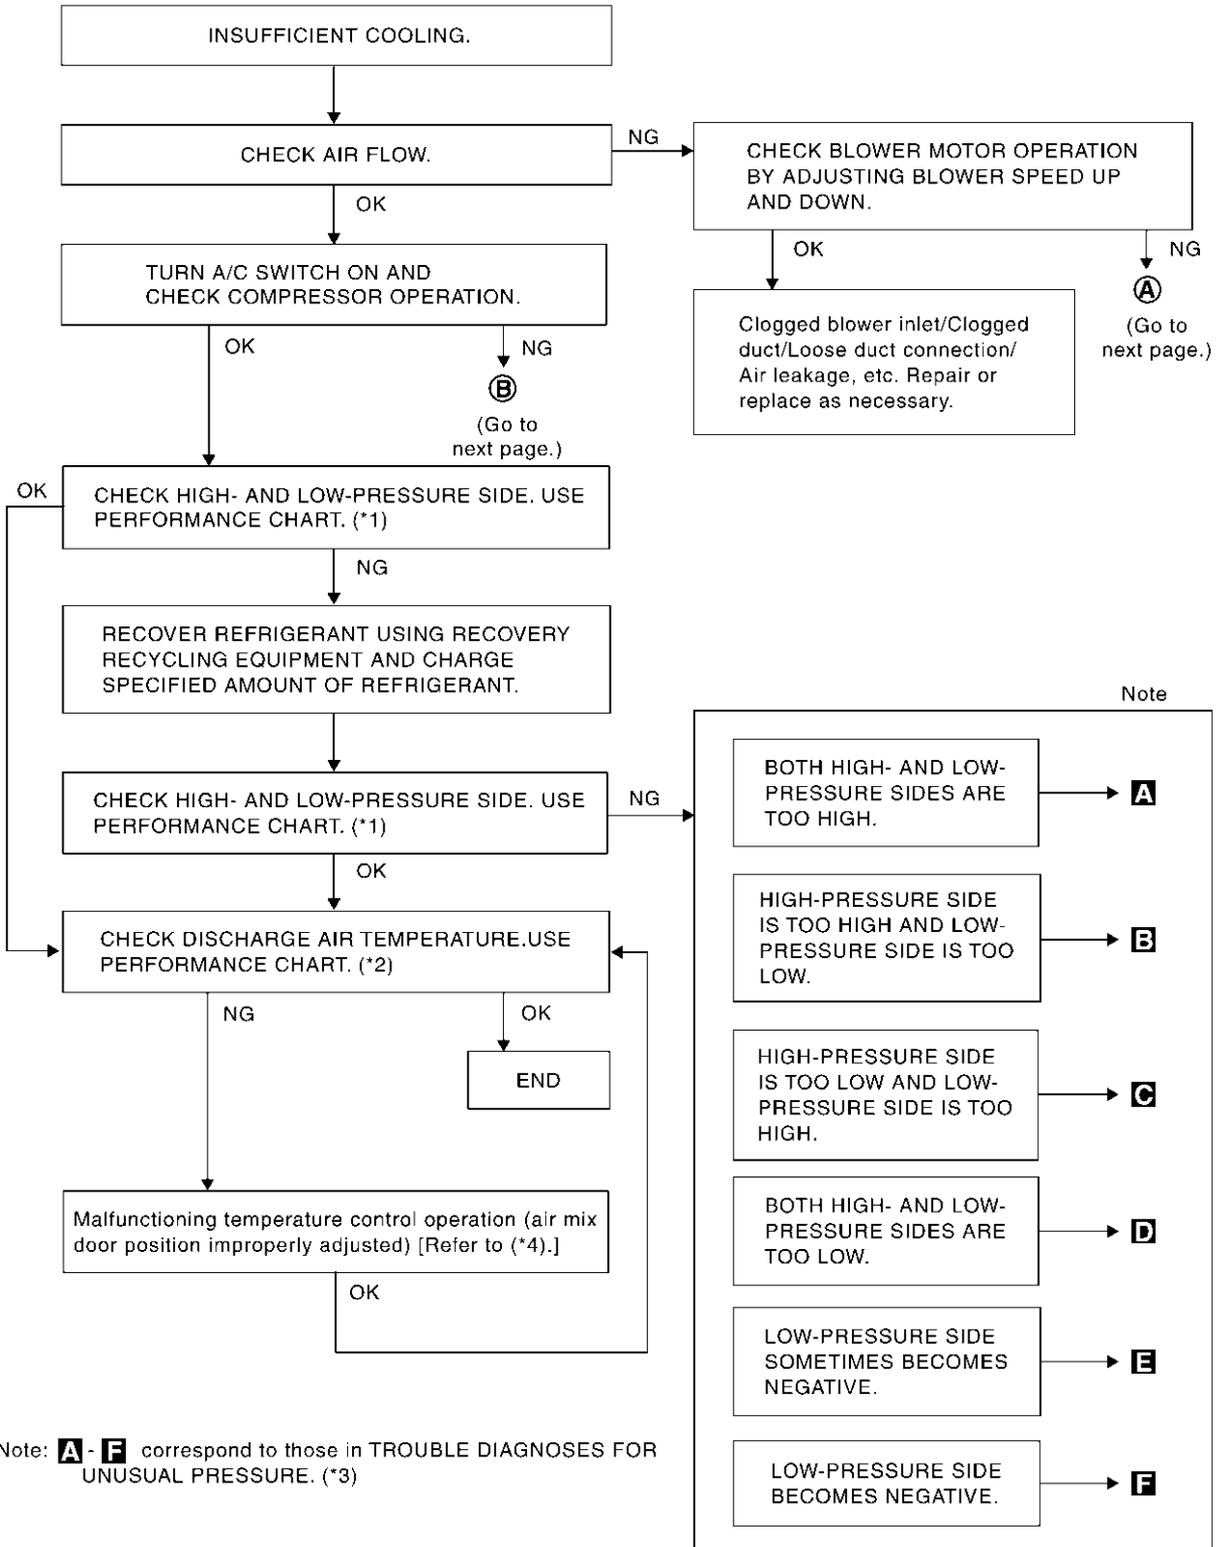

Note: **A - F** correspond to those in TROUBLE DIAGNOSES FOR UNUSUAL PRESSURE. (*3)

*1 [ATC-107, "PERFORMANCE CHART"](#).


*2 [ATC-107, "PERFORMANCE CHART"](#).

*3 [ATC-108, "TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE"](#).

*4 [ATC-87, "Air Mix Door Motor Circuit"](#).

RJIA1601E

TROUBLE DIAGNOSIS

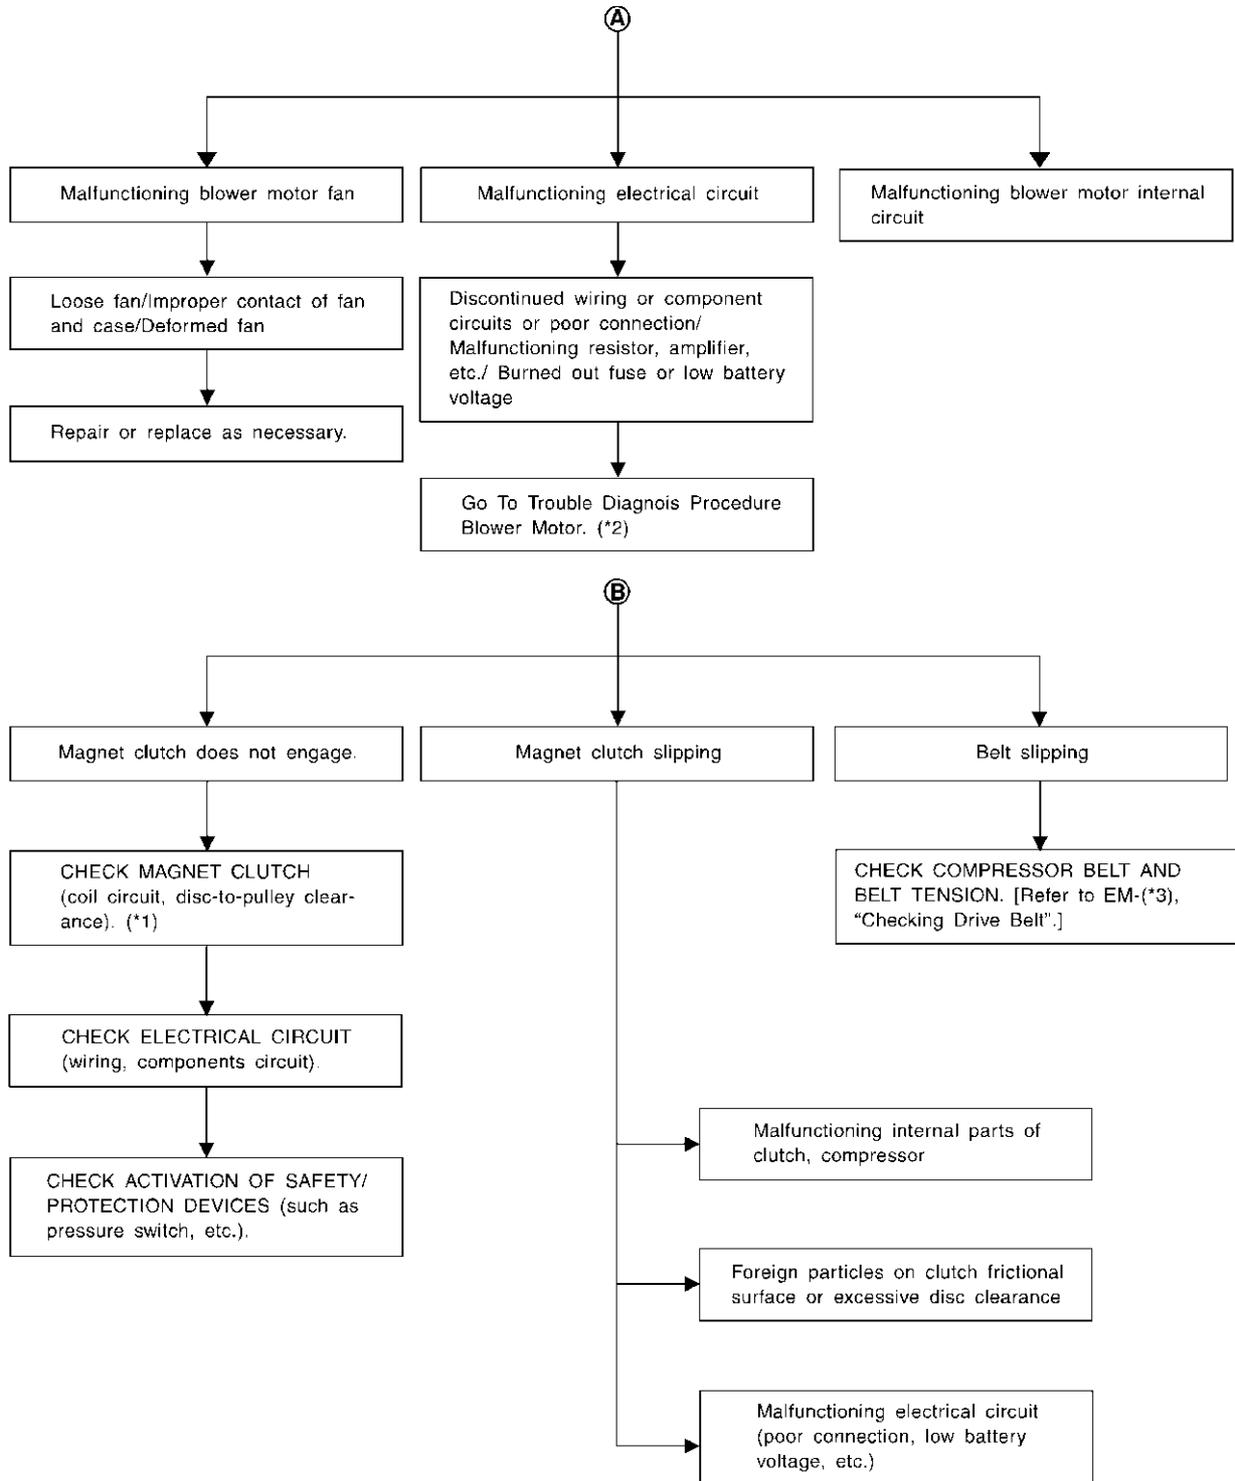

RJIA1595E

*1 [ATC-153, "Removal and Installation of Compressor Clutch"](#).

*2 [ATC-93, "Blower Motor Circuit"](#).

*3 [EM-11, "Checking Drive Belts"](#).

TROUBLE DIAGNOSIS

PERFORMANCE CHART

Test Condition

Testing must be performed as follows:

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door window	Open
Hood	Open
TEMP.	Max. COLD
Mode switch	 (Ventilation) set
Recirculation (REC) switch	 (Recirculation) set
 Fan (blower) speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

Test Reading

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	5.3 - 6.5 (42 - 44)
	25 (77)	9.7 - 11.5 (49 - 53)
	30 (86)	13.8 - 16.3 (57 - 61)
	35 (95)	18.0 - 21.2 (64 - 70)
	40 (104)	22.2 - 25.7 (72 - 78)
60 - 70	20 (68)	6.5 - 7.7 (44 - 46)
	25 (77)	11.5 - 13.3 (53 - 56)
	30 (86)	16.3 - 18.8 (61 - 66)
	35 (95)	21.2 - 24.0 (70 - 75)
	40 (104)	25.7 - 29.2 (78 - 85)

Ambient Air Temperature-to-operating Pressure Table


Ambient air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	680 - 840 (6.94 - 8.57, 98.6 - 121.8)	160 - 198 (1.63 - 2.02, 23.2 - 28.7)
	25 (77)	800 - 985 (8.16 - 10.05, 116.0 - 142.8)	198 - 245 (2.02 - 2.50, 28.7 - 35.5)
	30 (86)	940 - 1,150 (9.59 - 11.73, 136.3 - 166.8)	225 - 278 (2.30 - 2.84, 32.6 - 40.3)
	35 (95)	1,160 - 1,410 (11.83 - 14.38, 168.2 - 204.5)	273 - 335 (2.78 - 3.42, 39.6 - 48.6)
	40 (104)	1,325 - 1,620 (13.52 - 16.52, 192.1 - 234.9)	325 - 398 (3.32 - 4.06, 47.1 - 57.7)

TROUBLE DIAGNOSIS


TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE

Whenever system's high and/or low side pressure is unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the standard (usual) pressure, however, differs from vehicle to vehicle, refer to above table (Ambient air temperature-to-operating pressure table).

Both High- and Low-pressure Sides are Too High

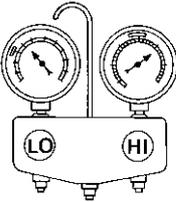
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too high.</p>  <p style="text-align: right; font-size: small;">AC359A</p>	Pressure is reduced soon after water is splashed on condenser.	Excessive refrigerant charge in refrigeration cycle	Reduce refrigerant until specified pressure is obtained.
	Air suction by cooling fan is insufficient.	Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan	<ul style="list-style-type: none"> ● Clean condenser. ● Check and repair cooling fan as necessary.
	<ul style="list-style-type: none"> ● Low-pressure pipe is not cold. ● When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then decreases gradually thereafter. 	Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.) ↓ Air in refrigeration cycle	Evacuate repeatedly and recharge system.
	Engine tends to overheat.	Engine cooling systems malfunction.	Check and repair each engine cooling system.
	<ul style="list-style-type: none"> ● An area of the low-pressure pipe is colder than areas near the evaporator outlet. ● Plates are sometimes covered with frost. 	<ul style="list-style-type: none"> ● Excessive liquid refrigerant on low-pressure side ● Excessive refrigerant discharge flow ● Expansion valve is open a little compared with the specification. ↓ Improper expansion valve adjustment	Replace expansion valve.

High-pressure Side is Too High and Low-pressure Side is Too Low

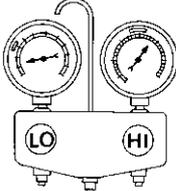
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too high and low-pressure side is too low.</p>  <p style="text-align: right; font-size: small;">AC360A</p>	Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.	High-pressure tube or parts located between compressor and condenser are clogged or crushed.	<ul style="list-style-type: none"> ● Check and repair or replace malfunctioning parts. ● Check lubricant for contamination.

TROUBLE DIAGNOSIS

High-pressure Side is Too Low and Low-pressure Side is Too High

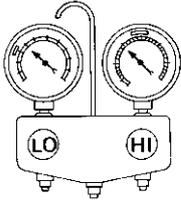Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>High-pressure side is too low and low-pressure side is too high.</p>  <p style="text-align: right; font-size: small;">AC356A</p>	<p>High- and low-pressure sides become equal soon after compressor operation stops.</p>	<p>Compressor pressure operation is improper. ↓ Damaged inside compressor packings</p>	<p>Replace compressor.</p>
	<p>No temperature difference between high- and low-pressure sides</p>	<p>Compressor pressure operation is improper. ↓ Damaged inside compressor packings.</p>	<p>Replace compressor.</p>

Both High- and Low-pressure Sides are Too Low

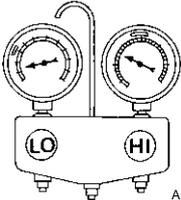
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too low.</p>  <p style="text-align: right; font-size: small;">AC353A</p>	<ul style="list-style-type: none"> ● There is a big temperature difference between receiver drier outlet and inlet. Outlet temperature is extremely low. ● Liquid tank inlet and expansion valve are frosted. 	<p>Liquid tank inside is slightly clogged.</p>	<ul style="list-style-type: none"> ● Replace liquid tank. ● Check lubricant for contamination.
	<ul style="list-style-type: none"> ● Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank. ● Expansion valve inlet may be frosted. ● Temperature difference occurs somewhere in high-pressure side. 	<p>High-pressure pipe located between receiver drier and expansion valve is clogged.</p>	<ul style="list-style-type: none"> ● Check and repair malfunctioning parts. ● Check lubricant for contamination.
	<p>Expansion valve and liquid tank are warm or only cool when touched.</p>	<p>Low refrigerant charge ↓ Leaking fittings or components</p>	<p>Check refrigerant for leaks. Refer to ATC-166, "Checking for Refrigerant Leaks" .</p>
	<p>There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.</p>	<p>Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment 2. Malfunctioning expansion valve 3. Outlet and inlet may be clogged.</p>	<ul style="list-style-type: none"> ● Remove foreign particles by using compressed air. ● Check lubricant for contamination.
	<p>An area of the low-pressure pipe is colder than areas near the evaporator outlet.</p>	<p>Low-pressure pipe is clogged or crushed.</p>	<ul style="list-style-type: none"> ● Check and repair malfunctioning parts. ● Check lubricant for contamination.
	<p>Air flow volume is not enough or is too low.</p>	<p>Evaporator is frozen.</p>	<ul style="list-style-type: none"> ● Check intake sensor circuit. Refer to ATC-124, "Intake Sensor Circuit" . ● Replace compressor.

A
B
C
D
E
F
G
H
I
K
L
M


ATC

TROUBLE DIAGNOSIS

Low-pressure Side Sometimes Becomes Negative

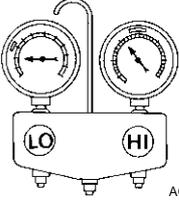Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side sometimes becomes negative.</p>  <p style="text-align: right; font-size: small;">AC354A</p>	<ul style="list-style-type: none"> ● Air conditioning system does not function and does not cyclically cool the compartment air. ● The system constantly functions for a certain period of time after compressor is stopped and restarted. 	<p>Refrigerant does not discharge cyclically.</p> <p>↓</p> <p>Moisture is frozen at expansion valve outlet and inlet.</p> <p>↓</p> <p>Water is mixed with refrigerant.</p>	<ul style="list-style-type: none"> ● Drain water from refrigerant or replace refrigerant. ● Replace liquid tank.

Low-pressure Side Becomes Negative

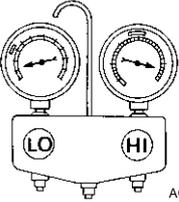Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Low-pressure side becomes negative.</p>  <p style="text-align: right; font-size: small;">AC362A</p>	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.</p>	<p>High-pressure side is closed and refrigerant does not flow.</p> <p>↓</p> <p>Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles.</p> <ul style="list-style-type: none"> ● If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant. ● If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air). ● If either of the above methods cannot correct the malfunction, replace expansion valve. ● Replace liquid tank. ● Check lubricant for contamination.


TROUBLE DIAGNOSIS

AJS00110

Insufficient Heating

SYMPTOM: Insufficient heating

INSPECTION FLOW

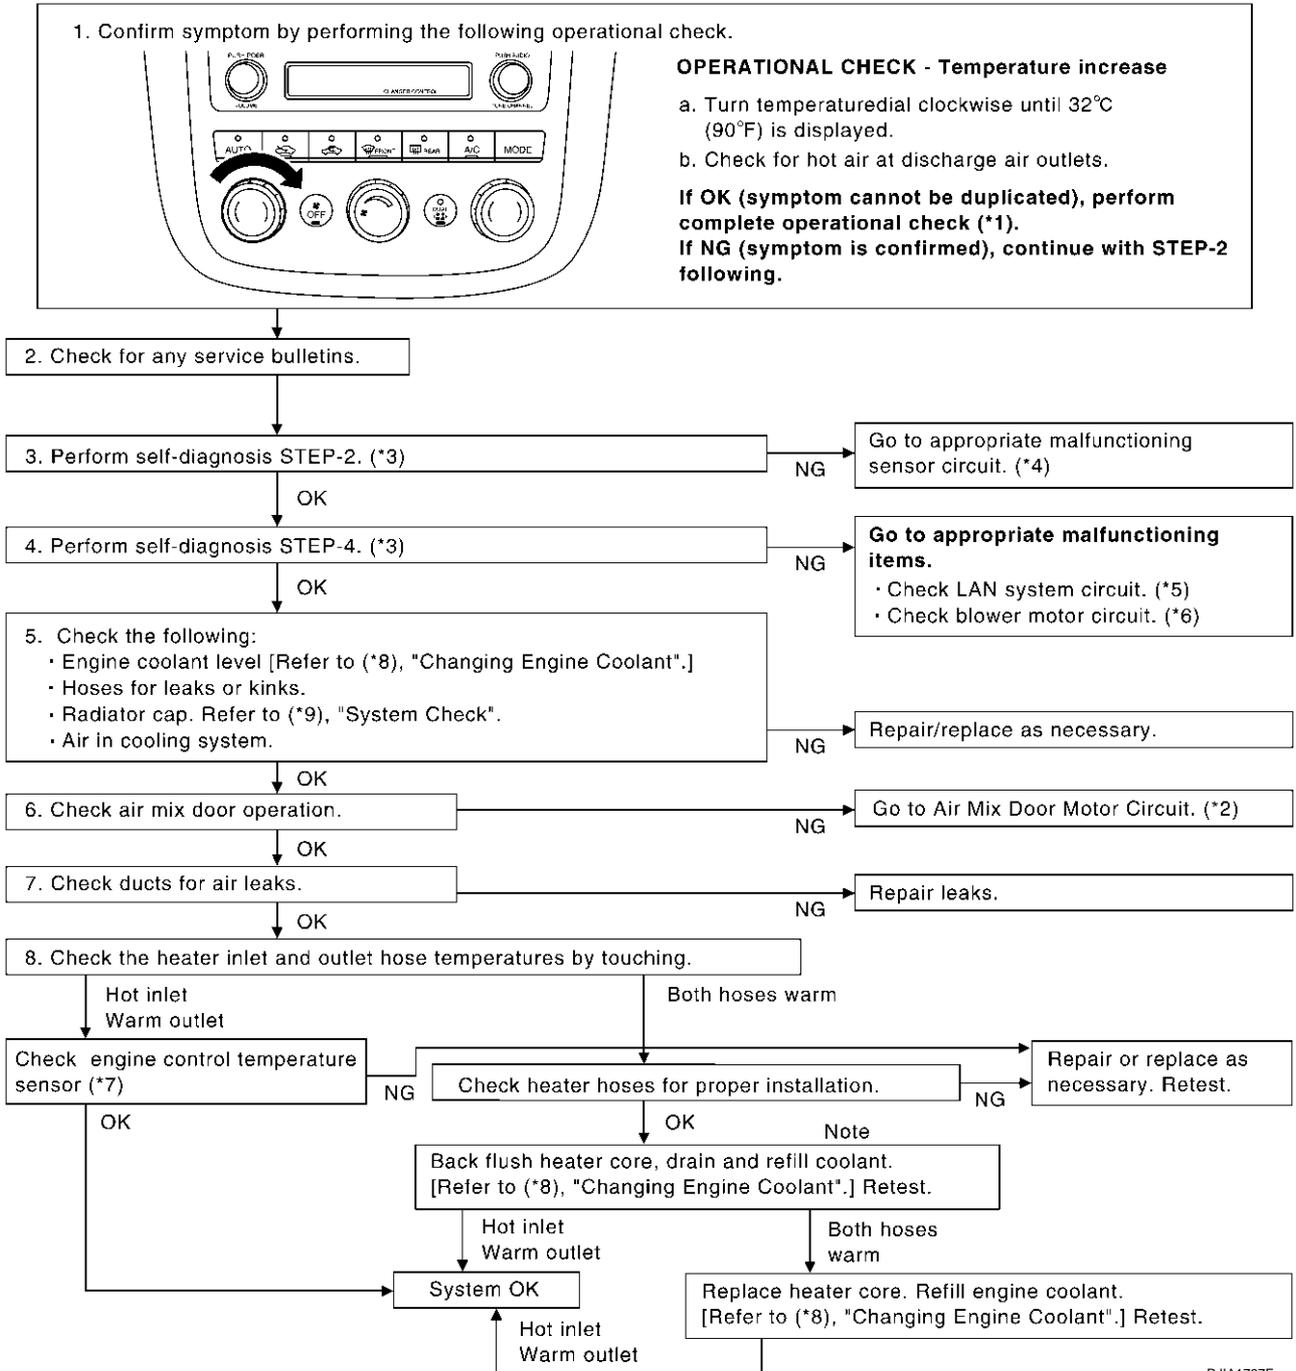

RJIA1797E

*1 [ATC-76. "Operational Check".](#)

*2 [ATC-87. "Air Mix Door Motor Circuit".](#)

*3 [ATC-69. "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 4 to 6.

*4 [ATC-69. "FUNCTION CONFIRMATION PROCEDURE"](#), see No.13.

*5 [ATC-81. "LAN System Circuit".](#)

*6 [ATC-93. "Blower Motor Circuit".](#)

*7 [EC-203. "DTC P0117, P0118 ECT SENSOR".](#)

*8 [CO-8. "Changing Engine Coolant".](#)

*9 [CO-14. "Checking Radiator Cap".](#)


TROUBLE DIAGNOSIS

AJS000ZF

Noise

SYMPTOM: Noise

INSPECTION FLOW

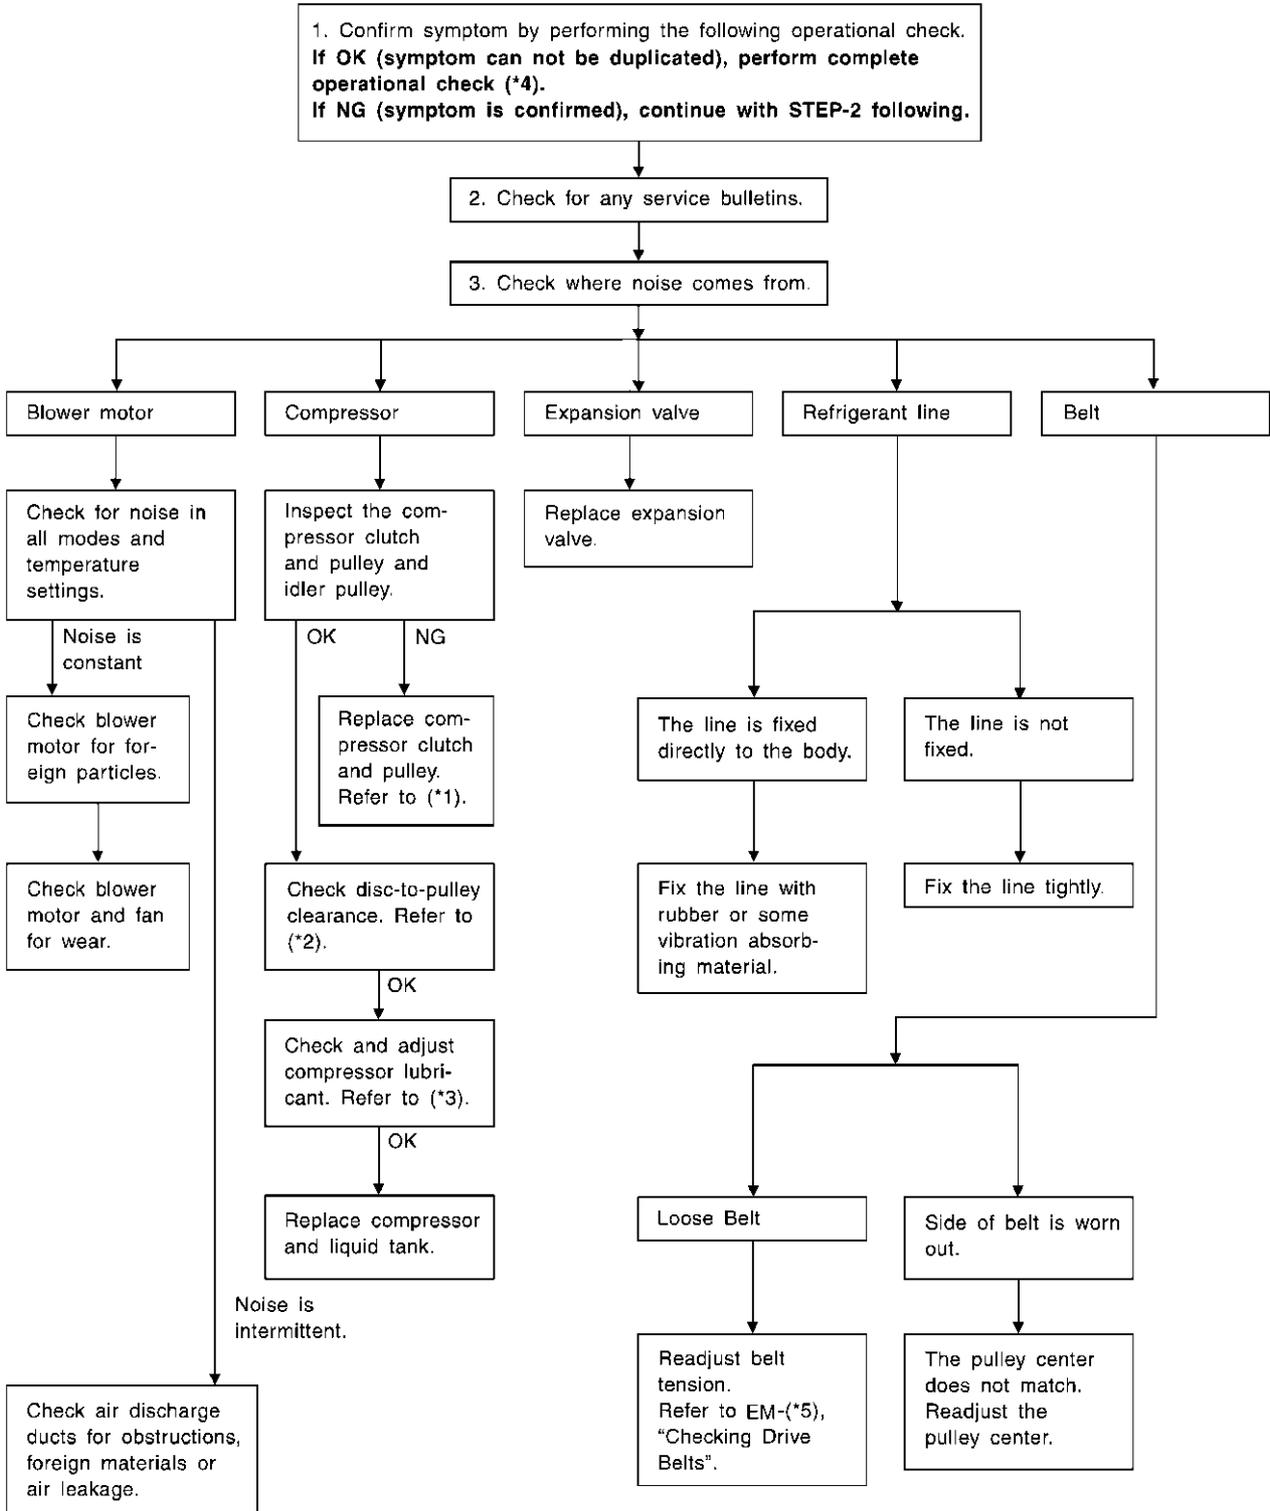

RJIA1596E

*1 Compressor Clutch, [ATC-153, "REMOVAL"](#) .

*2 Compressor Clutch, [ATC-155, "INSTALLATION"](#) .

*3 [ATC-22, "Maintenance of Lubricant Quantity in Compressor"](#).

*4 [ATC-76, "Operational Check"](#).

*5 [EM-11, "Checking Drive Belts"](#).

TROUBLE DIAGNOSIS


AJS000ZG

Self-diagnosis

SYMPTOM: Self-diagnosis cannot be performed.

INSPECTION FLOW


1. Confirm symptom by performing operational check.

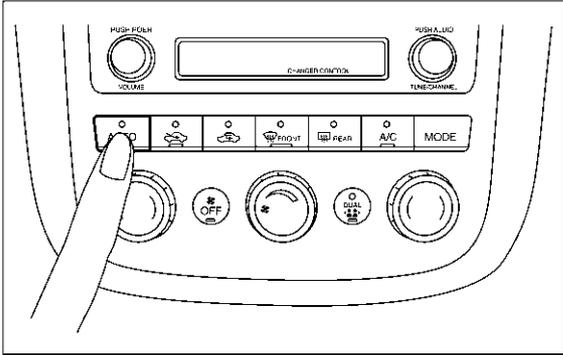

OPERATIONAL CHECK – AUTO mode

- Press AUTO switch and A/C switch.
- Display should indicate AUTO.
Confirm that the compressor clutch engages (Sound or visual inspection.)
(Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

If OK (symptom cannot be duplicated), perform complete operational check (*7).
If NG (symptom is confirmed), continue with STEP-2 following.

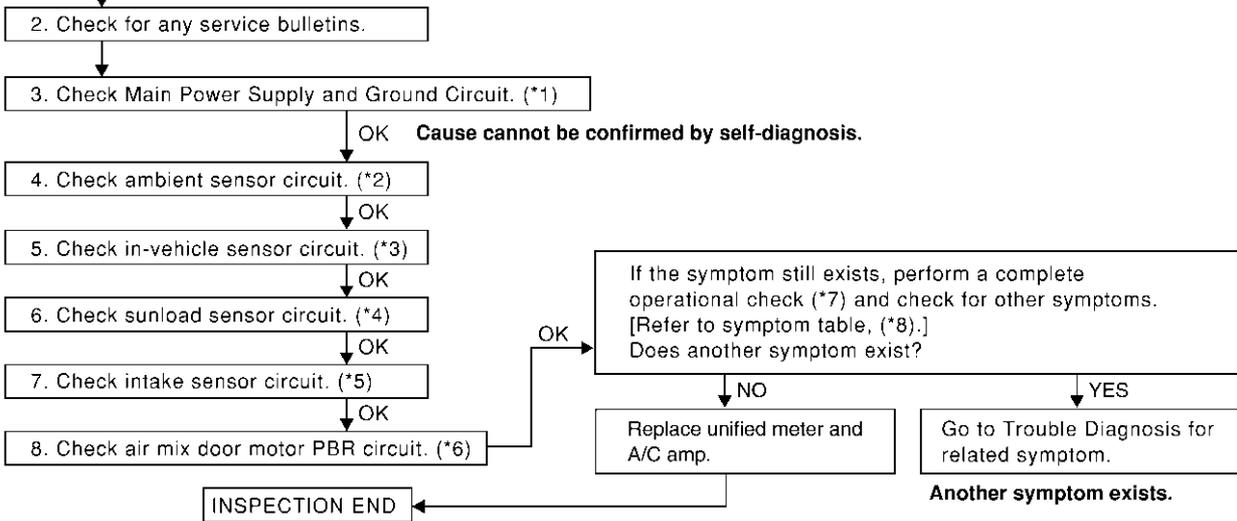

RJIA1798E

- *1 [ATC-78, "Power Supply and Ground Circuit for Auto Amp."](#)
- *2 [ATC-115, "Ambient Sensor Circuit"](#)
- *3 [ATC-118, "In-vehicle Sensor Circuit"](#)
- *4 [ATC-121, "Sunload Sensor Circuit"](#)
- *5 [ATC-124, "Intake Sensor Circuit"](#)
- *6 [ATC-89, "Air Mix Door Motor PBR Circuit"](#)
- *7 [ATC-76, "Operational Check"](#)
- *8 [ATC-57, "SYMPTOM TABLE"](#)

A
B
C
D
E
F
G
H
I
K
L
M

ATC

TROUBLE DIAGNOSIS


AJS000ZH

Memory Function

SYMPTOM: Memory function does not operate.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

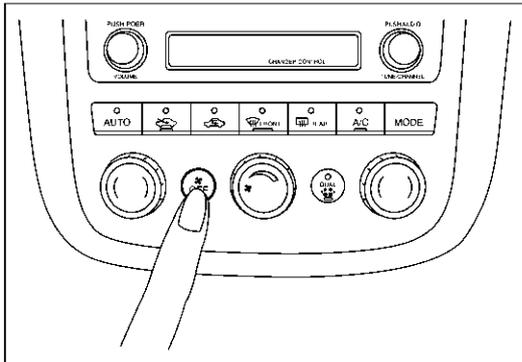

OPERATIONAL CHECK – Memory function

- Set the temperature 90°F or 32°C.
- Press OFF switch.
- Turn the ignition off.
- Turn the ignition on.
- Press the AUTO switch.
- Confirm that the set temperature remains at previous temperature.
- Press OFF switch.

If OK (symptom cannot be duplicated), perform complete operational check (*2).

If NG (symptom is confirmed), continue with STEP-2 following.

2. Check for any service bulletins.

3. Check Main Power Supply and Ground Circuit. (*1)

OK

4. Replace Unified meter and A/C amp.

5. FINAL CHECK

Go to self-diagnosis function confirmation procedure (*3) and perform self-diagnosis STEP-2.
Confirm that code No. 20 is displayed.

*1 [ATC-78. "Power Supply and Ground Circuit for Auto Amp."](#) *2 [ATC-76. "Operational Check"](#).

*3 [ATC-69. "FUNCTION CONFIRMATION PROCEDURE"](#).

RJIA1799E


TROUBLE DIAGNOSIS

AJS00111

Ambient Sensor Circuit COMPONENT DESCRIPTION

Ambient Sensor

The ambient sensor is attached on the radiator core support (left side). It detects ambient temperature and converts it into a resistance value which is then input into the unified meter and A/C amp.

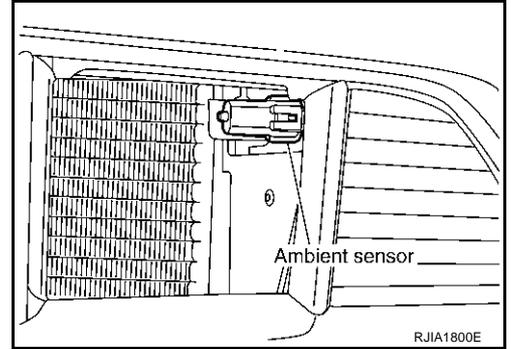


AMBIENT TEMPERATURE INPUT PROCESS

The unified meter and A/C amp. includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the unified meter and A/C amp. function. It only allows the unified meter and A/C amp. to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.

As an example, consider stopping for a few minutes after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front grille area, location of the ambient sensor.

DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR

SYMPTOM: Ambient sensor circuit is open or shorted. (21 or – 21 is indicated on unified meter and A/C amp. As a result of performing Self-diagnosis STEP-2.)

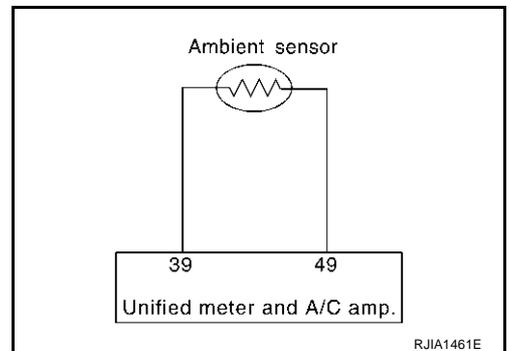


1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR AND GROUND

1. Disconnect ambient sensor connector.
2. Turn ignition switch ON.
3. Check voltage between ambient sensor harness connector E15 terminal 1 (B/R) and ground.

1 – Ground : Approx. 5V

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

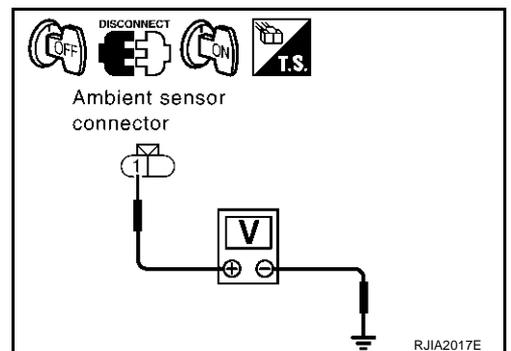

TROUBLE DIAGNOSIS


2. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between ambient sensor harness connector E15 terminal 2 (B/Y) and unified meter and A/C amp. harness connector M51 terminal 49 (B/Y).

2 – 49 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

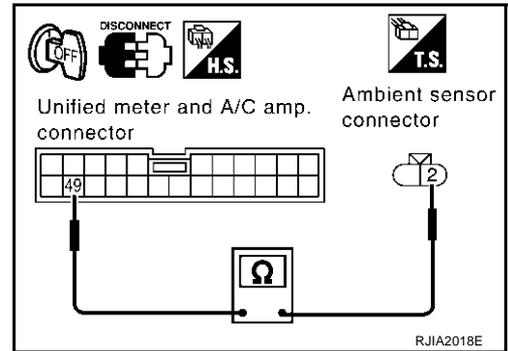

3. CHECK AMBIENT SENSOR

Refer to [ATC-117, "Ambient Sensor"](#) .

OK or NG

- OK >> 1. Replace unified meter and A/C amp.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> 1. Replace ambient sensor.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

4. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between ambient sensor harness connector E15 terminal 1 (B/R) and unified meter and A/C amp. harness connector M51 terminal 39 (B/R).


1 – 39 : Continuity should exist.

4. Check continuity between ambient sensor harness connector E15 terminal 1 (B/R) and ground.

1 – Ground : Continuity should not exist.

OK or NG

- OK >> 1. Replace unified meter and A/C amp.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP -2. Confirm that code No. 20 is displayed.
- NG >> Repair harness or connector.

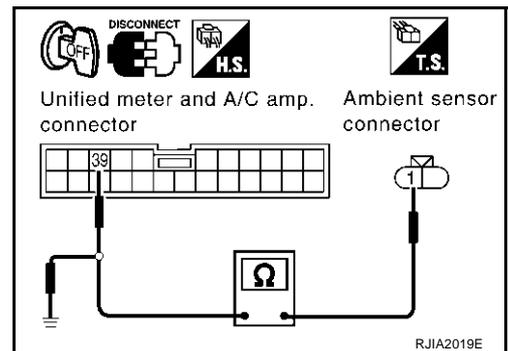

TROUBLE DIAGNOSIS


COMPONENT INSPECTION

Ambient Sensor

After disconnecting ambient sensor connector, measure resistance between terminals 2 and 1 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

If NG, replace ambient sensor.

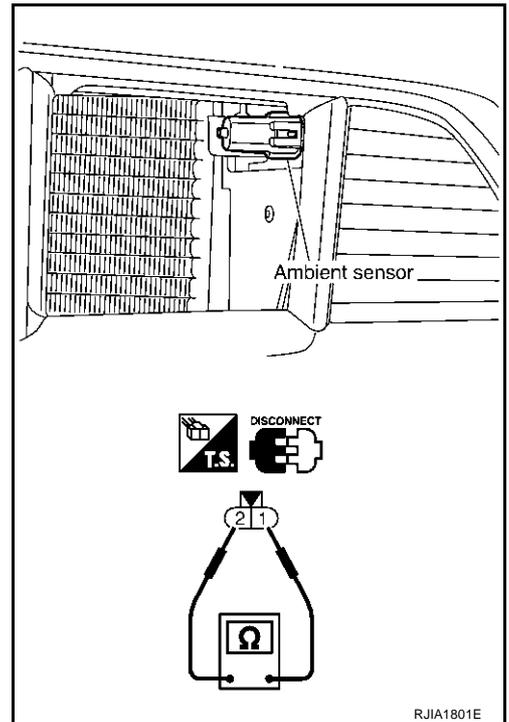

A
B
C
D
E
F
G
H
I

ATC

K
L
M


TROUBLE DIAGNOSIS

In-vehicle Sensor Circuit COMPONENT DESCRIPTION

AJS00112



In-vehicle Sensor

The in-vehicle sensor is located on instrument driver lower panel. It converts variations in temperature of compartment air drawn from the aspirator into a resistance value. It is then input into the unified meter and A/C amp.

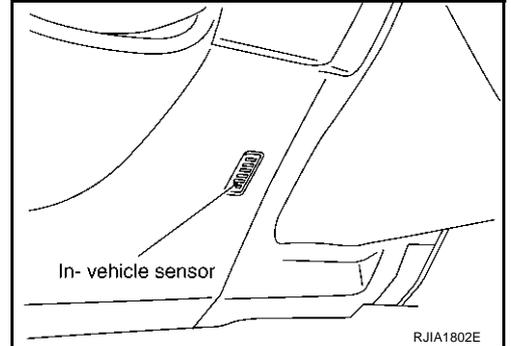

Aspirator


The aspirator is located on driver's side of heater & cooling unit. It produces vacuum pressure due to air discharged from the heater & cooling unit, continuously taking compartment air in the aspirator.

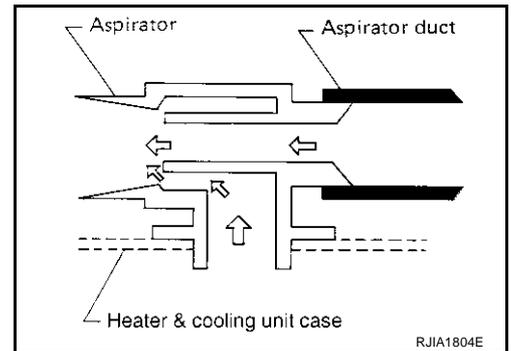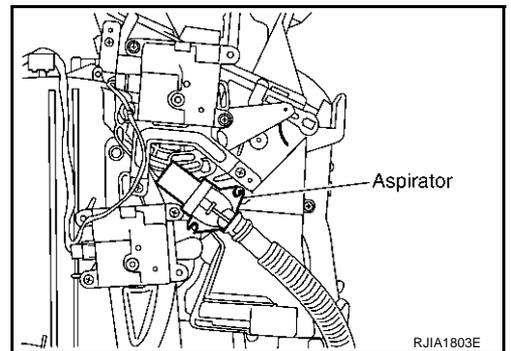

TROUBLE DIAGNOSIS

DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR

SYMPTOM: In-vehicle sensor circuit is open or shorted. (22 or -22 is indicated on unified meter and A/C amp. as a result of performing Self-diagnosis STEP-2.)

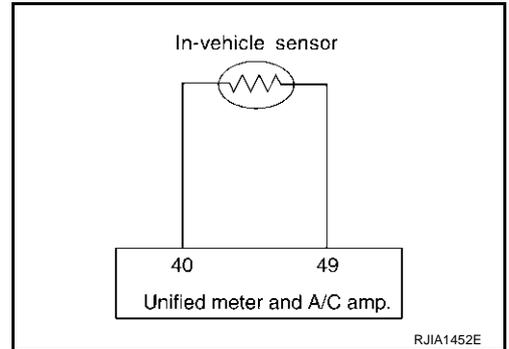


1. CHECK VOLTAGE BETWEEN IN-VEHICLE SENSOR AND GROUND

1. Disconnect in-vehicle sensor connector.
2. Turn ignition switch ON.
3. Check voltage between in-vehicle sensor harness connector M52 terminal 1 (LG) and ground.

1 – Ground : **Approx. 5V**

OK or NG

- OK >> GO TO 2.
NG >> GO TO 4.

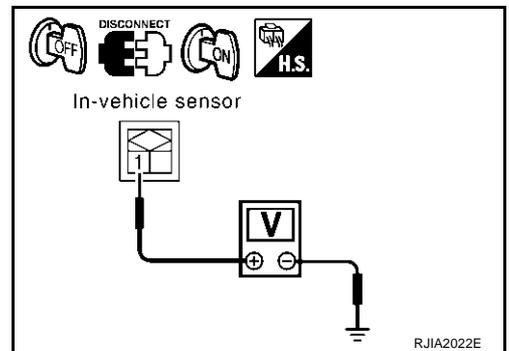


2. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between in-vehicle sensor harness connector M52 terminal 2 (B/Y) and unified meter and A/C amp. harness connector M51 terminal 49 (B/Y).

2 – 49 : **Continuity should exist.**

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

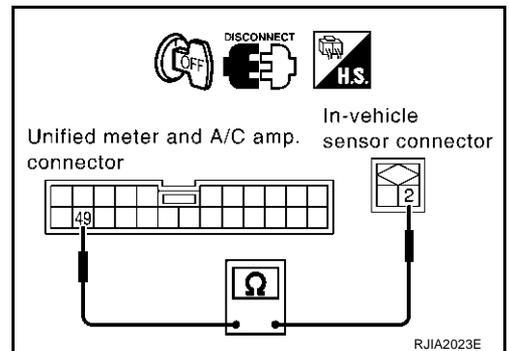

3. CHECK IN-VEHICLE SENSOR

Refer to [ATC-120, "In-vehicle Sensor"](#) .

OK or NG

- OK >> 1. Replace unified meter and A/C amp.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> 1. Replace in-vehicle sensor.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

TROUBLE DIAGNOSIS


4. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between in-vehicle sensor harness connector M52 terminal 1 (LG) and unified meter and A/C amp. harness connector M51 terminal 40 (LG).

1 – 40 : Continuity should exist.

4. Check continuity between in-vehicle sensor harness connector M52 terminal 1 (LG) and ground.

1 – Ground : Continuity should not exist.

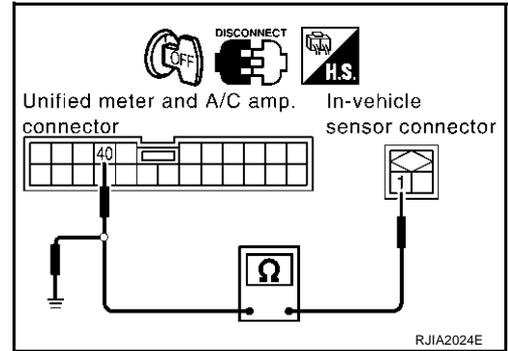

OK or NG

OK >> 1. Replace unified meter and A/C amp.

2. Go to self-diagnosis [ATC-69. "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

NG >> Repair harness or connector.


COMPONENT INSPECTION

In-vehicle Sensor

After disconnecting in-vehicle sensor connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

If NG, replace in-vehicle sensor.

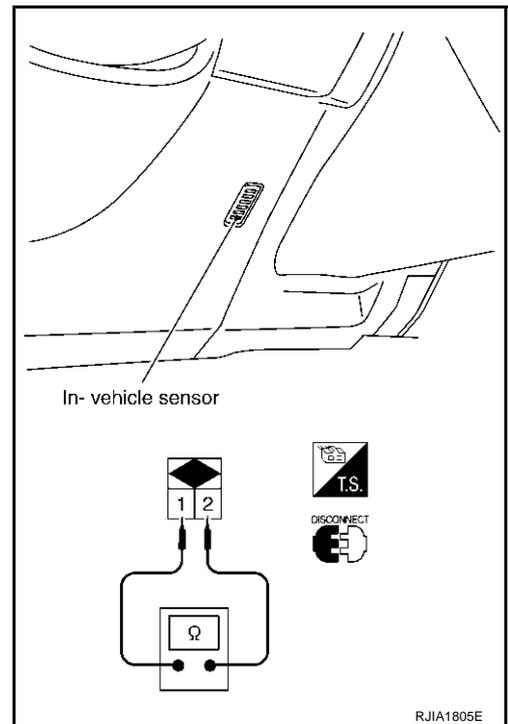


TROUBLE DIAGNOSIS

Sunload Sensor Circuit COMPONENT DESCRIPTION

AJS00113

Sunload Sensor

The sunload sensor is located on the passenger side front defroster grille. It detects sunload entering through windshield by means of a photo diode. The sensor converts the sunload into a current value which is then input into the unified meter and A/C amp.

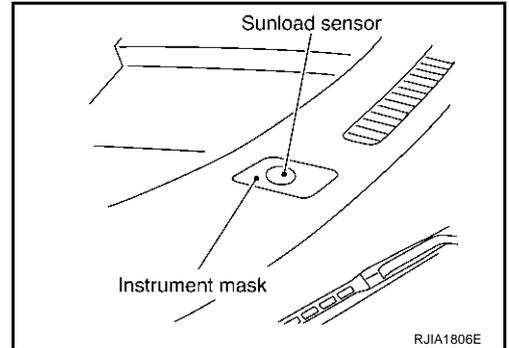


SUNLOAD INPUT PROCESS

The unified meter and A/C amp. also includes a processing circuit which averages the variations in detected sunload over a period of time. This prevents drastic swings in the ATC system operation due to small or quick variations in detected sunload.

For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the sunload sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the ATC system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.

DIAGNOSTIC PROCEDURE FOR SUNLOAD SENSOR

SYMPTOM: Sunload sensor circuit is open or shorted. (25 or -25 is indicated on unified meter and A/C amp. as a result of performing Self-diagnosis STEP-2.)

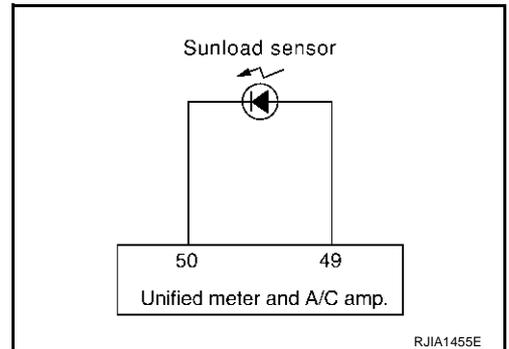

1. CHECK VOLTAGE BETWEEN SUNLOAD SENSOR AND GROUND


1. Disconnect sunload sensor connector.
2. Turn ignition switch ON.
3. Check voltage between sunload sensor harness connector M79 terminal 1 (O) and ground.

1 – Ground

: Approx. 5V

OK or NG

- OK >> GO TO 2.
NG >> GO TO 4.

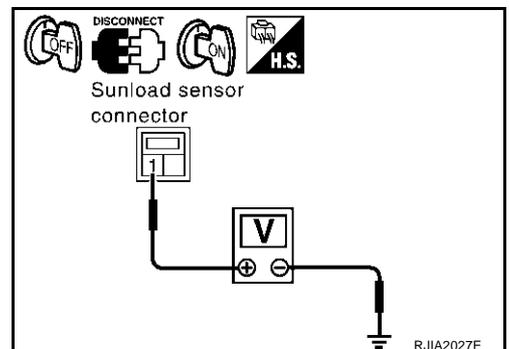

TROUBLE DIAGNOSIS


2. CHECK CIRCUIT CONTINUITY BETWEEN SUNLOAD SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between sunload sensor harness connector M79 terminal 2 (B/Y) and unified meter and A/C amp. harness connector M51 terminal 49 (B/Y).

2 – 49 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

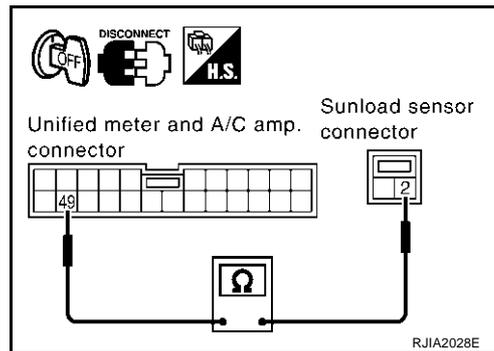

3. CHECK SUNLOAD SENSOR

Refer to [ATC-123, "Sunload Sensor"](#).

OK or NG

- OK >> 1. Replace unified meter and A/C amp.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> 1. Replace sunload sensor.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.

4. CHECK CIRCUIT CONTINUITY BETWEEN SUNLOAD SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between sunload sensor harness connector M79 terminal 1 (O) and display and A/C auto amp. harness connector M51 terminal 50 (O).


1 – 50 : Continuity should exist.

4. Check continuity between sunload sensor harness connector M79 terminal 1 (O) and ground.

1 – Ground : Continuity should not exist.

OK or NG

- OK >> 1. Replace unified meter and A/C amp.
2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG >> Repair harness or connector.

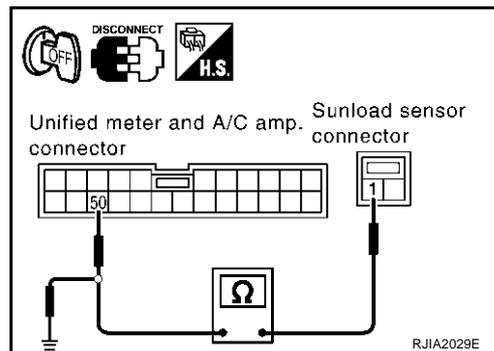


TROUBLE DIAGNOSIS

COMPONENT INSPECTION


Sunload Sensor

Measure voltage between unified meter and A/C amp. harness connector M51 terminal 50 (O) and ground.

If NG, replace sunload sensor.

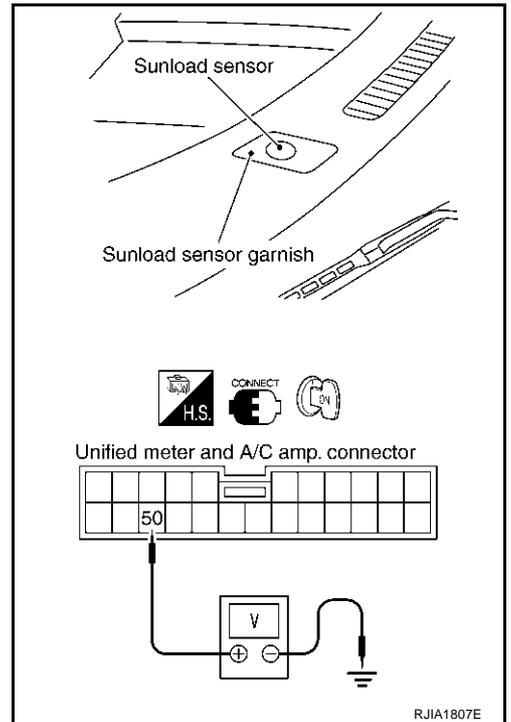

- When checking sunload sensor, select a place where sun shines directly on it.

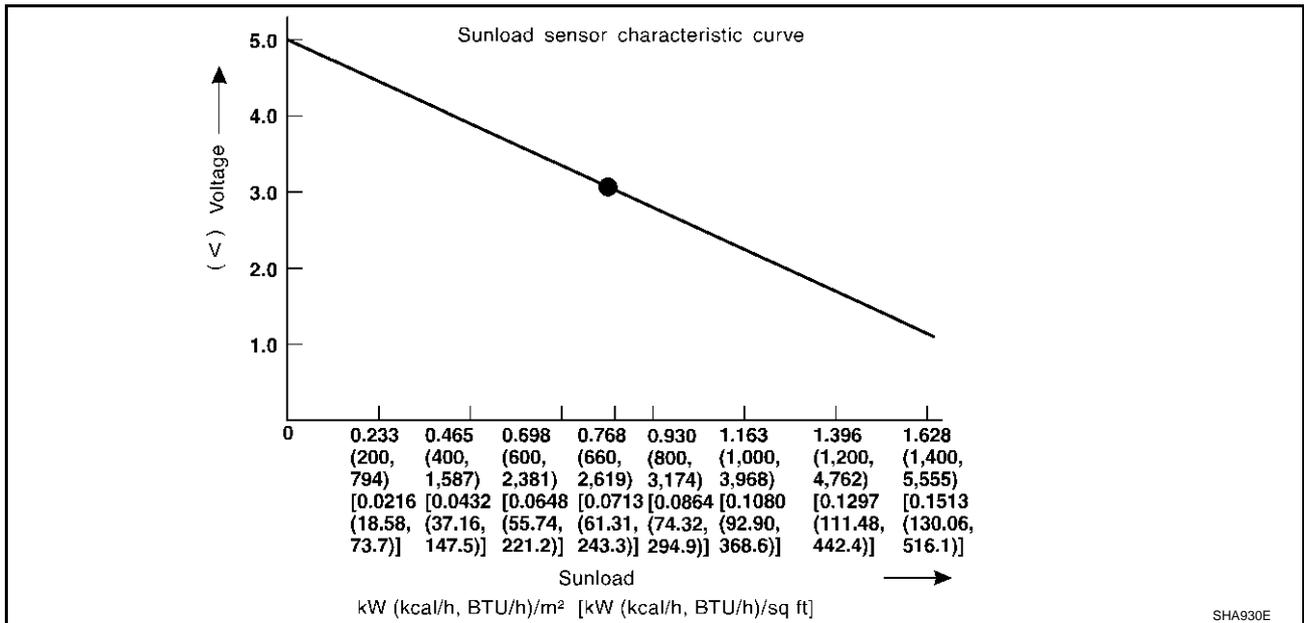


TROUBLE DIAGNOSIS

AJS00114

Intake Sensor Circuit COMPONENT DESCRIPTION


Intake Sensor

The intake sensor is located on the heater & cooling unit. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the unified meter and A/C amp.

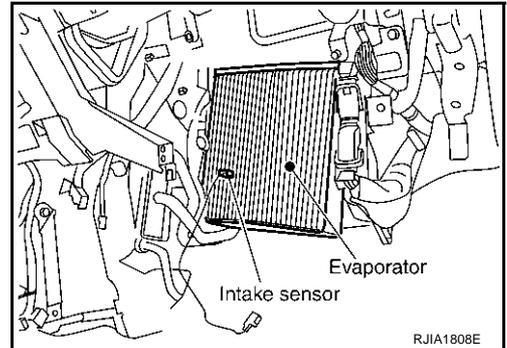

DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted. (24 or -24 is indicated on unified meter and A/C amp. as a result of performing Self-diagnosis STEP-2.)

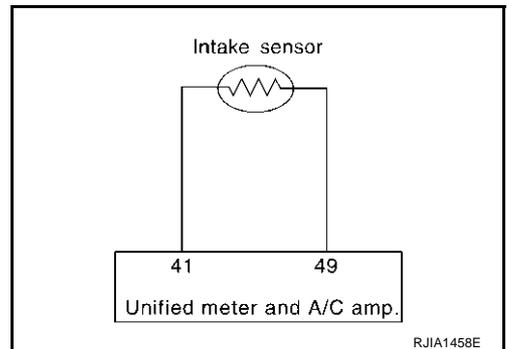


1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND

1. Disconnect intake sensor connector.
2. Turn ignition switch ON.
3. Check voltage between intake sensor harness connector M256 terminal 1 (R/W) and ground.

1 – Ground : **Approx. 5V**

OK or NG

- OK >> GO TO 2.
NG >> GO TO 4.

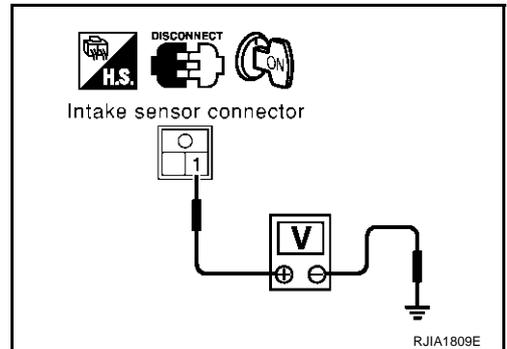


2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND UNIFIED METER AND A/C AMP.

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between intake sensor harness connector M256 terminal 2 (B/Y) and unified meter and A/C amp. harness connector M51 terminal 49 (B/Y).

2 – 49 : **Continuity should exist.**

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

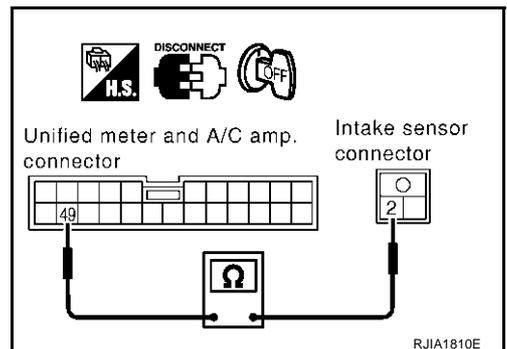

TROUBLE DIAGNOSIS

3. CHECK INTAKE SENSOR

Refer to [ATC-125, "Intake Sensor"](#) .

OK or NG

- OK** >> 1. Replace unified meter and A/C amp.
 2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG** >> 1. Replace intake sensor.
 2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.


4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND UNIFIED METER AND A/C AMP.

- Turn ignition switch OFF.
- Disconnect unified meter and A/C amp. connector.
- Check continuity between intake sensor harness connector M256 terminal 1 (R/W) and unified meter and A/C amp. harness connector M51 terminal 41 (R/Y).

1 – 41 : Continuity should exist.

- Check continuity between intake sensor harness connector M256 terminal 1 (R/W) and ground.

1 – Ground : Continuity should not exist.

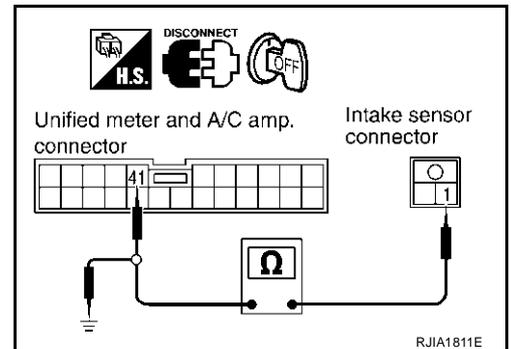

OK or NG

- OK** >> 1. Replace unified meter and A/C amp.
 2. Go to self-diagnosis [ATC-69, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2. Confirm that code No. 20 is displayed.
- NG** >> Repair harness or connector.


COMPONENT INSPECTION

Intake Sensor

After disconnecting intake sensor connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	18.63
-10 (14)	14.14
-5 (23)	10.85
0 (32)	8.40
5 (41)	6.57
10 (50)	5.18
15 (59)	4.12
20 (68)	3.30
25 (77)	2.66
30 (86)	2.16
35 (95)	1.77
40 (104)	1.46
45 (113)	1.21

If NG, replace intake sensor.

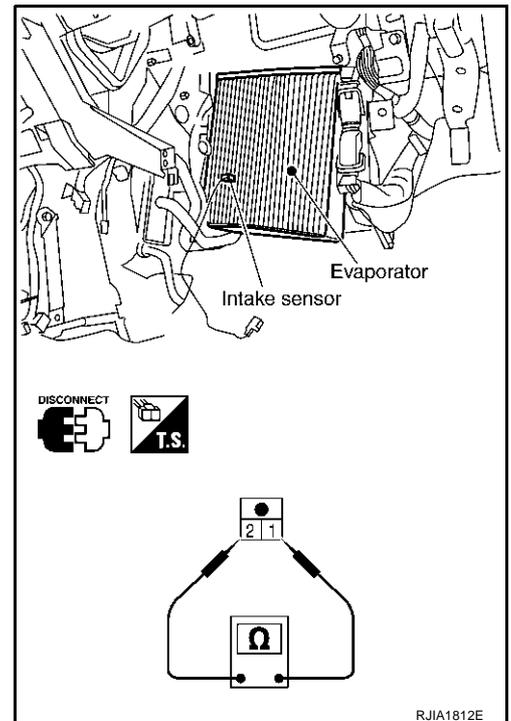

CONTROLLER

CONTROLLER

PDF:27500

Removal and Installation of A/C and AV Switch REMOVAL

AJS0002N

Refer to [AV-57, "Removal and Installation for A/C and AV Switch"](#).

INSTALLATION

Installation is basically the reverse order of removal.

AUTO AMP

AUTO AMP


PFP:27760

Removal and Installation of Unified Meter and A/C Amp.

AJS000ZP

REMOVAL

1. Remove A/C and AV switch from audio unit. Refer to [AV-57, "Removal and Installation for A/C and AV Switch"](#).
2. Remove the fixing screws, then remove the unified meter and A/C amp.

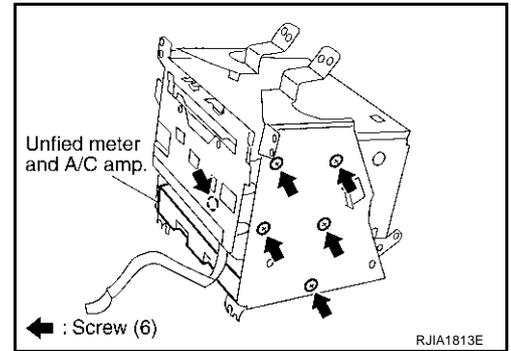

INSTALLATION

Installation is basically the reverse order of removal.

A
B
C
D
E
F
G
H
I

ATC

K
L
M

AMBIENT SENSOR

AMBIENT SENSOR


PFP:27722

Removal and Installation

AJS000ZR

REMOVAL

1. Remove ambient sensor from bracket.
2. Disconnect ambient sensor connector, then remove it.

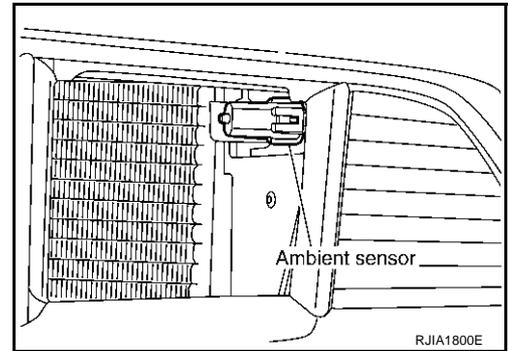

INSTALLATION

Installation is basically the reverse order of removal.

IN-VEHICLE SENSOR

IN-VEHICLE SENSOR


PFP:27720

Removal and Installation

AJS000ZS

REMOVAL

1. Remove instrument driver lower panel. Refer to [IP-11, "Removal and Installation"](#).
2. Remove in-vehicle sensor.

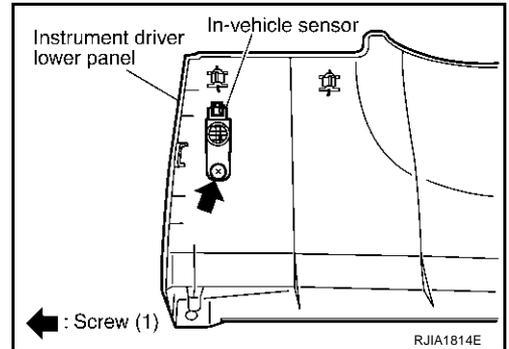

INSTALLATION

Installation is basically the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

SUNLOAD SENSOR

SUNLOAD SENSOR


PFP:27721

Removal and Installation

AJS000ZT

REMOVAL

1. Remove instrument mask (right side). Refer to [IP-11, "Removal and Installation"](#).
2. Disconnect sunload sensor connector, then remove sunload sensor.

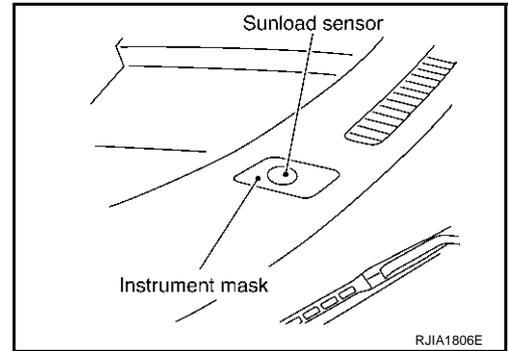

INSTALLATION

Installation is basically the reverse order of removal.

INTAKE SENSOR

INTAKE SENSOR

PFP:27723

Removal and Installation


AJS000ZU

1. Set the temperature at 18°C (60°F), and then disconnect the battery negative cable.
2. Use a refrigerant collecting equipment (for HFC-134a) to discharge refrigerant.
3. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
4. Remove high-pressure pipe 1 fixing clip.
5. Remove low-pressure flexible hose fixing bolt.
6. Disconnect evaporator-side one-touch joints.
 - a. Set a disconnecter (High-pressure side: 92530-89908, Low-pressure side: 92530-89916) on A/C piping.
 - b. Slide a disconnecter toward vehicle front until it clicks.
 - c. Slide A/C piping toward vehicle front and disconnect it.


CAUTION:

Seal connection opening of piping with a cap or vinyl tape to avoid exposure to atmosphere.

7. Remove blower unit. Refer to [ATC-133, "BLOWER UNIT"](#) .

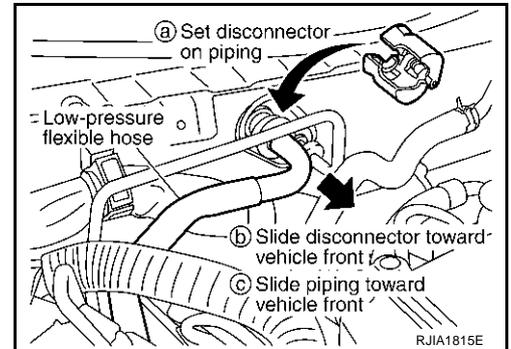


8. Remove air mix door motor (Passenger side).
9. Remove intake sensor connector, foot duct and heater core cover.
10. Remove evaporator cover from heater & cooling unit.

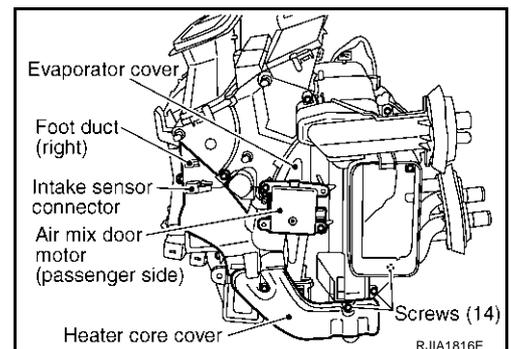


11. Remove the fixing bolt, then remove the low-pressure pipe 2 and high-pressure pipe 2.

CAUTION:

Seal connection opening of piping with a cap or vinyl tape to avoid exposure to atmosphere.

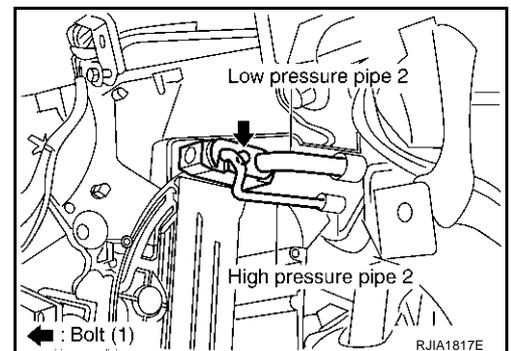

12. Slide the evaporator to passenger side, then remove the intake sensor.

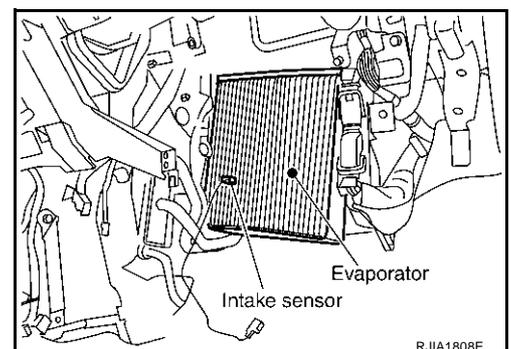

A
B
C
D
E
F
G
H
I
K
L
M

ATC

INTAKE SENSOR

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new ones. Before installing, apply compressor oil to them.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to make sure piping does not come off.

BLOWER UNIT

BLOWER UNIT

PFP:27200

Removal and Installation

AJS000ZV



REMOVAL

1. Remove instrument passenger lower panel. Refer to [IP-11, "Removal and Installation"](#).
2. Remove ECM with bracket attached.
3. Remove fixing nuts (2), then fixing bolts (2) and screw (1), then remove blower unit.

CAUTION:

Move blower unit rightward, and remove locating pin (1) and joint. Then remove blower unit downward.

4. Disconnect intake door motor connector and blower fan motor connector.
5. Remove harness clips (2) from blower unit.
6. Remove blower unit.

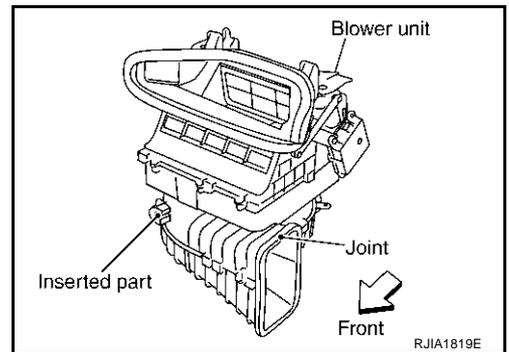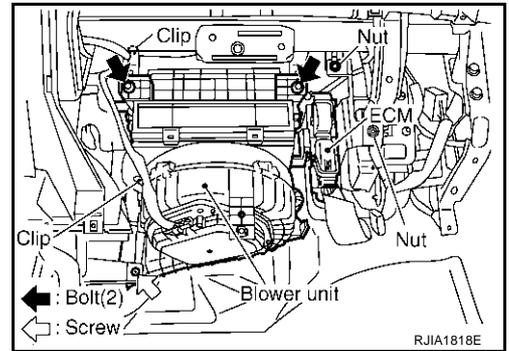

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

Make sure locating pin (1) and joint are securely inserted.

A
B
C
D
E
F
G
H
I


ATC

K
L
M

BLOWER UNIT

Disassembly and Assembly


AJS000ZW

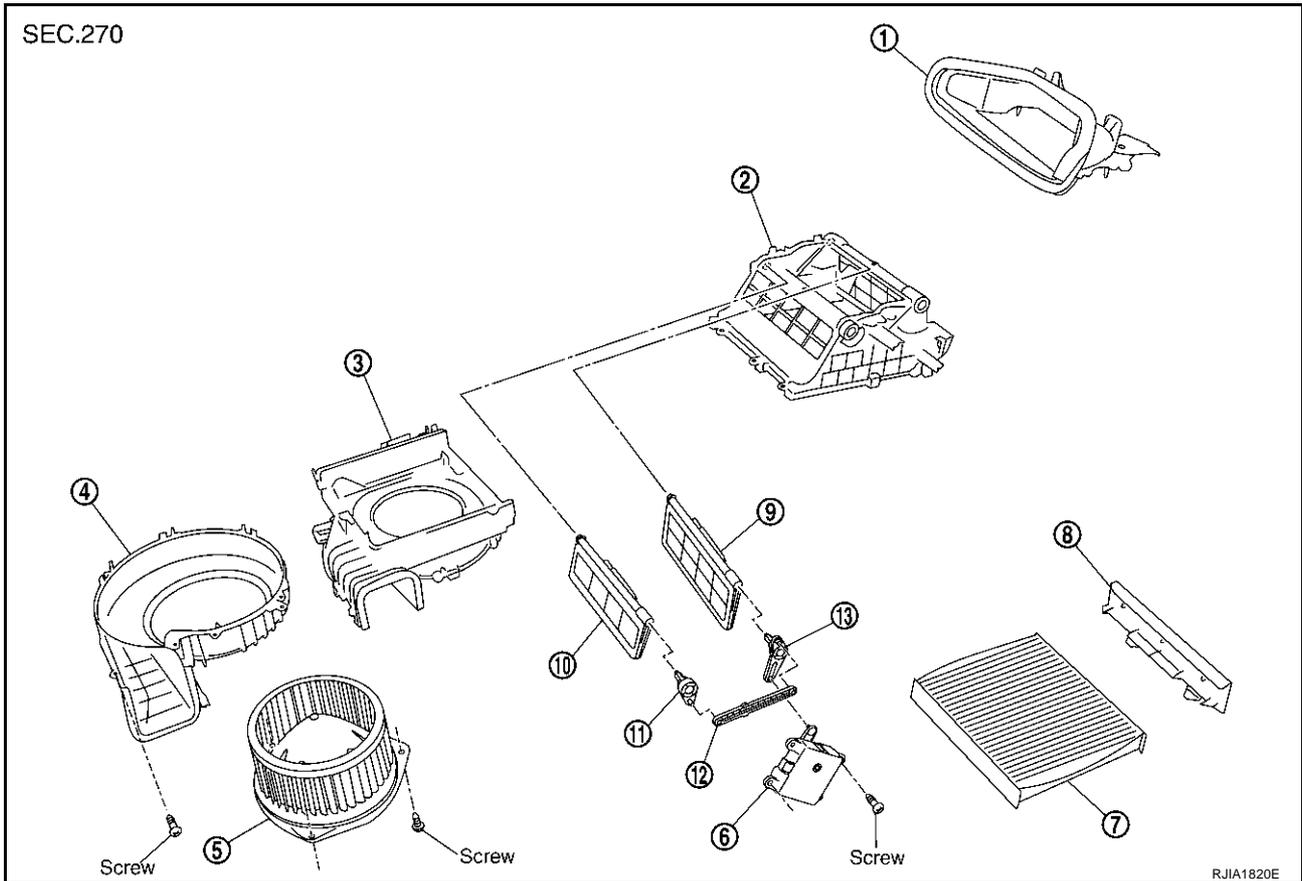

- | | | |
|-------------------------|------------------------------|----------------------|
| 1. Intake adapter | 2. Intake box case | 3. Intake upper case |
| 4. Intake lower case | 5. Blower fan motor assembly | 6. Intake door motor |
| 7. In-cabin microfilter | 8. Filter cover | 9. Intake door 2 |
| 10. Intake door 1 | 11. Intake door lever 1 | 12. Intake door link |
| 13. Intake door lever 2 | | |

CAUTION:

If retaining tabs are damaged while disassembling blower unit, use 7 screws (27111-2Y000) to assemble blower unit.

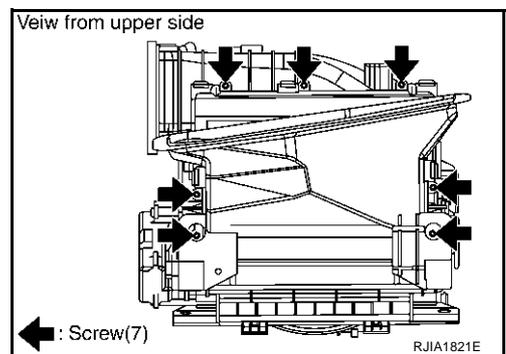

BLOWER MOTOR


BLOWER MOTOR

PF2:27226

Removal and Installation

REMOVAL

1. Remove instrument passenger lower panel. Refer to [IP-11, "Removal and Installation"](#).
2. Disconnect blower motor connector.
3. Remove screws from blower motor, then remove it.

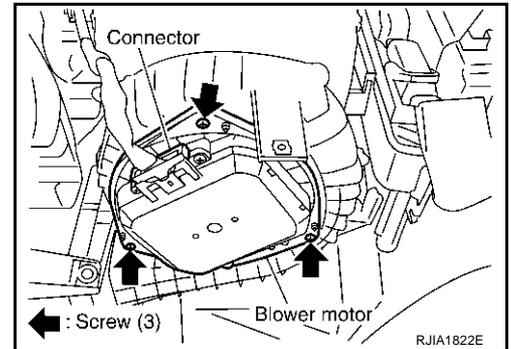

INSTALLATION

Installation is basically the reverse order of removal.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

INTAKE DOOR MOTOR

INTAKE DOOR MOTOR


PFP:27730

Removal and Installation

AJS000ZY

REMOVAL

1. Remove blower unit. Refer to [ATC-133, "BLOWER UNIT"](#).
2. Remove intake door motor from the blower unit.

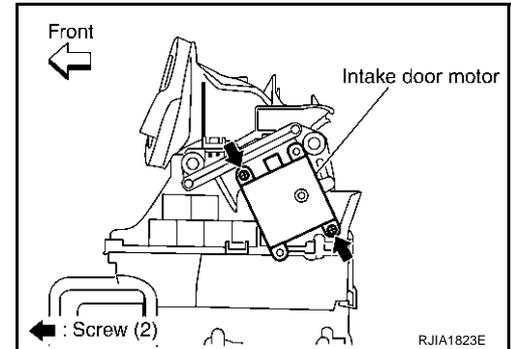

INSTALLATION

Installation is basically the reverse order of removal.

IN-CABIN MICROFILTER


IN-CABIN MICROFILTER

PFP:27277

Removal and Installation FUNCTION

AJS000ZZ

Air inside passenger compartment is kept clean at either recirculation or fresh mode by installing in-cabin microfilter into blower unit.

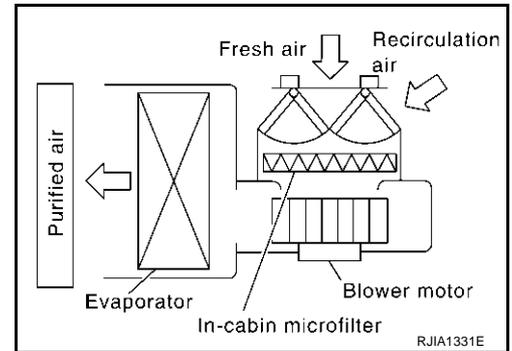

REPLACEMENT TIMING


Replace in-cabin microfilter.

Refer to [MA-8, "CHASSIS AND BODY MAINTENANCE"](#) in SCHEDULE 1 and [MA-9, "CHASSIS AND BODY MAINTENANCE"](#) in SCHEDULE 2.

Caution label is fixed inside the glove box.

REPLACEMENT PROCEDURES

1. Remove the instrument passenger lower panel. Refer to [IP-11, "Removal and Installation"](#).
2. Remove the filter cover, then remove the in-cabin microfilter.
3. Take out the in-cabin microfilter from blower unit.
4. Replace with new one and reinstall on blower unit.
5. Reinstall the glove box.

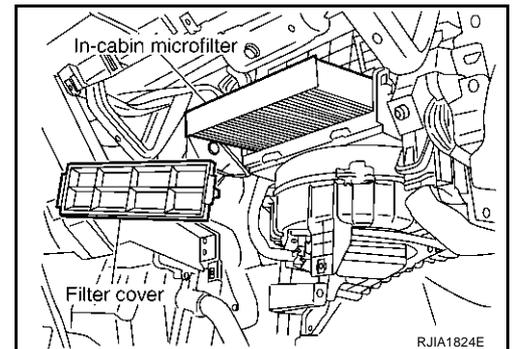

A
B
C
D
E
F
G
H
I
ATC
K
L
M

HEATER & COOLING UNIT ASSEMBLY

HEATER & COOLING UNIT ASSEMBLY

PFP:27110


Removal and Installation REMOVAL

AJS00100


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge refrigerant.
2. Drain coolant from cooling system. Refer to [CO-8, "Changing Engine Coolant"](#) .
3. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
4. Disconnect evaporator-side one-touch joints.
 - a. Set a disconnecter (High-pressure side: 92530-89908, Low-pressure side: 92530-89916) on A/C piping.
 - b. Slide a disconnecter toward vehicle front until it clicks.
 - c. Slide A/C piping toward vehicle front and disconnect it.

CAUTION:


Seal connection opening of piping with a cap or vinyl tape to avoid exposure to atmosphere.

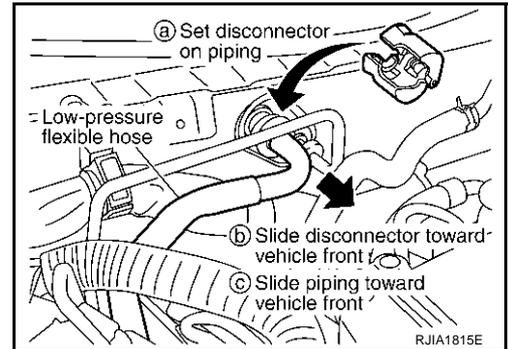


5. Disconnect two heater hoses from heater core.
6. Remove instrument panel assembly. Refer to [IP-11, "Removal and Installation"](#) .
7. Remove blower unit. Refer to [ATC-133, "BLOWER UNIT"](#) .
8. Remove clips of vehicle harness from steering member.

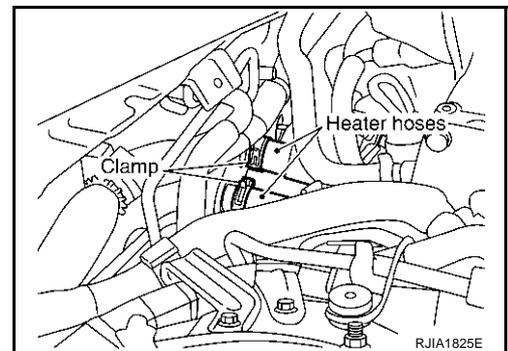


9. Remove instrument stays (driver side and passenger side).
10. Remove rear ventilator duct1 and front floor duct. Refer to [ATC-147, "Removal of Rear Ventilator Ducts"](#) and [ATC-148, "Removal of Floor Ducts"](#) .

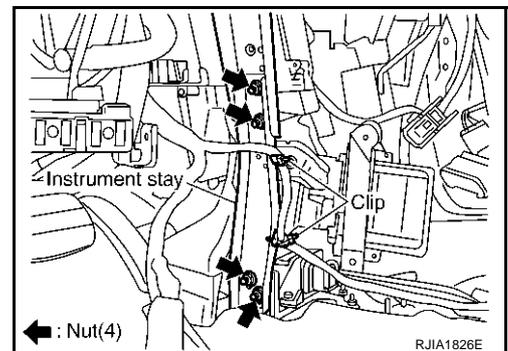

HEATER & COOLING UNIT ASSEMBLY

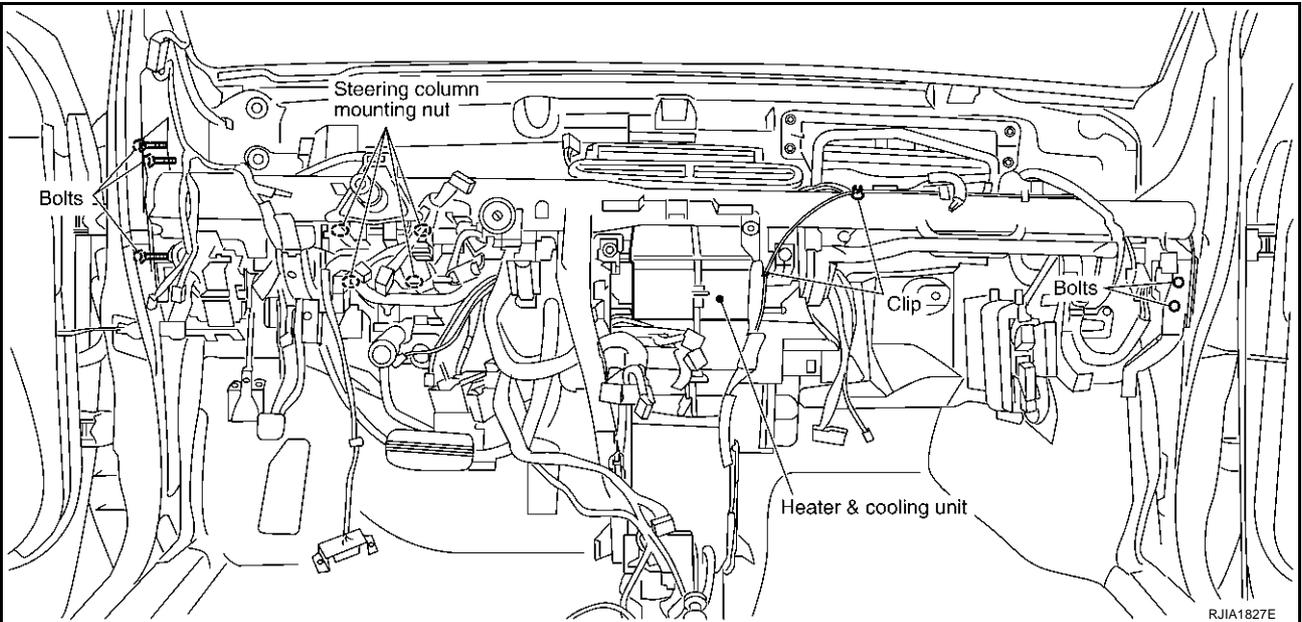

11. Remove mounting screws from heater & cooling unit.
12. Remove the steering member, and then remove heater & cooling unit.

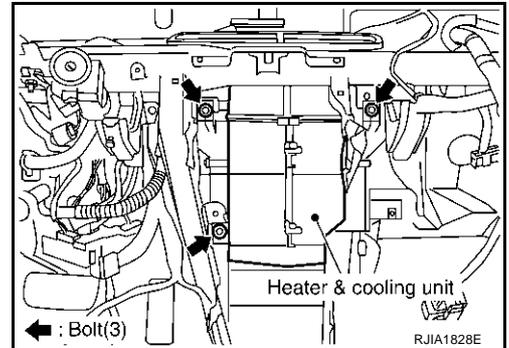

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new one, then apply compressor oil to it when installing it.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to check that piping does not come off.
- When recharging refrigerant, check for leaks.

NOTE:

- When filling radiator with coolant, refer to [CO-8. "Changing Engine Coolant"](#) .
- Recharge the refrigerant.

Heater & cooling unit mounting bolt

Tightening torque : 5.98 - 7.65 N-m (0.61 - 0.78 kg-m, 53 - 67 in - lb)

Steering member mounting nut and bolt


Tightening torque : 11 - 13 N-m (1.1 - 1.4 kg-m, 8.2 - 9.5 ft - lb)

HEATER & COOLING UNIT ASSEMBLY

Disassembly and Assembly

AJS00101

SEC.270·271

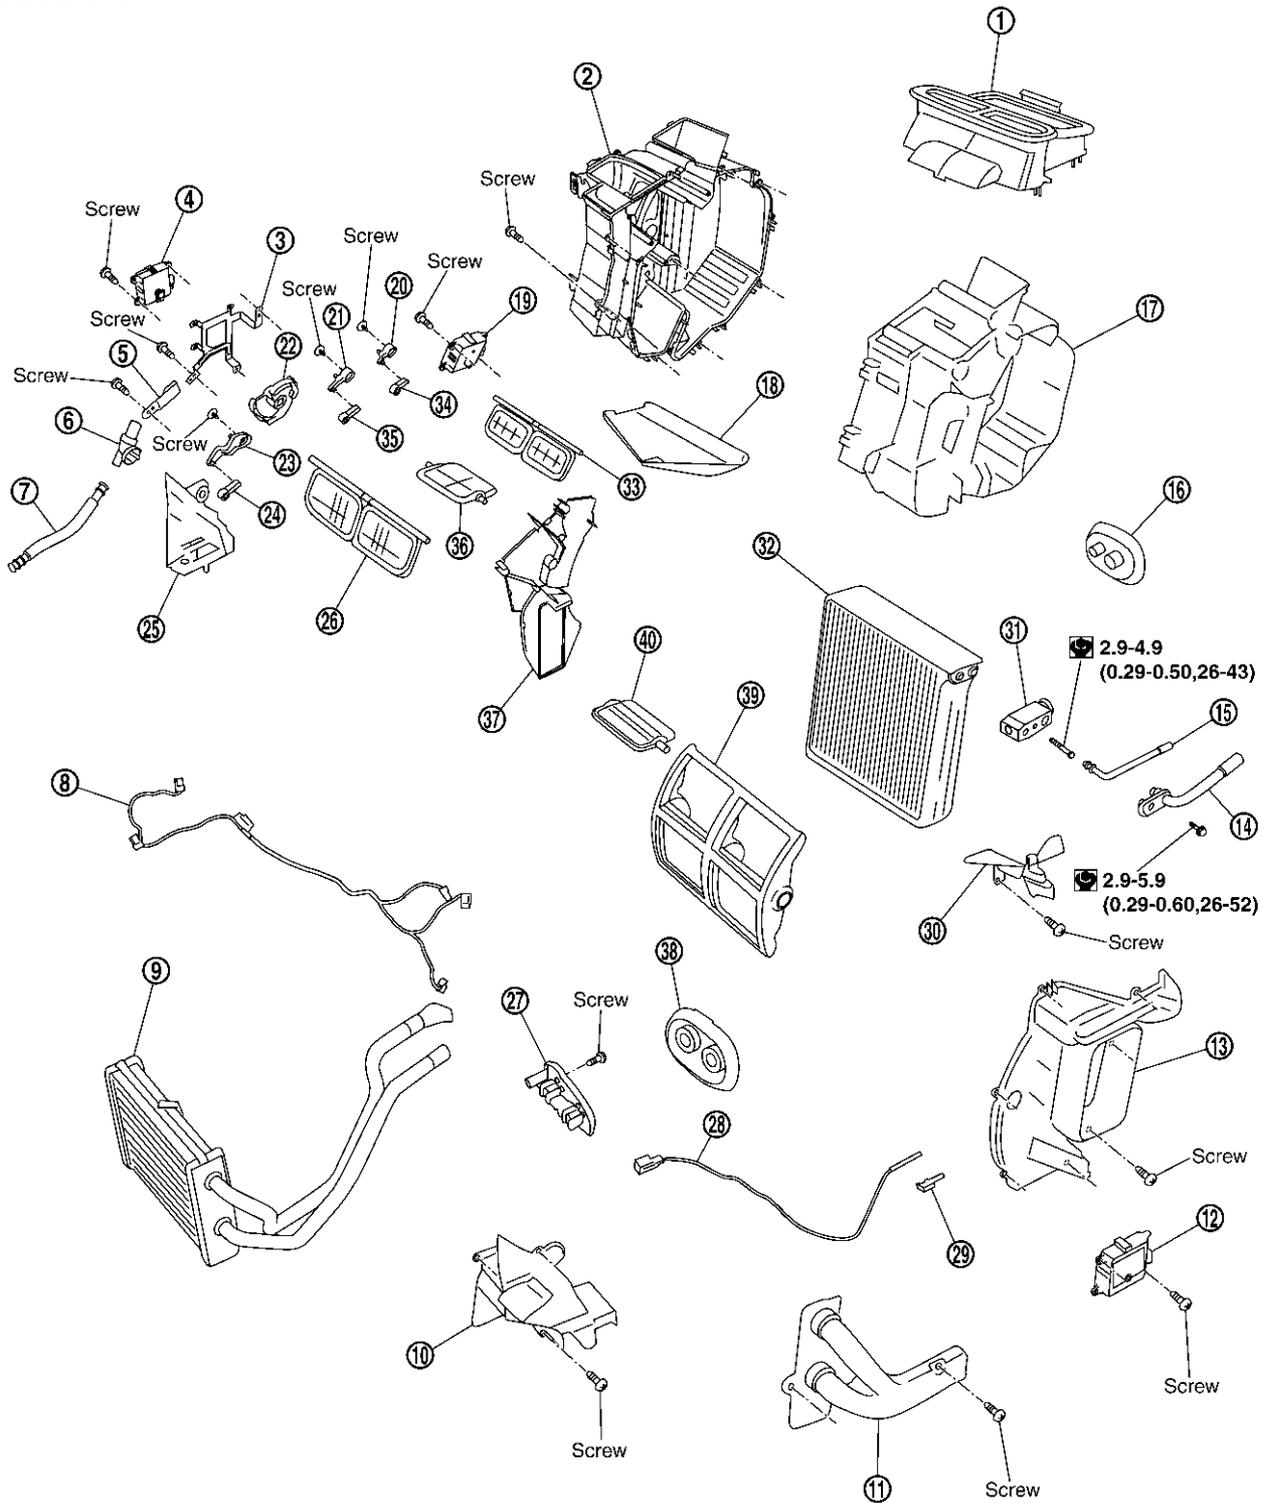

☑ : N·m (kg·m, in·lb)

RJA1829E

- | | | |
|-----------------------|-----------------------------------|-----------------------------------------|
| 1. Adaptor duct | 2. Heater & cooling case (left) | 3. Mode door motor bracket |
| 4. Mode door motor | 5. Instrument lower cover bracket | 6. Aspirator |
| 7. Aspirator duct | 8. Sub harness | 9. Heater core |
| 10. Foot duct (right) | 11. Heater core cover | 12. Air mix door motor (passenger side) |
| 13. Evaporator cover | 14. Low-pressure pipe 2 | 15. High-pressure pipe 2 |
| 16. Cooler grommet | 17. Heater & cooling case (right) | 18. Insulator |

HEATER & COOLING UNIT ASSEMBLY

- | | | |
|--------------------------------------|---------------------------|---------------------------|
| 19. Air mix door motor (driver side) | 20. Defroster door lever | 21. Max. cool door lever |
| 22. Main link | 23. Ventilator door lever | 24. Ventilator door link |
| 25. Foot duct (left) | 26. Ventilator door | 27. Heater pipe support |
| 28. Intake sensor | 29. Intake sensor bracket | 30. Adaptor cover |
| 31. Expansion valve | 32. Evaporator | 33. Defroster door |
| 34. Defroster door link | 35. Max. cool door link | 36. Max. cool door (left) |
| 37. Center case | 38. Heater pipe grommet | 39. Air mix door |
| 40. Max. cool door (right) | | |

A

B

C

D

E

F

G

H

I

ATC

K

L

M

MODE DOOR MOTOR

MODE DOOR MOTOR


PFP:27731

Removal and Installation

AJS00102

REMOVAL

1. Remove BCM. Refer to [BCS-36, "Removal and Installation of BCM"](#) .
2. Remove mounting screws from mode door motor.
3. Disconnect mode door connector, and then remove mode door motor.

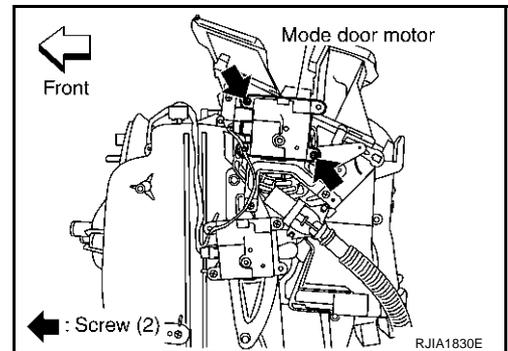

INSTALLATION

Installation is basically the reverse order of removal.

AIR MIX DOOR MOTOR

AIR MIX DOOR MOTOR


PF2:27732

Removal and Installation

AJS00103


Driver Side

1. Set the temperature at 18°C (60°F), and then disconnect the battery negative cable.
2. Remove instrument driver lower panel. Refer to [IP-11, "Removal and Installation"](#) .
3. Remove air mix door motor.
4. Disconnect air mix door motor connector.

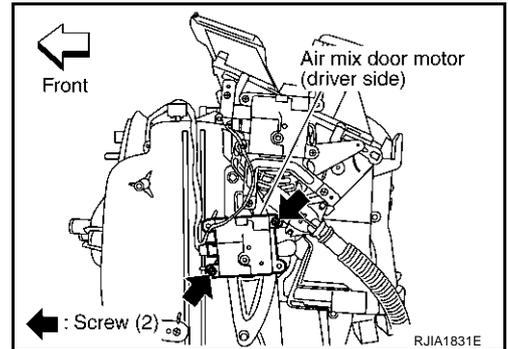

Passenger Side

1. Set the temperature at 18°C (60°F), and then disconnect the battery negative cable.
2. Remove blower unit. Refer to [ATC-133, "BLOWER UNIT"](#) .
3. Remove air mix door motor.
4. Disconnect air mix door motor connector.

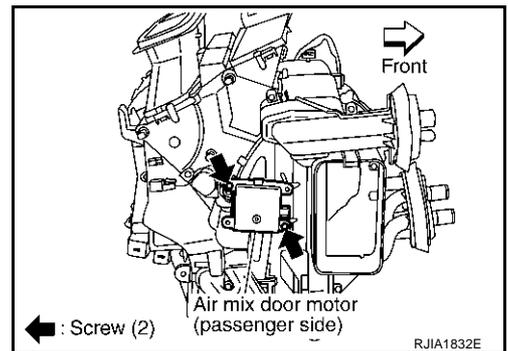

INSTALLATION

Installation is basically the reverse order of removal.

HEATER CORE

HEATER CORE


PF2:27140

Removal and Installation

AJS0016C

REMOVAL

1. Remove heater & cooling unit. Refer to [ATC-138, "HEATER & COOLING UNIT ASSEMBLY"](#) .
2. Remove foot duct (right). Refer to [ATC-148, "Removal of Foot Ducts"](#) .
3. Remove heater core cover.
4. Remove heater pipe support and heater pipe grommet.
5. Slide heater core to passenger side.

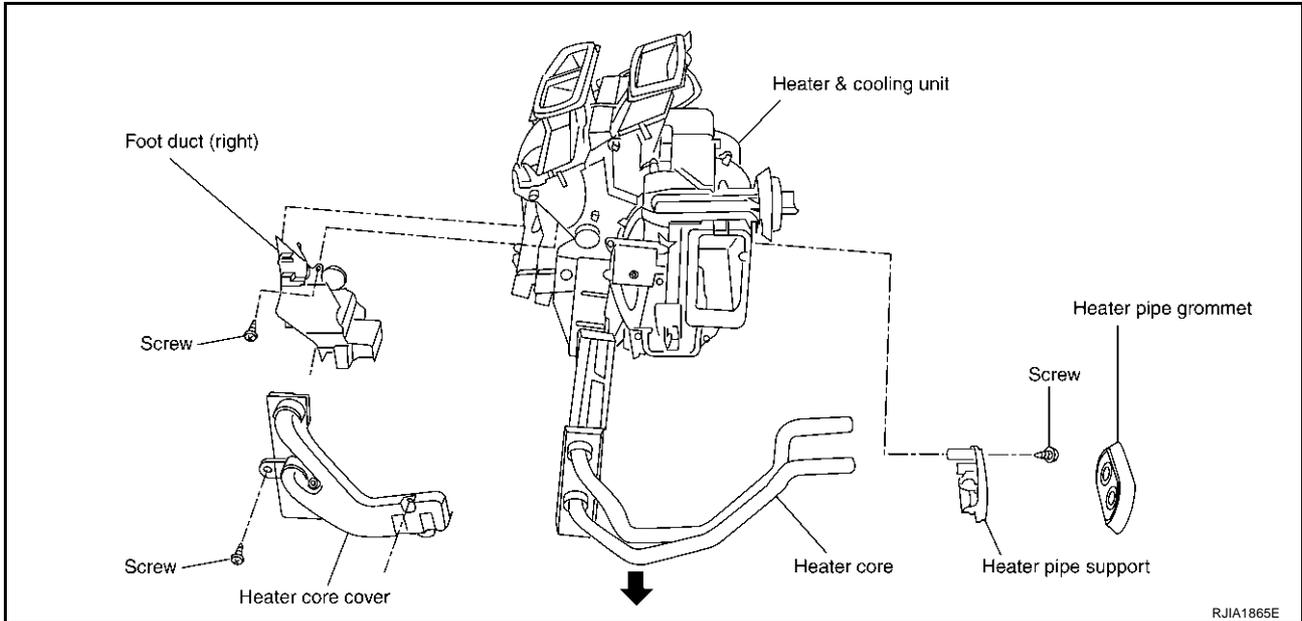

INSTALLATION

Installation is basically the reverse order of removal.


DUCTS AND GRILLES

DUCTS AND GRILLES

PF2:27860

Removal and Installation REMOVAL


AJS00104

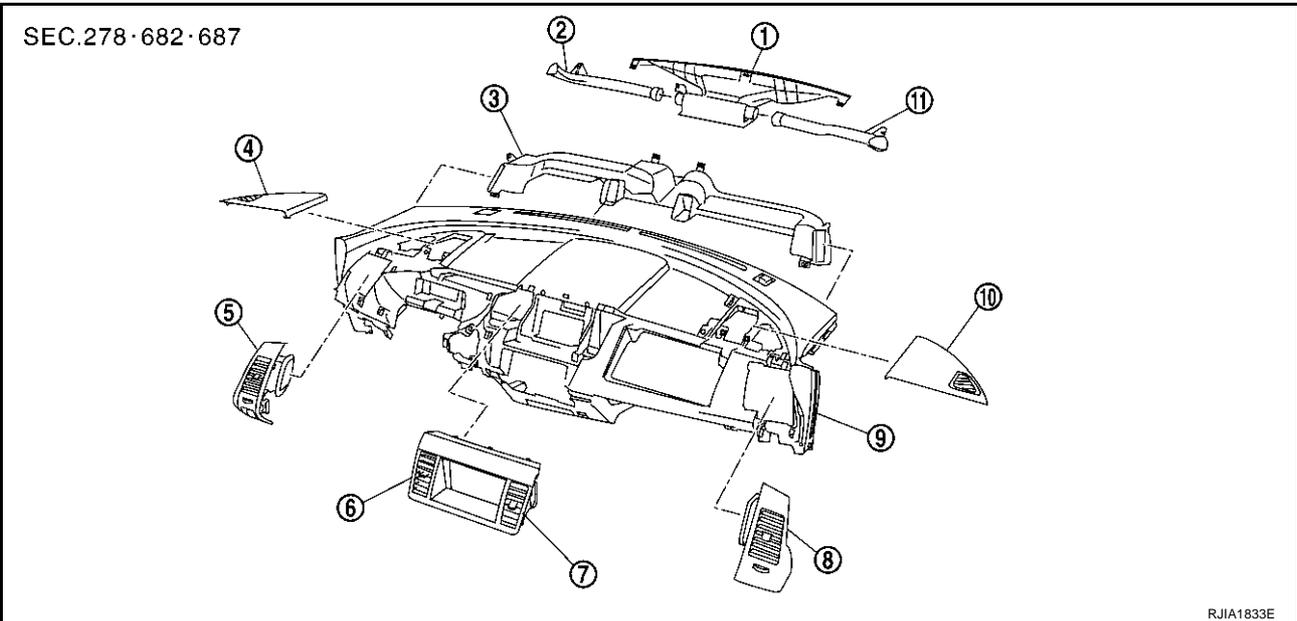

- | | | |
|-------------------------------------|-----------------------------------|------------------------------------|
| 1. Defroster nozzle | 2. Side defroster duct (left) | 3. Ventilator duct |
| 4. Side defroster grille (left) | 5. Side ventilator grille (left) | 6. Center ventilator grille (left) |
| 7. Center ventilator grille (right) | 8. Side ventilator grille (right) | 9. Instrument panel |
| 10. Side defroster grille (right) | 11. Side defroster duct (right) | |


Removal of Center Ventilator Grille

1. Remove center ventilator. Refer to [IP-11, "Removal and Installation"](#).
2. Remove center ventilator grille.

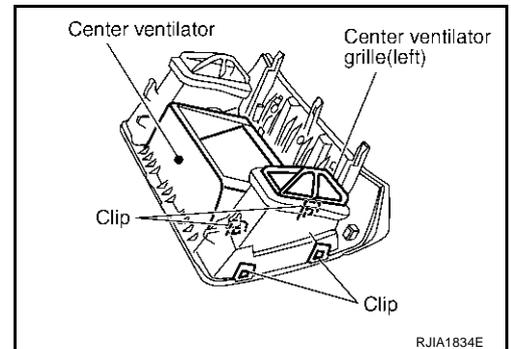

Removal of Side Ventilator Grille

1. Remove side ventilator assembly. Refer to [IP-11, "Removal and Installation"](#).
2. Remove side ventilator grille.

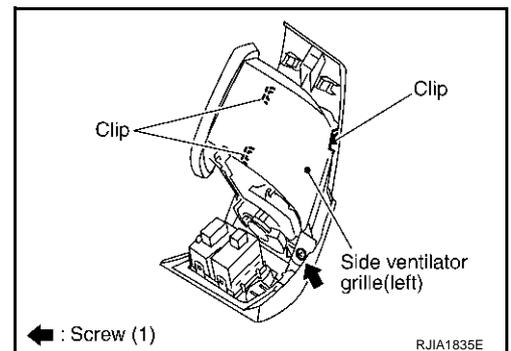


A
B
C
D
E
F
G
H
I
ATC
K
L
M

DUCTS AND GRILLES


Removal of Rear Ventilator Grille

1. Remove center pillar lower garnish. Refer to [EI-32, "CENTER PILLAR LOWER GARNISH"](#).
2. Remove mounting clips, then remove rear ventilator grille.

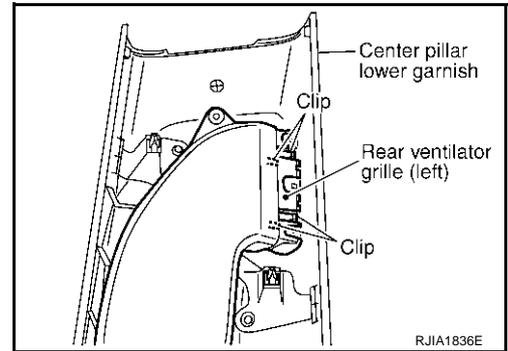


Removal of Defroster Nozzle, Ducts and Ventilator Ducts

1. Remove instrument panel assembly. Refer to [IP-11, "Removal and Installation"](#).
2. Remove side defroster ducts, using power tools.
3. Remove defroster nozzle, using power tools.
4. Remove ventilator duct., using power tools.

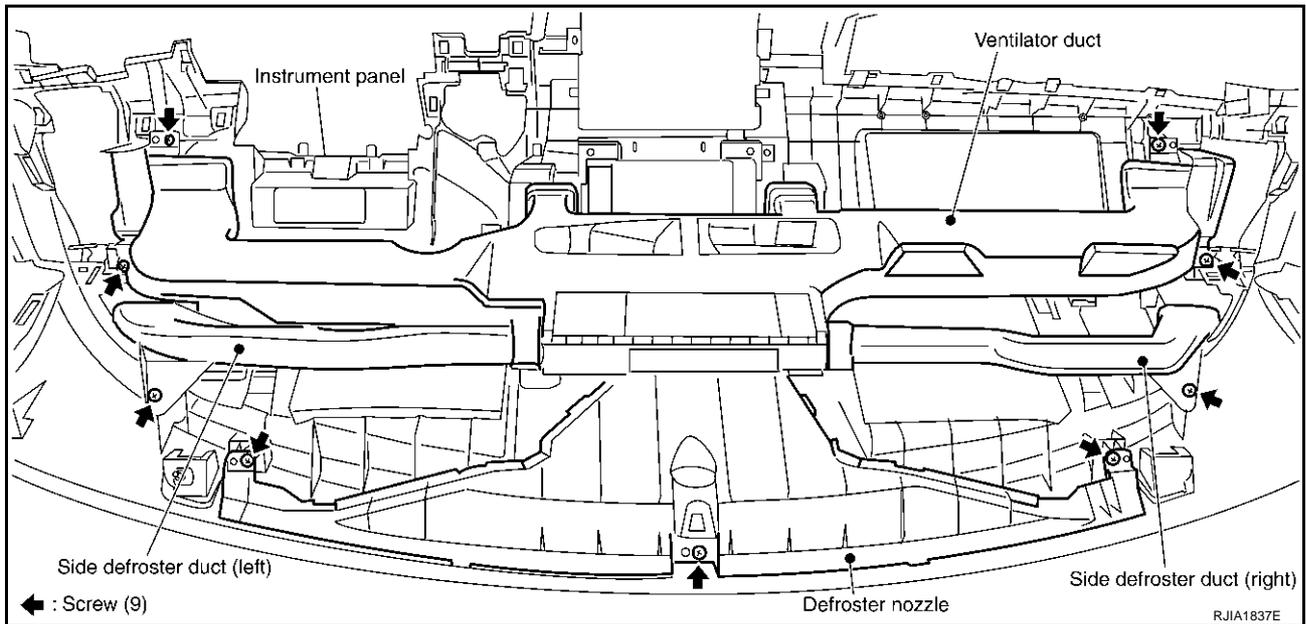

Removal of Side Defroster Grille


1. Remove instrument side finisher. Refer to [IP-11, "Removal and Installation"](#).
2. Remove side defroster grilles.

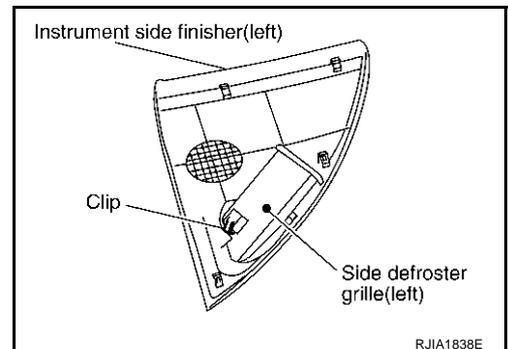


DUCTS AND GRILLES

Removal of Rear Ventilator Ducts

1. Remove center console. Refer to [IP-18, "Removal and Installation"](#).
2. Slide rear ventilator duct 2 toward vehicle rear, then remove it.
3. Remove rear ventilator duct 1.

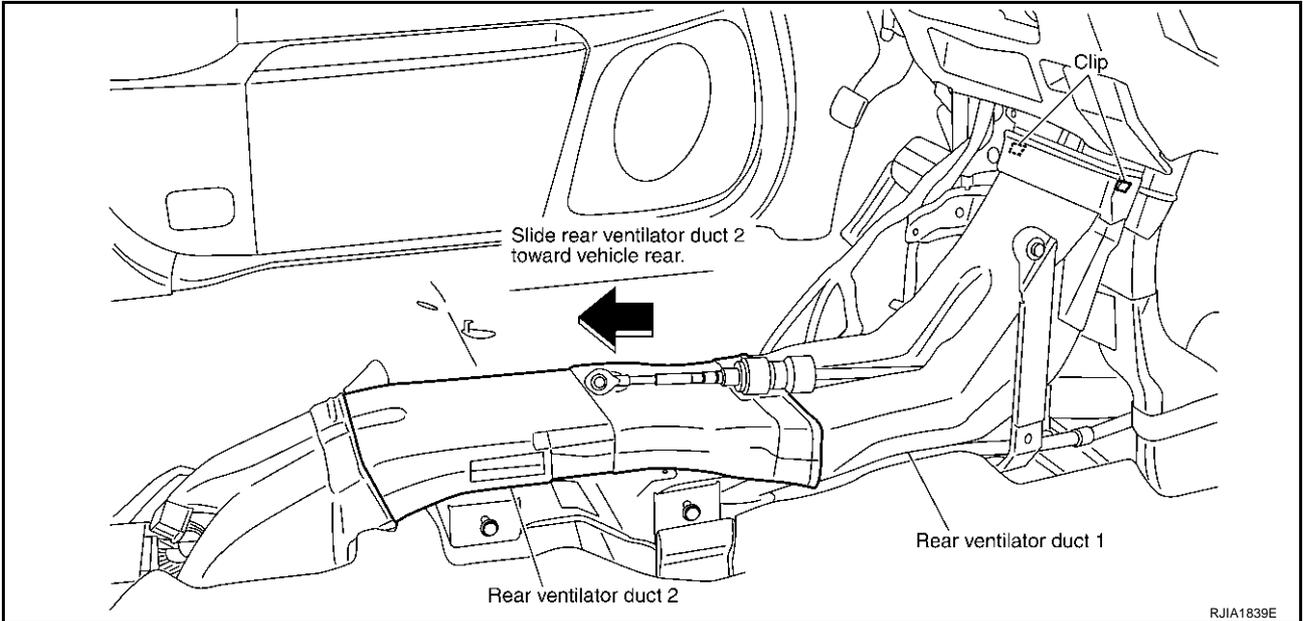

4. Remove floor carpet. Refer to [EI-34, "Removal and Installation"](#).
5. Remove rear ventilator duct 3 fixing screws, then remove rear ventilator duct 3.

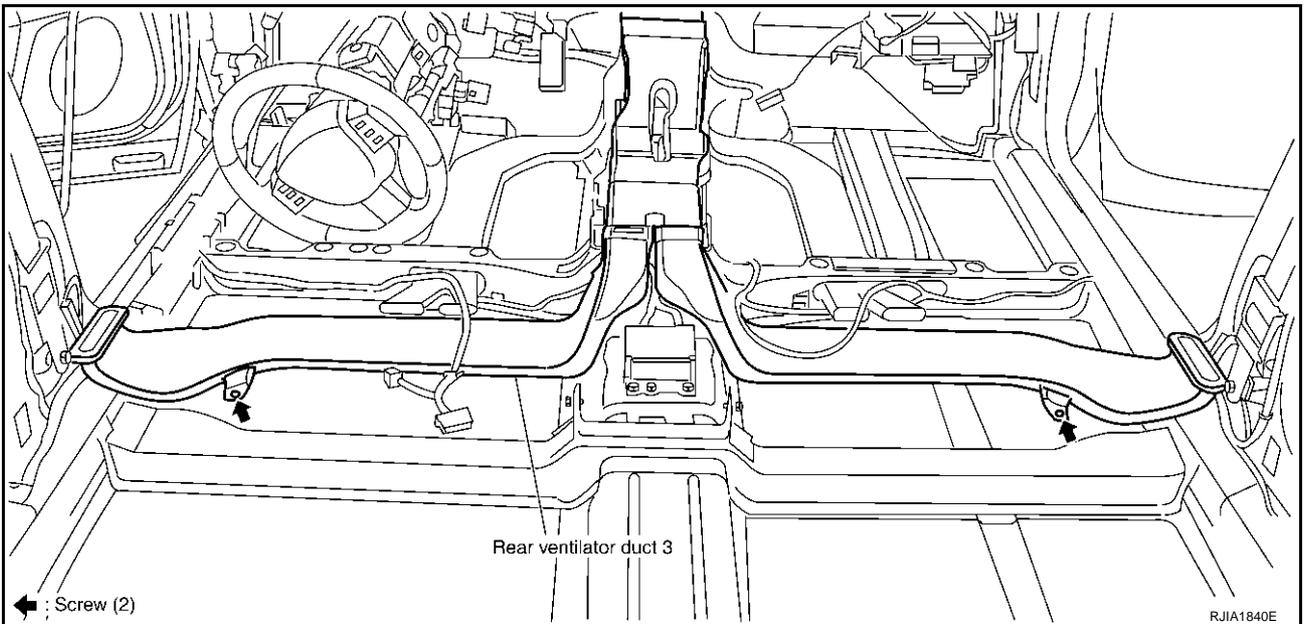


A
B
C
D
E
F
G
H
I
ATC
K
L
M


DUCTS AND GRILLES

Removal of Foot Ducts

1. Remove instrument driver lower panel. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove foot duct (driver side).

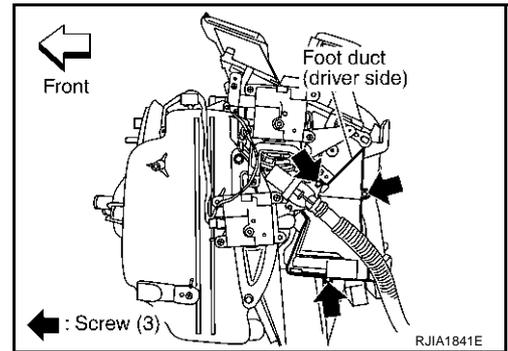


3. Remove blower unit. Refer to [ATC-133, "BLOWER UNIT"](#) .
4. Remove foot duct (passenger side).

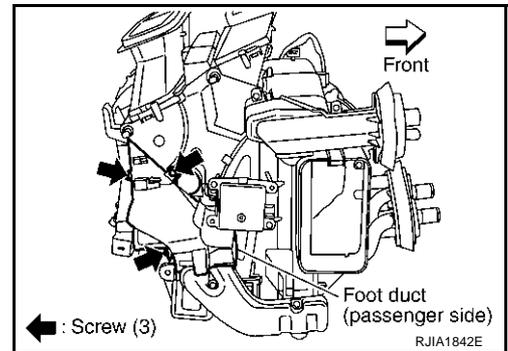


Removal of Floor Ducts

1. Remove front seats and center console. Refer to [SE-122, "FRONT SEAT"](#) and [IP-17, "CENTER CONSOLE ASSEMBLY"](#) .
2. Slide front floor duct downward, then remove it.

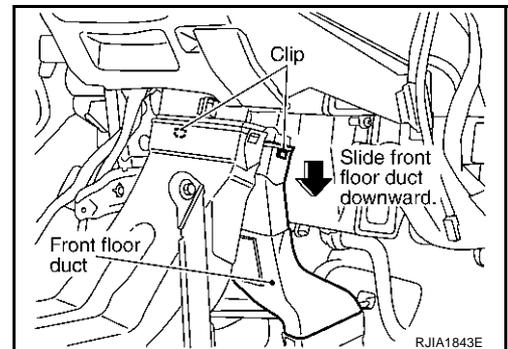

3. Peel back the floor carpet to a point where the floor duct is visible.
4. Remove mounting clip, and then remove the floor ducts.

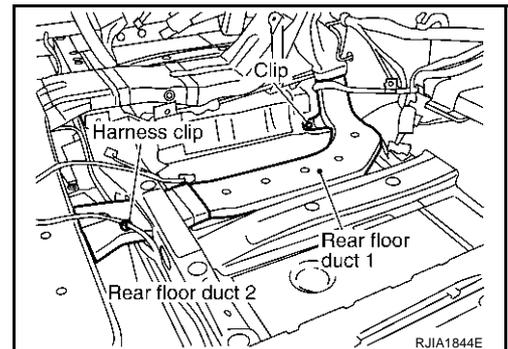

INSTALLATION

Installation is basically the reverse order of removal.

REFRIGERANT LINES

REFRIGERANT LINES

PFP:92600


HFC-134a (R-134a) Service Procedure SETTING OF SERVICE TOOLS AND EQUIPMENT

AJS00105


Discharging Refrigerant

WARNING:

Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from A/C system using certified service equipment meeting requirements of SAE J2210 HFC-134a (R-134a) recycling equipment or J2201 HFC-134a (R-134a) recovery equipment. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.

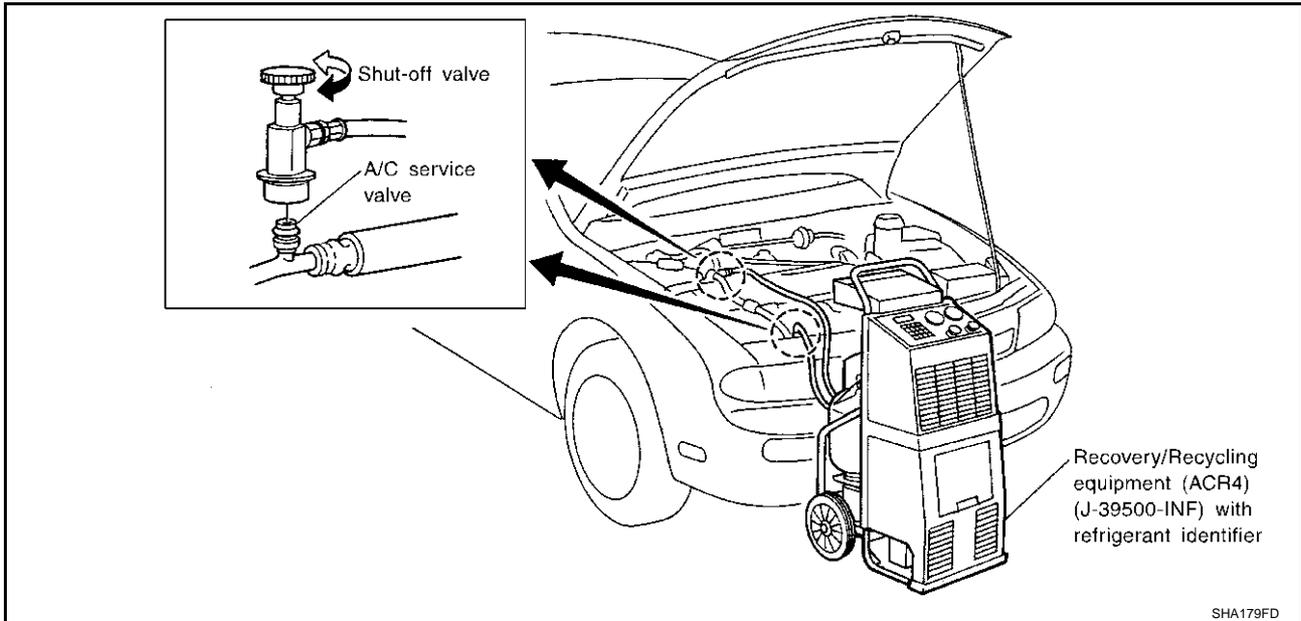


Evacuating System and Charging Refrigerant

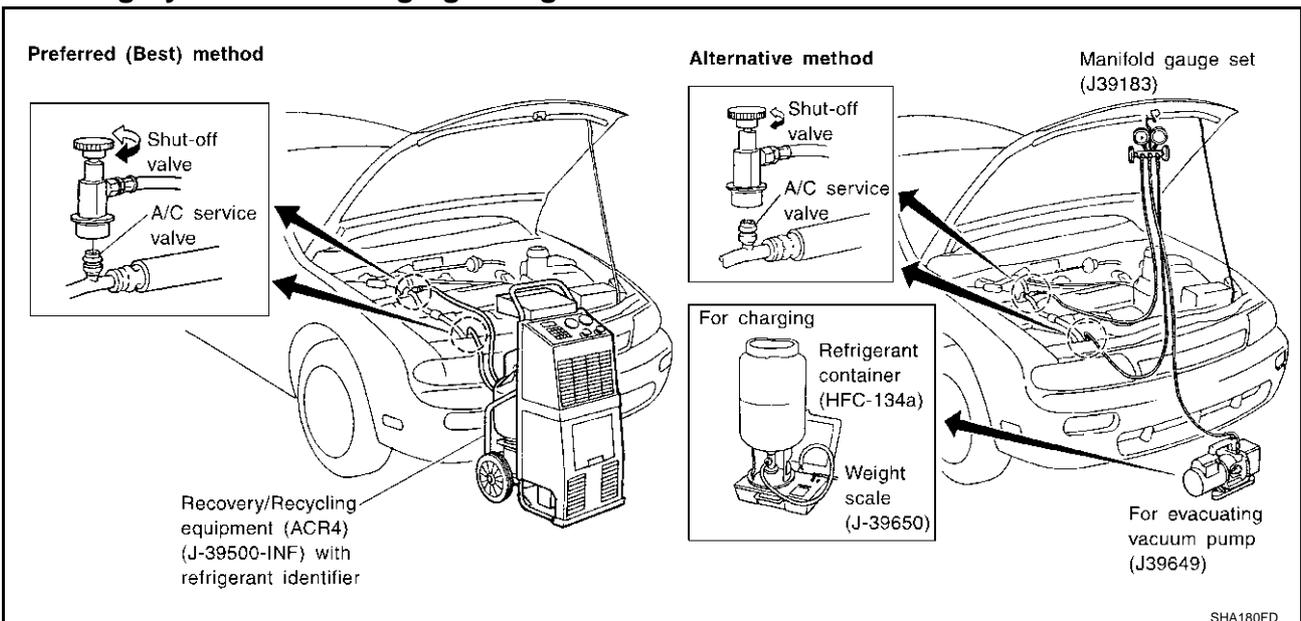

A
B
C
D
E
F
G
H
I
K
L
M

ATC

REFRIGERANT LINES

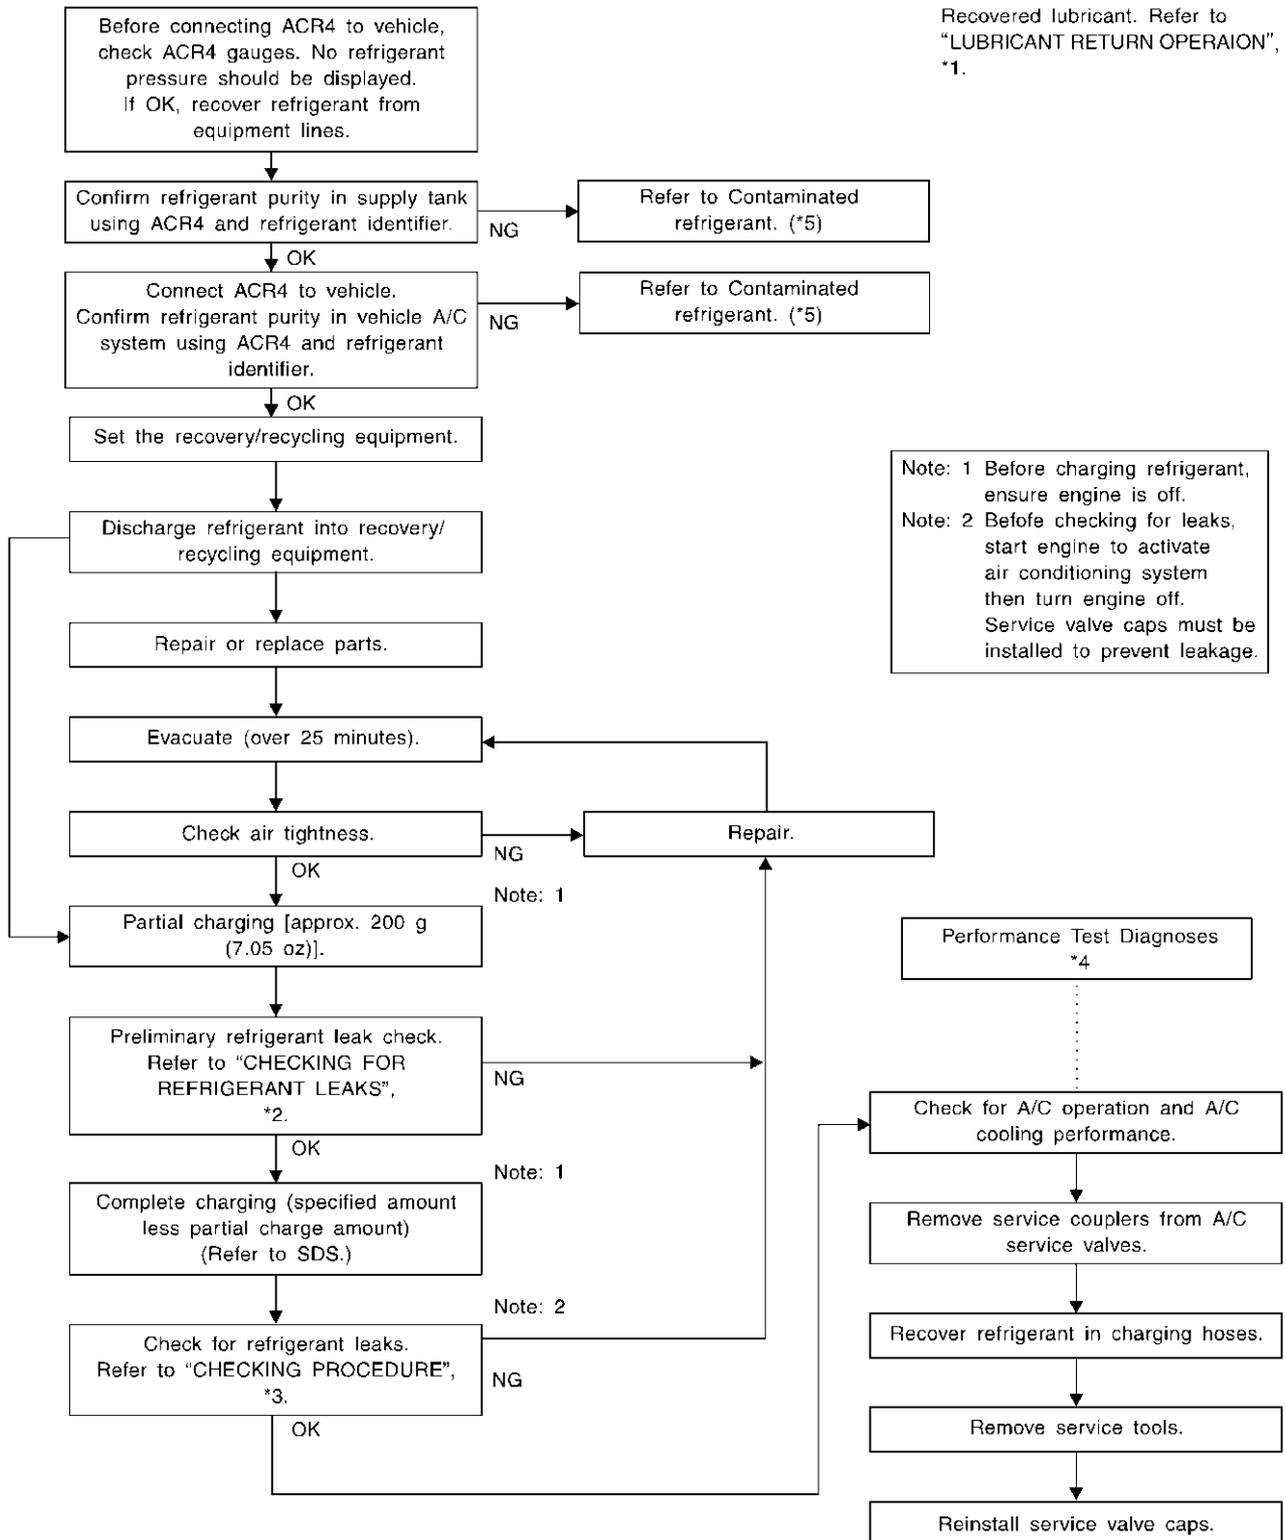

Recovered lubricant. Refer to "LUBRICANT RETURN OPERAION", *1.

Note: 1 Before charging refrigerant, ensure engine is off.
 Note: 2 Before checking for leaks, start engine to activate air conditioning system then turn engine off. Service valve caps must be installed to prevent leakage.

*1 [ATC-22, "LUBRICANT RETURN OPERATION"](#)

*2 [ATC-166, "Checking for Refrigerant Leaks"](#)

*3 [ATC-168, "CHECKING PROCEDURE"](#)

*4 [ATC-105, "PERFORMANCE TEST DIAGNOSES"](#)

*5 [ATC-6, "CONTAMINATED REFRIGERANT"](#)


RJIA1878E

REFRIGERANT LINES

AJS00106

Components

Refer to [ATC-8, "Precautions for Refrigerant Connection"](#).

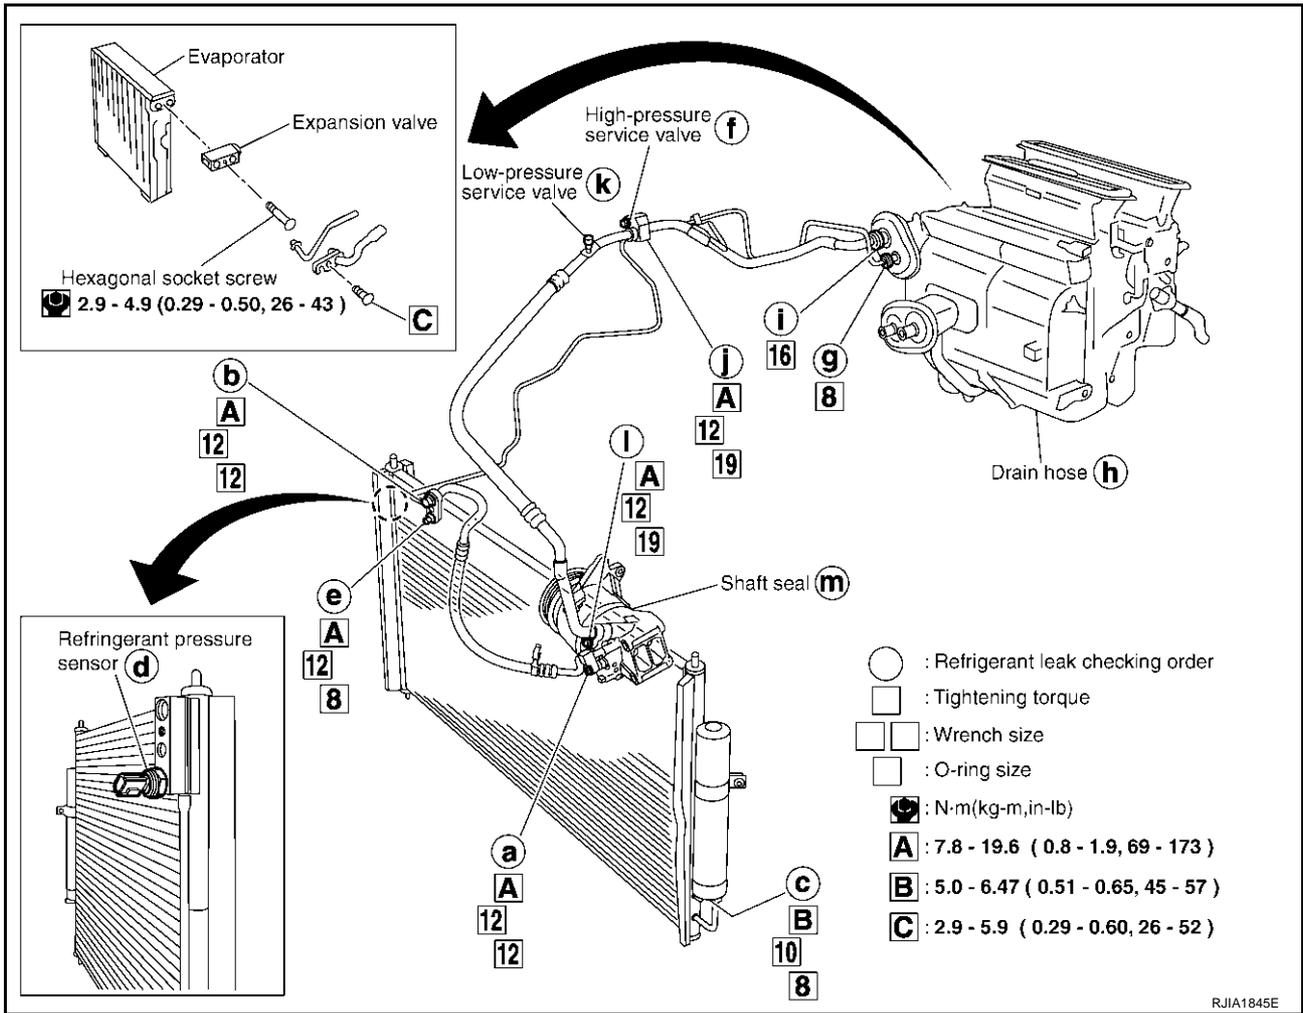

RJIA1845E


A
B
C
D
E
F
G
H
I
ATC
K
L
M

REFRIGERANT LINES

AJS00107

Removal and Installation of Compressor REMOVAL


SEC.274 · 275

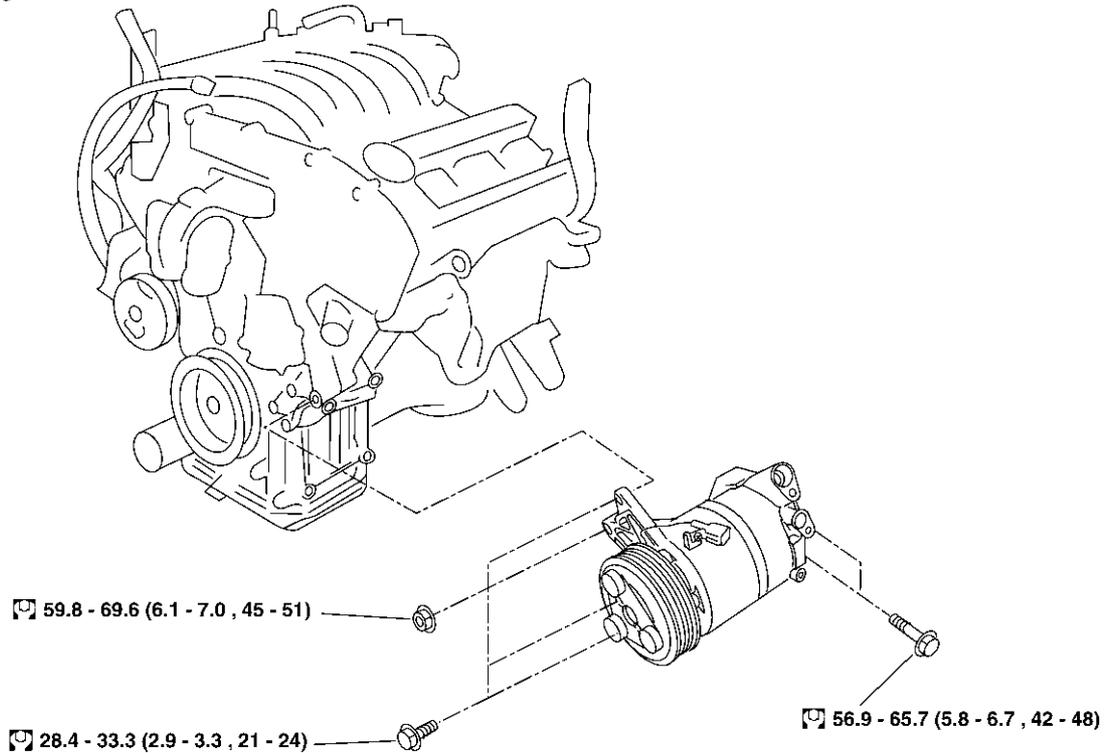


□ : N·m (kg·m,ft·lb)

RJIA1846E

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove the air duct (inlet). Refer to [EM-14, "AIR CLEANER AND AIR DUCT"](#).
3. Remove the engine undercover, using power tools.

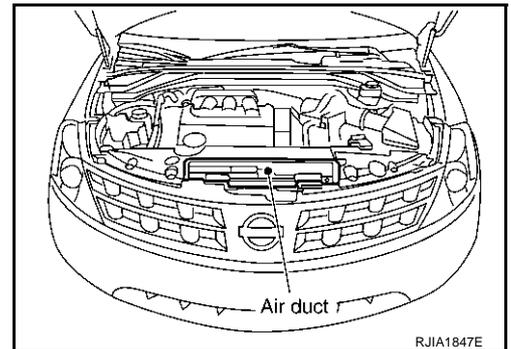


4. Remove mounting nuts from the low-pressure flexible hose and high-pressure flexible hose.
CAUTION:
Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.
5. Disconnect compressor (magnet clutch) connector.
6. Remove the A/C compressor belt. Refer to [EM-11, "DRIVE BELTS"](#).
7. Remove the idler pulley bracket.

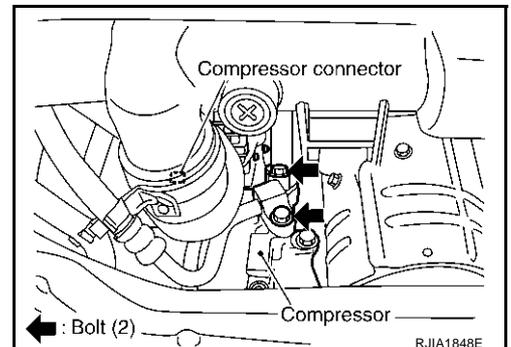

REFRIGERANT LINES

8. Remove mounting bolts from compressor, using power tools.

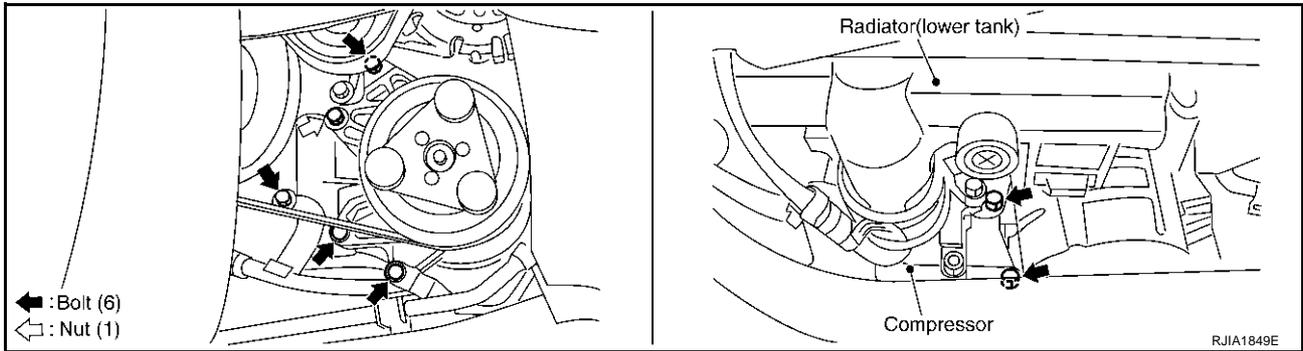

9. Remove compressor from passenger side of the vehicle.

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of the low-pressure flexible hose, high-pressure pipe and high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Bolts mounting the compressor (Front side)

Tightening torque : 28.4 - 33.3 N·m (2.9 - 3.3 kg·m, 21 - 24 ft·lb)

Nut mounting the compressor

Tightening torque : 56.9 - 65.7 N·m (5.8 - 6.7 kg·m, 42 - 48 ft·lb)

Bolts mounting the compressor (Rear side)

Tightening torque : 56.9 - 65.7 N·m (5.8 - 6.7 kg·m, 42 - 48 ft·lb)

Nut mounting the high-pressure flexible hose

Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

Nut mounting the low-pressure flexible hose

Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

Bolts mounting the idler pulley bracket


Tightening torque : 24.5 - 31.4 N·m (2.5 - 3.2 kg·m, 18 - 23 ft·lb)

Removal and Installation of Compressor Clutch

REMOVAL


Overhaul

1. When removing center bolt, hold clutch disc with wrench.
2. Remove clutch disc.

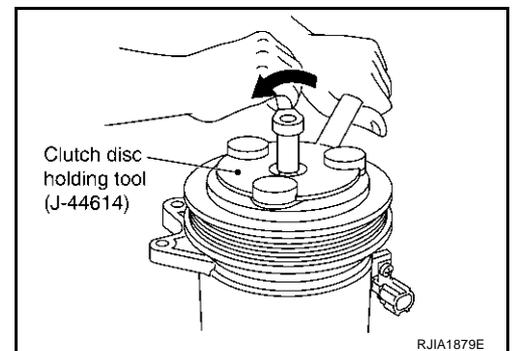


REFRIGERANT LINES


3. Remove the snap ring using external snap ring pliers.

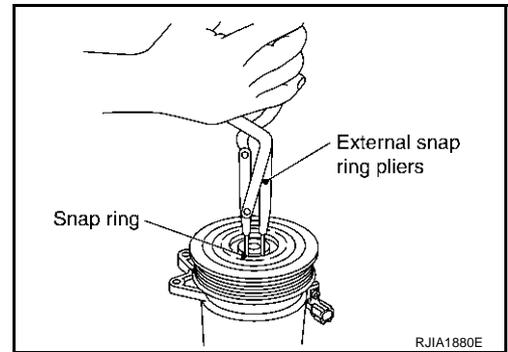

4. Position the center pulley puller on the end of the drive shaft, and remove the pulley assembly using any commercially available pulley puller.
To prevent the pulley groove from being deformed, the puller claws should be positioned into the edge of the pulley assembly.

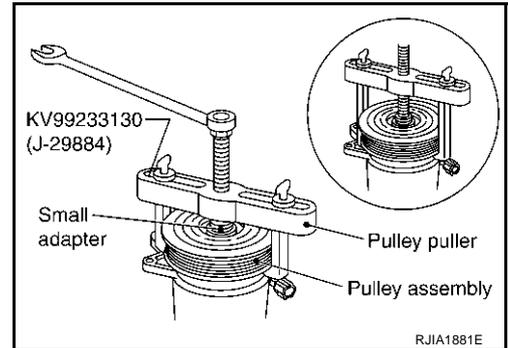

5. Remove field coil mounting screws.
6. Remove compressor connector from connector bracket.

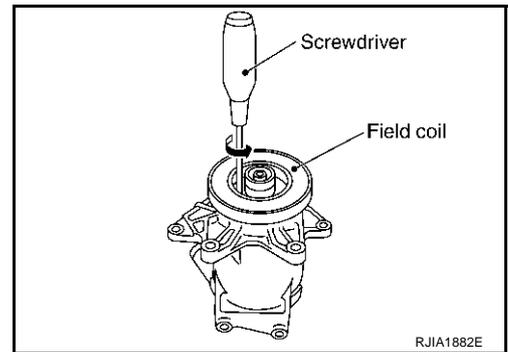


Inspection

Clutch disc

If the contact surface shows signs of damage due to excessive heat, replace clutch disc and pulley.

Pulley

Check the appearance of the pulley assembly. If the contact surface of pulley shows signs of excessive grooving, replace clutch disc and pulley. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

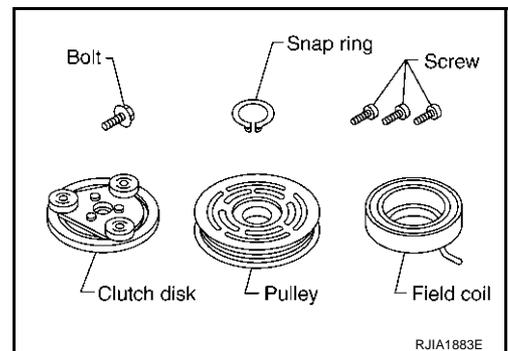


Coil

Check coil for loose connection or cracked insulation.


REFRIGERANT LINES

INSTALLATION


1. Install the field coil.
Be sure to align the coil's pin with the hole in the compressor's front head.
2. Install the compressor connector.

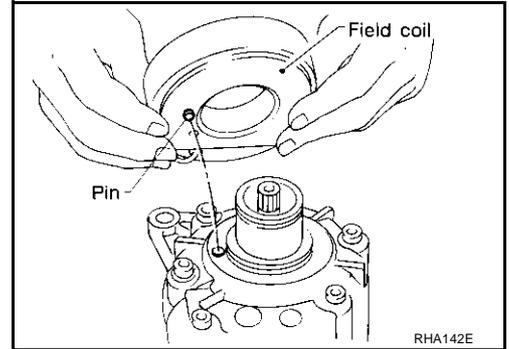

3. Install the pulley assembly using the installer and a hand press, and then install the snap ring using snap ring pliers.

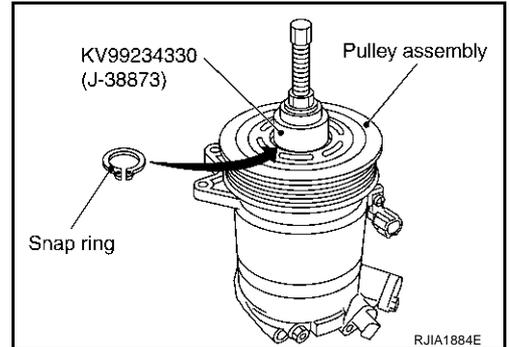


4. Using the holder to prevent clutch disc rotation, tighten the bolt to 14 N·m (1.4 kg·m, 10 ft-lb) torque.
After tightening the bolt, make sure the pulley rotates smoothly.

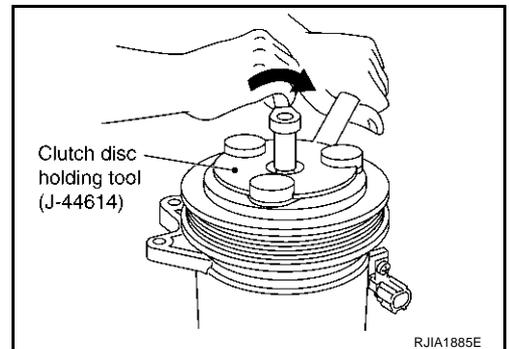

5. Check clearance around the entire periphery of clutch disc.

Disc to pulley clearance : 0.3 - 0.60 mm (0.012 - 0.024 in)

If the specified clearance is not obtained, replace adjusting spacer and readjust.

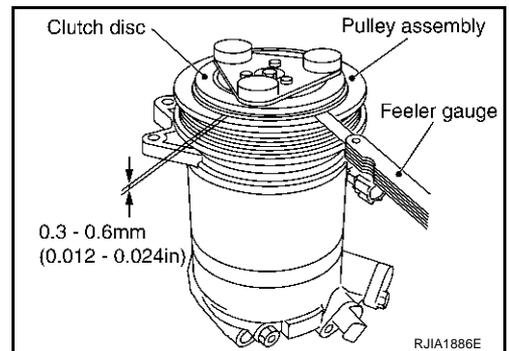

Break-in Operation

When replacing compressor clutch assembly, always carry out the break-in operation. This is done by engaging and disengaging the clutch about thirty times. Break-in operation raises the level of transmitted torque.


REFRIGERANT LINES

AJS00109

Removal and Installation of Low-pressure Flexible Hose

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
3. Remove the air duct (inlet). Refer to [EM-14, "AIR CLEANER AND AIR DUCT"](#) .
4. Remove mounting bolt for low-pressure flexible hose. (Compressor side)

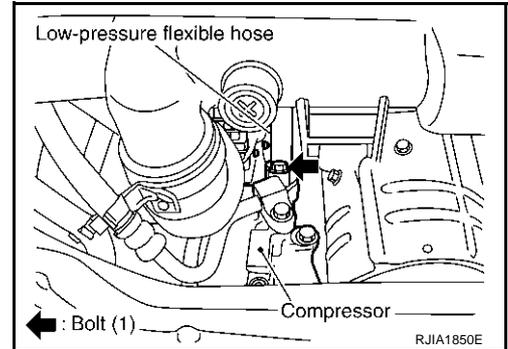

5. Remove mounting bolt from low-pressure flexible hose.
6. Remove low-pressure flexible hose.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

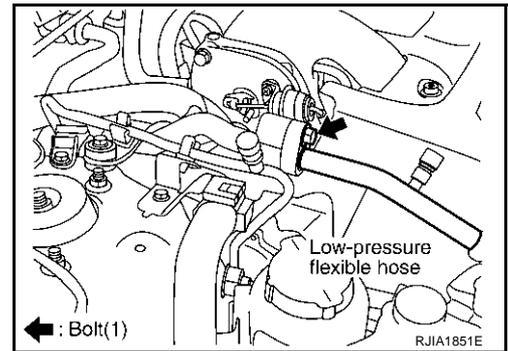

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Bolt mounting the low-pressure flexible hose

Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)


REFRIGERANT LINES

Removal and Installation of High-pressure Flexible Hose

AJS0010S

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove the air duct (inlet). Refer to [EM-14, "AIR CLEANER AND AIR DUCT"](#) .
3. Remove the mounting bolt for high-pressure flexible hose (Compressor side), then remove high-pressure flexible hose fixing clip.

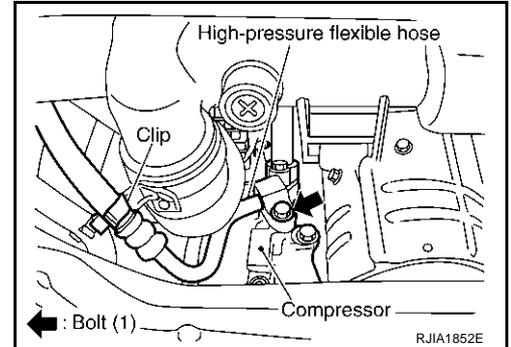

4. Remove the mounting nut for high-pressure flexible hose (Condenser side), and then remove the high-pressure flexible hose.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

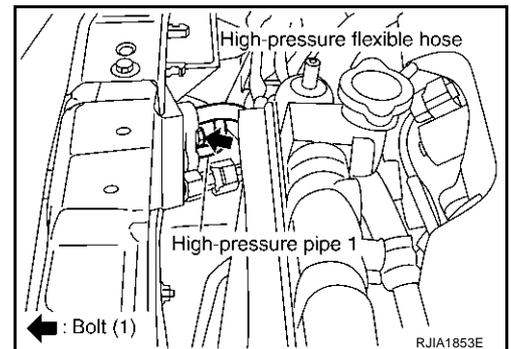

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of the high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Bolts mounting the high-pressure flexible hose

Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

A
B
C
D
E
F
G
H
I
K
L
M

ATC


REFRIGERANT LINES

Removal and Installation of Low-pressure Pipe 1 (Engine Compartment)

AJS0010B

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#).
3. Remove mounting bolt for low-pressure pipe 1 and low-pressure pipe 1 bracket.
4. Remove high-pressure pipe 1 from clip.

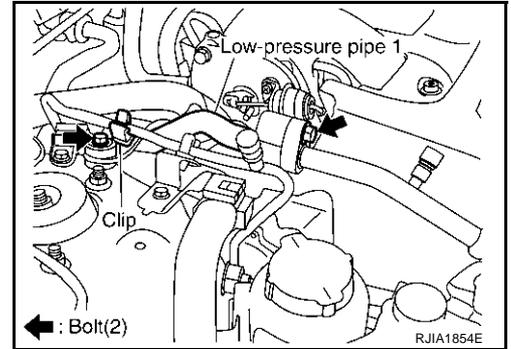

5. Disconnect one-touch joints.
 - a. Set a disconnecter (92530-89916) on A/C piping.
 - b. Slide a disconnecter toward vehicle front until it clicks.
 - c. Slide A/C piping toward vehicle front and disconnect it.
6. Remove the low-pressure pipe 1.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

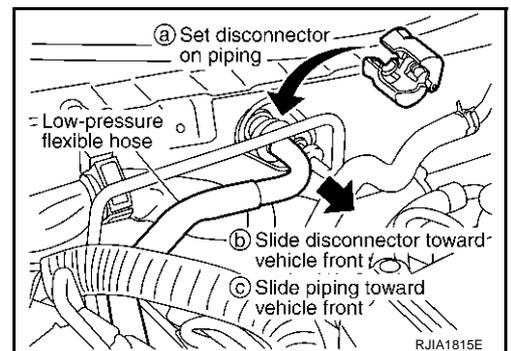

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of the high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to make sure piping does not come off.
- When recharging refrigerant, check for leaks.

Bolt mounting the low-pressure pipe 1

Tightening torque : 7.8 - 19.6 N·m (0.8 - 1.9 kg·m, 69 - 173 in·lb)

Bolt mounting the low-pressure pipe 1 bracket

Tightening torque : 3.82 - 4.51 N·m (0.39 - 0.46 kg·m, 34 - 39 in·lb)


REFRIGERANT LINES

Removal and Installation of High-pressure Pipe 1 (Engine Compartment)


AJS0010T

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
3. Remove air duct (inlet). Refer to [EM-14, "AIR CLEANER AND AIR DUCT"](#) .
4. Remove low-pressure pipe 1. Refer to [ATC-158, "Removal and Installation of Low-pressure Pipe 1 \(Engine Compartment\)"](#) .
5. Remove reservoir tank. Refer to [CO-12, "RADIATOR"](#) .
6. Remove IPDM E/R. Refer to [PG-46, "Removal and Installation of IPDM E/R"](#) .
7. Remove power steering oil tank mounting nuts.
8. Remove vehicle harness connector from bracket.
9. Remove the high-pressure pipe 1 from clips.
10. Remove the high-pressure flexible hose from vehicle clips.

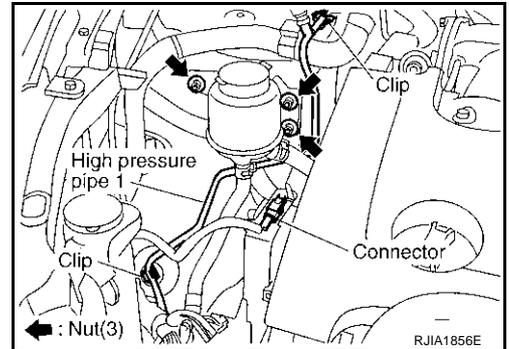


11. Disconnect cooling fan connector.
12. Remove cooling fan harness clip from fan shroud.
13. Remove ground harness terminal mounting bolt.

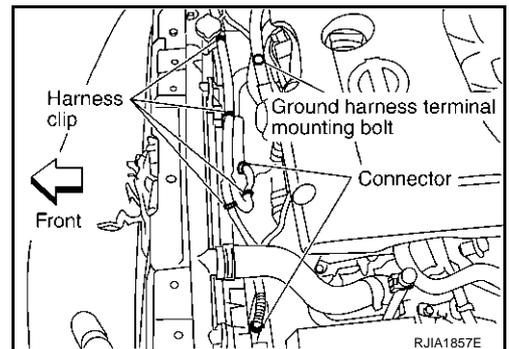

14. Disconnect one-touch joints of high-pressure pipe 1.
 - a. Set a disconnector (92530-89908) on A/C piping.
 - b. Slide a disconnector toward vehicle front until it clicks.
 - c. Slide A/C piping toward vehicle front and disconnect it.

CAUTION:


Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

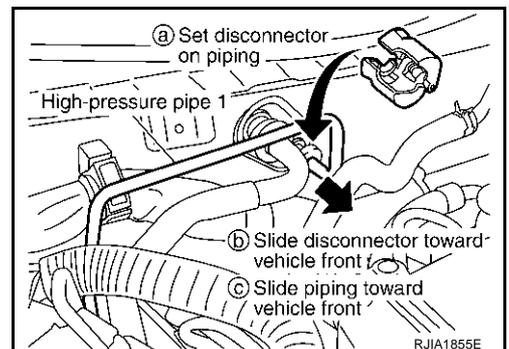

15. Remove the high-pressure pipe 1 mounting bolt, and then remove it.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

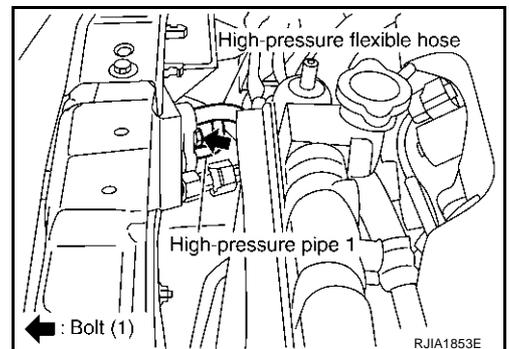

REFRIGERANT LINES

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:


- Replace the O-ring of the high-pressure pipe with a new one, then apply compressor oil to it when installing it.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to make sure piping does not come off.
- When recharging refrigerant, check for leaks.

Removal and Installation of Low-pressure Pipe 2 and High-pressure Pipe 2

AJS0010D

REMOVAL

1. Set the temperature at 18°C (60°F), and then disconnect the battery negative cable.
2. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
3. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
4. Remove mounting bolt for low-pressure flexible pipe 1 bracket.
5. Remove high-pressure pipe 1 from vehicle clips.

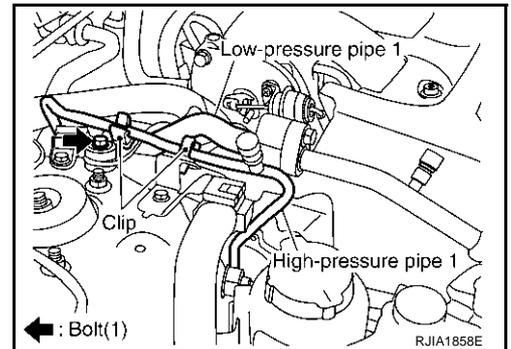


6. Disconnect one-touch joints.
 - a. Set a disconnecter (High-pressure side: 92530-89908, Low-pressure side: 92530-89916) on A/C piping.
 - b. Slide a disconnecter toward vehicle front until it clicks.
 - c. Slide A/C piping toward vehicle front and disconnect it.


CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

7. Remove blower unit. Refer to [ATC-133, "BLOWER UNIT"](#) .

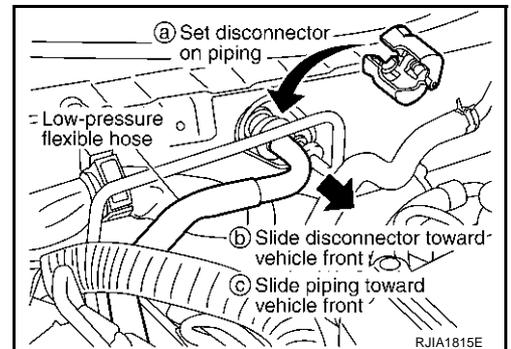

8. Remove air mix door motor (passenger side), foot duct, heater core cover and evaporator cover.

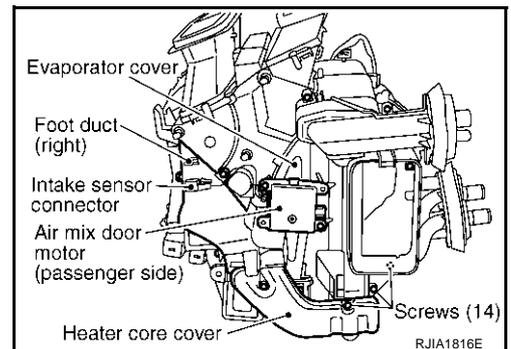


REFRIGERANT LINES

9. Remove mounting bolt, then, remove low-pressure pipe 2 and high-pressure pipe 2.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

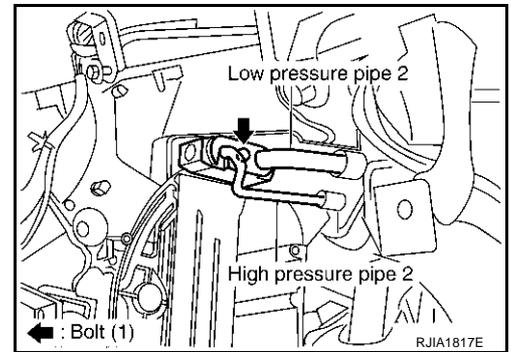

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new ones, then apply compressor oil to it when installing it.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to make sure piping does not come off.
- When recharging refrigerant, check for leaks.

Bolt mounting the low-pressure pipe 2 and high-pressure pipe 2

Tightening torque : 2.9 - 5.9 N·m (0.29 - 0.60 kg·m, 26 - 52 in·lb)

Bolt mounting low-pressure pipe 1 bracket

Tightening torque : 3.82 - 4.51 N·m (0.39 - 0.46 kg·m, 34 - 39 in·lb)

A
B
C
D
E
F
G
H
I
K
L
M

ATC

REFRIGERANT LINES

AJS0010E

Removal and Installation of Liquid Tank


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove condenser. Refer to [ATC-163, "Removal and Installation of Condenser"](#).
3. Clean liquid tank and its surrounding area, and remove dirt and rust from tank.


CAUTION:

Be sure to clean carefully.

4. Remove mounting bolt for liquid tank.

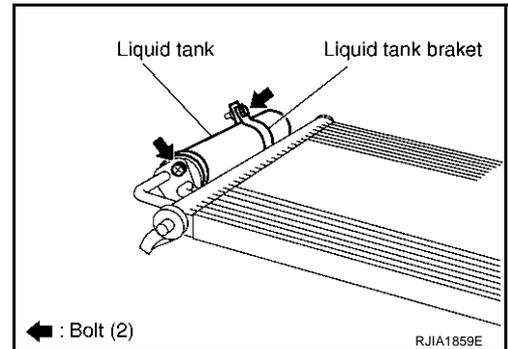

5. Lift liquid tank bracket upwards. Remove bracket from protruding part of condenser.
6. Slide liquid tank upward, then remove liquid tank.

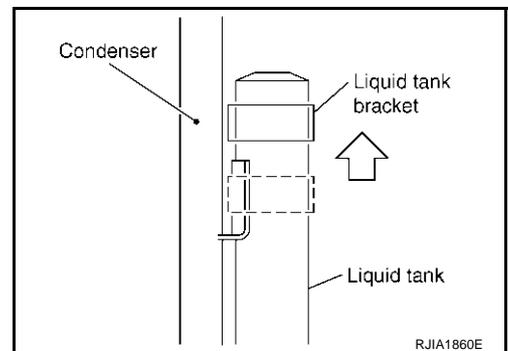


INSTALLATION

Install liquid tank, and then install liquid tank bracket on condenser.

CAUTION:

- **Make sure liquid tank bracket is securely installed at protrusion of condenser. (Make sure liquid tank bracket does not move to a position below center of liquid tank.)**
- **Replace O-rings for A/C piping with new ones, then apply compressor oil to it when installing it.**
- **When recharging refrigerant, check for leaks.**

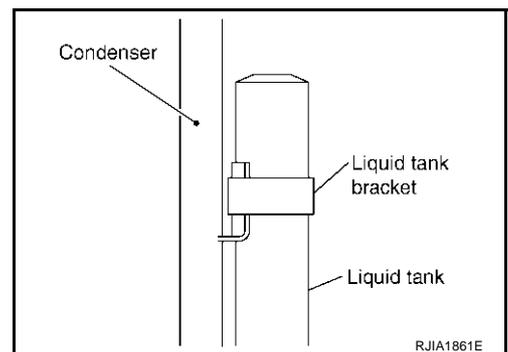

Bolt mounting the liquid tank bracket (upper side)

Tightening torque : 2.94 - 3.82 N·m (0.30 - 0.38 kg·m, 26 - 33 in·lb)

Bolt mounting the liquid tank bracket (lower side)

Tightening torque : 5.0 - 6.47 N·m (0.51 - 0.65 kg·m, 45 - 57 in·lb)


REFRIGERANT LINES

AJS0010U

Removal and Installation of Condenser

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove air duct (inlet). Refer to [EM-14, "AIR CLEANER AND AIR DUCT"](#).
3. Remove engine undercover, using power tools.
4. Drain engine coolant. Refer to [CO-8, "Changing Engine Coolant"](#).
5. Remove cooling fan shroud after removing radiator upper hose. Refer to [CO-12, "RADIATOR"](#).

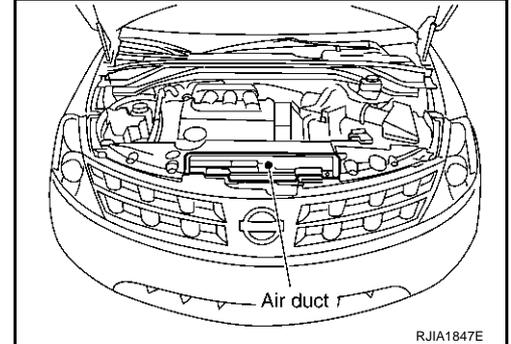


6. Disconnect high-pressure flexible hose and high-pressure pipe 1.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.


7. Remove radiator upper mount, move radiator and condenser to the engine side.

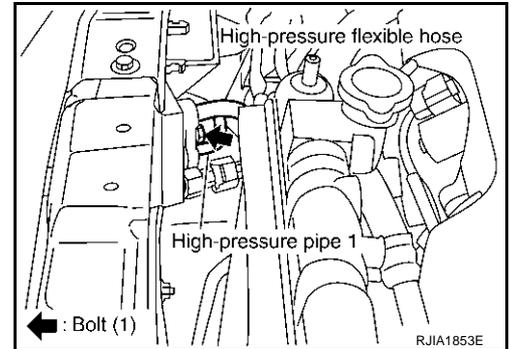

8. Remove mounting bolts for condenser, then remove condenser.

CAUTION:

Be careful not to damage the core surface of the condenser and the radiator.

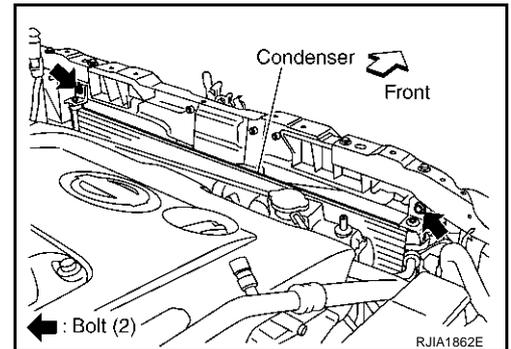

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new ones, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Bolt mounting the condenser

Tightening torque : 5.7 - 6.5 N·m (0.59 - 0.66 kg·m, 51 - 57 in·lb)

REFRIGERANT LINES

Removal and Installation of Refrigerant Pressure Sensor


AJS0010G

REMOVAL

1. Remove the condenser. Refer to [ATC-163, "Removal and Installation of Condenser"](#) .
2. Remove the refrigerant pressure sensor from condenser.

CAUTION:

When working, be careful not to damage the condenser fins.

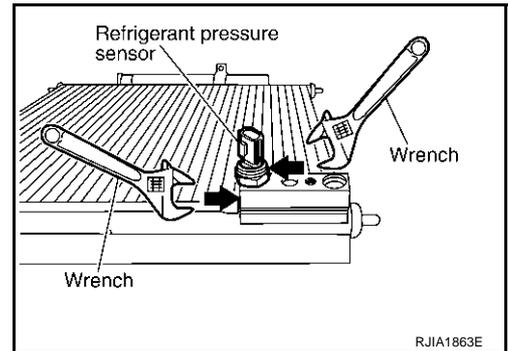

RJA1863E

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

Apply compressor oil to the O-ring of the refrigerant pressure sensor when installing it.

Refrigerant pressure sensor

Tightening torque :9.9 - 11.7 N-m (1.0 - 1.2 kg-m, 87 - 104 in-lb)

Removal and Installation of Evaporator

AJS0010V


REMOVAL

1. Set the temperature at 18°C (60°F), and then disconnect the battery negative cable.
2. Using a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
3. Remove the cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
4. Remove low-pressure pipe 2 and high-pressure pipe 2. Refer to [ATC-160, "Removal and Installation of Low-pressure Pipe 2 and High-pressure Pipe 2"](#) .

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

5. Slide the evaporator, then remove it from the heater & cooling unit.
6. Remove the intake sensor from the evaporator, then remove the evaporator.

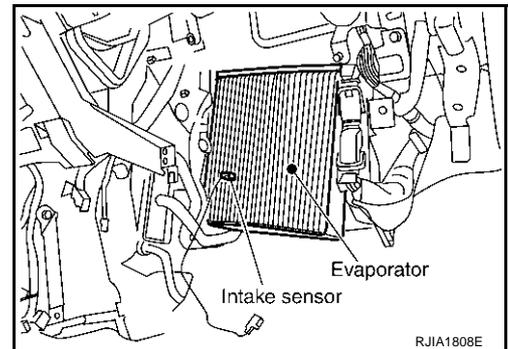

RJA1808E

REFRIGERANT LINES

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new ones, then apply compressor oil to it when installing it.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to make sure piping does not come off.
- The O-rings are different from low-pressure pipe 1 (high-pressure pipe 1) and low-pressure pipe 2 (high-pressure pipe 2).
- Mark the mounting position of the intake sensor bracket.
- When recharging refrigerant, check for leaks.

Bolt mounting the low-pressure pipe 2 and high-pressure pipe 2

Tightening torque : 2.9 - 5.9 N·m (0.29 - 0.6 kg·m, 26 - 52 in·lb)

Bolt mounting low-pressure pipe 1 bracket


Tightening torque : 3.82 - 4.51 N·m (0.39 - 0.46 kg·m, 34 - 39 in·lb)

Removal and Installation of Expansion Valve

AJS0010W

REMOVAL

1. Set the temperature at 18°C (60°F), and then disconnect the battery negative cable.
2. Using a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
3. Remove cowl top cover. Refer to [EI-21, "COWL TOP"](#) .
4. Remove evaporator. Refer to [ATC-164, "Removal and Installation of Evaporator"](#) .
5. Remove mounting bolts for expansion valve, then remove expansion valve.

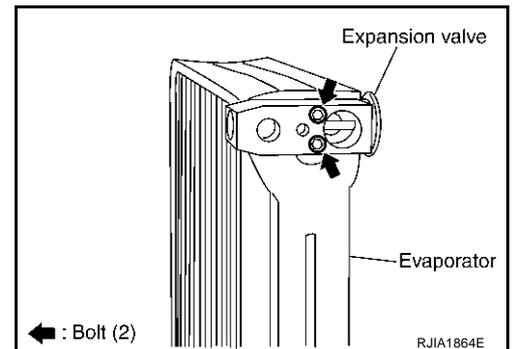

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings with new ones, then apply compressor oil to them when installing them.
- Connection point for female-side piping is thin. So, when inserting male-side piping, take care not to deform female-side piping. Slowly insert in axial direction.
- Insert one-touch joint connection point securely until it clicks.
- After piping has been connected, pull male-side piping by hand to check that piping does not come off.
- The O-rings are different from low-pressure pipe 1 (high-pressure pipe 1) and low-pressure pipe 2 (high-pressure pipe 2).
- When recharging refrigerant, check for leaks.

Bolts mounting expansion valve

Tightening torque : 2.9 - 4.9N·m (0.29 - 0.50 kg·m, 26 - 43 in·lb)

Blot mounting low-pressure pipe 2 and high-pressure pipe 2

Tightening torque : 2.9 - 5.9 N·m (0.29 - 0.60 kg·m, 26 - 52 in·lb)

REFRIGERANT LINES

Checking for Refrigerant Leaks

AJS0010J

Perform a visual inspection of all refrigeration parts, fittings, hoses and components for signs of A/C lubricant leakage, damage and corrosion. A/C lubricant leakage may indicate an area of refrigerant leakage. Allow extra inspection time in these areas when using either an electronic refrigerant leak detector or fluorescent dye leak detector.

If dye is observed, confirm the leak with an electronic refrigerant leak detector. It is possible a prior leak was repaired and not properly cleaned.

When searching for leaks, do not stop when one leak is found but continue to check for additional leaks at all system components and connections.

When searching for refrigerant leaks using an electronic leak detector, move the probe along the suspected leak area at 1 to 2 inches per second and no further than 1/4 inch from the component.

CAUTION:

Moving the electronic leak detector probe slower and closer to the suspected leak area will improve the chances of finding a leak.

Checking System for Leaks Using the Fluorescent Leak Detector

AJS0010K

1. Check A/C system for leaks using the UV lamp and safety goggles (J-42220) in a low sunlight area (area without windows preferable). Illuminate all components, fittings and lines. The dye will appear as a bright green/yellow area at the point of leakage. Fluorescent dye observed at the evaporator drain opening indicates an evaporator core assembly (tubes, core or expansion valve) leak.
2. If the suspected area is difficult to see, use an adjustable mirror or wipe the area with a clean shop rag or cloth, with the UV lamp for dye residue.
3. After the leak is repaired, remove any residual dye using dye cleaner (J-43872) to prevent future misdiagnosis.
4. Perform a system performance check and verify the leak repair with an approved electronic refrigerant leak detector.

NOTE:

Other gases in the work area or substances on the A/C components, for example, anti-freeze, windshield washer fluid, solvents and lubricants, may falsely trigger the leak detector. Make sure the surfaces to be checked are clean.

Clean with a dry cloth or blow off with shop air.

Do not allow the sensor tip of the detector to contact with any substance. This can also cause false readings and may damage the detector.

Dye Injection

AJS0010L

(This procedure is only necessary when recharging the system or when the compressor has seized and was replaced.)

1. Check A/C system static (at rest) pressure. Pressure must be at least 345 kPa (3.52 kg/cm², 50 psi).
2. Pour one bottle (1/4 ounce / 7.4 cc) of the A/C refrigerant dye into the injector tool (J-41459).
3. Connect the injector tool to the A/C LOW PRESSURE side service fitting.
4. Start engine and switch A/C ON.
5. When the A/C operating (compressor running), inject one bottle (1/4 ounce / 7.4 cc) of fluorescent dye through the low-pressure service valve using dye injector tool J-41459 (refer to the manufacturer's operating instructions).
6. With the engine still running, disconnect the injector tool from the service fitting.

CAUTION:

Be careful the A/C system or replacing a component, pour the dye directly into the open system connection and proceed with the service procedures.

7. Operate the A/C system for a minimum of 20 minutes to mix the dye with the system oil. Depending on the leak size, operating conditions and location of the leak, it may take from minutes to days for the dye to penetrate a leak and become visible.


REFRIGERANT LINES

Electronic Refrigerant Leak Detector PRECAUTIONS FOR HANDLING LEAK DETECTOR


AJS0010M

When performing a refrigerant leak check, use a J-41995 A/C leak detector or equivalent. Ensure that the instrument is calibrated and set properly per the operating instructions.


The leak detector is a delicate device. In order to use the leak detector properly, read the operating instructions and perform any specified maintenance.

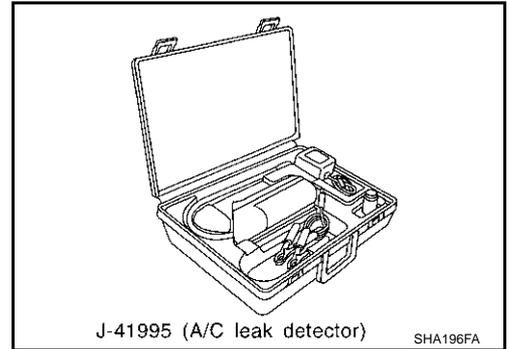


1. Position probe approximately 5 mm (3/16 in) away from point to be checked.

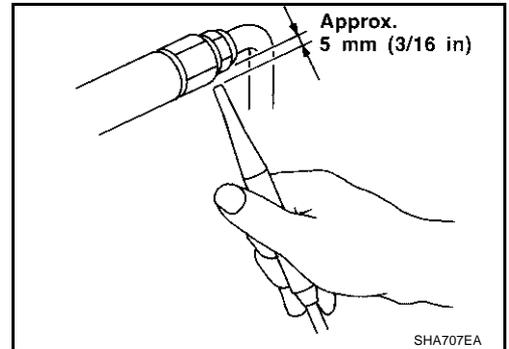

2. When testing, circle each fitting completely with probe.

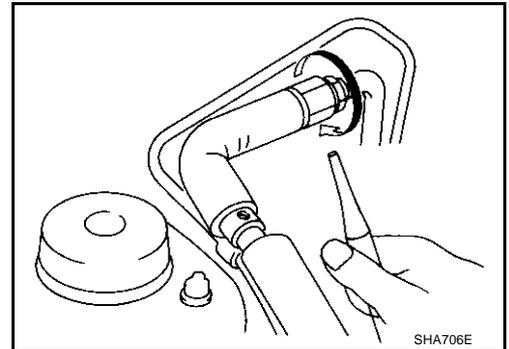

3. Move probe along component approximately 25 to 50 mm (1 to 2 in)/sec.

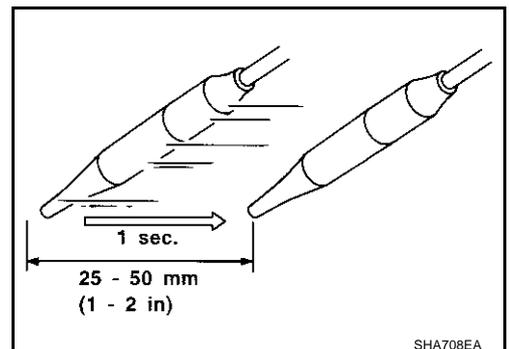

A
B
C
D
E
F
G
H
I
J
K
L
M

ATC

REFRIGERANT LINES

CHECKING PROCEDURE

To prevent inaccurate or false readings, make sure there is no refrigerant vapor, shop chemicals, or cigarette smoke in the vicinity of the vehicle. Perform the leak test in calm area (low air/wind movement) so that the leaking refrigerant is not dispersed.

1. Turn engine OFF.
2. Connect a suitable A/C manifold gauge set to the A/C service ports.
3. Check if the A/C refrigerant pressure is at least 345 kPa (3.52 kg/cm² , 50 psi) above 16°C (61°F). If less than specification, recover/evacuate and recharge the system with the specified amount of refrigerant.

NOTE:

At temperatures below 16°C (61°F), leaks may not be detected since the system may not reach 345 kPa (3.52 kg/cm² , 50 psi).

4. Perform the leak test from the high side (compressor discharge a to evaporator inlet g) to the low side (evaporator drain hose h to shaft seal m). Refer to [ATC-151, "Components"](#) . Perform a leak check for the following areas carefully. Clean the component to be checked and move the leak detected probe completely around the connection/component.

Compressor

Check the fitting of high- and low-pressure hoses, relief valve and shaft seal.

Liquid tank

Check the refrigerant connection.

Service valves

Check all around the service valves. Ensure service valve caps are secured on the service valves (to prevent leaks).

NOTE:

After removing A/C manifold gauge set from service valves, wipe any residue from valves to prevent any false readings by leak detector.

Cooling unit (Evaporator)


With engine OFF, turn blower fan on "High" for at least 15 seconds to dissipate any refrigerant trace in the cooling unit. Wait a minimum of 10 minutes accumulation time (refer to the manufacturer's recommended procedure for actual wait time) before inserting the leak detector probe into the drain hose.

Keep the probe inserted for at least 10 seconds. Use caution not to contaminate the probe tip with water or dirt that may be in the drain hose.

5. If a leak detector detects a leak, verify at least once by blowing compressed air into area of suspected leak, then repeat check as outlined above.
6. Do not stop when one leak is found. Continue to check for additional leaks at all system components. If no leaks are found, perform steps 7-10.
7. Start engine.
8. Set the heater A/C control as follows;
 - a. A/C switch: ON
 - b. Face mode
 - c. Intake position: Recirculation
 - d. Max cold temperature
 - e. Fan speed: High
9. Run engine at 1,500 rpm for at least 2 minutes.
10. Turn engine off and perform leak check again following steps 4 through 6 above.

REFRIGERANT LINES

Refrigerant leaks should be checked immediately after stopping the engine. Begin with the leak detector at the compressor. The pressure on the high pressure side will gradually drop after refrigerant circulation stops and pressure on the low pressure side will gradually rise, as shown in the graph. Some leaks are more easily detected when pressure is high.

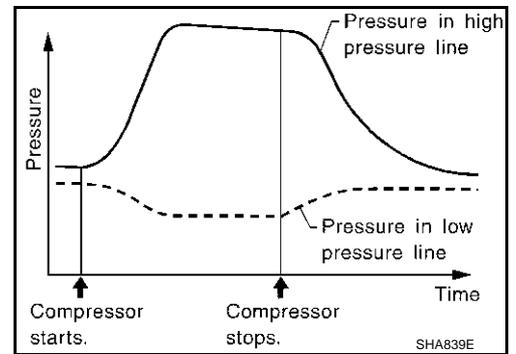

11. Before connecting ACR4 to vehicle, check ACR4 gauges. No refrigerant pressure should be displayed. If pressure is displayed, recover refrigerant from equipment lines and then check refrigerant purity.
12. Confirm refrigerant purity in supply tank using ACR4 and refrigerant identifier.
13. Confirm refrigerant purity in vehicle A/C system using ACR4 and refrigerant identifier.
14. Discharge A/C system using approved refrigerant recovery equipment. Repair the leaking fitting or component as necessary.
15. Evacuate and recharge A/C system and perform the leak test to confirm no refrigerant leaks.
16. Perform A/C performance test to ensure system works properly.

A
B
C
D
E
F
G
H
I
K
L
M

ATC

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Compressor

AJS0010N

Model	ZEXEL VALEO CLIMATE CONTROL make DKS-17D
Type	Swash plate
Displacement cm ³ (cu in)/rev	175.5 (10.7)
Cylinder bore × stroke mm (in)	30.5 (1.20) × 24.0 (0.94)
Direction of rotation	Clockwise (viewed from drive end)
Drive belt	Poly V

Lubricant

AJS0010O

Model	ZEXEL VALEO CLIMATE CONTROL make DKS-17D	
Name	Nissan A/C System Oil Type S (DH-PS)	
Part number	KLH00-PAGS0	
Capacity m ℓ (US fl oz, Imp fl oz)	Total in system	150 (5.03, 5.3)
	Compressor (Service part) charging amount	150 (5.03, 5.3)

Refrigerant

AJS0010P

Type	HFC-134a (R-134a)
Capacity kg (lb)	0.55 (1.21)

Engine Idling Speed

AJS0010Q

Refer to [EC-52, "Idle Speed and Ignition Timing Check"](#) .

Belt Tension

AJS0010R

Refer to [EM-11, "DRIVE BELTS"](#) .