

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

SECTION **IDX**

ALPHABETICAL INDEX

A

<p>ABS (anti-lock brake system) BR-30</p> <p>ABS actuator BR-41</p> <p>ABS circuit diagram BR-56</p> <p>ABS component parts and connector locations..... BR-53</p> <p>ABS control unit BR-40</p> <p>ABS hydraulic circuit..... BR-30</p> <p>ABS self-diagnosis BR-44</p> <p>ABS symptom chart BR-46</p> <p>ABS system components BR-31</p> <p>ABS trouble diagnoses BR-43</p> <p>ABS wheel sensors BR-38</p> <p>ABS wiring diagram BR-34</p> <p>A/C air flow..... HA-18</p> <p>A/C circuit diagram (auto A/C) HA-65</p> <p>A/C circuit diagram (manual A/C) HA-38</p> <p>A/C component layout..... HA-17</p> <p>A/C compressor clutch removal and installation..... HA-106</p> <p>A/C compressor description HA-11</p> <p>A/C compressor mounting HA-105</p> <p>A/C compressor precaution HA-5</p> <p>A/C compressor special service tool HA-5</p> <p>A/C control linkage adjustment (manual A/C)..... HA-51</p> <p>A/C control operation (auto A/C)..... HA-54</p> <p>A/C control operation (manual A/C)..... HA-19</p> <p>A/C diagnostic work flow (auto A/C) HA-55</p> <p>A/C diagnostic work flow (manual A/C) HA-21</p> <p>A/C harness layout (auto A/C)..... HA-63</p> <p>A/C harness layout (manual A/C) HA-36</p> <p>A/C HFC134a (R134a) system precaution..... HA-3</p> <p>A/C HFC134a (R134a) system service procedure..... HA-98</p> <p>A/C HFC134a (R134a) system service tools..... HA-6</p> <p>A/C HFC134a system service equipment precaution..... HA-8</p> <p>A/C lubricant (R134a) HA-100</p> <p>A/C lubrication oil HA-100</p> <p>A/C operational check..... HA-22, 56</p> <p>A/C performance chart..... HA-32</p> <p>A/C performance test diagnoses HA-30</p> <p>A/C relay HA-50, 86</p> <p>A/C service data specification..... HA-110</p> <p>A/C switch HA-49, 85</p> <p>A/C symptom chart (auto A/C)..... HA-58</p> <p>A/C symptom chart (manual A/C) HA-24</p> <p>A/C system description (auto A/C)..... HA-88</p> <p>A/C trouble diagnoses (auto A/C) HA-55</p> <p>A/C trouble diagnoses (manual A/C) HA-21</p> <p>A/C wiring diagram (auto A/C) HA-66</p> <p>A/C wiring diagram (manual A/C) HA-39</p> <p>Accelerator control system FE-3</p> <p>Accelerator wire adjustment..... FE-3</p> <p>Air bag..... RS-5</p>	<p>Air bag disposal RS-13</p> <p>Air bag module..... RS-8</p> <p>Air bag precautions GI-2</p> <p>Air bleeding for brake system BR-5</p> <p>Air cleaner filter replacement..... MA-13</p> <p>Air conditioner cut control EC-16</p> <p>Air flow meter - See Mass air flow sensor..... EC-93</p> <p>Air mix door control linkage adjustment..... HA-87</p> <p>Air mix. door motor HA-94</p> <p>Air spoiler, rear BT-20</p> <p>Alternator EL-40</p> <p>Ambient sensor HA-90</p> <p>Angular tightening application EM-2</p> <p>Antenna - See Power antenna EL-137</p> <p>Antenna..... EL-137</p> <p>Anti-freeze coolant mixture ratio..... MA-9</p> <p>ASCD (automatic speed control device) EL-155</p> <p>AT control EC-208</p> <p>AT control unit AT-97</p> <p>AT diagnosis communication line..... EC-236</p> <p>AT fluid temperature sensor..... AT-101</p> <p>AT removal and installation..... AT-122</p> <p>AT self-diagnoses..... AT-41</p> <p>AT shift lock system..... AT-112</p> <p>AT trouble diagnoses AT-13</p> <p>Audio EL-137</p> <p>Audio and A/C control removal and installation - See Instrument panel BT-11</p> <p>Automatic amplifier..... HA-92</p> <p>Automatic transmission fluid replacement..... MA-18</p> <p>Automatic transmission number..... GI-35</p> <p>Auxiliary air control (AAC)..... EC-204</p> <p>Axle housing (rear)..... RA-8</p>
---	---

B

<p>Back door..... BT-7</p> <p>Back door opener - See Back door..... BT-7</p> <p>Back door trim BT-19</p> <p>Back-up lamp..... EL-62</p> <p>Back-up lamp switch (MT) MT-4</p> <p>Ball joint front axle FA-26</p> <p>Battery..... EL-24</p> <p>Baulk ring (MT) MT-10</p> <p>Belt inspection (drive belt) MA-10</p> <p>Blower motor..... HA-49, 85</p> <p>Blower resistor HA-49</p> <p>Body alignment..... BT-37</p> <p>Boost pressure control EC-182</p> <p>Brake booster..... BR-17</p> <p>Brake control valve (Proportioning valve) BR-8</p> <p>Brake fluid change BR-4</p> <p>Brake fluid level MA-21</p> <p>Brake fluid level and line check BR-4</p> <p>Brake hydraulic line..... BR-6</p> <p>Brake inspection MA-21</p> <p>Brake lines and cables inspection..... MA-21</p>

ALPHABETICAL INDEX

Brake lining temporary checking	MA-22
Brake master cylinder	BR-14
Brake pedal	BR-12
Bumper, front	BT-5
Bumper, rear	BT-7

C

Camshaft inspection	EM-24
Camshaft position sensor inspection	EC-186
Center bearing assembly (propeller shaft)	PD-10
Center bearing disassembly (propeller shaft)	PD-9
Charging system	EL-36
Chassis and body maintenance	MA-17
Cigarette lighter	EL-126
Circuit breaker	EL-20
Clearance lamp	EL-56
Clock	EL-126
Clutch cover	CL-12
Clutch damper	CL-8
Clutch disc	CL-11
Clutch fluid level	MA-17
Clutch master cylinder	CL-6
Clutch operating cylinder	CL-7
Clutch pedal	CL-3
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-9
Clutch withdrawal lever	CL-9
Coil spring (front)	FA-24
Coil spring (rear)	RA-12
Collision diagnosis	RS-36
Combination lamp, front, removal and installation	BT-5
Combination meter	EL-87
Combination meter removal and installation - See Instrument panel	BT-11
Combination switch	EL-41
Compression pressure	EM-8
Compressor clutch removal and installation	HA-106
Compressor description	HA-11
Compressor mounting	HA-105
Compressor precaution	HA-5
Compressor special service tool	HA-5
Connecting rod	EM-39
Connecting rod bearing clearance	EM-43
Connecting rod bushing clearance	EM-44
Console box - See Instrument panel	BT-11
CONSULT for ABS	BR-47
CONSULT for ECCS	EC-43
CONSULT general information	GI-32
Control lever (MT)	MT-12
Control lever Transfer	TF-8
Control valve (AT)	AT-145
Converter housing installation	AT-123
Coolant replacement	MA-11
Cooling circuit (engine)	LC-8

Counter gear (MT)	MT-10
Counter gear Transfer	TF-10
Coupling sleeve (MT)	MT-10
Crank angle sensor built into distributor - See Camshaft position sensor	EC-182
Crankcase emission control system - See positive crankcase ventilation	EC-20
Crankshaft assembly	EM-45
Crankshaft bearing clearance	EM-42
Crankshaft inspection	EM-41
Crankshaft position sensor (OBD) DTC0802, P0335	EC-178
Crankshaft position sensor (OBD) DTC0802, P0335 inspection	EC-181
Cruise control - See ASCD	EL-155
Cylinder block	EM-37
Cylinder block boring	EM-41
Cylinder head	EM-20
Cylinder head bolt tightening	EM-31

D

Daytime light system	EL-47
Daytime running light - See Daytime light system	EL-47
Detonation sensor - See Knock sensor	EC-175
Diagnosis sensor unit	RS-8
Diagnostic trouble code (DTC) chart	EC-62
Diagnostic trouble code (DTC) for ECCS OBD system	EC-32
Differential carrier assembly (except FF)	PD-29, 51
Differential carrier disassembly (except FF)	PD-36
Differential gear oil replacement	MA-20
Dimensions	GI-36
Distributor	EC-15
Distributor ignition (DI) system	EC-15
Dome light - See Interior lamp	EL-81
Door mirror	BT-36
Door trim	BT-17
Door, front	BT-9
Door, rear	BT-10
Drive pinion diff. inspection (except FF)	PD-21, 40
Drive pinion height (except FF)	PD-23, 47
Drive plate runout	EM-44
Drive shaft (front)	FA-17
Dropping resistor (AT)	AT-103
Dual pressure switch	HA-50, 86

E

ECCS basic inspection	EC-60
ECCS circuit diagram	EC-9
ECCS component parts location	EC-7
ECCS fail-safe system	EC-75
ECCS on board diagnostic system	EC-32

ALPHABETICAL INDEX

ECCS symptom matrix chart	EC-76	Final drive removal and installation (except FF)	PD-14
ECCS system diagram and chart	EC-10	Floor trim	BT-15
ECCS trouble diagnoses	EC-56	Fluid temperature sensor (AT)	AT-101
ECM input/output signal inspection	EC-83	Fluids	MA-8
EGR control (EGRC) - BPT valve	EC-195	Flywheel runout	EM-44
EGR control (EGRC) - solenoid valve	EC-228	Fog lamp, front	EL-64
EGR temperature sensor	EC-232	Fork rod (MT)	MT-12
EGR temperature sensor inspection	EC-235	Forward clutch	AT-164
EGR valve & EVAP canister purge con- trol solenoid valve	EC-228	Freeze frame data	EC-33
EGR valve & EVAP canister purge con- trol solenoid valve inspection	EC-231	Front axle	FA-11
EGR valve inspection	EC-194	Front bumper	BT-5
EGRC - BPT valve inspection	EC-196	Front combination lamp removal and installation	BT-5
Electric sun roof	EL-150	Front disc brake	BR-20
Electrical units location	EL-239	Front door	BT-9
Electronic ignition system	EC-15	Front drive shaft Transfer	TF-10
Engine compartment	BT-37	Front final drive disassembly (4WD)	PD-16
Engine control module (ECM)	EC-211	Front final drive pre-inspection (4WD)	PD-16
Engine coolant temperature sensor (ECTS)	EC-103	Front final drive removal and installa- tion (4WD)	PD-14
Engine coolant temperature sensor (ECTS) P0115, DTC0103	EC-103	Front fog lamp	EL-64
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection	EC-106	Front heated oxygen sensor (Right bank)	EC-118
Engine coolant temperature sensor (ECTS) P0125, DTC0908	EC-112	Front heated oxygen sensor (Left bank)	EC-135
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection	EC-116	Front heated oxygen sensor heater (Right bank)	EC-123
Engine oil filter replacement	MA-14	Front heated oxygen sensor heater (Left bank)	EC-140
Engine oil precautions	GI-4	Front oxygen sensor (O2S) monitor	EC-34
Engine oil replacement	MA-14	Front passenger air bag	RS-5
Engine outer component parts	EM-6	Front seat	BT-26
Engine removal	EM-34	Front seat belt	RS-3
Engine room - See Engine compartment	BT-37	Front suspension	FA-22
Engine serial number	GI-35	Front washer	EL-114
EVAP canister inspection	EC-18	Front wiper	EL-114
EVAP canister purge control	EC-18	Fuel check valve inspection	EC-19
EVAP canister purge volume control valve	EC-18	Fuel cut control (at no load & high engine speed)	EC-17
EVAP vapor lines inspection	MA-16	Fuel filler lid	BT-7
Evaporative emission (EVAP) system	EC-18	Fuel filter replacement	MA-13
Exhaust gas recirculation (EGR) system	EC-187	Fuel gauge	EL-87, 91
Exhaust gas recirculation (EGR) valve	EC-187	Fuel injection system function (Left bank)	EC-161, 166
Exhaust system	FE-7	Fuel injection system function (Right bank)	EC-151, 156
Exhaust system inspection	MA-17	Fuel line inspection	MA-12
Exterior	BT-20	Fuel precautions	GI-5
Exterior lamp	EL-56	Fuel pressure check	EC-21
		Fuel pressure regulator	EC-22
		Fuel pressure release	EC-21
		Fuel pump	EC-244
		Fuel pump control	EC-244
		Fuel system	FE-4
		Fuel tank vacuum relief valve inspection	EC-19
		Fuse	EL-20
		Fusible link	EL-20

F

Fan control amp.	HA-96
Fan switch	HA-49, 85
Fast idle cam (FIC) inspection and adjustment	EC-23
Final drive disassembly (except FF)	PD-36
Final drive pre-inspection (except FF)	PD-36

ALPHABETICAL INDEX

G

Garage jack and safety stand GI-38
 Gauges EL-86
 Gears (MT) MT-10
 Generator - See Alternator EL-40
 Generic scan tool (GST) EC-54
 Grease MA-8
 Greasing propeller shaft MA-19
 Ground distribution EL-21

H

Harness connector EL-5
 Harness layout EL-242
 Hazard warning lamp EL-67
 Headlamp EL-44
 Heated seat BT-28, EL-154
 Height (Dimensions) GI-36
 HFC134a (R134a) system precaution HA-3
 HFC134a (R134a) system service procedure HA-98
 HFC134a (R134a) system service tools HA-6
 HFC134a system service equipment precaution HA-8
 High clutch AT-162
 Hood BT-5
 Horn EL-126
 How to erase DTC for ECCS OBD system EC-32
 How to follow flow chart in trouble diagnoses GI-29
 How to perform efficient diagnosis for an electrical incident GI-18
 How to read wiring diagrams GI-8
 How to use this manual GI-6
 Hydraulic lash adjuster inspection EM-29

I

IACV-AAC valve inspection EC-207
 IACV-FICD solenoid valve EC-252
 Identification plate GI-35
 Idle air control valve (IACV) EC-204
 Ignition wire inspection EC-174
 Illumination EL-75
 In vehicle sensor HA-89
 Inhibitor switch AT-102
 Injector inspection EC-241
 Injector removal and installation EC-22
 Instrument panel BT-11
 Intake air temperature sensor EC-98
 Intake air temperature sensor inspection EC-102
 Intake door control linkage adjustment... HA-51, 87
 Intake door motor HA-52, 95
 Integrated homelink transmitter EL-236

Interior BT-15
 Interior lamp EL-75

J

Jacking points GI-37
 Journal bearing assembly (propeller shaft) PD-11
 Journal bearing disassembly (propeller shaft) PD-9

K

Keyless entry system - See Multi-remote control system EL-194
 Knock sensor (KS) EC-175
 Knock sensor (KS) inspection EC-177
 Knuckle spindle FA-15

L

Length (Dimensions) GI-36
 License lamp EL-56
 Lifting points GI-39
 Limited slip diff. adjustment (except FF) PD-43
 Limited slip diff. assembly (except FF) PD-44
 Limited slip diff. disassembly (except FF) PD-41
 Limited slip diff. inspection (except FF) PD-42
 Line pressure solenoid valve AT-101
 Line pressure test (AT) AT-107
 Liquid gasket application EM-2
 Location of electrical units EL-239
 Low and reverse brake AT-168
 LSV (Load sensing valve) BR-9
 Lubricant (R134a) A/C HA-100
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication oil A/C HA-100
 Lubrication-locks, hinges and hood latches MA-24
 Luggage room lamp EL-81

M

Magnet clutch HA-106
 Main drive gear (MT) MT-10
 Main gear Transfer TF-10
 Mainshaft (MT) MT-10
 Mainshaft Transfer TF-10
 Maintenance (engine) MA-10
 Maintenance MA-1
 Maintenance general MA-3
 Maintenance periodic MA-5
 Maintenance schedule (1) MA-6

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL).....	EC-34
Manual transmission number.....	GI-35
Manual transmission oil replacement.....	MA-17
Map lamp.....	EL-81
Mass air flow sensor (MAFS).....	EC-93
Mass air flow sensor inspection.....	EC-97
Master cylinder (brake).....	BR-14
Master cylinder (clutch).....	CL-6
Meter.....	EL-86
MIL & Data link connectors circuit.....	EC-255
Mirror defogger.....	EL-130
Mirror, door.....	BT-36
Mirror, out side.....	BT-36
Misfire.....	EC-171
Mode door control linkage adjustment ...	HA-51, 87
Model variation.....	GI-33
Molding - See Exterior.....	BT-20
MT overhaul.....	MT-9
MT removal and installation.....	MT-5
Multi-remote control system.....	EL-194
Multiport fuel injection (MFI) system.....	EC-13
Multiport fuel injection precautions.....	GI-4

N

Neutral position switch (MT).....	MT-4
-----------------------------------	------

O

Oil change (capacity).....	MA-8
Oil pan (engine).....	EM-9
Oil pressure (engine).....	LC-4
Oil pump (AT).....	AT-141
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-18
Oil seal replacement (front final drive 4WD).....	PD-12
Oil seal replacement (front of final drive).....	PD-12
Operating cylinder (clutch).....	CL-7
Out side mirror.....	BT-36
Overdrive control switch.....	AT-102
Overrun clutch.....	AT-164
Overrun clutch solenoid valve.....	AT-101
Oversize piston.....	EM-41

P

Park/Neutral position switch.....	EC-213
Parking brake control.....	BR-28
PCV (positive crankcase ventilation) inspection.....	EC-20
Pilot bushing replacement.....	EM-46
Pinion bearing preload diff. (except FF).....	PD-23
Pinion gear height diff. (except FF).....	PD-23, 47

Piston assembly.....	EM-44
Piston pin inspection.....	EM-38
Piston ring inspection.....	EM-39
Piston to bore clearance.....	EM-40
Power antenna.....	EL-137
Power door lock.....	EL-184
Power door mirror.....	EL-151
Power seat.....	EL-152
Power steering fluid level.....	MA-23, ST-7
Power steering gear.....	ST-22
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch.....	EC-249
Power steering oil pump.....	ST-32
Power steering system bleeding.....	ST-8
Power supply routing.....	EL-8
Power transistor & ignition coil.....	EC-219
Power window.....	EL-176
Precautions (General).....	GI-2
Pressure plate - See Clutch cover.....	CL-12
Pressure test (AT).....	AT-107
Propeller shaft.....	PD-6
Propeller shaft inspection.....	MA-19
Propeller shaft on vehicle service.....	PD-7
Propeller shaft vibration.....	PD-7

R

Rack retainer adjustment.....	ST-7
Radiator.....	LC-11
Radio - See Audio.....	EL-137
Rear air spoiler.....	BT-20
Rear axle (drum brake type).....	RA-6
Rear bumper.....	BT-7
Rear combination lamp removal and installation.....	BT-20
Rear cover packing replacement diff.	PD-13
Rear door.....	BT-10
Rear drum brake.....	BR-24
Rear heated oxygen sensor (Right bank).....	EC-126
Rear heated oxygen sensor (Left bank).....	EC-143
Rear heated oxygen sensor heater (Right bank).....	EC-131
Rear heated oxygen sensor heater (Left bank).....	EC-148
Rear seat.....	BT-29
Rear seat belt.....	RS-4
Rear side window.....	BT-35
Rear suspension.....	RA-10
Rear washer.....	EL-121
Rear window defogger.....	EL-130
Rear wiper.....	EL-121
Refrigerant connection precaution.....	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-102
Refrigeration cycle.....	HA-10
Release bearing (clutch).....	CL-9
Reverse clutch.....	AT-158
Reverse gear (MT).....	MT-10
Reverse idler shaft (MT).....	MT-10

ALPHABETICAL INDEX

Reverse lamp switch (MT) - See	
Back-up lamp switch (MT).....	MT-4
Revolution sensor (AT).....	AT-103
Ring gear diff. Inspection (except FF)	PD-21, 40
Road wheel size.....	GI-36
Roof trim.....	BT-18
Room lamp - See Interior lamp.....	EL-81
Room lamp.....	EL-81
Rotor disc (front).....	FA-12

S

SAE J1930 terminology list.....	GI-43
Screw Jack.....	GI-37
Seal - See Exterior.....	BT-20
Seat belt inspection.....	MA-24
Seat belt, front.....	RS-3
Seat belt, rear.....	RS-4
Seat, front.....	BT-26
Seat, rear.....	BT-29
Self-diagnostic results.....	EC-34
Shift control (MT).....	MT-12
Shift control (TF).....	TF-11, 23
Shift fork (MT).....	MT-12
Shift lock system.....	AT-112
Shift schedule.....	AT-33
Shift solenoid valve (AT).....	AT-101
Shock absorber (adjustable, front).....	FA-28
Shock absorber (adjustable, rear).....	RA-14
Shock absorber (rear).....	RA-12
Side bearing preload (front final drive 4WD).....	PD-22
Side trim.....	BT-15
Spare tire size.....	GI-36
Spark plug replacement.....	MA-15
Speedometer.....	EL-87
Spiral cable.....	RS-8
Spot lamp.....	EL-81
Spring (Wheelarch) height.....	FA-6
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses.....	RS-17
SRS Wiring diagram.....	RS-20
Stabilizer bar (front).....	FA-25
Stabilizer bar (rear).....	RA-13
Stall test (AT).....	AT-103
Standardized relay.....	EL-6
Start signal.....	EC-242
Starter.....	EL-35
Starting system.....	EL-28
Steering gear, linkage and transfer gear inspection.....	MA-23
Steering linkage.....	ST-22
Steering switch.....	EL-43
Steering transfer gear.....	ST-14
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-60
Striking rod (MT).....	MT-12

Strut (front).....	FA-24
Sun roof, electric.....	EL-150
Sunload sensor.....	HA-91
Sunroof.....	BT-30
Supplemental Restraint System.....	RS-5
Symbols and abbreviations.....	GI-7
Synchronizer (MT).....	MT-10

T

Tachometer.....	EL-87
Tail lamp.....	EL-56
Temperature control cable and linkage adjustment.....	HA-51
Theft warning system.....	EL-208
Thermostat.....	LC-10
Three way catalyst precautions.....	GI-4
Throttle position sensor (TPS).....	EC-107
Throttle position sensor adjustment.....	EC-60
Throttle position sensor inspection.....	EC-111
Throttle position switch.....	AT-103
Throwout bearing - See Clutch release bearing.....	CL-9
Tie-rod.....	ST-26
Tie-rod ball joints.....	ST-26
Tightening torque of standard bolts.....	GI-42
Timing belt.....	EM-12
Tire rotation.....	MA-21
Tire size.....	GI-36
Tooth contact (front final drive 4WD).....	PD-28
Tooth contact diff. (except FF).....	PD-50
Torque converter clutch solenoid valve.....	AT-101
Torque converter installation.....	AT-123
Tow truck towing.....	GI-40
Towing point.....	GI-41
Transfer case.....	TF-9
Transfer gear oil.....	MA-8
Transfer oil replacement.....	MA-19
Transfer overhaul.....	TF-9
Transfer removal and installation.....	TF-7
Transfer serial number.....	GI-35
Transmission case (MT).....	MT-9
Transverse link (front).....	FA-26
Tread-FR&RR (Dimensions).....	GI-36
Trim.....	BT-15
Turn signal lamp.....	EL-67
Two trip detection logic.....	EC-32
Two-pole lift.....	GI-39

U

Under body.....	BT-39
-----------------	-------

V

Vacuum hose (brake system).....	BR-19
Vacuum hose drawing (ECCS).....	EC-11

ALPHABETICAL INDEX

Valve clearance..... EM-49
Valve guide inspection..... EM-26
Valve seat inspection..... EM-27
Valve spring inspection..... EM-28
Vehicle identification number GI-34
Vehicle speed sensor (VSS)..... EC-200
Viscosity number (SAE)..... MA-9

W

Warning buzzer..... EL-105
Warning lamps..... EL-96
Washer, front..... EL-114
Washer, rear..... EL-121
Water cock control rod adjustment..... HA-51, 87
Water pump..... LC-9
Water temperature gauge..... EL-87, 91
Weatherstrip - See Exterior..... BT-20
Wheel alignment (front)..... FA-8
Wheel balance..... MA-21

Wheel bearing (front axle)..... FA-6
Wheel bearing (rear)..... RA-5
Wheel hub (front)..... FA-12
Wheel sensors (ABS)..... BR-38
Wheel size..... GI-36
Wheelarch height..... FA-6
Wheelbase (Dimensions)..... GI-36
Wide open & closed throttle position
(CTP) switch..... EC-107
Width (Dimensions)..... GI-36
Window, rear side..... BT-35
Windshield..... BT-34
Windshield washer - See Front washer..... EL-114
Windshield wiper - See Front wiper..... EL-114
Wiper and washer..... EL-112
Wiper, front..... EL-114
Wiper, rear..... EL-121
Withdrawal lever (clutch)..... CL-9
Wrist pin - See Piston pin inspection..... EM-38