

ALPHABETICAL INDEX GI

SECTION **IDX**

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-340	A/C switch (manual A/C).....	HA-169
ABS - Wiring diagram.....	BR-36	A/C system description (auto A/C).....	HA-24
ABS sensor rotor.....	AX-6, 19	A/C trouble diagnoses (auto A/C).....	HA-28
Absolute pressure sensor.....	EC-131	A/C trouble diagnoses (manual A/C).....	HA-133
A/C air flow (auto A/C).....	HA-26	A/C, A - Wiring diagram (auto A/C).....	HA-31
A/C air flow (manual A/C).....	HA-131	A/C, M - Wiring diagram (manual A/C).....	HA-137
A/C component layout (auto A/C).....	HA-20	Accelerator control system.....	FE-3
A/C component layout (manual A/C).....	HA-129	Accelerator wire adjustment.....	FE-3
A/C compressor clutch removal and installation (auto A/C).....	HA-102	Air bag.....	RS-9
A/C compressor clutch removal and installation (manual A/C).....	HA-175	Air bag disposal.....	RS-22
A/C compressor description (manual A/C).....	HA-122	Air bag precautions.....	GI-2
A/C compressor precaution (auto A/C).....	HA-6	Air bleeding (hydraulic clutch).....	CL-7
A/C compressor precaution (manual A/C).....	HA-115	Air bleeding for brake system.....	BR-7
A/C compressor special service tool (auto A/C).....	HA-9	Air cleaner filter replacement.....	MA-17
A/C compressor special service tool (manual A/C).....	HA-118	Air conditioner cut control.....	EC-23
A/C control linkage adjustment (manual A/C).....	HA-147, 162, 164	Air flow meter - See Mass air flow sensor.....	EC-122
A/C control operation (auto A/C).....	HA-24	Air mix door control linkage adjustment (auto A/C).....	HA-56
A/C control operation (manual A/C).....	HA-130	Air mix. door motor (auto A/C).....	HA-54, 96
A/C diagnostic work flow (auto A/C).....	HA-43	Air spoiler, rear.....	BT-24
A/C diagnostic work flow (manual A/C).....	HA-140	Alternator.....	SC-14
A/C HFC134a (R134a) system precau- tion (auto A/C).....	HA-2	Ambient sensor (auto A/C).....	HA-86
A/C HFC134a (R134a) system precau- tion (manual A/C).....	HA-111	Angular tightening application.....	EM-2
A/C HFC134a (R134a) system service procedure (auto A/C).....	HA-97	Antenna - See Power antenna.....	EL-152
A/C HFC134a (R134a) system service procedure (manual A/C).....	HA-171	Anti-lock brake system - Wiring diagram.....	BR-36
A/C HFC134a (R134a) system service tools (auto A/C).....	HA-10	AP/SEN - Wiring diagram.....	EC-134
A/C HFC134a (R134a) system service tools (manual A/C).....	HA-119	ASCD (automatic speed control device).....	EL-163
A/C HFC134a system service equip- ment precaution (auto A/C).....	HA-6	ASCD - Wiring diagram.....	EL-168
A/C HFC134a system service equip- ment precaution (manual A/C).....	HA-115	A/T - Wiring diagram - AT - FTS.....	AT-94
A/C lubricant (R134a) (auto A/C).....	HA-99	A/T - Wiring diagram - AT - MAIN.....	AT-85
A/C lubricant (R134a) (manual A/C).....	HA-173	A/T - Wiring diagram - AT - PNP/SW.....	AT-89
A/C operational check (auto A/C).....	HA-44	A/T - Wiring diagram - AT - VSS A/T.....	AT-99
A/C operational check (manual A/C).....	HA-141	A/T control.....	EC-349
A/C performance chart (auto A/C).....	HA-77	A/T diagnosis communication line.....	EC-440
A/C performance chart (manual A/C).....	HA-156	A/T fluid temperature sensor.....	AT-96
A/C performance test diagnoses (auto A/C).....	HA-75	A/T self-diagnoses.....	AT-44
A/C performance test diagnoses (manual A/C).....	HA-154	A/T shift lock system.....	AT-219
A/C relay (auto A/C).....	HA-72	A/T shift lock system - Wiring diagram.....	AT-220
A/C relay (manual A/C).....	HA-169	A/T trouble diagnoses.....	AT-49
A/C self-diagnoses (auto A/C).....	HA-37	A/T Wiring diagram - AT - ENG SS.....	AT-104
A/C service data specification.....	HA-185	A/T Wiring diagram AT - 1ST.....	AT-109
		A/T Wiring diagram AT - 2ND.....	AT-115
		A/T Wiring diagram AT - 3RD.....	AT-121
		A/T Wiring diagram AT - 4TH.....	AT-128
		A/T Wiring diagram AT - BA/FTS.....	AT-174
		A/T Wiring diagram AT - LPSV.....	AT-146
		A/T Wiring diagram AT - NONDTC.....	AT-185
		A/T Wiring diagram AT - OVRCSV.....	AT-169
		A/T Wiring diagram AT - SSV/A.....	AT-152
		A/T Wiring diagram AT - SSV/B.....	AT-157
		A/T Wiring diagram AT - TCCSIG.....	AT-140
		A/T Wiring diagram AT - TCV.....	AT-134
		A/T Wiring diagram AT - TPS.....	AT-163
		A/T Wiring diagram AT - VSSMTR.....	AT-179
		AT/C - Wiring diagram.....	EC-351
		ATDIAG - Wiring diagram.....	EC-441
		Audio.....	EL-142
		AUDIO - Wiring diagram.....	EL-143, 146

ALPHABETICAL INDEX

Audio and A/C control removal and installation - See Instrument panelBT-13
 Auto air conditioner - Wiring diagram (auto A/C).....HA-31
 Automatic amplifier (auto A/C)HA-35, 47
 Automatic speed control system - See ASCDEL-163
 Automatic transmission fluid replacement.....MA-22
 Automatic transmission numberGI-42
 Auxiliary air control (AAC) valveEC-336
 Axle housing (rear)AX-19

B

Back doorBT-8
 Back door opener - See Back doorBT-8
 Back door trim.....BT-23
 Back-up lampEL-53
 Back-up lamp switch (M/T)MT-6
 BACK/L - Wiring diagram.....EL-53
 Ball joint (front)SU-14
 Basic inspectionEC-86
 BatterySC-3
 Baulk ring (M/T).....MT-13
 Block heaterEM-45
 Blower motor (auto A/C).....HA-63
 Blower motor (manual A/C).....HA-149
 Blower resistor (manual A/C)HA-149
 Body alignmentBT-48
 BPT valveEC-297, 300
 Brake boosterBR-18
 Brake control valve (Proportioning valve)BR-10
 Brake fluid changeBR-6
 Brake fluid levelMA-26
 Brake fluid level and line checkBR-6
 Brake hydraulic line.....BR-8
 Brake inspectionMA-26
 Brake lines and cables inspectionMA-26
 Brake lining wear temporary checkingMA-27
 Brake master cylinderBR-15
 Brake pedalBR-13
 Bulb specificationsEL-332
 Bumper, frontBT-5
 Bumper, rearBT-8
 BYPS/V - Wiring diagramEC-430, 436

C

Camshaft inspectionEM-30
 Camshaft position sensor (CMPS).....EC-282
 Canister-See EVAP canisterEC-24
 Center bearing assembly (propeller shaft).....PD-10
 Center bearing disassembly (propeller shaft).....PD-8
 Center case (Transfer)TF-11

CHARGE - Wiring diagramSC-12 **GI**
 Charging system.....SC-11
 Chassis and body maintenanceMA-21 **MA**
 CHIME - Wiring diagram.....EL-108
 CIGAR - Wiring diagram.....EL-133
 Cigarette lighter.....EL-133
 Circuit breaker.....EL-14 **EM**
 CKPS - Wiring diagram.....EC-279, 375
 Closed loop control (Left bank)EC-365 **LC**
 Closed loop control (Right bank)EC-365
 Closed throttle position switchEC-343
 Clutch cover.....CL-13 **EC**
 Clutch damperCL-10
 Clutch discCL-13
 Clutch fluid level.....MA-21 **FE**
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-9
 Clutch pedal.....CL-5 **CL**
 Clutch release bearing.....CL-11
 Clutch withdrawal leverCL-11
 CMPS - Wiring diagramEC-285 **MT**
 Coil spring (front).....SU-9
 Coil spring (rear)SU-19
 Collision diagnosis.....RS-59 **AT**
 Combination lamp, front, removal and installationBT-5
 Combination lamp, rear, removal and installationBT-24 **TF**
 Combination meter.....EL-79
 Combination meter removal and installation - See Instrument panel.....BT-13 **PD**
 Combination switch.....EL-20
 COMPAS - Wiring diagramEL-94 **AX**
 CompassEL-93
 Component Location (auto A/C).....HA-28
 Component Location (manual A/C)HA-133 **SU**
 Compression pressureEM-12
 Compressor clutch removal and installation (auto A/C).....HA-102 **BR**
 Compressor clutch removal and installation (manual A/C)HA-175
 Compressor description (manual A/C)HA-122 **ST**
 Compressor precaution (auto A/C)HA-6
 Compressor precaution (manual A/C)HA-115
 Compressor special service tool (auto A/C).....HA-9 **RS**
 Compressor special service tool (manual A/C)HA-118 **BT**
 Connecting rod.....EM-47
 Connecting rod bearing clearanceEM-52
 Connecting rod bushing clearanceEM-53 **HA**
 Connector inspectionGI-18
 Console box - See Instrument panel.....BT-13 **SC**
 CONSULT for ABSBR-42
 CONSULT for engineEC-67
 CONSULT general information.....GI-35 **EL**
 Control lever (Transfer).....TF-10
 Control valve (A/T)AT-254
 Converter housing installation.....AT-231
 Coolant mixture ratio.....MA-12
 Coolant replacement.....MA-14

ALPHABETICAL INDEX

Cooling circuit (engine).....	LC-8
Counter gear (M/T).....	MT-13
Counter gear (Transfer).....	TF-12
Coupling sleeve (M/T).....	MT-13
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-282
“Crankcase emission control system - See positive crankcase ventilation”.....	EC-30
Crankshaft.....	EM-50
Crankshaft position sensor (OBD).....	EC-277
Crankshaft position sensor (OBD) cog chipping.....	EC-373
Cruise control - See ASCD.....	EL-163
Cylinder block.....	EM-44
Cylinder block boring.....	EM-49
Cylinder head.....	EM-26
Cylinder head bolt tightening.....	EM-38

D

Data link connector for Consult.....	EC-67
Daytime light system.....	EL-34
Daytime running light - See Daytime light system.....	EL-34
DEF - Wiring diagram.....	EL-136
Detonation sensor - See Knock sensor.....	EC-272
Diagnostic trouble code (DTC) for OBD system.....	EC-2, 45
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-95
Differential carrier assembly.....	PD-29, 55
Differential carrier disassembly.....	PD-42
Differential gear oil replacement.....	MA-25
Dimensions.....	GI-42
Distributor.....	EC-22
Distributor ignition (DI) system.....	EC-22
D/LOCK - Wiring diagram.....	EL-195
Dome light - See Interior lamp.....	EL-72
Door glass.....	BT-11
Door lock.....	BT-11
Door mirror.....	BT-47
Door trim.....	BT-19
Door, front.....	BT-11
Door, rear.....	BT-12
Drive belt inspection.....	MA-13
Drive chain (Transfer).....	TF-12
Drive pinion diff. inspection.....	PD-22, 45
Drive pinion height.....	PD-24, 51
Drive plate runout.....	EM-53
Drive shaft (front).....	AX-12
Dropping resistor (A/T).....	AT-149
DTC work support.....	EC-76
DTRL - Wiring diagram.....	EL-38
Dual pressure switch (auto A/C).....	HA-73
Dual pressure switch (manual A/C).....	HA-169

E

ECM input/output signal.....	EC-106
ECTS - Wiring diagram.....	EC-148, 164
EGR control (EGRC) - BPT valve.....	EC-297
EGR control (EGRC) - solenoid valve.....	EC-378
EGR control valve.....	EC-289, 296, 389, 394
EGR temperature sensor.....	EC-383
EGR/TS - Wiring diagram.....	EC-386
EGRC/V - Wiring diagram.....	EC-380
EGRC1 - Wiring diagram.....	EC-293, 392
Electric sun roof.....	EL-156
Electrical diagnoses.....	GI-21
Electrical ignition system.....	EC-22
Electrical unit.....	Foldout
Electrical units location.....	EL-312
Engine compartment.....	BT-49
Engine control circuit diagram.....	EC-16
Engine control component parts location.....	EC-14
Engine control module (ECM).....	EC-353
Engine control system diagram and chart.....	EC-17
Engine coolant temperature sensor (ECTS).....	EC-146, 162
Engine fail-safe system.....	EC-96
Engine oil filter replacement.....	MA-18
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-17
Engine outer component parts.....	EM-9
Engine removal.....	EM-41
Engine room - See Engine compartment.....	BT-49
Engine serial number.....	GI-42
EVAP canister.....	EC-25
EVAP canister purge volume control solenoid valve.....	EC-24, 311, 403
EVAP canister vent control valve.....	EC-317, 410, 421
EVAP control system (small leak) diagnosis.....	EC-304, 396
EVAP control system pressure sensor.....	EC-323
EVAP control system purge flow moni- toring diagnosis.....	EC-415
EVAP vapor lines inspection.....	MA-20
Evaporative emission (EVAP) system.....	EC-24
Exhaust gas recirculation (EGR) valve.....	EC-289, 389
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-21
Exterior.....	BT-24

F

Fan control amp. (auto A/C).....	HA-65
Fan switch (manual A/C).....	HA-149
Fast idle cam (FIC) inspection and adjustment.....	EC-33

ALPHABETICAL INDEX

F/FOG - Wiring diagram	EL-56
FICD - Wiring diagram	EC-469
Final drive disassembly	PD-41
Final drive pre-inspection	PD-41
Final drive removal and installation	PD-41
Finisher, interior - See Trim	BT-17
Fluid temperature sensor (A/T)	AT-96
Fluids	MA-11
Flywheel (clutch)	CL-14
Flywheel runout	EM-53
FO2H-L - Wiring diagram	EC-207
FO2H-R - Wiring diagram	EC-206
Fog lamp, front	EL-54
Fog lamp, front, removal and installation	BT-5
Fork rod (M/T)	MT-15
Forward clutch	AT-273
F/PUMP - Wiring diagram	EC-460
Freeze frame data	EC-46
FRO2LH - Wiring diagram	EC-171, 191, 200
FRO2RH - Wiring diagram	EC-170, 190, 199
Front axle	AX-2
Front bumper	BT-5
Front case (Transfer)	TF-11
Front combination lamp removal and installation	BT-5
Front disc brake	BR-21
Front door	BT-11
Front drive shaft (Transfer)	TF-12
Front final drive disassembly (4WD)	PD-17
Front final drive pre-inspection (4WD)	PD-17
Front final drive removal and installa- tion (4WD)	PD-17
Front fog lamp	EL-54
Front fog lamp removal and installation	BT-5
Front heated oxygen sensor (HO2S) (Left bank)	EC-167, 175, 181, 187, 196
Front heated oxygen sensor (HO2S) (Right bank)	EC-167, 175, 181, 187, 196
Front heated oxygen sensor heater (Left bank)	EC-204
Front heated oxygen sensor heater (Right bank)	EC-204
Front oxygen sensor (O2S) monitor	EC-58
Front seat	BT-31
Front seat belt	RS-3
Front suspension	SU-2
Front washer	EL-115
Front wiper	EL-115
Fuel cut control (at no load & high engine speed)	EC-24
Fuel filler lid	BT-8
Fuel filter replacement	MA-16
Fuel gauge	EL-79
Fuel injection system (Left bank)	EC-249, 256
Fuel injection system (Right bank)	EC-249, 256
Fuel line inspection	MA-16
Fuel precautions	GI-6
Fuel pressure check	EC-31
Fuel pressure regulator	EC-32
Fuel pressure release	EC-31

Fuel pump	EC-459	GI
Fuel system	FE-4	
Fuel tank vacuum relief valve	EC-25	
FUELLH - Wiring diagram	EC-252, 259	MA
FUELRH - Wiring diagram	EC-251, 258	
Fuse	EL-14	EM
Fuse block	Foldout	
Fusible link	EL-14	

G

Garage jack and safety stand	GI-45	
Gauges	EL-79	
Gear components (M/T)	MT-13	FE
Generator - See Alternator	SC-14	
Generic scan tool (GST)	EC-80	GL
Glass	BT-11	
Grease	MA-11	
Ground distribution	EL-15	MT

H

Harness connector	EL-3	
Harness connector inspection	GI-18	TF
Harness layout	EL-315	
Hazard warning lamp	EL-59	
Headlamp	EL-23	PD
Headlining - See Roof trim	BT-22	
Heated seat	BT-34, EL-162	AX
Height (Dimensions)	GI-42	
HFC134a (R134a) system precaution (auto A/C)	HA-2	SU
HFC134a (R134a) system precaution (manual A/C)	HA-111	
HFC134a (R134a) system service pro- cedure (auto A/C)	HA-97	BR
HFC134a (R134a) system service pro- cedure (manual A/C)	HA-171	ST
HFC134a (R134a) system service tools (auto A/C)	HA-10	RS
HFC134a (R134a) system service tools (manual A/C)	HA-119	
HFC134a system service equipment precaution (auto A/C)	HA-6	BT
HFC134a system service equipment precaution (manual A/C)	HA-115	HA
High clutch	AT-271	
H/LAMP - Wiring diagram	EL-27	
Hood	BT-5	SC
Horn	EL-132	
HORN - Wiring diagram	EL-132	
How to erase DTC for OBD system	EC-55	EL
HSEAT - Wiring diagram	EL-162	
Hydraulic lash adjuster inspection	EM-35	

ALPHABETICAL INDEX

I

IACV-AAC valve	EC-336
IACV-FICD solenoid valve	EC-468
IATS - Wiring diagram	EC-143
Identification plate	GI-41
Idle air control valve (IACV)	EC-336
Idle mixture ratio	EC-35
Idle speed	EC-35
IGN/SG - Wiring diagram	EC-369
Ignition timing	EC-35
Ignition wire inspection	EC-271
ILL - Wiring diagram	EL-67
Illumination	EL-64
In vehicle sensor (auto A/C)	HA-89
INJECT - Wiring diagram	EC-450
Injector	EC-454
Injector removal and installation	EC-32
Instrument panel	BT-13
INT/L - Wiring diagram	EL-75
Intake air temperature sensor	EC-140
Intake door control linkage adjustment (auto A/C)	HA-62
Intake door control linkage adjustment (manual A/C)	HA-147
Intake door motor (auto A/C)	HA-58
Intake door motor (manual A/C)	HA-144
Intake sensor (auto A/C)	HA-94
Integrated homelink transmitter	EL-257
Interior	BT-17
Interior lamp	EL-72
Interior lamp on-off control	EL-73
IVCS (Nissan communicator)	EL-275
IVCS - Wiring diagram	EL-286

J

Jacking points	GI-44
Journal bearing assembly (propeller shaft)	PD-10
Journal bearing disassembly (propeller shaft)	PD-9
Junction box (J/B)	Foldout

K

Keyless entry system - See Multi-re- mote control system	EL-208
Knock sensor (KS)	EC-272
Knuckle spindle	AX-10
KS - Wiring diagram	EC-274

L

Length (Dimensions)	GI-42
---------------------------	-------

License lamp	EL-45
Lifting points	GI-46
Limited slip diff. adjustment	PD-48
Limited slip diff. assembly	PD-49
Limited slip diff. disassembly	PD-46
Limited slip diff. inspection	PD-47
Line pressure solenoid valve	AT-131, 143, 148
Line pressure test (A/T)	AT-58
Liquid gasket application	EM-2
Location of electrical units	EL-312
Lock, door	BT-11
Low and reverse brake	AT-277
LSV (Load sensing valve)	BR-11
Lubricant (R134a) A/C (auto A/C)	HA-99
Lubricant (R134a) A/C (manual A/C)	HA-173
Lubricants	MA-11
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-28
Luggage room lamp	EL-72

M

MAFS - Wiring diagram	EC-127
Magnet clutch (auto A/C)	HA-69, 102
Magnet clutch (manual A/C)	HA-175
MAIN - Wiring diagram	EC-116
Main drive gear (M/T)	MT-13
Main gear (Transfer)	TF-12
Mainshaft (M/T)	MT-13
Mainshaft (Transfer)	TF-12
Maintenance (engine)	MA-13
MAJOR OVERHALL	AT-234
Major overhaul (Transfer)	TF-10
Malfunction indicator lamp (MIL)	EC-57
Manual air conditioner - Wiring diagram (manual A/C)	HA-137
Manual transmission number	GI-42
Manual transmission oil replacement	MA-21
MAP/BARO switch solenoid valve	EC-355
Mass air flow sensor (MAFS)	EC-122
Master cylinder (brake)	BR-15
Master cylinder (clutch)	CL-8
Meter	EL-79
METER - Wiring diagram	EL-83
MIL & Data link connectors circuit	EC-473
MIL/DL - Wiring diagram	EC-473
MIRROR - Wiring diagram	EL-159
Mirror defogger	EL-134
Mirror, door	BT-47
Mirror, out side	BT-47
Misfire	EC-267
Mode door control linkage adjustment (auto A/C)	HA-53
Mode door control linkage adjustment (manual A/C)	HA-164
Mode door motor (auto A/C)	HA-49
Model variation	GI-39
Molding - See Exterior	BT-24
M/T major overhaul	MT-12

ALPHABETICAL INDEX

M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-212
Multi-remote control system	EL-208
Multipoint fuel injection (MFI) system	EC-20
Multipoint fuel injection precautions	GI-5

N

NATS - Wiring diagram	EL-262
NISSAN COMMUNICATOR	EL-275
Nissan communicator (IVCS)	EL-275
NVH troubleshooting (AX)	AX-3, 18
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (PD)	PD-3
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-3, 15
NVH troubleshooting (Transfer)	TF-5
NVIS (Nissan vehicle immobiliser system)	EL-260

O

Oil change (capacity)	MA-11
Oil pan (engine)	EM-14
Oil pressure (engine)	LC-3
Oil pump (A/T)	AT-250
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-5
Oil seal replacement (engine)	EM-24
Oil seal replacement (front final drive 4WD)	PD-14
Oil seal replacement (front of final drive)	PD-38
On board diagnostic system	EC-44
Operating cylinder (clutch)	CL-9
Out side mirror	BT-47
Overdrive control switch	AT-216
Overrun clutch	AT-273
Overrun clutch solenoid valve	AT-170
Oversize piston	EM-49

P

P/ANT - Wiring diagram	EL-153
Park/Neutral position switch	EC-443
Park/neutral position switch (A/T)	AT-91, 217
Park/neutral position switch (M/T)	MT-6
Parking brake control	BR-29
Parking lamp	EL-45
PCV (positive crankcase ventilation)	EC-30
PGC/V - Wiring diagram	EC-314, 406
Pilot bushing replacement	EM-56
Pinion bearing preload diff.	PD-24
Pinion gear height diff.	PD-24, 51
Piston assembly	EM-54

Piston pin inspection	EM-46	GI
Piston ring inspection	EM-47	
Piston to bore clearance	EM-48	
PNP/SW - Wiring diagram	EC-446	MA
POWER - Wiring diagram	EL-8	
Power antenna	EL-152	
Power door lock	EL-193	EM
Power door mirror	EL-159	
Power seat	EL-160	
Power steering fluid level	MA-28, ST-7	LC
Power steering gear	ST-16	
Power steering hydraulic pressure	ST-9	
Power steering oil pressure switch	EC-464	EC
Power steering oil pump	ST-26	
Power steering system bleeding	ST-8	
Power supply routing	EL-7	FE
Power transistor & ignition coil	EC-367	
Power window	EL-185	
PRE/SE - Wiring diagram	EC-326	CL
Precautions (General)	GI-3	
Pressure plate - See Clutch cover	CL-13	MT
Pressure test (A/T)	AT-58	
Propeller shaft	PD-2	
Propeller shaft greasing	MA-24	AT
Propeller shaft inspection	MA-24	
Propeller shaft on vehicle service	PD-7	
Propeller shaft vibration	PD-7	TF
PST/SW - Wiring diagram	EC-465	

R

Rack retainer adjustment	ST-7	AX
Radiator	LC-12	
Radio - See Audio	EL-142	
Rear air spoiler	BT-24	SU
Rear axle	AX-17	
Rear bumper	BT-8	
Rear case (Transfer)	TF-11	BR
Rear combination lamp removal and installation	BT-24	
Rear cover packing replacement diff.	PD-15	ST
Rear door	BT-12	
Rear drum brake	BR-25	RS
Rear heated oxygen sensor (HO2S)	EC-210, 218, 226, 235	
Rear heated oxygen sensor (HO2S) heater	EC-243	BT
Rear seat	BT-35	
Rear seat belt	RS-4	HA
Rear side window	BT-46	
Rear suspension	SU-15	
Rear washer	EL-124	SC
Rear window defogger	EL-134	
Rear wiper	EL-124	
Refrigerant connection precaution (auto A/C)	HA-3	EL
Refrigerant connection precaution (manual A/C)	HA-112	
Refrigerant discharging evacuating charging (auto A/C)	HA-97	

ALPHABETICAL INDEX

Refrigerant general precaution (auto A/C).....	HA-3
Refrigerant general precaution (manual A/C).....	HA-112
Refrigerant lines (auto A/C).....	HA-106
Refrigerant lines (manual A/C).....	HA-180
Refrigeration cycle (auto A/C).....	HA-13
Refrigeration cycle (manual A/C).....	HA-122
Release bearing (clutch).....	CL-11
Removal and installation (A/T).....	AT-230
Removal and installation (Transfer).....	TF-9
Reverse clutch.....	AT-267
Reverse idler shaft (M/T).....	MT-13
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-6
Reverse main gear (M/T).....	MT-13
Revolution sensor (A/T).....	AT-101
Ring gear diff. inspection.....	PD-22, 45
RO2H-L - Wiring diagram.....	EC-246
RO2H-R - Wiring diagram.....	EC-245
Road wheel size.....	GI-43
Roof trim.....	BT-22
Room lamp - See Interior lamp.....	EL-72
RRO2LH - Wiring diagram.....	EC-214, 222, 230, 238
RRO2RH - Wiring diagram.....	EC-213, 221, 229, 237

S

SAE J1930 terminology list.....	GI-50
Screw jack.....	GI-44
Seal - See Exterior.....	BT-24
SEAT - Wiring diagram.....	EL-160
Seat belt inspection.....	MA-29, RS-6
Seat belt pre-tensioner.....	RS-2
Seat belt pre-tensioner disposal.....	RS-22
Seat belt, front.....	RS-3
Seat belt, rear.....	RS-4
Seat, front.....	BT-31
Seat, rear.....	BT-35
Self-diagnostic results.....	EC-58
SHIFT - Wiring diagram.....	AT-220
Shift control (Transfer).....	TF-13, 24
Shift control components (M/T).....	MT-15
Shift fork (M/T).....	MT-15
Shift lever.....	MT-15
Shift lock system.....	AT-219
Shift schedule.....	AT-309
Shift solenoid valve A (A/T).....	AT-111, 122, 131, 153
Shift solenoid valve B (A/T).....	AT-111, 116, 131, 158
Shock absorber (rear).....	SU-19
Side air bag.....	RS-20
Side bearing preload (front final drive 4WD).....	PD-23
Side trim.....	BT-17
Side window - See Rear side window.....	BT-46
Smart entrance control unit.....	EL-252
SMJ (super multiple junction).....	Foldout
Spare tire size.....	GI-43
Spark plug replacement.....	MA-19
Speedometer.....	EL-79

Spot lamp.....	EL-72
Spring (Wheelarch) height.....	SU-6
SROOF - Wiring diagram.....	EL-157
SRS - See Supplemental Restraint System.....	RS-9
SRS - Wiring diagram.....	RS-34
S/SIG - Wiring diagram.....	EC-456
Stabilizer bar (front).....	SU-12
Stabilizer bar (rear).....	SU-21
Stall test (A/T).....	AT-55
Standardized relay.....	EL-5
START - Wiring diagram.....	SC-8
Starter.....	SC-10
Starting system.....	SC-6
Steering gear, linkage and transfer gear inspection.....	MA-27
Steering linkage.....	ST-16
Steering switch.....	EL-22
Steering transfer gear.....	ST-14
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-51
STOP/L - Wiring diagram.....	EL-51
Striking rod (M/T).....	MT-15
Strut (front).....	SU-9
Sub-gear (M/T).....	MT-13
Sun roof, electric.....	EL-156
Sunload sensor (auto A/C).....	HA-91
Sunroof.....	BT-36
Supplemental Restraint System.....	RS-9
Supplemental restraint system - Wiring diagram.....	RS-34
SW/V - Wiring diagram.....	EC-359
Symbols and abbreviations.....	GI-8
Symptom matrix chart.....	EC-97
Synchronizer (M/T).....	MT-13
System readiness test (SRT) code.....	EC-46

T

Tachometer.....	EL-79
Tail lamp.....	EL-45
TAIL/L - Wiring diagram.....	EL-47
Tank fuel temperature sensor.....	EC-263
TCM circuit diagram.....	AT-11
TCM inspection table.....	AT-81
Temperature control cable and linkage adjustment (manual A/C).....	HA-162
TFTS - Wiring diagram.....	EC-265
THEFT - Wiring diagram.....	EL-234
Theft warning system.....	EL-228
Thermometer.....	EL-93
Thermostat.....	LC-10
Three way catalyst function (Left bank).....	EC-301
Three way catalyst function (Right bank).....	EC-301
Three way catalyst precautions.....	GI-5
Throttle position sensor (TPS).....	EC-151
Throttle position sensor adjustment.....	EC-86

ALPHABETICAL INDEX

Throttle position switchEC-343, AT-166, 217
 Throwout bearing - See Clutch release bearing.....CL-11
 Tie-rodST-20
 Tie-rod ball joints.....ST-20
 Tightening torque of standard bolts.....GI-49
 Timing belt.....EM-17
 Tire rotation.....MA-25
 Tire sizeGI-43
 Tooth contact (front final drive 4WD)PD-28
 Tooth contact diff.PD-54
 Torque converter installationAT-231
 Torque convertor clutch solenoid valveAT-135, 143
 Tow truck towing.....GI-46
 Towing point.....GI-48
 TP/SW - Wiring diagramEC-345
 TPS - Wiring diagram.....EC-157
 Transfer caseTF-11
 Transfer oil replacementMA-23
 Transfer serial numberGI-42
 Transmission case (M/T).....MT-12
 TRANSMT - Wiring diagramEL-257
 Tread-FR&RR (Dimensions).....GI-42
 TrimBT-17
 Trouble diagnosesGI-31
 TURN - Wiring diagramEL-61
 Turn signal lampEL-59
 Two trip detection logicEC-44
 Two-pole liftGI-46

U

Under bodyBT-51

V

Vacuum cut valveEC-24, 439
 Vacuum cut valve bypass valve.....EC-24, 428, 433
 Vacuum hose (brake system).....BR-20
 Vacuum hose drawing (Engine control)EC-18
 Valve clearance.....EM-58
 Valve guide.....EM-32
 Valve seat.....EM-33
 Valve spring.....EM-34

Vehicle identification number.....GI-41 **GI**
 Vehicle recovery (freeing a stuck vehicle).....GI-48
 Vehicle speed sensor (VSS)EC-331 **MA**
 VENT/V - Wiring diagramEC-319, 412, 424
 Viscosity number (SAE)MA-12 **EM**
 VSS - Wiring diagramEC-334

W

WARN - Wiring diagramEL-98 **EC**
 Warning chimeEL-106
 Warning lampsEL-97
 Washer, frontEL-115 **FE**
 Washer, rear.....EL-124
 Water cock control rod adjustment (manual A/C).....HA-162 **CL**
 Water pumpLC-9
 Water temperature gaugeEL-79
 Weatherstrip - See ExteriorBT-24 **MT**
 Wheel balanceMA-25
 Wheel bearing (front).....AX-4 **AT**
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-6
 Wheel sensors (ABS).....BR-53, 69 **TF**
 Wheel sizeGI-43
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-43 **PD**
 Wide open & closed throttle position switch.....EC-151
 Width (Dimensions)GI-42 **AX**
 WINDOW - Wiring diagramEL-188
 Window, door.....BT-11 **SU**
 Window, rear sideBT-46
 Window, side - See Rear side windowBT-46
 Windshield.....BT-44 **BR**
 WIP/R - Wiring diagram.....EL-127
 WIPER - Wiring diagram.....EL-117
 Wiper, front.....EL-115 **ST**
 Wiper, rearEL-124
 Wiring Diagram (Cell code) list.....EL-333
 Wiring diagrams.....GI-9 **RS**
 Withdrawal lever (clutch).....CL-11
 Wrist pin - See Piston pin inspection.....EM-46

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL



PLEASE HELP MAKE THIS SERVICE MANUAL BETTER!

Your comments are important to NISSAN and will help us to improve our Service Manuals. Use this form to report any issues or comments you may have regarding our Service Manuals. Please photocopy this form and type or print your comments below. Mail or fax to:

Nissan North America, Inc.
Technical Service Information
39001 Sunrise Drive, P.O. Box 9200
Farmington Hills, MI USA 48331
FAX: (248) 488-3910

SERVICE MANUAL: Model: _____ Year: _____

PUBLICATION NO. (Please photocopy back cover): _____

VEHICLE INFORMATION VIN: _____ Production Date: _____

Please describe any issues or problems in detail:

Page number(s) _____ Note: Please include a copy of each page, marked with your comments.

Are the trouble diagnosis procedures logical and easy to use? (circle your answer) YES NO

If no, what page number(s)? _____ Note: Please include a copy of each page, marked with your comments.

Please describe the issue or problem in detail: _____

Is the organization of the manual clear and easy to follow? (circle your answer) YES NO

Please comment: _____

What information should be included in NISSAN Service Manuals to better support you in servicing or repairing customer vehicles?

DATE: _____ YOUR NAME: _____ POSITION: _____

DEALER: _____ DEALER NO.: _____ ADDRESS: _____

CITY: _____ STATE/PROV./COUNTRY: _____ ZIP/POSTAL CODE: _____