

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

SECTION **IDX**

ALPHABETICAL INDEX

A

<p>ABS - Wiring diagramBR-37</p> <p>ABS sensor rotorAX-6, 20</p> <p>ABS/TCS C/U signalEC-583, 585</p> <p>A/C air flowHA-29, 207</p> <p>A/C component layoutHA-21, 205</p> <p>A/C compressor clutch removal and installationHA-175, 258</p> <p>A/C compressor descriptionHA-200</p> <p>A/C compressor precautionHA-7, 191</p> <p>A/C compressor special service toolHA-11, 195</p> <p>A/C control linkage adjustment (manual A/C)HA-225, 242, 244</p> <p>A/C control operation (auto A/C)HA-26</p> <p>A/C control operation (manual A/C)HA-206</p> <p>A/C diagnostic work flow (auto A/C)HA-79</p> <p>A/C diagnostic work flow (manual A/C)HA-216</p> <p>A/C HFC134a (R134a) system precautionHA-3, 187</p> <p>A/C HFC134a (R134a) system service procedureHA-170, 253</p> <p>A/C HFC134a (R134a) system service toolsHA-12, 196</p> <p>A/C HFC134a system service equipment precautionHA-8, 192</p> <p>A/C lubricant (R134a)HA-172, 255</p> <p>A/C operational checkHA-80, 217</p> <p>A/C performance chartHA-138, 236</p> <p>A/C performance test diagnosesHA-136, 234</p> <p>A/C relayHA-132, 251</p> <p>A/C self-diagnoses (auto A/C)HA-48</p> <p>A/C service data specificationHA-186, 269</p> <p>A/C switchHA-251</p> <p>A/C system description (auto A/C)HA-25</p> <p>A/C trouble diagnoses (auto A/C)HA-31</p> <p>A/C trouble diagnoses (manual A/C)HA-209</p> <p>A/C, A - Wiring diagramHA-35, 40</p> <p>A/C, M - Wiring diagramHA-213</p> <p>Accelerator control systemFE-3</p> <p>Accelerator pedal position (APP) sensorEC-708, 715, 731</p> <p>Accelerator pedal released position learningEC-81</p> <p>Actuator lever (Transfer)TF-157</p> <p>Air bagRS-11</p> <p>Air bag disposalRS-25</p> <p>Air bag precautionsGI-3</p> <p>Air bleeding for brake systemBR-9</p> <p>Air cleaner filter replacementMA-18</p> <p>Air conditioner cut controlEC-40</p> <p>Air flow meter - See Mass air flow sensorEC-194, 203, 211, 219, 478</p> <p>Air mix door control linkage adjustmentHA-104</p> <p>Air mix. door motorHA-100, 167</p> <p>Air spoiler, rearBT-36</p> <p>All-mode 4WD systemTF-43</p> <p>AlternatorSC-30</p> <p>Ambient sensorHA-155</p>	<p>Angular tightening applicationEM-3</p> <p>Antenna - See Power antennaEL-203</p> <p>Anti-lock brake system - Wiring diagramBR-37</p> <p>APPS1 - Wiring diagramEC-711</p> <p>APPS2 - Wiring diagramEC-718</p> <p>APPS3 - Wiring diagramEC-734</p> <p>ASC/BS - Wiring diagramEC-688</p> <p>ASC/SW - Wiring diagramEC-681</p> <p>ASCBOF - Wiring diagramEC-776</p> <p>ASCDEC-62</p> <p>ASCD (automatic speed control device)EL-256</p> <p>ASCD brake switchEC-685, 775</p> <p>ASCD clutch switchEC-685, 775</p> <p>ASCD steering switchEC-679</p> <p>ASCIND - Wiring diagramEC-784</p> <p>A/T - Wiring diagram - AT - FTSAT-113</p> <p>A/T - Wiring diagram - AT - MAINAT-102</p> <p>A/T - Wiring diagram - AT - PNP/SWAT-107</p> <p>A/T - Wiring diagram - AT - VSS A/TAT-119</p> <p>A/T fluid temperature sensorAT-116</p> <p>A/T self-diagnosesAT-48</p> <p>A/T shift lock systemAT-265</p> <p>A/T shift lock system - Wiring diagramAT-266</p> <p>A/T trouble diagnosesAT-55</p> <p>A/T Wiring diagram - AT - ENG SSAT-123</p> <p>A/T Wiring diagram AT - 1STAT-129</p> <p>A/T Wiring diagram AT - 2NDAT-135</p> <p>A/T Wiring diagram AT - 3RDAT-141</p> <p>A/T Wiring diagram AT - 4THAT-148</p> <p>A/T Wiring diagram AT - BA/FTSAT-195</p> <p>A/T Wiring diagram AT - CANAT-207</p> <p>A/T Wiring diagram AT - LPSVAT-170</p> <p>A/T Wiring diagram AT - NONDTCAT-218</p> <p>A/T Wiring diagram AT - OVRCSVAT-190</p> <p>A/T Wiring diagram AT - SSV/AAT-175</p> <p>A/T Wiring diagram AT - SSV/BAT-179</p> <p>A/T Wiring diagram AT - TCCSIGAT-162</p> <p>A/T Wiring diagram AT - TCVAT-156</p> <p>A/T Wiring diagram AT - TPSAT-185</p> <p>A/T Wiring diagram AT - VSSMTRAT-202</p> <p>ATP switchTF-149</p> <p>ATP warning lampTF-139</p> <p>AudioEL-191</p> <p>AUDIO - Wiring diagramEL-192</p> <p>Audio and A/C control removal and installation - See Instrument panelBT-22</p> <p>AUT/DP - Wiring diagramEL-226</p> <p>Auto air conditioner - Wiring diagramHA-35, 40</p> <p>Automatic amplifierHA-44, 89</p> <p>Automatic drive positionerEL-221</p> <p>Automatic speed control system - See ASCDEL-256</p> <p>Automatic transmission fluid replacementMA-23</p> <p>Automatic transmission numberGI-45</p> <p>AxleMA-29</p> <p>Axle housing (rear)AX-20</p>
--	---

ALPHABETICAL INDEX

B

Back door	BT-16
Back door opener - See Back door	BT-16
Back door trim	BT-35
Back-up lamp	EL-78
Back-up lamp switch (M/T)	MT-5
BACK/L - Wiring diagram	EL-78
Ball joint (front)	SU-15
Basic inspection	EC-131
Battery	SC-4
Battery/Starting/Charging System	
Tester	SC-7, 13, 23
Baulk ring (M/T)	MT-11
Blower motor	HA-114, 227
Blower resistor	HA-227
Body alignment	BT-62
Brake booster	BR-19
Brake control valve (Proportioning	
valve)	BR-12
Brake fluid change	BR-8
Brake fluid level	MA-27
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake lining wear temporary checking	MA-28
Brake master cylinder	BR-15
Brake pedal	BR-13
Brake switch	EC-702
BRK/SW - Wiring diagram	EC-704
Bulb specifications	EL-536
Bumper, front	BT-13
Bumper, rear	BT-16
BYP5/V - Wiring diagram	EC-663, 670

C

Camshaft inspection	EM-45
Camshaft position sensor (PHASE)	EC-357
CAN (Controller Area Network) ...	EL-447, 452, 476,
	498, 511
CAN - Wiring diagram ...	EC-173, EL-453, 477, 499,
	512
CAN communication ...	EC-57, 172, BR-91, EL-447,
	452, 476, 498, 511
Canister - See EVAP canister	EC-41
Center bearing assembly (propeller	
shaft)	PD-11
Center bearing disassembly (propeller	
shaft)	PD-9
Center case (Transfer)	TF-17, 160
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-22
CHIME - Wiring diagram	EL-151
CIGAR - Wiring diagram	EL-175
Cigarette lighter	EL-175

Circuit breaker	EL-18	GI
Clock	EL-176	
CLOCK - Wiring diagram	EL-176	
Closed loop control (Bank 1)	EC-575	MA
Closed loop control (Bank 2)	EC-575	
Clutch cover	CL-12	EM
Clutch disc	CL-12	
Clutch drum (Transfer)	TF-162	
Clutch fluid level	MA-22	LC
Clutch force release limit adjustment	TF-76	
Clutch master cylinder	CL-8	EC
Clutch operating cylinder	CL-9	
Clutch pedal	CL-5	
Clutch pressure switch (Transfer)	TF-148	
Clutch release bearing	CL-10	FE
Clutch withdrawal lever	CL-10	
Coil spring (front)	SU-10	CL
Coil spring (rear)	SU-40	
Collision diagnosis	RS-63	
Combination lamp, front, removal and		
installation	BT-13	MT
Combination lamp, rear, removal and		
installation	BT-36	
Combination meter	EL-123	AT
Combination meter removal and instal-		
lation - See Instrument panel	BT-22	
Combination switch	EL-32	TF
COMPAS - Wiring diagram	EL-136	
Compass	EL-135	
Component Location (auto A/C)	HA-31	PD
Component Location (manual A/C)	HA-209	
Compression pressure	EM-14	
Compressor clutch removal and		
installation	HA-175, 258	AX
Compressor description	HA-200	
Compressor precaution	HA-7, 191	SU
Compressor special service tool	HA-11, 195	
Connecting rod	EM-67	BR
Connecting rod bearing clearance	EM-71	
Connecting rod bushing clearance	EM-72	
Connector inspection	GI-21	ST
Console box - See Instrument panel	BT-22	
CONSULT for ABS	BR-43	
CONSULT for all-mode 4WD	TF-65	RS
CONSULT for engine	EC-111	
CONSULT for VDC	BR-106	
CONSULT-II general information	GI-39	BT
Control valve (A/T)	AT-301	
Control valve (Transfer)	TF-165	
Controller Area Network (CAN) ...	EL-447, 452, 476,	HA
	498, 511	
Converter housing installation	AT-277	
Coolant mixture ratio	MA-13	SC
Coolant replacement	MA-15	
Cooling circuit (engine)	LC-11	EL
Counter gear (M/T)	MT-11	
Counter gear (Transfer)	TF-18	
Coupling sleeve (M/T)	MT-11	
Crankcase emission control system -		
See positive crankcase ventilation	EC-56	
Crankshaft	EM-69	

ALPHABETICAL INDEX

Crankshaft position sensor (POS)	EC-350
Cruise control - See ASCD	EL-256
Cylinder block	EM-63
Cylinder head	EM-41
Cylinder head bolt tightening	EM-52

D

Data link connector for Consult	EC-111
Daytime light system	EL-50
Daytime running light - See Daytime light system	EL-50
DEF - Wiring diagram	EL-179
Detonation sensor - See Knock sensor	EC-345
Diagnostic trouble code (DTC) for OBD system	EC-10, 86
Diagnostic trouble code (DTC) inspec- tion priority chart	EC-137
Differential carrier assembly	PD-31, 58
Differential carrier disassembly	PD-45
Differential gear oil replacement	MA-26
Dimensions	GI-46
D/LOCK - Wiring diagram	EL-278
Dome light - See Interior lamp	EL-97
Door glass	BT-19
Door lock	BT-19
Door mirror	BT-61
Door trim	BT-31
Door, front	BT-19
Door, rear	BT-21
Drive belt inspection	MA-14
Drive chain (Transfer)	TF-18, 162
Drive pinion diff. inspection	PD-24, 48
Drive pinion height	PD-26, 54
Drive plate runout	EM-73
Drive shaft	MA-30
Drive shaft (front)	AX-12
Dropping resistor (A/T)	AT-173
DTC work support	EC-123
DTRL - Wiring diagram	EL-55

E

ECM input/output signal	EC-149
ECM power supply	EC-164, 473
ECM/PW - Wiring diagram	EC-475
ECTS - Wiring diagram	EC-238
Electric sun roof	EL-207
Electric throttle control actuator	EC-494, 496
Electrical diagnoses	GI-24
Electrical ignition system	EC-39
Electrical unit	Foldout
Electrical units location	EL-517
Engine compartment	BT-63
Engine control circuit diagram	EC-31
Engine control component parts location	EC-26
Engine control module (ECM)	EC-471

Engine control system diagram and chart	EC-34
Engine coolant temperature sensor (ECTS)	EC-236, 249
Engine fail-safe system	EC-138
Engine oil filter replacement	MA-19
Engine oil precautions	GI-7
Engine oil replacement	MA-18
Engine outer component parts	EM-10
Engine removal	EM-59
Engine room - See Engine compartment	BT-63
Engine serial number	GI-45
ETC1 - Wiring diagram	EC-498
ETC2 - Wiring diagram	EC-506
ETC3 - Wiring diagram	EC-511
EVAP canister	EC-42
EVAP canister purge volume control solenoid valve	EC-41, 396, 616
EVAP canister vent control valve	EC-403, 628, 636
EVAP control system (small leak) diagnosis	EC-381, 425, 438, 601, 645
EVAP control system pressure sensor	EC-410, 416
EVAP control system purge flow moni- toring diagnosis	EC-371
EVAP vapor lines inspection	MA-21
Evaporative emission (EVAP) system	EC-41
Exhaust system	FE-9
Exhaust system inspection	MA-22
Exterior	BT-36

F

4LO indicator lamp	TF-141
4WD shift indicator lamp	TF-135
4WD shift switch	TF-148
4WD solenoid valve	TF-148
4WD warning lamp	TF-46
Fan control amp	HA-118
Fan switch	HA-227
F/FOG - Wiring diagram	EL-80
Final drive disassembly	PD-44
Final drive pre-inspection	PD-44
Final drive removal and installation	PD-44
Finisher, interior - See Trim	BT-29
Fluid temperature sensor (A/T)	AT-116
Fluids	MA-12
Flywheel (clutch)	CL-13
Flywheel runout	EM-73
Fog lamp, front	EL-79
Fog lamp, front, removal and installation	BT-13
Fork rod (M/T)	MT-13
Forward clutch	AT-320
F/PUMP - Wiring diagram	EC-765
Freeze frame data	EC-87
Front axle	AX-2
Front bumper	BT-13

ALPHABETICAL INDEX

Front case (Transfer)TF-17, 170
 Front combination lamp removal and installationBT-13
 Front disc brakeBR-22
 Front doorBT-19
 Front drive shaft (Transfer).....TF-18, 162
 Front final drive disassembly (4WD).....PD-19
 Front final drive pre-inspection (4WD).....PD-19
 Front final drive removal and installation (4WD).....PD-19
 Front fog lamp.....EL-79
 Front fog lamp removal and installationBT-13
 Front revolution sensor (Transfer)TF-149
 Front seatBT-43
 Front seat beltRS-5
 Front suspension.....SU-3
 Front washerEL-163
 Front wiperEL-163
 Fuel cut control (at no load & high engine speed).....EC-41
 Fuel filler lid.....BT-16
 Fuel filter replacementMA-17
 Fuel gaugeEL-123
 Fuel injection systemEC-304, 312
 Fuel injection system (Bank 1)EC-304, 312
 Fuel injection system (Bank 2)EC-304, 312
 Fuel level sensor.....EC-454, 456, 458
 Fuel line inspectionMA-17
 Fuel precautionsGI-8
 Fuel pressure check.....EC-64
 Fuel pressure regulatorEC-65
 Fuel pressure releaseEC-64
 Fuel pumpEC-763
 Fuel systemFE-4
 Fuel tank temperature sensor.....EC-319, 322
 Fuel tank vacuum relief valveEC-42
 FUELB1 - Wiring diagram.....EC-306, 314
 FUELB2 - Wiring diagram.....EC-307, 315
 FuseEL-18
 Fuse and fusible link boxFoldout
 Fuse blockFoldout
 Fusible linkEL-18

G

Garage jack and safety standGI-48
 Gauges.....EL-123
 Gear components (M/T)MT-11
 Generator - See Alternator.....SC-30
 Generic scan tool (GST)EC-125
 GlassBT-19
 Glass hatch opener, electricEL-214
 GreaseMA-12
 Ground distribution.....EL-19

H

Harness connector.....EL-7

Harness connector inspectionGI-21
 Harness layoutEL-520
 Hazard warning lampEL-83
 HeadlampEL-35
 Headlining - See Roof trimBT-34
 Heated oxygen sensor 1
 (bank 1).....EC-256, 264, 278, 541, 549
 Heated oxygen sensor 1
 (bank 2).....EC-256, 264, 278, 541, 549
 Heated oxygen sensor 2
 (bank 1).....EC-287, 295, 557, 566
 Heated oxygen sensor 2
 (bank 2).....EC-287, 295, 557, 566
 Heated oxygen sensor 2 heater
 (bank 1)EC-179, 187
 Heated oxygen sensor 2 heater
 (bank 2)EC-179, 187
 Heated oxygen sensor heater.....EC-179, 187
 Heated seat.....BT-46, EL-217
 Height (Dimensions)GI-46
 HFC134a (R134a) system precautionHA-3, 187
 HFC134a (R134a) system service procedure.....HA-170, 253
 HFC134a (R134a) system service toolsHA-12, 196
 HFC134a system service equipment precaution.....HA-8, 192
 High clutch.....AT-317
 H/LAMP - Wiring diagramEL-39
 Homelink universal transceiverEL-371
 Hood.....BT-13
 HornEL-174
 HORN - Wiring diagram.....EL-174
 How to erase DTC for OBD system.....EC-100
 HSEAT - Wiring diagram.....EL-217

I

IATS - Wiring diagram.....EC-228, 233
 Identification plate.....GI-45
 Idle air volume learning.....EC-81
 Idle mixture ratio.....EC-69
 Idle speed.....EC-69, 131
 IGN/SG - Wiring diagramEC-749
 Ignition control systemEC-748
 Ignition timingEC-69, 131
 ILL - Wiring diagramEL-91
 IlluminationEL-88
 In vehicle sensorHA-158
 In-cabin MicrofilterHA-184, 267
 INJECT - Wiring diagramEC-759
 Injector.....EC-758
 Injector removal and installationEC-66
 Instrument panelBT-22
 INT/L - Wiring diagram.....EL-100
 Intake air temperature sensor.....EC-226, 231, 252
 Intake door control linkage
 adjustmentHA-113, 225
 Intake door motorHA-105, 220
 Intake manifold.....EM-12

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ALPHABETICAL INDEX

Intake sensor.....	HA-165
Intake valve timing control	EC-175, 485
Intake valve timing control (Bank 1)	EC-175, 485
Intake valve timing control (Bank 2)	EC-175, 485
Intake valve timing control solenoid valve	EC-178
Intake valve timing control solenoid valve (Bank 1).....	EC-488
Intake valve timing control solenoid valve (Bank 2).....	EC-488
Integrated homelink transmitter	EL-371
Interior	BT-29
Interior lamp	EL-97
Interior lamp on-off control.....	EL-98
Internal gear (Transfer)	TF-171
IVCB1 - Wiring diagram	EC-490
IVCB2 - Wiring diagram	EC-491

J

Jacking points.....	GI-47
Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-10
Junction box (J/B).....	Foldout

K

KEYLES - Wiring diagram	EL-304
Keyless entry system - See Multi-re- mote control system.....	EL-299
Knock sensor (KS)	EC-345
Knuckle spindle	AX-10
KS - Wiring diagram.....	EC-346

L

Length (Dimensions)	GI-46
License lamp	EL-66
Lifting points	GI-49
Limited slip diff. adjustment.....	PD-51
Limited slip diff. assembly	PD-52
Limited slip diff. disassembly.....	PD-49
Limited slip diff. inspection	PD-50
Line pressure solenoid valve.....	AT-153, 167, 173
Line pressure switch (Transfer)	TF-148
Line pressure test (A/T)	AT-64
Liquid gasket application	EM-3
LOAD - Wiring diagram	EC-787
Location of electrical units	EL-517
Lock, door	BT-19
Low and reverse brake	AT-324
Low tire pressure warning system	SU-16
Low tire pressure warning system - trouble diagnoses	SU-25

Low tire pressure warning system - Wiring diagram.....	SU-18
Lubricant (R134a) A/C	HA-172, 255
Lubricants.....	MA-12
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-30
Luggage room lamp.....	EL-97

M

MAFS - Wiring diagram	EC-198, 207, 214, 222, 480
Magnet clutch.....	HA-125, 175, 258
MAIN - Wiring diagram.....	EC-165
Main drive gear (M/T).....	MT-11
Main gear (Transfer)	TF-18
Main oil pump (Transfer).....	TF-168
Mainshaft (M/T).....	MT-11
Mainshaft (Transfer).....	TF-18, 162
Maintenance (engine)	MA-14
MAJOR OVERHALL.....	AT-281
Major overhaul (Transfer)	TF-16, 157
Malfunction indicator lamp (MIL).....	EC-102
Manual air conditioner - Wiring diagram.....	HA-213
Manual transmission number	GI-45
Manual transmission oil replacement	MA-22
Mass air flow sensor (MAFS).....	EC-194, 203, 211, 219, 478
Master cylinder (brake)	BR-15
Master cylinder (clutch)	CL-8
Meter	EL-123
METER - Wiring diagram.....	EL-128
MIL & Data link connectors circuit	EC-791
MIL/DL - Wiring diagram	EC-791
MIRROR - Wiring diagram.....	EL-213
Mirror defogger	EL-177
Mirror, door.....	BT-61
Mirror, out side	BT-61
Misfire	EC-335
Mode door control linkage adjustment...HA-99,	244
Mode door motor.....	HA-92
Model variation	GI-43
Molding - See Exterior	BT-36
M/T major overhaul	MT-10
M/T removal and installation	MT-7
Multi-remote control system.....	EL-299
Multiplex communication	HA-168
Multipoint fuel injection (MFI) system	EC-37
Multipoint fuel injection precautions.....	GI-6

N

NATS (Nissan anti-theft system).....	EL-375
NATS - Wiring diagram	EL-377
NAVI - wiring diagram.....	EL-404
Navigation System	EL-395
Neutral-4LO switch	TF-149

ALPHABETICAL INDEX

NVH troubleshooting (AX).....	AX-3, 19
NVH troubleshooting (BR).....	BR-7
NVH troubleshooting (CL).....	CL-4
NVH troubleshooting (M/T).....	MT-4
NVH troubleshooting (PD).....	PD-4
NVH troubleshooting (ST).....	ST-6
NVH troubleshooting (SU).....	SU-4, 37
NVH troubleshooting (Transfer).....	TF-10
NVIS (Nissan vehicle immobilizer system).....	EL-375

O

O2H1B1 - Wiring diagram.....	EC-182
O2H1B2 - Wiring diagram.....	EC-183
O2H2B1 - Wiring diagram.....	EC-190
O2H2B2 - Wiring diagram.....	EC-191
O2S1B1 - Wiring diagram.....	EC-258, 267, 281
O2S1B2 - Wiring diagram.....	EC-259, 268, 282
O2S2B1 - Wiring diagram	EC-289, 298, 560, 569
O2S2B2 - Wiring diagram	EC-290, 299, 561, 570
Oil change (capacity).....	MA-12
Oil filter (Transfer).....	TF-155
Oil pan (engine).....	EM-16
Oil pressure (engine).....	LC-5
Oil pump (A/T).....	AT-297
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-7
Oil seal replacement (engine).....	EM-39
Oil seal replacement (front final drive 4WD).....	PD-16
Oil seal replacement (front of final drive).....	PD-41
On board diagnostic system.....	EC-85
Operating cylinder (clutch).....	CL-9
ORVR (On-board Refueling Vapor Recovery).....	EC-47
Out side mirror.....	BT-61
Overdrive control switch.....	AT-263
Overheat.....	EC-587
Overrun clutch.....	AT-320
Overrun clutch solenoid valve.....	AT-192

P

P/ANT - Wiring diagram.....	EL-204
Park/Neutral position switch.....	EC-696
Park/neutral position switch (A/T).....	AT-109, 263
Park/neutral position switch (M/T).....	MT-5
Parking brake control.....	BR-30
Parking lamp.....	EL-66
PCV (positive crankcase ventilation).....	EC-56
Periodic maintenance.....	MA-7
PGC/V - Wiring diagram.....	EC-399, 619
PHASE - Wiring diagram.....	EC-359
Pinion bearing preload diff.....	PD-26
Pinion gear height diff.....	PD-26, 54
Piston assembly.....	EM-73

Piston pin inspection.....	EM-65	GI
Piston ring inspection.....	EM-66	
Piston to bore clearance.....	EM-68	
Planetary carrier (Transfer).....	TF-171	MA
PNP/SW - Wiring diagram.....	EC-698	
POS - Wiring diagram.....	EC-352	EM
POWER - Wiring diagram.....	EL-12	
Power antenna.....	EL-203	
Power door lock.....	EL-276	LC
Power door mirror.....	EL-213	LC
Power seat.....	EL-215	
Power steering fluid level.....	MA-29, ST-8	
Power steering gear.....	ST-17	EC
Power steering hydraulic pressure.....	ST-10	
Power steering oil pump.....	ST-27	
Power steering pressure (PSP) sensor.....	EC-466	FE
Power steering system bleeding.....	ST-9	
Power supply routing.....	EL-11	CL
Power transistor & ignition coil.....	EC-748	
Power window.....	EL-257	
PRE/SE - Wiring diagram.....	EC-412, 418	MT
Precautions (General).....	GI-4	MT
Pressure plate - See Clutch cover.....	CL-12	
Pressure test (A/T).....	AT-64	AT
Propeller shaft.....	PD-3	AT
Propeller shaft greasing.....	MA-25	
Propeller shaft inspection.....	MA-25	TF
Propeller shaft on vehicle service.....	PD-8	
Propeller shaft vibration.....	PD-8	
PS/SEN - Wiring diagram.....	EC-467	PD

R

Rack retainer adjustment.....	ST-8	
Radiator.....	LC-21, 23	SU
Radio - See Audio.....	EL-191	
Rear air spoiler.....	BT-36	BR
Rear axle.....	AX-18	BR
Rear bumper.....	BT-16	
Rear case (Transfer).....	TF-17, 160	ST
Rear combination lamp removal and installation.....	BT-36	
Rear cover packing replacement diff.....	PD-17	RS
Rear door.....	BT-21	RS
Rear drum brake.....	BR-26	
Rear heated oxygen sensor (HO2S).....	EC-557	BT
Rear seat.....	BT-47	BT
Rear seat belt.....	RS-6	
Rear side window.....	BT-60	HA
Rear suspension.....	SU-37	HA
Rear washer.....	EL-168	SC
Rear window defogger.....	EL-177	SC
Rear wiper.....	EL-168	
Refrigerant pressure sensor.....	HA-132, 251	
Refrigerant connection precaution.....	HA-5, 189	EL
Refrigerant discharging evacuating charging.....	HA-170	
Refrigerant general precaution.....	HA-4, 188	
Refrigerant lines.....	HA-179, 262	
Refrigerant pressure sensor.....	EC-770	

ALPHABETICAL INDEX

Refrigeration cycleHA-16, 200
 Release bearing (clutch).....CL-10
 REMOTE - Wiring diagram.....EL-202
 Removal and installation (A/T).....AT-276
 Removal and installation (Transfer).....TF-15, 156
 Reverse clutch.....AT-314
 Reverse idler shaft (M/T).....MT-11
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T).....MT-5
 Reverse main gear (M/T)MT-11
 Revolution sensor (A/T)AT-121
 Ring gear diff. inspectionPD-24, 48
 Road wheel sizeGI-46
 Roof trimBT-34
 Room lamp - See Interior lampEL-97
 RP/SEN - Wiring diagramEC-771

Stabilizer bar (front).....SU-13
 Stabilizer bar (rear)SU-42
 Stall test (A/T)AT-61
 Standardized relayEL-9
 START - Wiring diagram.....SC-11
 Starter.....SC-19
 Starting system.....SC-10
 Steering gear, linkage and transfer
 gear inspectionMA-28
 Steering linkageST-17
 Steering switch.....EL-34
 Steering transfer gearST-15
 Steering wheel and column.....ST-11
 Steering wheel playST-7
 Steering wheel turning force.....ST-9
 Stop lamp.....EL-76
 Stop lamp switch.....EC-685, 702, 775
 STOP/L - Wiring diagram.....EL-76
 Striking rod (M/T)MT-13
 Strut (front)SU-10
 Sub-gear (M/T)MT-11
 Sub-oil pump (Transfer)TF-168
 Sun gear (Transfer).....TF-171
 Sunload sensorHA-162
 Sunroof.....BT-48
 Sunroof, electric.....EL-207
 Supplemental Restraint SystemRS-11
 Supplemental restraint system - Wiring
 diagramRS-38
 SuspensionMA-29
 S/VCSW - Wiring diagramEC-579
 Swirl control valve control solenoid
 valveEC-514, 535
 Swirl control valve control vacuum
 check switchEC-577
 SWL/V - Wiring diagramEC-518, 537
 Symbols and abbreviationsGI-10
 Symptom matrix chartEC-139
 Synchronizer (M/T)MT-11
 System readiness test (SRT) codeEC-87

S

SAE J1930 terminology listGI-54
 Screw jackGI-47
 Seal - See ExteriorBT-36
 SEAT - Wiring diagramEL-215
 Seat belt inspectionMA-31, RS-8
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-25
 Seat belt, front.....RS-5
 Seat belt, rear.....RS-6
 Seat, frontBT-43
 Seat, rearBT-47
 Self-diagnosis (Transfer).....TF-62
 SEN/PW - Wiring diagramEC-598
 SHIFT - Wiring diagramAT-266
 Shift control (Transfer).....TF-19, 31
 Shift control components (M/T).....MT-13
 Shift fork (M/T)MT-13
 Shift leverMT-13
 Shift lock systemAT-265
 Shift schedule.....AT-356
 Shift solenoid valve A (A/T) ..AT-131, 143, 153, 177
 Shift solenoid valve B (A/T) ..AT-131, 137, 153, 181
 Shock absorber (rear)SU-40
 Side air bagRS-22
 Side bearing preload (front final drive
 4WD).....PD-25
 Side trim.....BT-29
 Side window - See Rear side windowBT-60
 Smart entrance control unitEL-362
 SMJ (super multiple junction).....Foldout
 Spare tire sizeGI-46
 Spark plug replacement.....MA-20
 Speedometer.....EL-123
 Spiral cable.....RS-18
 Splice location.....EL-452, 476, 498, 511
 Spot lamp.....EL-97
 Spring (Wheelarch) heightSU-7
 SROOF - Wiring diagramEL-208
 SRS - See Supplemental Restraint
 SystemRS-11
 SRS - Wiring diagramRS-38

T

2-4WD shift solenoid valveTF-148
 T&FLID - Wiring diagramEL-214
 TachometerEL-123
 Tail lamp.....EL-66
 TAIL/L - Wiring diagramEL-69
 TCM circuit diagramAT-13
 TCM inspection tableAT-95
 Temperature control cable and linkage
 adjustmentHA-242
 TFTS - Wiring diagram.....EC-324
 Theft warning system.....EL-328
 Thermometer.....EL-135
 Thermostat.....LC-18
 Three way catalyst function (Bank 1)EC-366
 Three way catalyst function (Bank 2)EC-366
 Three way catalyst precautions.....GI-6
 Throttle bodyEM-12

ALPHABETICAL INDEX

Throttle control motor	EC-509
Throttle control motor relay	EC-504
Throttle position sensor (TPS).....	EC-241, 327, 592, 594, 596, 723
Throttle valve closed position learning.....	EC-81
Throwout bearing - See Clutch release bearing	CL-10
Tie-rod	ST-21
Tie-rod ball joints.....	ST-21
Tightening torque of standard bolts.....	GI-52
Timing chain.....	EM-21
Tire rotation	MA-26
Tire size	GI-46
Tooth contact (front final drive 4WD)	PD-30
Tooth contact diff.	PD-57
Torque converter clutch solenoid valve	AT-158, 167
Torque converter installation	AT-277
Tow truck towing.....	GI-49
Towing point.....	GI-51
TPS1 - Wiring diagram.....	EC-330
TPS2 - Wiring diagram.....	EC-244
TPS3 - Wiring diagram.....	EC-726
Transfer case	TF-17
Transfer control unit inspection table.....	TF-90
Transfer dropping resistor.....	TF-149
Transfer fluid replacement (All-mode 4WD model)	MA-24
Transfer fluid replacement (Part time 4WD model)	MA-24
Transfer fluid temperature sensor.....	TF-148
Transfer motor.....	TF-155
Transfer motor relay.....	TF-150
Transfer serial number	GI-46
Transmission case (M/T).....	MT-10
TRANSMT - Wiring diagram	EL-371
Tread-FR&RR (Dimensions).....	GI-46
Trim	BT-29
TRNSCV - Wiring diagram	EL-371
Trouble diagnoses	GI-34
Turbine revolution sensor.....	AT-209
TURN - Wiring diagram	EL-85
Turn signal lamp	EL-83
Two trip detection logic	EC-85
Two-pole lift	GI-49

U

Under body	BT-65
------------------	-------

V

Vacuum cut valve	EC-41
Vacuum cut valve bypass valve.....	EC-41, 661, 667

Vacuum hose (brake system).....	BR-21	GI
Vacuum hose drawing (Engine control)	EC-35	
Valve clearance.....	EM-54	MA
Valve guide.....	EM-46	MA
Valve seat.....	EM-47	
Valve spring.....	EM-49	EM
Vanity mirror lamp	EL-97	EM
VDC (vehicle dynamics control)	BR-89	
Vehicle identification number.....	GI-44	LC
Vehicle recovery (freeing a stuck vehicle).....	GI-51	LC
Vehicle security (theft warning) system	EL-328	EC
Vehicle speed sensor (VSS)	EC-460	EC
VEHSEC - Wiring Diagram.....	EL-336	
VENT/V - Wiring diagram	EC-405, 630, 639	FE
VIAS	EC-739	FE
VIAS/V - Wiring diagram	EC-741	
Viscosity number (SAE).....	MA-13	CL

W

Wait detection switch	TF-149	
WARN - Wiring diagram	EL-140	AT
Warning chime	EL-149	
Warning lamps	EL-139	TF
Washer, front.....	EL-163	TF
Washer, rear.....	EL-168	
Water pump	LC-13	PD
Water temperature gauge	EL-123	PD
Weatherstrip - See Exterior	BT-36	
Wheel balance	MA-26	AX
Wheel bearing (front).....	AX-4	AX
Wheel bearing (rear)	AX-19	
Wheel hub (front).....	AX-6	SU
Wheel sensor (VDC)	BR-142	SU
Wheel sensors (ABS).....	BR-56, 80	
Wheel size	GI-46	BR
Wheelarch height	SU-7	BR
Wheelbase (Dimensions)	GI-46	
Width (Dimensions)	GI-46	ST
WINDOW - Wiring diagram	EL-261	ST
Window, door	BT-19	
Window, rear side	BT-60	RS
Window, side - See Rear side window	BT-60	RS
Windshield.....	BT-58	
WIP/R - Wiring diagram	EL-170	BT
WIPER - Wiring diagram	EL-165	BT
Wiper, front.....	EL-163	
Wiper, rear	EL-168	HA
Wiring Diagram (Cell code) list.....	EL-537	HA
Wiring diagram (Transfer)	TF-53	
Wiring diagrams	GI-11	SC
Withdrawal lever (clutch)	CL-10	SC
Wrist pin - See Piston pin inspection.....	EM-65	EL

NOTES