

A
B
AT
D
E
F
G
H
I
J
K
L
M

SECTION **AT**

AUTOMATIC TRANSMISSION

CONTENTS

INDEX FOR DTC	5	Accurate Repair	43
Alphabetical Index	5	A/T Electrical Parts Location	48
DTC No. Index	6	Circuit Diagram	49
PRECAUTIONS	7	Inspections Before Trouble Diagnosis	50
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	7	Check Before Engine is Started	54
Precautions for On Board Diagnostic (OBD) System of A/T and Engine	7	Check at Idle	54
Precautions	8	Cruise Test - Part 1	55
Service Notice or Precautions	9	Cruise Test - Part 2	57
Wiring Diagrams and Trouble Diagnosis	9	Cruise Test - Part 3	58
PREPARATION	10	Vehicle Speed at Which Gear Shifting Occurs	60
Special Service Tools	10	Vehicle Speed at Which Lock-up Occurs/Releases..	60
Commercial Service Tools	12	Symptom Chart	61
A/T FLUID	13	TCM Input/Output Signal Reference Values	83
Changing A/T Fluid	13	CONSULT-II Function (A/T)	84
Checking A/T Fluid	13	Diagnostic Procedure Without CONSULT-II	98
A/T Fluid Cooler Cleaning	13	DTC U1000 CAN COMMUNICATION LINE	100
A/T CONTROL SYSTEM	16	Description	100
Cross-Sectional View	16	On Board Diagnosis Logic	100
Shift Mechanism	18	Possible Cause	100
TCM Function	29	DTC Confirmation Procedure	100
CAN Communication	30	Wiring Diagram — AT — CAN	101
Input/Output Signal of TCM	30	Diagnostic Procedure	102
Line Pressure Control	31	DTC P0615 START SIGNAL CIRCUIT	103
Shift Control	32	Description	103
Lock-up Control	33	CONSULT-II Reference Value	103
Engine Brake Control	34	On Board Diagnosis Logic	103
Control Valve	35	Possible Cause	103
ON BOARD DIAGNOSTIC (OBD) SYSTEM	37	DTC Confirmation Procedure	103
Introduction	37	Wiring Diagram — AT — STSIG	104
OBD-II Function for A/T System	37	Diagnostic Procedure	105
One or Two Trip Detection Logic of OBD-II	37	DTC P0700 TCM	107
OBD-II Diagnostic Trouble Code (DTC)	37	Description	107
Malfunction Indicator Lamp (MIL)	40	On Board Diagnosis Logic	107
TROUBLE DIAGNOSIS	41	Possible Cause	107
DTC Inspection Priority Chart	41	DTC Confirmation Procedure	107
Fail-Safe	41	Diagnostic Procedure	107
How To Perform Trouble Diagnosis For Quick and		DTC P0705 PARK/NEUTRAL POSITION SWITCH	108
		Description	108
		CONSULT-II Reference Value	108
		On Board Diagnosis Logic	108

Possible Cause	108	On Board Diagnosis Logic	127
DTC Confirmation Procedure	108	Possible Cause	127
Wiring Diagram — AT — PNP/SW	109	DTC Confirmation Procedure	127
Diagnostic Procedure	110	Diagnostic Procedure	128
DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)	112	DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT	130
Description	112	Description	130
CONSULT-II Reference Value	112	CONSULT-II Reference Value	130
On Board Diagnosis Logic	112	On Board Diagnosis Logic	130
Possible Cause	112	Possible Cause	130
DTC Confirmation Procedure	112	DTC Confirmation Procedure	130
Wiring Diagram — AT — VSSA/T	114	Wiring Diagram — AT — FTS	131
Diagnostic Procedure	115	Diagnostic Procedure	132
DTC P0725 ENGINE SPEED SIGNAL	117	Component Inspection	134
Description	117	DTC P1716 TURBINE REVOLUTION SENSOR ...	135
CONSULT-II Reference Value	117	Description	135
On Board Diagnosis Logic	117	CONSULT-II Reference Value	135
Possible Cause	117	On Board Diagnosis Logic	135
DTC Confirmation Procedure	117	Possible Cause	135
Diagnostic Procedure	118	DTC Confirmation Procedure	135
DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE	119	Diagnostic Procedure	136
Description	119	DTC P1721 VEHICLE SPEED SENSOR MTR	137
CONSULT-II Reference Value	119	Description	137
On Board Diagnosis Logic	119	CONSULT-II Reference Value	137
Possible Cause	119	On Board Diagnosis Logic	137
DTC Confirmation Procedure	119	Possible Cause	137
Diagnostic Procedure	120	DTC Confirmation Procedure	137
DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)	121	Diagnostic Procedure	138
Description	121	DTC P1730 A/T INTERLOCK	139
CONSULT-II Reference Value	121	Description	139
On Board Diagnosis Logic	121	On Board Diagnosis Logic	139
Possible Cause	121	Possible Cause	139
DTC Confirmation Procedure	121	DTC Confirmation Procedure	139
Diagnostic Procedure	122	Judgement of A/T Interlock	140
DTC P0745 LINE PRESSURE SOLENOID VALVE	123	Diagnostic Procedure	140
Description	123	DTC P1731 A/T 1ST ENGINE BRAKING	142
CONSULT-II Reference Value	123	Description	142
On Board Diagnosis Logic	123	CONSULT-II Reference Value	142
Possible Cause	123	On Board Diagnosis Logic	142
DTC Confirmation Procedure	123	Possible Cause	142
Diagnostic Procedure	124	DTC Confirmation Procedure	142
DTC P1702 TRANSMISSION CONTROL MODULE (RAM)	125	Diagnostic Procedure	143
Description	125	DTC P1752 INPUT CLUTCH SOLENOID VALVE	144
On Board Diagnosis Logic	125	Description	144
Possible Cause	125	CONSULT-II Reference Value	144
DTC Confirmation Procedure	125	On Board Diagnosis Logic	144
Diagnostic Procedure	125	Possible Cause	144
DTC P1703 TRANSMISSION CONTROL MODULE (ROM)	126	DTC Confirmation Procedure	144
Description	126	Diagnostic Procedure	145
On Board Diagnosis Logic	126	DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION	146
Possible Cause	126	Description	146
DTC Confirmation Procedure	126	CONSULT-II Reference Value	146
Diagnostic Procedure	126	On Board Diagnosis Logic	146
DTC P1705 THROTTLE POSITION SENSOR	127	Possible Cause	146
Description	127	DTC Confirmation Procedure	146
CONSULT-II Reference Value	127	Diagnostic Procedure	147
		DTC P1757 FRONT BRAKE SOLENOID VALVE ..	148
		Description	148

CONSULT-II Reference Value	148	DTC Confirmation Procedure	162	
On Board Diagnosis Logic	148	Diagnostic Procedure	163	A
Possible Cause	148	DTC P1841 ATF PRESSURE SWITCH 1	164	
DTC Confirmation Procedure	148	Description	164	
Diagnostic Procedure	149	CONSULT-II Reference Value	164	B
DTC P1759 FRONT BRAKE SOLENOID VALVE		On Board Diagnosis Logic	164	
FUNCTION	150	Possible Cause	164	
Description	150	DTC Confirmation Procedure	164	AT
CONSULT-II Reference Value	150	Diagnostic Procedure	165	
On Board Diagnosis Logic	150	DTC P1843 ATF PRESSURE SWITCH 3	166	
Possible Cause	150	Description	166	
DTC Confirmation Procedure	150	CONSULT-II Reference Value	166	D
Diagnostic Procedure	151	On Board Diagnosis Logic	166	
DTC P1762 DIRECT CLUTCH SOLENOID VALVE 152		Possible Cause	166	
Description	152	DTC Confirmation Procedure	166	E
CONSULT-II Reference Value	152	Diagnostic Procedure	167	
On Board Diagnosis Logic	152	DTC P1845 ATF PRESSURE SWITCH 5	168	
Possible Cause	152	Description	168	
DTC Confirmation Procedure	152	CONSULT-II Reference Value	168	F
Diagnostic Procedure	153	On Board Diagnosis Logic	168	
DTC P1764 DIRECT CLUTCH SOLENOID VALVE		Possible Cause	168	
FUNCTION	154	DTC Confirmation Procedure	168	G
Description	154	Diagnostic Procedure	169	
CONSULT-II Reference Value	154	DTC P1846 ATF PRESSURE SWITCH 6	170	
On Board Diagnosis Logic	154	Description	170	H
Possible Cause	154	CONSULT-II Reference Value	170	
DTC Confirmation Procedure	154	On Board Diagnosis Logic	170	
Diagnostic Procedure	155	Possible Cause	170	I
DTC P1767 HIGH AND LOW REVERSE CLUTCH		DTC Confirmation Procedure	170	
SOLENOID VALVE	156	Diagnostic Procedure	171	
Description	156	MAIN POWER SUPPLY AND GROUND CIRCUIT. 172		J
CONSULT-II Reference Value	156	Wiring Diagram — AT — MAIN	172	
On Board Diagnosis Logic	156	Diagnostic Procedure	173	
Possible Cause	156	CLOSED THROTTLE POSITION AND WIDE OPEN		
DTC Confirmation Procedure	156	THROTTLE POSITION CIRCUIT	176	K
Diagnostic Procedure	157	CONSULT-II Reference Value	176	
DTC P1769 HIGH AND LOW REVERSE CLUTCH		Diagnostic Procedure	176	
SOLENOID VALVE FUNCTION	158	BRAKE SIGNAL CIRCUIT	177	L
Description	158	CONSULT-II Reference Value	177	
CONSULT-II Reference Value	158	Diagnostic Procedure	177	
On Board Diagnosis Logic	158	OVERDRIVE CONTROL SWITCH	178	M
Possible Cause	158	CONSULT-II Reference Value	178	
DTC Confirmation Procedure	158	Diagnostic Procedure	178	
Diagnostic Procedure	159	TROUBLE DIAGNOSIS FOR SYMPTOMS	180	
DTC P1772 LOW COAST BRAKE SOLENOID		Wiring Diagram — AT — NONDTC	180	
VALVE	160	O/D OFF Indicator Lamp Does Not Come On	183	
Description	160	Engine Cannot Be Started In “P” or “N” Position	184	
CONSULT-II Reference Value	160	In “P” Position, Vehicle Moves When Pushed	185	
On Board Diagnosis Logic	160	In “N” Position, Vehicle Moves	186	
Possible Cause	160	Large Shock (“N” to “D” Position)	187	
DTC Confirmation Procedure	160	Vehicle Does Not Creep Backward In “R” Position	189	
Diagnostic Procedure	161	Vehicle Does Not Creep Forward In “D” Position	192	
DTC P1774 LOW COAST BRAKE SOLENOID		Vehicle Cannot Be Started From D1	194	
VALVE FUNCTION	162	A/T Does Not Shift: D1 → D2	196	
Description	162	A/T Does Not Shift: D2 → D3	198	
CONSULT-II Reference Value	162	A/T Does Not Shift: D3 → D4	200	
On Board Diagnosis Logic	162	A/T Does Not Shift: D4 → D5	202	
Possible Cause	162	A/T Does Not Perform Lock-up	204	
		A/T Does Not Hold Lock-up Condition	206	

Lock-up Is Not Released	208	Components	251
Engine Speed Does Not Return to Idle	209	Oil Channel	259
A/T Does Not Shift: 5th gear → 4th gear	211	Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings	261
A/T Does Not Shift: 4th gear → 3rd gear	213	DISASSEMBLY	263
A/T Does Not Shift: 3rd gear → 2nd gear	215	Disassembly	263
A/T Does Not Shift: 2nd gear → 1st gear	217	REPAIR FOR COMPONENT PARTS	280
Vehicle Does Not Decelerate By Engine Brake ...	219	Oil Pump	280
SHIFT CONTROL SYSTEM	221	Front Sun Gear, 3rd One-Way Clutch	283
Control Device Removal and Installation	221	Front Carrier, Input Clutch, Rear Internal Gear	285
Adjustment of A/T Position	222	Mid Sun Gear, Rear Sun Gear, High and Low	
Checking of A/T Position	222	Reverse Clutch Hub	290
A/T SHIFT LOCK SYSTEM	223	High and Low Reverse Clutch	295
Description	223	Direct Clutch	297
Shift Lock System Electrical Parts Location	223	ASSEMBLY	299
Wiring Diagram — A/T — SHIFT	224	Assembly (1)	299
Diagnostic Procedure	225	Adjustment	312
KEY INTERLOCK CABLE	228	Assembly (2)	314
Components	228	SERVICE DATA AND SPECIFICATIONS (SDS) ...	321
Removal and Installation	229	General Specifications	321
ON-VEHICLE SERVICE	231	Vehicle Speed at Which Gear Shifting Occurs	321
Oil Pan	231	Vehicle Speed at Which Lock-up Occurs/Releases	322
Control Valve With TCM and A/T Fluid Temperature		Stall Speed	322
Sensor 2	233	Line Pressure	322
Rear Oil Seal	242	A/T Fluid Temperature Sensor	322
AIR BREATHER HOSE	243	Turbine Revolution Sensor	322
Removal and Installation	243	Vehicle Speed Sensor A/T (Revolution Sensor) ..	323
TRANSMISSION ASSEMBLY	245	Reverse brake	323
Removal and Installation (4x2)	245	Total End Play	323
Removal and Installation (4x4)	248		
OVERHAUL	251		

INDEX FOR DTC

INDEX FOR DTC

PFP:00024

Alphabetical Index

UCS0030Z

NOTE:

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).

Items (CONSULT- II screen terms)	DTC		Reference page
	OBD- II	Except OBD- II	
	CONSULT- II GST (*1)	CONSULT- II only "A/T"	
A/T 1ST E/BRAKING	—	P1731	AT-142
ATF PRES SW 1/CIRC	—	P1841	AT-164
ATF PRES SW 3/CIRC	—	P1843	AT-166
ATF PRES SW 5/CIRC	—	P1845	AT-168
ATF PRES SW 6/CIRC	—	P1846	AT-170
A/T INTERLOCK	P1730	P1730	AT-139
A/T TCC S/V FNCTN	P0744	P0744	AT-121
ATF TEMP SEN/CIRC	P0710	P1710	AT-130
CAN COMM CIRCUIT	U1000	U1000	AT-100
D/C SOLENOID/CIRC	P1762	P1762	AT-152
D/C SOLENOID FNCTN	P1764 (*2)	P1764	AT-154
ENGINE SPEED SIG	—	P0725	AT-117
FR/B SOLENOID/CIRC	P1757	P1757	AT-148
FR/B SOLENOID FNCT	P1759	P1759	AT-150
HLR/C SOL/CIRC	P1767	P1767	AT-156
HLR/C SOL FNCTN	P1769 (*2)	P1769	AT-158
I/C SOLENOID/CIRC	P1752	P1752	AT-144
I/C SOLENOID FNCTN	P1754 (*2)	P1754	AT-146
L/PRESS SOL/CIRC	P0745	P0745	AT-123
LC/B SOLENOID/CIRC	P1772	P1772	AT-160
LC/B SOLENOID FNCT	P1774	P1774	AT-162
PNP SW/CIRC	P0705	P0705	AT-108
STARTER RELAY/CIRC	—	P0615	AT-103
TCC SOLENOID/CIRC	P0740	P0740	AT-119
TCM	P0700	P0700	AT-107
TCM-RAM	—	P1702	AT-125
TCM-ROM	—	P1703	AT-126
TP SEN/CIRC A/T	—	P1705	AT-127
TURBINE REV S/CIRC	P1716	P1716	AT-135
VEH SPD SE/CIR-MTR	—	P1721	AT-137
VEH SPD SEN/CIR AT	P0720	P0720	AT-112

*1: These numbers are prescribed by SAE J2012.

*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

INDEX FOR DTC

UCS00310

DTC No. Index

NOTE:

If DTC U1000 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).

DTC		Items (CONSULT- II screen terms)	Reference page
OBD- II	Except OBD- II		
CONSULT- II GST (*1)	CONSULT- II only "A/T"		
—	P0615	STARTER RELAY/CIRC	AT-103
P0700	P0700	TCM	AT-107
P0705	P0705	PNP SW/CIRC	AT-108
P0710	P1710	ATF TEMP SEN/CIRC	AT-130
P0720	P0720	VEH SPD SEN/CIR AT	AT-112
—	P0725	ENGINE SPEED SIG	AT-117
P0740	P0740	TCC SOLENOID/CIRC	AT-119
P0744	P0744	A/T TCC S/V FNCTN	AT-121
P0745	P0745	L/PRESS SOL/CIRC	AT-123
—	P1702	TCM-RAM	AT-125
—	P1703	TCM-ROM	AT-126
—	P1705	TP SEN/CIRC A/T	AT-127
P1716	P1716	TURBINE REV S/CIRC	AT-135
—	P1721	VEH SPD SE/CIR-MTR	AT-137
P1730	P1730	A/T INTERLOCK	AT-139
—	P1731	A/T 1ST E/BRAKING	AT-142
P1752	P1752	I/C SOLENOID/CIRC	AT-144
P1754 (*2)	P1754	I/C SOLENOID FNCTN	AT-146
P1757	P1757	FR/B SOLENOID/CIRC	AT-148
P1759 (*2)	P1759	FR/B SOLENOID FNCT	AT-150
P1762	P1762	D/C SOLENOID/CIRC	AT-152
P1764 (*2)	P1764	D/C SOLENOID FNCTN	AT-154
P1767	P1767	HLR/C SOL/CIRC	AT-156
P1769	P1769	HLR/C SOL FNCTN	AT-158
P1772	P1772	LC/B SOLENOID/CIRC	AT-160
P1774	P1774	LC/B SOLENOID FNCT	AT-162
—	P1841	ATF PRES SW 1/CIRC	AT-164
—	P1843	ATF PRES SW 3/CIRC	AT-166
—	P1845	ATF PRES SW 5/CIRC	AT-168
—	P1846	ATF PRES SW 6/CIRC	AT-170
U1000	U1000	CAN COMM CIRCUIT	AT-100

*1: These numbers are prescribed by SAE J2012.

*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

UCS00311

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for On Board Diagnostic (OBD) System of A/T and Engine

UCS00312

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:


- Be sure to turn the ignition switch “OFF” and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. Will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. May cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

PRECAUTIONS


UCS00313

Precautions

- Before connecting or disconnecting the A/T assembly harness connector, turn ignition switch "OFF" and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned "OFF".

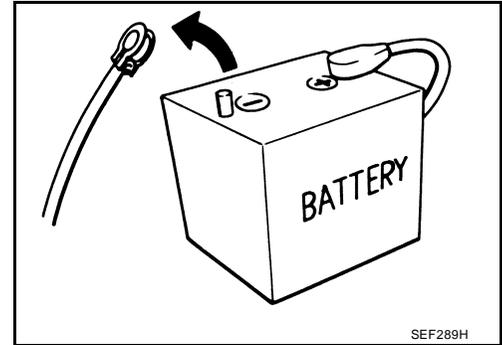

- After performing each TROUBLE DIAGNOSIS, perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE".
If the repair is completed the DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

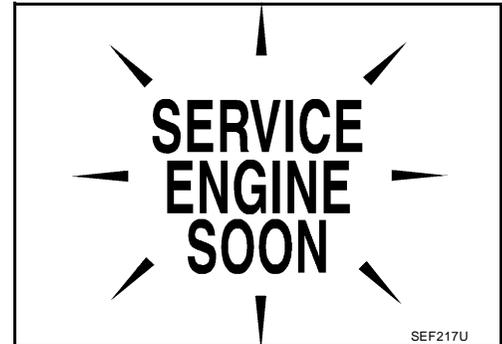

- Always use the specified brand of ATF. Refer to [MA-11, "RECOMMENDED FLUIDS AND LUBRICANTS"](#).
- Use paper rags not cloth rags during work.
- After replacing the ATF, dispose of the waste oil using the methods prescribed by law, ordinance, etc.
- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transmission is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- Clean or replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer. Refer to [AT-9, "ATF COOLER SERVICE"](#).
- After overhaul, refill the transmission with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system.
Always follow the procedures under "Changing A/T Fluid" in the AT section when changing A/T fluid. Refer to [AT-13, "Changing A/T Fluid"](#), [AT-13, "Checking A/T Fluid"](#).

PRECAUTIONS

Service Notice or Precautions

UCS00314

ATF COOLER SERVICE

If A/T fluid contains frictional material (clutches, bands, etc.), or if an A/T is repaired, overhauled, or replaced, inspect and clean the A/T fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. For A/T fluid cooler cleaning procedure, refer to [AT-13, "A/T Fluid Cooler Cleaning"](#) . For radiator replacement, refer to [CO-11, "Removal and Installation"](#) .

OBD-II SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the TCM in combination with the ECM. Refer to the table on [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.

Always perform the procedure on [AT-38, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MIL.

For details of OBD-II, refer to [EC-48, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#) .

- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-72, "HARNESS CONNECTOR"](#) .**

Wiring Diagrams and Trouble Diagnosis

UCS00315

When you read wiring diagrams, refer to the following:

- [GI-15, "How to Read Wiring Diagrams"](#).
- [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) for power distribution circuit.

When you perform trouble diagnosis, refer to the following:

- [GI-10, "How to Follow Trouble Diagnoses"](#).
- [GI-27, "How to Perform Efficient Diagnosis for an Electrical Incident"](#).

PREPARATION





PF0:00002

PREPARATION



Special Service Tools

UCS00316

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

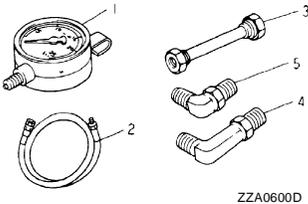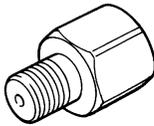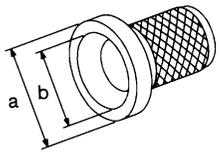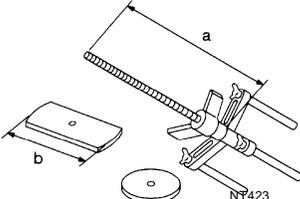Tool number (Kent-Moore No.) Tool name	Description
<p>ST2505S001 (J-34301-C) Oil pressure gauge set 1 ST25051001 (—) Oil pressure gauge 2 ST25052000 (—) Hose 3 ST25053000 (—) Joint pipe 4 ST25054000 (—) Adapter 5 ST25055000 (—) Adapter</p> 	<p>Measuring line pressure</p>
<p>KV31103600 (J-45674) Joint pipe adapter (With ST25054000)</p> 	<p>Measuring line pressure</p>
<p>ST33400001 (J-26082) Drift</p> 	<ul style="list-style-type: none"> ● Installing rear oil seal (2WD models) ● Installing oil pump housing oil seal <p>a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.</p>
<p>KV31102400 (J-34285 and J-34285-87) Clutch spring compressor</p> 	<p>Installing reverse brake return spring retainer a: 320 mm (12.60 in) b: 174 mm (6.85 in)</p>

PREPARATION


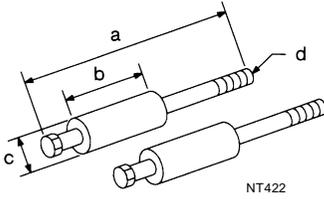
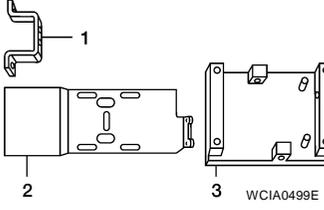
Tool number (Kent-Moore No.) Tool name	Description	
ST25850000 (J-25721-A) Sliding hammer		Remove oil pump assembly a: 179 mm (7.05 in) b: 70 mm (2.76 in) c: 40 mm (1.57 in) d: M12X1.75P
— (J-47002) Transmission jack adapter kit 1. — (J-47002-1) Center bracket 2. — (J-47002-3) Adapter plate 3. — (J-47002-4) Adapter block		Assist in removal of transmission and transfer case as one assembly using only one transmission jack.

A
B
AT
D
E
F
G
H
I
J
K
L
M

PREPARATION

Commercial Service Tools

 UCS00317

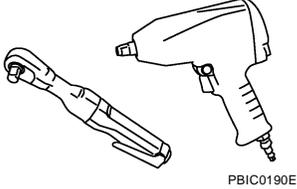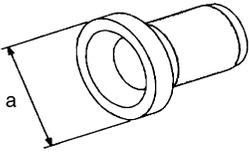Tool name	Description
<p data-bbox="164 245 272 270">Power tool</p>  <p data-bbox="850 447 922 464">PBIC0190E</p>	<p data-bbox="1013 245 1263 275">Loosening bolts and nuts</p>
<p data-bbox="164 478 212 504">Drift</p>  <p data-bbox="850 678 894 695">NT083</p>	<p data-bbox="1013 478 1295 508">Installing manual shaft seals</p> <p data-bbox="1013 508 1247 537">a: 22 mm (0.87 in) dia.</p>
<p data-bbox="164 711 212 737">Drift</p>  <p data-bbox="850 913 927 930">SCIA5338E</p>	<p data-bbox="1013 711 1377 741">Installing rear oil seal (4WD models)</p> <p data-bbox="1013 741 1247 770">a: 64 mm (2.52 in) dia.</p>

A/T FLUID

PFP:KLE40

Changing A/T Fluid

UCS00318

Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#) .

Checking A/T Fluid

UCS00319

Refer to [MA-22, "Checking the Automatic Transmission Fluid \(ATF\)"](#) .

A/T Fluid Cooler Cleaning

UCS0031A

Whenever an A/T is repaired, overhauled, or replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of A/T fluid. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as A/T fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.

A/T FLUID COOLER CLEANING PROCEDURE

1. Position a drain pan under the A/T inlet and outlet fluid cooler tube to cooler hose connection.
2. Put a different color matching mark on each cooler tube to cooler hose connection to aid in assembly.

CAUTION:


Use paint to make the matching mark. Do not damage the tubes or hose.

3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Drain any A/T fluid from the cooler hose.


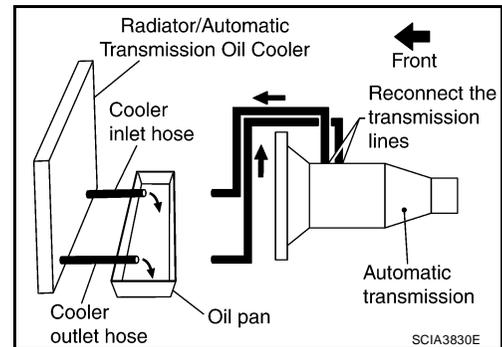


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray cooler cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.
7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the tip of the air gun and the cooler outlet hose.

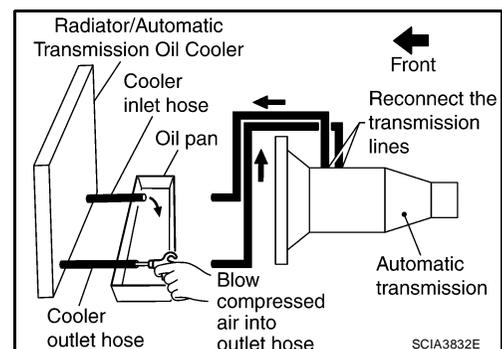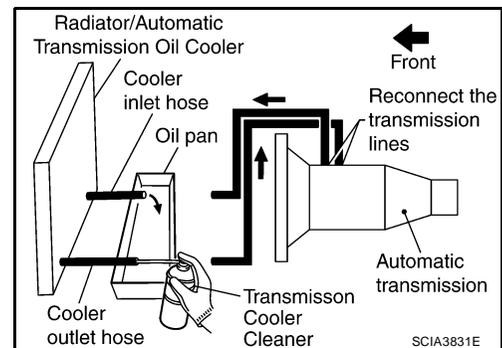

A/T FLUID

9. Blow compressed air regulated to 5 - 9 kg/cm² (70 - 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining fluid.
10. Repeat steps 5 through 9 three additional times.
11. Position an oil pan under the banjo bolts that connect the fluid cooler tubes to the A/T.
12. Remove the banjo bolts.
13. Flush each steel line from the cooler side back toward the A/T by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.
14. Blow compressed air regulated to 5 - 9 kg/cm² (70 - 130 psi) through each steel line from the cooler side back toward the A/T for 10 seconds to force out any remaining fluid.
15. Ensure all debris is removed from the steel cooler lines.
16. Ensure all debris is removed from the banjo bolts and fittings.
17. Perform [AT-14, "A/T FLUID COOLER DIAGNOSIS PROCEDURE"](#) .

A/T FLUID COOLER DIAGNOSIS PROCEDURE

NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position a drain pan under the A/T inlet and outlet fluid cooler tube to cooler hose connection.
2. Clean the exterior and tip of the cooler inlet hose.
3. Put a different color matching mark on each cooler tube to cooler hose connection to aid in assembly.


CAUTION:

Use paint to make the matching mark. Do not damage the tubes or hose.

4. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

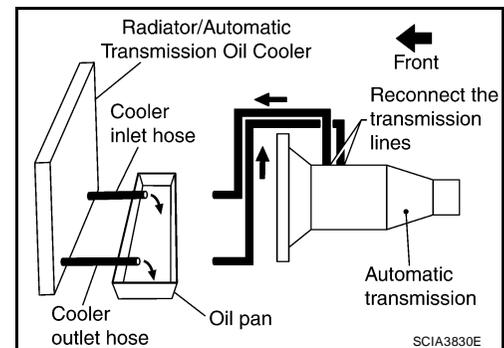


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:


- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray cooler cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Do not breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.

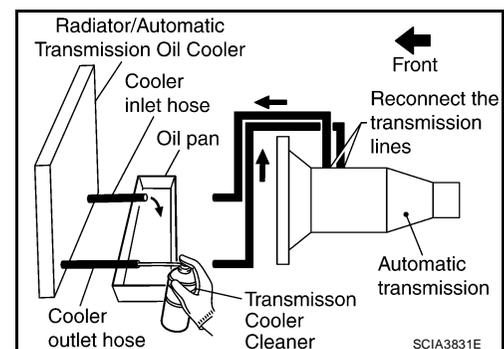


A/T FLUID

7. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.


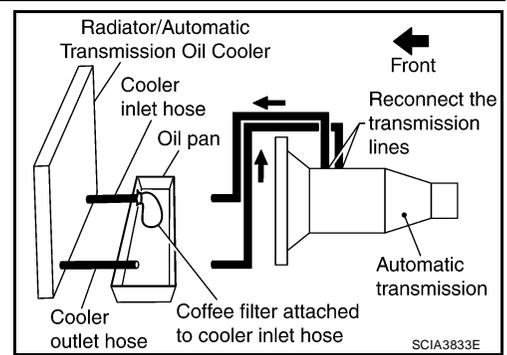


8. Insert the tip of an air gun into the end of the cooler outlet hose.
9. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
10. Blow compressed air regulated to 5 - 9 kg/cm² (70 - 130 psi) through the cooler outlet hose to force any remaining A/T fluid into the coffee filter.
11. Remove the coffee filter from the end of the cooler inlet hose.
12. Perform A/T fluid cooler inspection. Refer to [AT-15, "A/T FLUID COOLER INSPECTION PROCEDURE"](#).

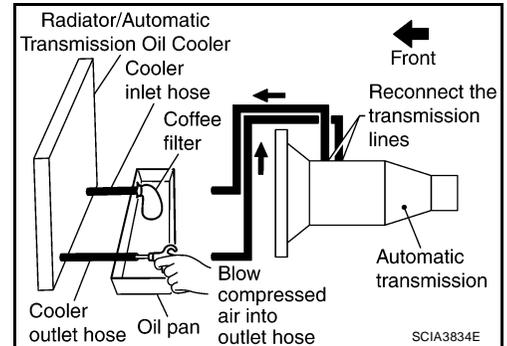

A/T FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.
 - b. If one or more pieces of debris are found that are over 1mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The A/T fluid cooler/radiator must be replaced and the inspection procedure is ended. Refer to [CO-11, "RADIATOR"](#).

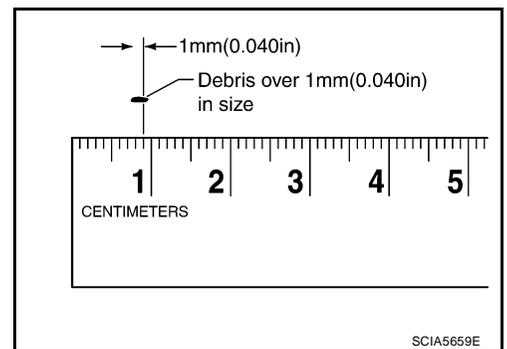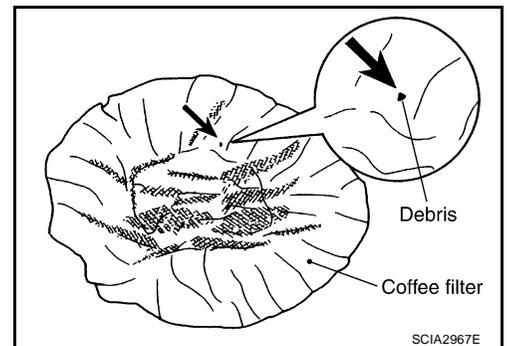

A/T FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

A/T CONTROL SYSTEM


A/T CONTROL SYSTEM

PF3:31036

Cross-Sectional View

UCS0031B

2WD models

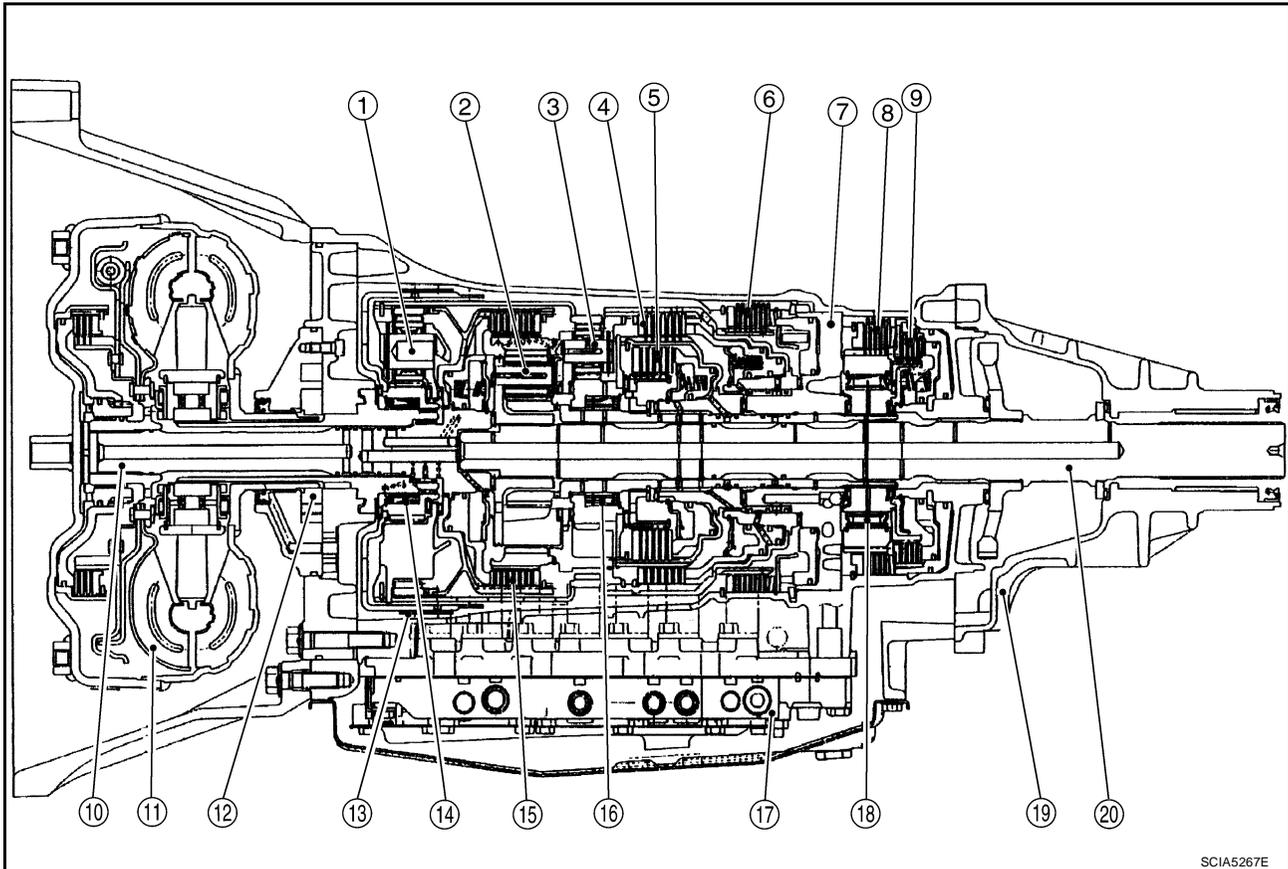


SCIA5267E

- | | | |
|-------------------------|--------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear | 3. Rear planetary gear |
| 4. Direct clutch | 5. High and low reverse clutch | 6. Reverse brake |
| 7. Drum support | 8. Forward brake | 9. Low coast brake |
| 10. Input shaft | 11. Torque converter | 12. Oil pump |
| 13. Front brake | 14. 3rd one-way clutch | 15. Input clutch |
| 16. 1st one-way clutch | 17. Control valve with TCM | 18. Forward one-way clutch |
| 19. Rear extension | 20. Output shaft | |

A/T CONTROL SYSTEM

4WD models

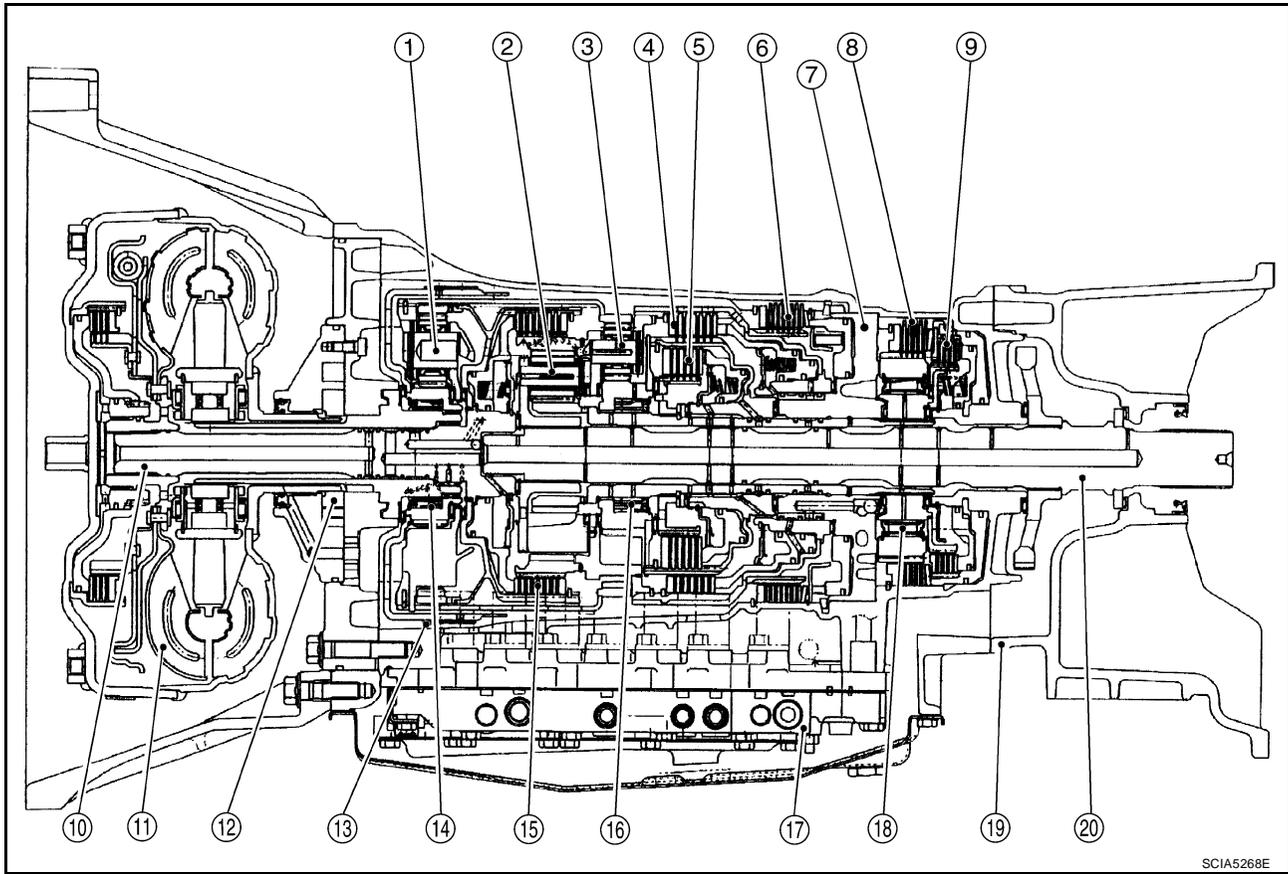

- | | | |
|-------------------------|--------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear | 3. Rear planetary gear |
| 4. Direct clutch | 5. High and low reverse clutch | 6. Reverse brake |
| 7. Drum support | 8. Forward brake | 9. Low coast brake |
| 10. Input shaft | 11. Torque converter | 12. Oil pump |
| 13. Front brake | 14. 3rd one-way clutch | 15. Input clutch |
| 16. 1st one-way clutch | 17. Control valve with TCM | 18. Forward one-way clutch |
| 19. Adapter case | 20. Output shaft | |

A

B

AT

D

E

F

G

H

I

J

K

L

M


A/T CONTROL SYSTEM

UCS0031D

Shift Mechanism

The automatic transmission uses compact triple planetary gear systems to improve power-transmission efficiency, simplify construction and reduce weight. It also employs an optimum shift control and super wide gear ratios. They improve starting performance and acceleration during medium and high-speed operation.

CONSTRUCTION

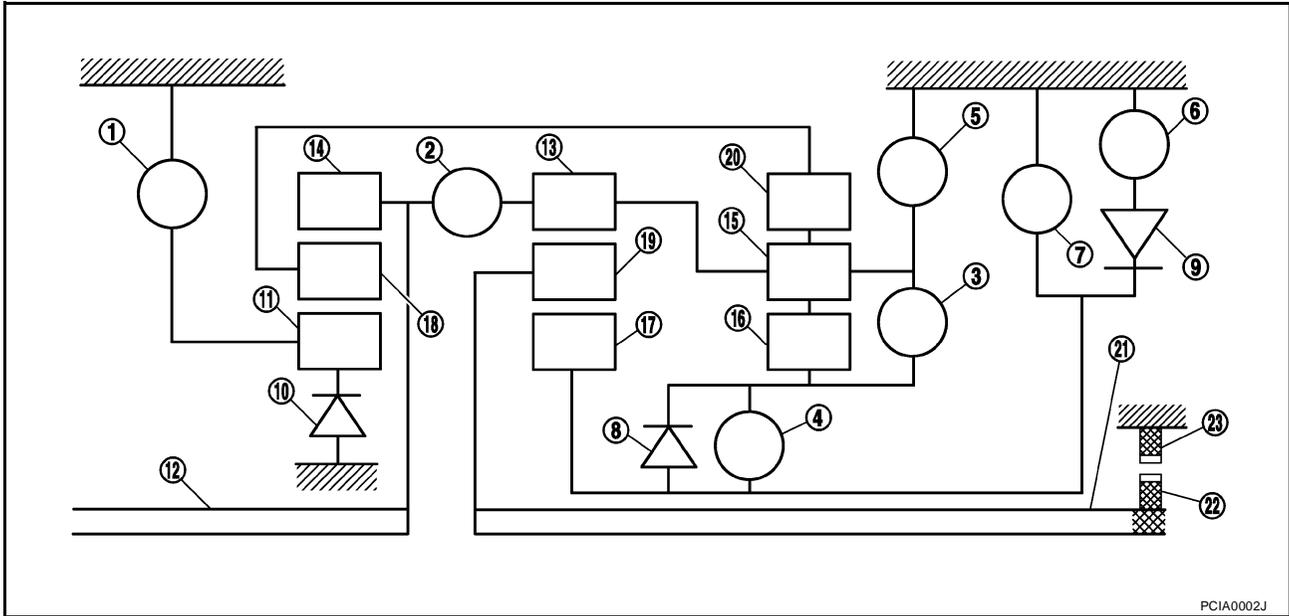

PCIA0002J

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

FUNCTION OF CLUTCH AND BRAKE


Name of the Part	Abbreviation	Function
Front brake (1)	FR/B	Fastens the front sun gear (11).
Input clutch (2)	I/C	Connects the input shaft (12), the front internal gear (14) and the mid internal gear (13).
Direct clutch (3)	D/C	Connects the rear carrier (15) and the rear sun gear (16).
High and low reverse clutch (4)	HLR/C	Connects the mid sun gear (17) and the rear sun gear (16).
Reverse brake (5)	R/B	Fastens the rear carrier (15).
Forward brake (6)	Fwd/B	Fastens the mid sun gear (17).
Low coast brake (7)	LC/B	Fastens the mid sun gear (17).
1st one-way clutch (8)	1st WOC	Allows the rear sun gear (16) to turn freely forward relative to the mid sun gear (17) but fastens it for reverse rotation.
Forward one-way clutch (9)	Fwd OWC	Allows the mid sun gear (17) to turn freely in the forward direction but fastens it for reverse rotation.
3rd one-way clutch (10)	3rd OWC	Allows the front sun gear (11) to turn freely in the forward direction but fastens it for reverse rotation.

A/T CONTROL SYSTEM

CLUTCH AND BAND CHART

Shift position	I/C	HLR/C	D/C	R/B	FR/B	LC/B	Fwd/B	1st OWC	Fwd OWC	3rd OWC	Remarks
P		△			△						PARK POSITION
R		○		○	○			☆		☆	REVERSE POSITION
N		△			△						NEUTRAL POSITION
D*1	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4↔5
	2nd		○		△		○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			
	5th	○	○			○		△	★	★	
3	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4
	2nd		○		△		○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			
2	1st	△*			△	△**	○	☆	☆	☆	Automatic shift 1↔2↔3↔4
	2nd		○		○	○	○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			
1	1st	○			○	○	○	☆	☆	☆	Locks (held stationary in 1st gear) 1↔2↔3↔4
	2nd		○		○	○	○		☆	☆	
	3rd	○	○		○		△	★		☆	
	4th	○	○	○			△	★			

- Operates
- ☆—Operates during “progressive” acceleration.
- ★—Operates and effects power transmission while coasting.
- △—Line pressure is applied but does not affect power transmission.
- △*—Operates under conditions shown in HLR/C Operating Condition
- △**—Operates under conditions shown in LC/B Operating Condition. Delay control is applied during D (4,3,2,1) ⇒N shift.
- *1: A/T will not shift to 5th when overdrive control switch is set in “OFF” position.

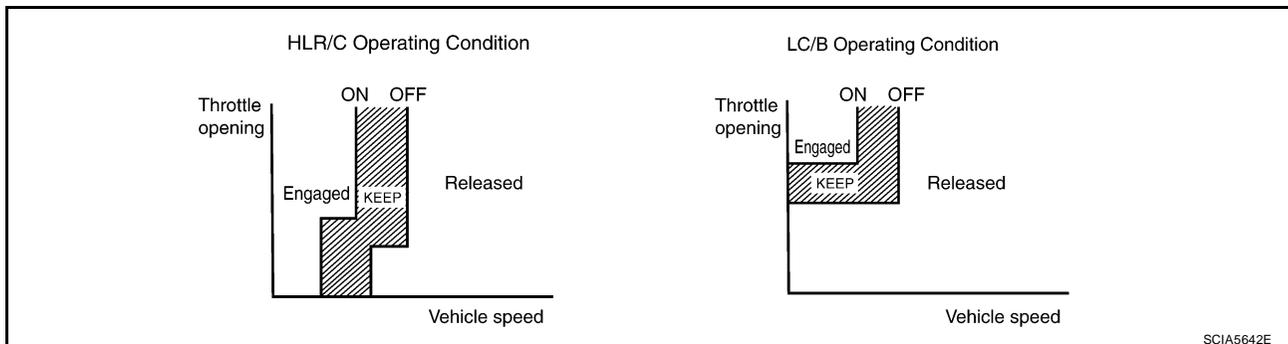

SCIA5642E

A/T CONTROL SYSTEM


POWER TRANSMISSION

“N” Position

Since both the forward brake and the reverse brake are released, torque from the input shaft drive is not transmitted to the output shaft.

“P” Position

- The same as for the “N” position, both the forward brake and the reverse brake are released, so torque from the input shaft drive is not transmitted to the output shaft.
- The parking pawl linked with the select lever meshes with the parking gear and fastens the output shaft mechanically.

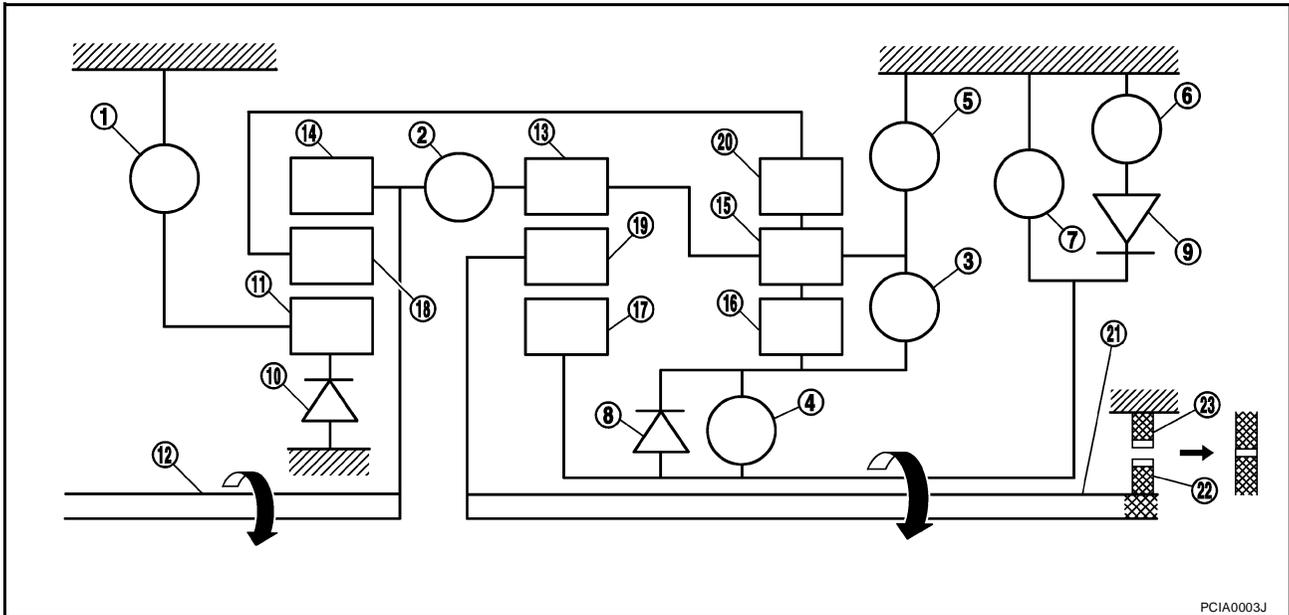


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D”, “3” and “2” Positions 1st Gear

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 1st one-way clutch regulates reverse rotation of the rear sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and the engine brake is not activated.

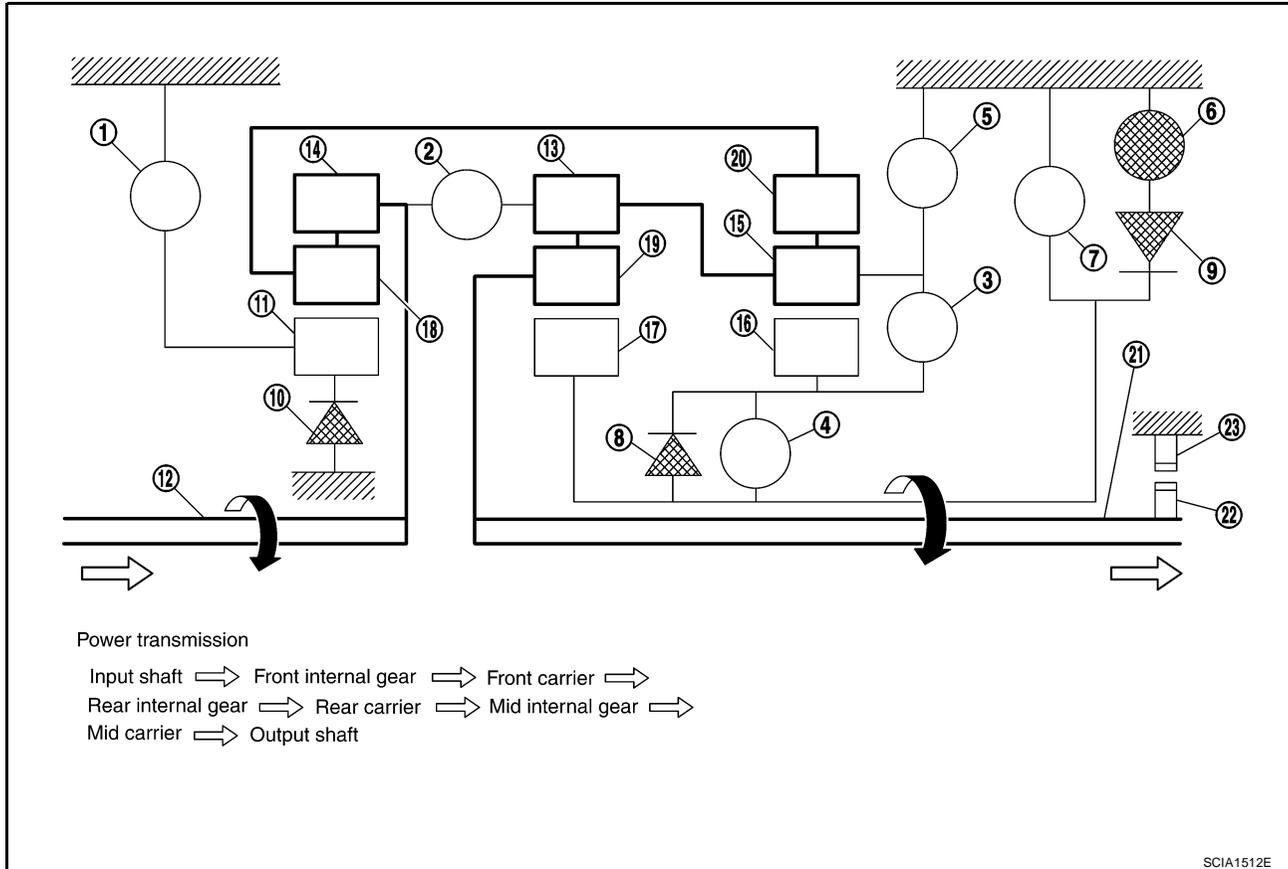


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

"1" Position 1st Gear

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- High and low reverse clutch connects the rear sun gear and the mid sun gear.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

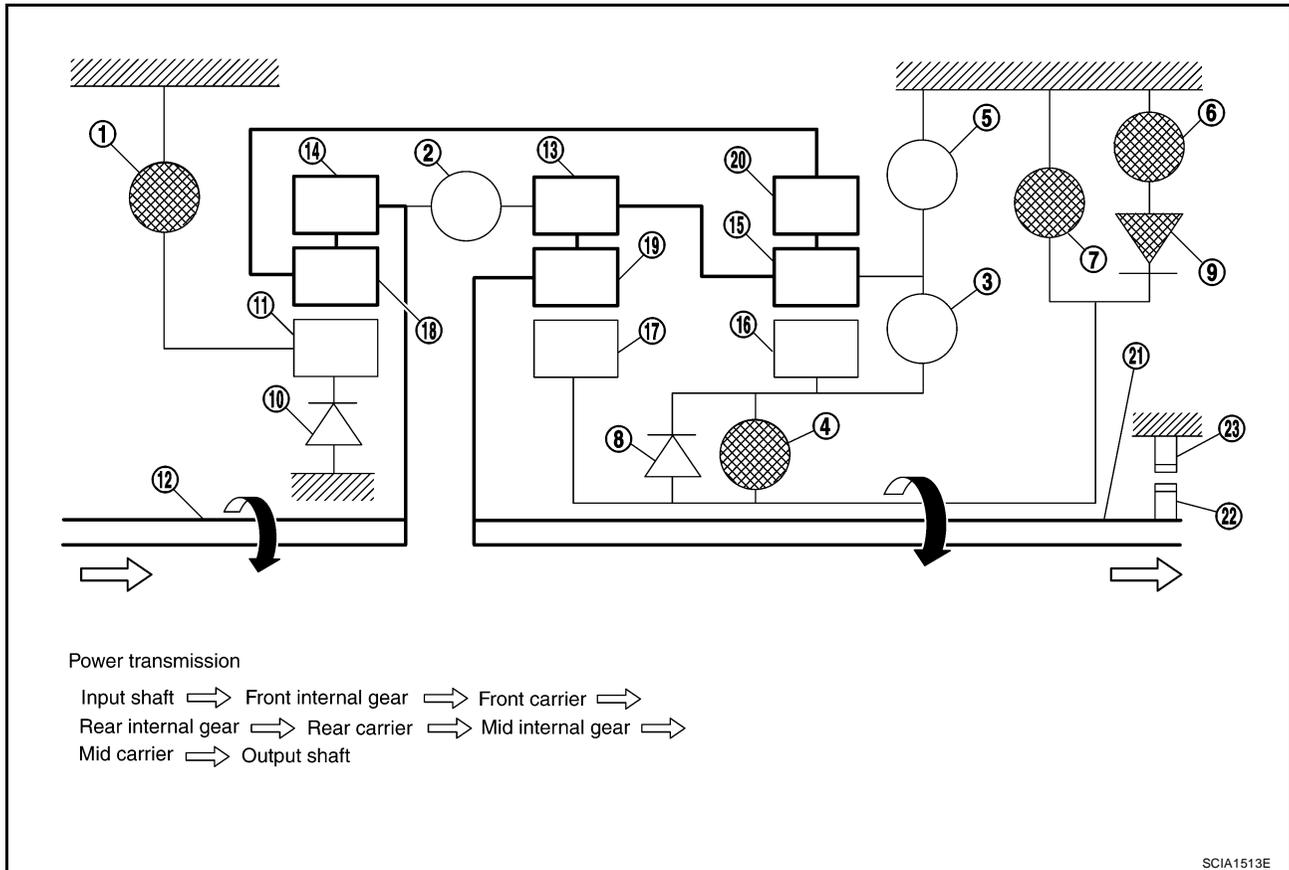


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D” and “3” Positions 2nd Gear

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- The direct clutch is coupled and the rear carrier and rear sun gear are connected.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and engine brake is not activated.

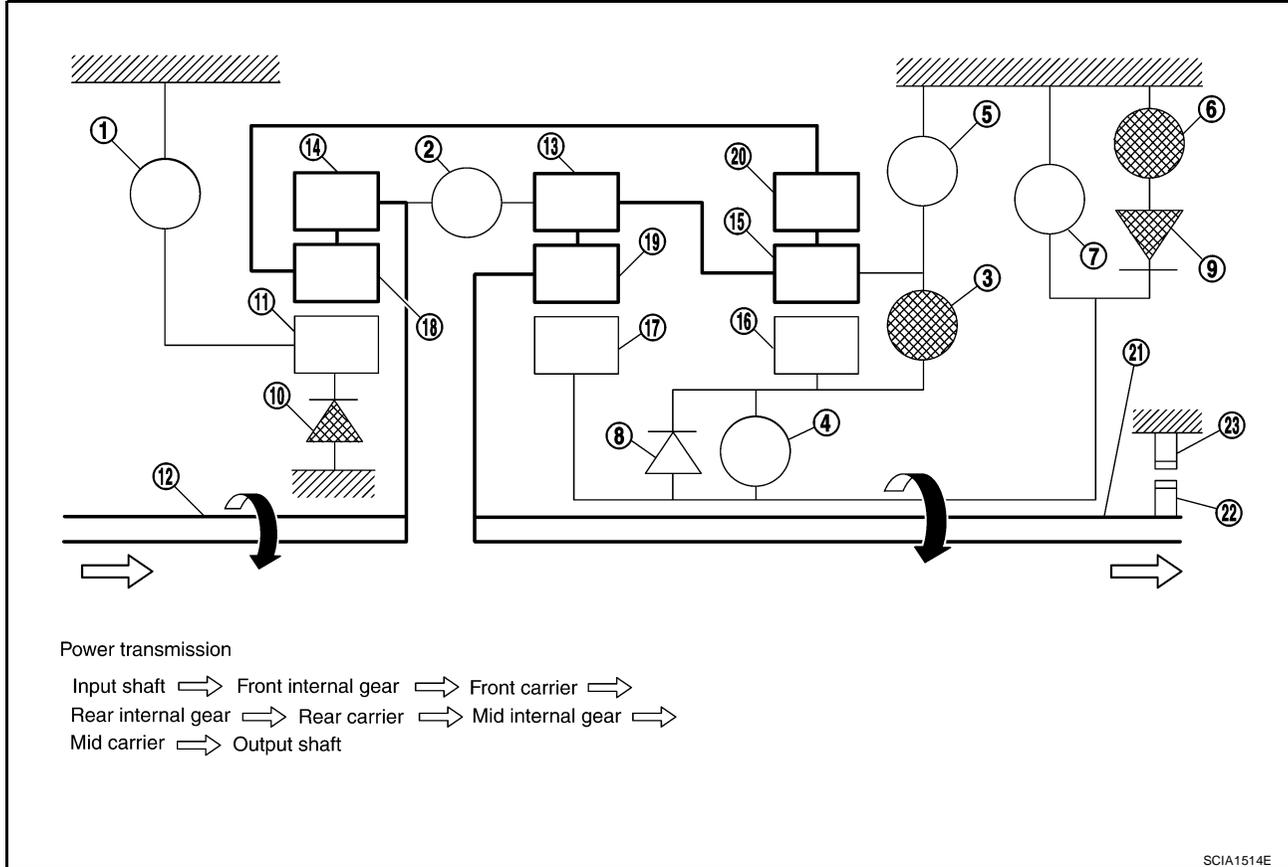


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“2” and “1” Positions 2nd Gear

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

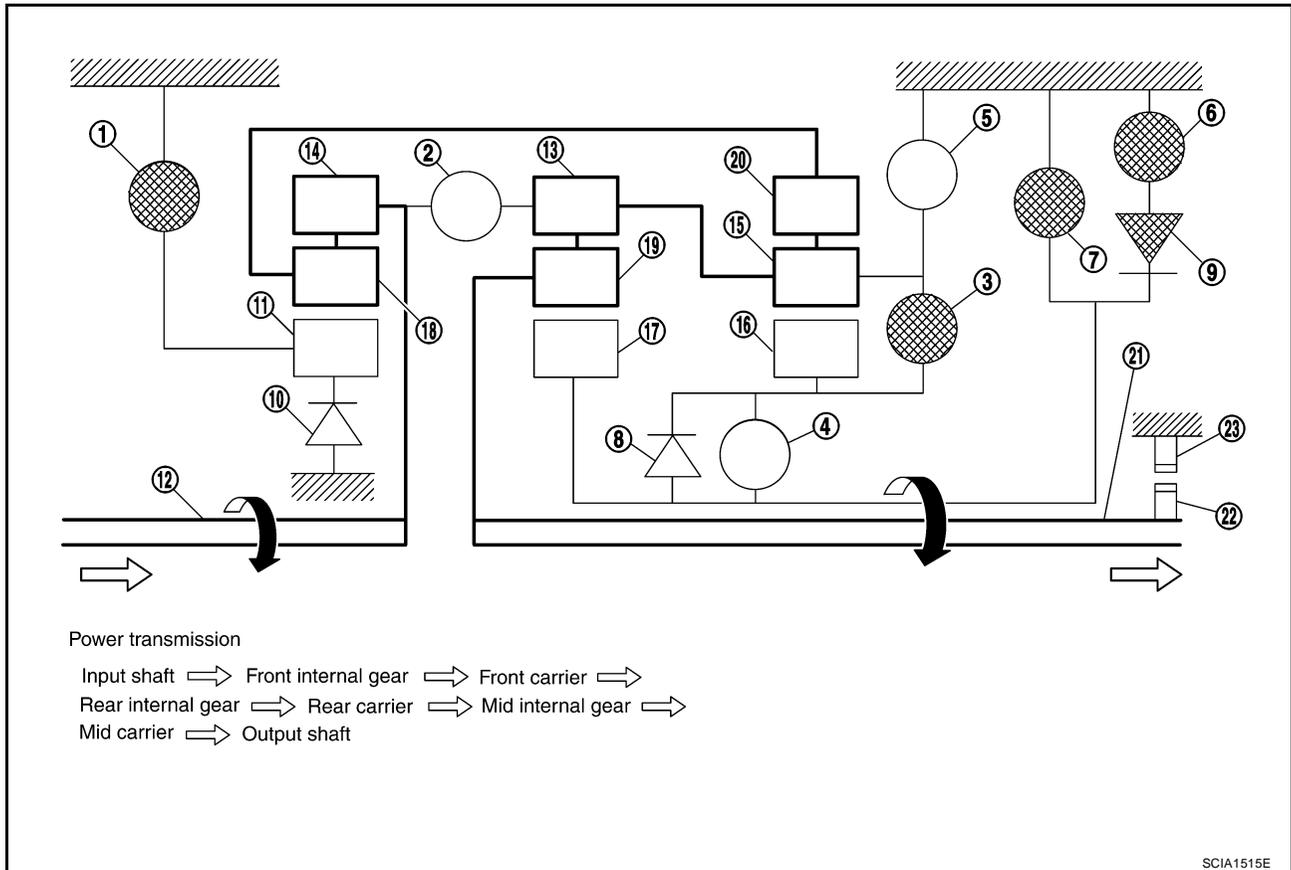


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D” and “3” Positions 3rd Gear

- The front brake fastens the front sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The high and low reverse clutch is coupled and the mid sun gear and rear sun gear are connected.

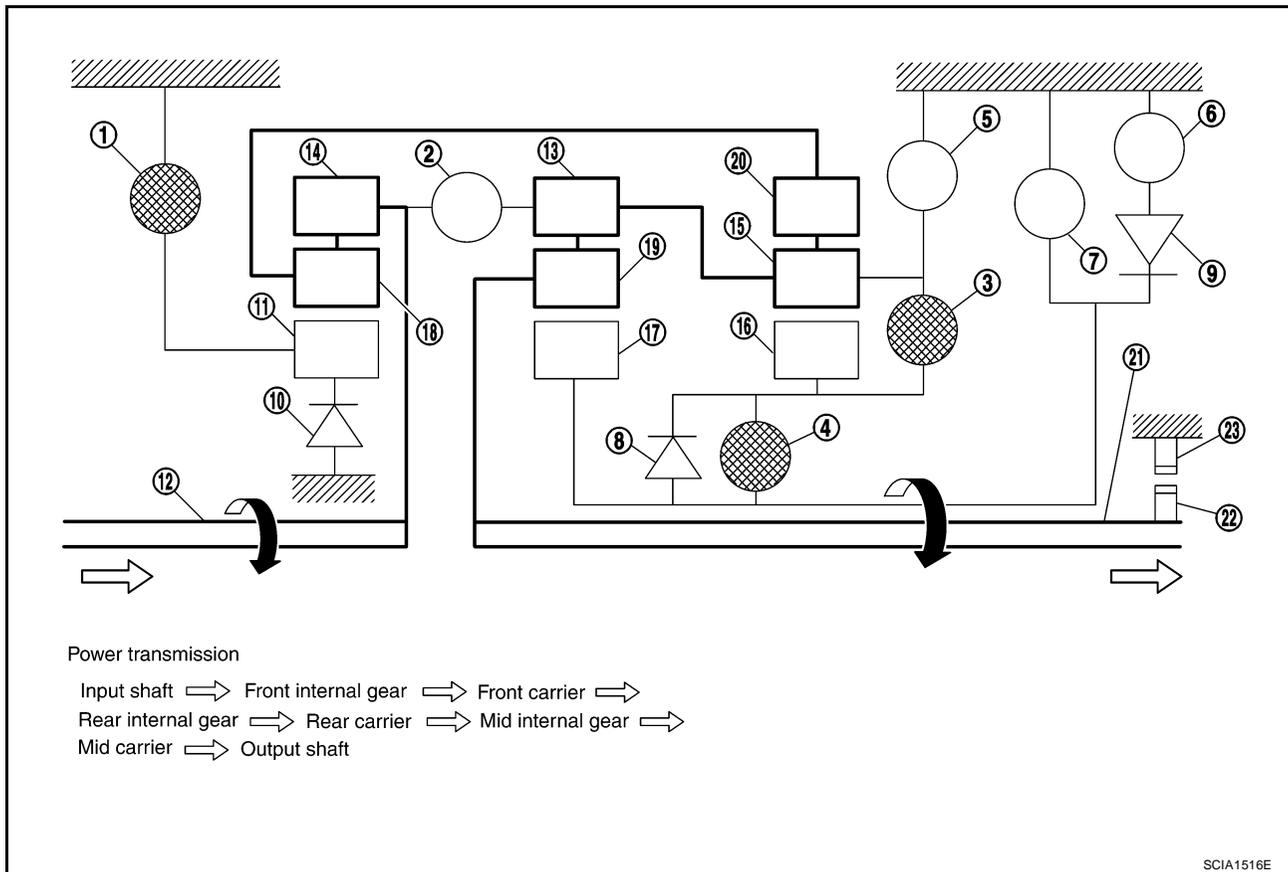


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D” Positions 4th Gear

- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The high and low reverse clutch is coupled and the mid sun gear and rear sun gear are connected.
- The input clutch is coupled and the front internal gear and mid internal gear are connected.
- The drive power is conveyed to the front internal gear, mid internal gear, and rear carrier and the three planetary gears rotate forward as one unit.

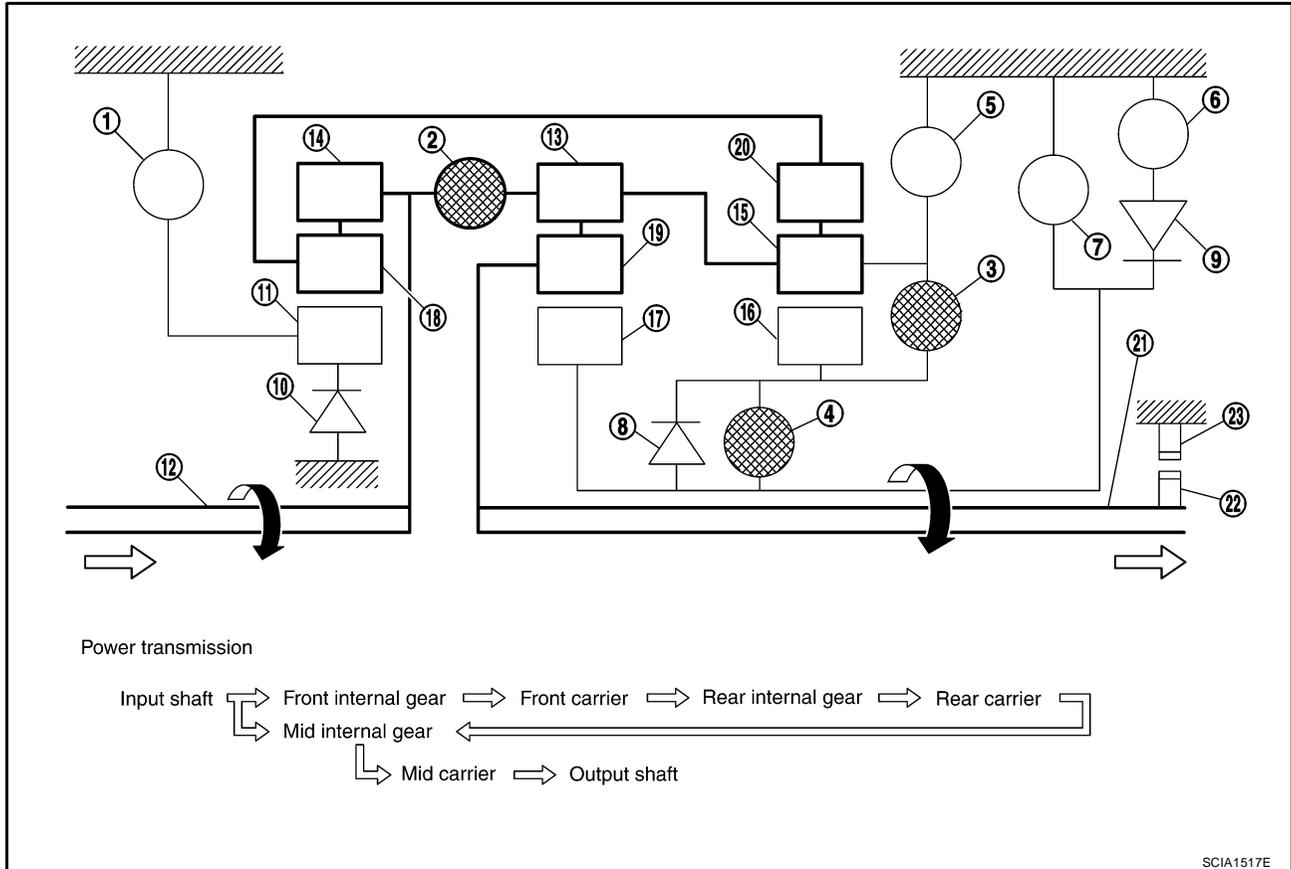


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“D” Position 5th Gear

- The front brake fastens the front sun gear.
- The input clutch is coupled and the front internal gear and mid internal gear are connected.
- The high and low reverse clutch is coupled and the mid sun gear and rear sun gear are connected.

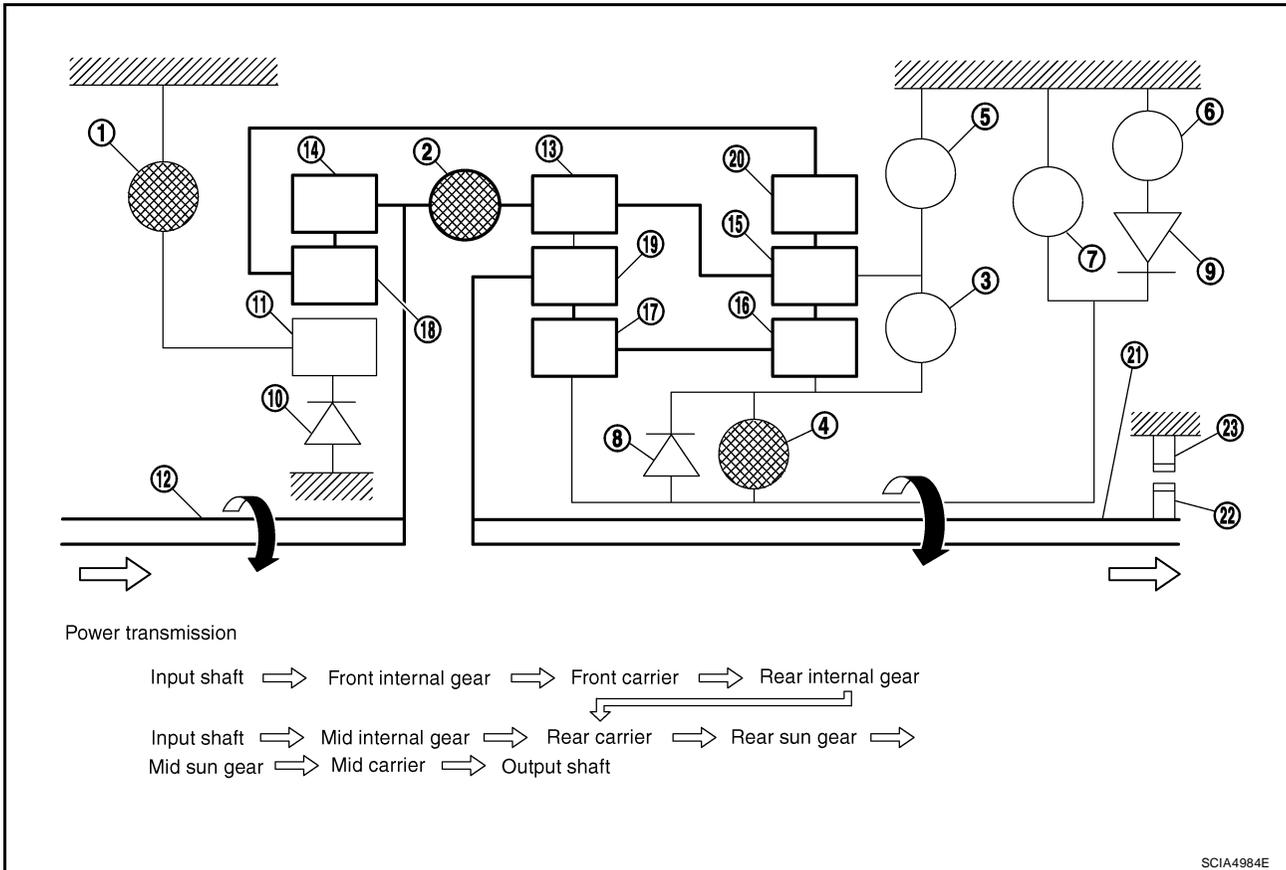


- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

“R” Position

- The front brake fastens the front sun gear.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.
- The reverse brake fastens the rear carrier.

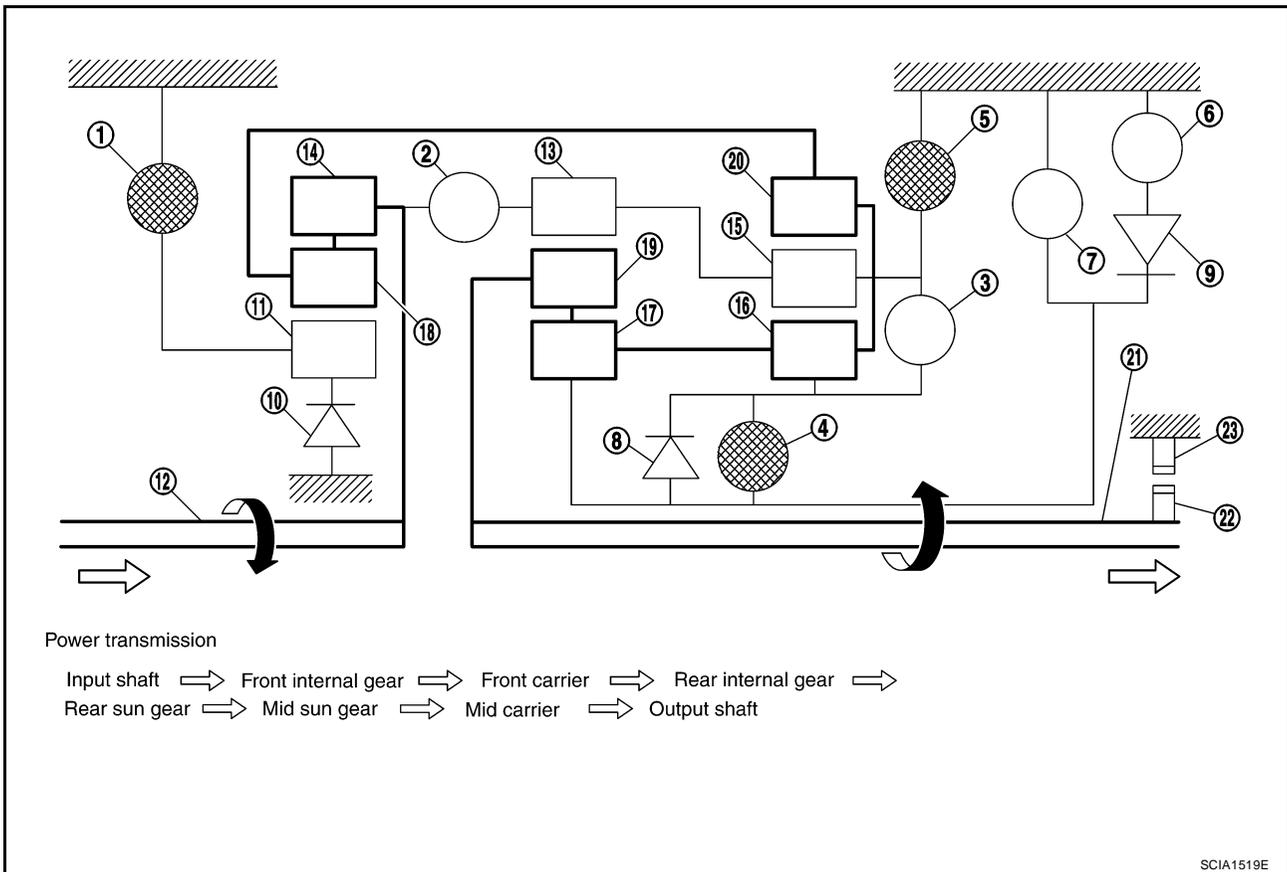

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

A/T CONTROL SYSTEM

UCS0031E

TCM Function

The function of the TCM is to:


- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

CONTROL SYSTEM OUTLINE

The automatic transmission senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SENSORS (or SIGNALS)		TCM		ACTUATORS
PNP switch Accelerator pedal position sensor Closed throttle position signal Wide open throttle position signal Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed signal Stop lamp switch signal Turbine revolution sensor 1st position switch signal Overdrive control switch signal ATF pressure switch signal	⇒	Shift control Line pressure control Lock-up control Engine brake control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line Duet-EA control CAN system	⇒	Input clutch solenoid valve Direct clutch solenoid valve Front brake solenoid valve High and low reverse clutch solenoid valve Low coast brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve O/D OFF indicator lamp Starter relay Back-up lamp relay

CONTROL SYSTEM DIAGRAM

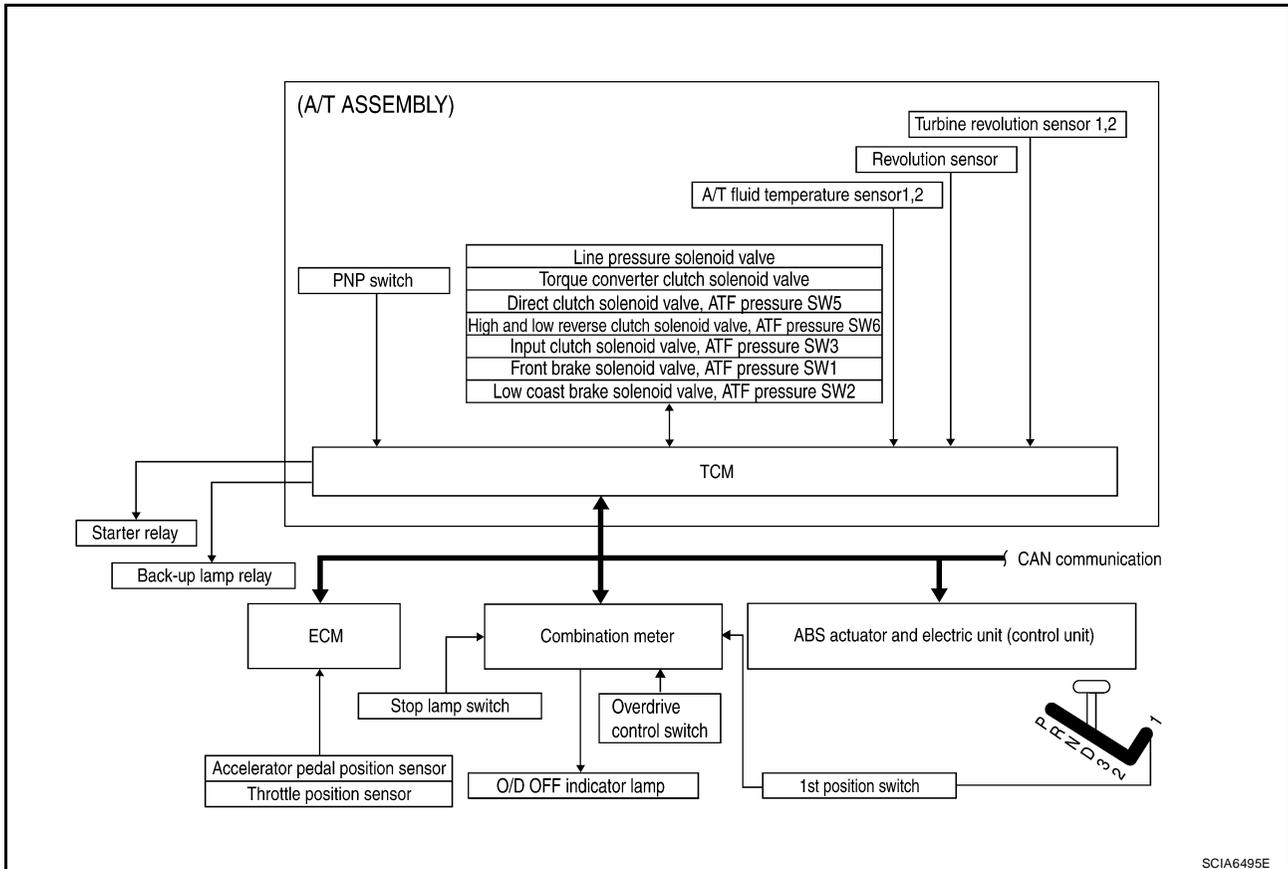

SCIA6495E

A/T CONTROL SYSTEM

UCS0031F

CAN Communication SYSTEM DESCRIPTION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. For details, refer to [LAN-24, "CAN Communication Unit"](#).

Input/Output Signal of TCM

UCS0031G

Control item		Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diagnosis function	
Input	Accelerator pedal position signal (*4)	X	X	X	X	X	X	X	
	Vehicle speed sensor A/T (revolution sensor)	X	X	X	X		X	X	
	Vehicle speed sensor MTR(*1) (*4)	X	X	X	X			X	
	Closed throttle position signal(*4)	X(*2)	X(*2)		X	X(*2)		X	
	Wide open throttle position signal(*4)	X(*2)	X(*2)			X(*2)		X	
	Turbine revolution sensor 1	X	X		X		X	X	
	Turbine revolution sensor 2 (for 4th speed only)	X	X		X		X	X	
	Engine speed signals(*4)				X			X	
	PNP switch	X	X	X	X	X	X	X	
	Stop lamp switch signal(*4)		X			X		X	
	A/T fluid temperature sensors 1, 2	X	X	X	X	X	X	X	
	ASCD	Operation signal(*4)		X	X	X	X		
		Overdrive cancel signal(*4)		X		X	X		
	TCM power supply voltage signal		X	X	X	X	X		X
Output	Direct clutch solenoid (ATF pressure switch 5)		X	X			X	X	
	Input clutch solenoid (ATF pressure switch 3)		X	X			X	X	
	High and low reverse clutch solenoid (ATF pressure switch 6)		X	X			X	X	
	Front brake solenoid (ATF pressure switch 1)		X	X			X	X	
	Low coast brake solenoid (ATF pressure switch 2)		X	X		X	X	X	
	Line pressure solenoid	X	X	X	X	X	X	X	
	TCC solenoid				X		X	X	
	Starter relay						X	X	

*1: Spare for vehicle speed sensor-A/T (revolution sensor)

*2: Spare for accelerator pedal position signal

*3: If these input and output signals are different, the TCM triggers the fail-safe function.


*4: CAN communications

A/T CONTROL SYSTEM

UCS0031H

Line Pressure Control

- When an input torque signal equivalent to the engine drive force is sent from the ECM to the TCM, the TCM controls the line pressure solenoid.
- This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.

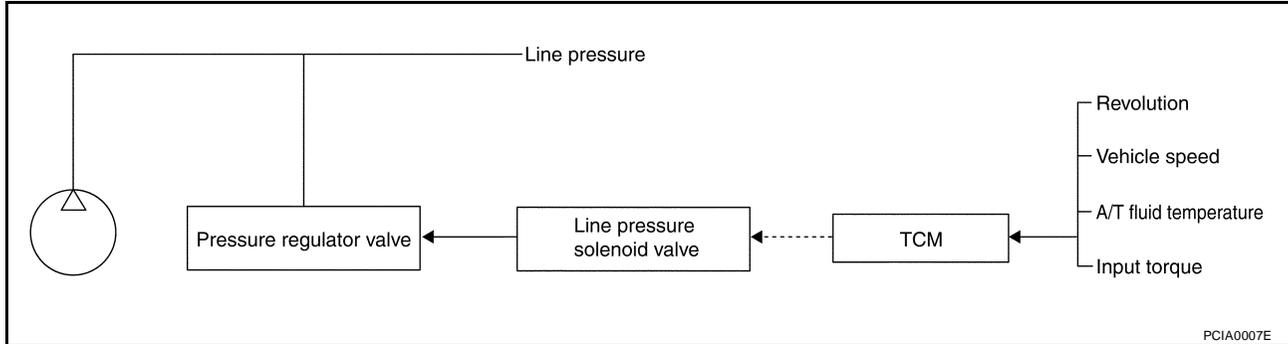


LINE PRESSURE CONTROL IS BASED ON THE TCM LINE PRESSURE CHARACTERISTIC PATTERN

- The TCM has stored in memory a number of patterns for the optimum line pressure characteristic for the driving state.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current value and thus controls the line pressure.


Normal Control

Each clutch is adjusted to the necessary pressure to match the engine drive force.

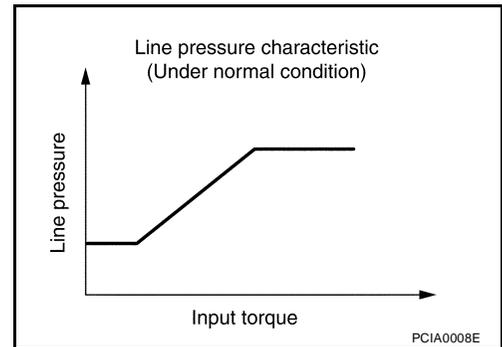

Back-up Control (Engine Brake)


When the select operation is performed during driving and the transmission is shifted down, the line pressure is set according to the vehicle speed.

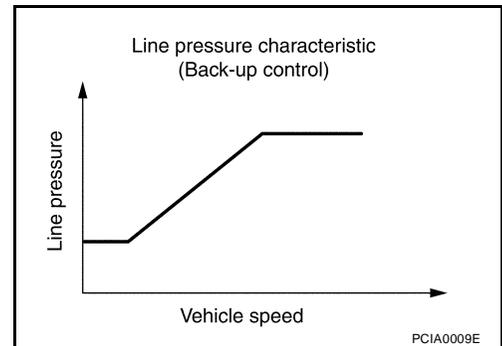

A/T CONTROL SYSTEM


During Shift Change

The necessary and adequate line pressure for shift change is set. For this reason, line pressure pattern setting corresponds to input torque and gearshift selection. Also, line pressure characteristic is set according to engine speed, during engine brake operation.

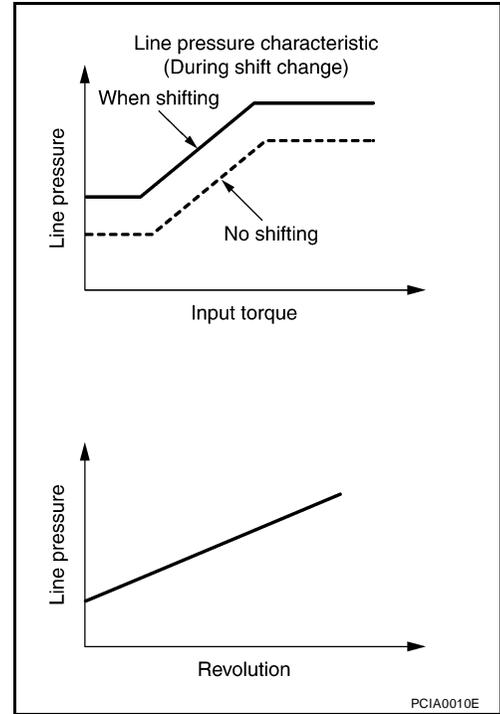

At Low Fluid Temperature


When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

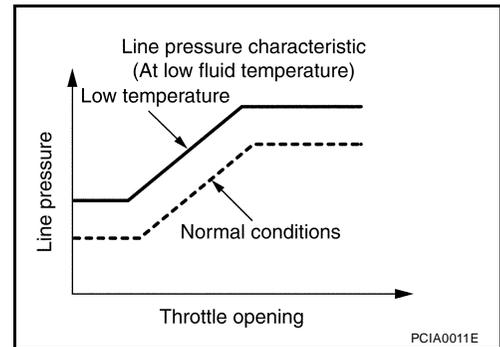

Shift Control

UCS00311

The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

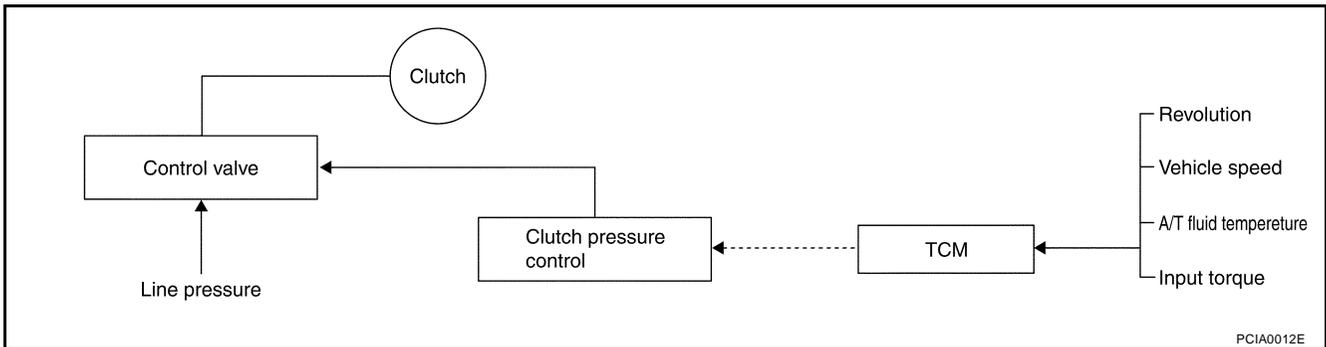


SHIFT CHANGE

The clutch is controlled with the optimum timing and oil pressure by the engine speed, engine torque information, etc.

A/T CONTROL SYSTEM

Shift Change System Diagram

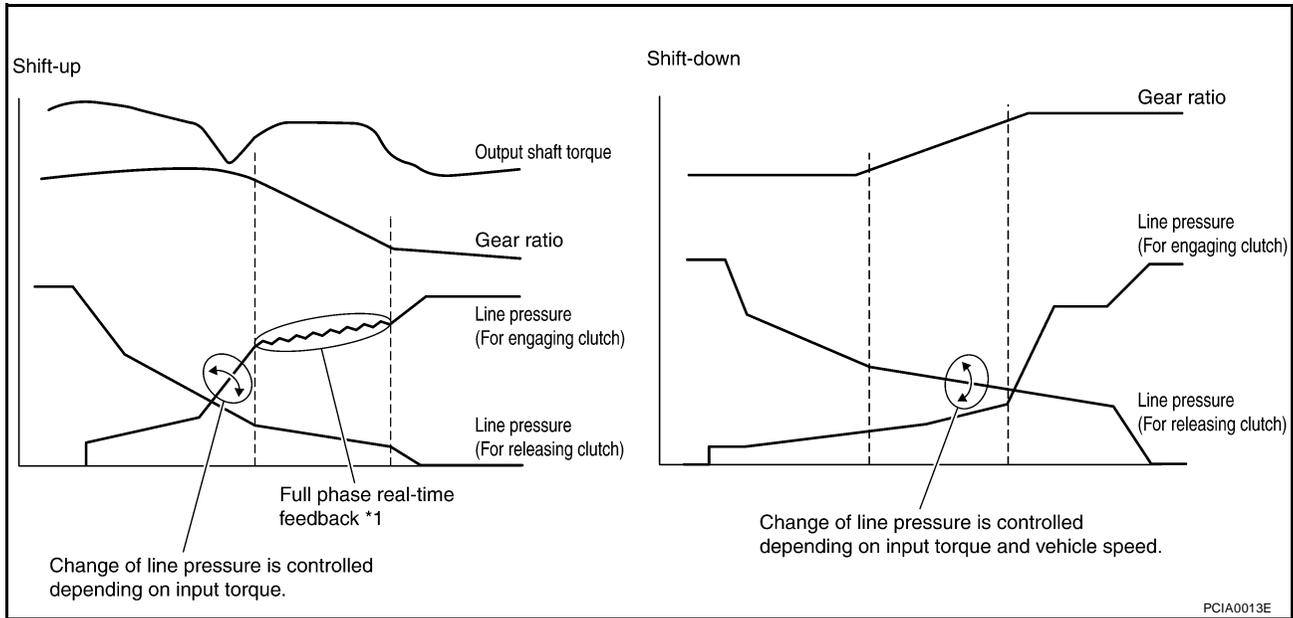

*1: Full phase real-time feedback control monitors movement of gear ratio at gear change, and controls oil pressure at real-time to achieve the best gear ratio.

Lock-up Control

UCS0031J

The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.


The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

Lock-up Operation Condition Table

Select lever	D position		3 position	2 position
Gear position	5	4	3	2
Lock-up	×	—	×	×
Slip lock-up	×	×	—	—

TORQUE CONVERTER CLUTCH CONTROL VALVE CONTROL

Lock-up Control System Diagram

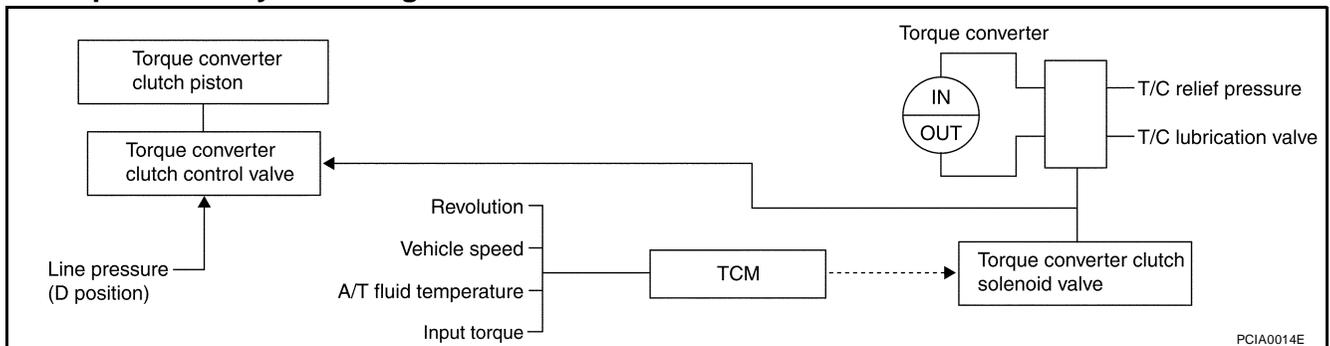

Lock-up Released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

A/T CONTROL SYSTEM

UCS0031L

Control Valve FUNCTION OF CONTROL VALVE

Name	Function
Torque converter regulator valve	In order to prevent the pressure supplied to the torque converter from being excessive, the line pressure is adjusted to the optimum pressure (torque converter operating pressure).
Pressure regulator valve Pressure regulator plug Pressure regulator sleeve	Adjusts the oil discharged from the oil pump to the optimum pressure (line pressure) for the driving state.
Front brake control valve	When the front brake is coupled, adjusts the line pressure to the optimum pressure (front brake pressure) and supplies it to the front brake. (In 1st, 2nd, 3rd, and 5th gears, adjusts the clutch pressure.)
Accumulator control valve	Adjusts the pressure (accumulator control pressure) acting on the accumulator piston and low coast reducing valve to the pressure appropriate to the driving state.
Pilot valve A	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for line pressure control, shift change control, and lock-up control.
Pilot valve B	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for shift change control.
Low coast brake switching valve	During engine braking, supplies the line pressure to the low coast brake reducing valve.
Low coast brake reducing valve	When the low coast brake is coupled, adjusts the line pressure to the optimum pressure (low coast brake pressure) and supplies it to the low coast brake.
N-R accumulator	Produces the stabilizing pressure for when N-R is selected.
Direct clutch piston switching valve	Operates in 4th gear and switches the direct clutch coupling capacity.
High and low reverse clutch control valve	When the high and low reverse clutch is coupled, adjusts the line pressure to the optimum pressure (high and low reverse clutch pressure) and supplies it to the high and low reverse clutch. (In 1st, 3rd, 4th and 5th gears, adjusts the clutch pressure.)
Input clutch control valve	When the input clutch is coupled, adjusts the line pressure to the optimum pressure (input clutch pressure) and supplies it to the input clutch. (In 4th and 5th gears, adjusts the clutch pressure.)
Direct clutch control valve	When the direct clutch is coupled, adjusts the line pressure to the optimum pressure (direct clutch pressure) and supplies it to the direct clutch. (In 2nd, 3rd, and 4th gears, adjusts the clutch pressure.)
TCC control valve TCC control plug TCC control sleeve	Switches the lock-up to operating or released. Also, by performing the lock-up operation transiently, lock-up smoothly.
Torque converter lubrication valve	Operates during lock-up to switch the torque converter, cooling, and lubrication system oil path.
Cool bypass valve	Allows excess oil to bypass cooler circuit without being fed into it.
Line pressure relief valve	Discharges excess oil from line pressure circuit.
N-D accumulator	Produces the stabilizing pressure for when N-D is selected.
Manual valve	Sends line pressure to each circuit according to the select position. The circuits to which the line pressure is not sent drain.

FUNCTION OF PRESSURE SWITCH

Name	Function
Pressure switch 1 (FR/B)	Detects any malfunction in the front brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 2 (LC/B)	Detects any malfunction in the low coast brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 3 (I/C)	Detects any malfunction in the input clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.

A/T CONTROL SYSTEM

Name	Function
Pressure switch 5 (D/C)	Detects any malfunction in the direct clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Pressure switch 6 (HLR/C)	Detects any malfunction in the high and low reverse clutch hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction

UCS0031M

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the A/T CHECK indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

OBD-II Function for A/T System

UCS0031N

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to A/T system parts.

One or Two Trip Detection Logic of OBD-II ONE TRIP DETECTION LOGIC

UCS0031O

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st Trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd Trip

The "Trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD-II Diagnostic Trouble Code (DTC) HOW TO READ DTC AND 1ST TRIP DTC

UCS0031P


DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT-II** or ( **GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal. CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

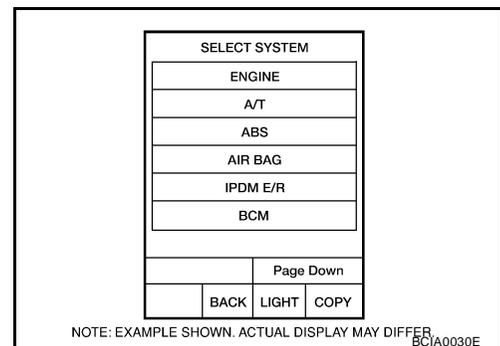

ON BOARD DIAGNOSTIC (OBD) SYSTEM

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For detail, refer to [AT-37, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items
1	Freeze frame data Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2	Except the above items (Includes A/T related items)
3	1st trip freeze frame data

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.
- When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-49, "EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS"](#).

- Diagnostic trouble codes (DTC)
- 1st trip diagnostic trouble codes (1st trip DTC)
- Freeze frame data

ON BOARD DIAGNOSTIC (OBD) SYSTEM

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
 2. Turn CONSULT-II "ON" and touch "A/T".
 3. Touch "SELF-DIAG RESULTS".
 4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
 5. Touch "ENGINE".
 6. Touch "SELF-DIAG RESULTS".
 7. Touch "ERASE". (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
A/T
ENGINE

2. Turn CONSULT-II "ON", and touch "A/T".

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
FUNCTION TEST
DTC WORK SUPPORT
ECU PART NUMBER

3. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS
DTC RESULTS
TCC SOLENOID/CIRC [P0740]

4. Touch "ERASE". (The DTC in the TCM will be erased.)

Touch "BACK".

Touch "BACK".

SELECT SYSTEM
A/T
ENGINE

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR(SPEC)
CAN DIAG SUPPORT MNTR
ACTIVE TEST

6. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
TCC SOLENOID/CIRC [P0740]	0

7. Touch "ERASE". (The DTC in the TCM will be erased.)

SCIA5671E

HOW TO ERASE DTC (WITH GST)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
2. Select Mode 4 with the Generic Scan Tool (GST). For details refer to [EC-139, "Generic Scan Tool \(GST\) Function"](#).

ON BOARD DIAGNOSTIC (OBD) SYSTEM



HOW TO ERASE DTC (NO TOOLS)

1. Disconnect battery for 24 hours.
2. Reconnect battery.


Malfunction Indicator Lamp (MIL)

DESCRIPTION

UCS0031Q

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned "ON" without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to [DI-33, "WARNING LAMPS"](#).
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

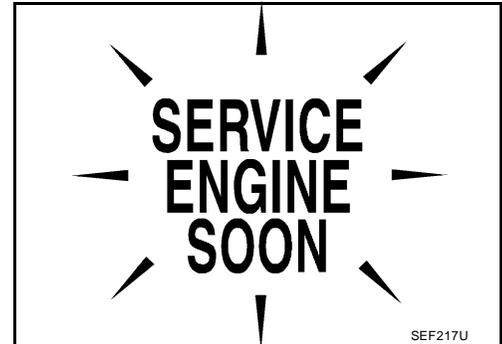

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PF0:00004

DTC Inspection Priority Chart

UCS0031R

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC U1000 is displayed with other DTCs, first perform the trouble diagnosis for DTC U1000. Refer to [AT-100](#).

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

Fail-Safe

UCS0031S

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit. In fail-safe mode the transmission is fixed in 2nd, 4th or 5th (depending on the breakdown position), so the customer should feel "slipping" or "poor acceleration".

Even when the electronic circuits are normal, under special conditions (for example, when slamming on the brake with the wheels spinning drastically and stopping the tire rotation), the transmission can go into fail-safe mode. If this happens, switch "OFF" the ignition switch for 10 seconds, then switch it "ON" again to return to the normal shift pattern. Therefore, the customer's vehicle has returned to normal, so handle according to the "diagnostics flow" (Refer to [AT-44, "WORK FLOW"](#)).

FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the A/T to mark driving possible.

Vehicle Speed Sensor

- Signals are input from two systems - from vehicle speed sensor A/T (revolution sensor) installed on the transmission and from combination meter so normal driving is possible even if there is a malfunction in one of the systems. And if vehicle speed sensor A/T (revolution sensor) has unusual cases, 5th gear is prohibited.

Accelerator Pedal Position Sensor

- If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the engine speed is fixed by ECM to a pre-determined engine speed to make driving possible.

Throttle Position Sensor

- If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the accelerator opening angle is controlled by the idle signal sent from the ECM which is based on input indicating either idle condition or off-idle condition (pre-determined accelerator opening) in order to make driving possible.

PNP Switch

- In the unlikely event that a malfunction signal enters the TCM, the position indicator is switched "OFF", the starter relay is switched "OFF" (starter starting is disabled), the back-up lamp relay switched "OFF" (back-up lamp is OFF) and the position is fixed to the "D" range to make driving possible.

Starter Relay

- The starter relay is switched "OFF". (Starter starting is disabled.)

TROUBLE DIAGNOSIS

A/T Interlock

- If there is an A/T interlock judgment malfunction, the transmission is fixed in 2nd gear to make driving possible.

NOTE:

When the vehicle is driven fixed in 2nd gear, a turbine revolution sensor malfunction is displayed, but this is not a turbine revolution sensor malfunction.

- When the coupling pattern below is detected, the fail-safe action corresponding to the pattern is performed.

A/T INTERLOCK COUPLING PATTERN TABLE

●: NG X: OK

Gear position		ATF pressure switch output					Fail-safe function	Clutch pressure output pattern after fail-safe function					
		SW3 (I/C)	SW6 (HLR/C)	SW5 (D/C)	SW1 (FR/B)	SW2 (LC/B)		I/C	HLR/C	D/C	FR/B	LC/B	L/U
A/T interlock coupling pattern	3rd	–	X	X	–	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	4th	–	X	X	–	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	5th	X	X	–	X	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF

A/T 1st Engine Braking

- When there is an A/T first gear engine brake judgment malfunction, the low coast brake solenoid is switched “OFF” to avoid the engine brake operation.

Line Pressure Solenoid

- The solenoid is switched “OFF” and the line pressure is set to the maximum hydraulic pressure to make driving possible.

Torque Converter Clutch Solenoid

- The solenoid is switched “OFF” to release the lock-up.

Low Coast Brake Solenoid

- When a (electrical or functional) malfunction occurs, in order to make driving possible, the engine brake is not applied in 1st and 2nd gear.

Input Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

Direct Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

Front Brake Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid “ON”, in order to make driving possible, the A/T is held in 5th gear; if the solenoid is OFF, 4th gear.

High and Low Reverse Clutch Solenoid

- If a (electrical or functional) malfunction occurs with the solenoid either “ON” or “OFF”, the transmission is held in 4th gear to make driving possible.

Turbine Revolution Sensor 1 or 2

- The control is the same as if there were no turbine revolution sensors, 5th gear is prohibited.

TROUBLE DIAGNOSIS


How To Perform Trouble Diagnosis For Quick and Accurate Repair INTRODUCTION

UCS0031T

The TCM receives a signal from the vehicle speed sensor, accelerator pedal position sensor (throttle position sensor) or PNP switch and provides shift control or lock-up control via A/T solenoid valves.


The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the A/T system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

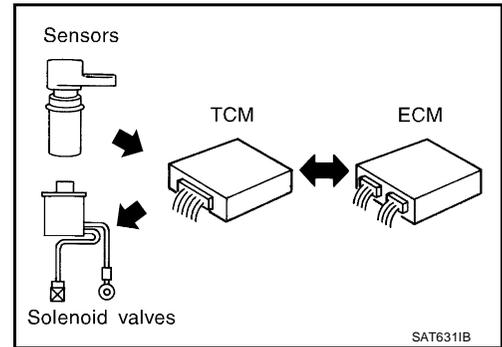

It is much more difficult to diagnose a error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the [AT-44, "WORK FLOW"](#).

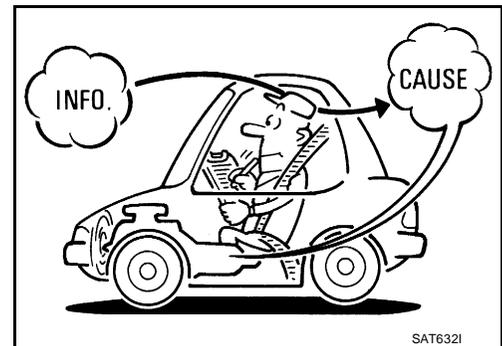

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" as shown on the example (Refer to [AT-45](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

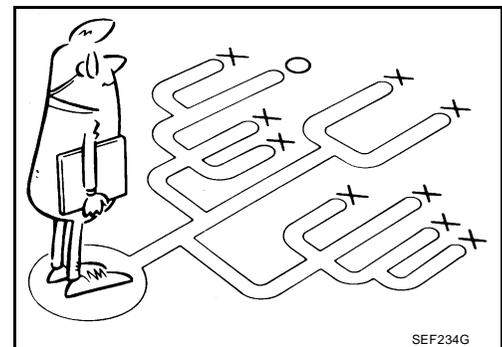


TROUBLE DIAGNOSIS

WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "Information From Customer" (Refer to [AT-45](#)) and "Diagnostic Worksheet" (Refer to [AT-45](#)), to perform the best troubleshooting possible.

Work Flow Chart

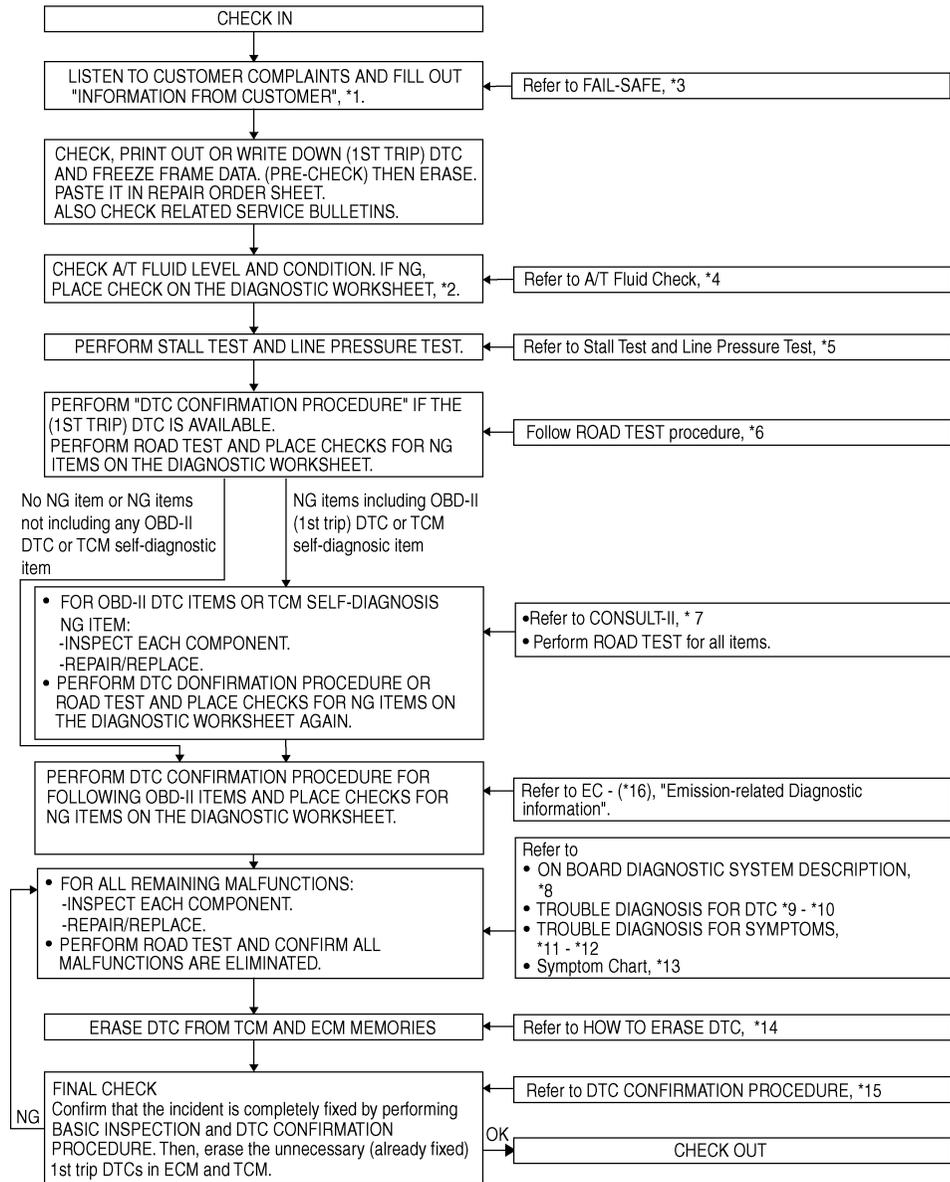

*1. [AT-45](#)

*4. [AT-50](#)

*7. [AT-84](#)

*10. [AT-177](#)

*13. [AT-61](#)

*16. [EC-49](#)

*2. [AT-45](#)

*5. [AT-50](#), [AT-51](#)

*8. [AT-37](#)

*11. [AT-183](#)

*14. [AT-38](#)

*3. [AT-41](#)

*6. [AT-53](#)

*9. [AT-100](#)

*12. [AT-219](#)

*15. [AT-100](#)

WCIA0251E

TROUBLE DIAGNOSIS

	<input type="checkbox"/> Perform all road tests and enter checks in required inspection items.	AT-53
4	4-1. Check before engine is started	AT-54
	<input type="checkbox"/> AT-183, "O/D OFF Indicator Lamp Does Not Come On" <input type="checkbox"/> Perform self-diagnostics Enter checks for detected items. AT-87	
	<input type="checkbox"/> AT-100, "DTC U1000 CAN COMMUNICATION LINE" <input type="checkbox"/> AT-103, "DTC P0615 START SIGNAL CIRCUIT" <input type="checkbox"/> AT-107, "DTC P0700 TCM" <input type="checkbox"/> AT-108, "DTC P0705 PARK/NEUTRAL POSITION SWITCH" <input type="checkbox"/> AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)" <input type="checkbox"/> AT-117, "DTC P0725 ENGINE SPEED SIGNAL" <input type="checkbox"/> AT-119, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-121, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)" <input type="checkbox"/> AT-123, "DTC P0745 LINE PRESSURE SOLENOID VALVE" <input type="checkbox"/> AT-125, "DTC P1702 TRANSMISSION CONTROL MODULE (RAM)" <input type="checkbox"/> AT-126, "DTC P1703 TRANSMISSION CONTROL MODULE (ROM)" <input type="checkbox"/> AT-127, "DTC P1705 THROTTLE POSITION SENSOR" <input type="checkbox"/> AT-130, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT" <input type="checkbox"/> AT-135, "DTC P1716 TURBINE REVOLUTION SENSOR" <input type="checkbox"/> AT-137, "DTC P1721 VEHICLE SPEED SENSOR MTR" <input type="checkbox"/> AT-139, "DTC P1730 A/T INTERLOCK" <input type="checkbox"/> AT-142, "DTC P1731 A/T 1ST ENGINE BRAKING" <input type="checkbox"/> AT-144, "DTC P1752 INPUT CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-146, "DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-148, "DTC P1757 FRONT BRAKE SOLENOID VALVE" <input type="checkbox"/> AT-150, "DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-152, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-154, "DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-156, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-158, "DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-160, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE" <input type="checkbox"/> AT-162, "DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-164, "DTC P1841 ATF PRESSURE SWITCH 1" <input type="checkbox"/> AT-166, "DTC P1843 ATF PRESSURE SWITCH 3" <input type="checkbox"/> AT-168, "DTC P1845 ATF PRESSURE SWITCH 5" <input type="checkbox"/> AT-170, "DTC P1846 ATF PRESSURE SWITCH 6"	
4-2. Idle inspection	AT-54	
	<input type="checkbox"/> AT-184, "Engine Cannot Be Started In "P" or "N" Position" <input type="checkbox"/> AT-185, "In "P" Position, Vehicle Moves When Pushed" <input type="checkbox"/> AT-186, "In "N" Position, Vehicle Moves" <input type="checkbox"/> AT-187, "Large Shock ("N" to "D" Position)" <input type="checkbox"/> AT-189, "Vehicle Does Not Creep Backward In "R" Position" <input type="checkbox"/> AT-192, "Vehicle Does Not Creep Forward In "D" Position"	
4	4-3. Driving tests	AT-55
	Part 1 <input type="checkbox"/> AT-194, "Vehicle Cannot Be Started From D1" <input type="checkbox"/> AT-196, "A/T Does Not Shift: D1 → D2" <input type="checkbox"/> AT-198, "A/T Does Not Shift: D2 → D3" <input type="checkbox"/> AT-200, "A/T Does Not Shift: D3 → D4" <input type="checkbox"/> AT-202, "A/T Does Not Shift: D4 → D5" <input type="checkbox"/> AT-204, "A/T Does Not Perform Lock-up" <input type="checkbox"/> AT-206, "A/T Does Not Hold Lock-up Condition" <input type="checkbox"/> AT-208, "Lock-up Is Not Released" <input type="checkbox"/> AT-209, "Engine Speed Does Not Return to Idle"	


TROUBLE DIAGNOSIS

4	4-3	Part 2	AT-57	A
		<input type="checkbox"/> AT-194, "Vehicle Cannot Be Started From D1" <input type="checkbox"/> AT-196, "A/T Does Not Shift: D1 → D2" <input type="checkbox"/> AT-198, "A/T Does Not Shift: D2 → D3" <input type="checkbox"/> AT-200, "A/T Does Not Shift: D3 → D4"		B
		Part 3	AT-58	AT
		<input type="checkbox"/> AT-211, "A/T Does Not Shift: 5th gear → 4th gear" <input type="checkbox"/> AT-213, "A/T Does Not Shift: 4th gear → 3rd gear" <input type="checkbox"/> AT-215, "A/T Does Not Shift: 3rd gear → 2nd gear" <input type="checkbox"/> AT-217, "A/T Does Not Shift: 2nd gear → 1st gear" <input type="checkbox"/> AT-219, "Vehicle Does Not Decelerate By Engine Brake" <input type="checkbox"/> Perform self-diagnostics Enter checks for detected items. AT-87		D
		<input type="checkbox"/> AT-100, "DTC U1000 CAN COMMUNICATION LINE" <input type="checkbox"/> AT-103, "DTC P0615 START SIGNAL CIRCUIT" <input type="checkbox"/> AT-107, "DTC P0700 TCM" <input type="checkbox"/> AT-108, "DTC P0705 PARK/NEUTRAL POSITION SWITCH" <input type="checkbox"/> AT-112, "DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)" <input type="checkbox"/> AT-117, "DTC P0725 ENGINE SPEED SIGNAL" <input type="checkbox"/> AT-119, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-121, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)" <input type="checkbox"/> AT-123, "DTC P0745 LINE PRESSURE SOLENOID VALVE" <input type="checkbox"/> AT-125, "DTC P1702 TRANSMISSION CONTROL MODULE (RAM)" <input type="checkbox"/> AT-126, "DTC P1703 TRANSMISSION CONTROL MODULE (ROM)" <input type="checkbox"/> AT-127, "DTC P1705 THROTTLE POSITION SENSOR" <input type="checkbox"/> AT-130, "DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT" <input type="checkbox"/> AT-135, "DTC P1716 TURBINE REVOLUTION SENSOR" <input type="checkbox"/> AT-137, "DTC P1721 VEHICLE SPEED SENSOR MTR" <input type="checkbox"/> AT-139, "DTC P1730 A/T INTERLOCK" <input type="checkbox"/> AT-142, "DTC P1731 A/T 1ST ENGINE BRAKING" <input type="checkbox"/> AT-144, "DTC P1752 INPUT CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-146, "DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-148, "DTC P1757 FRONT BRAKE SOLENOID VALVE" <input type="checkbox"/> AT-150, "DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-152, "DTC P1762 DIRECT CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-154, "DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-156, "DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE" <input type="checkbox"/> AT-158, "DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-160, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE" <input type="checkbox"/> AT-162, "DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION" <input type="checkbox"/> AT-164, "DTC P1841 ATF PRESSURE SWITCH 1" <input type="checkbox"/> AT-166, "DTC P1843 ATF PRESSURE SWITCH 3" <input type="checkbox"/> AT-168, "DTC P1845 ATF PRESSURE SWITCH 5" <input type="checkbox"/> AT-170, "DTC P1846 ATF PRESSURE SWITCH 6"		E
5		<input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnostics and repair or replace the malfunction parts.		F
6		<input type="checkbox"/> Perform all road tests and enter the checks again for the required items.	AT-53	G
7		<input type="checkbox"/> For any remaining NG items, perform the "diagnostics procedure" and repair or replace the malfunction parts. See the chart for diagnostics by symptoms. (This chart also contains other symptoms and inspection procedures.)	AT-61	H
8		<input type="checkbox"/> Erase the results of the self-diagnostics from the TCM.	AT-38	I
				J
				K
				L
				M

TROUBLE DIAGNOSIS

A/T Electrical Parts Location

UCS0031U

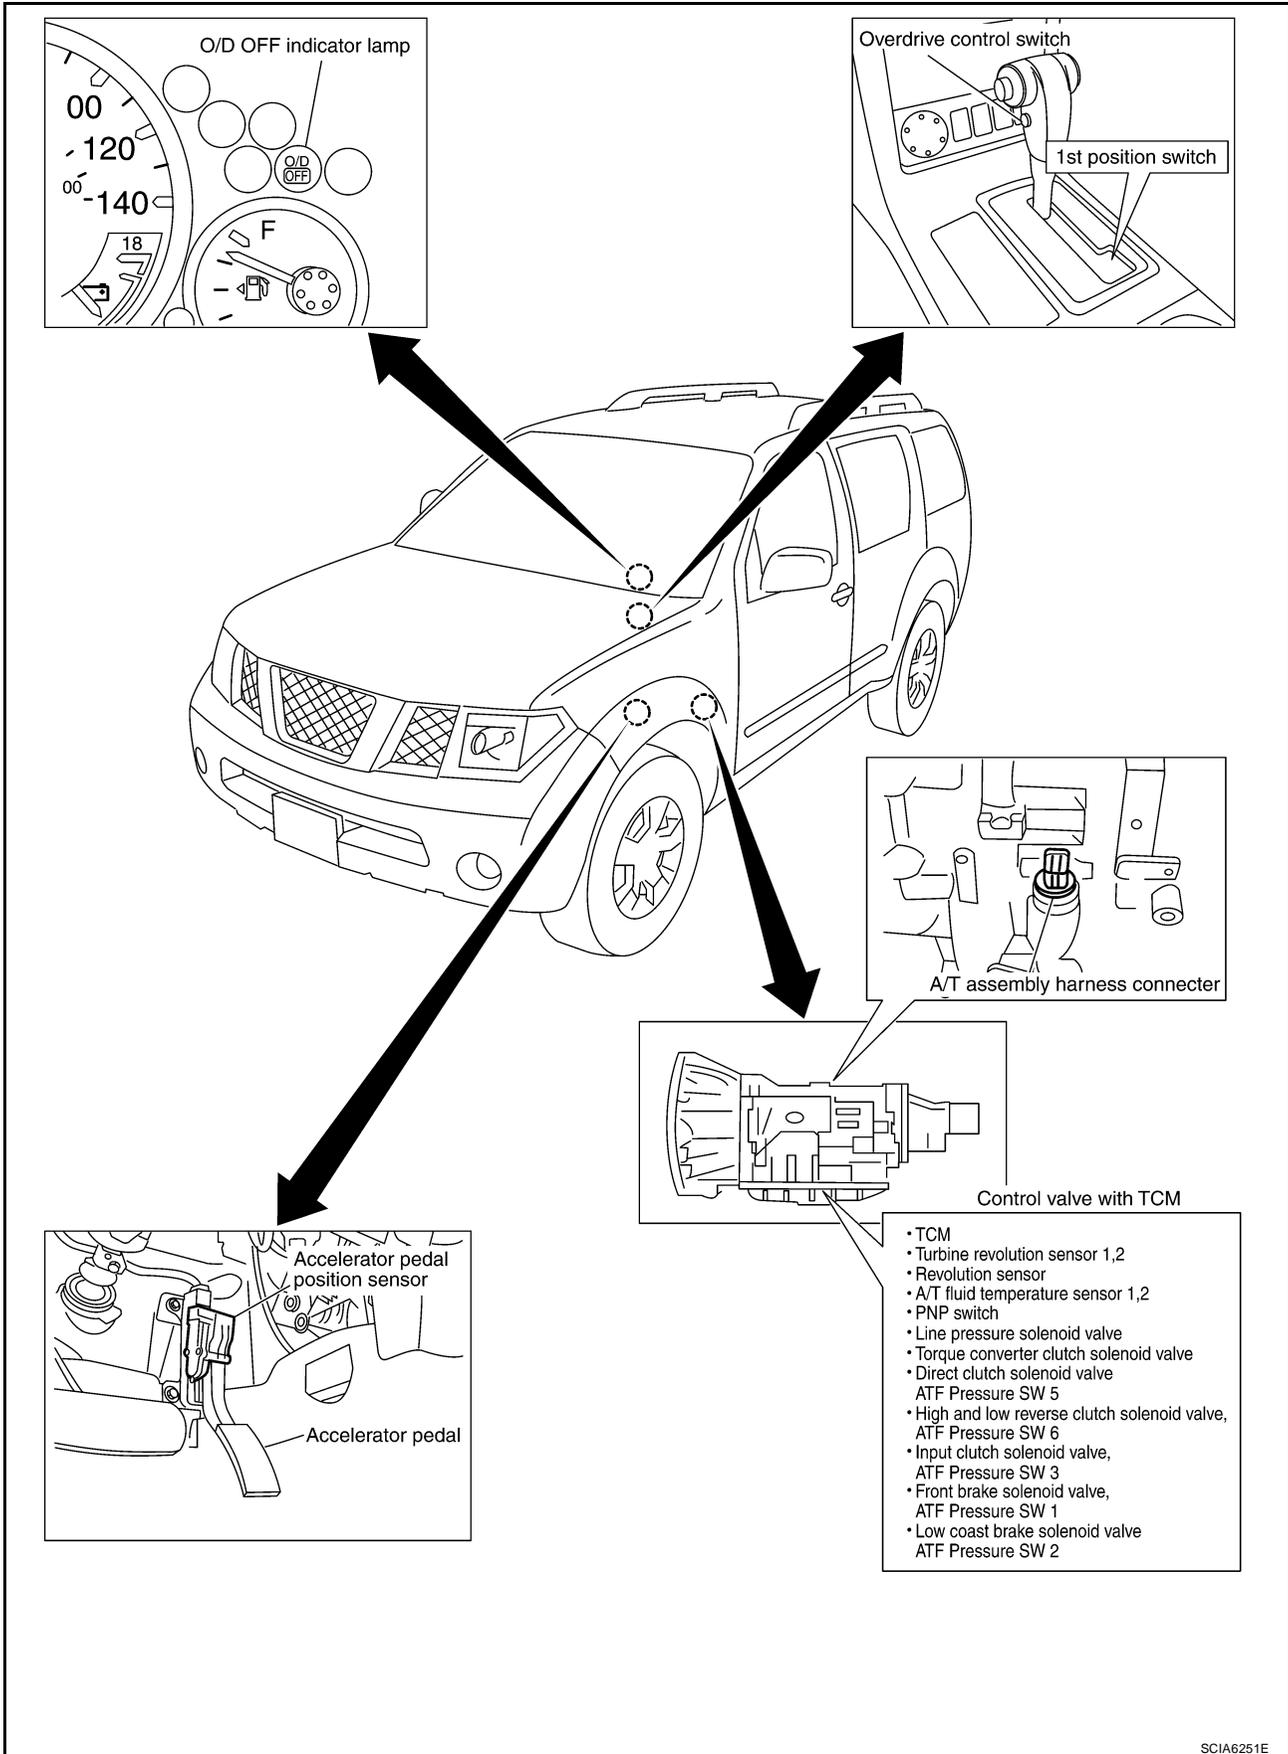


SCIA6251E

TROUBLE DIAGNOSIS

Circuit Diagram

UCS0031V

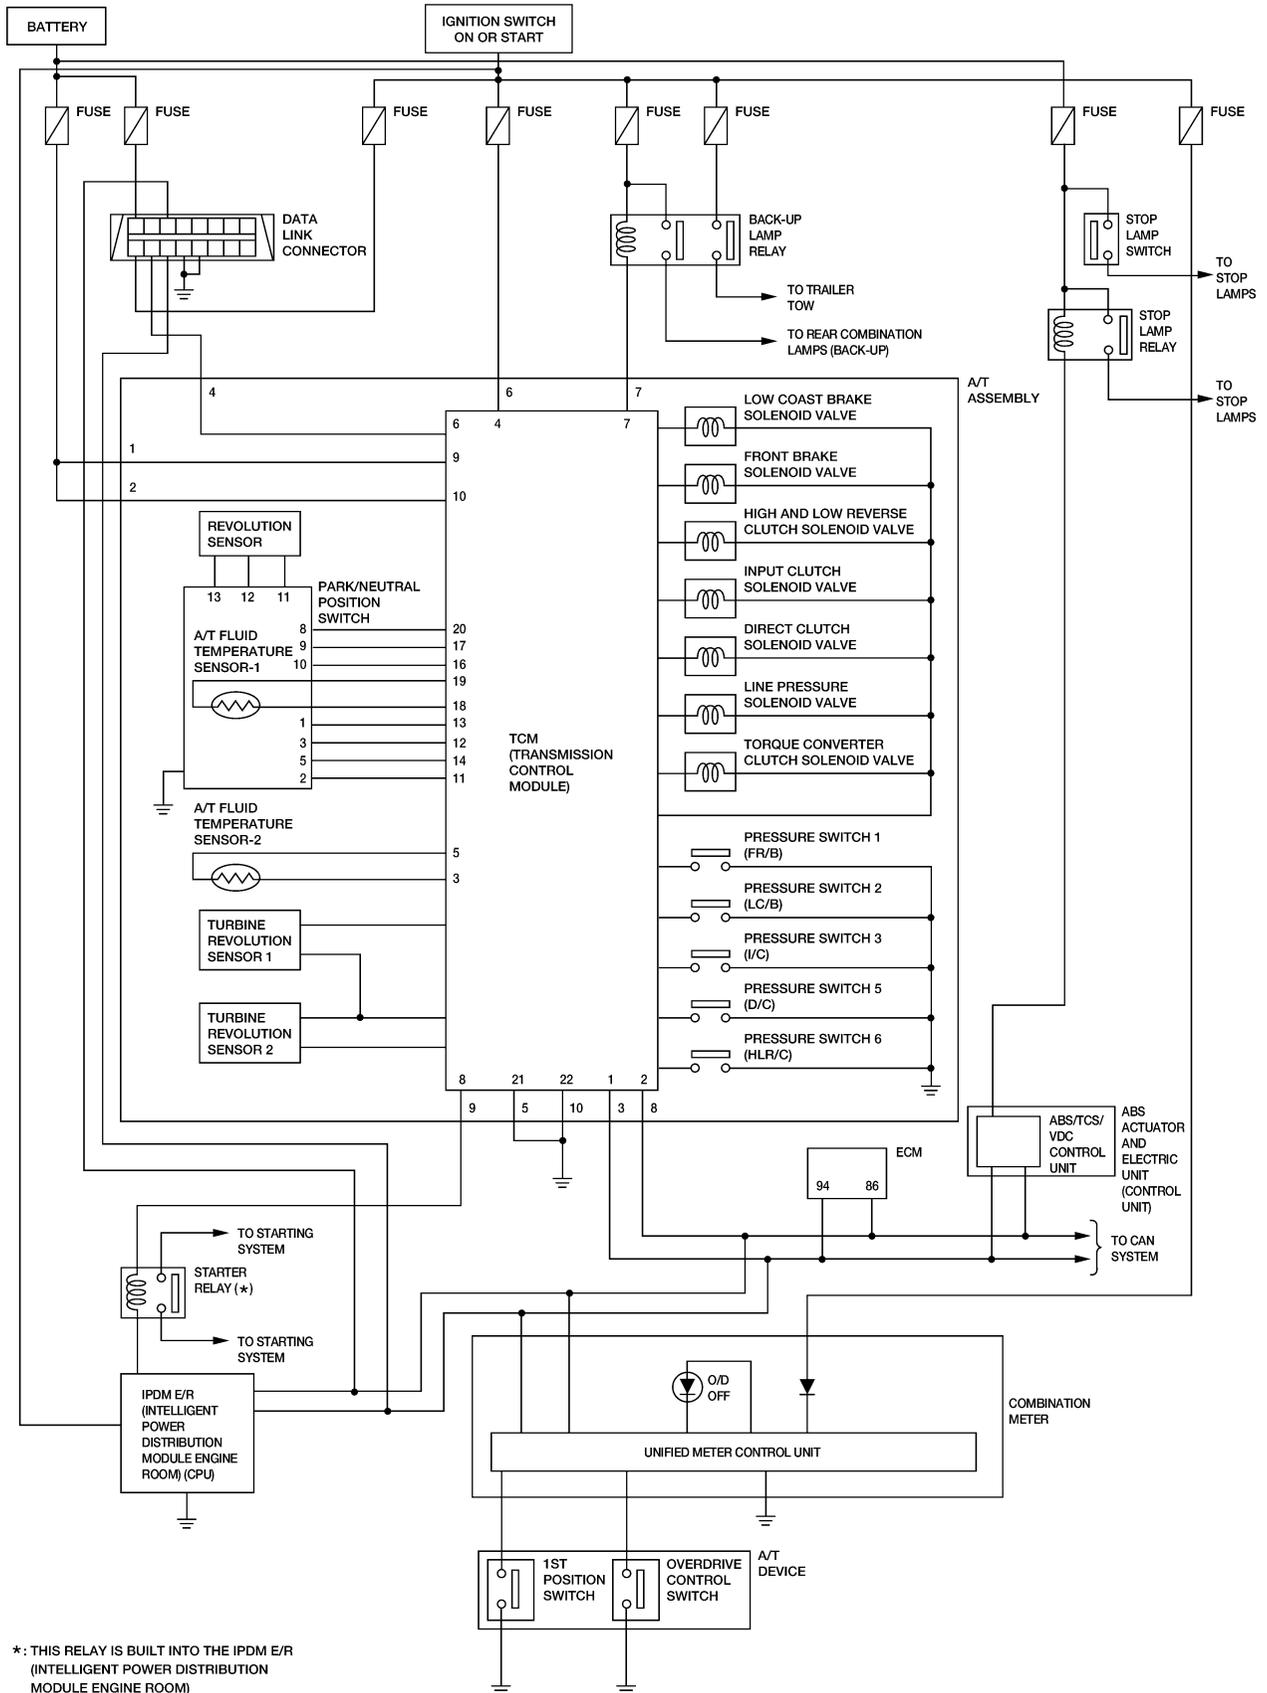

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

BCWA0414E

TROUBLE DIAGNOSIS

UCS0031X

Inspections Before Trouble Diagnosis

A/T FLUID CHECK

Fluid Leakage and Fluid Level Check

- Inspect for fluid leakage and check the fluid level. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).

Fluid Condition Check

Inspect the fluid condition.


Fluid condition	Conceivable Cause	Required Operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the ATF and check the A/T main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the ATF and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within A/T	Replace the ATF and check for improper operation of the A/T.




STALL TEST

Stall Test Procedure

- Inspect the amount of engine oil. Replenish the engine oil if necessary.
- Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of ATF. Replenish if necessary.

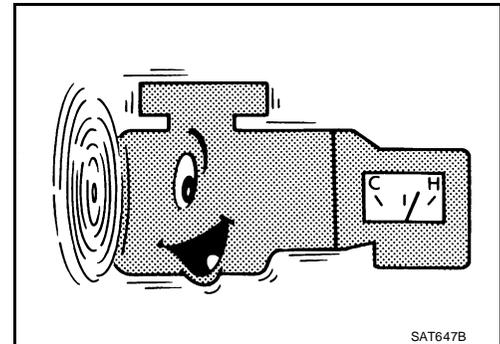

- Securely engage the parking brake so that the tires do not turn.

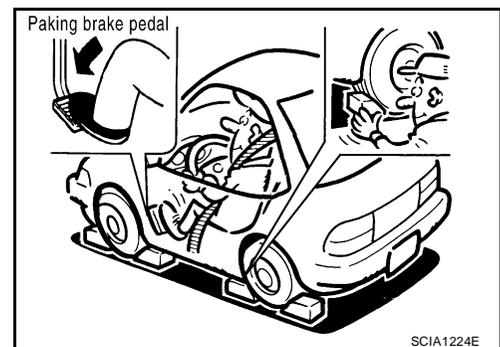


- Engine start, apply foot brake, and place selector lever in "D" position.
- While holding down the foot brake, gradually press down the accelerator pedal.
- Quickly read off the stall speed, then quickly remove your foot from the accelerator pedal.

CAUTION:

Do not hold down the accelerator pedal for more than 5 seconds during this test.

Stall speed: 2,200 - 2,500 rpm

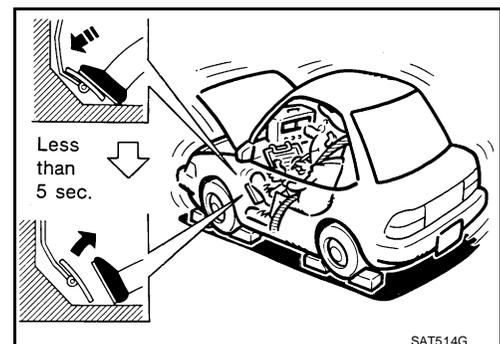

TROUBLE DIAGNOSIS

7. Move the selector lever to the "N" position.
8. Cool down the ATF.

CAUTION:

Run the engine at idle for at least one minute.

9. Repeat steps 5 through 8 with selector lever in "3", "2", "1" and "R" positions.

Judgement of Stall Test

	Selector lever position		Expected problem location
	D, 3, 2, 1	R	
Stall rotation	H	O	<ul style="list-style-type: none"> ● Forward brake ● Forward one-way clutch ● 1st one-way clutch ● 3rd one-way clutch
	O	H	<ul style="list-style-type: none"> ● Reverse brake
	L	L	<ul style="list-style-type: none"> ● Engine and torque converter one-way clutch
	H	H	<ul style="list-style-type: none"> ● Line pressure low

O: Stall speed within standard value position

H: Stall speed higher than standard value


L: Stall speed lower than standard value

Stall test standard value position

Does not shift-up D position 1 → 2	Slipping in 2nd, 3rd, 4th gears	Direct clutch slippage
Does not shift-up D position 2 → 3	Slipping in 3rd, 4th, 5th gears	High and low reverse clutch slippage
Does not shift-up D position 3 → 4	Slipping in 4th, 5th gears	Input clutch slippage
Does not shift-up D position 4 → 5	Slipping in 5th gear	Front brake slippage

LINE PRESSURE TEST

Line Pressure Test Port

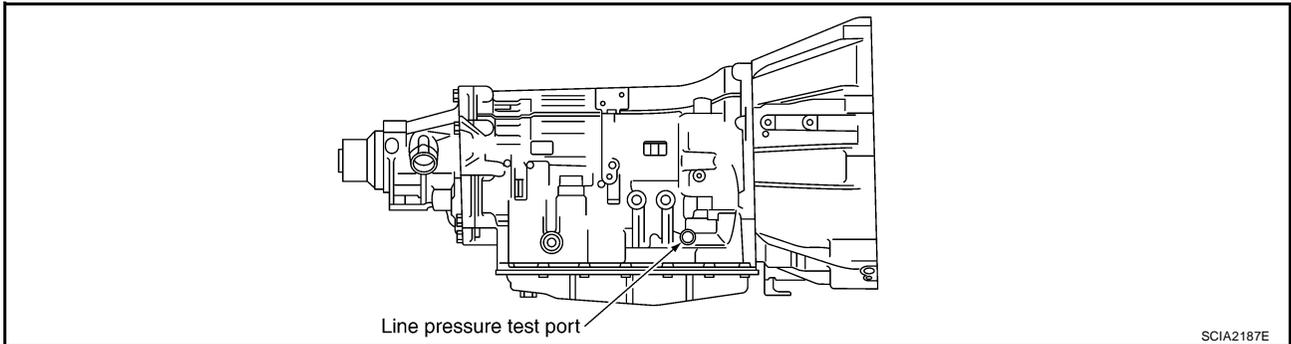

SCIA2187E

Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the ATF reaches in range of 50 to 80°C (122 to 176°F), then inspect the amount of ATF and replenish if necessary.

NOTE:


The automatic fluid temperature rises in range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.

TROUBLE DIAGNOSIS


3. After warming up remove the oil pressure detection plug and install the oil pressure gauge [ST2505S001(J-34301-C)].

CAUTION:

When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.

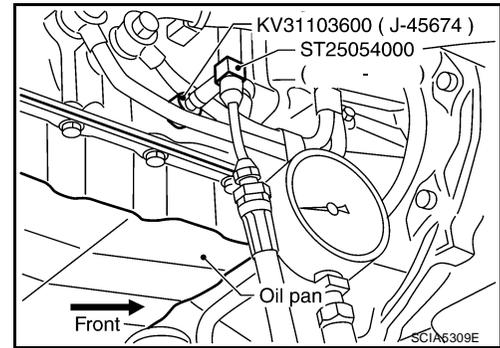

4. Securely engage the parking brake so that the tires do not turn.

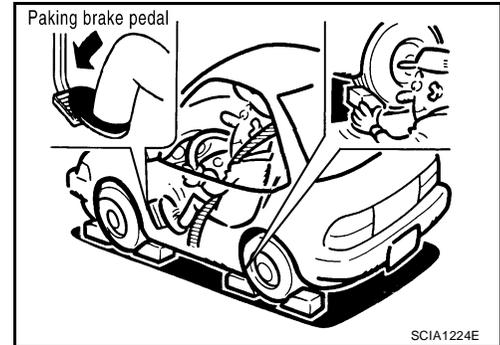

5. Start the engine, then measure the line pressure at both idle and the stall speed.

CAUTION:


- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [AT-50. "STALL TEST"](#).

6. After the measurements are complete, install the oil pressure detection plug and tighten to the regulation torque below.

 :7.3 N·m (0.74 kg·m, 65 in·lb)

CAUTION:

- Do not reuse the O-ring.
- Apply ATF to O-ring.

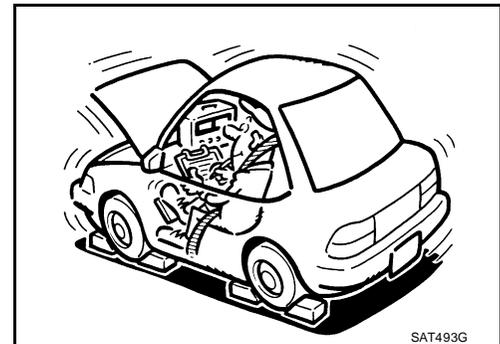

Line Pressure

Engine speed	Line pressure [kPa (kg/cm ² , psi)]	
	"R" position	"D" position
At idle speed	392 - 441 (4.0 - 4.5, 57 - 64)	373 - 422 (3.8 - 4.3, 54 - 61)
At stall speed	1,700 - 1,890 (17.3 - 19.3, 247 - 274)	1,310 - 1,500 (13.3 - 15.3, 190 - 218)

TROUBLE DIAGNOSIS

Judgement of Line Pressure Test

Judgement		Possible cause	
Idle speed	Low for all positions (P, R, N, D)	Possible causes include malfunctions in the pressure supply system and low oil pump output. For example <ul style="list-style-type: none"> ● Oil pump wear ● Pressure regulator valve or plug sticking or spring fatigue ● Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak ● Engine idle speed too low 	A B AT
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.	
	High	Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● ATF temperature sensor malfunction ● Line pressure solenoid malfunction (sticking in "OFF" state, filter clog, cut line) ● Pressure regulator valve or plug sticking 	D E F
Stall speed	Oil pressure does not rise higher than the oil pressure for idle.	Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● TCM breakdown ● Line pressure solenoid malfunction (shorting, sticking in "ON" state) ● Pressure regulator valve or plug sticking ● Pilot valve sticking or pilot filter clogged 	G H
	The pressure rises, but does not enter the standard position.	Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● Line pressure solenoid malfunction (sticking, filter clog) ● Pressure regulator valve or plug sticking ● Pilot valve sticking or pilot filter clogged 	I J
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.	K

ROAD TEST

Description

- The road test inspects overall performance of the A/T and analyzes possible malfunction causes.
- The road test is carried out in the following three stages.
 1. Check before engine is started. Refer to [AT-54](#) .
 2. Check at idle. Refer to [AT-54](#) .
 3. Cruise test
 - Inspect all the items from Part 1 to Part 3. Refer to [AT-55](#) , [AT-57](#) , [AT-58](#) .
 - Before beginning the road test, check the test procedure and inspection items.
 - Test all inspection items until the symptom is uncovered. Diagnose NG items when all road tests are complete.

TROUBLE DIAGNOSIS

UCS0031Y

Check Before Engine is Started

1. CHECK O/D OFF INDICATOR LAMP

1. Park vehicle on level surface.
2. Move selector lever to "P" position.
3. Turn ignition switch to "OFF" position and wait at least 10 seconds.
4. Turn ignition switch to "ON" position. (Do not start engine.)

Does O/D OFF indicator lamp light up for about 2 seconds?

YES >> GO TO 2.

NO >> 1. Turn ignition switch to "OFF" position.

2. Carry out the self-diagnostics and record all NG items on the diagnostics worksheet. Refer to [AT-87](#).

3. Go to [AT-54, "Check at Idle"](#).

Check at Idle

UCS0031Z

1. CHECK STARTING THE ENGINE

1. Park vehicle on level surface.
2. Move selector lever to "P" or "N" position.
3. Turn ignition switch to "OFF" position.
4. Turn ignition switch to "START" position.

Does the engine start?

YES >> GO TO 2.

NO >> Stop the road test and go to [AT-184, "Engine Cannot Be Started In "P" or "N" Position"](#).

2. CHECK STARTING THE ENGINE

1. Turn ignition switch to "ON" position.
2. Move selector lever in "D", "3", "2", "1" or "R" position.
3. Turn ignition switch to "START" position.

Does the engine start in either position?

YES >> Stop the road test and go to [AT-184, "Engine Cannot Be Started In "P" or "N" Position"](#).

NO >> GO TO 3.

3. CHECK "P" POSITION FUNCTIONS

1. Move selector lever to "P" position.
2. Turn ignition switch to "OFF" position.
3. Release the parking brake.
4. Push the vehicle forward or backward.
5. Engage the parking brake.

When you push the vehicle with disengaging the parking brake, does it move?

YES >> Enter a check mark at "In "P" Position Vehicle Moves When Pushed" on the diagnostics worksheet, then continue the road test.

NO >> GO TO 4.

TROUBLE DIAGNOSIS

4. CHECK "N" POSITION FUNCTIONS

1. Start the engine.
2. Move selector lever to "N" position.
3. Release the parking brake.

Does vehicle move forward or backward?

- YES >> Enter a check mark at "In "N" Position Vehicle Moves" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 5.

5. CHECK SHIFT SHOCK

1. Engage the brake.
2. Move selector lever to "D" position.

When the transmission is shifted from "N" to "D", is there an excessive shock?

- YES >> Enter a check mark at "Large Shock ("N" to "D" Position)" on the diagnostics worksheet, then continue the road test.
- NO >> GO TO 6.

6. CHECK "R" POSITION FUNCTIONS

1. Engage the brake.
2. Move selector lever to "R" position.
3. Release the brake for 4 to 5 seconds.

Does the vehicle creep backward?

- YES >> GO TO 7.
- NO >> Enter a check mark at "Vehicle Does Not Creep Backward In "R" Position" on the diagnostics worksheet, then continue the road test.

7. CHECK "D" POSITION FUNCTIONS

Inspect whether the vehicle creep forward when the transmission is put into the "D" position.

Does the vehicle creep forward in the "D" positions?

- YES >> Go to [AT-55, "Cruise Test - Part 1"](#) , [AT-57, "Cruise Test - Part 2"](#) and [AT-58, "Cruise Test - Part 3"](#)
- NO >> Enter a check mark at "Vehicle Does Not Creep Forward In "D" Positions" on the diagnostics worksheet, then continue the road test.

Cruise Test - Part 1

UCS00320

1. CHECK STARTING OUT FROM D1

1. Drive the vehicle for about 10 minutes to warm up the engine oil and ATF.
Appropriate temperature for the ATF: 50 - 80°C (122 - 176°F)
2. Park the vehicle on a level surface.
3. Move selector lever to "P" position.
4. Start the engine.
5. Set overdrive control switch to ON position.
6. Move selector lever to "D" position.
7. Press the accelerator pedal about half way down to accelerate the vehicle.

 **With CONSULT-II**

Read off the gear positions.

Starts from D1?

- YES >> GO TO 2.
- NO >> Enter a check mark at "Vehicle Cannot Be Started From D1" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

2. CHECK SHIFT-UP D1 → D2

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D1 → D2) at the appropriate speed.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#) .

Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at "A/T Does Not Shift: D1 → D2" on the diagnostics worksheet, then continue the road test.

3. CHECK SHIFT-UP D2 → D3

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D2 → D3) at the appropriate speed.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#) .

Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at "A/T Does Not Shift: D2 → D3" on the diagnostics worksheet, then continue the road test.

4. CHECK SHIFT-UP D3 → D4

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D3 → D4) at the appropriate speed.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#) .

Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D3 → D4 at the correct speed?

YES >> GO TO 5.

NO >> Enter a check mark at "A/T Does Not Shift: D3 → D4" on the diagnostics worksheet, then continue the road test.

5. CHECK SHIFT-UP D4 → D5

Press down the accelerator pedal about half way and inspect if the vehicle shifts up (D4 → D5) at the appropriate speed.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#) .

Ⓜ With CONSULT-II

Read the gear position, throttle degree of opening, and vehicle speed.

Does the A/T shift-up D4 → D5 at the correct speed?

YES >> GO TO 6.

NO >> Enter a check mark at "A/T Does Not Shift: D4 → D5" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

6. CHECK LOCK-UP

When releasing accelerator pedal from D5 (closed throttle position signal: OFF), check lock-up from D5 to L/U.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#).

With CONSULT-II

Select "TCC SOLENOID" with the "MAIN SIGNAL" mode for A/T.

Does it lock-up?

YES >> GO TO 7.

NO >> Enter a check mark at "A/T Does Not Perform Lock-up" on the diagnostics worksheet, then continue the road test.

7. CHECK LOCK-UP HOLD

Check hold lock-up.

With CONSULT-II

Select "TCC SOLENOID" with the "MAIN SIGNAL" mode for A/T.

Does it maintain lock-up status?

YES >> GO TO 8.

NO >> Enter a check mark at "A/T Does Not Hold Lock-up Condition" on the diagnostics worksheet, then continue the road test.

8. CHECK LOCK-UP RELEASE

Check lock-up cancellation by depressing brake pedal lightly to decelerate.

With CONSULT-II

Select "TCC SOLENOID" with the "MAIN SIGNAL" mode for A/T.

Does lock-up cancel?

YES >> GO TO 9.

NO >> Enter a check mark at "Lock-up Is Not Released" on the diagnostics worksheet, then continue the road test.

9. CHECK SHIFT-DOWN D5 → D4

Decelerate by pressing lightly on the brake pedal.

With CONSULT-II

Read the gear position and engine speed.

When the A/T shift-down D5 → D4, does the engine speed drop smoothly back to idle?

YES >> 1. Stop the vehicle.

2. Go to Cruise test - Part 2 (Refer to [AT-57](#)).

NO >> Enter a check mark at "Engine Speed Does Not Return to Idle" on the diagnostics worksheet, then continue the road test. Go to Cruise test - Part 2 (Refer to [AT-57](#)).

Cruise Test - Part 2

UCS00321

1. CHECK STARTING FROM D1

1. Move selector lever to "D" position.

2. Accelerate at half throttle.

With CONSULT-II

Read the gear position.

Does it start from D1?

YES >> GO TO 2.

NO >> Enter a check mark at "Vehicle Cannot Be Started From D1" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

2. CHECK SHIFT-UP D1 → D2

Press the accelerator pedal down all the way and inspect whether or not the transmission shifts up (D1 → D2) at the correct speed.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#) .

④ **With CONSULT-II**

Read the gear position, throttle position and vehicle speed.

Does the A/T shift-up D1 → D2 at the correct speed?

YES >> GO TO 3.

NO >> Enter a check mark at "A/T Does Not Shift: D1 → D2" on the diagnostics worksheet, then continue the road test.

3. CHECK SHIFT-UP D2 → D3

Press the accelerator pedal down all the way and inspect whether or not the transmission shifts up (D2 → D3) at the correct speed.

- Refer to [AT-60, "Vehicle Speed at Which Gear Shifting Occurs"](#) .

④ **With CONSULT-II**

Read the gear position, throttle position and vehicle speed.

Does the A/T shift-up D2 → D3 at the correct speed?

YES >> GO TO 4.

NO >> Enter a check mark at "A/T Does Not Shift: D2 → D3" on the diagnostics worksheet, then continue the road test.

4. CHECK SHIFT-UP D3 → D4 AND ENGINE BRAKE

When the transmission changes speed D3 → D4, return the accelerator pedal.

④ **With CONSULT-II**

Read the gear position.

Does the A/T shift-up D3 → D4 and apply the engine brake?

YES >> 1. Stop the vehicle.

2. See [AT-58, "Cruise Test - Part 3"](#) .

NO >> Enter a check mark at "A/T Does Not Shift: D3 → D4" on the diagnostics worksheet, then continue the road test.

Cruise Test - Part 3

UCS00322

1. CHECK SHIFT-DOWN

1. Confirm overdrive control switch is ON position.
2. Confirm gear selector lever is in "D" position.
3. Accelerate vehicle using half-throttle to D5 .
4. Release accelerator pedal.
5. Set overdrive control switch to OFF position while driving in D5 .

④ **With CONSULT-II**

Read the gear position.

Does A/T shift from D5 to D4 (O/D OFF)?

YES >> GO TO 2.

NO >> Enter a check mark at "A/T does not shift: 5th gear → 4th gear" on the diagnostics worksheet, then continue the road test.

TROUBLE DIAGNOSIS

2. CHECK SHIFT-DOWN

During D4 driving, move gear selector from D → 3 → 2 → 1.

Ⓜ **With CONSULT-II**

Read the gear position.

Is downshifting correctly performed?

YES >> GO TO 3.

NO >> Enter a check mark at "A/T does not shift" at the corresponding position (4th → 3rd, 3rd → 2nd, 2nd → 1st) on the diagnostics worksheet, then continue the road test.

3. CHECK ENGINE BRAKE

Does engine braking effectively reduce speed in 11 position?

YES >> 1. Stop the vehicle.

2. Carry out the self-diagnostics. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> Enter a check mark at "Vehicle Does Not Decelerate By Engine Brake" on the diagnostics worksheet, then continue trouble diagnosis.

A

B

AT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS

Vehicle Speed at Which Gear Shifting Occurs 2WD MODELS

UCS00323

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
3.133	Full throttle	60 - 74 (37 - 46)	99 - 119 (62 - 74)	153 - 183 (95 - 114)	234 - 267 (145 - 166)	230 - 264 (143 - 164)	142 - 171 (88 - 106)	87 - 104 (54 - 65)	41 - 48 (25 - 30)
	Half throttle	49 - 59 (30 - 37)	80 - 96 (50 - 60)	123 - 149 (76 - 93)	152 - 178 (94 - 111)	115 - 138 (71 - 86)	71 - 86 (44 - 53)	51 - 61 (32 - 38)	12 - 14 (7 - 9)
	Full throttle	60 - 68 (37 - 42)	99 - 110 (62 - 68)	153 - 170 (95 - 106)	234 - 259 (145 - 161)	230 - 255 (143 - 158)	142 - 158 (88 - 98)	87 - 97 (54 - 60)	41 - 47 (25 - 30)
	Half throttle	49 - 55 (30 - 34)	80 - 90 (50 - 56)	123 - 137 (76 - 85)	152 - 168 (94 - 104)	115 - 128 (71 - 80)	71 - 79 (44 - 49)	51 - 57 (32 - 35)	12 - 14 (7 - 9)

- At half throttle, the accelerator opening is 4/8 of the full opening.

4WD MODELS

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
3.357	Full throttle	58 - 65 (36 - 40)	94 - 104 (60 - 65)	144 - 160 (89 - 90)	221 - 245 (137 - 152)	218 - 241 (135 - 150)	135 - 150 (84 - 93)	82 - 92 (51 - 57)	40 - 45 (25 - 28)
	Half throttle	46 - 52 (29 - 32)	76 - 84 (47 - 52)	117 - 130 (73 - 81)	143 - 159 (89 - 99)	109 - 121 (68 - 75)	67 - 75 (42 - 47)	48 - 54 (30 - 34)	12 - 14 (7 - 9)
	Full throttle	60 - 68 (37 - 42)	99 - 110 (62 - 68)	153 - 170 (95 - 106)	234 - 259 (145 - 161)	230 - 255 (143 - 158)	142 - 158 (88 - 98)	87 - 97 (54 - 60)	41 - 47 (25 - 29)
	Half throttle	49 - 55 (30 - 34)	80 - 90 (50 - 56)	123 - 137 (76 - 85)	152 - 168 (94 - 104)	115 - 128 (71 - 80)	71 - 79 (44 - 49)	51 - 57 (32 - 35)	12 - 14 (7 - 9)

- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed at Which Lock-up Occurs/Releases 2WD MODELS

UCS00324

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
3.133	Closed throttle	78 - 93 (48 - 58)	68 - 82 (42 - 51)
	Half throttle	188 - 218 (117 - 135)	147 - 175 (91 - 109)
	Closed throttle	78 - 87 (48 - 54)	68 - 76 (42 - 47)
	Half throttle	188 - 208 (117 - 129)	147 - 163 (91 - 101)

- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal: OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

4WD MODELS

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
3.357	Closed throttle	73 - 81 (45 - 50)	64 - 72 (40 - 45)
	Half throttle	179 - 198 (111 - 123)	140 - 155 (87 - 96)
	Closed throttle	78 - 87 (48 - 54)	68 - 76 (42 - 47)
	Half throttle	188 - 208 (117 - 129)	147 - 163 (91 - 101)

- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal: OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

TROUBLE DIAGNOSIS

UCS00326

Symptom Chart

- The diagnostics item numbers show the sequence for inspection. Inspect in order from item 1.
- Overhaul and inspect inside the A/T only if A/T fluid condition is NG. Refer to [AT-50, "Fluid Condition Check"](#) .

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
1		Large shock. ("N" → "D" position) Refer to AT-187, "Large Shock ("N" to "D" Position)" .	ON vehicle	1. Engine idle speed	EC-76
				2. Engine speed signal	AT-117
				3. Accelerator pedal position sensor	AT-127
				4. Control cable adjustment	AT-222
				5. ATF temperature sensor	AT-130
				6. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148
				7. CAN communication line	AT-100
				8. Fluid level and state	AT-50
				9. Line pressure test	AT-51
				10. Control valve with TCM	AT-234
			OFF vehicle	11. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
2	Shift Shock	Shock is too large when changing D1 → D2 .	ON vehicle	1. Accelerator pedal position sensor	AT-127
				2. Control cable adjustment	AT-222
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152
				4. CAN communication line	AT-100
				5. Engine speed signal	AT-117
				6. Turbine revolution sensor	AT-135
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				8. Fluid level and state	AT-50
				9. Control valve with TCM	AT-233
			OFF vehicle	10. Direct clutch	AT-297
3		Shock is too large when changing D2 → D3 .	ON vehicle	1. Accelerator pedal position sensor	AT-127
				2. Control cable adjustment	AT-222
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170, AT-156
				4. CAN communication line	AT-100
				5. Engine speed signal	AT-117
				6. Turbine revolution sensor	AT-135
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				8. Fluid level and state	AT-50
				9. Control valve with TCM	AT-233
			OFF vehicle	10. High and low reverse clutch	AT-295

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
4		Shock is too large when changing D3 → D4 .	ON vehicle	1. Accelerator pedal position sensor	AT-127
				2. Control cable adjustment	AT-222
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-144
				4. CAN communication line	AT-100
				5. Engine speed signal	AT-117
				6. Turbine revolution sensor	AT-135
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				8. Fluid level and state	AT-50
				9. Control valve with TCM	AT-233
			OFF vehicle	10. Input clutch	AT-285
5	Shift Shock	Shock is too large when changing D4 → D5 .	ON vehicle	1. Accelerator pedal position sensor	AT-127
				2. Control cable adjustment	AT-222
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148
				4. CAN communication line	AT-100
				5. Engine speed signal	AT-117
				6. Turbine revolution sensor	AT-135
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				8. Fluid level and state	AT-50
				9. Control valve with TCM	AT-233
			OFF vehicle	10. Front brake (brake band)	AT-251
				11. Input clutch	AT-285
6		Shock is too large for downshift when accelerator pedal is pressed.	ON vehicle	1. Accelerator pedal position sensor	AT-127
				2. Control cable adjustment	AT-222
				3. CAN communication line	AT-100
				4. Engine speed signal	AT-117
				5. Turbine revolution sensor	AT-135
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				7. Fluid level and state	AT-50
				8. Control valve with TCM	AT-233
			OFF vehicle	9. Front brake (brake band)	AT-251
				10. Input clutch	AT-285
				11. High and low reverse clutch	AT-295
				12. Direct clutch	AT-297

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
7		Shock is too large for upshift when accelerator pedal is released.	ON vehicle	1. Accelerator pedal position sensor	AT-127	A
				2. Control cable adjustment	AT-222	B
				3. Engine speed signal	AT-117	
				4. CAN communication line	AT-100	
				5. Turbine revolution sensor	AT-135	AT
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137	
				7. Fluid level and state	AT-50	D
				8. Control valve with TCM	AT-233	
			OFF vehicle	9. Front brake (brake band)	AT-251	
				10. Input clutch	AT-285	E
				11. High and low reverse clutch	AT-295	
				12. Direct clutch	AT-297	F
8	Shift Shock	Shock is too large for lock-up.	ON vehicle	1. Accelerator pedal position sensor	AT-127	
				2. Control cable adjustment	AT-222	G
				3. Engine speed signal	AT-117	
				4. CAN communication line	AT-100	
				5. Turbine revolution sensor	AT-135	H
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137	
				7. Torque converter clutch solenoid valve	AT-119	I
				8. Fluid level and state	AT-50	
				9. Control valve with TCM	AT-233	J
			OFF vehicle	10. Torque converter	AT-263	
9		Shock is too large during engine brake.	ON vehicle	1. Accelerator pedal position sensor	AT-127	
				2. Control cable adjustment	AT-222	K
				3. CAN communication line	AT-100	
				4. Fluid level and state	AT-50	L
				5. Control valve with TCM	AT-233	
			OFF vehicle	6. Front brake (brake band)	AT-251	
				7. Input clutch	AT-285	M
				8. High and low reverse clutch	AT-295	
				9. Direct clutch	AT-297	

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page			
10		Gear does not change from D1 → D2 . Refer to AT-196, "A/T Does Not Shift: D1 → D2" .	ON vehicle	1. Fluid level and state	AT-50			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137			
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152			
				4. Line pressure test	AT-51			
				5. CAN communication line	AT-100			
				6. Control valve with TCM	AT-233			
			OFF vehicle	7. Direct clutch	AT-297			
11		Gear does not change from D2 → D3 . Refer to AT-198, "A/T Does Not Shift: D2 → D3" .	ON vehicle	1. Fluid level and state	AT-50			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137			
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170, AT-156			
				4. Line pressure test	AT-51			
				5. CAN communication line	AT-100			
				6. Control valve with TCM	AT-233			
			OFF vehicle	7. High and low reverse clutch	AT-295			
12	No Up Shift	Gear does not change from D3 → D4 . Refer to AT-200, "A/T Does Not Shift: D3 → D4" .	ON vehicle	1. Fluid level and state	AT-50			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137			
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-144			
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148			
				5. Line pressure test	AT-51			
				6. CAN communication line	AT-100			
				7. Control valve with TCM	AT-233			
			OFF vehicle	8. Input clutch	AT-285			
13		Gear does not change from D4 → D5 . Refer to AT-202, "A/T Does Not Shift: D4 → D5" .	ON vehicle	1. Fluid level and state	AT-50			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137			
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148			
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152			
				5. Turbine revolution sensor	AT-135			
				6. Line pressure test	AT-51			
				7. CAN communication line	AT-100			
				8. Control valve with TCM	AT-233			
						OFF vehicle	9. Front brake (brake band)	AT-263
							10. Input clutch	AT-285

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page			
14		In "D" range, does not downshift to 4th gear. Refer to AT-211, "A/T Does Not Shift: 5th gear → 4th gear" .	ON vehicle	1. Fluid level and state	AT-50			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137			
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148			
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152			
				5. CAN communication line	AT-100			
				6. Line pressure test	AT-51			
				7. Control valve with TCM	AT-233			
			OFF vehicle	8. Front brake (brake band)	AT-263			
			9. Input clutch	AT-285				
15	No Down Shift	In "D" or "3" range, does not downshift to 3rd gear. Refer to AT-213, "A/T Does Not Shift: 4th gear → 3rd gear" .	ON vehicle	1. Fluid level and state	AT-50			
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137			
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-144			
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148			
				5. CAN communication line	AT-100			
				6. Line pressure test	AT-51			
				7. Control valve with TCM	AT-233			
			OFF vehicle	8. Input clutch	AT-285			
			16	No Down Shift	In "D" or "2" range, does not downshift to 2nd gear. Refer to AT-215, "A/T Does Not Shift: 3rd gear → 2nd gear" .	ON vehicle	1. Fluid level and state	AT-50
2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137							
3. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170, AT-156							
4. CAN communication line	AT-100							
5. Line pressure test	AT-51							
6. Control valve with TCM	AT-233							
OFF vehicle	7. High and low reverse clutch	AT-295						
17	No Down Shift	In "D" or "1" range, does not downshift to 1st gear. Refer to AT-217, "A/T Does Not Shift: 2nd gear → 1st gear" .				ON vehicle	1. Fluid level and state	AT-50
							2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
			3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152				
			4. CAN communication line	AT-100				
			5. Line pressure test	AT-51				
			6. Control valve with TCM	AT-233				
			OFF vehicle	7. Direct clutch	AT-297			

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
18	Slips/Will Not engage	When "D" position, remains in 1st gear.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				3. Direct clutch solenoid valve	AT-152
				4. Line pressure test	AT-51
				5. CAN communication line	AT-100
				6. Control valve with TCM	AT-233
			OFF vehicle	7. 3rd one-way clutch	AT-283
				8. 1st one-way clutch	AT-290
				9. Gear system	AT-251
				10. Reverse brake	AT-263
				11. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
19		When "D" position, remains in 2nd gear.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				3. Low coast brake solenoid valve	AT-160
				4. Line pressure test	AT-51
				5. CAN communication line	AT-100
				6. Control valve with TCM	AT-233
			OFF vehicle	7. 3rd one-way clutch	AT-283
				8. Gear system	AT-251
				9. Direct clutch	AT-297
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
20		When "D" position, remains in 3rd gear.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				3. Line pressure test	AT-51
				4. CAN communication line	AT-100
				5. Control valve with TCM	AT-233
			OFF vehicle	6. 3rd one-way clutch	AT-283
				7. Gear system	AT-251
				8. High and low reverse clutch	AT-295
				9. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
21	Slips/Will Not engage	When "D" position, remains in 4th gear.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-144
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168,AT-152
				5. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170, AT-156
				6. Low coast brake solenoid valve	AT-160
				7. Front brake solenoid valve	AT-148
				8. Line pressure test	AT-51
				9. CAN communication line	AT-100
				10. Control valve with TCM	AT-233
			OFF vehicle	11. Input clutch	AT-285
				12. Gear system	AT-251
				13. High and low reverse clutch	AT-295
				14. Direct clutch	AT-297

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
22		When "D" position, remains in 5th gear.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164 , AT-148
				4. Line pressure test	AT-51
				5. CAN communication line	AT-100
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Front brake (brake band)	AT-263
				8. Input clutch	AT-285
				9. Gear system	AT-251
				10. High and low reverse clutch	AT-295
23	Slips/Will Not Engage	Vehicle cannot be started from D1 . Refer to AT-194 , " Vehicle Cannot Be Started From D1 ".	ON vehicle	1. Fluid level and state	AT-50
				2. Accelerator pedal position sensor	AT-127
				3. Line pressure test	AT-51
				4. CAN communication line	AT-100
				5. Control valve with TCM	AT-233
			OFF vehicle	6. Torque converter	AT-263
				7. Oil pump assembly	AT-280
				8. 3rd one-way clutch	AT-283
				9. 1st one-way clutch	AT-290
				10. Gear system	AT-251
				11. Reverse brake	AT-263
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
24		Does not lock-up. Refer to AT-204 , " A/T Does Not Perform Lock-up ".	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Engine speed signal	AT-117
				4. Turbine revolution sensor	AT-135
				5. Torque converter clutch solenoid valve	AT-119
				6. CAN communication line	AT-100
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-280

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page		
25	Slips/Will Not engage	Does not hold lock-up condition. Refer to AT-206 , " A/T Does Not Hold Lock-up Condition ".	ON vehicle	1. Fluid level and state	AT-50	A	
				2. Line pressure test	AT-51	B	
				3. Engine speed signal	AT-117		
				4. Turbine revolution sensor	AT-135		
				5. Torque converter clutch solenoid valve	AT-119	AT	
				6. CAN communication line	AT-100		
				7. Control valve with TCM	AT-233		
			OFF vehicle	8. Torque converter	AT-263	D	
				9. Oil pump assembly	AT-280		
26		Slips/Will Not engage	Lock-up is not released. Refer to AT-208 , " Lock-up Is Not Released ".	ON vehicle	1. Fluid level and state	AT-50	E
					2. Line pressure test	AT-51	
					3. Engine speed signal	AT-117	
					4. Turbine revolution sensor	AT-135	F
					5. Torque converter clutch solenoid valve	AT-119	
					6. CAN communication line	AT-100	G
					7. Control valve with TCM	AT-233	
				OFF vehicle	8. Torque converter	AT-263	H
					9. Oil pump assembly	AT-280	
27	Slips/Will Not engage		No shock at all or the clutch slips when vehicle changes speed D1 → D2 .	ON vehicle	1. Fluid level and state	AT-50	I
					2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137	
					3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-152	J
					4. CAN communication line	AT-100	
					5. Line pressure test	AT-51	K
					6. Control valve with TCM	AT-233	
				OFF vehicle	7. Torque converter	AT-263	L
					8. Oil pump assembly	AT-280	
					9. 3rd one-way clutch	AT-283	
		10. Gear system			AT-251	M	
		11. Direct clutch			AT-297		
		12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)			AT-263		

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
28	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D2 → D3 .	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170, AT-156
				4. CAN communication line	AT-100
				5. Line pressure test	AT-51
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-280
				9. 3rd one-way clutch	AT-283
				10. Gear system	AT-251
				11. High and low reverse clutch	AT-295
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
29		No shock at all or the clutch slips when vehicle changes speed D3 → D4 .	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-144
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148
				5. CAN communication line	AT-100
				6. Line pressure test	AT-51
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-280
				10. Input clutch	AT-285
				11. Gear system	AT-251
				12. High and low reverse clutch	AT-295
				13. Direct clutch	AT-297

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page	
30	Slips/Will Not engage	No shock at all or the clutch slips when vehicle changes speed D4 → D5 .	ON vehicle	1. Fluid level and state	AT-50	A
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137	B
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148	AT
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152	
				5. CAN communication line	AT-100	D
				6. Line pressure test	AT-51	
				7. Control valve with TCM	AT-233	
			OFF vehicle	8. Torque converter	AT-263	E
				9. Oil pump assembly	AT-280	
				10. Front brake (brake band)	AT-263	F
				11. Input clutch	AT-285	
				12. Gear system	AT-251	G
				13. High and low reverse clutch	AT-295	
31	Slips/Will Not engage	When you press the accelerator pedal and shift speed D5 → D4 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-50	H
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137	I
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148	J
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152	
				5. CAN communication line	AT-100	K
				6. Line pressure test	AT-51	L
				7. Control valve with TCM	AT-233	
			OFF vehicle	8. Torque converter	AT-263	M
				9. Oil pump assembly	AT-280	
				10. Input clutch	AT-285	
				11. Gear system	AT-251	
				12. High and low reverse clutch	AT-295	
				13. Direct clutch	AT-297	

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
32	Slips/Will Not engage	When you press the accelerator pedal and shift speed D4 → D3 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				3. ATF pressure switch 3 and input clutch solenoid valve	AT-166, AT-144
				4. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148
				5. CAN communication line	AT-100
				6. Line pressure test	AT-51
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-280
				10. 3rd one-way clutch	AT-283
				11. Gear system	AT-251
				12. High and low reverse clutch	AT-295
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
33		When you press the accelerator pedal and shift speed D3 → D2 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112, AT-137
				3. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170, AT-156
				4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152
				5. CAN communication line	AT-100
				6. Line pressure test	AT-51
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-280
				10. 3rd one-way clutch	AT-283
				11. Gear system	AT-251
				12. Direct clutch	AT-297
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
34	Slips/Will Not Engage	When you press the accelerator pedal and shift speed D2 → D1 the engine idles or the transmission slips.	ON vehicle	1. Fluid level and state	AT-50
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				3. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-152
				4. CAN communication line	AT-100
				5. Line pressure test	AT-51
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-280
				9. 3rd one-way clutch	AT-283
				10. 1st one-way clutch	AT-290
				11. Gear system	AT-251
				12. Reverse brake	AT-263
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
35	With selector lever in "D" position, acceleration is extremely poor.		ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. CAN communication line	AT-100
				5. PNP switch	AT-108
				6. Control cable adjustment	AT-222
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Torque converter	AT-263
				9. Oil pump assembly	AT-280
				10. 1st one-way clutch	AT-290
				11. Gear system	AT-251
				12. Reverse brake	AT-263
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
36		With selector lever in "R" position, acceleration is extremely poor.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170 , AT-156
				5. CAN communication line	AT-100
				6. PNP switch	AT-108
				7. Control cable adjustment	AT-222
				8. Control valve with TCM	AT-233
			OFF vehicle	9. Gear system	AT-251
				10. Output shaft	AT-263
				11. Reverse brake	AT-263
37	Slips/Will Not Engage	While starting off by accelerating in 1st, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. CAN communication line	AT-100
				5. Control valve with TCM	AT-233
			OFF vehicle	6. Torque converter	AT-263
				7. Oil pump assembly	AT-280
				8. 3rd one-way clutch	AT-283
				9. 1st one-way clutch	AT-290
				10. Gear system	AT-251
				11. Reverse brake	AT-263
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
38		While accelerating in 2nd, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. CAN communication line	AT-100
				5. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-152
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-280
				9. 3rd one-way clutch	AT-283
				10. Gear system	AT-251
				11. Direct clutch	AT-297
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-297

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
39	Slips/Will Not Engage	While accelerating in 3rd, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. CAN communication line	AT-100
				5. ATF pressure switch 6, high and low reverse clutch solenoid valve	AT-170 , AT-156
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-280
				9. 3rd one-way clutch	AT-283
				10. Gear system	AT-251
				11. High and low reverse clutch	AT-295
				12. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
40		While accelerating in 4th, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. CAN communication line	AT-100
				5. ATF pressure switch 3 and input clutch solenoid valve	AT-166 , AT-144
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-280
				9. Input clutch	AT-285
				10. Gear system	AT-251
				11. High and low reverse clutch	AT-295
				12. Direct clutch	AT-297

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page				
41		While accelerating in 5th, engine races or slippage occurs.	ON vehicle	1. Fluid level and state	AT-50				
				2. Line pressure test	AT-51				
				3. Accelerator pedal position sensor	AT-127				
				4. CAN communication line	AT-100				
				5. ATF pressure switch 1 and front brake solenoid valve	AT-164, AT-148				
				6. Control valve with TCM	AT-233				
			OFF vehicle	7. Torque converter	AT-263				
				8. Oil pump assembly	AT-280				
				9. Front brake (brake band)	AT-263				
				10. Input clutch	AT-285				
				11. Gear system	AT-251				
				12. High and low reverse clutch	AT-295				
42	Slips/Will Not Engage	Slips at lock-up.	ON vehicle	1. Fluid level and state	AT-50				
				2. Line pressure test	AT-51				
				3. Engine speed signal	AT-117				
				4. Turbine revolution sensor	AT-135				
				5. Torque converter clutch solenoid valve	AT-119				
				6. CAN communication line	AT-100				
				7. Control valve with TCM	AT-233				
			OFF vehicle	8. Torque converter	AT-263				
				9. Oil pump assembly	AT-280				
				43		No creep at all. Refer to AT-189 , " Vehicle Does Not Creep Backward In "R" Position ", AT-192 , " Vehicle Does Not Creep Forward In "D" Position "	ON vehicle	1. Fluid level and state	AT-50
								2. Line pressure test	AT-51
								3. Accelerator pedal position sensor	AT-127
4. ATF pressure switch 5 and direct clutch solenoid valve	AT-168, AT-152								
5. PNP switch	AT-108								
6. CAN communication line	AT-100								
7. Control cable adjustment	AT-222								
8. Control valve with TCM	AT-233								
OFF vehicle	9. Torque converter	AT-263							
	10. Oil pump assembly	AT-280							
	11. 1st one-way clutch	AT-290							
	12. Gear system	AT-251							
	13. Reverse brake	AT-263							
	14. Direct clutch	AT-297							
	15. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263							
	16. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263							

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
44		Vehicle cannot run in all positions.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. PNP switch	AT-108
				4. Control cable adjustment	AT-222
				5. Control valve with TCM	AT-233
			OFF vehicle	6. Oil pump assembly	AT-280
				7. Gear system	AT-251
				8. Output shaft	AT-263
45	Slips/Will Not Engage	With selector lever in "D" position, driving is not possible.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. PNP switch	AT-108
				4. Control cable adjustment	AT-222
				5. Control valve with TCM	AT-233
			OFF vehicle	6. Torque converter	AT-263
				7. Oil pump assembly	AT-280
				8. 1st one-way clutch	AT-290
				9. Gear system	AT-251
				10. Reverse brake	AT-263
				11. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
46		With selector lever in "R" position, driving is not possible.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. PNP switch	AT-108
				4. Control cable adjustment	AT-222
				5. Control valve with TCM	AT-233
			OFF vehicle	6. Gear system	AT-251
				7. Output shaft	AT-263
				8. Reverse brake	AT-263
47	Others	Shift point is high in "D" position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				2. Accelerator pedal position sensor	AT-127
				3. CAN communication line	AT-100
				4. ATF temperature sensor	AT-130
				5. Control valve with TCM	AT-233

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
48		Shift point is low in "D" position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				2. Accelerator pedal position sensor	AT-127
				3. CAN communication line	AT-100
				4. Control valve with TCM	AT-233
49		Judder occurs during lock-up.	ON vehicle	1. Fluid level and state	AT-50
				2. Engine speed signal	AT-117
				3. Turbine revolution sensor	AT-135
				4. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
			OFF vehicle	5. Accelerator pedal position sensor	AT-127
				6. CAN communication line	AT-100
				7. Torque converter clutch solenoid valve	AT-119
				8. Control valve with TCM	AT-233
50	Others	Strange noise in "R" position.	ON vehicle	1. Fluid level and state	AT-50
				2. Engine speed signal	AT-117
				3. CAN communication line	AT-100
				4. Control valve with TCM	AT-233
			OFF vehicle	5. Torque converter	AT-263
				6. Oil pump assembly	AT-280
				7. Gear system	AT-251
				8. High and low reverse clutch	AT-295
				9. Reverse brake	AT-263
51		Strange noise in "N" position.	ON vehicle	1. Fluid level and state	AT-50
				2. Engine speed signal	AT-117
				3. CAN communication line	AT-100
				4. Control valve with TCM	AT-233
			OFF vehicle	5. Torque converter	AT-263
				6. Oil pump assembly	AT-280
				7. Gear system	AT-251
52		Strange noise in "D" position.	ON vehicle	1. Fluid level and state	AT-50
				2. Engine speed signal	AT-117
				3. CAN communication line	AT-100
				4. Control valve with TCM	AT-233
			OFF vehicle	5. Torque converter	AT-263
				6. Oil pump assembly	AT-280
				7. Gear system	AT-251
				8. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
53		Vehicle dose not decelerate by engine brake. Refer to AT-219 . "Vehicle Does Not Decelerate By Engine Brake" .	ON vehicle	1. PNP switch	AT-108
				2. Fluid level and state	AT-50
				3. Control cable adjustment	AT-222
				4. 1st position switch	AT-219
				5. ATF pressure switch 5	AT-168
				6. CAN communication line	AT-100
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Input clutch	AT-285
				9. High and low reverse clutch	AT-295
				10. Direct clutch	AT-297
54	Others	Engine brake does not operate in "2" position.	ON vehicle	1. PNP switch	AT-108
				2. Fluid level and state	AT-50
				3. Control cable adjustment	AT-222
				5. ATF pressure switch 6	AT-170
				6. CAN communication line	AT-100
				7. Control valve with TCM	AT-233
				OFF vehicle	8. Front brake (brake band)
			9. Input clutch		AT-285
			10. High and low reverse clutch		AT-295
			55		Engine brake does not operate in "1" position.
2. Fluid level and state	AT-50				
3. Control cable adjustment	AT-222				
4. 1st position switch	AT-219				
5. ATF pressure switch 5	AT-168				
6. CAN communication line	AT-100				
7. Control valve with TCM	AT-233				
OFF vehicle	8. Input clutch	AT-285			
	9. High and low reverse clutch	AT-295			
	10. Direct clutch	AT-297			

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
56		Maximum speed low.	ON vehicle	1. Fluid level and state	AT-50
				2. Line pressure test	AT-51
				3. Accelerator pedal position sensor	AT-127
				4. CAN communication line	AT-100
				5. Direct clutch solenoid valve	AT-152
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
				8. Oil pump assembly	AT-280
				9. Input clutch	AT-285
				10. Gear system	AT-251
				11. High and low reverse clutch	AT-295
				12. Direct clutch	AT-297
				13. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				14 Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
57	Others	Extremely large creep.	ON vehicle	1. Engine idle speed	EC-76
				2. CAN communication line	AT-100
				3. ATF pressure switch 5	AT-168
			OFF vehicle	4. Torque converter	AT-263
58		With selector lever in "P" position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled. Refer to AT-185 . " In "P" Position, Vehicle Moves When Pushed "	ON vehicle	1. PNP switch	AT-108
				2. Control cable adjustment	AT-222
			OFF vehicle	3. Parking pawl components	AT-251
59		Vehicle runs with transmission in "P" position.	ON vehicle	1. PNP switch	AT-108
				2. Fluid level and state	AT-50
				3. Control cable adjustment	AT-222
				4. Control valve with TCM	AT-233
				5. Parking pawl components	AT-251
			OFF vehicle	6. Gear system	AT-251

TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
60	Others	Vehicle runs with transmission in "N" position. Refer to AT-186 , " In "N" Position, Vehicle Moves ".	ON vehicle	1. PNP switch	AT-108
				2. Fluid level and state	AT-50
				3. Control cable adjustment	AT-222
				4. Control valve with TCM	AT-233
			OFF vehicle	5. Input clutch	AT-285
				6. Gear system	AT-251
				7. Direct clutch	AT-297
				8. Reverse brake	AT-263
				9. Forward one- way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to AT-16 .)	AT-263
61	Others	Engine does not start in "N" or "P" position. Refer to AT-184 , " Engine Cannot Be Started In "P" or "N" Position ".	ON vehicle	1. Ignition switch and starter	PG-4, SC-10
				2. Control cable adjustment	AT-222
				3. PNP switch	AT-108
62	Others	Engine starts in positions other than "N" or "P".	ON vehicle	1. Ignition switch and starter	PG-4, SC-10
				2. Control cable adjustment	AT-222
				3. PNP switch	AT-108
63	Others	Engine stall.	ON vehicle	1. Fluid level and state	AT-50
				2. Engine speed signal	AT-117
				3. Turbine revolution sensor	AT-135
				4. Torque converter clutch solenoid valve	AT-119
				5. CAN communication line	AT-100
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263
64	Others	Engine stalls when select lever shifted "N" → "D", "R".	ON vehicle	1. Fluid level and state	AT-50
				2. Engine speed signal	AT-117
				3. Turbine revolution sensor	AT-135
				4. Torque converter clutch solenoid valve	AT-119
				5. CAN communication line	AT-100
				6. Control valve with TCM	AT-233
			OFF vehicle	7. Torque converter	AT-263

A
B
AT
D
E
F
G
H
I
J
K
L
M


TROUBLE DIAGNOSIS

No.	Items	Symptom	Condition	Diagnostic Item	Reference page
65	Others	Engine speed does not return to idle. Refer to AT-209 , " Engine Speed Does Not Return to Idle ".	ON vehicle	1. Fluid level and state	AT-50
				2. ATF pressure switch 5 and direct clutch solenoid valve	AT-168 , AT-152
				3. ATF pressure switch 1 and front brake solenoid valve	AT-164 , AT-148
				4. Accelerator pedal position sensor	AT-127
				5. Vehicle speed sensor A/T and vehicle speed sensor MTR	AT-112 , AT-137
				6. CAN communication line	AT-100
				7. Control valve with TCM	AT-233
			OFF vehicle	8. Front brake (brake band)	AT-263
				9. Direct clutch	AT-297

TROUBLE DIAGNOSIS

TCM Input/Output Signal Reference Values A/T ASSEMBLY HARNESS CONNECTOR TERMINAL LAYOUT

UCS00327

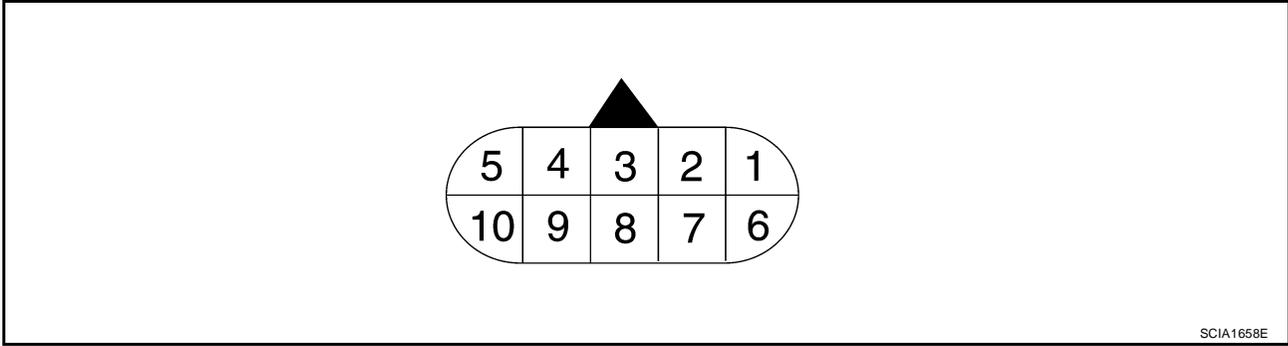

SCIA1658E

TCM INSPECTION TABLE

Data are reference value and are measured between each terminal and ground.

Terminal No.	Wire color	Item	Condition	Data (Approx.)	
1	R/B	Power supply (Memory back-up)	Always	Battery voltage	
2	R/B	Power supply (Memory back-up)	Always	Battery voltage	
3	L	CAN H	-	-	
4	V	K-line (CONSULT-II signal)	The terminal is connected to the data link connector for CONSULT-II.		
5	B	Ground	Always	0V	
6	W/G	Power supply		-	Battery voltage
				-	0V
7	LG	Back-up lamp relay		Selector lever in "R" position.	0V
				Selector lever in other positions.	Battery voltage
8	P	CAN L	-	-	
9	R	Starter relay		Selector lever in "N", "P" positions.	Battery voltage
				Selector lever in other positions.	0V
10	B	Ground	Always	0V	

TROUBLE DIAGNOSIS

CONSULT-II Function (A/T) FUNCTION

UCS00328

Diagnostic test mode	Function	Reference page
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	AT-87
Data monitor	Input/Output data in the TCM can be read.	AT-90
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.	AT-95
Function test	Conducted by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	—
DTC work support	Select the operating condition to confirm Diagnosis Trouble Codes.	AT-95
ECU part number	TCM part number can be read.	—

CONSULT-II REFERENCE VALUE

NOTICE:

- The CONSULT-II electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT-II display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
- Shift schedule (which implies gear position) displayed on CONSULT-II and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance,
 - Shift schedule indicated in Service Manual refers to the point where shifts start, and
 - Gear position displayed on CONSULT-II indicates the point where shifts are completed.
- Display of solenoid valves on CONSULT-II changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).

Item name	Condition	Display value (Approx.)
ATF TEMP SE 1	0°C (32° F) - 20°C (68°F) - 80°C (176°F)	3.3 - 2.7 - 0.9 V
ATF TEMP SE 2		3.3 - 2.5 - 0.7 V
TCC SOLENOID	When perform slip lock-up	0.2 - 0.4 A
	When perform lock-up	0.4 - 0.6 A
SLCT LVR POSI	Selector lever in "N", "P" positions.	N/P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D
	Selector lever in "3" position.	3
	Selector lever in "2" position.	2
VHCL/S SE·A/T	During driving	Approximately matches the speedometer reading.
	Engine running	Closely matches the tachometer reading.
LINE PRES SOL	During driving	0.2 - 0.6 A
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.
VHCL/S SE·MTR	During driving	Approximately matches the speedometer reading.
ATF PRES SW 1	Front brake engaged. Refer to AT-19	ON
	Front brake disengaged. Refer to AT-19	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to AT-19	ON
	Low coast brake disengaged. Refer to AT-19	OFF

TROUBLE DIAGNOSIS

Item name	Condition	Display value (Approx.)	
ATF PRES SW 3	Input clutch engaged. Refer to AT-19	ON	A
	Input clutch disengaged. Refer to AT-19	OFF	
ATF PRES SW 5	Direct clutch engaged. Refer to AT-19	ON	B
	Direct clutch disengaged. Refer to AT-19	OFF	
ATF PRES SW 6	High and low reverse clutch engaged. Refer to AT-19	ON	AT
	High and low reverse clutch disengaged. Refer to AT-19	OFF	
I/C SOLENOID	Input clutch disengaged. Refer to AT-19	0.6 - 0.8 A	D
	Input clutch engaged. Refer to AT-19	0 - 0.05 A	
FR/B SOLENOID	Front brake engaged. Refer to AT-19	0.6 - 0.8 A	E
	Front brake disengaged. Refer to AT-19	0 - 0.05 A	
D/C SOLENOID	Direct clutch disengaged. Refer to AT-19	0.6 - 0.8 A	F
	Direct clutch engaged. Refer to AT-19	0 - 0.05 A	
HLR/C SOL	High and low reverse clutch disengaged. Refer to AT-19	0.6 - 0.8 A	F
	High and low reverse clutch engaged. Refer to AT-19	0 - 0.05 A	
ON OFF SOL	Low coast brake engaged. Refer to AT-19	ON	G
	Low coast brake disengaged. Refer to AT-19	OFF	
STARTER RELAY	Selector lever in "N", "P" positions.	ON	H
	Selector lever in other position.	OFF	
ACCELE POSI	Released accelerator pedal.	0.0/8	I
	Fully depressed accelerator pedal.	8/8	
THROTTLE POSI	Released accelerator pedal.	0.0/8	I
	Fully depressed accelerator pedal.	8/8	
CLSD THL POS	Released accelerator pedal.	ON	J
	Fully depressed accelerator pedal.	OFF	
W/O THL POS	Fully depressed accelerator pedal.	ON	K
	Released accelerator pedal.	OFF	
OD CONT SW	Releasing overdrive control switch	OFF	L
	Holding overdrive control switch	ON	
BRAKE SW	Depressed brake pedal.	ON	L
	Released brake pedal.	OFF	

M


TROUBLE DIAGNOSIS

CONSULT-II SETTING PROCEDURE


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- For details, refer to the separate "CONSULT-II Operations Manual".
1. Turn ignition switch "OFF".
 2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in instrument lower panel on driver side.

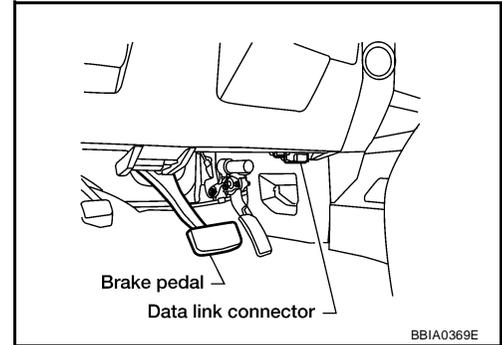

3. Turn ignition switch "ON". (Do not start engine.)
4. Touch "START (NISSAN BASED VHCL)".

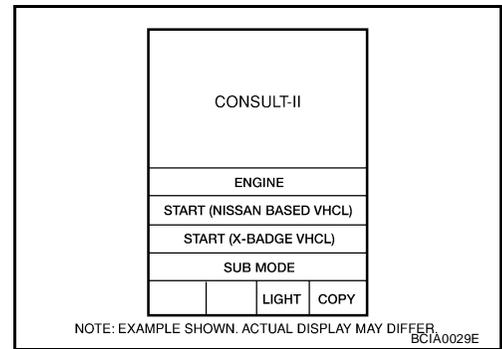

5. Touch "A/T".
If "A/T" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).
6. Perform each diagnostic test mode according to each service procedure.

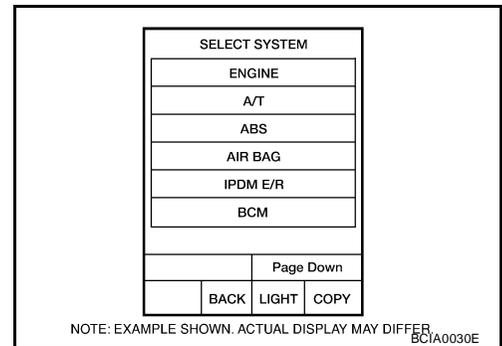


TROUBLE DIAGNOSIS

SELF-DIAGNOSTIC RESULT MODE

Operation Procedure

After performing [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#), place check marks for results on the [AT-45, "DIAGNOSTIC WORKSHEET"](#). Reference pages are provided following the items.

1. Perform [AT-86, "CONSULT-II SETTING PROCEDURE"](#).
2. Touch "SELF-DIAG RESULTS".
Display shows malfunction experienced since the last erasing operation.

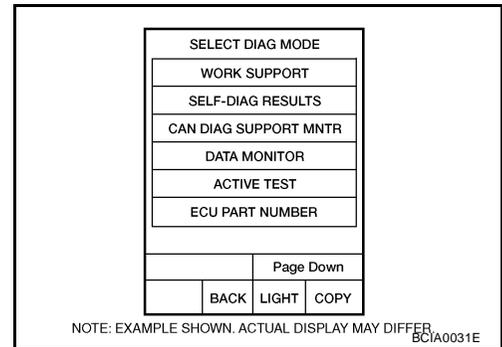

Display Items List

X: Applicable, —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)	Reference page
		"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST	
CAN COMM CIRCUIT	<ul style="list-style-type: none"> When a malfunction is detected in CAN communications 	U1000	U1000	AT-100
STARTER RELAY/ CIRC	<ul style="list-style-type: none"> If this signal is ON other than in "P" or "N" position, this is judged to be a malfunction. (And if it is OFF in "P" or "N" position, this too is judged to be a malfunction.) 	P0615	—	AT-103
TCM	<ul style="list-style-type: none"> TCM is malfunctioning. 	P0700	P0700	AT-107
PNP SW/CIRC	<ul style="list-style-type: none"> PNP switch 1-4 signals input with impossible pattern "P" position is detected from "N" position without any other position being detected in between. 	P0705	P0705	AT-108
VEH SPD SEN/CIR AT (Revolution sensor)	<ul style="list-style-type: none"> Signal from vehicle speed sensor A/T (Revolution sensor) not input due to cut line or the like Unexpected signal input during running After ignition switch is turned ON, unexpected signal input from vehicle speed sensor MTR before the vehicle starts moving 	P0720	P0720	AT-112
ENGINE SPEED SIG	<ul style="list-style-type: none"> TCM does not receive the CAN communication signal from the ECM. 	P0725	—	AT-117
TCC SOLENOID/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like 	P0740	P0740	AT-119
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> A/T cannot perform lock-up even if electrical circuit is good. TCM detects as irregular by comparing difference value with slip rotation. 	P0744	P0744*2	AT-121
L/PRESS SOL/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value. 	P0745	P0745	AT-123
TCM-RAM	<ul style="list-style-type: none"> TCM memory (RAM) is malfunctioning. 	P1702	—	AT-125
TCM-ROM	<ul style="list-style-type: none"> TCM memory (ROM) is malfunctioning. 	P1703	—	AT-125

TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)	Reference page
		"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST	
TP SEN/CIRC A/T	<ul style="list-style-type: none"> ● TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM. 	P1705	—	AT-127
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> ● During running, the ATF temperature sensor signal voltage is excessively high or low 	P1710	P0710	AT-130
TURBINE REV S/CIRC	<ul style="list-style-type: none"> ● TCM does not receive the proper voltage signal from the sensor. ● TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2. 	P1716	P1716	AT-135
VEH SPD SE/CIR-MTR	<ul style="list-style-type: none"> ● Signal (CAN communication) from vehicle speed sensor MTR not input due to cut line or the like ● Unexpected signal input during running 	P1721	—	AT-137
A/T INTERLOCK	<ul style="list-style-type: none"> ● Except during shift change, the gear position and ATF pressure switch states are monitored and comparative judgement made. 	P1730	P1730	AT-139
A/T 1ST E/BRAKING	<ul style="list-style-type: none"> ● Each ATF pressure switch and solenoid current is monitored and if a pattern is detected having engine braking 1st gear other than in the "1" position, a malfunction is detected. 	P1731	—	AT-142
I/C SOLENOID/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like ● TCM detects as irregular by comparing target value with monitor value. 	P1752	P1752	AT-144
I/C SOLENOID FNCTN	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change) ● TCM detects that relation between gear position and condition of ATF pressure switch 3 is irregular during releasing accelerator pedal. (Other than during shift change) 	P1754	P1754*2	AT-146
FR/B SOLENOID/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like ● TCM detects as irregular by comparing target value with monitor value. 	P1757	P1757	AT-148
FR/B SOLENOID FNCT	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change) ● TCM detects that relation between gear position and condition of ATF pressure switch 1 is irregular during releasing accelerator pedal. (Other than during shift change) 	P1759	P1759*2	AT-150
D/C SOLENOID/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to cut line, short, or the like ● TCM detects as irregular by comparing target value with monitor value. 	P1762	P1762	AT-152

TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD-II (DTC)	Reference page	A B
		"A/T" with CONSULT-II	MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST		
D/C SOLENOID FNCTN	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change) ● TCM detects that relation between gear position and condition of ATF pressure switch 5 is irregular during releasing accelerator pedal. (Other than during shift change) 	P1764	P1764*2	AT-154	AT
HLR/C SOL/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like ● TCM detects as irregular by comparing target value with monitor value. 	P1767	P1767	AT-156	D E
HLR/C SOL FNCTN	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change) ● TCM detects that relation between gear position and condition of ATF pressure switch 6 is irregular during releasing accelerator pedal. (Other than during shift change) 	P1769	P1769*2	AT-158	F G H
LC/B SOLENOID/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to functional malfunction, cut line, short, or the like 	P1772	P1772	AT-160	I
LC/B SOLENOID FNCT	<ul style="list-style-type: none"> ● TCM detects an improper voltage drop when it tries to operate the solenoid valve. ● Condition of ATF pressure switch 2 is different from monitor value, and relation between gear position and actual gear ratio is irregular. 	P1774	P1774*2	AT-162	J
ATF PRES SW 1/CIRC	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change) 	P1841	—	AT-164	K
ATF PRES SW 3/CIRC	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change) 	P1843	—	AT-166	L
ATF PRES SW 5/CIRC	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change) 	P1845	—	AT-168	M
ATF PRES SW 6/CIRC	<ul style="list-style-type: none"> ● TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change) 	P1846	—	AT-170	
NO DTC IS DETECTED FURTHER TESTING MAY BE REQUIRED	<ul style="list-style-type: none"> ● No NG item has been detected. 	X	X	—	


*1: Refer to [AT-40, "Malfunction Indicator Lamp \(MIL\)"](#).

*2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.


TROUBLE DIAGNOSIS

How to Erase Self-diagnostic Results

1. Perform [AT-86, "CONSULT-II SETTING PROCEDURE"](#).
2. Touch "SELF-DIAG RESULTS".

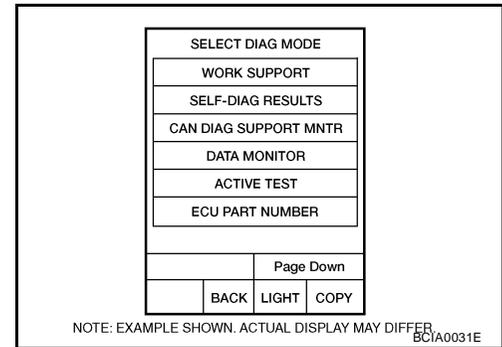

3. Touch "ERASE". (The self-diagnostic results will be erased.)

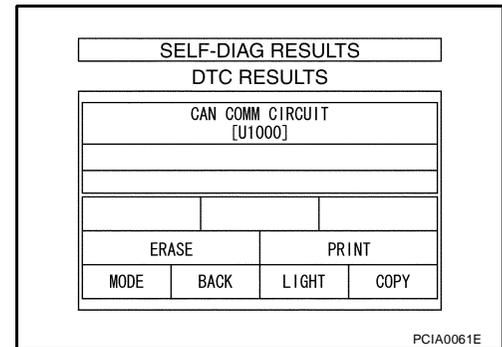


DATA MONITOR MODE

Operation Procedure

1. Perform [AT-86, "CONSULT-II SETTING PROCEDURE"](#).
2. Touch "DATA MONITOR".

NOTE:

When malfunction is detected, CONSULT-II performs "REAL-TIME DIAGNOSIS". Also, any malfunction detected while in this mode will be displayed at real time.

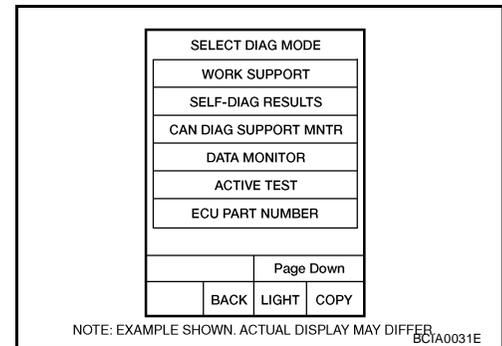

Display Items List

X: Standard, —: Not applicable, ▼: Option

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VHCL/S SE-A/T (km/h)	X	X	▼	Revolution sensor
VHCL/S SE-MTR (km/h)	X	—	▼	
ACCELE POSI (0.0/8)	X	—	▼	Accelerator pedal position signal
THROTTLE POSI (0.0/8)	X	X	▼	Degree of opening for accelerator recognized by the TCM For fail-safe operation, the specific value used for control is displayed.

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor Item Selection			Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU		
CLSD THL POS (ON-OFF display)	X	—	▼	Signal input with CAN communications	A
W/O THL POS (ON-OFF display)	X	—	▼		B
BRAKE SW (ON-OFF display)	X	—	▼	Stop lamp switch	AT
GEAR	—	X	▼	Gear position recognized by the TCM updated after gear-shifting	D
ENGINE SPEED (rpm)	X	X	▼		
TURBINE REV (rpm)	X	X	▼		E
OUTPUT REV (rpm)	X	X	▼		
GEAR RATIO	—	X	▼		
TC SLIP SPEED (rpm)	—	X	▼	Difference between engine speed and torque converter input shaft speed	F
F SUN GR REV (rpm)	—	—	▼		G
F CARR GR REV (rpm)	—	—	▼		
ATF TEMP SE 1 (V)	X	—	▼		H
ATF TEMP SE 2 (V)	X	—	▼		
ATF TEMP 1 (°C)	—	X	▼		I
ATF TEMP 2 (°C)	—	X	▼		
BATTERY VOLT (V)	X	—	▼		J
ATF PRES SW 1 (ON-OFF display)	X	X	▼	(for FR/B solenoid)	
ATF PRES SW 2 (ON-OFF display)	X	X	▼	(for LC/B solenoid)	
ATF PRES SW 3 (ON-OFF display)	X	X	▼	(for I/C solenoid)	K
ATF PRES SW 5 (ON-OFF display)	X	X	▼	(for D/C solenoid)	
ATF PRES SW 6 (ON-OFF display)	X	X	▼	(for HLR/C solenoid)	L
PNP SW 1 (ON-OFF display)	X	—	▼		
PNP SW 2 (ON-OFF display)	X	—	▼		M
PNP SW 3 (ON-OFF display)	X	—	▼		
PNP SW 4 (ON-OFF display)	X	—	▼		
1 POSITION SW (ON-OFF display)	X	—	▼	1st position switch	
SLCT LVR POSI	—	X	▼	Selector lever position is recognized by the TCM. For fail-safe operation, the specific value used for control is displayed.	
OD CONT SW (ON-OFF display)	X	—	▼		

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
POWERSHIFT SW (ON-OFF display)	X	—	▼	Not mounted but displayed.
HOLD SW (ON-OFF display)	X	—	▼	
MANU MODE SW (ON-OFF display)	X	—	▼	
NON M-MODE SW (ON-OFF display)	X	—	▼	
UP SW LEVER (ON-OFF display)	X	—	▼	
DOWN SW LEVER (ON-OFF display)	X	—	▼	
SFT UP ST SW (ON-OFF display)	—	—	▼	
SFT DWN ST SW (ON-OFF display)	—	—	▼	
ASCD-OD CUT (ON-OFF display)	—	—	▼	
ASCD-CRUISE (ON-OFF display)	—	—	▼	
ABS SIGNAL (ON-OFF display)	—	—	▼	Not mounted but displayed.
ACC OD CUT (ON-OFF display)	—	—	▼	
ACC SIGNAL (ON-OFF display)	—	—	▼	
TCS GR/P KEEP (ON-OFF display)	—	—	▼	
TCS SIGNAL 2 (ON-OFF display)	—	—	▼	
TCS SIGNAL 1 (ON-OFF display)	—	—	▼	
TCC SOLENOID (A)	—	X	▼	
LINE PRES SOL (A)	—	X	▼	
I/C SOLENOID (A)	—	X	▼	
FR/B SOLENOID (A)	—	X	▼	
D/C SOLENOID (A)	—	X	▼	
HLR/C SOL (A)	—	X	▼	
ON OFF SOL (ON-OFF display)	—	—	▼	LC/B solenoid
TCC SOL MON (A)	—	—	▼	
L/P SOL MON (A)	—	—	▼	
I/C SOL MON (A)	—	—	▼	
FR/B SOL MON (A)	—	—	▼	
D/C SOL MON (A)	—	—	▼	
HLR/C SOL MON (A)	—	—	▼	
ONOFF SOL MON (ON-OFF display)	—	—	▼	
P POSI IND (ON-OFF display)	—	—	▼	
R POSI IND (ON-OFF display)	—	—	▼	
N POSI IND (ON-OFF display)	—	—	▼	
D POSI IND (ON-OFF display)	—	—	▼	
4TH POSI IND (ON-OFF display)	—	—	▼	

TROUBLE DIAGNOSIS

Monitored item (Unit)	Monitor Item Selection			Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU		
3RD POSI IND (ON-OFF display)	—	—	▼		A
2ND POSI IND (ON-OFF display)	—	—	▼		B
1ST POSI IND (ON-OFF display)	—	—	▼		AT
MANU MODE IND (ON-OFF display)	—	—	▼	Not mounted but displayed.	D
POWER M LAMP (ON-OFF display)	—	—	▼		
F-SAFE IND/L (ON-OFF display)	—	—	▼		E
ATF WARN LAMP (ON-OFF display)	—	—	▼		F
BACK-UP LAMP (ON-OFF display)	—	—	▼		G
STARTER RELAY (ON-OFF display)	—	—	▼		H
PNP SW3 MON (ON-OFF display)	—	—	▼		I
C/V CLB ID1	—	—	▼		J
C/V CLB ID2	—	—	▼		K
C/V CLB ID3	—	—	▼		L
UNIT CLB ID1	—	—	▼		M
UNIT CLB ID2	—	—	▼		
UNIT CLB ID3	—	—	▼		
TRGT GR RATIO	—	—	▼		
TRGT PRES TCC (kPa)	—	—	▼		
TRGT PRES L/P (kPa)	—	—	▼		
TRGT PRES I/C (kPa)	—	—	▼		
TRGT PRE FR/B (kPa)	—	—	▼		
TRGT PRES D/C (kPa)	—	—	▼		
TRG PRE HLR/C (kPa)	—	—	▼		
SHIFT PATTERN	—	—	▼		
DRV CST JUDGE	—	—	▼		
START RLY MON	—	—	▼		
NEXT GR POSI	—	—	▼		
SHIFT MODE	—	—	▼		
MANU GR POSI	—	—	▼		
VEHICLE SPEED (km/h)	—	X	▼	Vehicle speed recognized by the TCM.	
Voltage (V)	—	—	▼	Displays the value measured by the voltage probe.	

TROUBLE DIAGNOSIS


Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Frequency (Hz)	—	—	▼	The value measured by the pulse probe is displayed.
DUTY-HI (high) (%)	—	—	▼	
DUTY-LOW (low) (%)	—	—	▼	
PLS WIDTH-HI (ms)	—	—	▼	
PLS WIDTH-LOW (ms)	—	—	▼	

TROUBLE DIAGNOSIS

CAN DIAGNOSTIC SUPPORT MONITOR MODE

Operation Procedure


1. Perform [AT-86, "CONSULT-II SETTING PROCEDURE"](#).
2. Touch "CAN DIAG SUPPORT MNTR". Refer to [LAN-17, "CAN Diagnostic Support Monitor"](#).

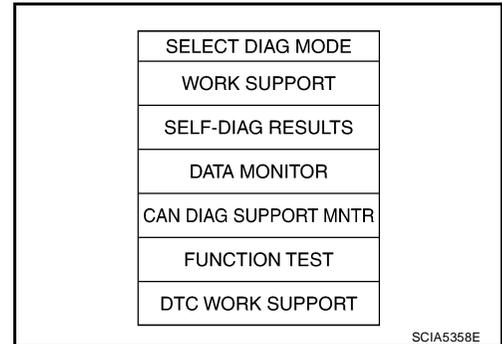


DTC WORK SUPPORT MODE

Operation Procedure


1. Perform [AT-86, "CONSULT-II SETTING PROCEDURE"](#).
2. Touch "DTC WORK SUPPORT".

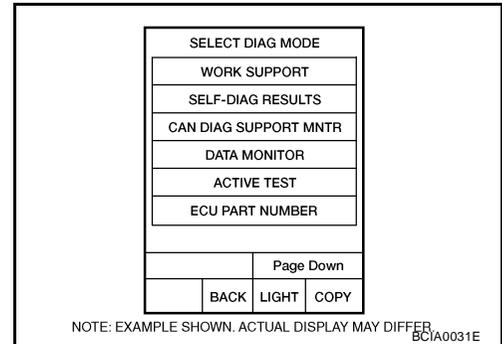

3. Touch select item menu.

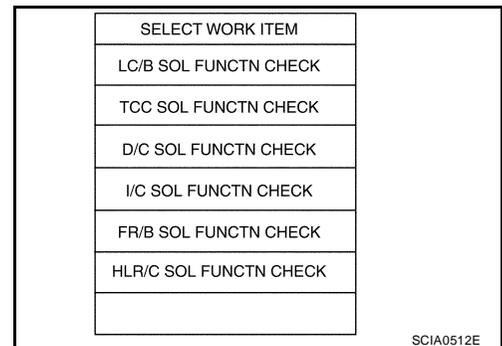

4. Touch "START".

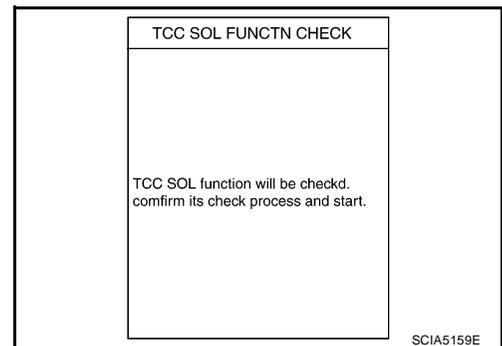

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

5. Perform driving test according to "DTC CONFIRMATION PROCEDURE" in "TROUBLE DIAGNOSIS FOR DTC".

TCC SOL FUNCTN CHECK	
OUT OF CONDITION	
MONITOR	
ACCELE POSI	XXX
GEAR	XXX
TCC SOLENOID	XXXA
VEHICLE SPEED	XXXkm/h

SCIA5160E

- When testing conditions are satisfied, CONSULT-II screen changes from "OUT OF CONDITION" to "TESTING".

TCC SOL FUNCTN CHECK	
TESTING	
MONITOR	
ACCELE POSI	XXX
GEAR	XXX
TCC SOLENOID	XXXA
VEHICLE SPEED	XXXkm/h

SCIA5161E

6. Stop vehicle.

TCC SOL FUNCTN CHECK	
STOP VEHICLE	

SCIA5164E


- If "NG" appears on the screen, malfunction may exist. Go to "Diagnostic Procedure".

TCC SOL FUNCTN CHECK	
NG	


SCIA5162E

TROUBLE DIAGNOSIS

7. Perform test drive to check gear shift feeling in accordance with instructions displayed.
8. Touch "YES" or "NO".
9. CONSULT-II procedure is ended.

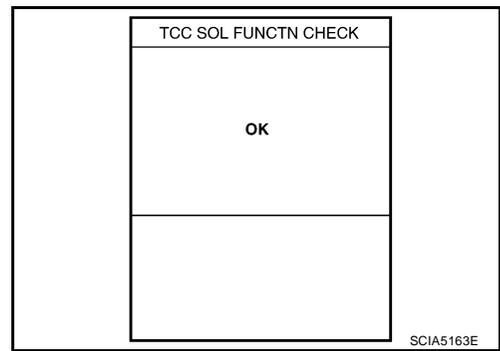

- If "NG" appears on the screen, a malfunction may exist. Go to "Diagnostic Procedure".

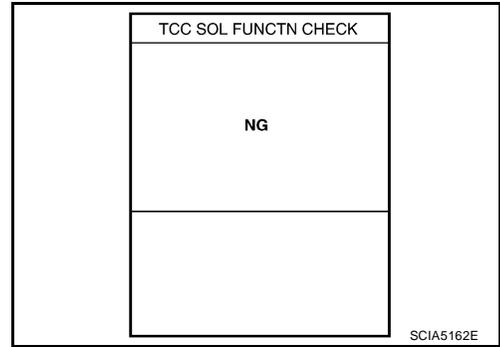

Display Items List

DTC work support item	Description	Check item
I/C SOL FUNCTN CHECK*	—	—
FR/B SOL FUNCTN CHECK*	—	—
D/C SOL FUNCTN CHECK*	—	—
HLR/C SOL FUNCTN CHECK*	—	—
LC/B SOL FUNCTN CHECK*	—	—
TCC SOL FUNCTN CHECK	Following items for "TCC solenoid function (lock-up) " can be confirmed. ● Self-diagnosis status (whether the diagnosis is being conducted or not) ● Self-diagnosis result (OK or NG)	● TCC solenoid valve ● Hydraulic control circuit

*: Do not use, but displayed.

TROUBLE DIAGNOSIS

UCS003ZE

Diagnostic Procedure Without CONSULT-II

OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)

Refer to [EC-139, "Generic Scan Tool \(GST\) Function"](#) .

OBD-II SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)

Refer to [AT-40, "Malfunction Indicator Lamp \(MIL\)"](#) .

TCM SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)

Description

In the unlikely event of a malfunction in the electrical system, when the ignition switch is switched "ON", the O/D OFF indicator lamp lights up for 2 seconds, then flashes for 8 seconds. If there is no malfunction, when the ignition switch is turned "ON", the indicator lamp lights up for 2 seconds. As a method for locating the suspect circuit, when the self-diagnostics start signal is input, the memory for the malfunction location is output and the O/D OFF indicator lamp flashes to display the corresponding DTC.

Diagnostic Procedure

1. CHECK O/D OFF INDICATOR LAMP

1. Start the engine with selector lever in "P" position. Warm engine to normal operating temperature.
2. Turn ignition switch ON and OFF at least twice, then leave it in the OFF position.
3. Wait 10 seconds.
4. Turn ignition switch ON. (Do not start engine.)

Does O/D OFF indicator lamp come on for about 2 seconds?

YES >> GO TO 2.

NO >> GO TO [AT-183, "O/D OFF Indicator Lamp Does Not Come On"](#) .

2. JUDGEMENT PROCEDURE STEP 1

1. Turn ignition switch OFF.
2. Push shift lock release button.
3. Move selector lever from "P" to "D" position.
4. Release accelerator pedal. (Set the closed throttle position signal "ON".)
5. Depress brake pedal. (Stop lamp switch signal "ON".)
6. Turn ignition switch ON.
7. Wait 3 seconds.
8. Move the selector lever from "D" to "3" position.
9. Release brake pedal. (Stop lamp switch signal "OFF".)
10. Move the selector lever from "3" to "2" position.
11. Depress brake pedal. (Stop lamp switch signal "ON".)
12. Depress accelerator pedal fully and release it.

>> GO TO 3.

3. CHECK SELF-DIAGNOSIS CODE

Check O/D OFF indicator lamp.

Refer to [AT-99, "Judgement Self-diagnosis Code"](#) .


If the system does not go into self-diagnostics. Refer to [AT-108, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) , [AT-176, "CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT"](#) , [AT-177, "BRAKE SIGNAL CIRCUIT"](#) .

>> DIAGNOSIS END

TROUBLE DIAGNOSIS

Judgement Self-diagnosis Code

If there is a malfunction, the lamp lights up for the time corresponding to the suspect circuit.

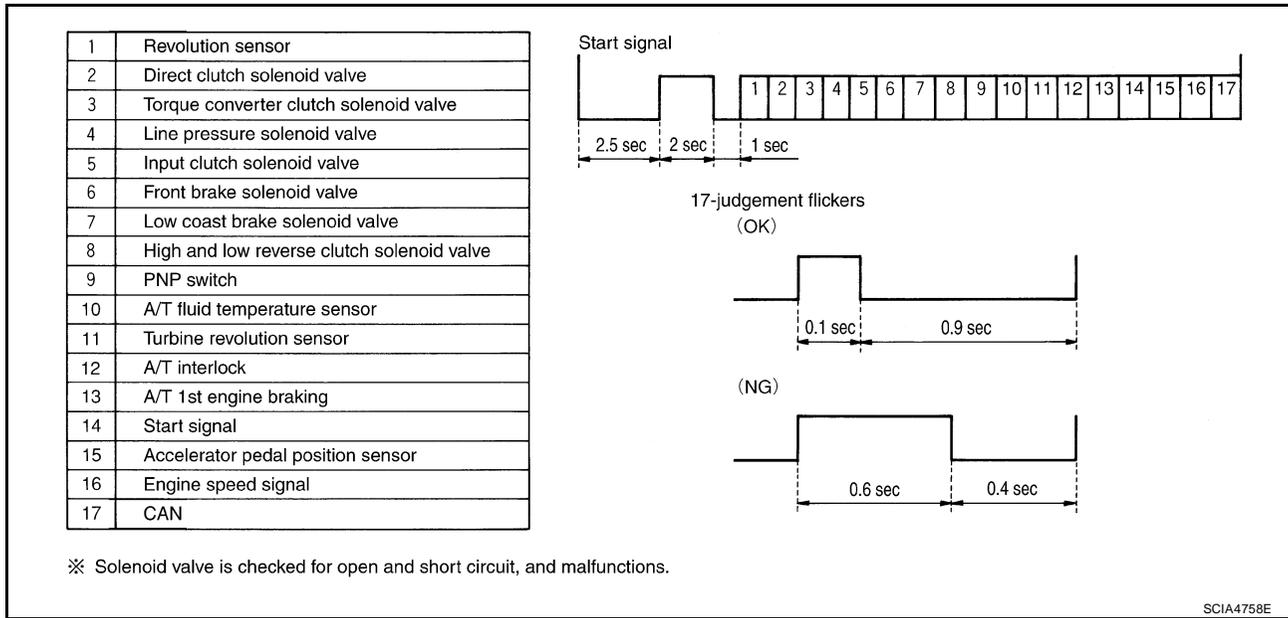

Erase Self-diagnosis

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned ON and OFF.
- However, this information is erased by turning ignition switch OFF after executing self-diagnostics or by erasing the memory using the CONSULT-II.

DTC U1000 CAN COMMUNICATION LINE

DTC U1000 CAN COMMUNICATION LINE

PFP:23710

Description

UCS00329

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

UCS0032A

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "U1000 CAN COMM CIRCUIT" with CONSULT-II or 17th judgement flicker without CONSULT-II is detected when TCM cannot communicate to other control units.

Possible Cause

UCS0032B

Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

UCS0032C


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, go to [AT-102, "Diagnostic Procedure"](#).

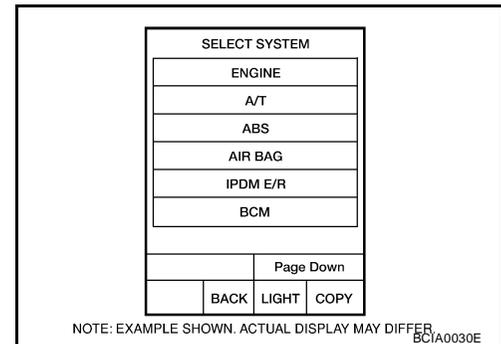

WITH GST

Follow the procedure "WITH CONSULT-II".

 
 

DTC U1000 CAN COMMUNICATION LINE

Wiring Diagram — AT — CAN

UCS003PQ

AT-CAN-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

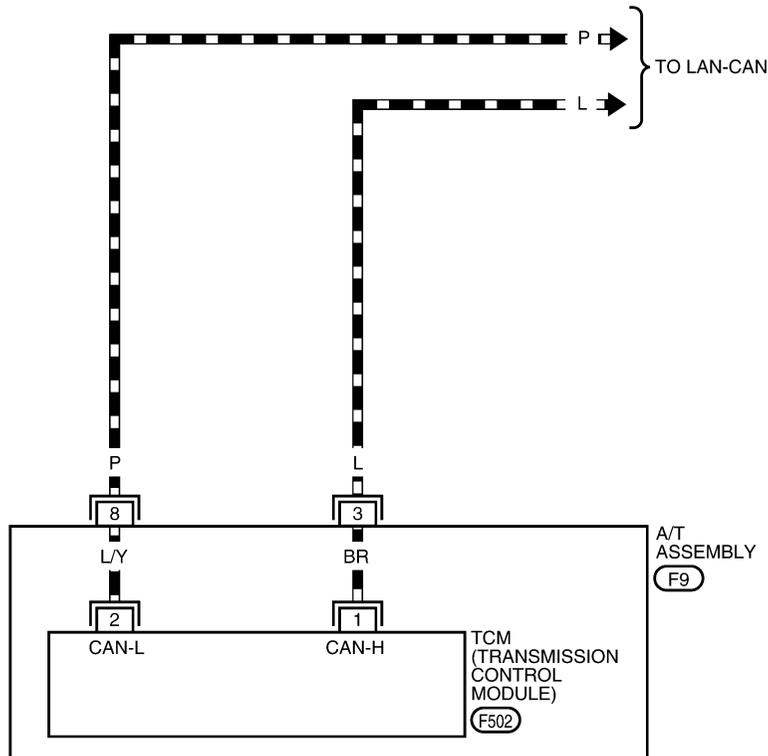

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0320E

DTC U1000 CAN COMMUNICATION LINE

TCM terminal and Data are reference value.

Terminal No.	Wire color	Item	Condition	Data (Approx.)
3	L	CAN H	-	-
8	P	CAN L	-	-

Diagnostic Procedure

UCS0032D

1. CHECK CAN COMMUNICATION CIRCUIT

④ With CONSULT-II

1. Turn ignition switch "ON" and start engine.
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

YES >> Print out CONSULT-II screen, GO TO LAN section.
Refer to [LAN-4, "Precautions When Using CONSULT-II"](#)

NO >> **INSPECTION END**

SELF-DIAG RESULTS			
DTC RESULTS			
CAN COMM CIRCUIT [U1000]			
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

PCIA0061E

DTC P0615 START SIGNAL CIRCUIT

DTC P0615 START SIGNAL CIRCUIT

PF:25230

Description

UCS0032E

- TCM prohibits cranking other than at "P" or "N" position.

CONSULT-II Reference Value

UCS0032F

Item name	Condition	Display value
STARTER RELAY	Selector lever in "N", "P" positions.	ON
	Selector lever in other position.	OFF

On Board Diagnosis Logic

UCS0032G

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0615 STARTER RELAY/CIRC" with CONSULT-II or 14th judgement flicker without CONSULT-II is detected when park/neutral (PNP) relay (starter relay) is switched "ON" other than at "P" or "N" position. (Or when switched "OFF" at "P" or "N" position).

Possible Cause

UCS0032H

- Harness or connectors
[The park/neutral position (PNP) relay (starter relay) and TCM circuit is open or shorted.]
- Park/neutral position (PNP) relay (starter relay)

DTC Confirmation Procedure

UCS0032I


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Start engine.
- Drive vehicle for at least 2 consecutive seconds.
- If DTC is detected, go to [AT-105, "Diagnostic Procedure"](#).

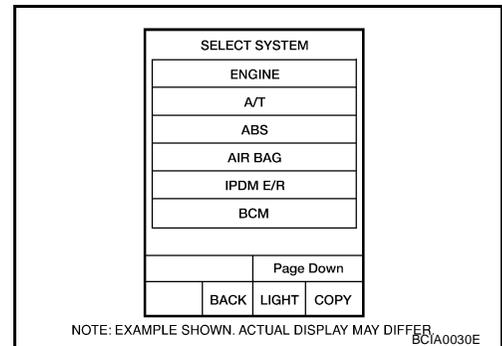



DTC P0615 START SIGNAL CIRCUIT

Wiring Diagram — AT — STSIG

UCS003PR

AT-STSIG-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

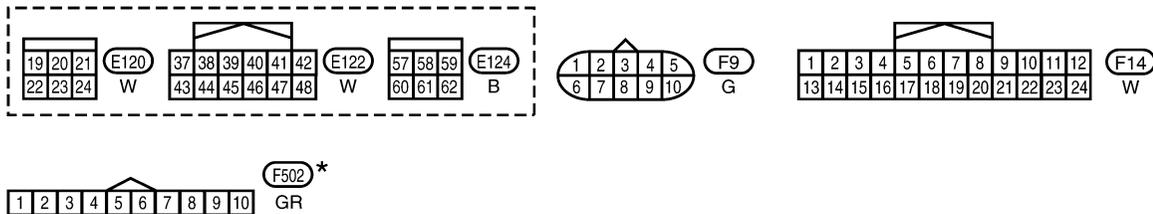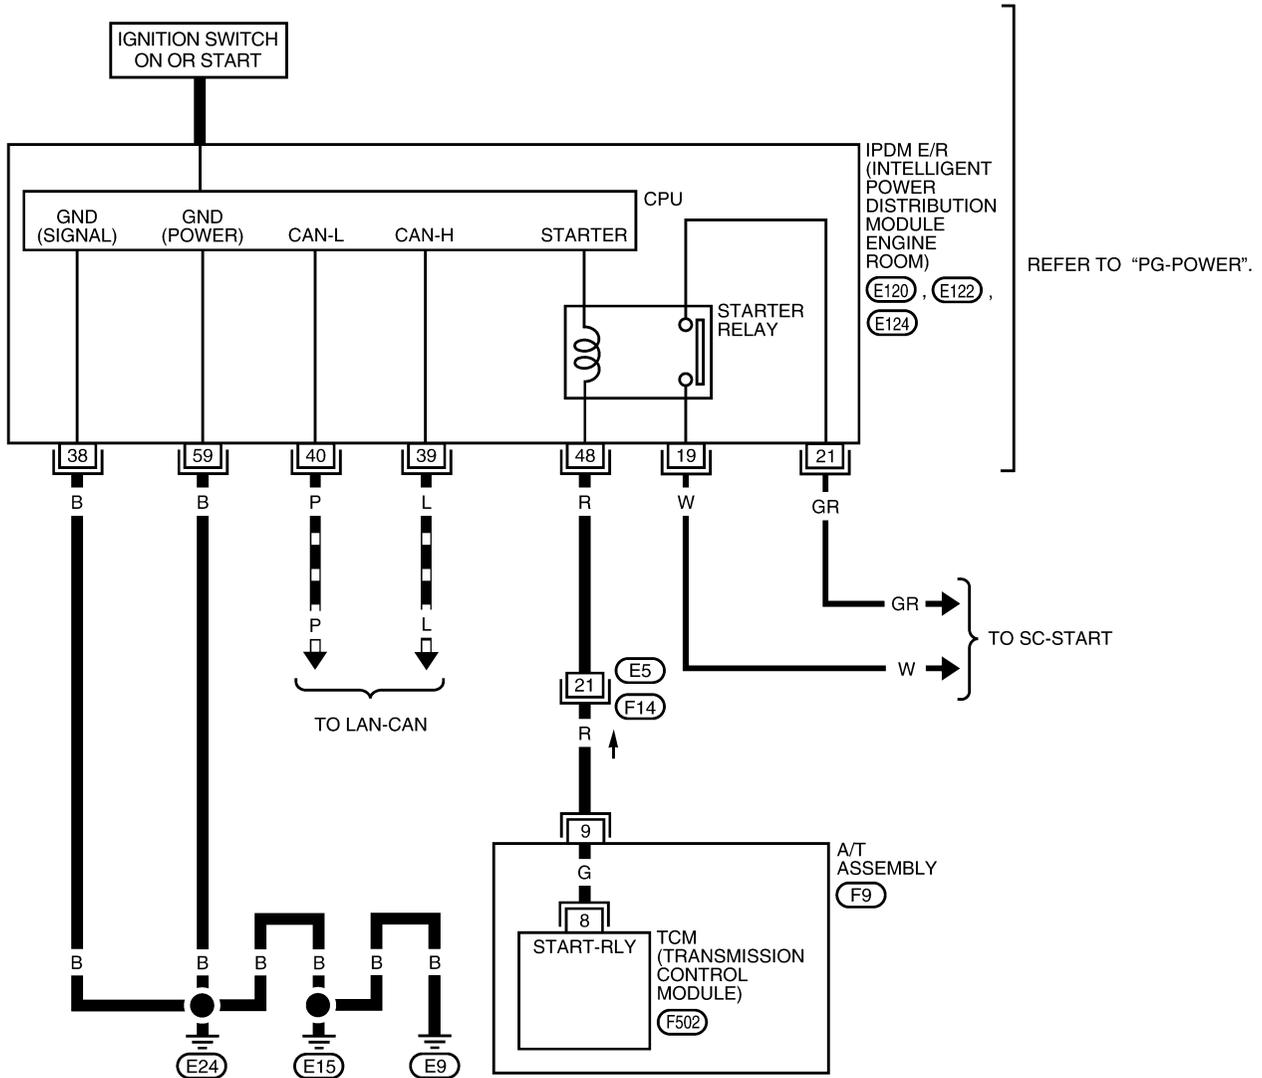

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0385E

DTC P0615 START SIGNAL CIRCUIT

TCM terminals and data are reference value. Measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
9	R	Starter relay	 Selector lever in "N", "P" positions.	Battery voltage
			Selector lever in other positions.	0V


Diagnostic Procedure

UCS003PS

1. CHECK STARTER RELAY

Ⓜ With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II and check monitor "STARTER RELAY" ON/OFF.

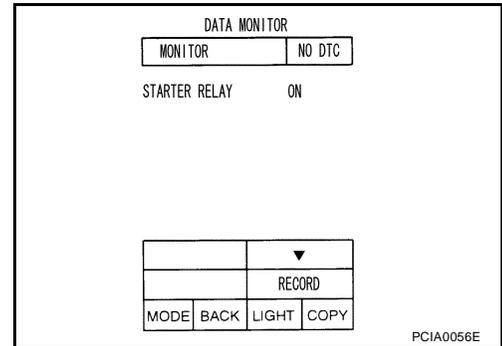


⊗ Without CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Check voltage between the IPDM E/R connector and ground.

Item	Connector	Terminal	Shift position	Voltage (Approx.)
Starter relay	E122	48	Ground	Battery voltage
			"N" and "P"	0V

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

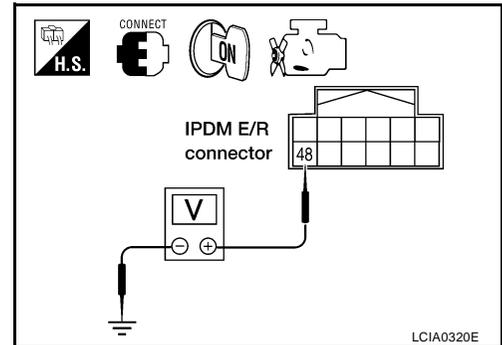

2. CHECK HARNESS BETWEEN A/T ASSEMBLY HARNESS CONNECTOR AND IPDM E/R CONNECTOR


- Turn ignition switch OFF.
- Disconnect A/T assembly harness connector and IPDM E/R connector.
- Check continuity between A/T assembly harness connector and IPDM E/R connector.

Item	Connector	Terminal	Continuity
A/T assembly harness connector	F9	9	Yes
IPDM E/R connector	E122	48	

- If OK, check harness for short to ground and short to power.
- Reinstall any part removed.

OK or NG

- OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

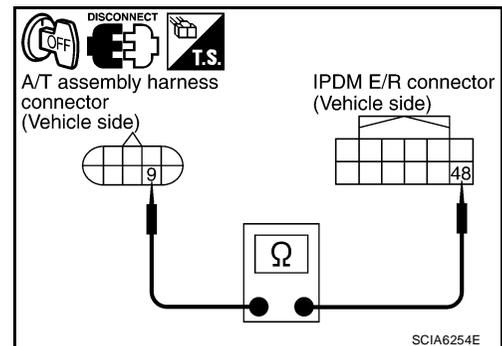

DTC P0615 START SIGNAL CIRCUIT

3. CHECK TERMINAL CORD ASSEMBLY

1. Remove control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disconnect A/T assembly harness connector and TCM connector.
3. Check continuity between A/T assembly harness connector terminal and TCM connector terminal.


Item	Connector	Terminal	Continuity
A/T assembly harness connector	F9	9	Yes
TCM connector	F502	8	

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Replace open circuit or short to ground and short to power in harness or connectors.

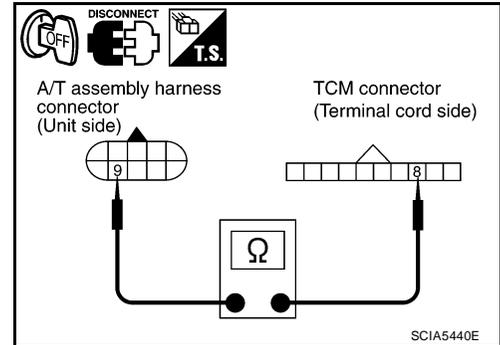

4. DETECT MALFUNCTIONING ITEM

Check the following.

- Starter relay, Refer to [SC-10, "STARTING SYSTEM"](#) .
- IPDM E/R, Refer to [PG-17, "IPDM E/R \(INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM\)"](#) .

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [AT-103, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

DTC P0700 TCM

DTC P0700 TCM

PDF:31036

Description

UCS0032K

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

On Board Diagnosis Logic

UCS0032L

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0700 TCM" with CONSULT-II is detected when the TCM is malfunctioning.

Possible Cause

UCS0032M

TCM.

DTC Confirmation Procedure

UCS0032N


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-107, "Diagnostic Procedure"](#).

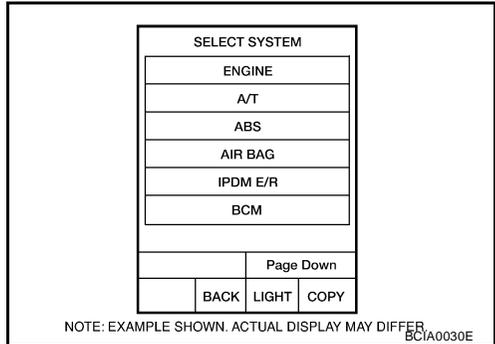

WITH GST

Follow the procedure "WITH CONSULT-II".

Diagnostic Procedure

UCS0032O

1. CHECK DTC


With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform [AT-107, "DTC Confirmation Procedure"](#).

Is the "TCM" displayed again?

YES >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

NO >> **INSPECTION END**

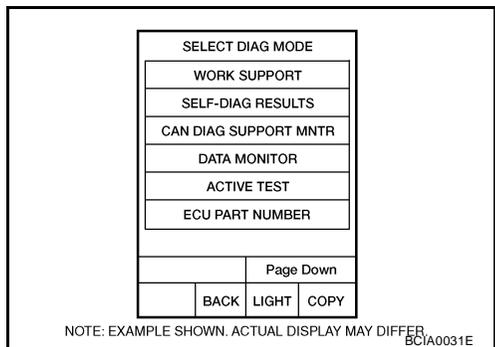

DTC P0705 PARK/NEUTRAL POSITION SWITCH

DTC P0705 PARK/NEUTRAL POSITION SWITCH

PF3:32006

Description

UCS0032P

- The park/neutral position (PNP) switch includes a transmission position switch.
- The transmission range switch detects the selector lever position and sends a signal to the TCM.

CONSULT-II Reference Value

UCS0032Q

Item name	Condition	Display value
SLCTLVR POSI	Selector lever in "N","P" positions.	N/P
	Selector lever in "R" position.	R
	Selector lever in "D" position.	D
	Selector lever in "3" position.	3
	Selector lever in "2" position.	2
	Selector lever in "1" position.	1

On Board Diagnosis Logic

UCS0032R

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0705 PNP SW/CIRC" with CONSULT-II or 9th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the correct voltage signal from the PNP switch 1, 2, 3, 4 based on the gear position.
 - When no other position but "P" position is detected from "N" positions.

Possible Cause

UCS0032S

- Harness or connectors
[The park/neutral position (PNP) switch 1, 2, 3, 4 and TCM circuit is open or shorted.]
- Park/neutral position (PNP) switch 1, 2, 3, 4

DTC Confirmation Procedure

UCS0032T

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
THRTL POS SEN: More than 1.2V
5. If DTC is detected, go to [AT-110, "Diagnostic Procedure"](#).

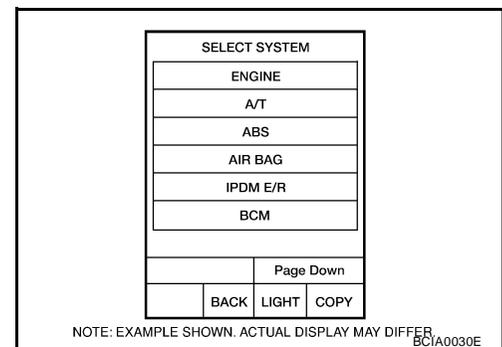

WITH GST

Follow the procedure "WITH CONSULT-II".



DTC P0705 PARK/NEUTRAL POSITION SWITCH

Wiring Diagram — AT — PNP/SW

UCS003PT

AT-PNP/SW-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

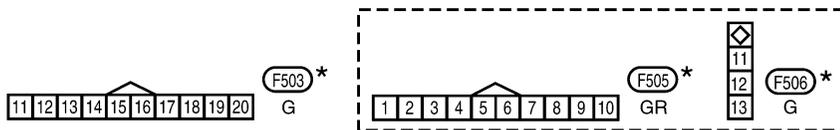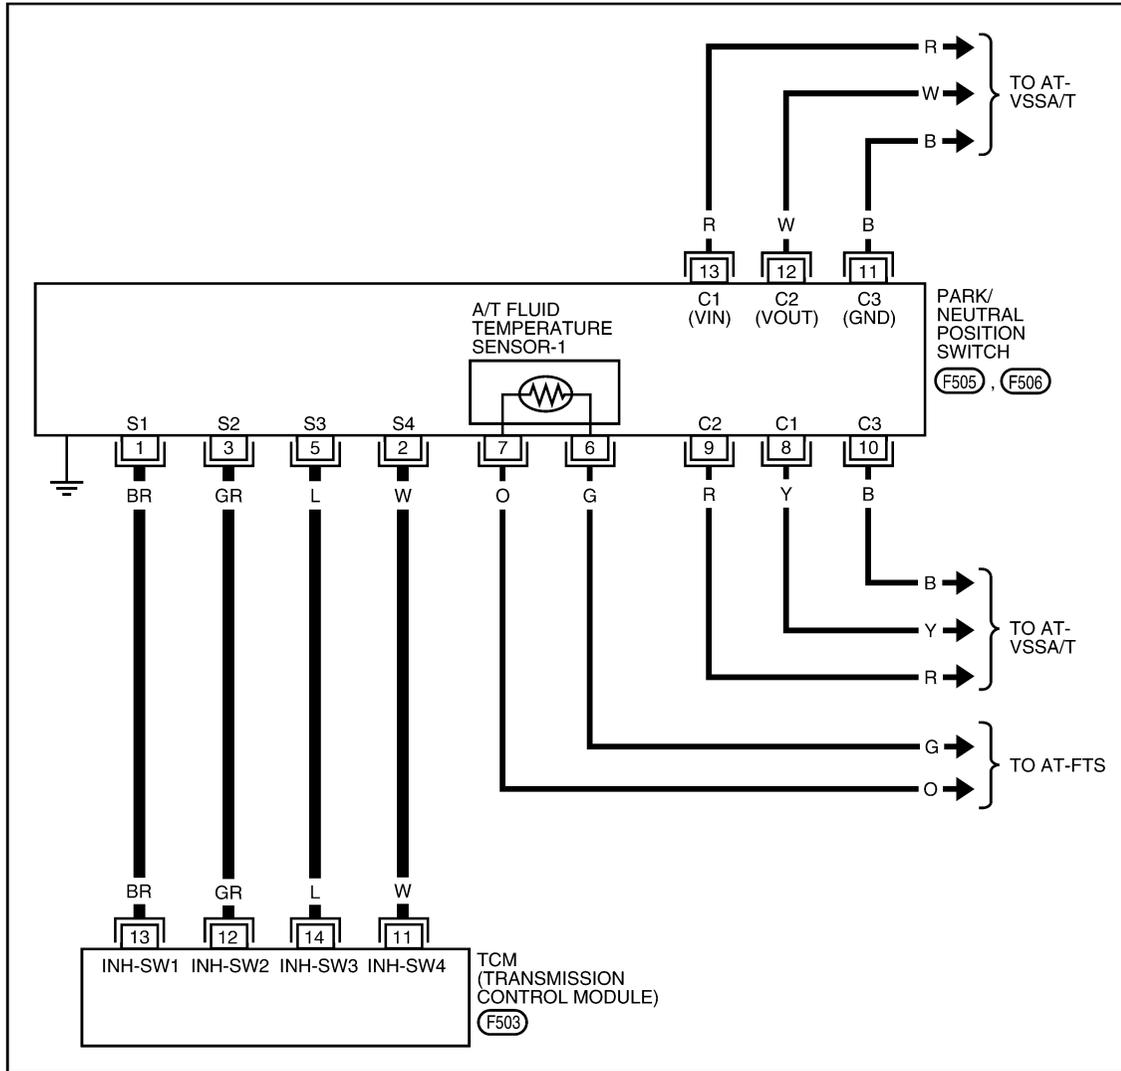

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0334E

DTC P0705 PARK/NEUTRAL POSITION SWITCH

UCS003PU

Diagnostic Procedure

1. CHECK PNP SW CIRCUIT

With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Check if correct selector lever position (N/P, R, D, 3, 2 or 1) is displayed as selector lever is moved into each position.

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 2	OFF		
ATF PRES SW 3	OFF		
ATF PRES SW 5	OFF		
ATF PRES SW 6	OFF		
SLCT LVR POSI	N·P		
△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0034E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG


- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

DTC P0705 PARK/NEUTRAL POSITION SWITCH

4. CHECK SUB-HARNESS

1. Remove control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disconnect park/neutral position switch connector and TCM connector.
3. Check continuity between park/neutral position switch connector terminals and TCM connector terminals.

Item	Connector	Terminal	Continuity
Park/neutral position switch connector	F505	1	Yes
TCM connector	F503	13	
Park/neutral position switch connector	F505	2	Yes
TCM connector	F503	11	
Park/neutral position switch connector	F505	3	Yes
TCM connector	F503	12	
Park/neutral position switch connector	F505	5	Yes
TCM connector	F503	14	

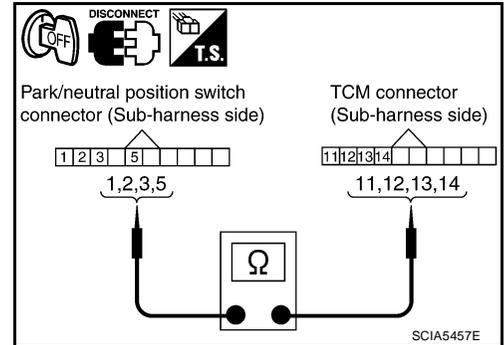

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
- NG >> Replace open circuit or short to ground and short to power in harness or connectors.

5. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-108, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 2.

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

PF#:32702

Description

UCS0032V

The revolution sensor detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.

CONSULT-II Reference Value

UCS0032W

Item name	Condition	Display value (km/h)
VHCL/S SE·A/T	During driving	Approximately matches the speedometer reading.

On Board Diagnosis Logic

UCS0032X

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0720 VEH SPD SEN/CIR AT" with CONSULT-II or 1st judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the proper voltage signal from the sensor.
 - After ignition switch is turned "ON", irregular signal input from vehicle speed sensor MTR before the vehicle starts moving.

Possible Cause

UCS0032Y

- Harness or connectors
(The sensor circuit is open or shorted.)
- Revolution sensor
- Vehicle speed sensor MTR

DTC Confirmation Procedure

UCS0032Z

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle and check for an increase of "VHCL/S SE·A/T" value in response to "VHCL/S SE·MTR" value.
If the check result is NG, go to [AT-115, "Diagnostic Procedure"](#).
If the check result is OK, go to following step.
4. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
5. Start engine and maintain the following conditions for at least 5 consecutive seconds.
VHCL SPEED SE: 30 km/h (19 MPH) or more
THRTL POS SEN: More than 1.0/8
Selector lever: "D" position
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
If the check result is NG, go to [AT-115, "Diagnostic Procedure"](#).
If the check result is OK, go to following step.
6. Maintain the following conditions for at least 5 consecutive seconds.
ENGINE SPEED: 3,500 rpm or more
THRTL POS SEN: More than 1.0/8
Selector lever: "D" position
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
If the check result is NG, go to [AT-115, "Diagnostic Procedure"](#).

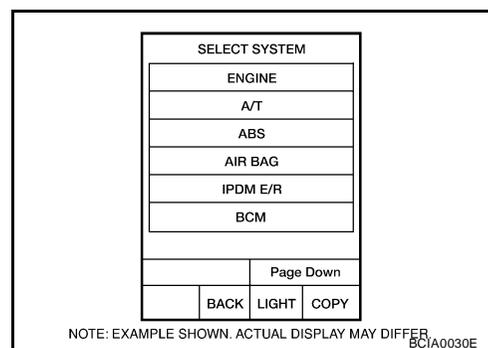

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

 **WITH GST**

Follow the procedure "WITH CONSULT-II".

A

B

AT

D

E

F

G

H

I

J

K

L

M



DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

Wiring Diagram — AT — VSSA/T

UCS003PV

AT-VSSA/T-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

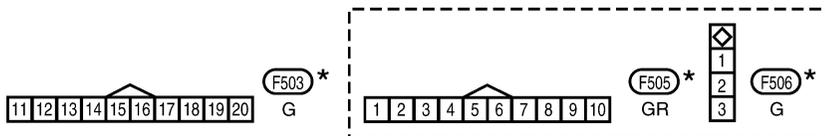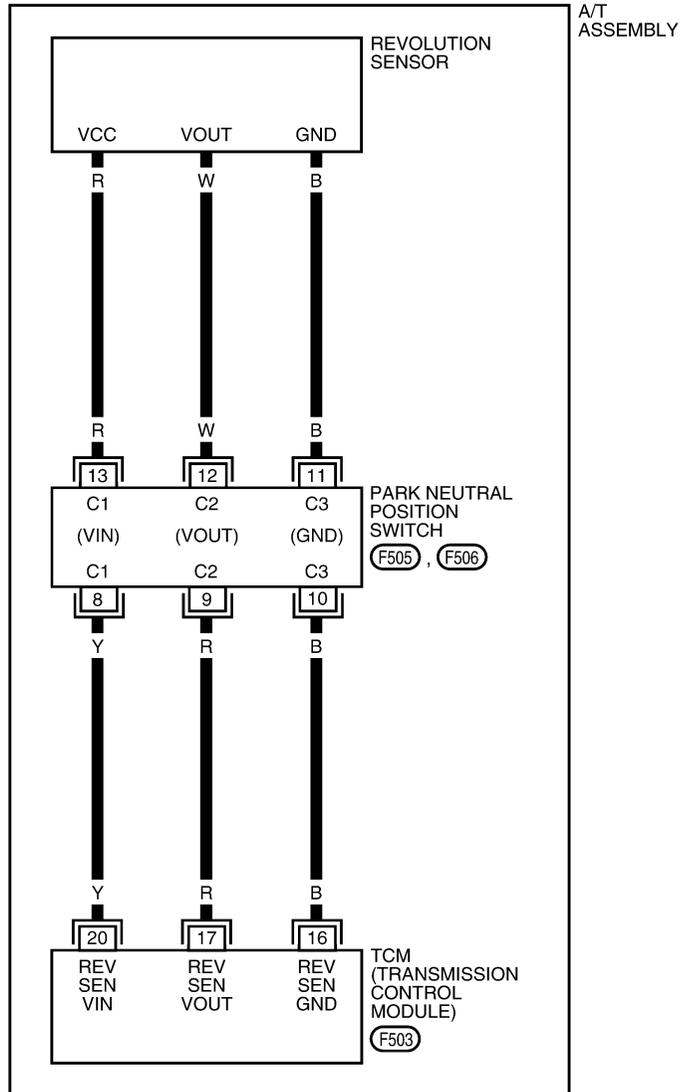

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0322E

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

UCS003PW

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

- Turn ignition switch ON.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Start the engine.
- Read out the value of "VHCL/S SE-A/T" while driving. Check the value changes according to driving speed.

DATA MONITOR	
MONITOR	NO DTC
VHCL/S SE-A/T	0km/h
VHCL/S SE-MTR	0km/h
ACCELE POSI	0.0/8
THROTTLE POS	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
▽	
RECORD	
MODE	BACK
LIGHT	COPY

SCIA2148E

OK or NG

- OK >> GO TO 6.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.


OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

4. CHECK SUB-HARNESS

- Remove control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- Disconnect park/neutral position switch connector and TCM connector.
- Check continuity between park/neutral position switch connector terminals and TCM connector terminals.

Item	Connector	Terminal	Continuity
Park/neutral position switch connector	F505	8	Yes
TCM connector	F503	20	
Park/neutral position switch connector	F505	9	Yes
TCM connector	F503	17	
Park/neutral position switch connector	F505	10	Yes
TCM connector	F503	16	

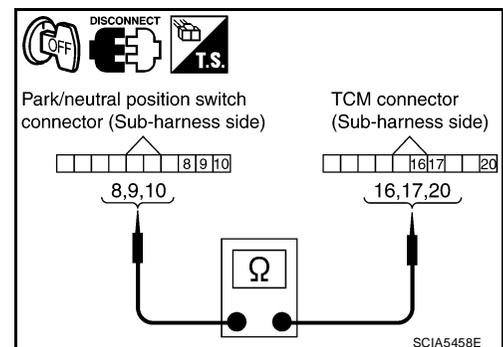

- If OK, check harness for short to ground and short to power.
- Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
NG >> Replace open circuit or short to ground and short to power in harness or connectors.

DTC P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

5. REPLACE THE REVOLUTION SENSOR AND CHECK DTC

1. Replace the revolution sensor. Refer to [AT-263, "DISASSEMBLY"](#) .
2. Perform "DTC Confirmation Procedure". Refer to [AT-112, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

6. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-112, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

DTC P0725 ENGINE SPEED SIGNAL

DTC P0725 ENGINE SPEED SIGNAL

PF:24825

Description

UCS00331

The engine speed signal is sent from the ECM to the TCM.

CONSULT-II Reference Value

UCS00332

Item name	Condition	Display value (rpm)
ENGINE SPEED	Engine running	Closely matches the tachometer reading.

On Board Diagnosis Logic

UCS00333

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0725 ENGINE SPEED SIG" with CONSULT-II or 16th judgement flicker without CONSULT-II is detected when TCM does not receive the ignition signal from ECM during engine cranking or running.

Possible Cause

UCS00334

Harness or connectors
(The ECM to the TCM circuit is open or shorted.)

DTC Confirmation Procedure

UCS00335

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds.
VHCL SPEED SE: 10 km/h (6 MPH) or more
ACCELE POSI: More than 1/8
Selector lever: "D" position
3. If DTC is detected, go to [AT-118, "Diagnostic Procedure"](#).

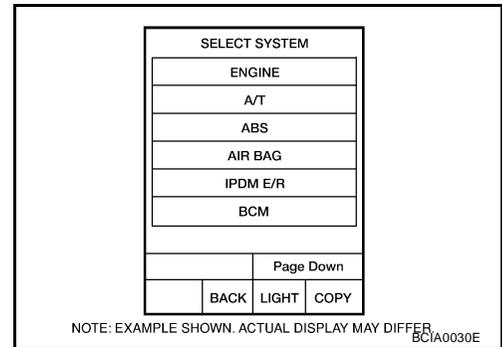

DTC P0725 ENGINE SPEED SIGNAL

UCS003PX

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).
- NO >> GO TO 2.

2. CHECK DTC WITH TCM

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. While monitoring engine speed, check for engine speed change corresponding to wide-open throttle position signal.

OK or NG

- OK >> GO TO 3.
- NG >> Check the ignition signal circuit.
 - Refer to [EC-657, "IGNITION SIGNAL"](#).

DATA MONITOR	
MONITOR	NO DTC
W/O THL POS	OFF
BRAKE SW	OFF
ENGINE SPEED	0 rpm
TURBINE REV	0 rpm
OUTPUT REV	0 rpm
	▽
	RECORD
MODE	BACK
LIGHT	COPY

PCIA0041E

3. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-117, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

4. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

Description

UCS00337

- The torque converter clutch solenoid valve is activated, with the gear in D4 , D5 by the TCM in response to signals sent from the vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Torque converter clutch piston operation will then be controlled.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

CONSULT-II Reference Value

UCS00338

Item name	Condition	Display value (Approx.)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4 A
	When performing lock-up	0.4 - 0.6 A

On Board Diagnosis Logic

UCS00339

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P0740 TCC SOLENOID/CIRC” with CONSULT-II or 3rd judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

UCS0033A

- Torque converter clutch solenoid valve
- Harness or connectors
(The solenoid circuit is open or shorted.)

DTC Confirmation Procedure

UCS0033B

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “ENGINE” with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 80 km/h (50 MPH) or more

ACCELE POS: 0.5/8 - 1.0/8


SELECTOR LEVER: “D” position

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected go to [AT-120, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure “WITH CONSULT-II”.

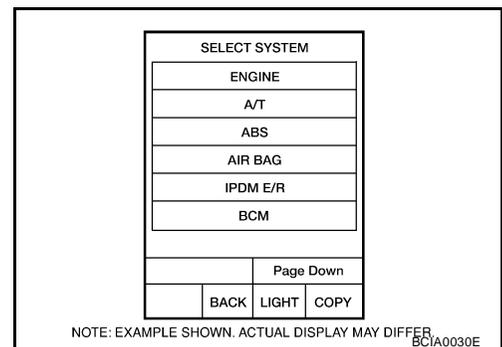

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

UCS003PY

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Read out the value of "TCC SOLENOID" while driving.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID	XXXX		
LINE PRES SOL	XXXX		
I/C SOLENOID	XXXX		
FR/B SOLENOID	XXXX		
D/C SOLENOID	XXXX		
HLR/C SOL	XXXX		
			▽
			RECORD
MODE	BACK	LIGHT	COPY

SCIA4793E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-119, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PF3:31940

Description

UCS0033D

This malfunction is detected when the A/T does not shift into 5th gear position or the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

CONSULT-II Reference Value

UCS0033E

Item name	Condition	Display value (Approx.)
TCC SOLENOID	When performing slip lock-up	0.2 - 0.4 A
	When performing lock-up	0.4 - 0.6 A

On Board Diagnosis Logic

UCS0033F

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0744 A/T TCC S/V FNCTN" with CONSULT-II is detected under the following conditions.
 - When A/T cannot perform lock-up even if electrical circuit is good.
 - When TCM detects as irregular by comparing difference value with slip rotation.

Possible Cause

UCS0033G

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Torque converter clutch solenoid valve
- Hydraulic control circuit

DTC Confirmation Procedure

UCS0033H

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine and Select "TCC S/V FNCTN CHECK" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".
2. Accelerate vehicle to more than 80 km/h (50 MPH) and maintain the following condition continuously until "TESTING" has turned to "COMPLETE". (It will take approximately 30 seconds after "TESTING" shows.)


ACCELE POSI: More than 1.0/8 (at all times during step 4)

TCC SOLENOID: 0.4 - 0.6 A

Selector lever: "D" position

[Reference speed: Constant speed of more than 80 km/h (50 MPH)]

- Make sure "GEAR" shows "5".
 - For shift schedule, refer to [AT-60, "Vehicle Speed at Which Lock-up Occurs/Releases"](#).
 - If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0744 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
3. Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".) Refer to [AT-122, "Diagnostic Procedure"](#). Refer to shift schedule [AT-60, "Vehicle Speed at Which Lock-up Occurs/Releases"](#).

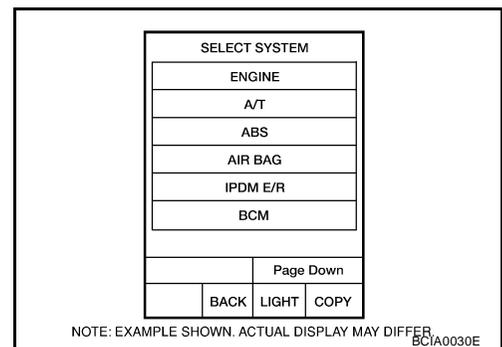

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

WITH GST

Follow the procedure "WITH CONSULT-II".

Diagnostic Procedure

UCS003PZ

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "TCC SOLENOID" while driving.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO DTC
TCC SOLENOID	XXXX
LINE PRES SOL	XXXX
I/C SOLENOID	XXXX
FR/B SOLENOID	XXXX
D/C SOLENOID	XXXX
HLR/C SOL	XXXX
	▽
RECORD	
MODE	BACK
LIGHT	COPY

SCIA4793E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-121, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P0745 LINE PRESSURE SOLENOID VALVE

DTC P0745 LINE PRESSURE SOLENOID VALVE

PF3:31940

Description

UCS0033J

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

The line pressure duty cycle value is not consistent when the closed throttle position signal is “ON”. To confirm the line pressure duty cycle at low pressure, the accelerator (throttle) should be open until the closed throttle position signal is “OFF”.

CONSULT-II Reference Value

UCS0033K

Item name	Condition	Display value (Approx.)
LINE PRES SOL	During driving	0.2 - 0.6 A

On Board Diagnosis Logic

UCS0033L

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P0745 L/PRESS SOL/CIRC” with CONSULT-II or 4th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

UCS0033M

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Line pressure solenoid valve

DTC Confirmation Procedure

UCS0033N


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch “ON” and select “DATA MONITOR” mode for “ENGINE” with CONSULT-II.
2. Engine start and wait at least 5 second.
3. If DTC is detected, go to [AT-124, "Diagnostic Procedure"](#).

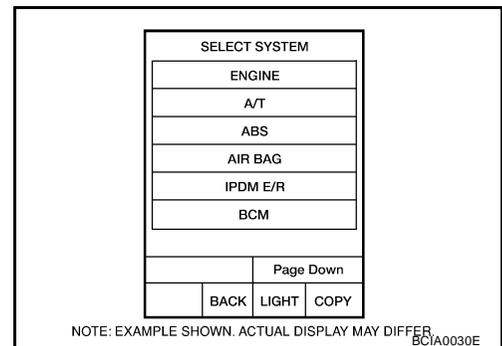

④ WITH GST

Follow the procedure “WITH CONSULT-II”.

DTC P0745 LINE PRESSURE SOLENOID VALVE

UCS00300

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "LINE PRES SOL" while driving.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID		XXXX	
LINE PRES SOL		XXXX	
I/C SOLENOID		XXXX	
FR/B SOLENOID		XXXX	
D/C SOLENOID		XXXX	
HLR/C SOL		XXXX	
		▽	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4793E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-123, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1702 TRANSMISSION CONTROL MODULE (RAM)

DTC P1702 TRANSMISSION CONTROL MODULE (RAM)

PF3:31036

Description

UCS0033P

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

On Board Diagnosis Logic

UCS0033Q

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1702 TCM-RAM" with CONSULT-II is detected when TCM memory RAM is malfunctioning.

Possible Cause

UCS0033R

TCM.

DTC Confirmation Procedure

UCS0033S


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-125, "Diagnostic Procedure"](#).

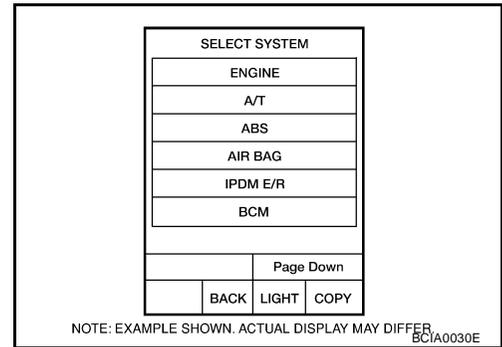

Diagnostic Procedure

UCS0033T

1. CHECK DTC


With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform "DTC Confirmation Procedure". Refer to [AT-125, "DTC Confirmation Procedure"](#).

Is the "TCM-RAM" displayed again?

YES >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

NO >> **INSPECTION END**

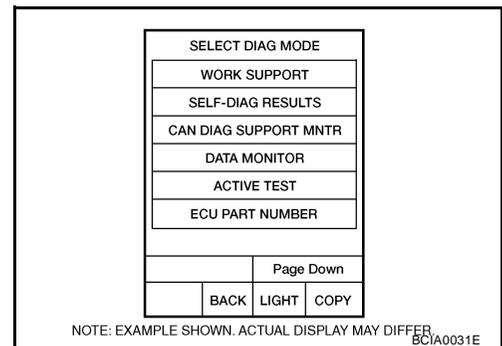

DTC P1703 TRANSMISSION CONTROL MODULE (ROM)

DTC P1703 TRANSMISSION CONTROL MODULE (ROM)

PF3:31036

Description

UCS0033U

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

On Board Diagnosis Logic

UCS0033V

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1703 TCM-ROM" with CONSULT-II is detected when TCM memory ROM is malfunctioning.

Possible Cause

UCS0033W

TCM.

DTC Confirmation Procedure

UCS0033X


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch to "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for A/T with CONSULT-II.
3. Start engine.
4. Run engine for at least 2 consecutive seconds at idle speed.
5. If DTC is detected, go to [AT-126, "Diagnostic Procedure"](#).

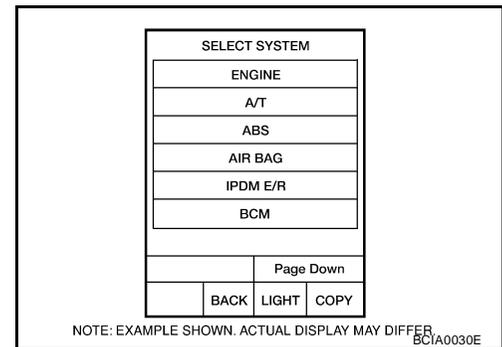

Diagnostic Procedure

UCS0033Y

1. CHECK DTC


With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch "OFF" and wait at least 10 seconds.
5. Perform "DTC Confirmation Procedure". Refer to [AT-126, "DTC Confirmation Procedure"](#).

Is the "TCM-ROM" displayed again?

YES >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

NO >> **INSPECTION END**

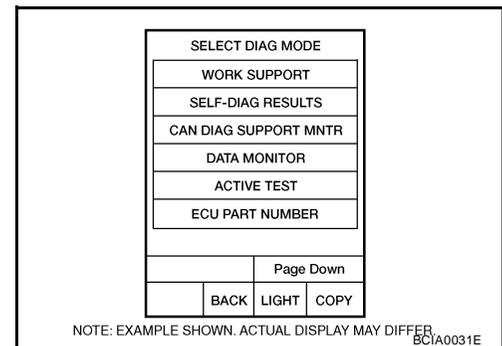

DTC P1705 THROTTLE POSITION SENSOR

DTC P1705 THROTTLE POSITION SENSOR

PF2:22620

Description

UCS0033Z

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor, etc. The actuator sends a signal to the ECM, and ECM sends signals to TCM with CAN communication.

CONSULT-II Reference Value

UCS00340

Item name	Condition	Display value (Approx.)
ACCELE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8
THROTTLE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8/8

On Board Diagnosis Logic

UCS00341

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1705 TP SEN/CIRC A/T” with CONSULT-II or 15th judgement flicker without CONSULT-II is detected when TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.

Possible Cause

UCS00342

Harness or connectors
(The sensor circuit is open or shorted.)

DTC Confirmation Procedure

UCS00343


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [AT-128, "Diagnostic Procedure"](#).

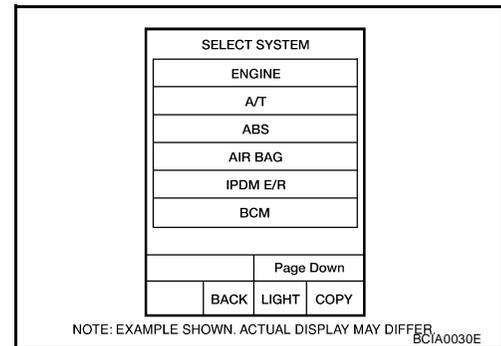

DTC P1705 THROTTLE POSITION SENSOR

UCS003Q1

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).
NO >> GO TO 2.

2. CHECK DTC WITH TCM

With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Depress accelerator pedal and read out the value of "ACCELE POSI" and "THROTTLE POSI".
- Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

DATA MONITOR	
MONITOR	NO DTC
ACCELE POSI	0.0/8
THROTTLE POSI	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
BRAKE SW	OFF

	▽		
	RECORD		
MODE	BACK	LIGHT	COPY

PCIA0070E

3. CHECK DTC WITH ECM

With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-125, "CONSULT-II Function \(ENGINE\)"](#).

OK or NG

- OK >> GO TO 4.
NG >> Check the DTC detected item. Refer to [EC-125, "CONSULT-II Function \(ENGINE\)"](#).
- If CAN communication line is detected, go to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).

SELECT SYSTEM
A/T
ENGINE

SAT014K

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-127, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 5.

5. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

DTC P1705 THROTTLE POSITION SENSOR

6. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

NG >> Repair or replace damaged parts.

A

B

AT

D

E

F

G

H

I

J

K

L

M

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

PFP:31940

Description

UCS00345

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM.

CONSULT-II Reference Value

UCS00346

Item name	Condition °C (°F)	Display value (Approx.)
ATF TEMP SE 1	0 (32) - 20 (68) - 80 (176)	3.3 - 2.7 - 0.9 V
ATF TEMP SE 2		3.3 - 2.4 - 0.7 V

On Board Diagnosis Logic

UCS00347

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1710 (A/T), P0710 (ENGINE) ATF TEMP SEN/CIRC" with CONSULT-II or 10th judgement flicker without CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

Possible Cause

UCS00348

- Harness or connectors
(The sensor circuit is open or shorted.)
- A/T fluid temperature sensors 1, 2

DTC Confirmation Procedure

UCS00349

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)
VHCL SPEED SE: 10 km/h (6 MPH) or more
THRTL POS SEN: More than 1.0/8
Selector lever: "D" position
4. If DTC is detected, go to [AT-132, "Diagnostic Procedure"](#).

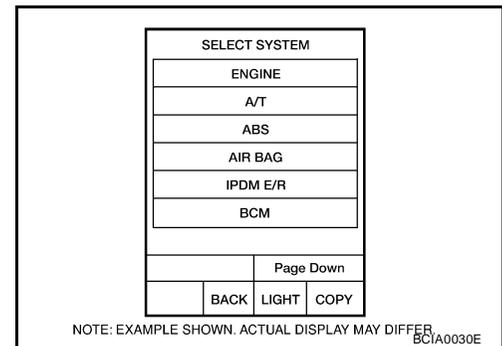

WITH GST

Follow the procedure "WITH CONSULT-II".



DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

Wiring Diagram — AT — FTS

UCS00302

AT-FTS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

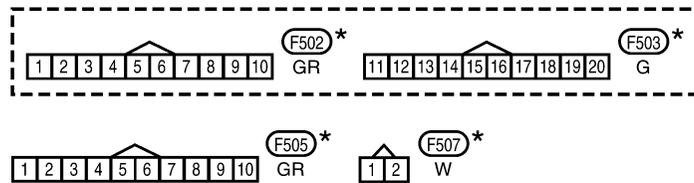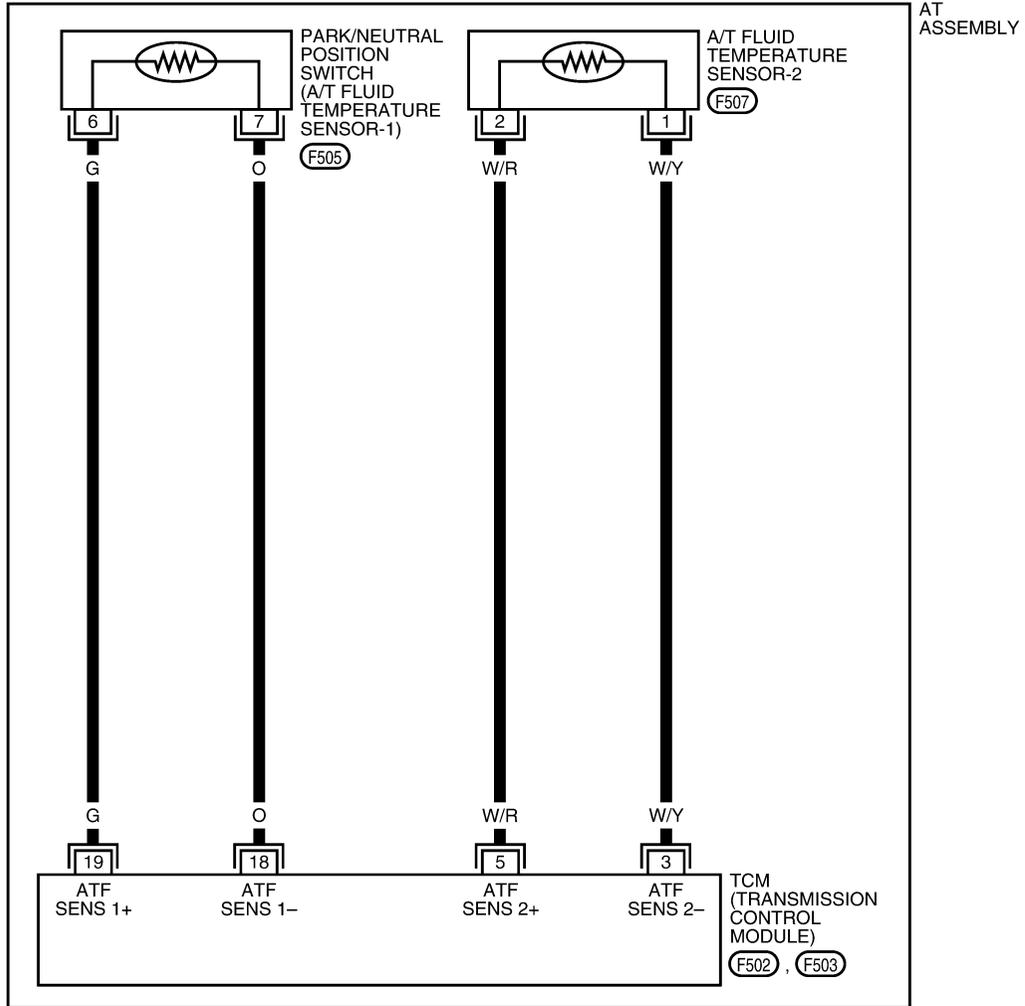

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0323E

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

UCS003Q3

Diagnostic Procedure

1. CHECK A/T FLUID TEMPERATURE SENSOR 1 SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out the value of "ATF TEMP SE 1".

OK or NG

- OK >> GO TO 2.
NG >> GO TO 3.

DATA MONITOR			
MONITOR		NO DTC	
OUTPUT REV	0 rpm		
ATF TEMP SE 1	1.84 v		
ATF TEMP SE 2	1.72 v		
BATTERY BOLT	11.5 v		
ATF PRES SW 1	OFF		
△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0039E

2. CHECK A/T FLUID TEMPERATURE SENSOR 2 SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out the value of "ATF TEMP SE 2".

OK or NG

- OK >> GO TO 8.
NG >> GO TO 5.

DATA MONITOR			
MONITOR		NO DTC	
OUTPUT REV	0 rpm		
ATF TEMP SE 1	1.84 v		
ATF TEMP SE 2	1.72 v		
BATTERY BOLT	11.5 v		
ATF PRES SW 1	OFF		
△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0039E

3. CHECK A/T FLUID TEMPERATURE SENSOR 1

Check A/T fluid temperature sensor 1. Refer to [AT-134, "A/T FLUID TEMPERATURE SENSOR 1"](#).


OK or NG

- OK >> GO TO 4.
NG >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

4. CHECK SUB-HARNESS

1. Disconnect park/neutral position switch connector and TCM connector.
2. Check continuity between park/neutral position switch connector terminals and TCM connector terminals.

Item	Connector	Terminal	Continuity
Park/neutral position switch connector	F505	6	Yes
TCM connector	F503	19	
Park/neutral position switch connector	F505	7	Yes
TCM connector	F503	18	

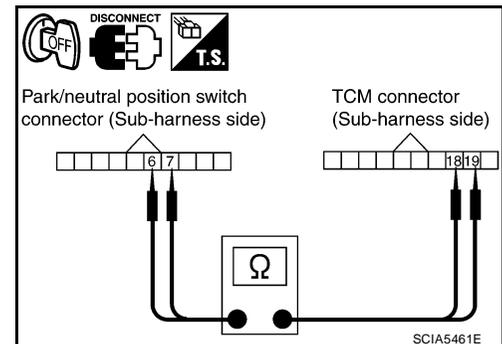

3. If OK, check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 7.
NG >> Replace open circuit or short to ground and short to power in harness or connectors.

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

5. CHECK A/T FLUID TEMPERATURE SENSOR 2

Check A/T fluid temperature sensor 2. Refer to [AT-134, "A/T FLUID TEMPERATURE SENSOR 2"](#) .

OK or NG


OK >> GO TO 6.

NG >> Replace the A/T fluid temperature sensor 2. Refer to [AT-240, "A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION"](#) .

6. CHECK TERMINAL CORD ASSEMBLY

1. Disconnect A/T fluid temperature sensor 2 connector and TCM connector.
2. Check continuity between A/T fluid temperature sensor 2 connector terminals and TCM connector terminals.

Item	Connector	Terminal	Continuity
A/T fluid temperature sensor 2 connector	F507	1	Yes
TCM connector	F502	3	
A/T fluid temperature sensor 2 connector	F507	2	Yes
TCM connector	F502	5	

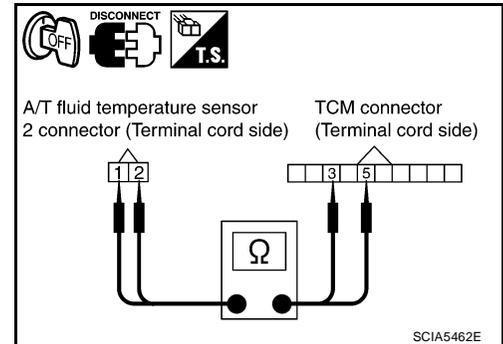

3. If OK, check harness for short to ground and short to power.

OK or NG

OK >> GO TO 7.

NG >> Replace open circuit or short to ground and short to power in harness or connectors.

7. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

1. Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#) .
2. Reinstall any part removed.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

NG >> Repair or replace damaged parts.

8. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-130, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 1.

DTC P1710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

UCS003Q4


Component Inspection

A/T FLUID TEMPERATURE SENSOR 1

1. Remove control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
2. Check resistance between terminals.

Name	Connector	Terminal	Temperature °C (°F)	Resistance (Approx.)
A/T fluid temperature sensor 1	F505	6 - 7	0 (32)	15 kΩ
			20 (68)	6.5 kΩ
			80 (176)	0.9 kΩ

3. If NG, replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

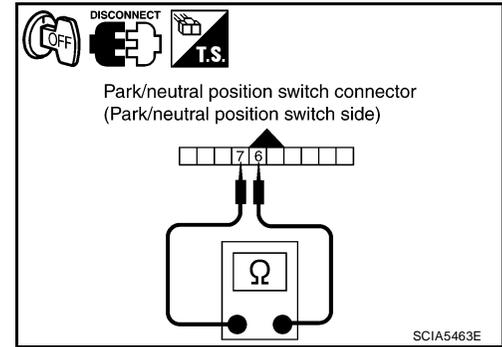


A/T FLUID TEMPERATURE SENSOR 2

1. Remove A/T fluid temperature sensor 2. Refer to [AT-240, "A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION"](#).
2. Check resistance between terminals.

Name	Connector	Terminal	Temperature °C (°F)	Resistance (Approx.)
A/T fluid temperature sensor 2	F507	1 - 2	0 (32)	10 kΩ
			20 (68)	4 kΩ
			80 (176)	0.5 kΩ

3. If NG, replace the A/T fluid temperature sensor 2. Refer to [AT-240, "A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION"](#).

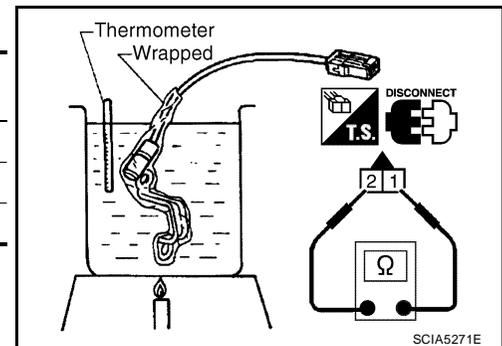

DTC P1716 TURBINE REVOLUTION SENSOR

DTC P1716 TURBINE REVOLUTION SENSOR

PDF:31935

Description

UCS0034C

The turbine revolution sensor detects input shaft rpm (revolutions per minute). It is located on the input side of the automatic transmission. Monitors revolution of sensor 1 and sensor 2 for non-standard conditions.

CONSULT-II Reference Value

UCS0034D

Item name	Condition	Display value (rpm)
TURBINE REV	During driving (lock-up ON)	Approximately matches the engine speed.

On Board Diagnosis Logic

UCS0034E

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1716 TURBINE REV S/CIRC” with CONSULT-II or 11th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the proper voltage signal from the sensor.
 - When TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2.

Possible Cause

UCS0034F

- Harness or connectors
(The sensor circuit is open or shorted.)
- Turbine revolution sensor 1, 2

DTC Confirmation Procedure

UCS0034G

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 40 km/h (25 MPH) or more

ENGINE SPEED: 1,500 rpm or more

ACCELE POS: 0.5/8 or more

Selector lever: “D” position

Gear position (Turbine revolution sensor 1): 4th or 5th position


Gear position (Turbine revolution sensor 2): All position

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If DTC is detected, go to [AT-136, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure “WITH CONSULT-II”.

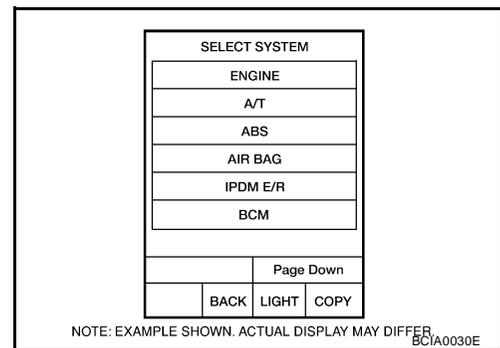

DTC P1716 TURBINE REVOLUTION SENSOR

UCS00305

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Vehicle start and read out the value of "TURBINE REV".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR	
MONITOR	NO. DTC
W/O THL POS	OFF
BRAKE SW	OFF
ENGINE SPEED	0 rpm
TURBINE REV	0 rpm
OUTPUT REV	0 rpm
▼	
RECORD	
MODE	BACK
LIGHT	COPY

PCIA0041E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-135, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1721 VEHICLE SPEED SENSOR MTR

DTC P1721 VEHICLE SPEED SENSOR MTR

PDF:24814

Description

UCS0034I

The vehicle speed sensor-MTR signal is transmitted from combination meter to TCM by CAN communication line. The signal functions as an auxiliary device to the revolution sensor when it is malfunctioning. The TCM will then use the vehicle speed sensor-MTR signal.

CONSULT-II Reference Value

UCS0034J

Item name	Condition	Display value (km/h)
VHCL/S SE-MTR	During driving	Approximately matches the speedometer reading.

On Board Diagnosis Logic

UCS0034K

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1721 VHE SPD SE-MTR" with CONSULT-II is detected when TCM does not receive the proper vehicle speed sensor MTR signal (input by CAN communication) from combination meter.

Possible Cause

UCS0034L

Harness or connectors
(The sensor circuit is open or shorted.)

DTC Confirmation Procedure

UCS0034M

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.
ACCELE POS: 1/8 or less
VHCL SPEED SE: 30 km/h (17 MPH) or more
4. If DTC is detected, go to [AT-138, "Diagnostic Procedure"](#).

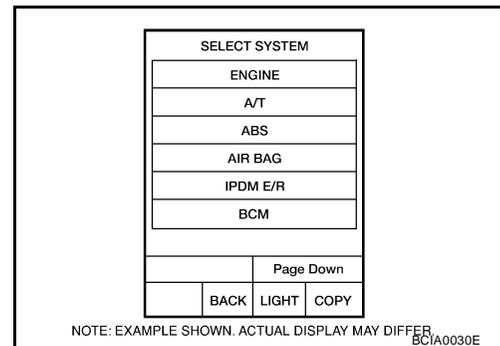

DTC P1721 VEHICLE SPEED SENSOR MTR

UCS00306

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is malfunction in the CAN communication indicated in the result?

- YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).
NO >> GO TO 2.

2. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle and read out the value of "VHCL/S SE-MTR".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

DATA MONITOR	
MONITOR	NO DTC
VHCL/S SE-A/T	0km/h
VHCL/S SE-MTR	0km/h
ACCELE POSI	0.0/8
THROTTLE POS	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
	▽
	RECORD
MODE	BACK
LIGHT	COPY

SCIA2148E

3. CHECK COMBINATION METERS

Check combination meters. Refer to [DI-19, "How to Proceed With Trouble Diagnosis"](#).

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-137, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 5.

5. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

6. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

DTC P1730 A/T INTERLOCK

DTC P1730 A/T INTERLOCK

PF0:0000

Description

UCS00340

- Fail-safe function to detect interlock conditions.

On Board Diagnosis Logic

UCS0034P

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1730 A/T INTERLOCK" with CONSULT-II or 12th judgement flicker without CONSULT-II is detected when TCM does not receive the proper voltage signal from the sensor and switch.
- TCM monitors and compares gear position and conditions of each ATF pressure switch when gear is steady.

Possible Cause

UCS0034Q

- Harness or connectors
(The solenoid and switch circuit is open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

DTC Confirmation Procedure

UCS0034R


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
Selector lever: "D" position
5. If DTC is detected, go to [AT-140, "Diagnostic Procedure"](#).

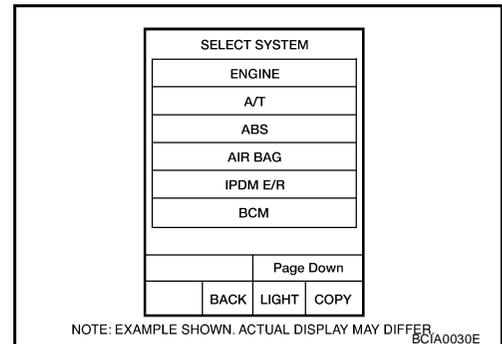

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P1730 A/T INTERLOCK

UCS0034S

Judgement of A/T Interlock

When A/T Interlock is judged to be malfunctioning, the vehicle should be fixed in 2nd gear, and should be set in a condition in which it can travel.

When one of the following fastening patterns is detected, the fail-safe function in correspondence with the individual pattern should be performed.

A/T INTERLOCK COUPLING PATTERN TABLE

●: NG, X: OK

Gear position		ATF pressure switch output					Fail-safe function	Clutch pressure output pattern after fail-safe function					
		SW3 (I/C)	SW6 (HLR/C)	SW5 (D/C)	SW1 (FR/B)	SW2 (LC/B)		I/C	HLR/C	D/C	FR/B	LC/B	L/U
A/T interlock coupling pattern	3rd	-	X	X	-	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	4th	-	X	X	-	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF
	5th	X	X	-	X	●	Held in 2nd gear	OFF	OFF	ON	OFF	OFF	OFF


Diagnostic Procedure

UCS003Q7

1. SELF-DIAGNOSIS

④ With CONSULT-II

1. Drive vehicle.
2. Stop vehicle and turn ignition switch OFF.
3. Turn ignition switch ON.
4. Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.

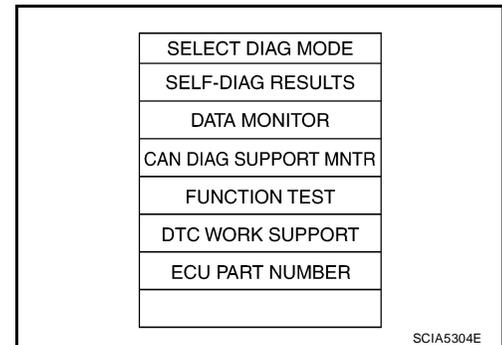

OK or NG

OK >> GO TO 2.

NG >> Check low coast brake solenoid valve circuit and function. Refer to [AT-160, "DTC P1772 LOW COAST BRAKE SOLENOID VALVE"](#), [AT-162, "DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION"](#).

2. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-139, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 3.

3. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

DTC P1730 A/T INTERLOCK

4. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).

NG >> Repair or replace damaged parts.

A

B

AT

D

E

F

G

H

I

J

K

L

M

DTC P1731 A/T 1ST ENGINE BRAKING

DTC P1731 A/T 1ST ENGINE BRAKING

PF0:0000

Description

UCS0034U

Fail-safe function to prevent sudden decrease in speed by engine brake other than at "1" position.

CONSULT-II Reference Value

UCS0034V

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to AT-19 .	ON
	Low coast brake disengaged. Refer to AT-19 .	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to AT-19 .	ON
	Low coast brake disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0034W

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1731 A/T 1ST E/BRAKING" with CONSULT-II or 13th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM does not receive the proper voltage signal from the sensor.
 - When TCM monitors each ATF pressure switch and solenoid monitor value, and detects as irregular when engine brake of 1st gear acts other than at "1" position.

Possible Cause

UCS0034X

- Harness or connectors
(The sensor circuit is open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

DTC Confirmation Procedure

UCS0034Y


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
ENGINE SPEED: 1,200 rpm
Selector lever: "1" position
Gear position: 1st gear
5. If DTC is detected, go to [AT-143, "Diagnostic Procedure"](#) .

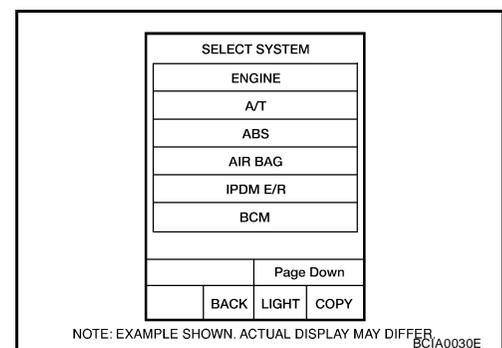

DTC P1731 A/T 1ST ENGINE BRAKING

UCS00308

Diagnostic Procedure

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start the engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "1" position (1st gear), and confirm the ON/OFF actuation of "ATF PRES SW 2" and "ON OFF SOL".

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 2		xxx	
ON OFF SOL		xxx	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4670E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-142, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1752 INPUT CLUTCH SOLENOID VALVE

DTC P1752 INPUT CLUTCH SOLENOID VALVE

PFP:31940

Description

UCS00350

Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

UCS00351

Item name	Condition	Display value (Approx.)
I/C SOLENOID	Input clutch disengaged. Refer to AT-19 .	0.6 - 0.8 A
	Input clutch engaged. Refer to AT-19 .	0 - 0.05 A

On Board Diagnosis Logic

UCS00352

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1752 I/C SOLENOID/CIRC” with CONSULT-II or 5th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

UCS00353

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Input clutch solenoid valve

DTC Confirmation Procedure

UCS00354

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POS: 1.5/8 - 2.0/8

Selector lever: “D” position


Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

5. If DTC is detected go to [AT-145, "Diagnostic Procedure"](#) .

④ WITH GST

Follow the procedure “WITH CONSULT-II”.

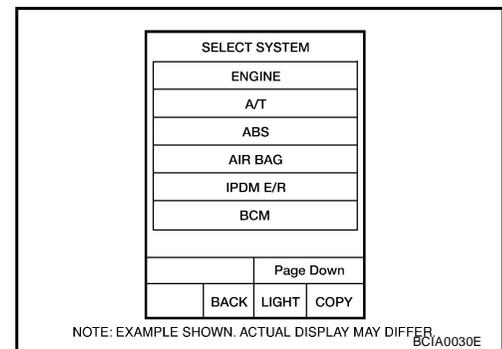

DTC P1752 INPUT CLUTCH SOLENOID VALVE

UCS00309

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "I/C SOLENOID" while driving.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID	XXXX		
LINE PRES SOL	XXXX		
I/C SOLENOID	XXXX		
FR/B SOLENOID	XXXX		
D/C SOLENOID	XXXX		
HLR/C SOL	XXXX		
		▽	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4793E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-144, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

PF3:31940

Description

UCS00356

- Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

UCS00357

Item name	Condition	Display value (Approx.)
I/C SOLENOID	Input clutch disengaged. Refer to AT-19 .	0.6 - 0.8 A
	Input clutch engaged. Refer to AT-19 .	0 - 0.05 A
ATF PRES SW 3	Input clutch engaged. Refer to AT-19 .	ON
	Input clutch disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS00358

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1754 I/C SOLENOID FNCTN” with CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 3 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

UCS00359

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Input clutch solenoid valve
- ATF pressure switch 3

DTC Confirmation Procedure

UCS0035A

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POSI: 1.5/8 - 2.0/8
Selector lever: “D” position
Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II. If DTC (P1754) is detected, refer to [AT-147, "Diagnostic Procedure"](#) .
If DTC (P1752) is detected, go to [AT-145, "Diagnostic Procedure"](#) .
If DTC (P1843) is detected, go to [AT-167, "Diagnostic Procedure"](#) .

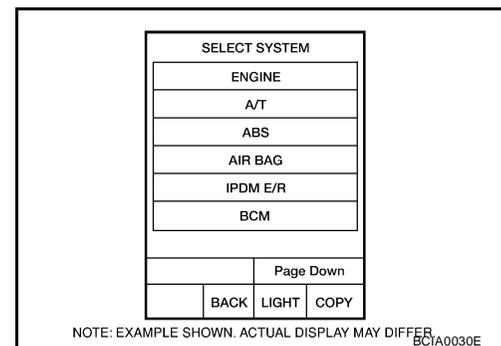

DTC P1754 INPUT CLUTCH SOLENOID VALVE FUNCTION

WITH GST

Follow the procedure "WITH CONSULT-II".

Diagnostic Procedure

UCS003QA


1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of "ATF PRES SW 3" and electrical current value of "I/C SOLENOID".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

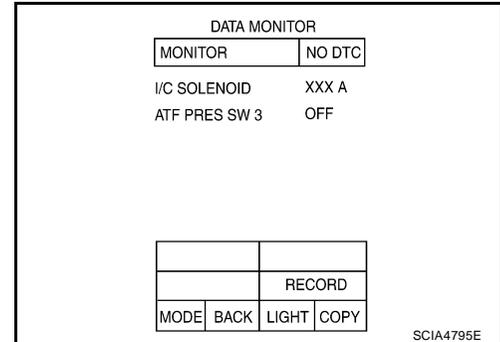

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-146, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1757 FRONT BRAKE SOLENOID VALVE

DTC P1757 FRONT BRAKE SOLENOID VALVE

PFP:31940

Description

UCS0035C

Front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

UCS0035D

Item name	Condition	Display value (Approx.)
FR/B SOLENOID	Front brake engaged. Refer to AT-19 .	0.6 - 0.8 A
	Front brake disengaged. Refer to AT-19 .	0 - 0.05 A

On Board Diagnosis Logic

UCS0035E

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1757 FR/B SOLENOID/CIRC” with CONSULT-II or 6th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

UCS0035F

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Front brake solenoid valve

DTC Confirmation Procedure

UCS0035G

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POS: 1.5/8 - 2.0/8

Selector lever: “D” position


Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

5. If DTC is detected go to [AT-149, "Diagnostic Procedure"](#) .

④ WITH GST

Follow the procedure “WITH CONSULT-II”.

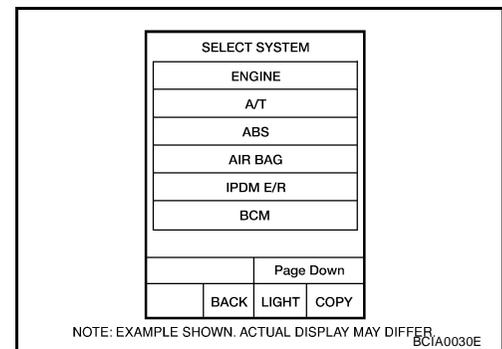

DTC P1757 FRONT BRAKE SOLENOID VALVE

Diagnostic Procedure

UCS0030B

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start engine.
4. Read out the value of "FR/B SOLENOID" while driving.

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID		XXXX	
LINE PRES SOL		XXXX	
I/C SOLENOID		XXXX	
FR/B SOLENOID		XXXX	
D/C SOLENOID		XXXX	
HLR/C SOL		XXXX	
		▽	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4793E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-148, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

PF3:31940

Description

UCS0035I

- Front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

UCS0035J

Item name	Condition	Display value (Approx.)
FR/B SOLENOID	Front brake engaged. Refer to AT-19 .	0.6 - 0.8 A
	Front brake disengaged. Refer to AT-19 .	0 - 0.05 A
ATF PRES SW 1	Front brake engaged. Refer to AT-19 .	ON
	Front brake disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0035K

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1759 FR/B SOLENOID FNCT” with CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 1 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

UCS0035L

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Front brake solenoid valve
- ATF pressure switch 1

DTC Confirmation Procedure

UCS0035M

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: “D” position
Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II. If DTC (P1759) is detected, refer to [AT-151, "Diagnostic Procedure"](#) .
If DTC (P1757) is detected, go to [AT-149, "Diagnostic Procedure"](#) .
If DTC (P1841) is detected, go to [AT-165, "Diagnostic Procedure"](#) .

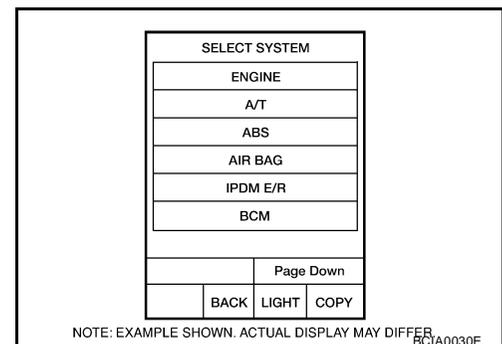

DTC P1759 FRONT BRAKE SOLENOID VALVE FUNCTION

WITH GST

Follow the procedure "WITH CONSULT-II".


Diagnostic Procedure

UCS003QC

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 1" and electrical current value of "FR/B SOLENOID".

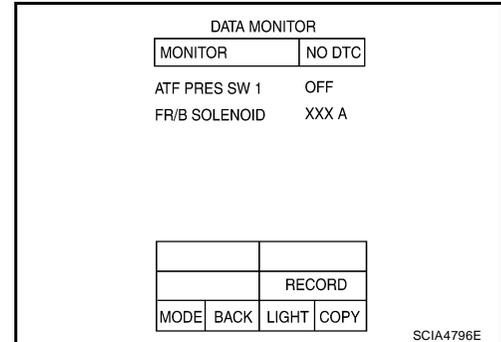

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-150, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1762 DIRECT CLUTCH SOLENOID VALVE

DTC P1762 DIRECT CLUTCH SOLENOID VALVE

PF3:31940

Description

UCS00350

Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

UCS0035P

Item name	Condition	Display value (Approx.)
D/C SOLENOID	Direct clutch disengaged. Refer to AT-19 .	0.6 - 0.8 A
	Direct clutch engaged. Refer to AT-19 .	0 - 0.05 A

On Board Diagnosis Logic

UCS0035Q

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1762 D/C SOLENOID/CIRC” with CONSULT-II or 2nd judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

UCS0035R

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Direct clutch solenoid valve

DTC Confirmation Procedure

UCS0035S


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: “D” position
Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
5. If DTC is detected, go to [AT-153, "Diagnostic Procedure"](#) .

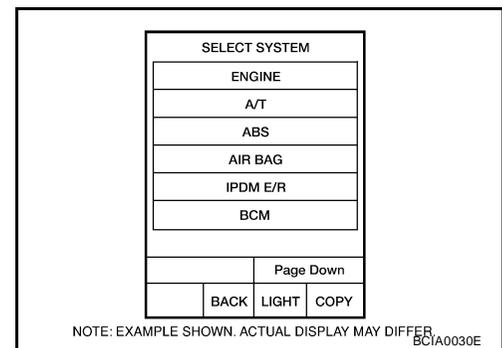

WITH GST

Follow the procedure “WITH CONSULT-II”.

DTC P1762 DIRECT CLUTCH SOLENOID VALVE

Diagnostic Procedure

UCS0039D

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "D/C SOLENOID" while driving.

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID	XXXX		
LINE PRES SOL	XXXX		
I/C SOLENOID	XXXX		
FR/B SOLENOID	XXXX		
D/C SOLENOID	XXXX		
HLR/C SOL	XXXX		
		▽	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4793E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-152, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

PF3:31940

Description

UCS0035U

- Direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

UCS0035V

Item name	Condition	Display value (Approx.)
D/C SOLENOID	Direct clutch disengaged. Refer to AT-19 .	0.6 - 0.8 A
	Direct clutch engaged. Refer to AT-19 .	0 - 0.05 A
ATF PRES SW 5	Direct clutch engaged. Refer to AT-19 .	ON
	Direct clutch disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0035W

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1764 D/C SOLENOID FNCTN” with CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 5 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

UCS0035X

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Direct clutch solenoid valve
- ATF pressure switch 5

DTC Confirmation Procedure

UCS0035Y


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: “D” position
Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II. If DTC (P1764) is detected, refer to [AT-155, "Diagnostic Procedure"](#) .
If DTC (P1762) is detected, go to [AT-153, "Diagnostic Procedure"](#) .
If DTC (P1845) is detected, go to [AT-169, "Diagnostic Procedure"](#) .

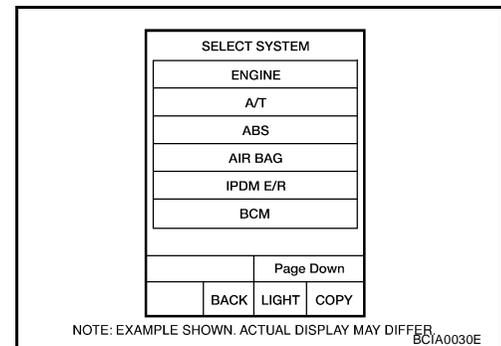

WITH GST

Follow the procedure “WITH CONSULT-II”.

DTC P1764 DIRECT CLUTCH SOLENOID VALVE FUNCTION

UCS0030E

Diagnostic Procedure

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (1st ⇒ 2nd gear), and confirm the display actuation of the "ATF PRES SW 5" and electrical current value of "D/C SOLENOID".

DATA MONITOR			
MONITOR		NO DTC	
D/C SOLENOID		XXXX	
ATF PRES SW 5		OFF	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4797E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-154, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

PF:31940

Description

UCS00360

High and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

UCS00361

Item name	Condition	Display value (Approx.)
HLR/C SOL	High and low reverse clutch disengaged. Refer to AT-19 .	0.6 - 0.8 A
	High and low reverse clutch engaged. Refer to AT-19 .	0 - 0.05 A

On Board Diagnosis Logic

UCS00362

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1767 HLR/C SOL/CIRC” with CONSULT-II or 8th judgement flicker without CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM detects as irregular by comparing target value with monitor value.

Possible Cause

UCS00363

- Harness or connectors
(The solenoid circuit is open or shorted.)
- High and low reverse clutch solenoid valve

DTC Confirmation Procedure

UCS00364

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch “ON”. (Do not start engine.)
2. Select “DATA MONITOR” mode for “A/T” with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POS: 1.5/8 - 2.0/8

Selector lever: “D” position


Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

5. If DTC is detected, go to [AT-157](#), “Diagnostic Procedure” .

WITH GST

Follow the procedure “WITH CONSULT-II”.

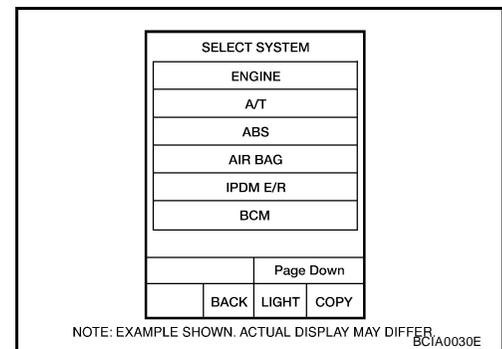

DTC P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE

UCS003QF

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "HLR/C SOLENOID" while driving.

DATA MONITOR			
MONITOR		NO DTC	
TCC SOLENOID		XXXX	
LINE PRES SOL		XXXX	
I/C SOLENOID		XXXX	
FR/B SOLENOID		XXXX	
D/C SOLENOID		XXXX	
HLR/C SOL		XXXX	
		▽	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4793E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-156, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

PF3:31940

Description

UCS00366

- High and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

UCS00367

Item name	Condition	Display value (Approx.)
HLR/C SOL	High and low reverse clutch disengaged. Refer to AT-19 .	0.6 - 0.8 A
	High and low reverse clutch engaged. Refer to AT-19 .	0 - 0.05 A
ATF PRES SW 6	High and low reverse clutch engaged. Refer to AT-19 .	ON
	High and low reverse clutch disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS00368

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1769 HLR/C SOL FNCTN" with CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 6 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

UCS00369

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- High and low reverse clutch solenoid valve
- ATF pressure switch 6

DTC Confirmation Procedure

UCS0036A

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II. If DTC (P1769) is detected, refer to [AT-159, "Diagnostic Procedure"](#) .
If DTC (P1767) is detected, go to [AT-157, "Diagnostic Procedure"](#) .
If DTC (P1846) is detected, go to [AT-171, "Diagnostic Procedure"](#) .

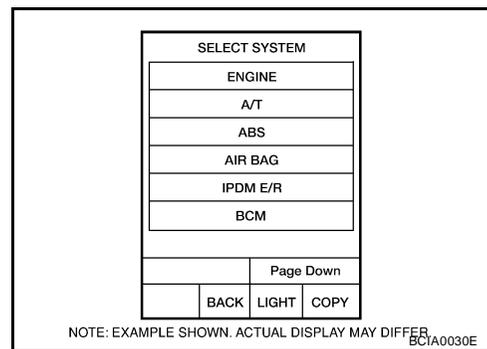

DTC P1769 HIGH AND LOW REVERSE CLUTCH SOLENOID VALVE FUNCTION

WITH GST

Follow the procedure "WITH CONSULT-II".

Diagnostic Procedure

UCS003QG


1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start the engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (2nd ⇒ 3rd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 6" and electrical current value of "HLR/C SOL".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

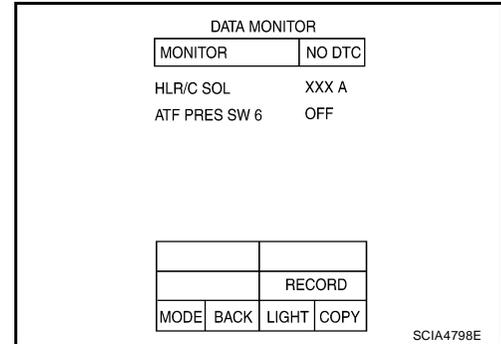

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-158, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1772 LOW COAST BRAKE SOLENOID VALVE

DTC P1772 LOW COAST BRAKE SOLENOID VALVE

PF3:31940

Description

UCS0036C

Low coast brake solenoid valve is turned "ON" or "OFF" by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.

CONSULT-II Reference Value

UCS0036D

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to AT-19 .	ON
	Low coast brake disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0036E

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1772 LC/B SOLENOID/CIRC" with CONSULT-II or 7th judgement flicker without CONSULT-II is detected when TCM detects an improper voltage drop when it tries to operate the solenoid valve.

Possible Cause

UCS0036F

- Harness or connectors
(The solenoid circuit is open or shorted.)
- Low coast brake solenoid valve

DTC Confirmation Procedure

UCS0036G


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.
Selector lever: "1" or "2"
Gear position: "1st" or "2nd" gear (LC/B ON/OFF)
5. If DTC is detected, go to [AT-161, "Diagnostic Procedure"](#) .

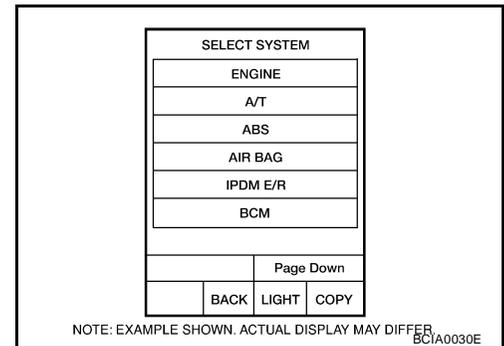

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P1772 LOW COAST BRAKE SOLENOID VALVE

Diagnostic Procedure

UCS003QH

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch ON.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Start the engine.
4. Read out the value of "ON OFF SOL" while driving.

DATA MONITOR			
MONITOR		NO DTC	
ON OFF SOL		OFF	
ATF PRES SW 2		OFF	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4794E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-160, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

PF3:31940

Description

UCS0036I

- Low coast brake solenoid valve is turned “ON” or “OFF” by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

CONSULT-II Reference Value

UCS0036J

Item name	Condition	Display value
ON OFF SOL	Low coast brake engaged. Refer to AT-19 .	ON
	Low coast brake disengaged. Refer to AT-19 .	OFF
ATF PRES SW 2	Low coast brake engaged. Refer to AT-19 .	ON
	Low coast brake disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0036K

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1774 LC/B SOLENOID FNCT” with CONSULT-II is detected under the following conditions.
 - When TCM detects that actual gear ratio is irregular, and relation between gear position and condition of ATF pressure switch 2 is irregular during depressing accelerator pedal. (Other than during shift change)
 - When TCM detects that relation between gear position and condition of ATF pressure switch 2 is irregular during releasing accelerator pedal. (Other than during shift change)

Possible Cause

UCS0036L

- Harness or connectors
(The solenoid and switch circuits are open or shorted.)
- Low coast brake solenoid valve
- ATF pressure switch 2

DTC Confirmation Procedure

UCS0036M

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch “OFF” and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
Selector lever: “1” or “2” position
Gear position: “1st” or “2nd” gear (LC/B ON/OFF)
3. Perform step “2” again.
4. Turn ignition switch “OFF”, then perform step “1” to “3” again.
5. Check “SELF-DIAG RESULTS” mode for “A/T” with CONSULT-II. If DTC (P1774) is detected, refer to [AT-163, "Diagnostic Procedure"](#) .
If DTC (P1772) is detected, go to [AT-161, "Diagnostic Procedure"](#) .

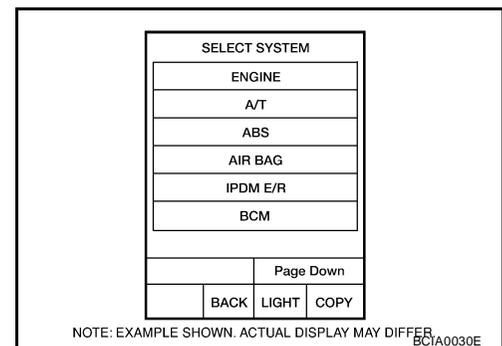

WITH GST

Follow the procedure “WITH CONSULT-II”.

DTC P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

UCS003Q1

Diagnostic Procedure

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start the engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "1" or "2" position (11 or 22 gear), and confirm the ON/OFF actuation of the "ATF PRES SW 2" and "ON OFF SOL".

DATA MONITOR			
MONITOR		NO DTC	
ON OFF SOL		OFF	
ATF PRES SW 2		OFF	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4794E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-162, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1841 ATF PRESSURE SWITCH 1

DTC P1841 ATF PRESSURE SWITCH 1

PF2:25240

Description

UCS00360

Fail-safe function to detect front brake clutch solenoid valve condition.

CONSULT-II Reference Value

UCS0036P

Item name	Condition	Display value
ATF PRES SW 1	Front brake engaged. Refer to AT-19 .	ON
	Front brake disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0036Q

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1841 ATF PRES SW 1/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 1 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

UCS0036R

- ATF pressure switch 1
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

UCS0036S

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 3rd ⇒ 4th Gear (FR/B ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
If DTC (P1841) is detected, go to [AT-165, "Diagnostic Procedure"](#) .
If DTC (P1757) is detected, go to [AT-149, "Diagnostic Procedure"](#) .

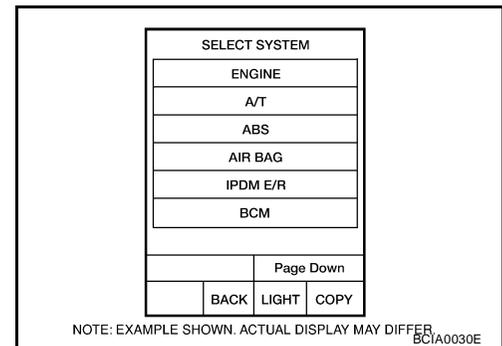

DTC P1841 ATF PRESSURE SWITCH 1

UCS0030J

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 1".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	
△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-165, "Diagnostic Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1843 ATF PRESSURE SWITCH 3

DTC P1843 ATF PRESSURE SWITCH 3

PF2:25240

Description

UCS0036U

Fail-safe function to detect input clutch solenoid valve condition.

CONSULT-II Reference Value

UCS0036V

Item name	Condition	Display value
ATF PRES SW 3	Input clutch engaged. Refer to AT-19 .	ON
	Input clutch disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS0036W

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1843 ATF PRES SW 3/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 3 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

UCS0036X

- ATF pressure switch 3
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

UCS0036Y

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 3rd ⇒ 4th Gear (I/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
If DTC (P1843) is detected, go to [AT-167, "Diagnostic Procedure"](#) .
If DTC (P1752) is detected, go to [AT-145, "Diagnostic Procedure"](#) .

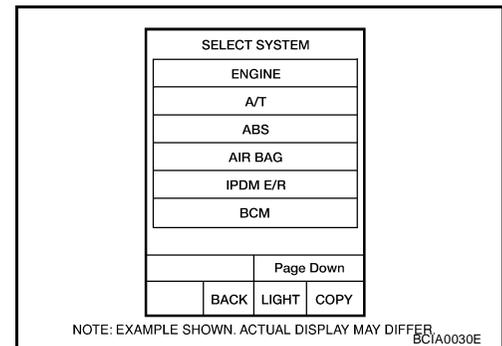

DTC P1843 ATF PRESSURE SWITCH 3

UCS0030K

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (3rd ⇒ 4th gear), and confirm the ON/OFF actuation of the "ATF PRES SW 3".

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

△	▽		
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-167, "Diagnostic Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1845 ATF PRESSURE SWITCH 5

DTC P1845 ATF PRESSURE SWITCH 5

PF25240

Description

UCS00370

Fail-safe function to detect direct clutch solenoid valve condition.

CONSULT-II Reference Value

UCS00371

Item name	Condition	Display value
ATF PRES SW 5	Direct clutch engaged. Refer to AT-19 .	ON
	Direct clutch disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS00372

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1845 ATF PRES SW 5/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 5 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

UCS00373

- ATF pressure switch 5
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

UCS00374

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 1st ⇒ 2nd Gear (D/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
If DTC (P1845) is detected, go to [AT-169, "Diagnostic Procedure"](#) .
If DTC (P1762) is detected, go to [AT-153, "Diagnostic Procedure"](#) .

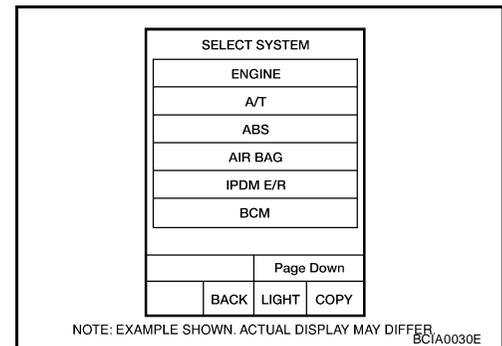

DTC P1845 ATF PRESSURE SWITCH 5

UCS0030L

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (1st ⇒ 2nd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 5".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	

△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-168, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1846 ATF PRESSURE SWITCH 6

DTC P1846 ATF PRESSURE SWITCH 6

PF2:25240

Description

UCS00376

Fail-safe function to detect high and low reverse clutch solenoid valve condition.

CONSULT-II Reference Value

UCS00377

Item name	Condition	Display value
ATF PRES SW 6	High and low reverse clutch engaged. Refer to AT-19 .	ON
	High and low reverse clutch disengaged. Refer to AT-19 .	OFF

On Board Diagnosis Logic

UCS00378

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1846 ATF PRES SW 6/CIRC" with CONSULT-II is detected when TCM detects that actual gear ratio is normal, and relation between gear position and condition of ATF pressure switch 6 is irregular during depressing accelerator pedal. (Other than during shift change)

Possible Cause

UCS00379

- ATF pressure switch 6
- Harness or connectors
(The switch circuit is open or shorted.)

DTC Confirmation Procedure

UCS0037A

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch "OFF" and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Start engine.
2. Accelerate vehicle to maintain the following conditions.
ACCELE POS: 1.5/8 - 2.0/8
Selector lever: "D" position
Gear position: 2nd ⇒ 3rd Gear (HLR/C ON/OFF)
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. Perform step "2" again.
4. Turn ignition switch "OFF", then perform step "1" to "3" again.
5. Check "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II.
If DTC (P1846) is detected, go to [AT-171, "Diagnostic Procedure"](#) .
If DTC (P1767) is detected, go to [AT-157, "Diagnostic Procedure"](#) .

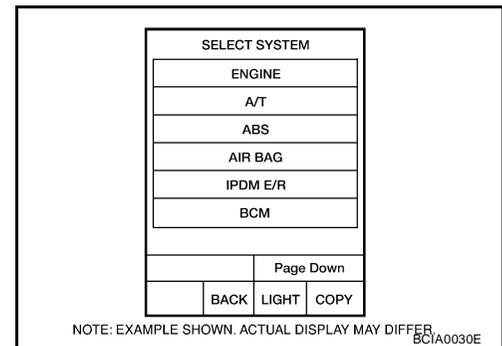

DTC P1846 ATF PRESSURE SWITCH 6

UCS003QM

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start the engine.
2. Select "ECU INPUT SIGNALS" or "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Drive vehicle in the "D" position (2nd ⇒ 3rd gear), and confirm the ON/OFF actuation of the "ATF PRES SW 6".

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

DATA MONITOR			
MONITOR		NO DTC	
ATF PRES SW 1		OFF	
ATF PRES SW 2		OFF	
ATF PRES SW 3		OFF	
ATF PRES SW 5		OFF	
ATF PRES SW 6		OFF	
△		▽	
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0067E

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#).
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform "DTC Confirmation Procedure".

- Refer to [AT-170, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

MAIN POWER SUPPLY AND GROUND CIRCUIT

MAIN POWER SUPPLY AND GROUND CIRCUIT




PF0:00100

Wiring Diagram — AT — MAIN

UCS0030N

AT-MAIN-01

  : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

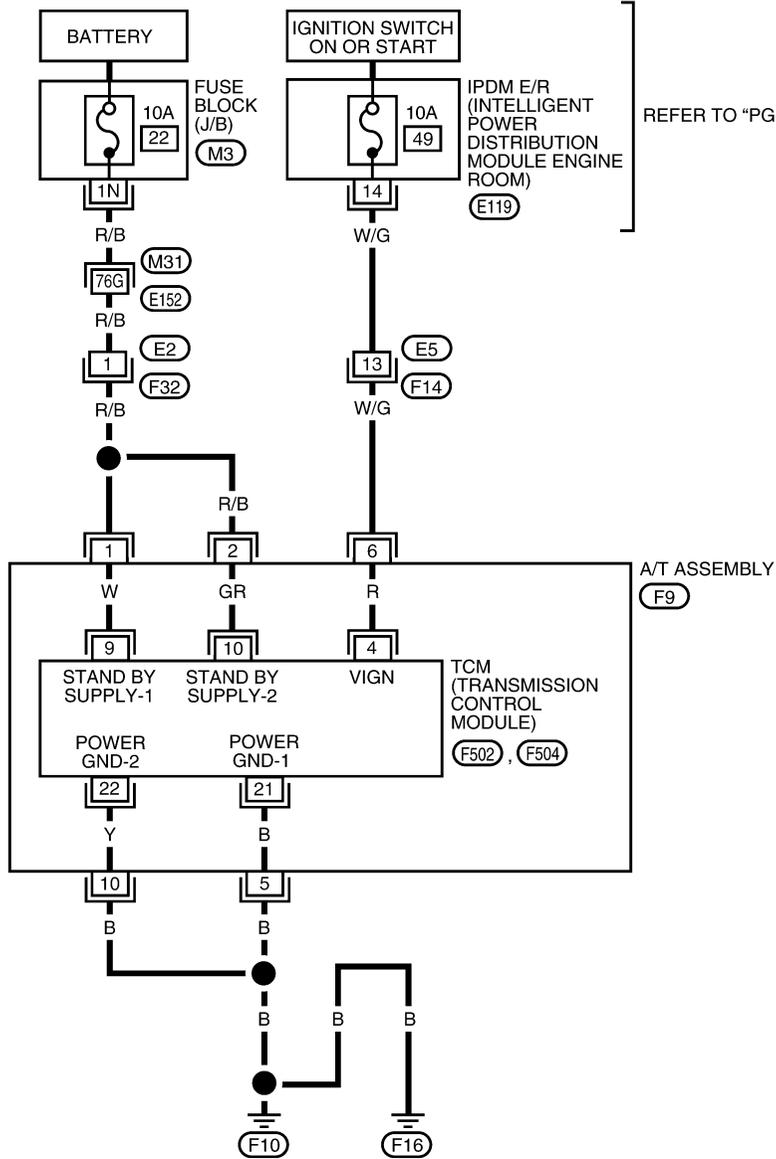

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0386E

MAIN POWER SUPPLY AND GROUND CIRCUIT

TCM terminals and data are reference value. Measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
1	R/B	Power supply (Memory back-up)	Always	Battery voltage
2	R/B	Power supply (Memory back-up)	Always	Battery voltage
5	B	Ground	Always	0V
6	W/G	Power supply		Battery voltage
				0V
10	B	Ground	Always	0V

A

B

AT

D

E


Diagnostic Procedure

UCS003Q0

1. CHECK TCM POWER SOURCE STEP 1

- Turn ignition switch OFF.
- Disconnect A/T assembly harness connector.
- Check voltage between A/T assembly harness connector terminals and ground.

Item	Connector	Terminal	Voltage
TCM	F9	1 - Ground	Battery voltage
		2 - Ground	Battery voltage
		6 - Ground	0V

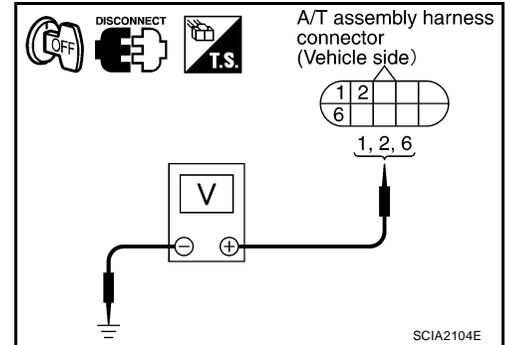

F

G

H

I

J


OK or NG

- OK >> GO TO 2.
- NG >> GO TO 3.

2. CHECK TCM POWER SOURCE STEP 2

- Disconnect A/T assembly harness connector.
- Turn ignition switch ON. (Do not start engine.)
- Check voltage between A/T assembly harness connector terminals and ground.

Item	Connector	Terminal	Voltage
TCM	F9	1 - Ground	Battery voltage
		2 - Ground	Battery voltage
		6 - Ground	Battery voltage

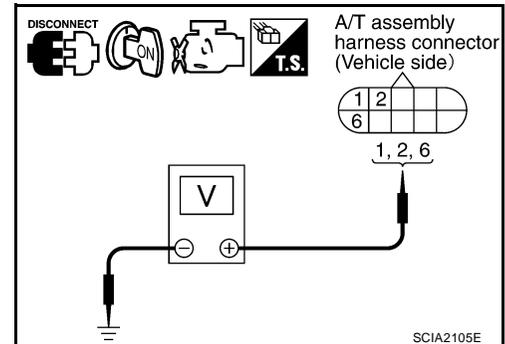

K

L

M

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

MAIN POWER SUPPLY AND GROUND CIRCUIT

3. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between battery and A/T assembly harness connector terminals 1, 2
- Harness for short or open between ignition switch and A/T assembly harness connector terminal 6
- 10A fuse (No. 22, located in the fuse and fusible link block) and 10A fuse (No. 49, located in the IPDM E/R)
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK TCM GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect A/T assembly harness connector.
3. Check continuity between A/T assembly harness connector terminals and ground.

Item	Connector	Terminal	Continuity
TCM	F9	5, 10 - Ground	Yes

If OK, check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

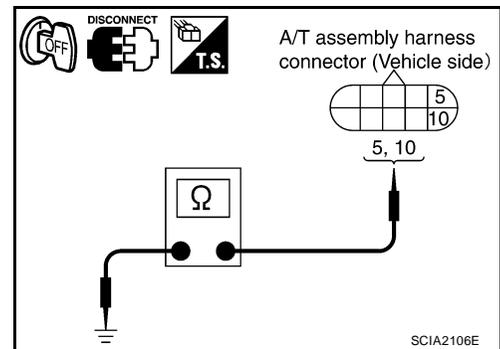

5. DETECT MALFUNCTIONING ITEM

Check the following.

- The A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

OK or NG


- OK >> **INSPECTION END**
- NG-1 >> Self-diagnosis does not activate: GO TO 7.
- NG-2 >> DTC is displayed: Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

MAIN POWER SUPPLY AND GROUND CIRCUIT

7. CHECK TERMINAL CORD ASSEMBLY


1. Remove control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disconnect A/T assembly harness connector and TCM connector.
3. Check continuity between A/T assembly harness connector terminals and TCM connector terminals.

Item	Connector	Terminal	Voltage
A/T assembly harness connector	F9	1	Yes
TCM connector	F502	9	
A/T assembly harness connector	F9	2	Yes
TCM connector	F502	10	
A/T assembly harness connector	F9	6	Yes
TCM connector	F502	4	

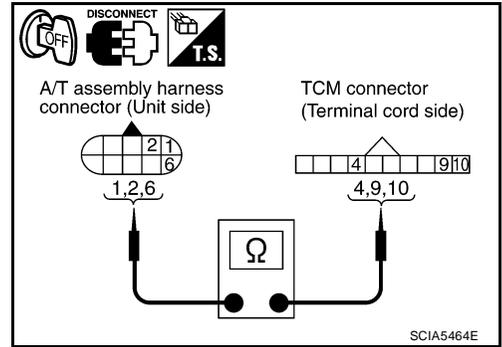

4. Check continuity between A/T assembly harness connector terminals and TCM connector terminals.

Item	Connector	Terminal	Voltage
A/T assembly harness connector	F9	5	Yes
TCM connector	F504	21	
A/T assembly harness connector	F9	10	Yes
TCM connector	F504	22	

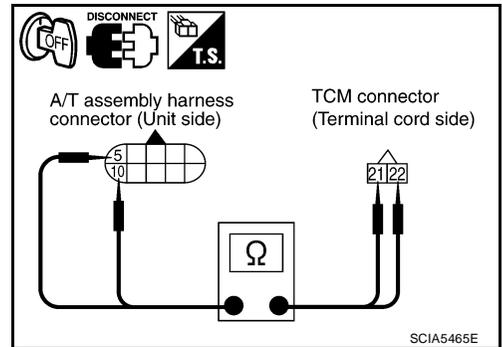

5. If OK, check harness for short to ground and short to power.
OK or NG

- OK >> Replace the control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
- NG >> Replace open circuit or short to ground and short to power in harness or connectors.

CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT

CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT

PF1:18002

CONSULT-II Reference Value

UCS0037C

Item name	Condition	Display value
CLSD THL POS	Released accelerator pedal.	ON
	Fully depressed accelerator pedal.	OFF
W/O THL POS	Fully depressed accelerator pedal.	ON
	Released accelerator pedal.	OFF

Diagnostic Procedure

UCS0037D

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

2. CHECK THROTTLE POSITION SIGNAL CIRCUIT

With CONSULT-II

1. Turn ignition switch "ON". (Do not start engine.)
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Depress accelerator pedal and read out the value of "CLSD THL POS" and "W/O THL POS".

OK or NG

OK >> **INSPECTION END**

NG >> Check the following. If NG, repair or replace damaged parts.

- Perform the self-diagnosis for "ENGINE" with CONSULT-II.
- Open circuit or short to ground or short to power in harness or connectors.
- Pin terminals for damage or loose connection with harness connector.

DATA MONITOR	
MONITOR	NO DTC
ACCELE POSI	0.0/8
THROTTLE POSI	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
BRAKE SW	OFF
▼	
RECORD	
MODE	BACK LIGHT COPY

PCIA0070E

BRAKE SIGNAL CIRCUIT

BRAKE SIGNAL CIRCUIT

PF2:25320

CONSULT-II Reference Value

UCS0037E

Item name	Condition	Display value
BRAKE SW	Depressed brake pedal.	ON
	Released brake pedal.	OFF

Diagnostic Procedure

UCS0037F

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#).
 NO >> GO TO 2.

2. CHECK STOP LAMP SWITCH CIRCUIT

Ⓜ With CONSULT-II

- Turn ignition switch "ON". (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out ON/OFF switching action of the "BRAKE SW".

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 3.

DATA MONITOR	
MONITOR	NO DTC
ACCELE POSI	0.0/8
THROTTLE POSI	0.0/8
CLSD THL POS	ON
W/O THL POS	OFF
BRAKE SW	OFF

▽			
RECORD			
MODE	BACK	LIGHT	COPY

PCIA0070E

3. CHECK STOP LAMP SWITCH


Check continuity between stop lamp switch harness connector terminals 1 and 2.

Item	Connector	Condition	Terminal	Continuity
Stop lamp switch harness connector	E38	When brake pedal is depressed	1 - 2	Yes
		When brake pedal is released		No

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#).

OK or NG

- OK >> Check the following. If NG, repair or replace damaged parts.
- Harness for short or open between battery and stop lamp switch.
 - Harness for short or open between stop lamp switch and combination meter.
- NG >> Repair or replace the stop lamp switch.

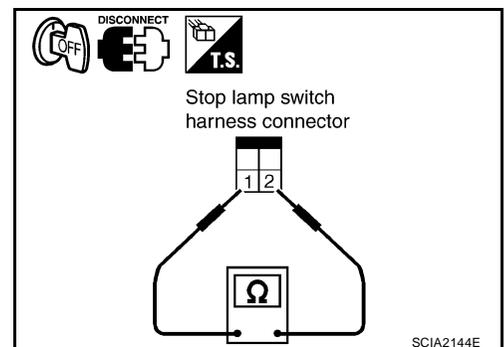

OVERDRIVE CONTROL SWITCH

OVERDRIVE CONTROL SWITCH

PF2:25130

CONSULT-II Reference Value

UCS0040P

Item name	Condition	Display value
OD CONT SW	Releasing overdrive control switch	OFF
	Holding overdrive control switch	ON

Diagnostic Procedure

UCS0040P

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction in the CAN communication indicated in the results?

YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#) .

NO >> GO TO 2.

2. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

Ⓜ With CONSULT-II

- Turn ignition switch "ON".
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out "OD CONT SW".
Check the signal of the overdrive control switch is indicated properly.

DATA MONITOR	
MONITORING	
1 POSITION SW	OFF
OD CONT SW	ON
POWERSHIFT SW	OFF
HOLD SW	OFF
MANU MODE SW	OFF

LCIA0339E

Monitor item	Condition	Display value
OD CONT SW	Releasing overdrive control switch	OFF
	Holding overdrive control switch	ON

ⓧ Without CONSULT-II

- Turn ignition switch "ON". (Do not start engine)
- Check voltage between A/T control device connector terminal and ground.

Item	Connector No.	Terminal No.	Condition	Data (Approx.)
Overdrive control switch	M156	7 - Ground	Releasing overdrive control switch	Battery voltage
			Holding overdrive control switch	0V

OK or NG

OK >> GO TO 5.

NG >> GO TO 3.

OVERDRIVE CONTROL SWITCH

3. CHECK OVERDRIVE CONTROL SWITCH

1. Turn ignition switch "OFF".
2. Disconnect A/T control device connector.
3. Check continuity between A/T control device connector M156 terminals 7 and 8.

Condition	Continuity
Releasing overdrive control switch	No
Holding overdrive control switch	Yes

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace overdrive control switch.

4. DETECT MALFUNCTIONING ITEM

Check the following. If any items are damaged, repair or replace damaged parts.

- Harness for short or open between combination meter connector terminal 20 and A/T control device connector terminal 7.
- Harness for short or open between A/T control device connector terminal 8 and ground.

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK COMBINATION METER

Check the combination meter. Refer to [DI-19, "How to Proceed With Trouble Diagnosis"](#) .

OK or NG

- OK >> **INSPECTION END**
- NO >> Repair or replace damaged parts.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS



TROUBLE DIAGNOSIS FOR SYMPTOMS

PF0:0007

Wiring Diagram — AT — NONDTC

UCS00320

 AT-NONDTC-01

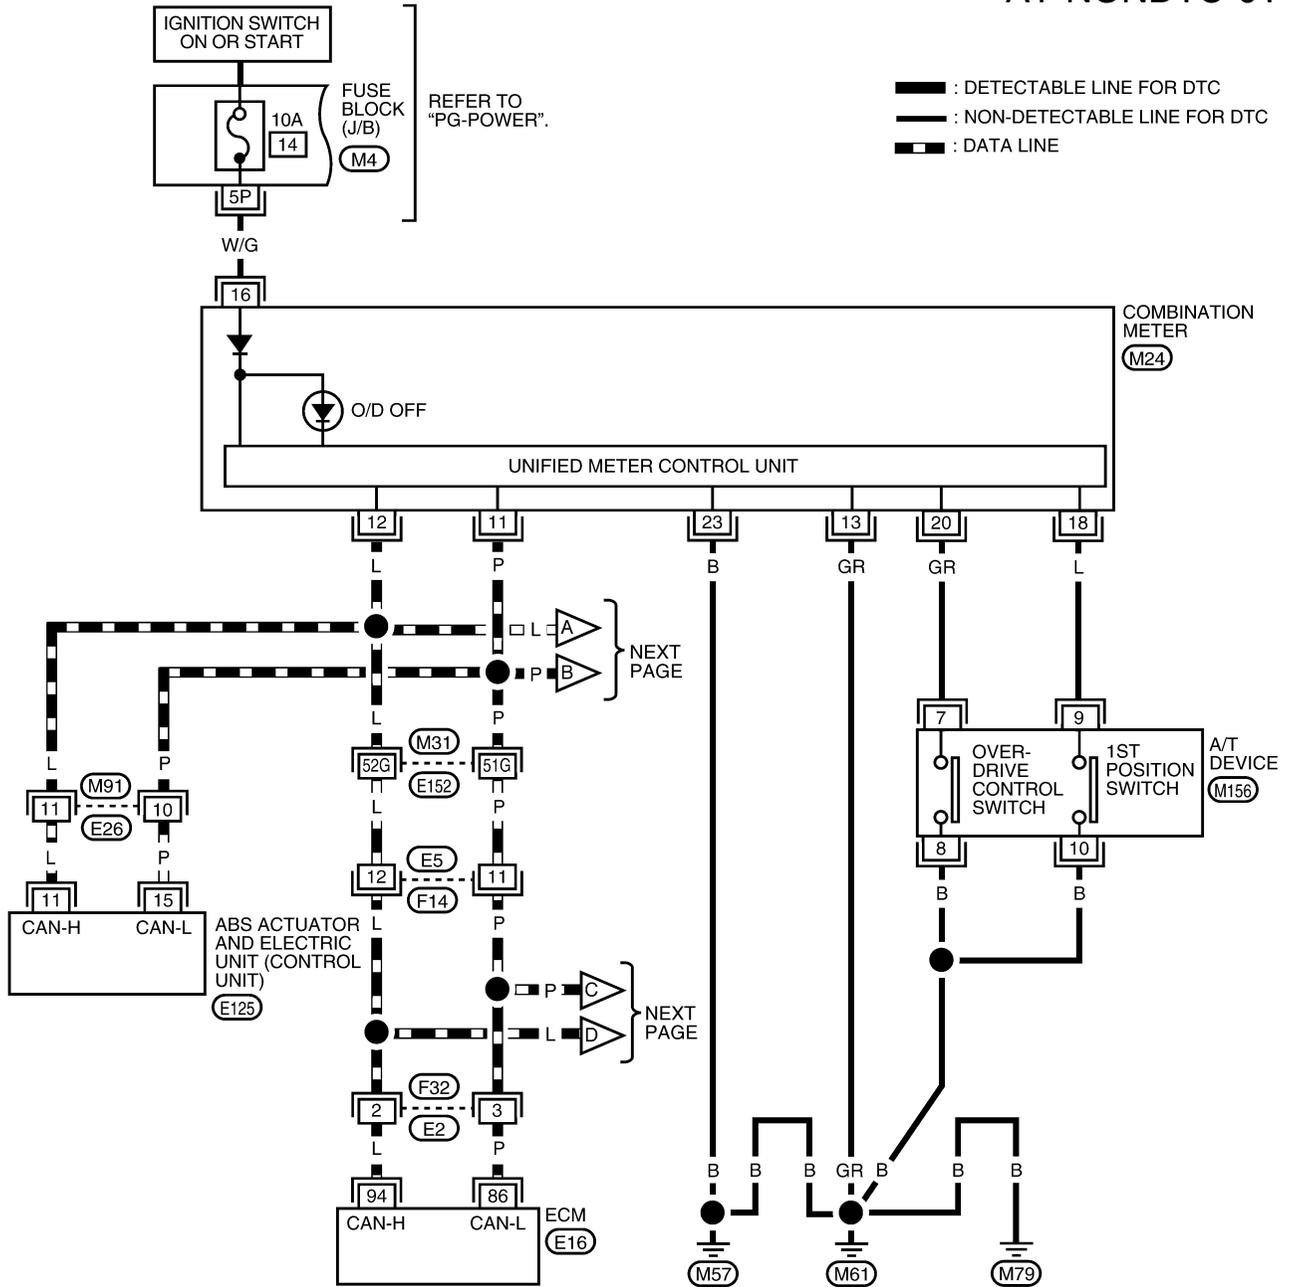

REFER TO THE FOLLOWING.

(E16), (E125) - ELECTRICAL UNITS



(M31) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0439E

TROUBLE DIAGNOSIS FOR SYMPTOMS

AT-NONDTC-02

A
B
AT
D
E
F
G
H
I
J
K
L
M

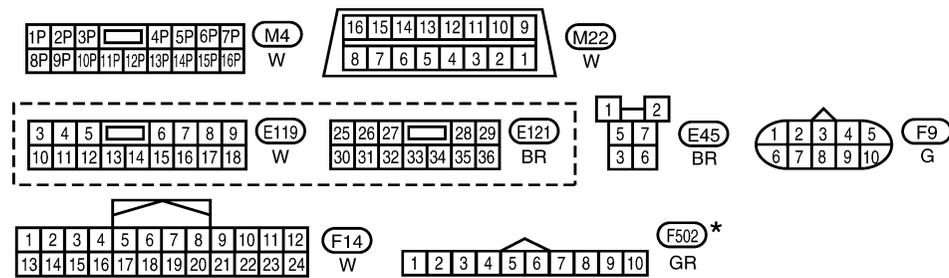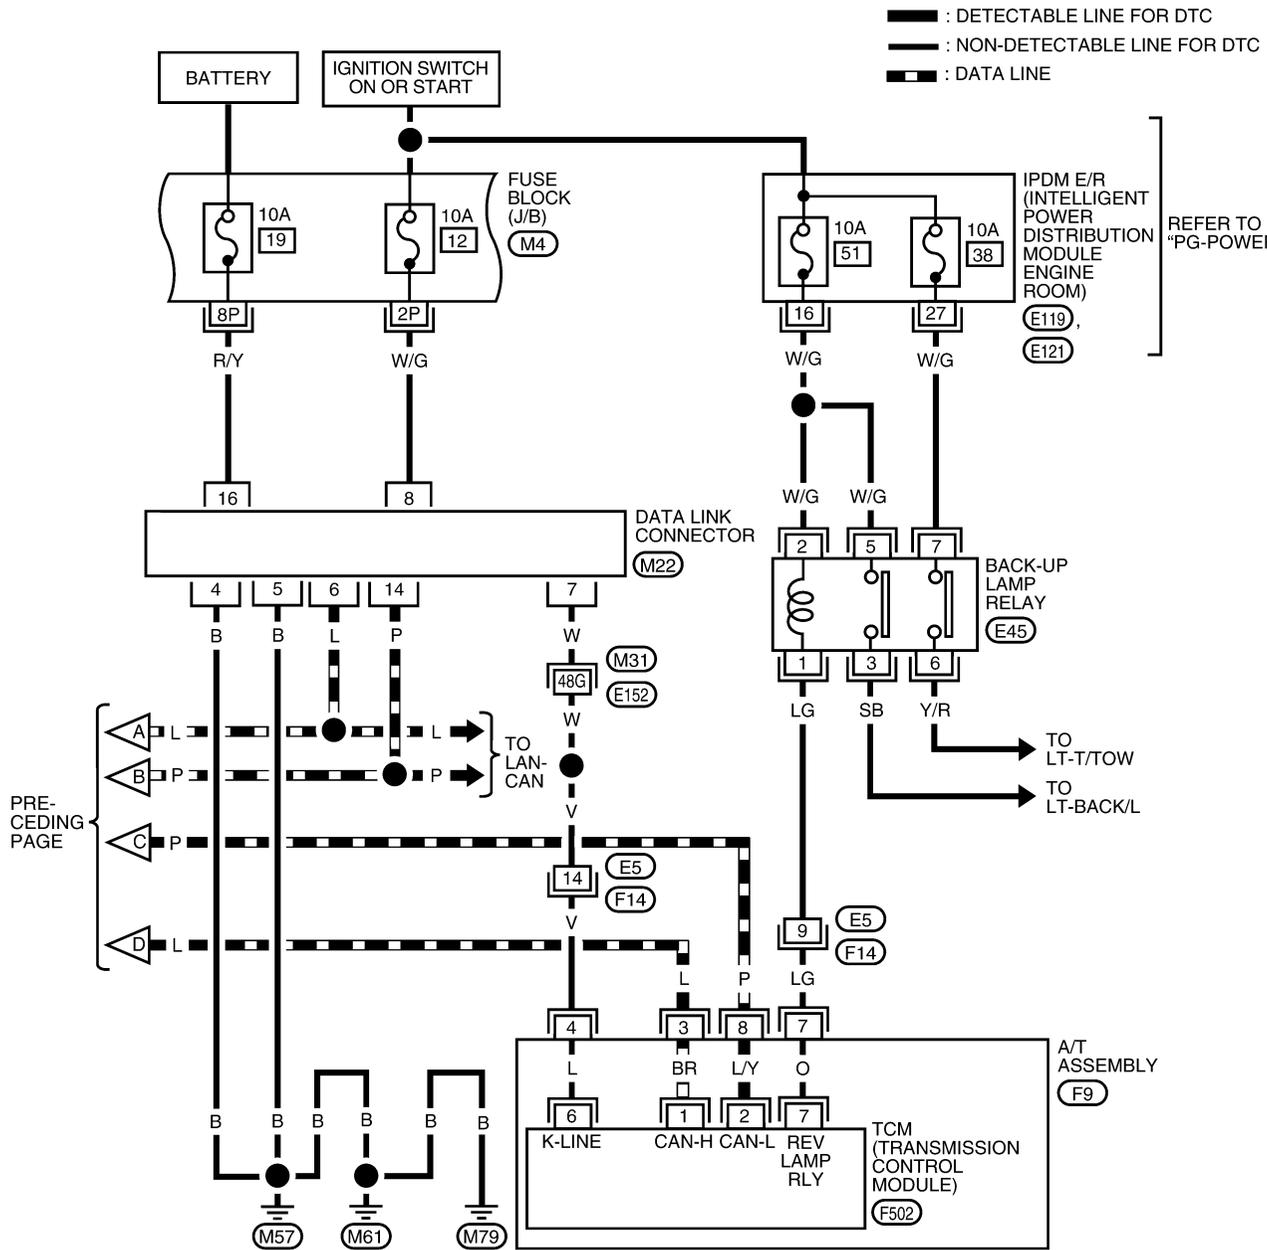

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0440E

TROUBLE DIAGNOSIS FOR SYMPTOMS

AT-NONDTC-03

 - : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
-  : WITH HILL DESCENT CONTROL AND HILL START ASSIST

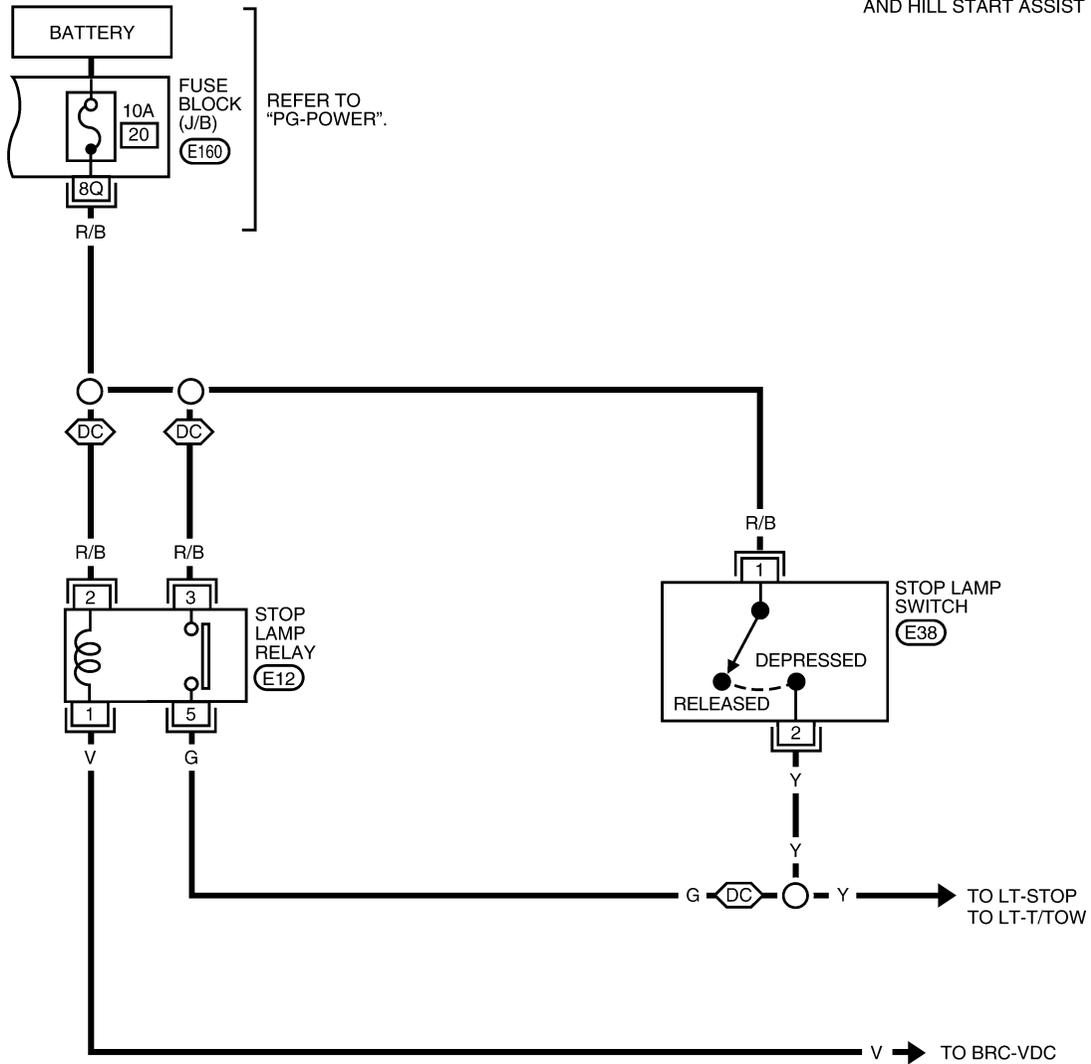

BCWA0389E

TROUBLE DIAGNOSIS FOR SYMPTOMS

TCM terminals and data are reference value. Measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
3	L	CAN-H	-	-
4	V	K-line (CONSULT-II signal)	The terminal is connected to the data link connector for CONSULT-II.	
7	LG	Back-up lamp relay	 Selector lever in "R" position.	0V
			Selector lever in other positions.	Battery voltage
8	P	CAN-L	-	-

O/D OFF Indicator Lamp Does Not Come On SYMPTOM:

UCS00371

O/D OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

DIAGNOSTIC PROCEDURE

1. CHECK CAN COMMUNICATION LINE

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) , [AT-98, "TCM SELF-DIAGNOSTIC PROCEDURE \(NO TOOLS\)"](#) .

Is a malfunction in the CAN communication indicated in the results?

- YES >> Check CAN communication line. Refer to [AT-100, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.

2. CHECK O/D OFF INDICATOR LAMP CIRCUIT

Check the combination meter. Refer to [DI-4, "COMBINATION METERS"](#) .

OK or NG

- OK >> GO TO 3
- NG >> Repair or replace damaged parts.

3. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [AT-172, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037J

Engine Cannot Be Started In “P” or “N” Position

SYMPTOM:

- Engine cannot be started with selector lever in “P” or “N” position.
- Engine can be started with selector lever in “D”, “3”, “2”, “1” or “R” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-108, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

3. CHECK STARTING SYSTEM

Check the starting system. Refer to [SC-10, "STARTING SYSTEM"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037K

In "P" Position, Vehicle Moves When Pushed

SYMPTOM:

Even though the selector lever is set in the "P" position, the parking mechanism is not actuated, allowing the vehicle to be moved when it is pushed.

DIAGNOSTIC PROCEDURE

1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnosis results indicate PNP switch?

- YES >> Check the malfunctioning system. Refer to [AT-108, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

3. CHECK A/T FLUID CONDITION

- Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
- Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.58).

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037L

In "N" Position, Vehicle Moves

SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

DIAGNOSTIC PROCEDURE

1. CHECK PNP SWITCH CIRCUIT

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch?

YES >> Check the malfunctioning system. Refer to [AT-108, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .

NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

4. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

OK >> GO TO 5.

NG >> Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.60).

5. CHECK SYMPTOM

Check again. Refer to [AT-54, "Check at Idle"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 6.

6. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .

2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037M

Large Shock (“N” to “D” Position)

SYMPTOM:

A noticeable shock occurs when the selector lever is shifted from the “N” to “D” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
NO >> GO TO 2.

2. ENGINE IDLE SPEED

Check the engine idle speed. Refer to [EC-76, "Idle Speed and Ignition Timing Check"](#) .

OK or NG

- OK >> GO TO 3.
NG >> Repair.

3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 4.
NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

4. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 5.
NG >> Refill ATF.

5. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in “D” position. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 8.
NG - 1 >> Line pressure high: GO TO 6.
NG - 2 >> Line pressure low: GO TO 7.

6. DETECT MALFUNCTIONING ITEM

- Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
- Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
- Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 10.
NG >> GO TO 9.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.1).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to [AT-54, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 11.

11. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037N

Vehicle Does Not Creep Backward In “R” Position

SYMPTOM:

The vehicle does not creep in the “R” position. Or an extreme lack of acceleration is observed.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

4. CHECK STALL TEST

Check stall revolution with selector lever in “1” and “R” positions.

Refer to [AT-50, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 6.
- OK in “1” position, NG in “R” position >> GO TO 5.
- NG in both “1” and “R” positions >> GO TO 8.

5. DETECT MALFUNCTIONING ITEM

1. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

2. Check the following items:

- Reverse brake. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace damaged parts.

6. CHECK LINE PRESSURE

Check the line pressure with the engine idling. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 9.
- NG - 1 >> Line pressure high. GO TO 7.
- NG - 2 >> Line pressure low. GO TO 8.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

8. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

9. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 10.
NG >> GO TO 13.

10. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 11.
NG >> Repair or replace damaged parts.

11. CHECK SYMPTOM

Check again. Refer to [AT-54, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 12.

12. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

13. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.43).

OK or NG

OK >> GO TO 11.

NG >> Repair or replace damaged parts.

A

B

AT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00370

Vehicle Does Not Creep Forward In “D” Position

SYMPTOM:

Vehicle does not creep forward when selecting “D” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

4. CHECK STALL TEST

Check stall revolution with selector lever in “D” position. Refer to [AT-50, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 7.

5. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in “D” position. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 8.
- NG - 1 >> Line pressure high. GO TO 6.
- NG - 2 >> Line pressure low. GO TO 7.

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following items:
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 9.
NG >> GO TO 12.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to [AT-54, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 11.

11. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

12. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.43).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037P

Vehicle Cannot Be Started From D1

SYMPTOM:

Vehicle cannot be started from D1 on cruise test - Part 1.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps in "R" position.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-189, "Vehicle Does Not Creep Backward In "R" Position"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> GO TO 3.

3. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to [AT-127, "DTC P1705 THROTTLE POSITION SENSOR"](#) .

OK or NG

OK >> GO TO 4.

NG >> Repair or replace accelerator pedal position (APP) sensor.

4. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 5.

NG >> Refill ATF.

5. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 8.

NG - 1 >> Line pressure high. GO TO 6.

NG - 2 >> Line pressure low. GO TO 7.

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following.

- Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 9.
NG >> GO TO 12.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.23).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) , [AT-57, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 11.

11. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

12. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.23).

OK or NG

- OK >> GO TO 10.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00370

A/T Does Not Shift: D1 → D2

SYMPTOM:

The vehicle does not shift-up from the D1 to D2 gear at the specified speed.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-192, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-194, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> GO TO 3.

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 7.

NG - 1 >> Line pressure high. GO TO 5.

NG - 2 >> Line pressure low. GO TO 6.

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following.

- Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
NG >> Repair or replace damaged parts.

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
NG >> GO TO 11.

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.10).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) , [AT-57, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 10.

10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.10).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037R

A/T Does Not Shift: D2 → D3

SYMPTOM:

The vehicle does not shift-up from D2 to D3 gear at the specified speed.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-192, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-194, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> GO TO 3.

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 7.

NG - 1 >> Line pressure high. GO TO 5.

NG - 2 >> Line pressure low. GO TO 6.

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following.

- Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
NG >> Repair or replace damaged parts.

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
NG >> GO TO 11.

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.11).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) , [AT-57, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 10.

10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.11).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037S

A/T Does Not Shift: D3 → D4

SYMPTOM:

- The vehicle does not shift-up from the D3 to D4 gear at the specified speed.
- The vehicle does not shift-up from the D3 to D4 gear unless A/T is warmed up.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-192, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-194, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> GO TO 3.

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 7.

NG - 1 >> Line pressure high. GO TO 5.

NG - 2 >> Line pressure low. GO TO 6.

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following.

- Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
NG >> Repair or replace damaged parts.

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
NG >> GO TO 11.

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.12).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) , [AT-57, "Cruise Test - Part 2"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 10.

10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.12).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037T

A/T Does Not Shift: D4 → D5

SYMPTOM:

- The vehicle does not shift-up from the D4 to D5 gear at the specified speed.
- The vehicle does not shift-up from the D4 to D5 gear unless A/T is warmed up.

DIAGNOSTIC PROCEDURE

1. CONFIRM THE SYMPTOM

Check if vehicle creeps forward in "D" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> Refer to [AT-192, "Vehicle Does Not Creep Forward In "D" Position"](#) , [AT-194, "Vehicle Cannot Be Started From D1"](#) .

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> GO TO 3.

3. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

OK >> GO TO 4.

NG >> Refill ATF.

4. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

OK >> GO TO 7.

NG - 1 >> Line pressure high. GO TO 5.

NG - 2 >> Line pressure low. GO TO 6.

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .

2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .

3. Check the following.

- Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

6. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
NG >> Repair or replace damaged parts.

7. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 8.
NG >> GO TO 11.

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.13).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

9. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 10.

10. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

11. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.13).

OK or NG

- OK >> GO TO 9.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037U

A/T Does Not Perform Lock-up

SYMPTOM:

A/T does not perform lock-up at the specified speed.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Refill ATF.

3. CHECK LINE PRESSURE

Check line pressure at the engine stall point. Refer to [AT-51, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG - 1 >> Line pressure high. GO TO 4.
- NG - 2 >> Line pressure low. GO TO 5.

4. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

5. DETECT MALFUNCTIONING ITEM

1. Check control valve with TCM. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Disassemble A/T. Refer to [AT-263, "DISASSEMBLY"](#) .
3. Check the following.
 - Oil pump assembly. Refer to [AT-280, "Oil Pump"](#) .
 - Power train system. Refer to [AT-263, "DISASSEMBLY"](#) .
 - Transmission case. Refer to [AT-263, "DISASSEMBLY"](#) .

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

6. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 7.
NG >> GO TO 10.

7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.24).

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

8. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 9.

9. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

10. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.24).

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace damaged parts.

A
B
AT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037V

A/T Does Not Hold Lock-up Condition

SYMPTOM:

The lock-up condition cannot be maintained for more than 30 seconds.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Refill ATF.

3. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 7.

4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.25).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.25).

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

A

B

AT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037W

Lock-up Is Not Released

SYMPTOM:

The lock-up condition cannot be cancelled even after releasing the accelerator pedal.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 3.

3. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037X

Engine Speed Does Not Return to Idle

SYMPTOM:

When a shift-down is performed, the engine speed does not smoothly return to the idling speed.

DIAGNOSTIC PROCEDURE

1. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Refill ATF.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 3.

3. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 7.

4. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.65).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK SYMPTOM

Check again. Refer to [AT-55, "Cruise Test - Part 1"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.65).

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037Y

A/T Does Not Shift: 5th gear → 4th gear

SYMPTOM:

When shifted from D5 to D4 position, does not downshift from 5th to 4th gears.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

Check overdrive control switch. Refer to [AT-178, "OVERDRIVE CONTROL SWITCH"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

4. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 9.

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.14).

OK or NG

- OK >> GO TO 7.
- NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-58, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 8.

TROUBLE DIAGNOSIS FOR SYMPTOMS

8. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.14).

OK or NG

- OK >> GO TO 7.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0037Z

A/T Does Not Shift: 4th gear → 3rd gear

SYMPTOM:

When shifted from D4 to 3₃ position, does not downshift from 4th to 3rd gears.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Refill ATF.

3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

4. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 8.

5. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.15).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again. Refer to [AT-58, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.15).

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00380

A/T Does Not Shift: 3rd gear → 2nd gear

SYMPTOM:

When shifted from 3₃ to 2₂ position, does not downshift from 3rd to 2nd gears.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
NO >> GO TO 2.

2. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 3.
NG >> Refill ATF.

3. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

- OK >> GO TO 4.
NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

4. CHECK A/T FLUID CONDITION

- Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
- Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

- OK >> GO TO 5.
NG >> GO TO 8.

5. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.16).

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again. Refer to [AT-58, "Cruise Test - Part 3"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 7.

TROUBLE DIAGNOSIS FOR SYMPTOMS

7. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

8. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.16).

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00381

A/T Does Not Shift: 2nd gear → 1st gear

SYMPTOM:

When shifted from 2nd to 1st position, does not downshift from 2nd to 1st gears.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- NO >> GO TO 2.

2. CHECK 1ST POSITION SWITCH CIRCUIT

With CONSULT-II

1. Turn ignition switch "ON".
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
3. Read out "1 POSITION SW" switch moving selector lever to each position.

Monitor item	Condition	Display value
1 POSITION SW	When setting the selector lever to "1" position.	ON
	When setting selector lever to other positions.	OFF

DATA MONITOR	
MONITORING	
1 POSITION SW	OFF
OD CONT SW	ON
POWERSHIFT SW	OFF
HOLD SW	OFF
MANU MODE SW	OFF

LCIA0339E

Without CONSULT-II

1. Turn ignition switch "ON". (Do not start engine)
2. Check voltage between A/T device harness connector terminal and ground.

Item	Connector No.	Terminal No.	Condition	Data (Approx.)
1st position switch	M156	9 - Ground	When setting the selector lever to "1" position.	0V
			When setting selector lever to other positions.	Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill ATF.

TROUBLE DIAGNOSIS FOR SYMPTOMS

4. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 5.

NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

OK >> GO TO 6.

NG >> GO TO 9.

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.17).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-58, "Cruise Test - Part 3"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 8.

8. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.17).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00382

Vehicle Does Not Decelerate By Engine Brake

SYMPTOM:

No engine brake is applied when the gear is shifted from the 22 to 11 .

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis.

Is any malfunction detected by self-diagnostic results?

- YES >> Check the malfunctioning system. Refer to [AT-87, "SELF-DIAGNOSTIC RESULT MODE"](#) .
 NO >> GO TO 2.

2. CHECK 1ST POSITION SWITCH CIRCUIT

With CONSULT-II

- Turn ignition switch "ON".
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out "1 POSITION SW" moving switch selector lever to each position.

Monitor item	Condition	Display value
1 POSITION SW	When setting the selector lever to "1" position.	ON
	When setting selector lever to other positions.	OFF

DATA MONITOR	
MONITORING	
1 POSITION SW	OFF
OD CONT SW	ON
POWERSHIFT SW	OFF
HOLD SW	OFF
MANU MODE SW	OFF

LCIA0339E

Without CONSULT-II

- Turn ignition switch "ON". (Do not start engine)
- Check voltage between A/T device harness connector terminal and ground.

Item	Connector No.	Terminal No.	Condition	Data (Approx.)
1st position switch	M156	9 - Ground	When setting the selector lever to "1" position.	0V
			When setting selector lever to other positions.	Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace damaged parts.

3. CHECK A/T FLUID LEVEL

Check the A/T fluid level. Refer to [AT-13, "Checking A/T Fluid"](#) .

OK or NG

- OK >> GO TO 4.
 NG >> Refill ATF.

TROUBLE DIAGNOSIS FOR SYMPTOMS

4. CHECK CONTROL CABLE

Check the control cable.

- Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 5.

NG >> Adjust control cable. Refer to [AT-222, "Adjustment of A/T Position"](#) .

5. CHECK A/T FLUID CONDITION

1. Remove oil pan. Refer to [AT-233, "Control Valve With TCM and A/T Fluid Temperature Sensor 2"](#) .
2. Check A/T fluid condition. Refer to [AT-50, "Fluid Condition Check"](#) .

OK or NG

OK >> GO TO 6.

NG >> GO TO 9.

6. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.53).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

7. CHECK SYMPTOM

Check again. Refer to [AT-58, "Cruise Test - Part 3"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 8.

8. PERFORM TCM INSPECTION

1. Perform TCM input/output signals inspection. Refer to [AT-83, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, recheck A/T assembly harness connector terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

- Check the malfunction items. If any items are damaged, repair or replace damaged parts. Refer to [AT-61, "Symptom Chart"](#) (Symptom No.53).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

SHIFT CONTROL SYSTEM


SHIFT CONTROL SYSTEM

PF3:34901

Control Device Removal and Installation

UCS00388

SEC. 349

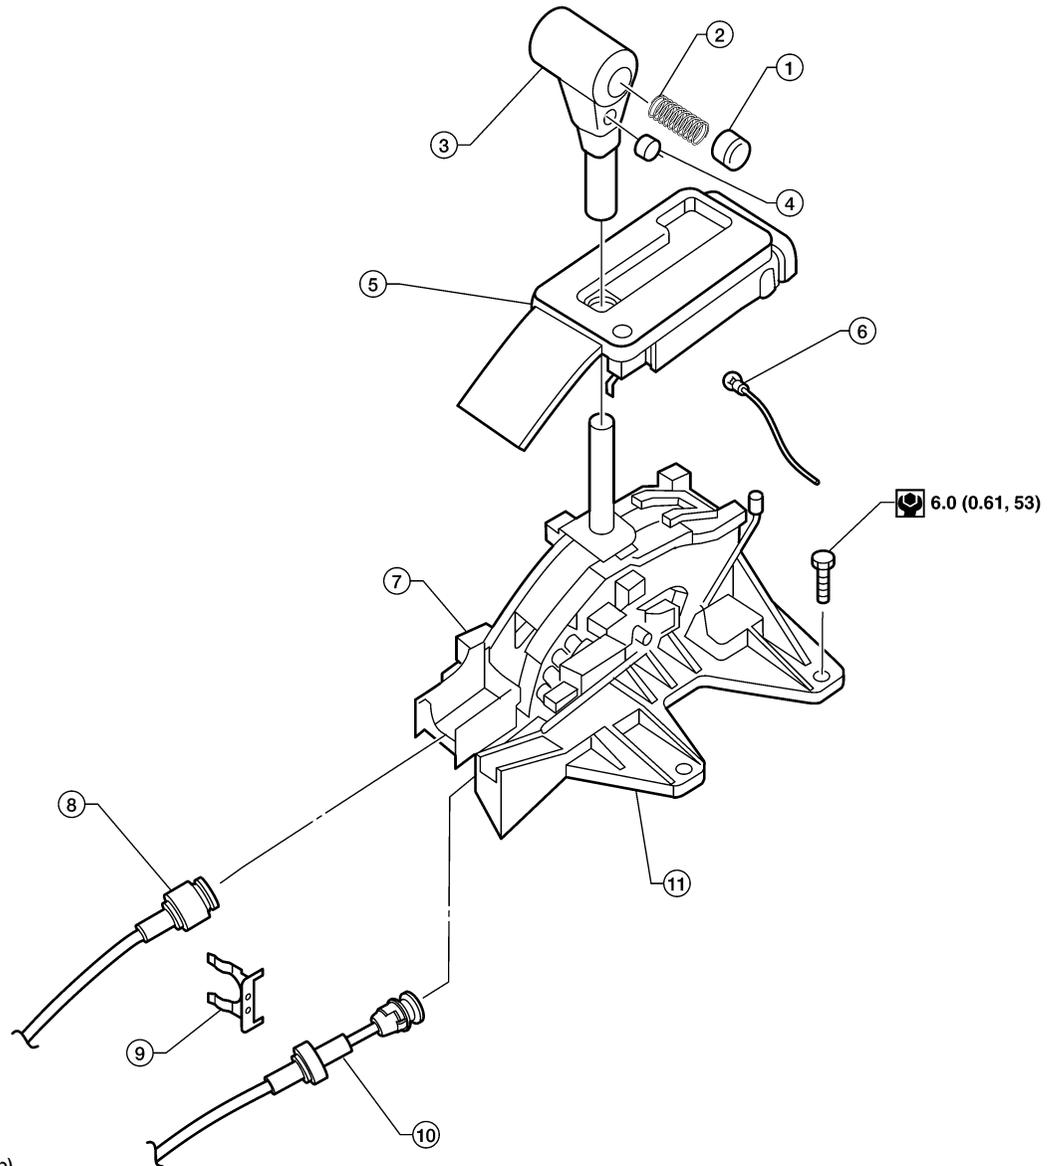

 : N·m (kg-m, in-lb)

WCIA0503E

- | | | |
|---------------------------------|---------------------------------|-------------------|
| 1. Selector button | 2. Selector spring | 3. Selector lever |
| 4. Overdrive control switch | 5. Position indicator | 6. Position lamp |
| 7. A/T device harness connector | 8. A/T selector control cable | 9. Lock plate |
| 10. A/T key interlock cable | 11. A/T control device assembly | |

A
B
AT
D
E
F
G
H
I
J
K
L
M

SHIFT CONTROL SYSTEM

REMOVAL

1. Remove the A/T finisher. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
2. Disconnect the following from the A/T control device assembly.
 - A/T selector control cable
 - A/T key interlock cable
 - A/T device connector
3. Remove the A/T control device assembly.


INSTALLATION

Installation is in reverse order of removal.

Adjustment of A/T Position

1. Loosen nut of control cable.
2. Place the manual lever and selector lever in "P" position.
3. Push the control cable in the direction shown with a force of 9.8 N (1kg, 2.2 lb), release it. This is in the natural state, tighten control cable nut to specifications.

Control cable nut : 14.5 N·m (1.5 kg·m, 11 ft·lb)

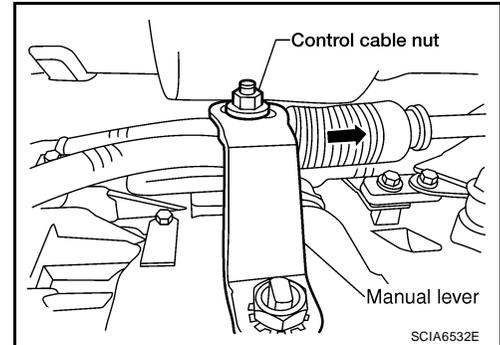

UCS00389

UCS0038A

Checking of A/T Position

With the selector lever in the "P" position, turn the ignition switch to the ON position with the engine OFF. Confirm that the following conditions apply.

- The selector lever can be shifted from the "P" position when the brake pedal is depressed.
- The selector lever stops at each position with the feel of engagement when it is moved through all the positions.
- There is no excessive effort, sticking, noise or rattle.
- The actual position of the selector lever matches the position shown by the shift position indicator and the A/T body.
- The back-up lamps illuminate only when the selector lever is placed in the "R" position.
- The back-up lamps do not illuminate when the selector lever is pushed against the "R" position when in the "P" or "N" position.
- The engine can only be started with the selector lever in the "P" and "N" positions.
- The A/T is locked completely when in the "P" position.

A/T SHIFT LOCK SYSTEM

A/T SHIFT LOCK SYSTEM

PFP:34950


Description

UCS00383

- The mechanical key interlock mechanism also operates as a shift lock:
With the ignition switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.
With the key removed, the selector lever cannot be shifted from "P" to any other position.
The key cannot be removed unless the selector lever is placed in "P" position.
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder, respectively.

Shift Lock System Electrical Parts Location

UCS00384


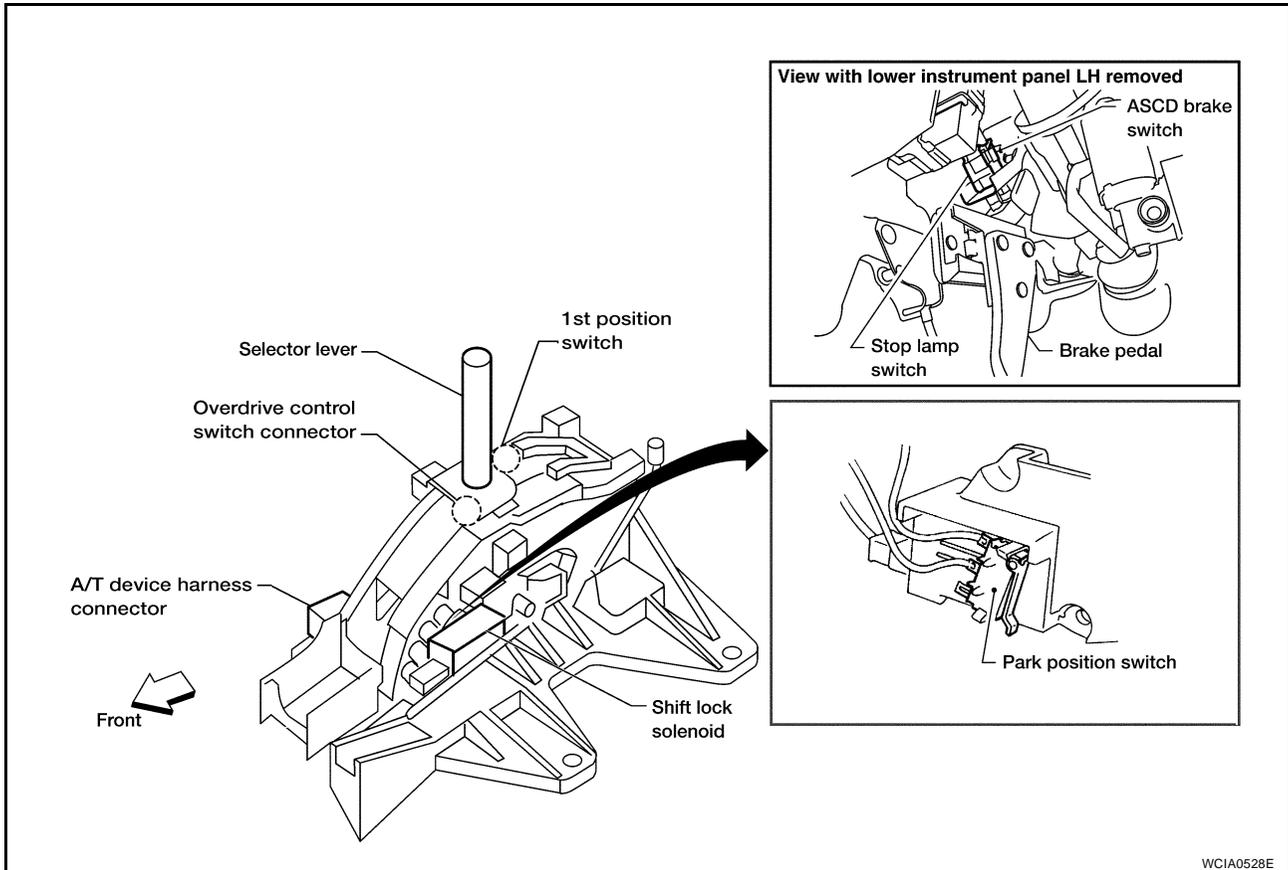


A/T SHIFT LOCK SYSTEM

UCS00385

Wiring Diagram — A/T — SHIFT

 AT-SHIFT-01

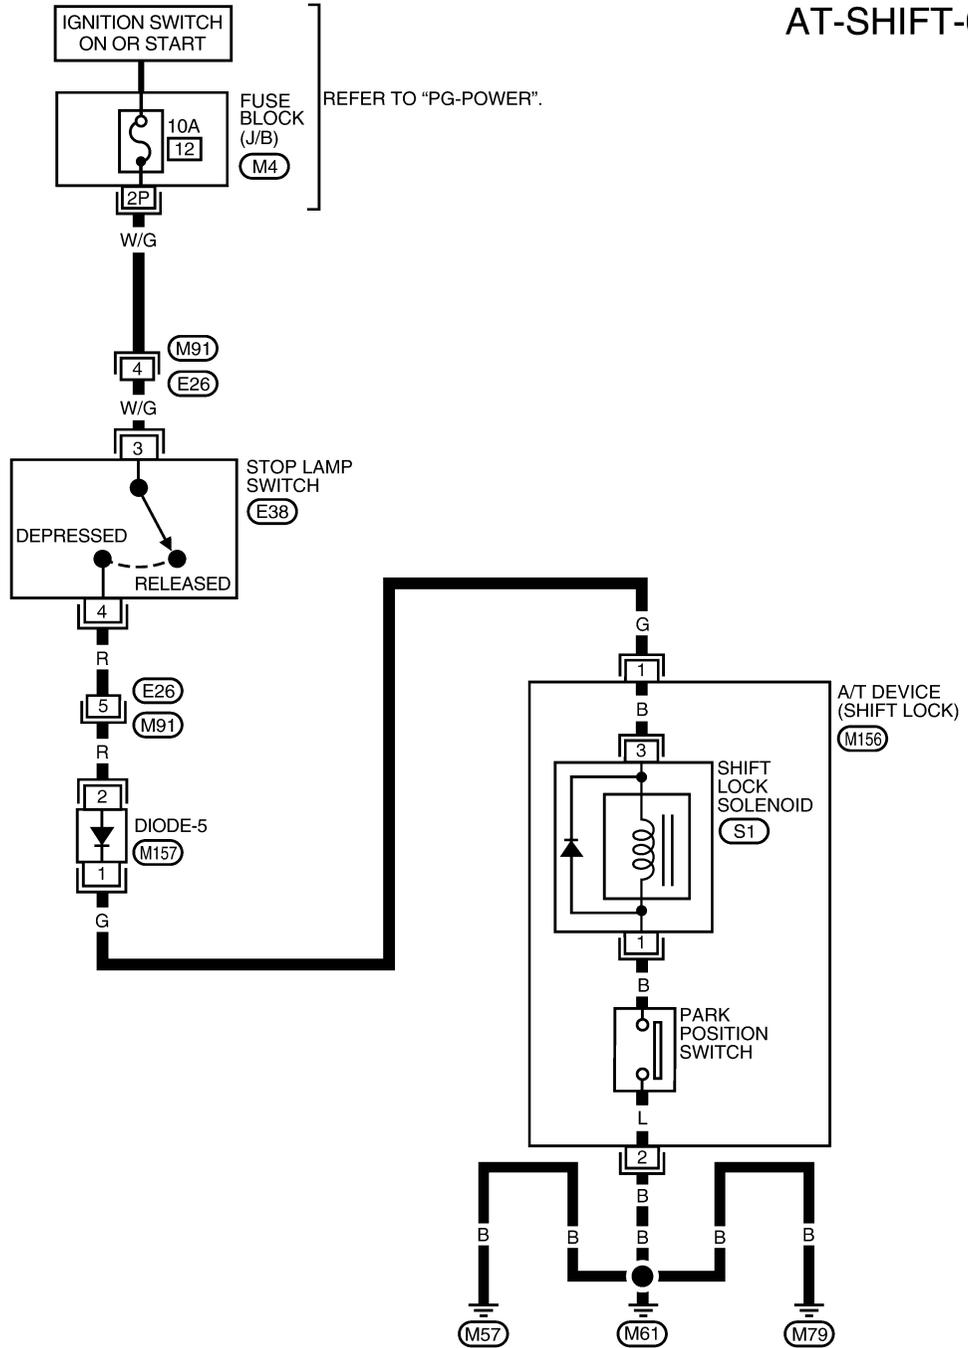

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BCWA0390E

A/T SHIFT LOCK SYSTEM

UCS0030P

Diagnostic Procedure

SYMPTOM 1:

- Selector lever cannot be moved from “P” position with key in ON position and brake pedal applied.
- Selector lever can be moved from “P” position with key in ON position and brake pedal released.
- Selector lever can be moved from “P” position when key is removed from key cylinder.

SYMPTOM 2:

- Ignition key cannot be removed when selector lever is set to “P” position.
- Ignition key can be removed when selector lever is set to any position except “P”.

1. CHECK KEY INTERLOCK CABLE

Check key interlock cable for damage.

OK or NG

OK >> GO TO 2.

NG >> Repair key interlock cable. Refer to [AT-228, "KEY INTERLOCK CABLE"](#) .

2. CHECK SELECTOR LEVER POSITION

Check selector lever position for damage. Refer to [AT-222, "Checking of A/T Position"](#) .

OK or NG

OK >> GO TO 3.

NG >> Check selector lever. Refer to [AT-222, "Adjustment of A/T Position"](#) .

3. CHECK INPUT SIGNAL A/T DEVICE

1. Turn ignition switch “OFF”.
2. Disconnect A/T device harness connector.
3. Check voltage between A/T device harness connector M156 terminal 1 and ground.

Voltage


Depressed brake pedal :Battery voltage

Released brake pedal :Approx. 0V

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

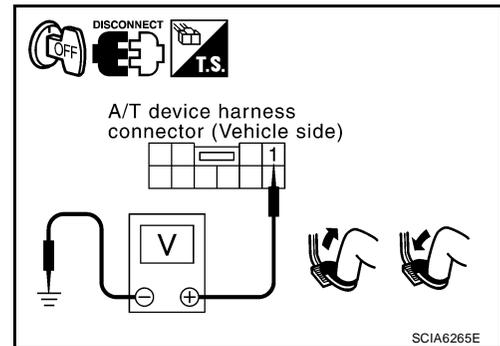


A/T SHIFT LOCK SYSTEM

4. DETECT MALFUNCTIONING ITEM

Check the following.

1. Harness for short or open between ignition switch and stop lamp switch harness connector E38 terminal 3.
 2. Harness for short or open between stop lamp switch harness connector E38 terminal 4 and A/T device harness connector M156 terminal 1.
 3. 10A fuse. [No.12, located in the fuse block (J/B)]
 4. Stop lamp switch.
- Check continuity between stop lamp switch harness connector E38 terminals 3 and 4.

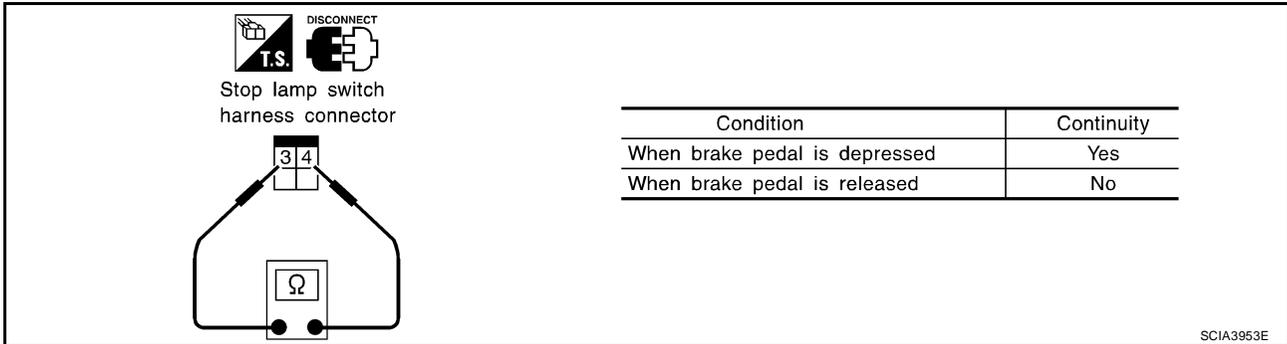

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#) .

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

5. CHECK GROUND CIRCUIT


1. Turn ignition switch "OFF".
2. Disconnect A/T device harness connector.
3. Check continuity between A/T device harness connector M156 terminal 2 and ground.

Continuity should exist.

If OK, check harness for short to ground and short to power.

OK or NG


- OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

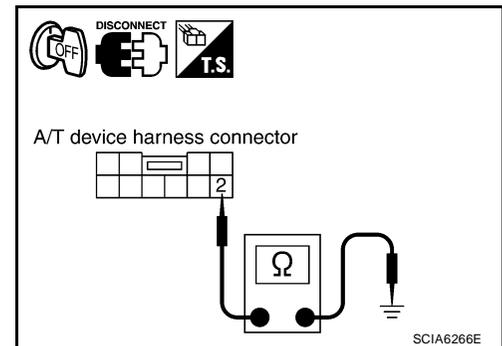

A/T SHIFT LOCK SYSTEM

6. CHECK PARK POSITION SWITCH AND SHIFT LOCK SOLENOID CIRCUIT

Check continuity between A/T device harness connector M156 terminals 1 and 2.

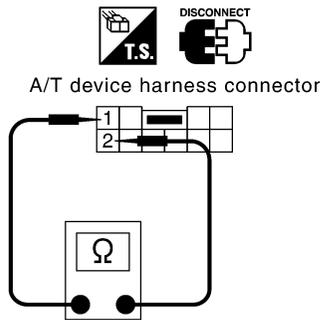

A/T device harness connector

Condition	Continuity
When selector lever is set in "P" position and selector lever button is released	Yes
Except above	No

SCIA6267E

OK or NG

OK >> **INSPECTION END**

NG >> ● Replace park position switch or shift lock solenoid.

- Repair open circuit or short to ground or short to power in harness or connectors.

A
B
AT
D
E
F
G
H
I
J
K
L
M


KEY INTERLOCK CABLE

KEY INTERLOCK CABLE

PFP:34908

Components

UCS0040R

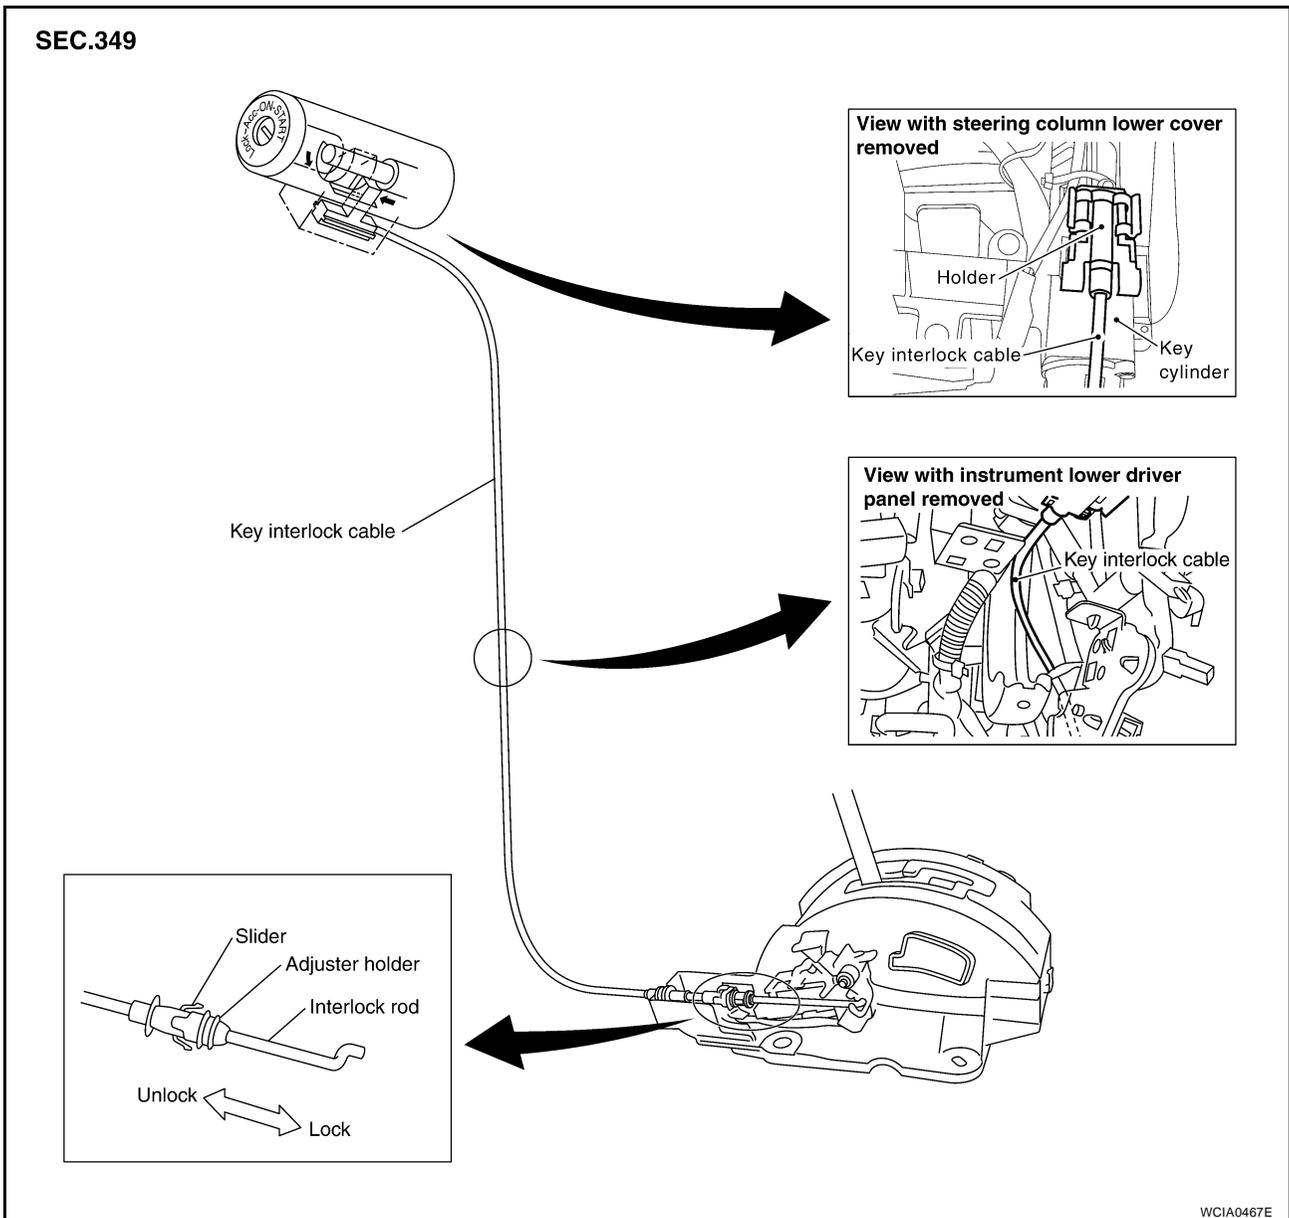

CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions. If casing cap can be removed with an external load of less than 39 N (4.0 kg, 8.8 lb), replace key interlock cable with new one.


KEY INTERLOCK CABLE

UCS0040S



Removal and Installation

REMOVAL

1. Unlock slider by squeezing lock tabs on slider from adjuster holder.
2. Remove casing cap from bracket of control device assembly and remove interlock rod from adjuster holder.

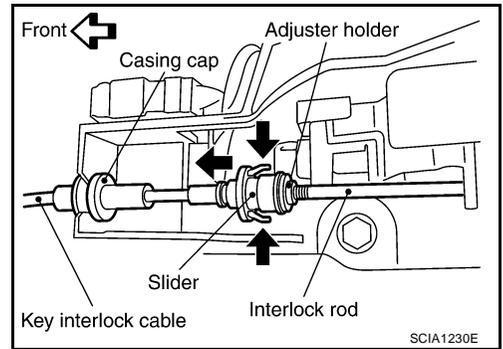

3. Remove holder from key cylinder and remove key interlock cable.

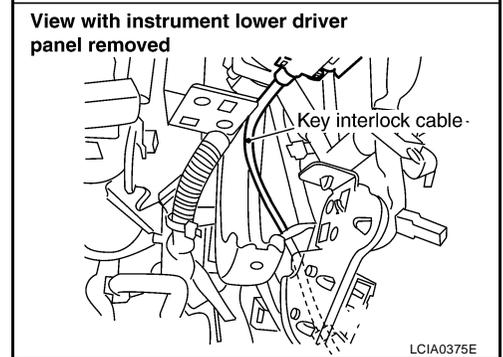
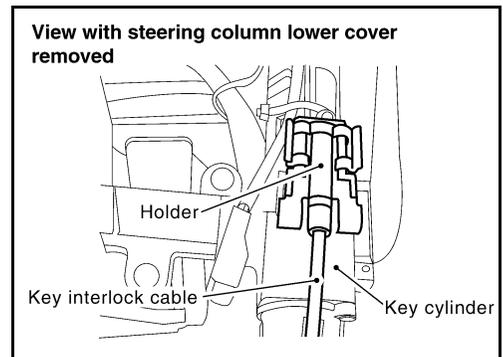


A
B
AT
D
E
F
G
H
I
J
K
L
M


KEY INTERLOCK CABLE

INSTALLATION

1. Set key interlock cable to key cylinder and install holder.
2. Turn ignition key to lock position.
3. Set selector lever to "P" position.

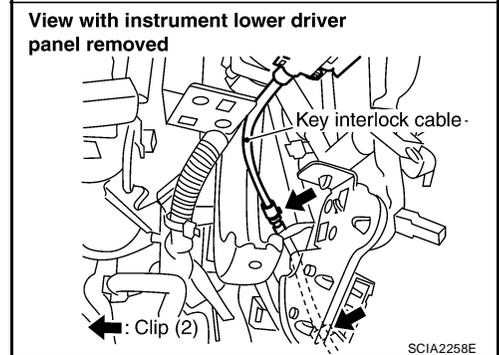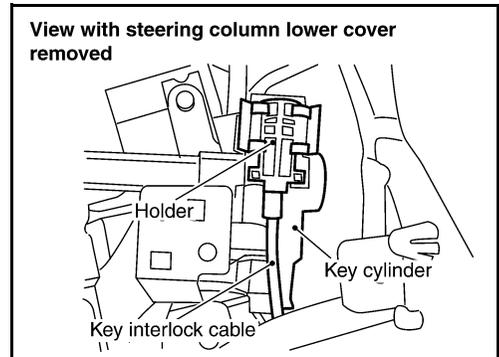

4. Insert interlock rod into adjuster holder.
5. Install casing cap to bracket.
6. Move slider in order to secure adjuster holder to interlock rod.

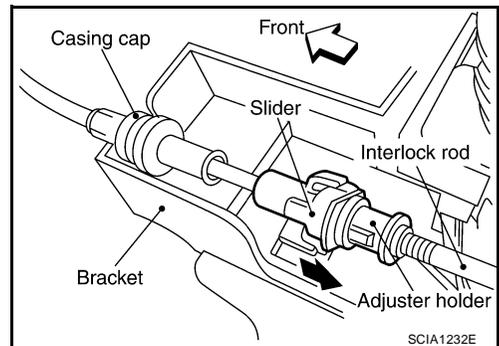

ON-VEHICLE SERVICE


PFP:00000

Oil Pan REMOVAL AND INSTALLATION

UCS0038B

Removal

1. Drain A/T fluid. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).
2. Remove oil pan and gasket.

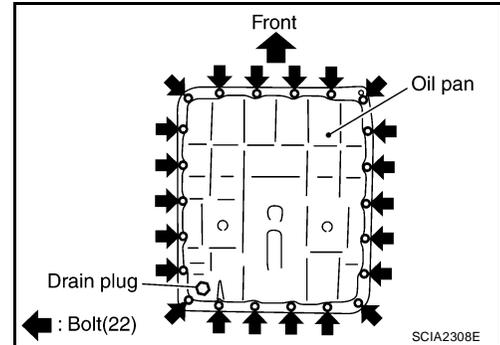


3. Check for foreign materials in oil pan to help determine cause of malfunction. If the A/T fluid is very dark, has some burned smell, or contains foreign particles then friction material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

CAUTION:


If friction material is detected, flush the transmission cooler after repair. Refer to [AT-13, "A/T Fluid Cooler Cleaning"](#).

4. Remove magnets from oil pan.

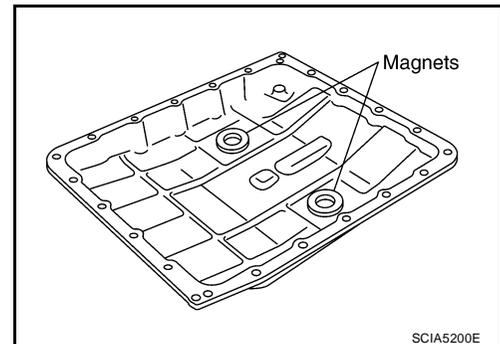

Installation

1. Install the oil pan magnets as shown.

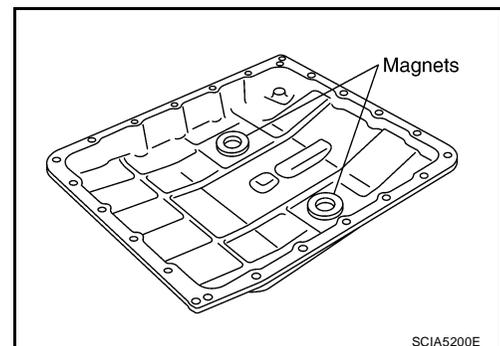


A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE

2. Install the oil pan and new oil pan gasket.


CAUTION:

- Be sure the oil drain plug is located to the rear of the transmission assembly.
- Before installing oil pan bolts, remove any traces of old sealant from the sealing surfaces and threaded holes.
- Do not reuse old gasket, replace with a new one.
- Always replace the oil pan bolts as they are self-sealing.
- Partially install the oil pan bolts in a criss-cross pattern to prevent dislocation of the gasket.

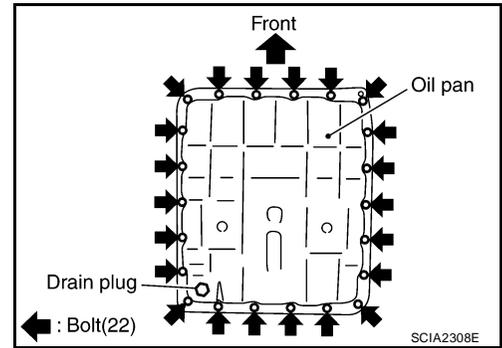

3. Tighten oil pan bolts in numerical order as shown.

Oil pan bolts : 7.9 N-m (0.81 kg-m, 70 in-lb)

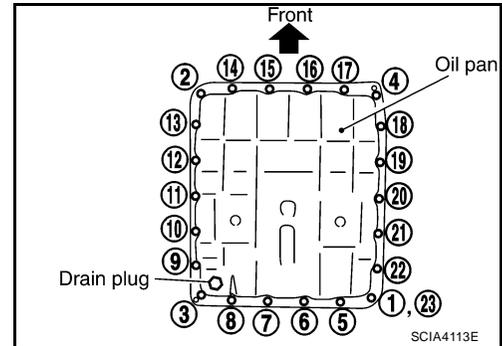

4. Install drain plug to oil pan.

CAUTION:

Do not reuse old drain plug gasket replace with a new one.

Drain plug : 34 N-m (3.5 kg-m, 25 ft-lb)


5. Refill the A/T with fluid and check for fluid leakage. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).

ON-VEHICLE SERVICE

UCS0038C

Control Valve With TCM and A/T Fluid Temperature Sensor 2 COMPONENTS

SEC.313 · 314 · 315 · 316 · 317 · 319

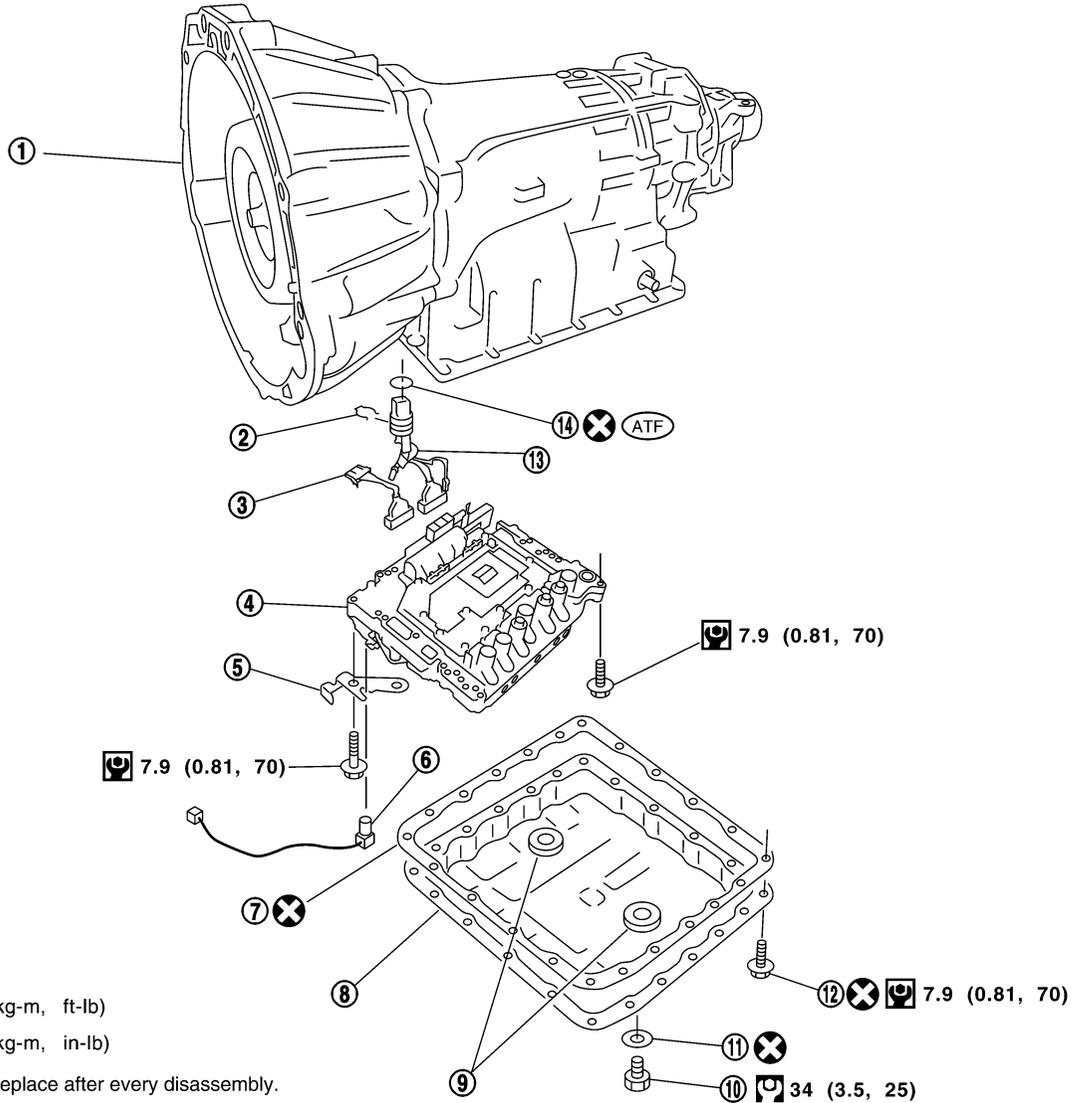

SCIA5478E


- | | | |
|----------------------------|-----------------------|-----------------------------------|
| 1. Transmission | 2. Snap ring | 3. Sub-harness |
| 4. Control valve with TCM | 5. Bracket | 6. A/T fluid temperature sensor 2 |
| 7. Oil pan gasket | 8. Oil pan | 9. Magnet |
| 10. Drain plug | 11. Drain plug gasket | 12. Oil pan bolt |
| 13. Terminal cord assembly | 14. O-ring | |

ON-VEHICLE SERVICE

CONTROL VALVE WITH TCM REMOVAL AND INSTALLATION


Removal

1. Disconnect negative battery terminal.
2. Drain A/T fluid. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).
3. Disconnect A/T assembly harness connector.
4. Remove snap ring from A/T assembly harness connector.

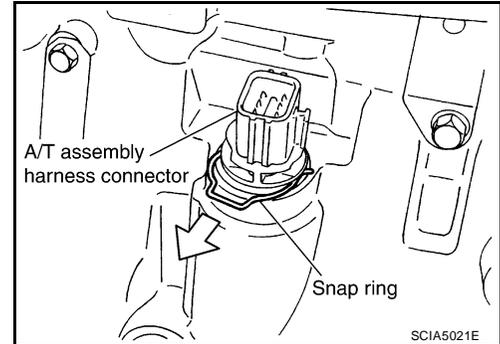


5. Push A/T assembly harness connector.

CAUTION:
Be careful not to damage connector.

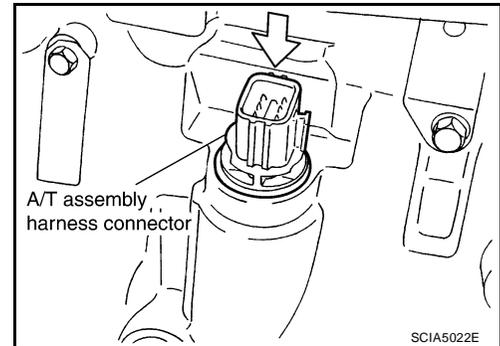


6. Remove oil pan and oil pan gasket. Refer to [AT-231, "Removal"](#).
7. Straighten the terminal clip to free the terminal cord assembly for A/T fluid temperature sensor 2 harness.
8. Disconnect A/T fluid temperature sensor 2 connector.

CAUTION:
Be careful not to damage connector.

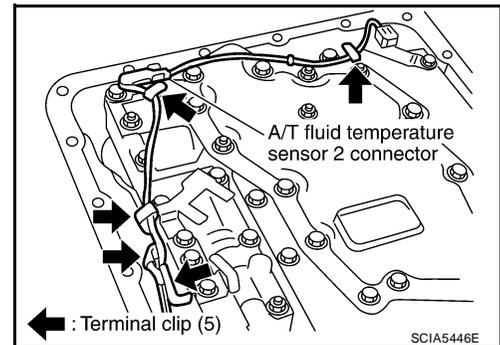

9. Straighten terminal clips to free revolution sensor harness.
10. Disconnect revolution sensor connector.


CAUTION:
Be careful not to damage connector.

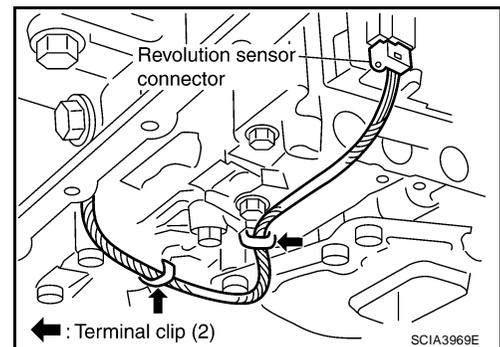

ON-VEHICLE SERVICE

11. Remove bolts A, B and C from control valve with TCM.


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

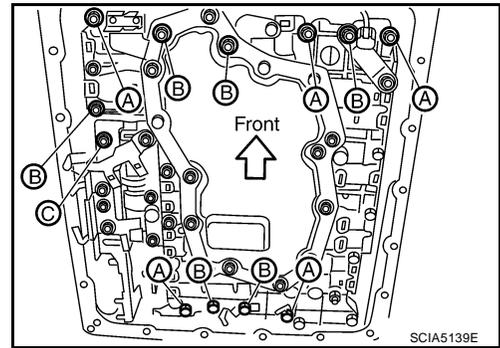


12. Remove control valve with TCM from transmission case.

CAUTION:


When removing, be careful with the manual valve notch and manual plate height. Remove it vertically.

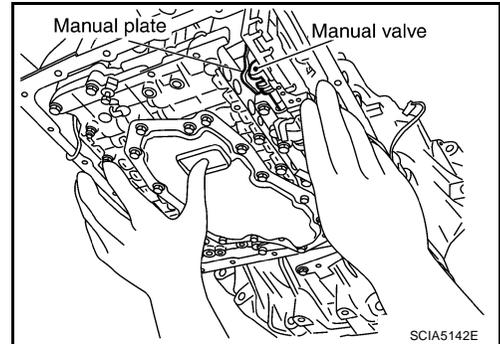


13. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

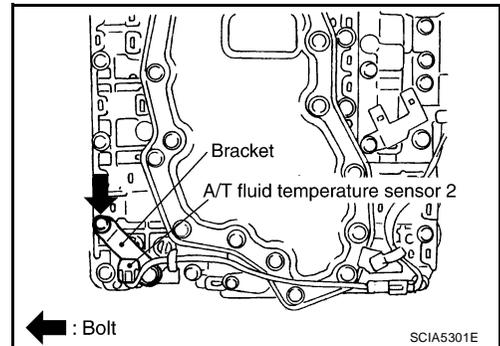

14. Remove bracket from A/T fluid temperature sensor 2.

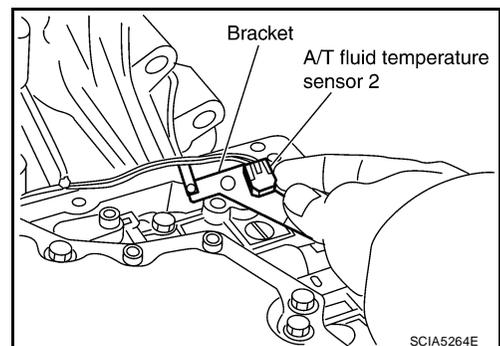

15. Remove O-ring from A/T assembly harness connector.

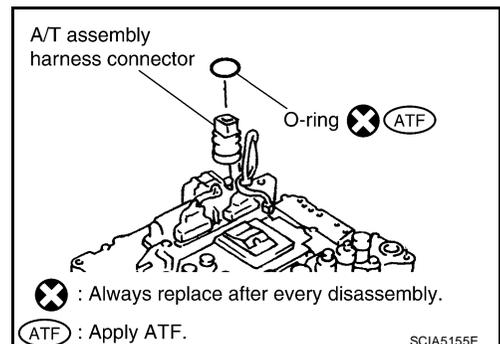


A
B
AT
D
E
F
G
H
I
J
K
L
M


ON-VEHICLE SERVICE

16. Disconnect TCM connectors.

CAUTION:
Be careful not to damage connectors.

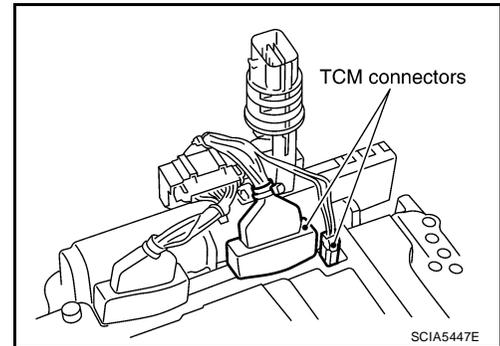


17. Remove A/T assembly harness connector from control valve with TCM using suitable tool.

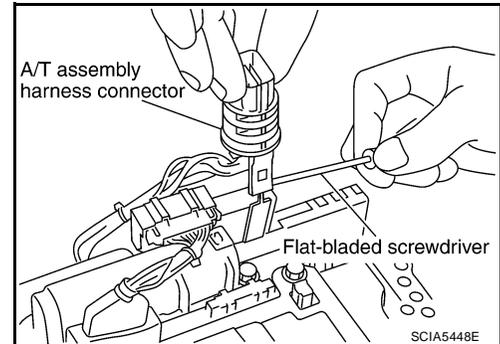

18. Disconnect TCM connector and park/neutral position switch connector


CAUTION:
Be careful not to damage connectors.

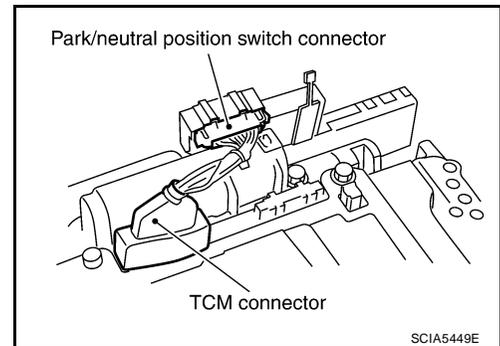


ON-VEHICLE SERVICE

Installation


1. Connect TCM connector and park/neutral position switch connector.

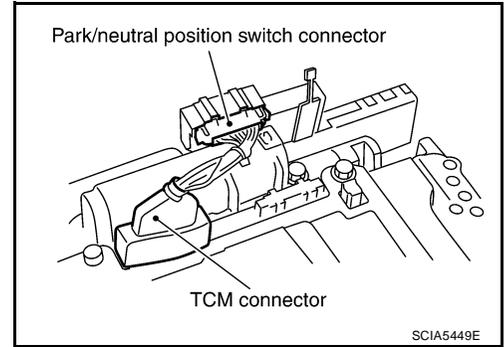

2. Install A/T assembly harness connector to control valve with TCM.

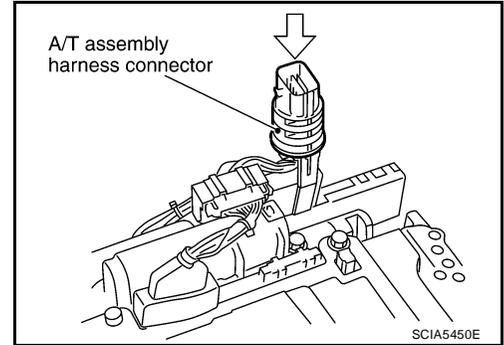


3. Connect TCM connector.

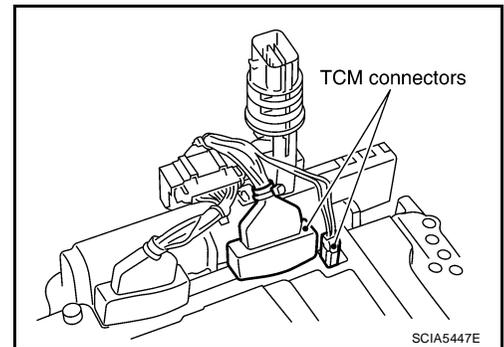

4. Install new O-ring in A/T assembly harness connector.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.

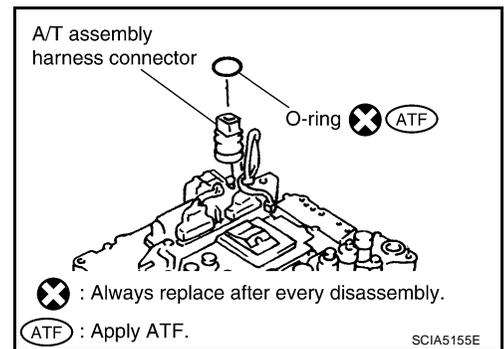

A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE


5. Install A/T fluid temperature sensor 2 to bracket.

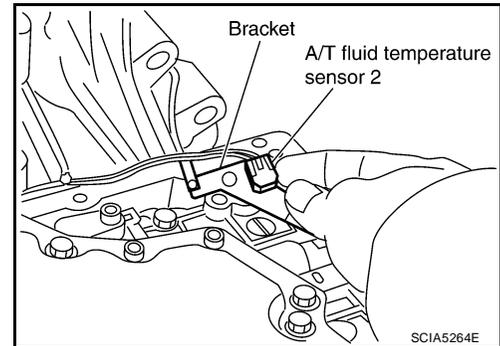

6. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM. Tighten A/T fluid temperature sensor 2 bolt to the specified torque. Refer to [AT-233, "COMPONENTS"](#).

CAUTION:


Adjust bolt hole of bracket to bolt hole of control valve with TCM.

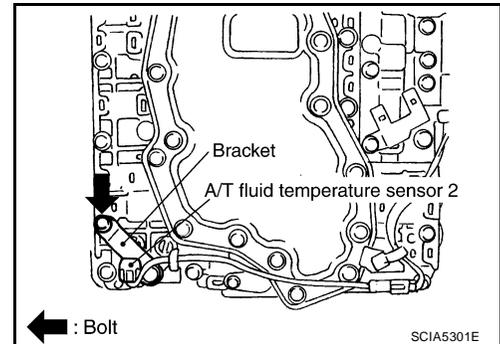


7. Install control valve with TCM in transmission case.

CAUTION:

- Make sure that turbine revolution sensor is securely installed into turbine revolution sensor hole.
- Hang down revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

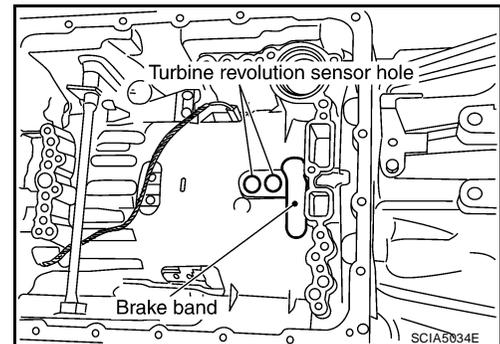


- Assemble it so that manual valve cutout is engaged with manual plate projection.

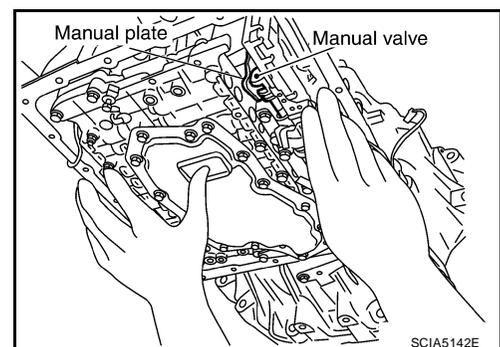


ON-VEHICLE SERVICE

8. Install bolts A, B and C in control valve with TCM.


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

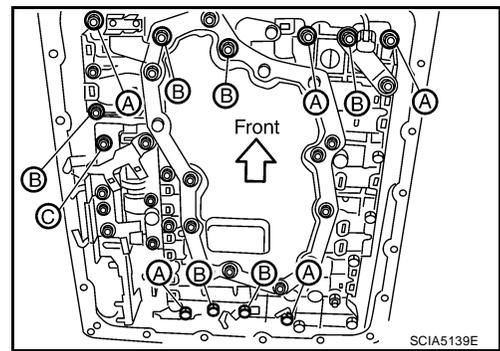


9. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3). Then tighten other bolts.
10. Tighten control valve with TCM bolts to the specified torque. Refer to [AT-233, "COMPONENTS"](#).

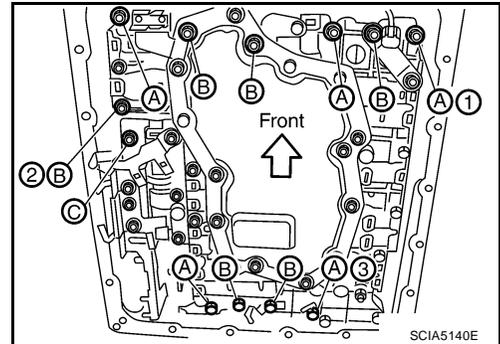

11. Connect A/T fluid temperature sensor 2 connector.
12. Securely fasten terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips.

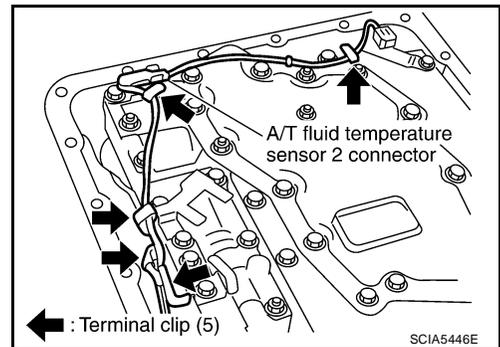

13. Connect revolution sensor connector.
14. Securely fasten revolution sensor harness with terminal clips.

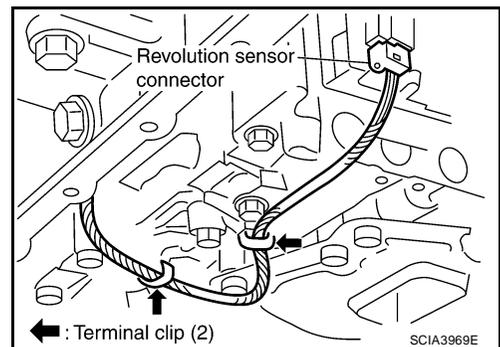

15. Install oil pan to transmission case. Refer to [AT-231, "Installation"](#).


A
B
AT
D
E
F
G
H
I
J
K
L
M

ON-VEHICLE SERVICE


16. Pull up A/T assembly harness connector.

CAUTION:

Be careful not to damage connector.

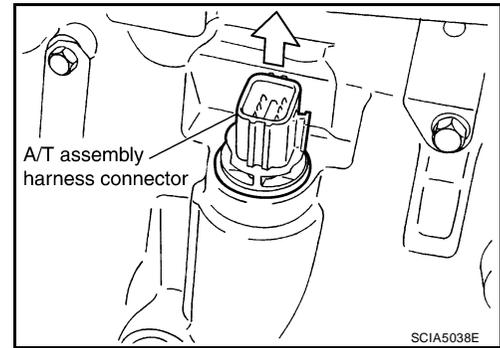

17. Install snap ring to A/T assembly harness connector.
18. Connect A/T assembly harness connector.
19. Connect the negative battery terminal.
20. Refill the A/T with fluid and check for fluid leakage. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).

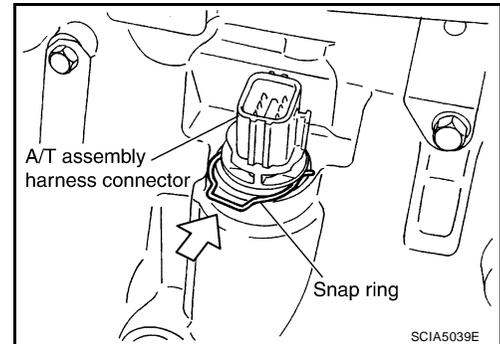


A/T FLUID TEMPERATURE SENSOR 2 REMOVAL AND INSTALLATION

Removal


1. Disconnect negative battery terminal.
2. Drain A/T fluid. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).
3. Remove oil pan and oil pan gasket. Refer to [AT-231, "Removal"](#).
4. Straighten terminal clip to free A/T fluid temperature sensor 2 harness.
5. Disconnect A/T fluid temperature sensor 2 connector.

CAUTION:

Be careful not to damage connector.

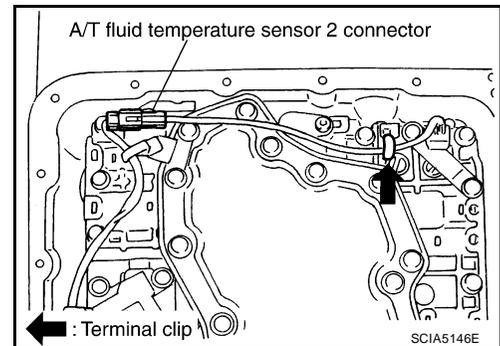


6. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

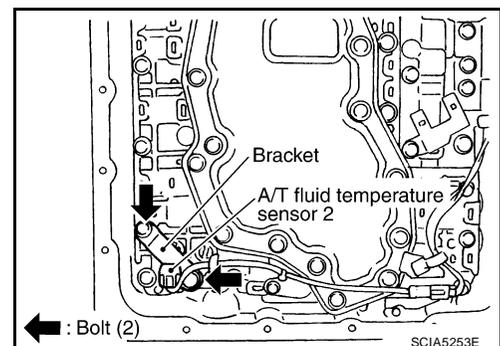


ON-VEHICLE SERVICE

7. Remove bracket from A/T fluid temperature sensor 2.

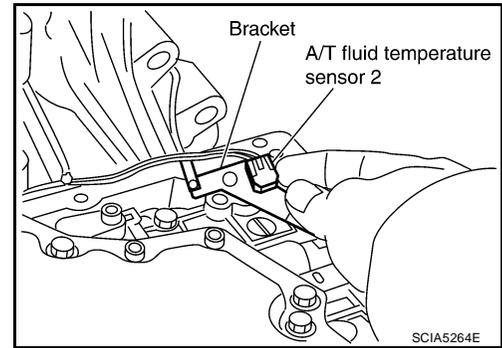

Installation


1. Install A/T fluid temperature sensor 2 to bracket.

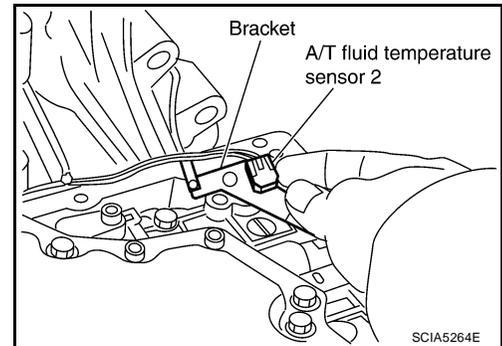


2. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM. Tighten A/T fluid temperature sensor 2 bolt to the specified torque. Refer to [AT-233, "COMPONENTS"](#).

CAUTION:

Adjust bolt hole of bracket to bolt hole of control valve with TCM.

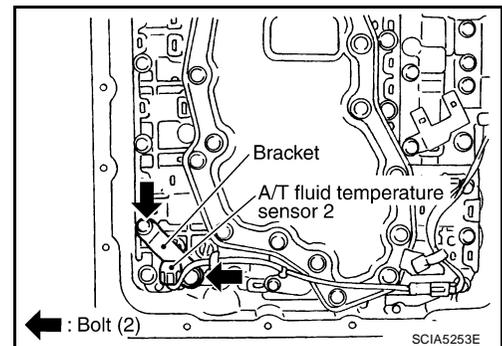

3. Connect A/T fluid temperature sensor 2 connector.
4. Securely fasten A/T temperature sensor 2 harness with terminal clip.

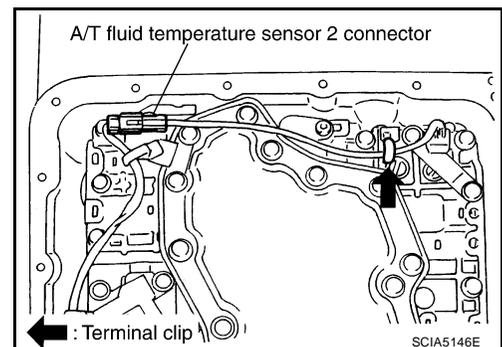

5. Install oil pan to transmission case. Refer to [AT-231, "Installation"](#).
6. Connect the negative battery terminal.
7. Refill the A/T with fluid and check for fluid leakage. Refer to [MA-24, "Changing the Automatic Transmission Fluid \(ATF\)"](#).


Rear Oil Seal REMOVAL AND INSTALLATION

Removal

1. Remove rear propeller shaft. Refer to [PR-10, "Removal and Installation"](#).
2. Remove transfer from transmission (4WD models). Refer to [TF-144, "Removal and Installation"](#) (ATX14B) or [TF-274, "Removal and Installation"](#) (TX15B).
3. Remove rear oil seal using suitable tool.

CAUTION:

Be careful not to scratch rear extension assembly (2WD models) or adapter case assembly (4WD models).

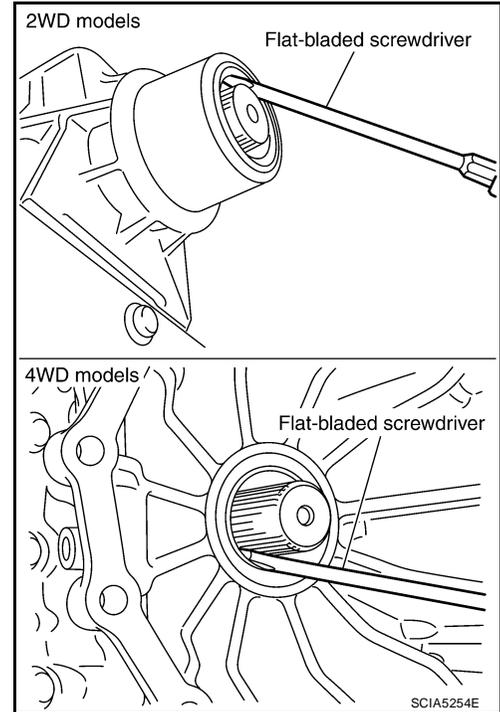

Installation


1. Install new rear oil seal into the extension case (2WD models) or adapter case (4WD models) until it is flush with component face, using suitable tool or Tool.

Tool number : ST33400001 (J-26082)

CAUTION:

- Apply ATF to rear oil seal.
- Do not reuse rear oil seal.

2. Install transfer to transmission (4WD models). Refer to [TF-144, "Removal and Installation"](#) (ATX14B) or [TF-274, "Removal and Installation"](#) (TX15B).
3. Install rear propeller shaft. Refer to [PR-10, "Removal and Installation"](#).
4. Check the A/T fluid level and for fluid leakage. Refer to [MA-22, "Checking the Automatic Transmission Fluid \(ATF\)"](#).

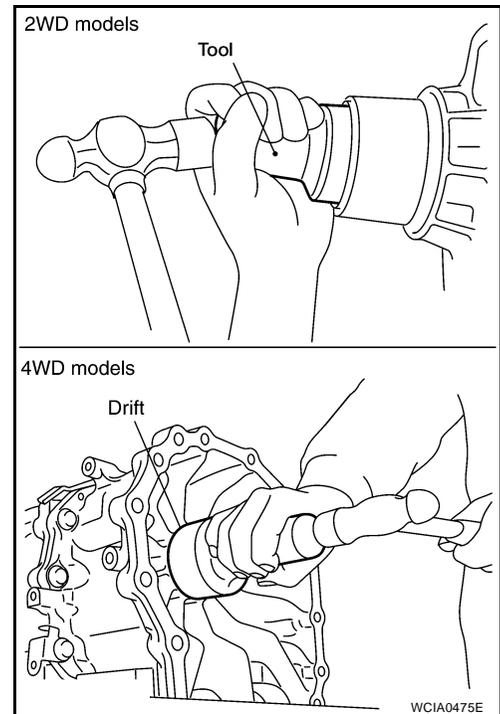

AIR BREATHER HOSE


PFP:31098

AIR BREATHER HOSE

Removal and Installation 4X2

UCS0038E

Refer to the figure below for air breather hose removal and installation procedure.

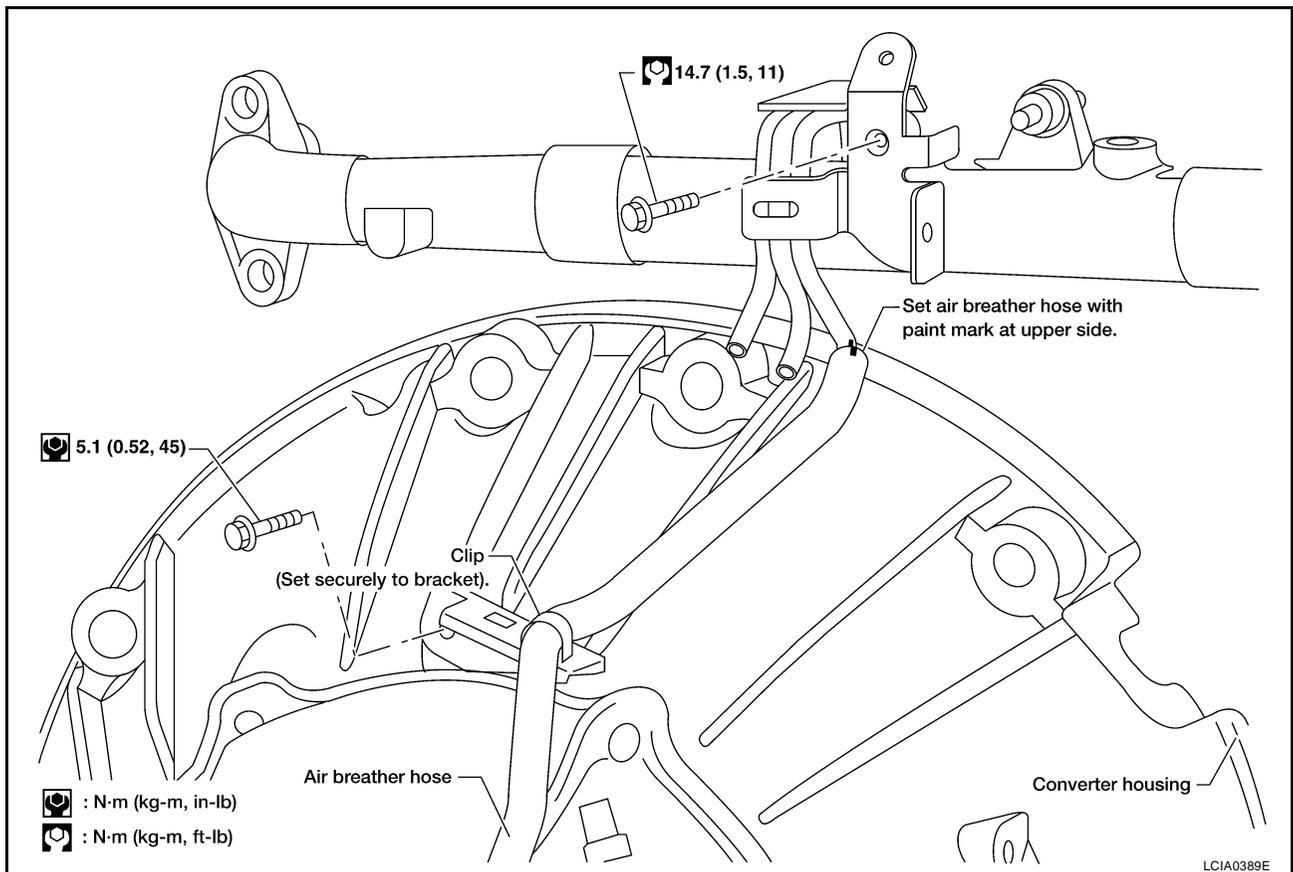


CAUTION:

- When installing an air breather hose, do not to crush or block by folding or bending the hose.
- When inserting a hose to the transmission tube, be sure to insert it fully until its end reaches the tube bend portion.

AIR BREATHER HOSE

4X4

Refer to the figure below for air breather hose removal and installation procedure.

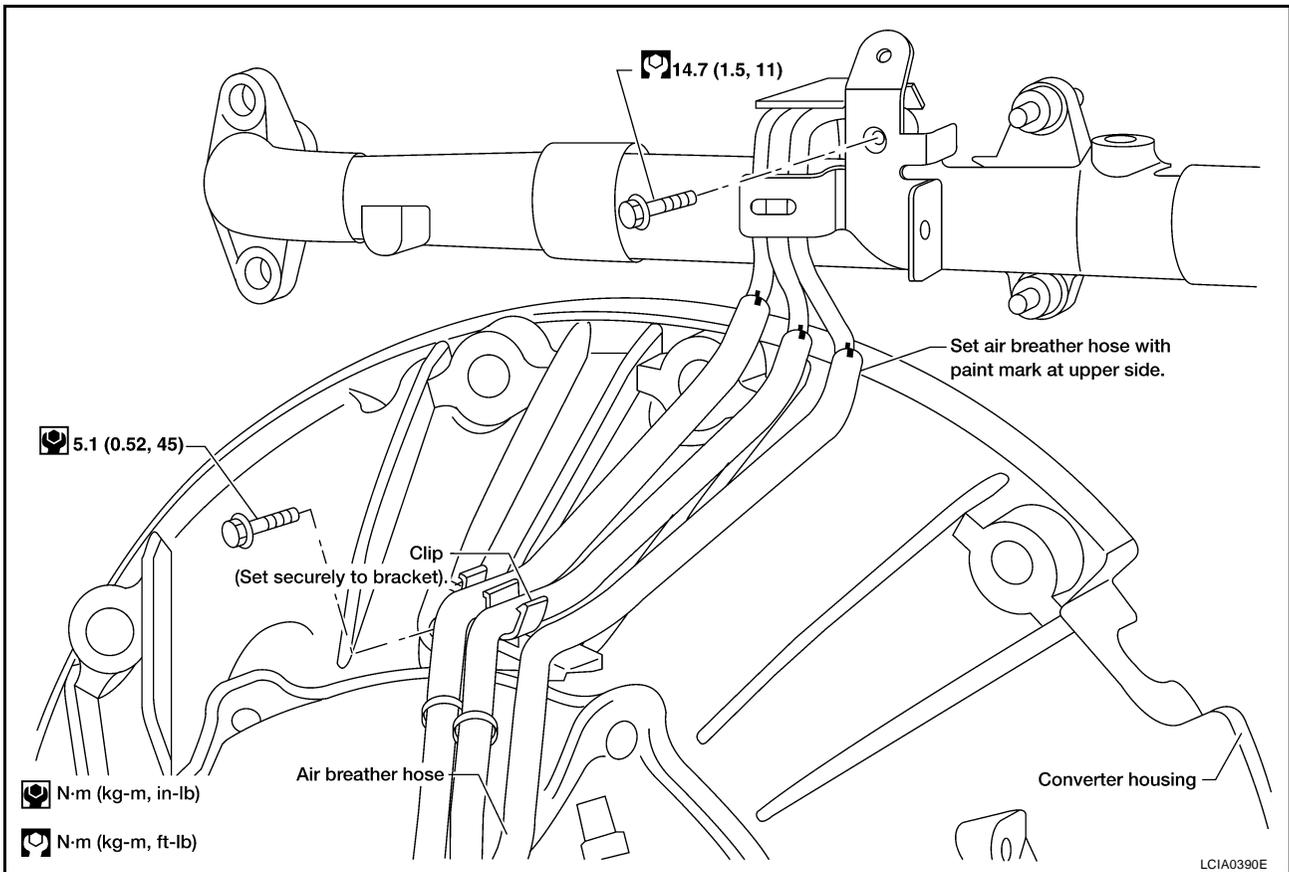

CAUTION:

- When installing an air breather hose, do not to crush or block by folding or bending the hose.
- When inserting a hose to the transmission tube, be sure to insert it fully until its end reaches the tube bend portion.


TRANSMISSION ASSEMBLY

PFP:31020

UCS0038F

TRANSMISSION ASSEMBLY Removal and Installation (4x2) COMPONENTS

SEC. 112 • 310

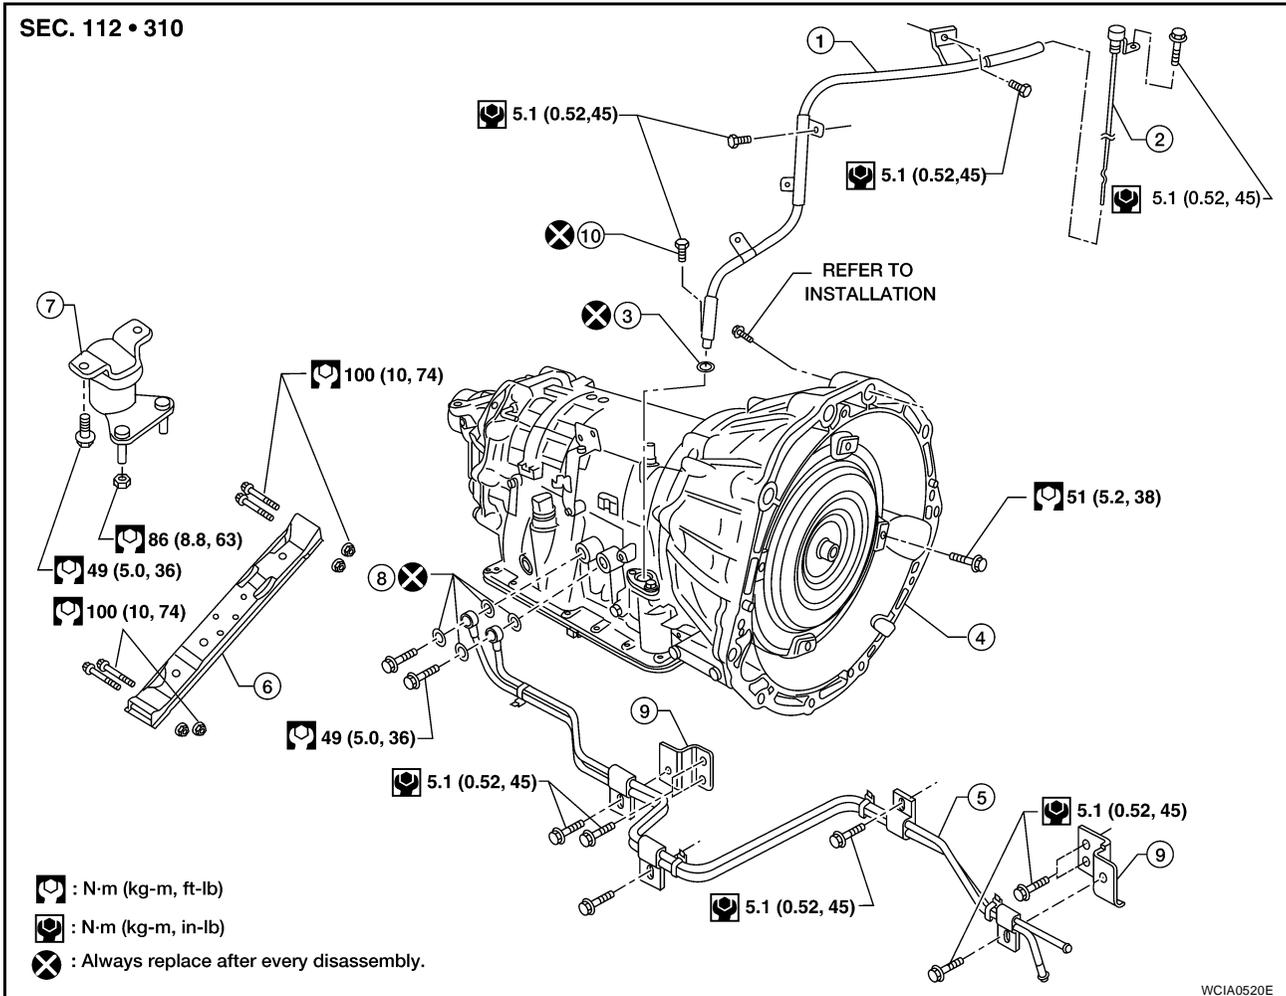

- | | | |
|-----------------------------|--------------------------|----------------------------------|
| 1. A/T fluid indicator pipe | 2. A/T fluid indicator | 3. O-ring |
| 4. Transmission assembly | 5. A/T fluid cooler tube | 6. A/T crossmember |
| 7. Insulator | 8. Copper washers | 9. A/T fluid cooler tube bracket |
| 10. Self-sealing bolt | | |

REMOVAL

CAUTION:

When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.

1. Disconnect the negative battery terminal.
2. Remove the A/T fluid indicator.
3. Remove the LH fender protector.

TRANSMISSION ASSEMBLY

4. Remove the crankshaft position sensor (POS) from the A/T assembly.

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings or foreign material to get on the sensor front edge magnetic area.
- Do not place in an area affected by magnetism.

5. Remove the undercovers using power tool.
6. Partially drain the A/T fluid. Refer to [AT-13, "A/T FLUID"](#) .
7. Remove the front crossmember using power tool.
8. Remove the starter motor.
9. Remove the rear propeller shaft. Refer to [PR-10, "Removal and Installation"](#) .
10. Remove the left and right front exhaust tubes. Refer to [EX-3, "Removal and Installation"](#) .
11. Remove the A/T selector control cable and bracket from the A/T.
12. Disconnect the A/T fluid cooler tubes from the A/T assembly.
13. Remove the dust cover from the converter housing.
14. Turn the crankshaft to access and remove the four bolts for the drive plate and torque converter.

CAUTION:

When turning the crankshaft, turn it clockwise as viewed from the front of the engine.

15. Support the A/T assembly using a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug.

16. Remove the nuts securing the insulator to the crossmember.
17. Remove the crossmember using power tool.
18. Tilt the transmission slightly to gain clearance between the body and the transmission, then disconnect the air breather hose.
19. Disconnect the A/T assembly harness connector.
20. Remove the wiring harness from the retainers.
21. Remove the A/T fluid indicator pipe.
22. Plug any openings such as the A/T fluid indicator pipe hole.
23. Remove the A/T assembly to engine bolts using power tool.
24. Remove A/T assembly from the vehicle using Tool.




Tool number : — (J-47002)

CAUTION:

- Secure the torque converter to prevent it from dropping.
- Secure the A/T assembly the transmission jack.

NOTE:

The actual special service Tool may differ from Tool shown.

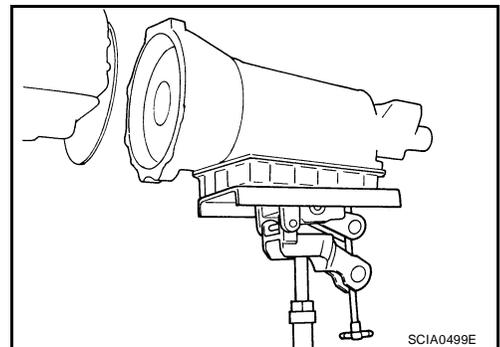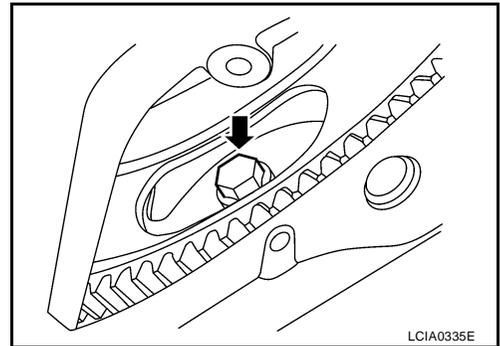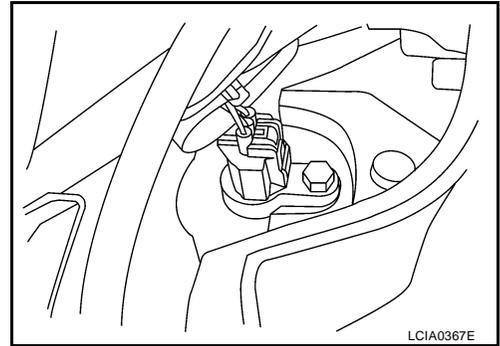


TRANSMISSION ASSEMBLY

INSPECTION

Installation and Inspection of Torque Converter

- After inserting the torque converter to the transmission, check dimension "A" to ensure it is within the reference value limit.

Dimension "A" : 25.0 mm (0.98 in) or more

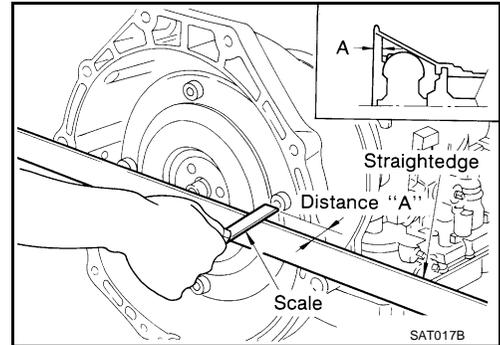

INSTALLATION


Installation is in the reverse order of the removal.

- When installing transmission to the engine, tighten the bolts to the specified torque using sequence shown.

Transmission bolts : 74 N·m (7.5 kg·m, 55 ft-lb)

CAUTION:


- When replacing an engine or transmission you must make sure the dowels are installed correctly during re-assembly.
- Improper alignment caused by missing dowels may cause vibration, oil leaks or breakage of drivetrain components.

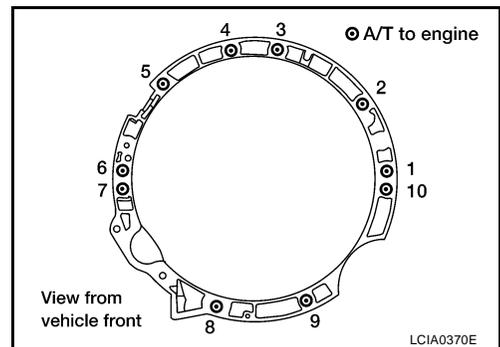

- Align the positions of bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.
- Install crankshaft position sensor (POS).

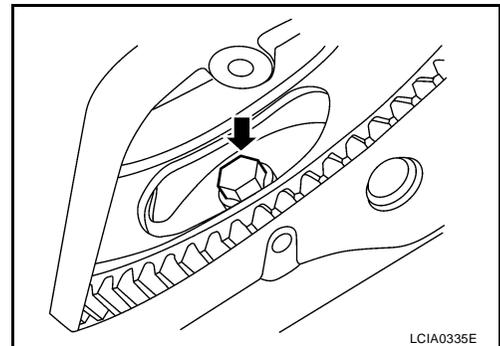


- After completing installation, check fluid leakage, fluid level, and the positions of A/T. Refer to [MA-22, "Checking the Automatic Transmission Fluid \(ATF\)"](#) , [AT-222, "Checking of A/T Position"](#) and [AT-222, "Adjustment of A/T Position"](#) .

TRANSMISSION ASSEMBLY

UCS0038G

Removal and Installation (4x4) COMPONENTS

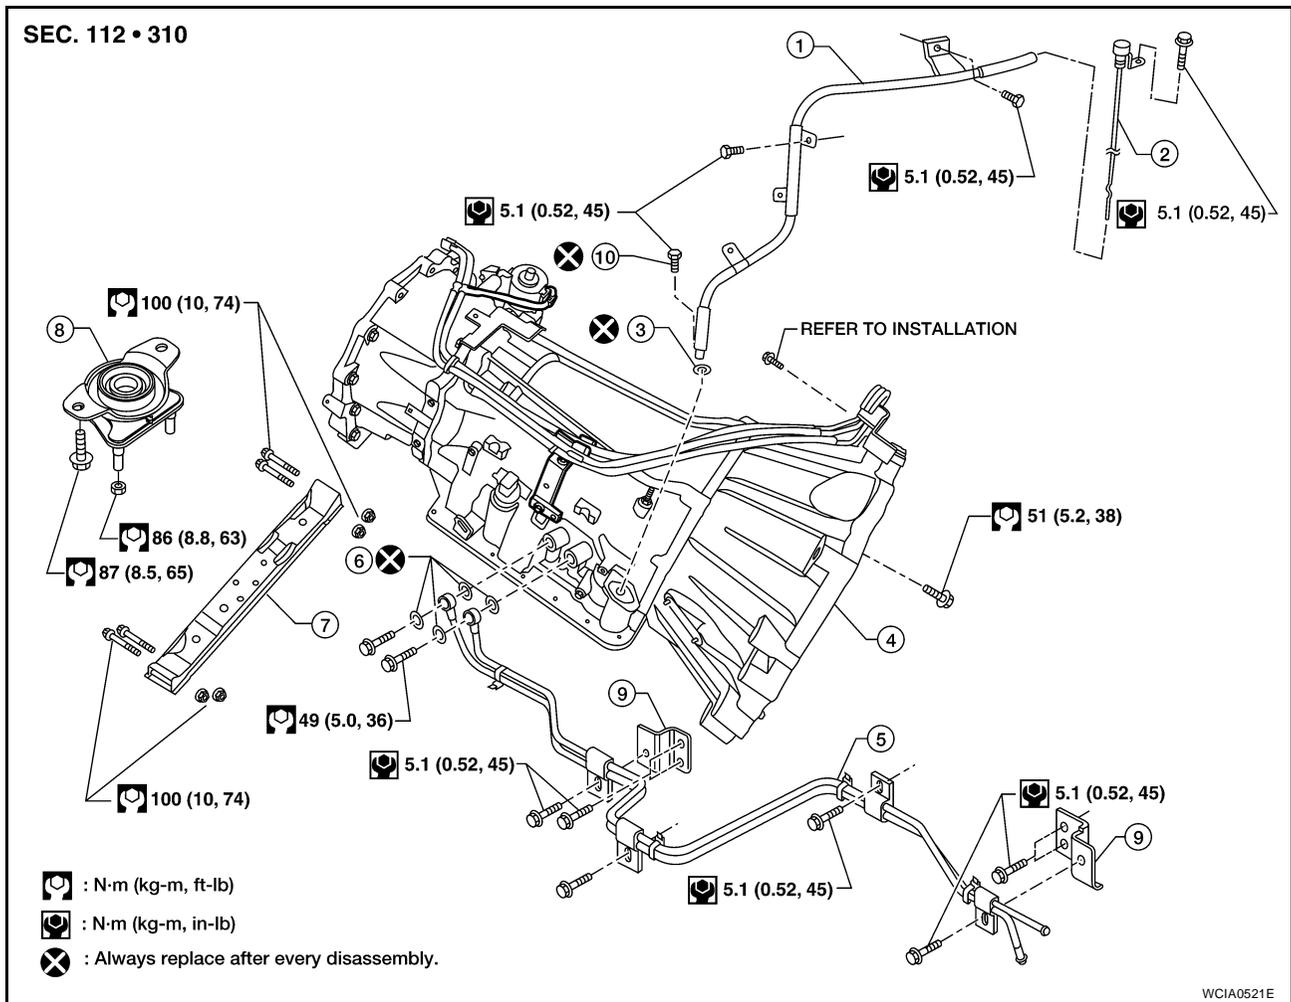

- | | | |
|-----------------------------|------------------------|----------------------------------|
| 1. A/T fluid indicator pipe | 2. A/T fluid indicator | 3. O-ring |
| 4. Transmission assembly | 5. Fluid cooler tube | 6. Copper washer |
| 7. A/T cross member | 8. Insulator | 9. A/T fluid cooler tube bracket |
| 10. Self-sealing bolt | | |

REMOVAL

CAUTION:


When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.

1. Disconnect the negative battery terminal.
2. Remove the A/T fluid indicator.
3. Remove the LH fender protector.
4. Remove the crankshaft position sensor (POS) from the A/T assembly.

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings or foreign material to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

5. Remove the undercovers using power tool.
6. Partially drain the A/T fluid. Refer to [AT-13, "A/T FLUID"](#).

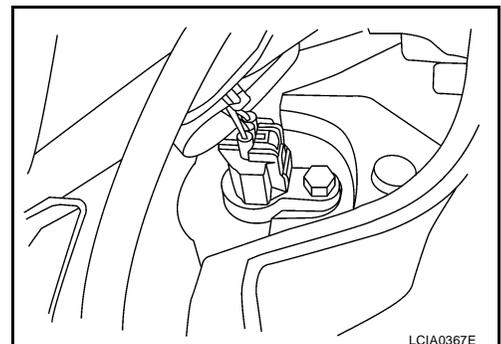

TRANSMISSION ASSEMBLY

7. Remove the front crossmember using power tool.
8. Remove the starter motor.
9. Remove the front and rear propeller shafts. Refer to [PR-5, "Removal and Installation"](#) and [PR-10, "Removal and Installation"](#).
10. Remove the left and right front exhaust tubes. Refer to [EX-3, "Removal and Installation"](#).
11. Remove the A/T selector control cable and bracket from the A/T.
12. Disconnect the fluid cooler tubes from the A/T assembly.
13. Remove the dust cover from the converter housing.
14. Turn the crankshaft to access and remove the four bolts for the drive plate and torque converter.

CAUTION:

When turning the crankshaft, turn it clockwise as viewed from the front of the engine.

15. Support the A/T assembly using a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug.

16. Remove the nuts securing the insulator to the crossmember.
17. Remove the crossmember using power tool.
18. Tilt the transmission slightly to gain clearance between the body and the transmission, then disconnect the air breather hose.
19. Disconnect the following:
 - A/T assembly harness connector
 - Neutral-4 low switch connector
 - Wait detection switch connector
 - ATP switch connector
 - Transfer motor connector (ATX14B only)
 - Control valve assembly connector (ATX14B only)
 - Transfer control device connector (TX15B only)
20. Remove the wiring harness from the retainers.
21. Remove the A/T fluid indicator pipe.
22. Plug any openings such as the fluid charging pipe hole.
23. Remove the A/T assembly to engine bolts using power tool.
24. Remove A/T assembly with transfer from the vehicle using Tool.

Tool number : — (J-47002)



CAUTION:

- **Secure the torque converter to prevent it from dropping.**
- **Secure the A/T assembly to the transmission jack.**

NOTE:

The actual special service Tool may differ from Tool shown.

25. Remove the transfer from the A/T assembly. Refer to [TF-144, "Removal and Installation"](#) (ATX14B) or [TF-274, "Removal and Installation"](#) (TX15B).

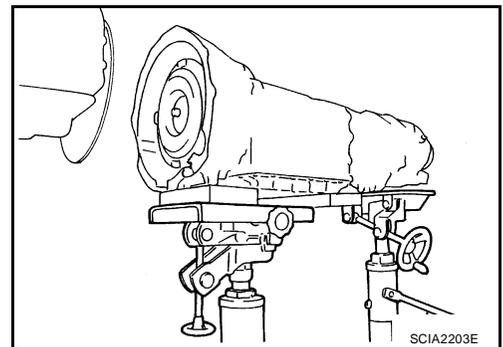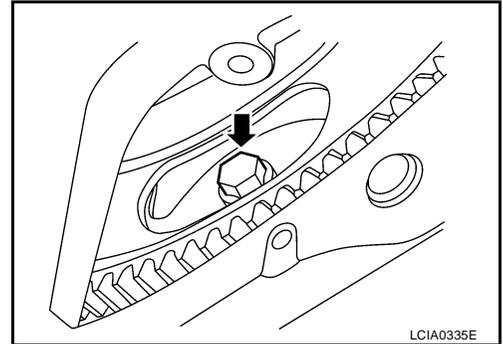


TRANSMISSION ASSEMBLY

INSPECTION

Installation and Inspection of Torque Converter

- After inserting the torque converter to the transmission, be sure to check dimension "A" to ensure it is within the reference value limit.

Dimension "A" : 25.0 mm (0.98 in) or more

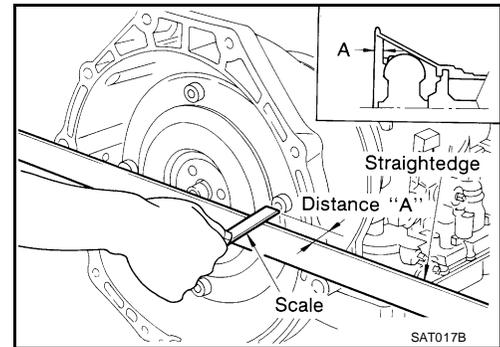

INSTALLATION



Installation is in the reverse order of removal.

- When installing transmission to the engine, tighten the bolts to the specified torque using sequence shown.

Transmission bolts : 74 N·m (7.5 kg·m, 55 ft·lb)

CAUTION:

- When replacing an engine or transmission you must make sure the dowels are installed correctly during re-assembly.**
 - Improper alignment caused by missing dowels may cause vibration, oil leaks or breakage of drivetrain components.**
- Align the positions of bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.
- CAUTION:**
- When turning crankshaft, turn it clockwise as viewed from the front of the engine.**
 - After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.**
 - Install crankshaft position sensor (POS).
 - After completing installation, check fluid leakage, fluid level, and the positions of A/T. Refer to [AT-13, "Checking A/T Fluid"](#) , [AT-222, "Checking of A/T Position"](#) and [AT-222, "Adjustment of A/T Position"](#) .

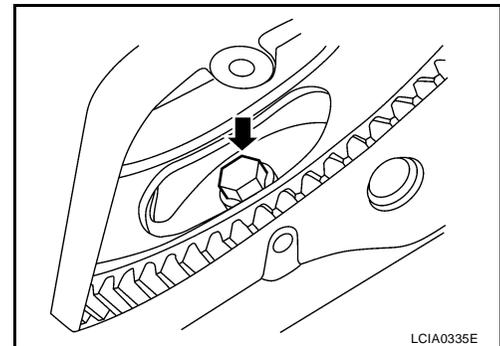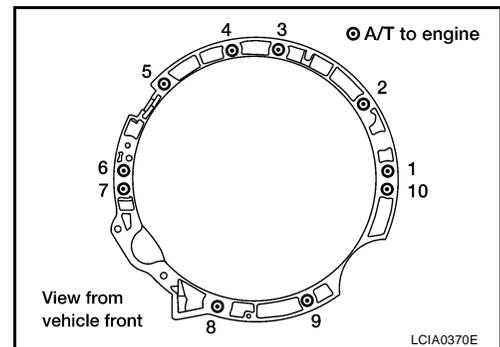


OVERHAUL

OVERHAUL Components

PFP:00000

UCS003Z1

A
B
AT
D
E
F
G
H
I
J
K
L
M

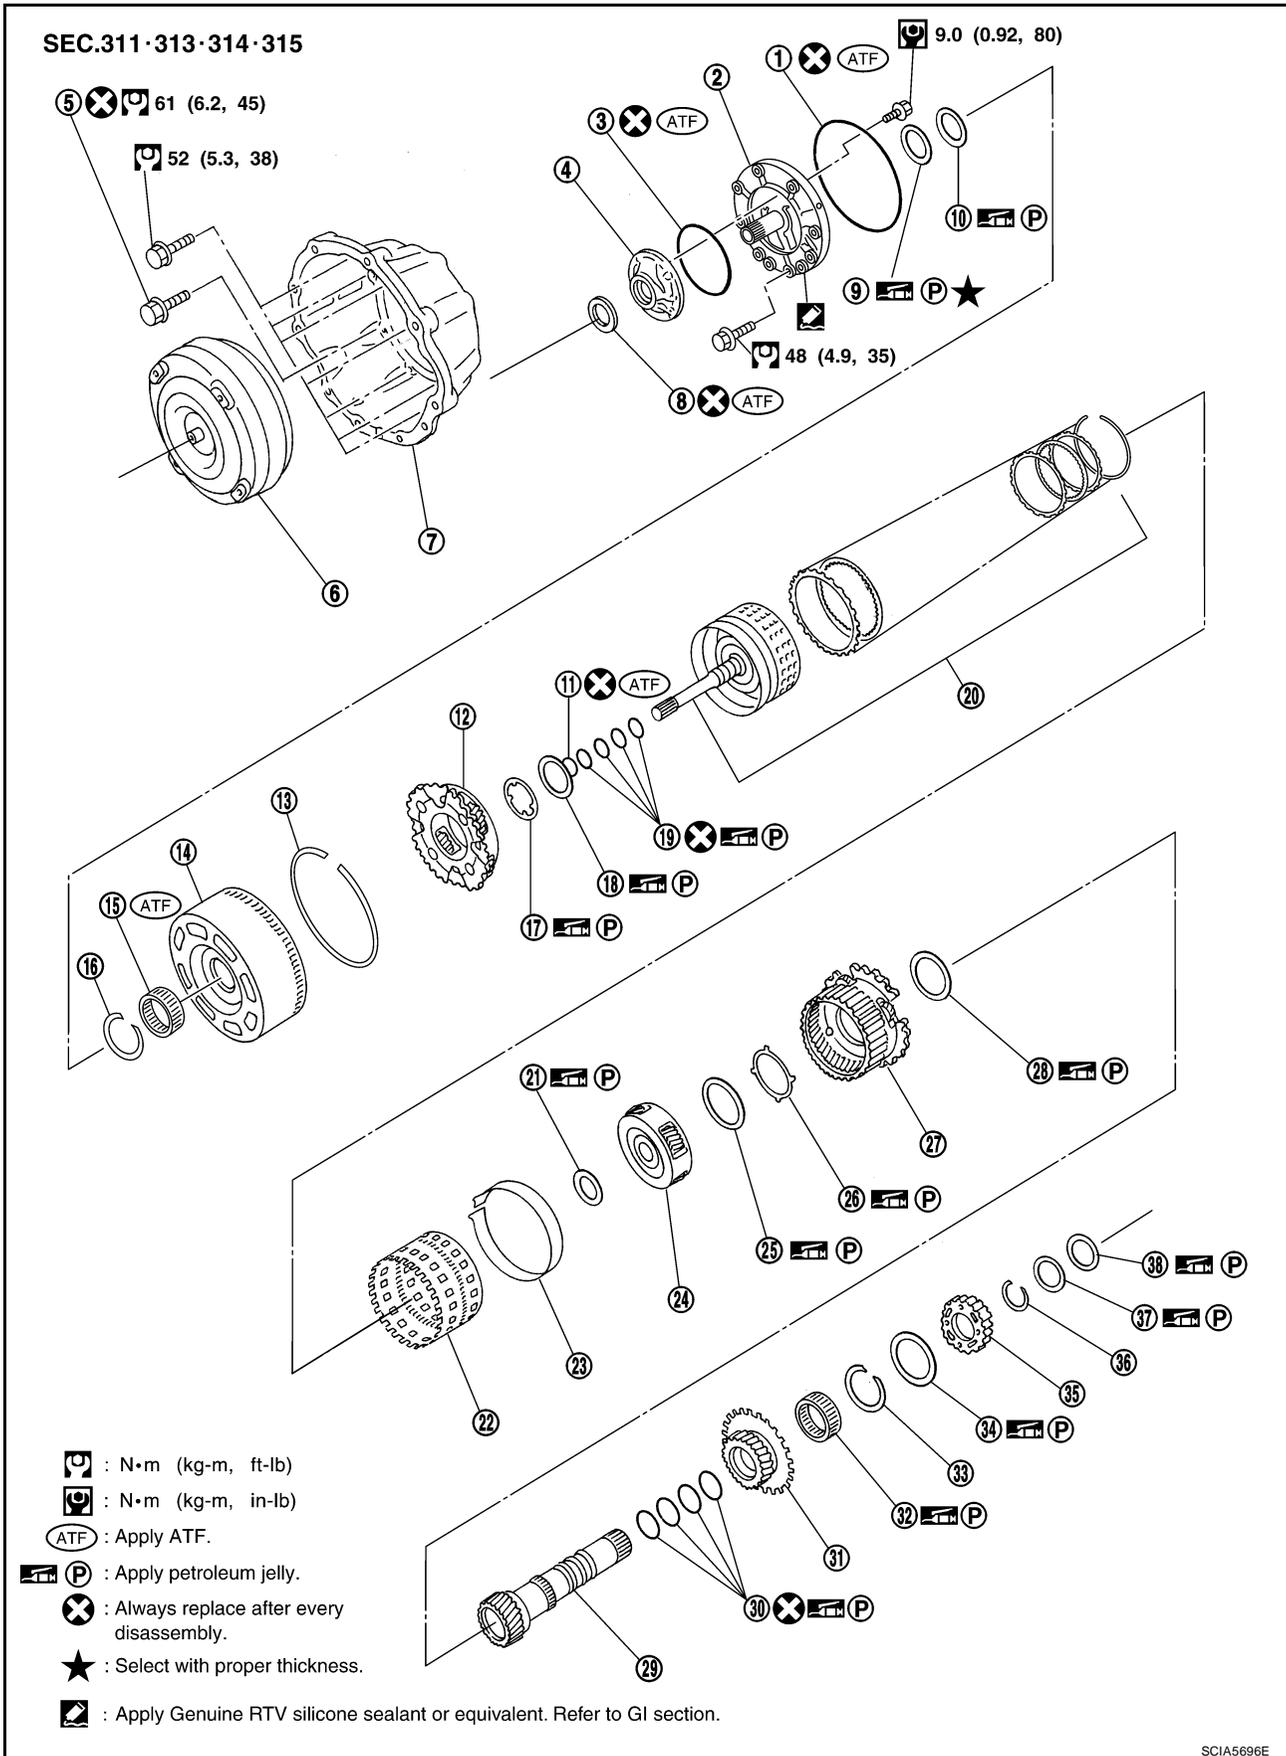


SCIA5696E

OVERHAUL

- | | | |
|------------------------|-------------------------------------|----------------------------|
| 1. O-ring | 2. Oil pump cover | 3. O-ring |
| 4. Oil pump housing | 5. Self-sealing bolt | 6. Torque converter |
| 7. Converter housing | 8. Oil pump housing oil seal | 9. Bearing race |
| 10. Needle bearing | 11. O-ring | 12. Front carrier assembly |
| 13. Snap ring | 14. Front sun gear | 15. 3rd one-way clutch |
| 16. Snap ring | 17. Bearing race | 18. Needle bearing |
| 19. Seal ring | 20. Input clutch assembly | 21. Needle bearing |
| 22. Rear internal gear | 23. Brake band | 24. Mid carrier assembly |
| 25. Needle bearing | 26. Bearing race | 27. Rear carrier assembly |
| 28. Needle bearing | 29. Mid sun gear | 30. Seal ring |
| 31. Rear sun gear | 32. 1st one-way clutch | 33. Snap ring |
| 34. Needle bearing | 35. High and low reverse clutch hub | 36. Snap ring |
| 37. Bearing race | 38. Needle bearing | |

OVERHAUL

SEC.315•316

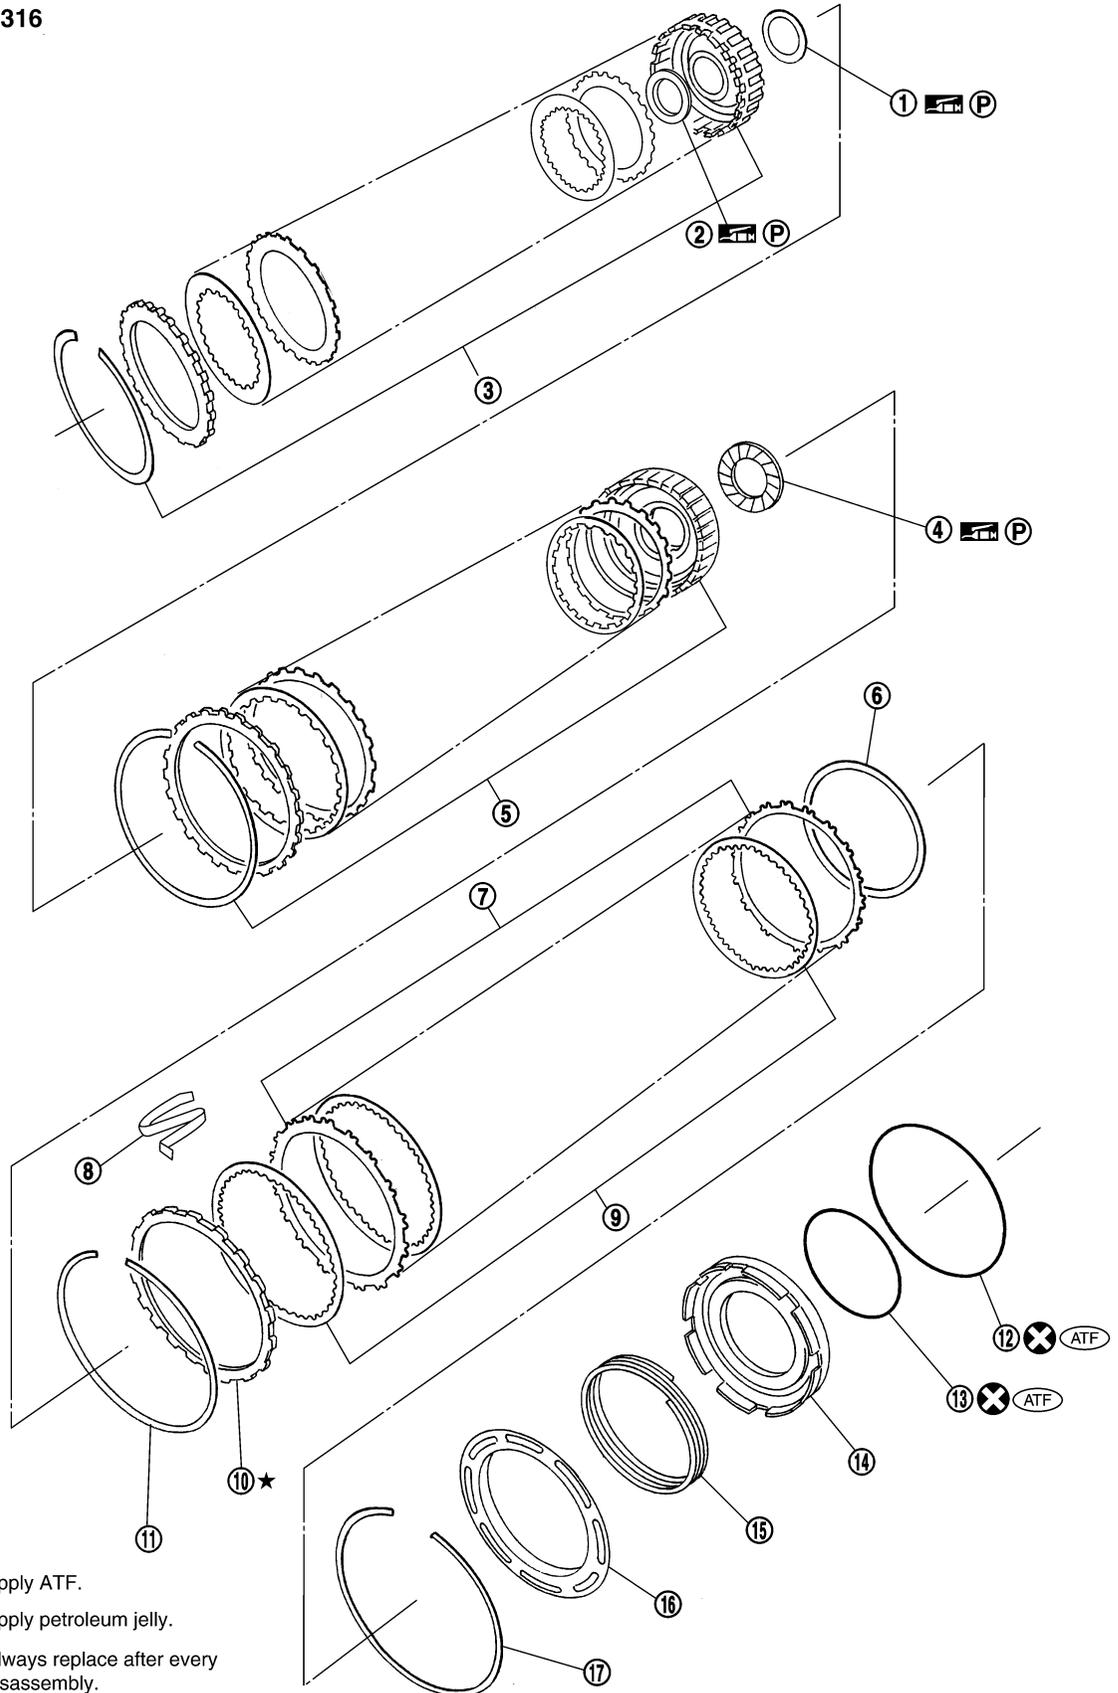

- ⓐ : Apply ATF.
- ⓐ : Apply petroleum jelly.
- ⓧ : Always replace after every disassembly.
- ★ : Select with proper thickness.

- | | | |
|-------------------------------|---------------------------|---|
| 1. Needle bearing | 2. Bearing race | 3. High and low reverse clutch assembly |
| 4. Needle bearing | 5. Direct clutch assembly | 6. Reverse brake dish plate |
| 7. Reverse brake driven plate | 8. N-spring | 9. Reverse brake drive plate |

A
B
AT
D
E
F
G
H
I
J
K
L
M

OVERHAUL

- 10. Reverse brake retaining plate
- 13. D-ring
- 16. Spring retainer


- 11. Snap ring
- 14. Reverse brake piston
- 17. Snap ring

- 12. D-ring
- 15. Return spring

OVERHAUL

2WD models

SEC.313 · 314 · 315 · 316 · 317 · 319

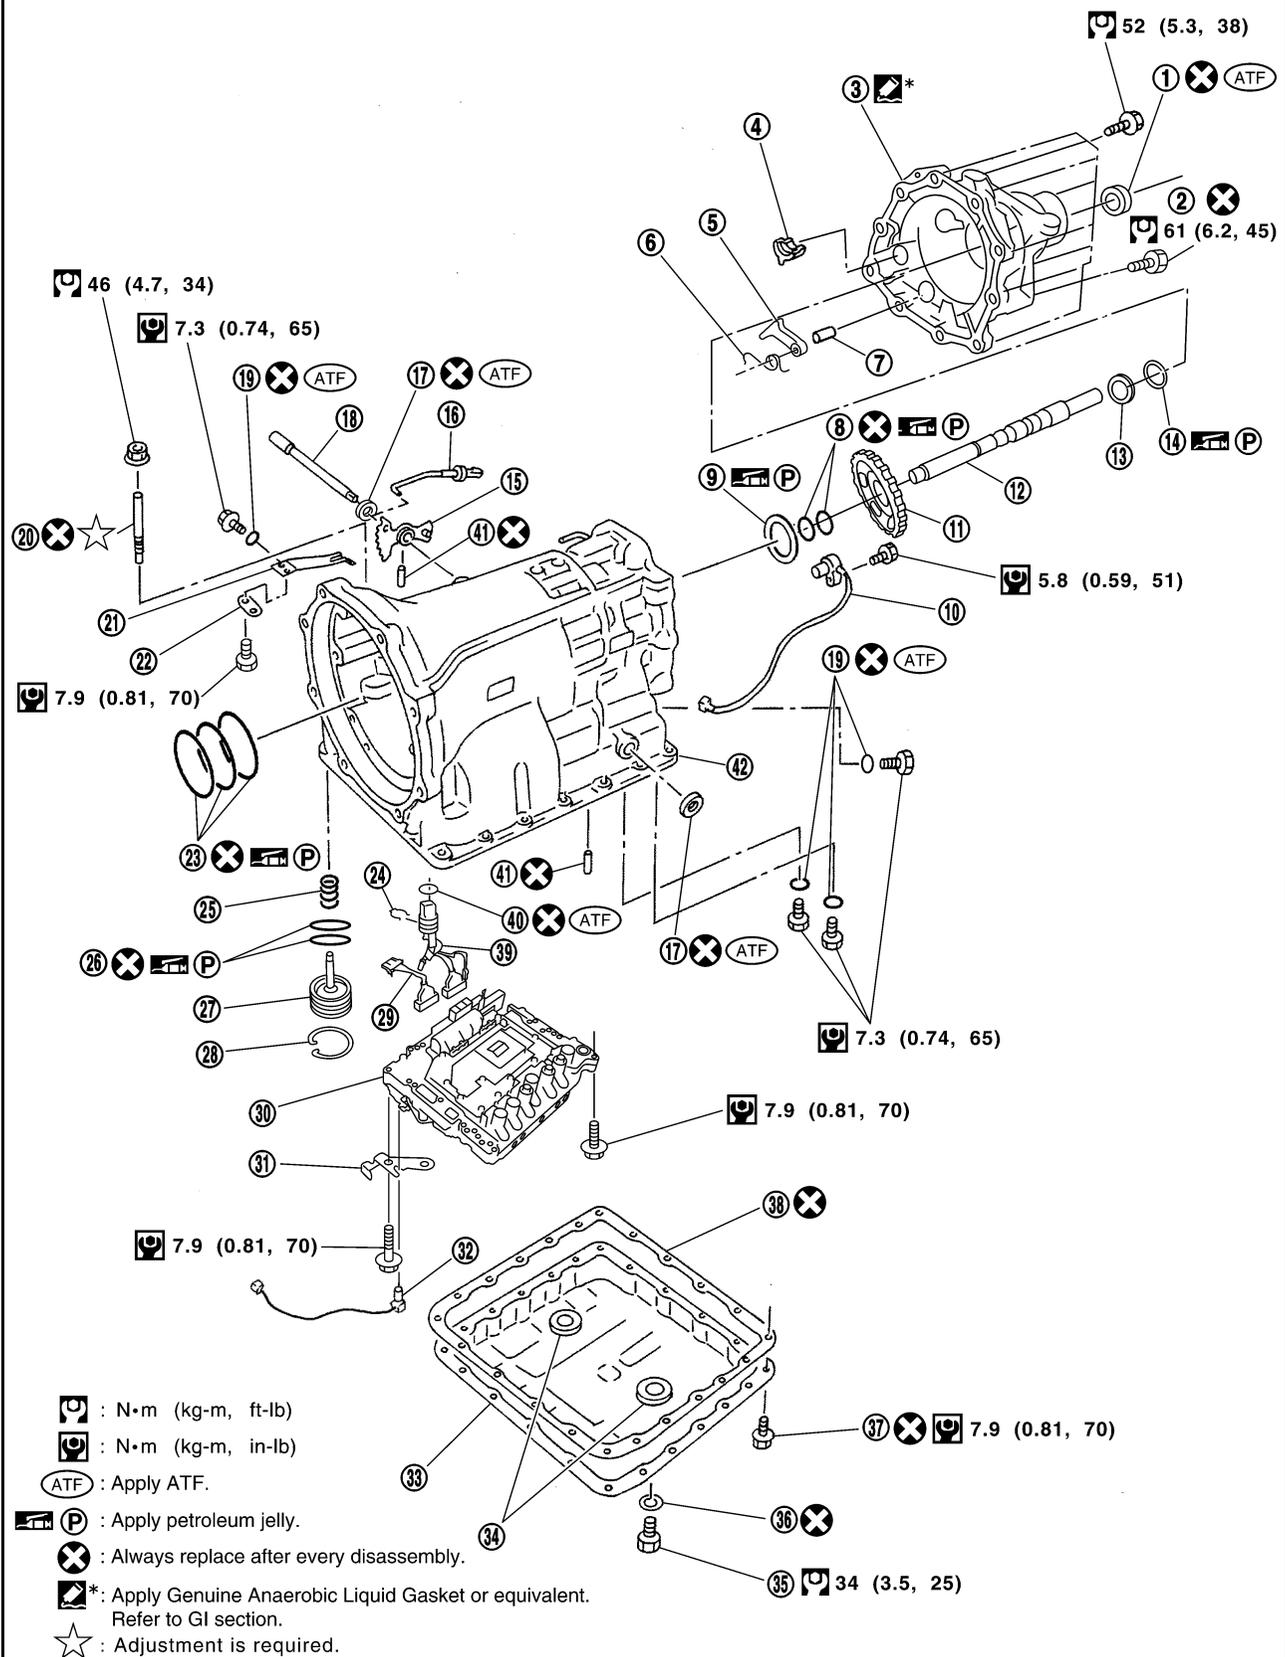

- 1. Rear oil seal
- 4. Parking actuator support

- 2. Self-sealing bolt
- 5. Parking pawl

- 3. Rear extension
- 6. Return spring

SCIA6181E


OVERHAUL

- | | | |
|---------------------------|------------------------------------|----------------------------|
| 7. Pawl shaft | 8. Seal ring | 9. Needle bearing |
| 10. Revolution sensor | 11. Parking gear | 12. Output shaft |
| 13. Bearing race | 14. Needle bearing | 15. Manual plate |
| 16. Parking rod | 17. Manual shaft oil seal | 18. Manual shaft |
| 19. O-ring | 20. Band servo anchor end pin | 21. Detent spring |
| 22. Spacer | 23. Seal ring | 24. Snap ring |
| 25. Return spring | 26. O-ring | 27. Servo assembly |
| 28. Snap ring | 29. Sub-harness | 30. Control valve with TCM |
| 31. Bracket | 32. A/T fluid temperature sensor 2 | 33. Oil pan |
| 34. Magnet | 35. Drain plug | 36. Drain plug gasket |
| 37. Oil pan mounting bolt | 38. Oil pan gasket | 39. Terminal cord assembly |
| 40. O-ring | 41. Retaining pin | 42. Transmission case |

OVERHAUL

4WD models

SEC.313 · 314 · 315 · 316 · 317 · 319

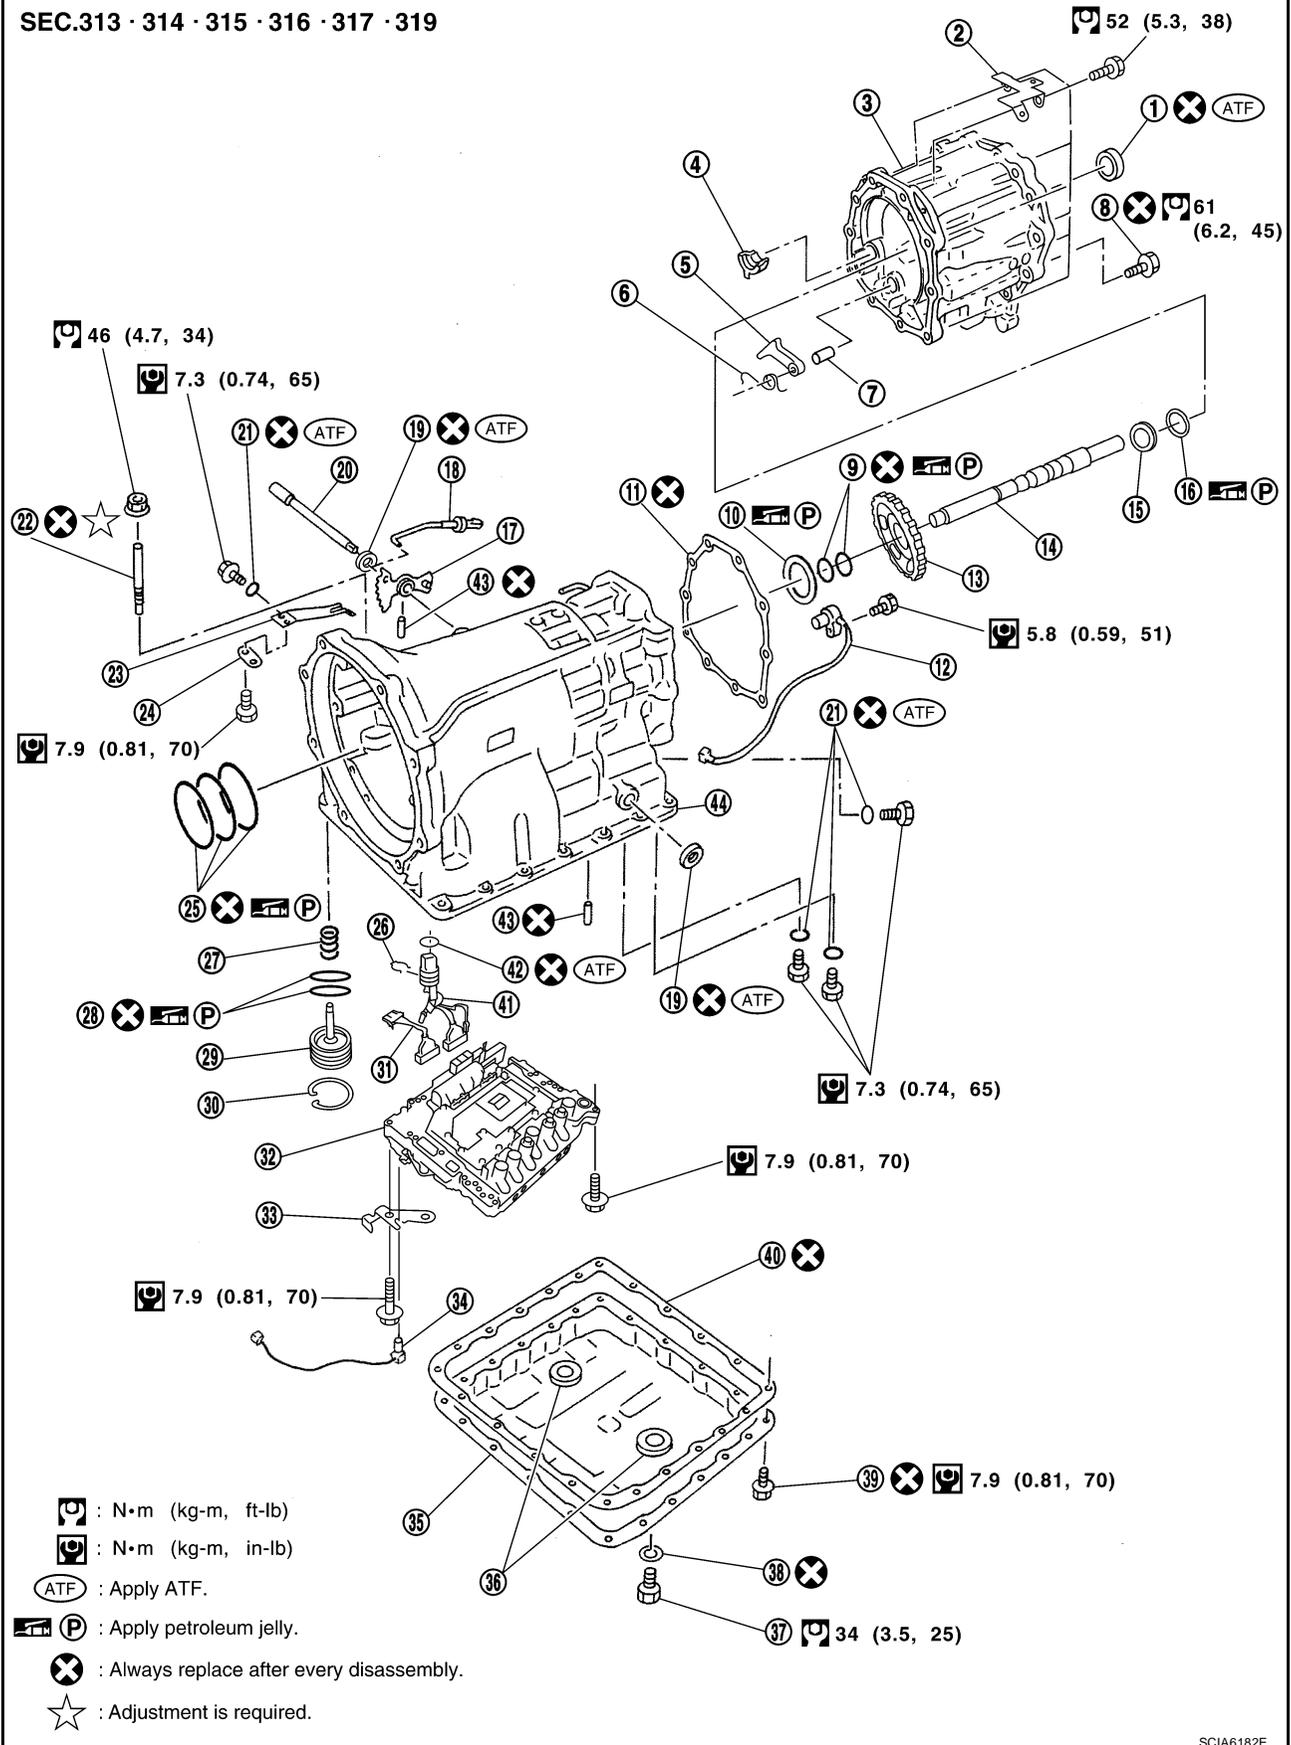

A
B
AT
D
E
F
G
H
I
J
K
L
M

SCIA6182E

- | | | |
|-----------------------------|-----------------|------------------|
| 1. Rear oil seal | 2. Bracket | 3. Adapter case |
| 4. Parking actuator support | 5. Parking pawl | 6. Return spring |

OVERHAUL


- | | | |
|------------------------------------|----------------------------|---------------------------|
| 7. Pawl shaft | 8. Self-sealing bolt | 9. Seal ring |
| 10. Needle bearing | 11. Gasket | 12. Revolution sensor |
| 13. Parking gear | 14. Output shaft | 15. Bearing race |
| 16. Needle bearing | 17. Manual plate | 18. Parking rod |
| 19. Manual shaft oil seal | 20. Manual shaft | 21. O-ring |
| 22. Band servo anchor end pin | 23. Detent spring | 24. Spacer |
| 25. Seal ring | 26. Snap ring | 27. Return spring |
| 28. O-ring | 29. Servo assembly | 30. Snap ring |
| 31. Sub-harness | 32. Control valve with TCM | 33. Bracket |
| 34. A/T fluid temperature sensor 2 | 35. Oil pan | 36. Magnet |
| 37. Drain plug | 38. Drain plug gasket | 39. Oil pan mounting bolt |
| 40. Oil pan gasket | 41. Terminal cord assembly | 42. O-ring |
| 43. Retaining pin | 44. Transmission case | |

OVERHAUL

Oil Channel

UCS00322

2WD models

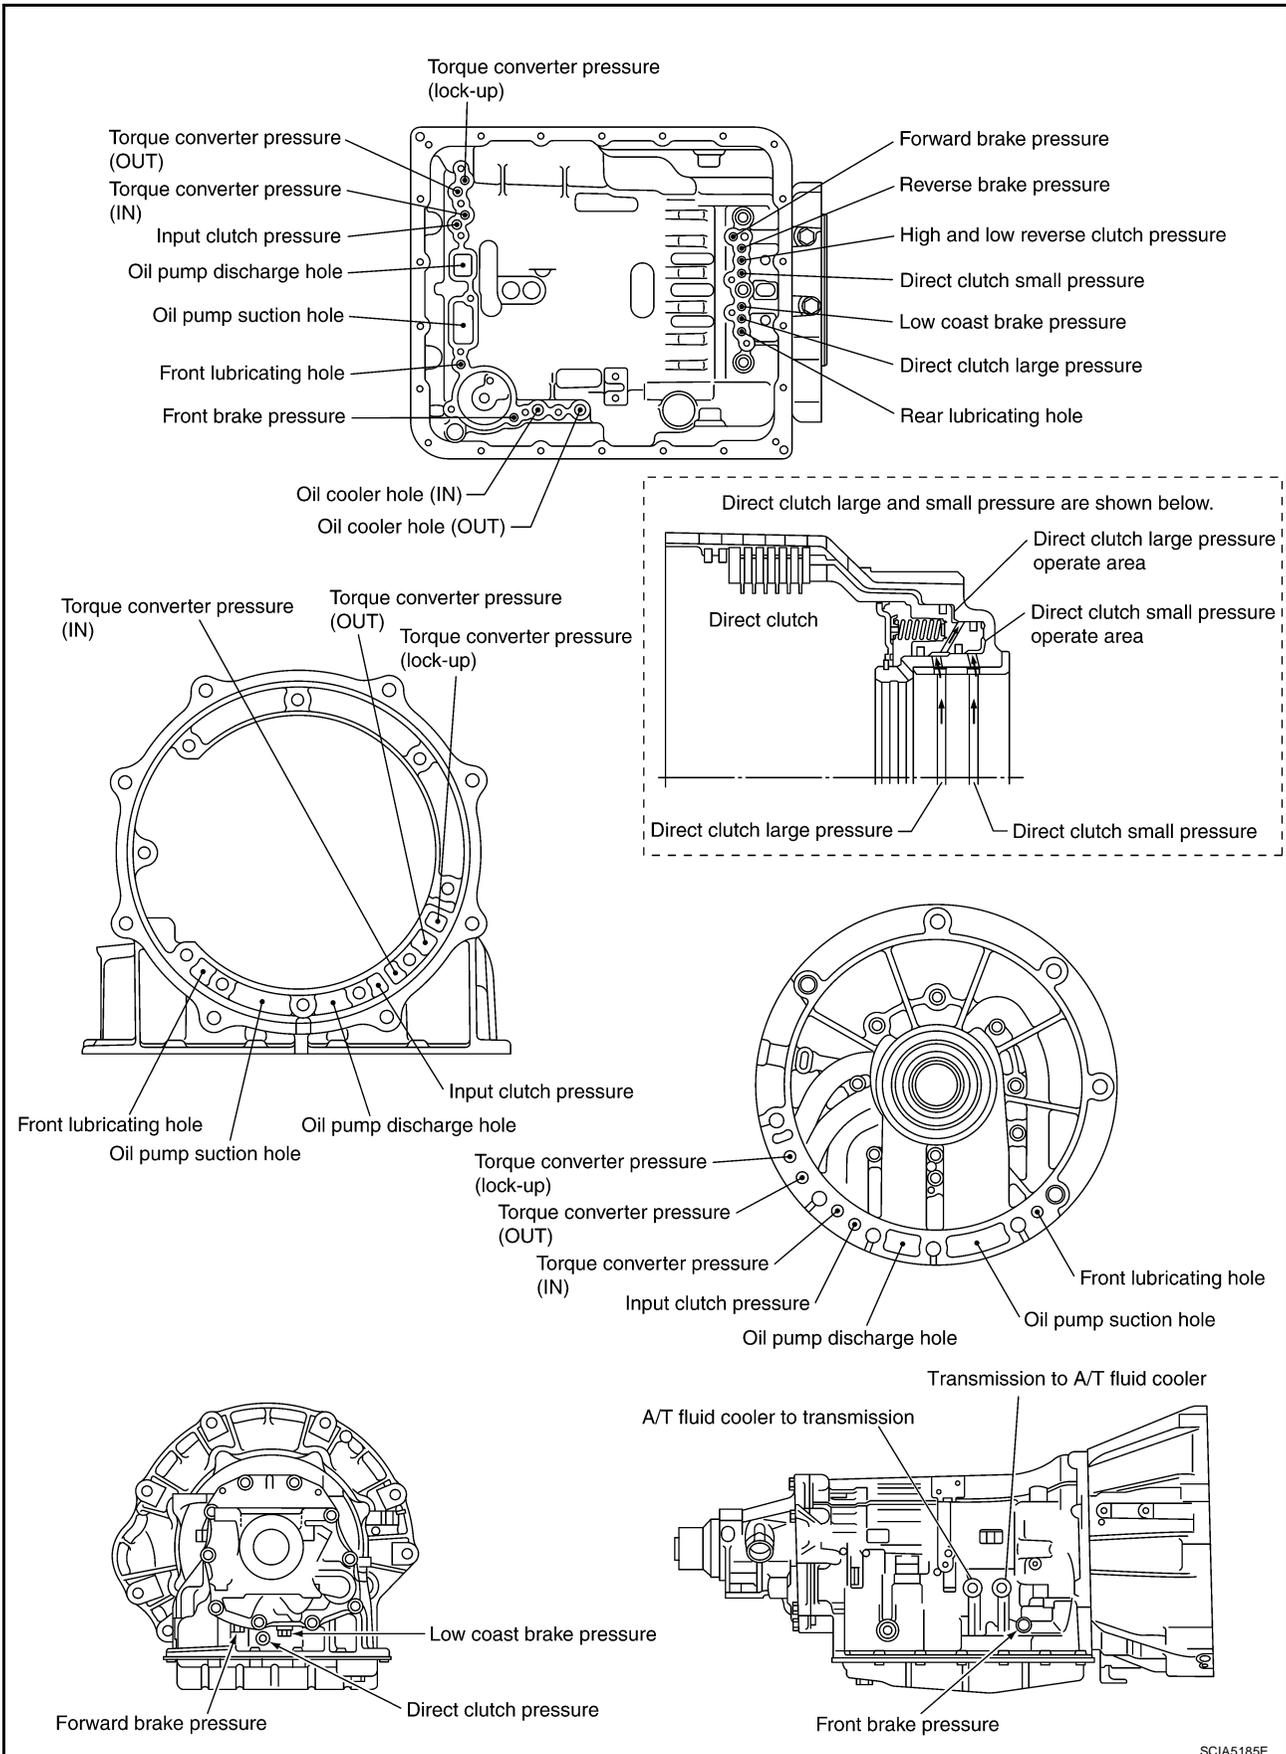


A
B
AT
D
E
F
G
H
I
J
K
L
M

SCIA5185E

OVERHAUL

4WD models

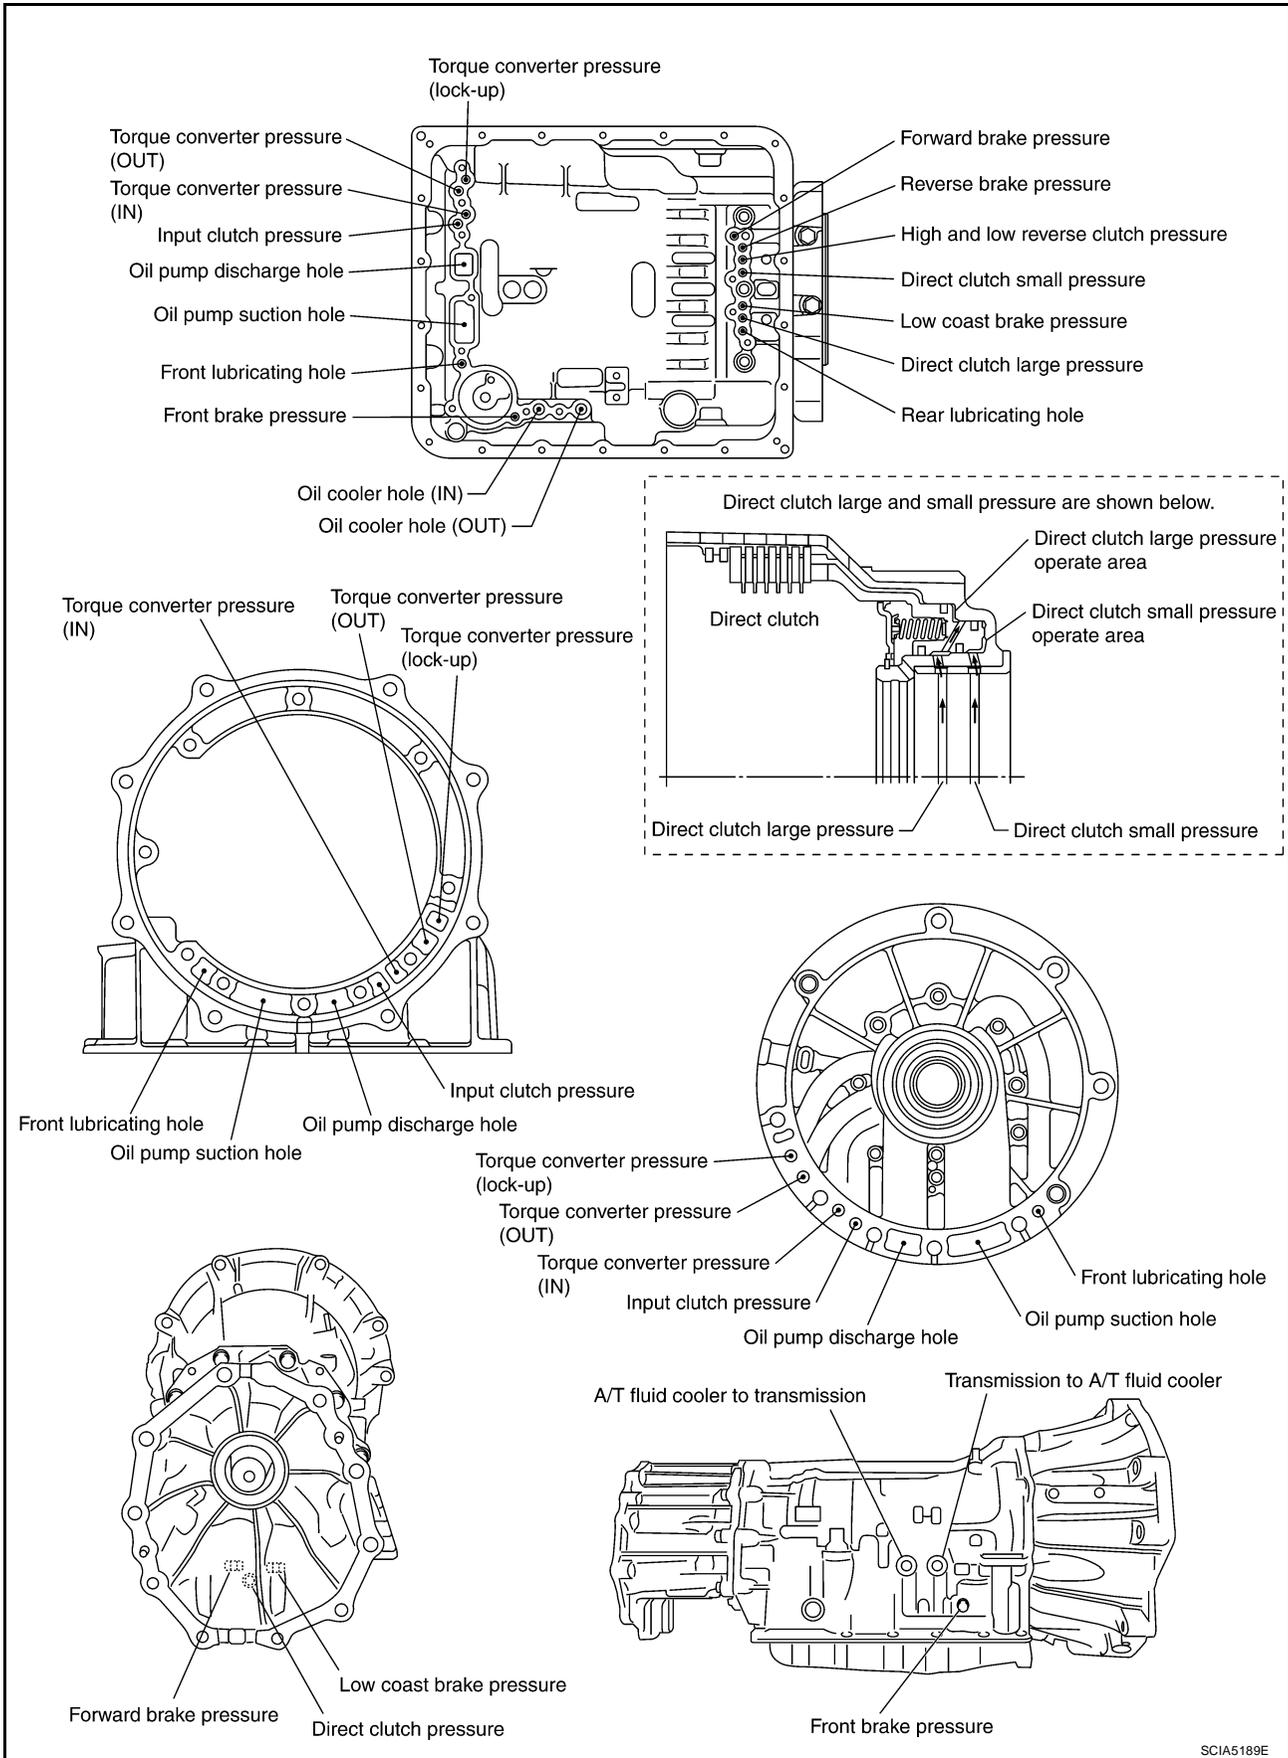


SCIA5189E

OVERHAUL

Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings

UCS00323

2WD models

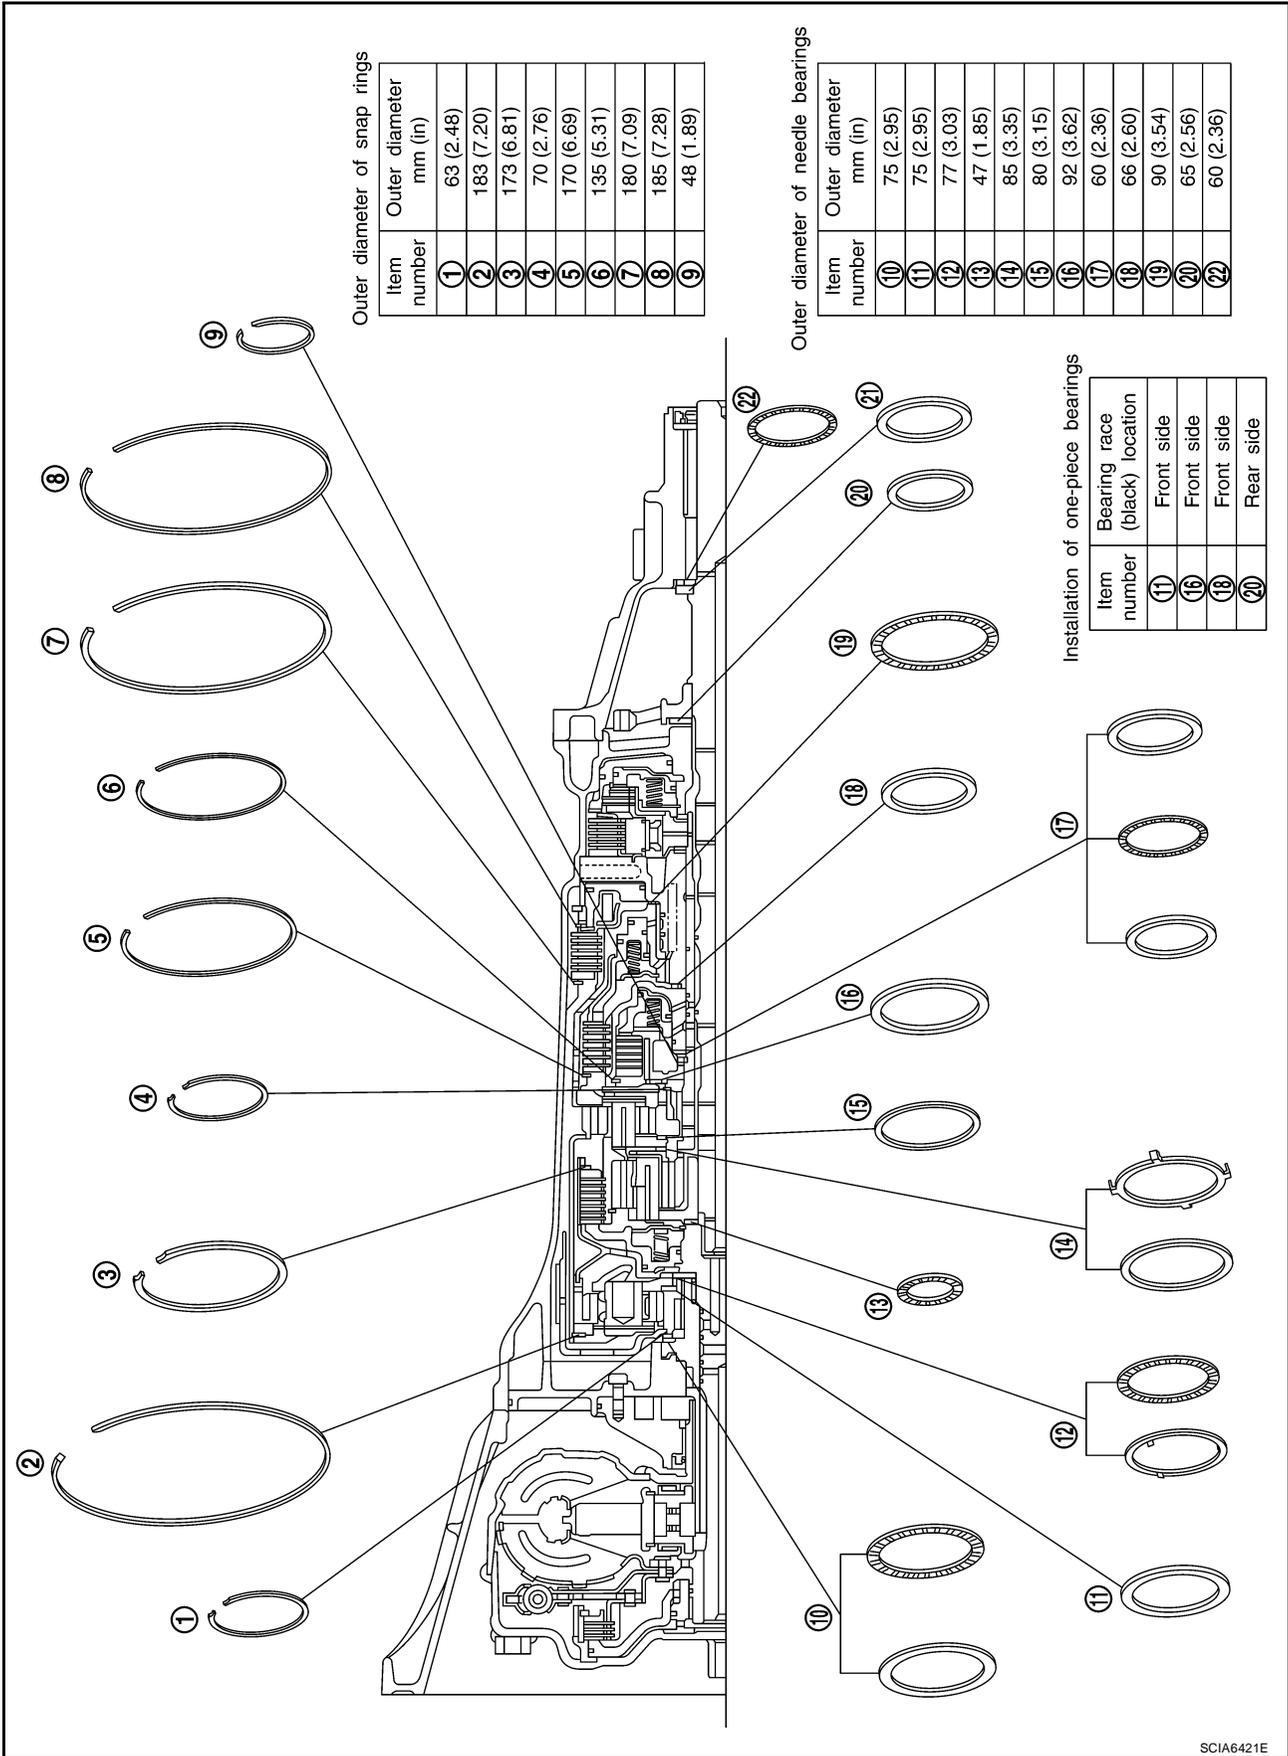


SCIA6421E

A
B
AT
D
E
F
G
H
I
J
K
L
M

OVERHAUL

4WD models

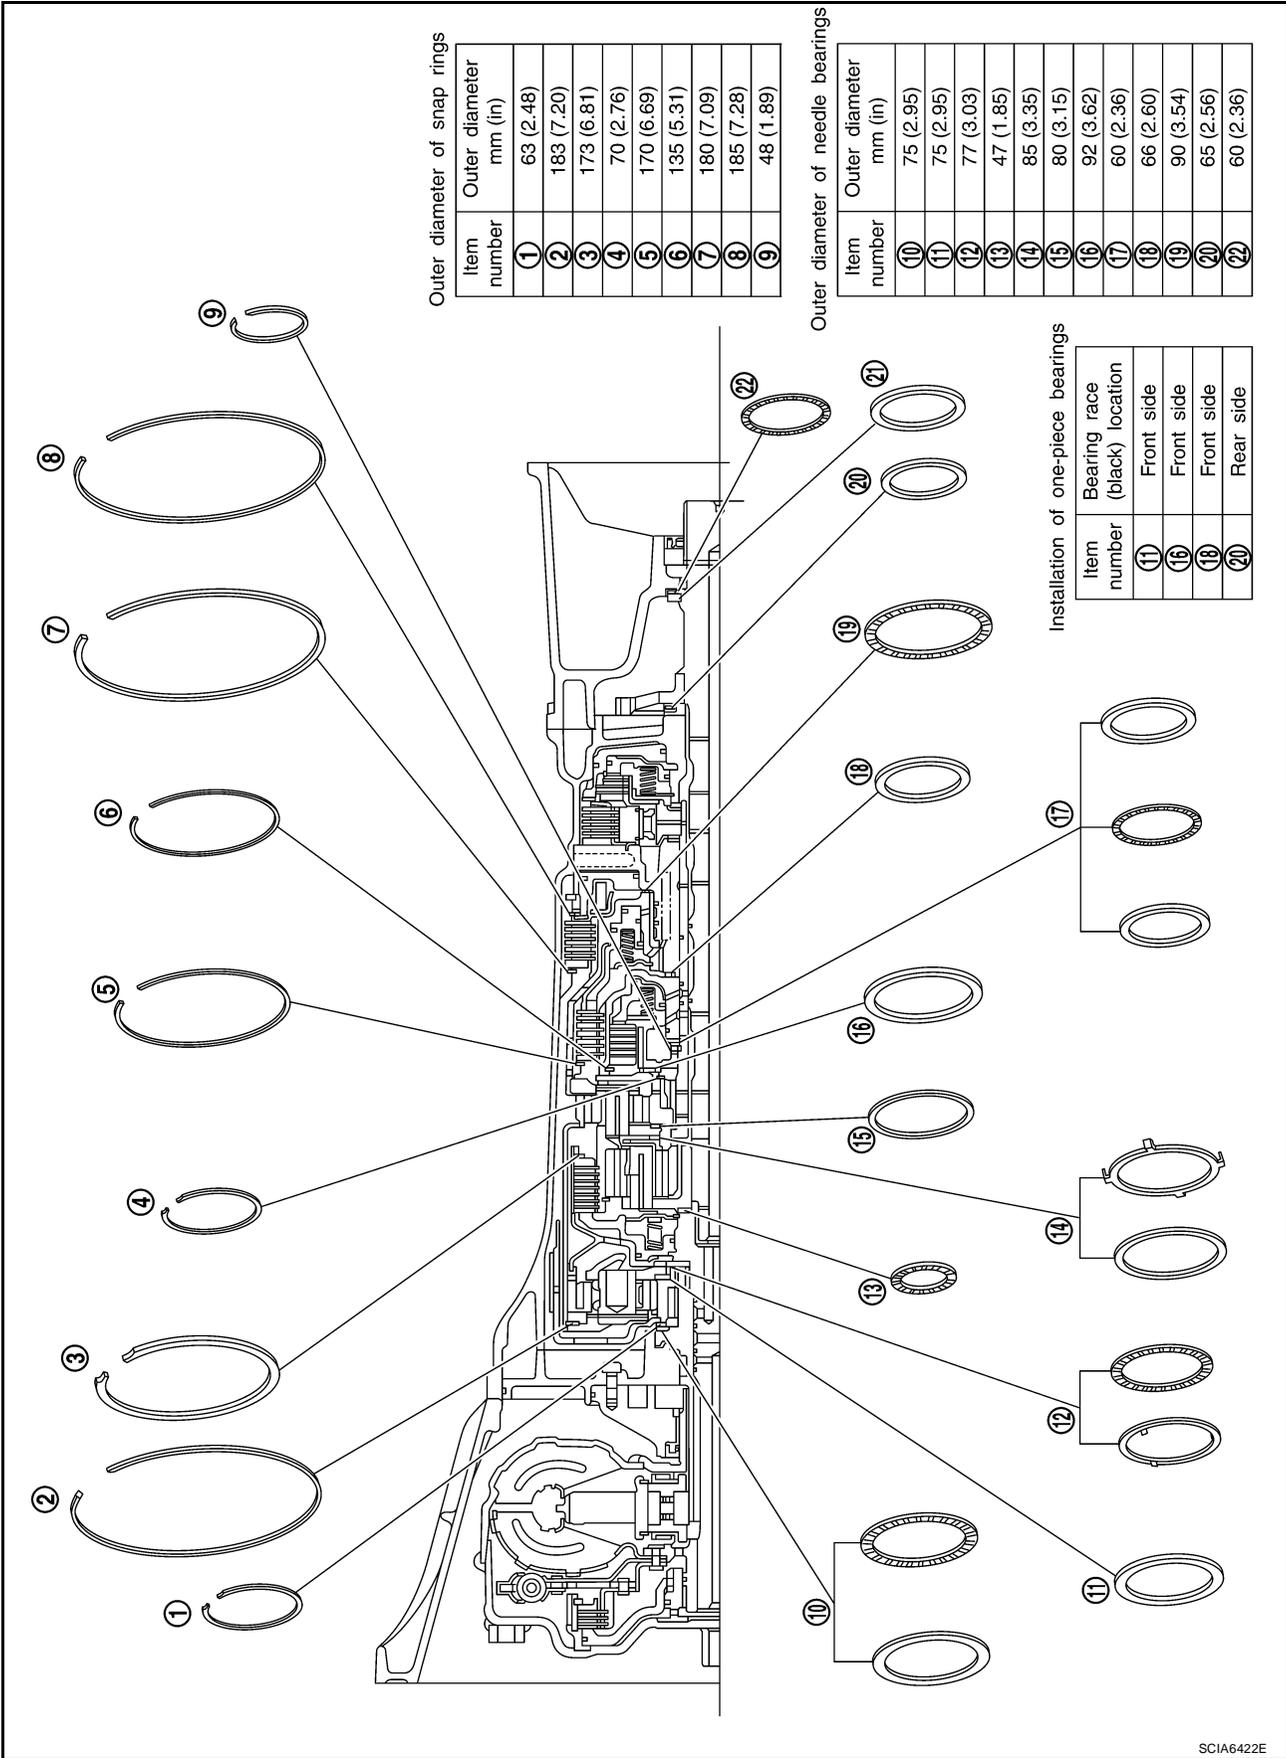

SCIA6422E

DISASSEMBLY

DISASSEMBLY

PFP:31020


Disassembly

UCS003Z4


CAUTION:

Do not disassemble parts behind Drum Support. Refer to [AT-16, "Cross-Sectional View"](#) .

1. Drain ATF through drain plug.
2. Remove torque converter by holding it firmly and turing while pulling straight out.

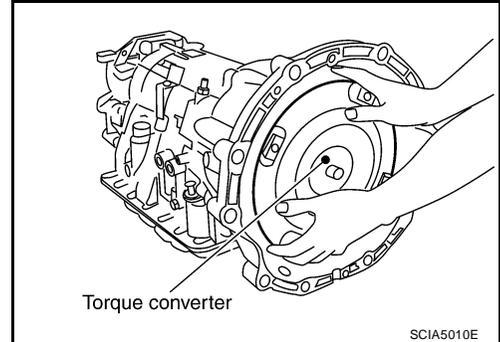


3. Check torque converter one-way clutch using a check tool as shown at figure.
 - a. Insert a check tool into the groove of bearing support built into one-way clutch outer race.
 - b. When fixing bearing support with a check tool, rotate one-way clutch spline using a screwdriver.
 - c. Make sure that inner race rotates clockwise only. If not, replace torque converter assembly.

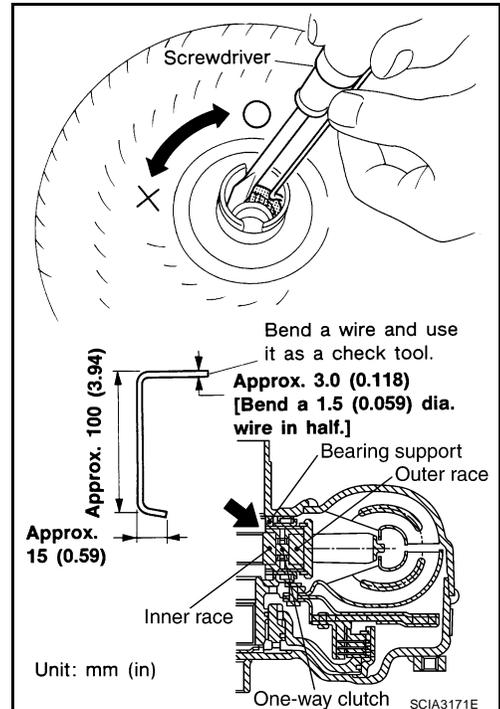

4. Remove converter housing from transmission case.

CAUTION:


Be careful not to scratch converter housing.

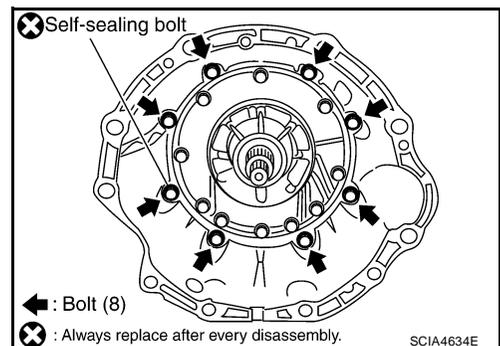


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY

5. Remove O-ring from input clutch assembly.

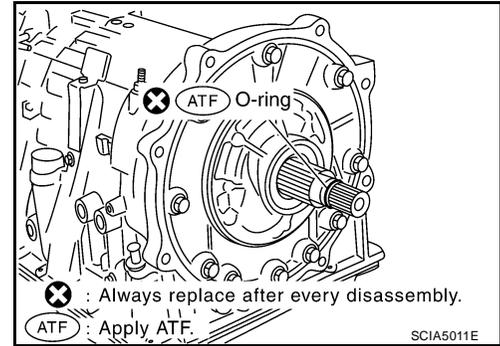


6. Remove tightening bolts for oil pump assembly and transmission case.

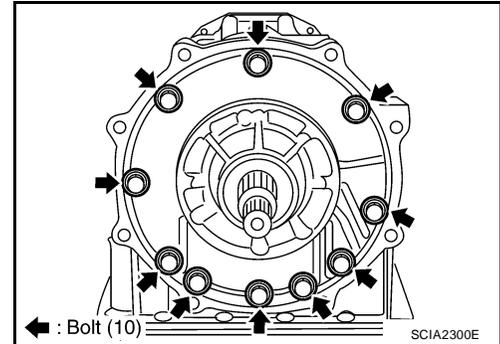


7. Attach the sliding hammers to oil pump assembly and extract it evenly from transmission case.

CAUTION:

- Fully tighten the sliding hammer screws.
- Make sure that bearing race is installed to the oil pump assembly edge surface.

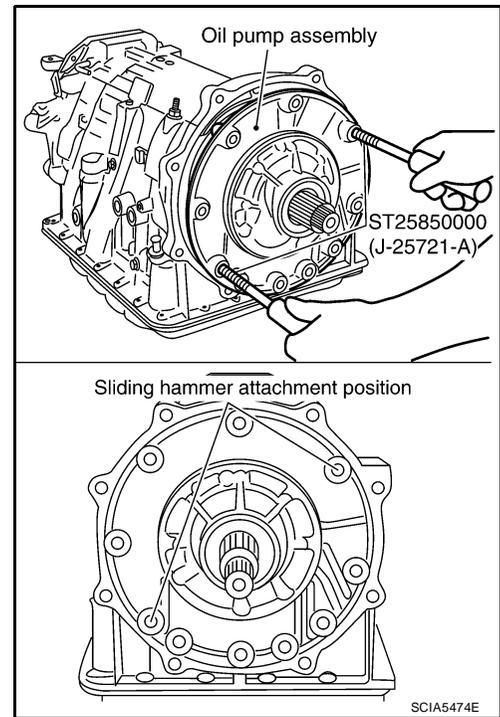


8. Remove O-ring from oil pump assembly.

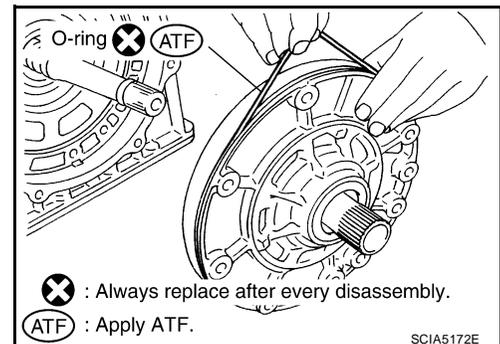


DISASSEMBLY

9. Remove bearing race from oil pump assembly.

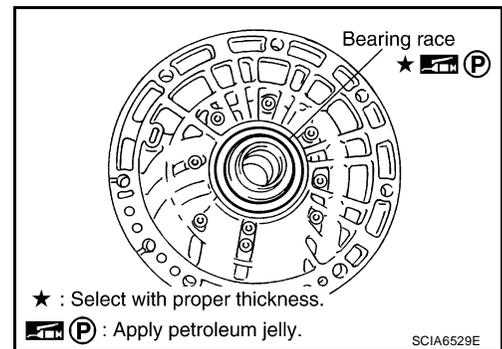


10. Remove needle bearing from front sun gear.

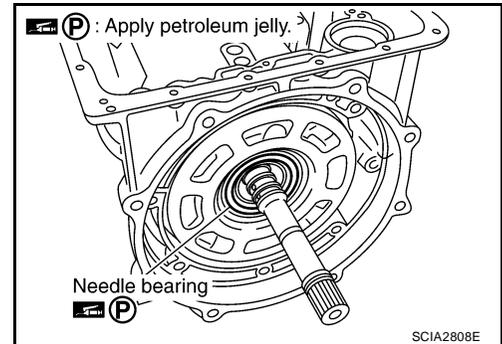


11. Remove front sun gear assembly from front carrier assembly.

NOTE:
Remove front sun gear by rotating left/right.

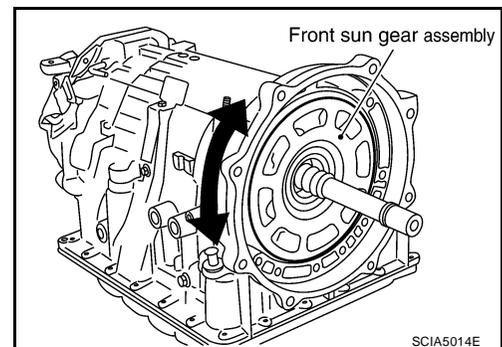


12. Remove seal rings from input clutch assembly.

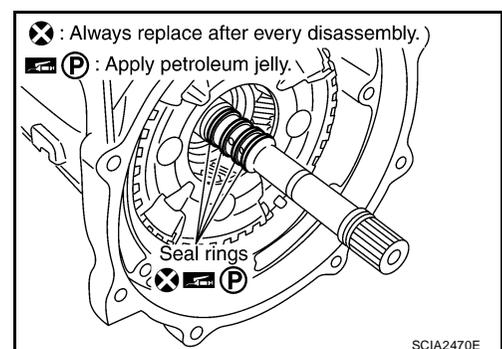

13. Remove front carrier assembly from rear carrier assembly. (With input clutch assembly and rear internal gear.)


CAUTION:
Be careful to remove it with needle bearing.

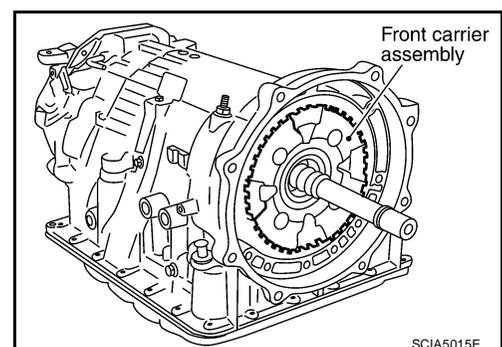


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


14. Loosen lock nut and remove band servo anchor end pin from transmission case.

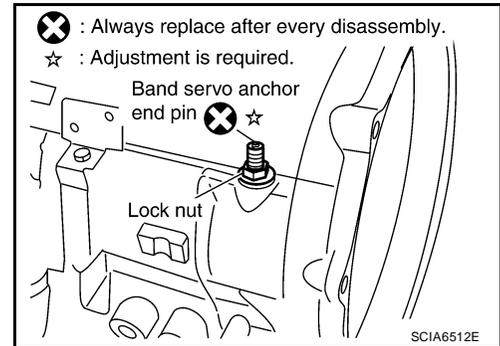


15. Remove brake band from transmission case.

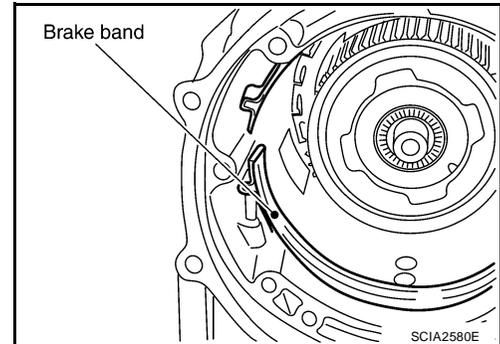


- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at right. Leave the clip in position after removing the brake band.
- Check brake band facing for damage, cracks, wear or burns.

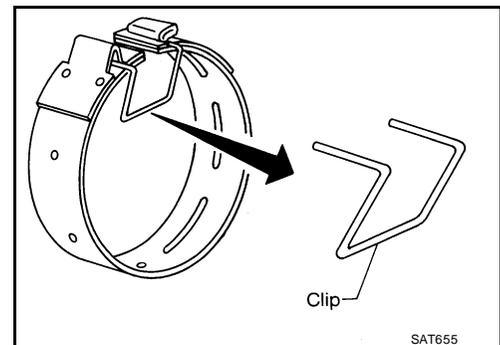

16. Remove mid carrier assembly and rear carrier assembly as a unit.

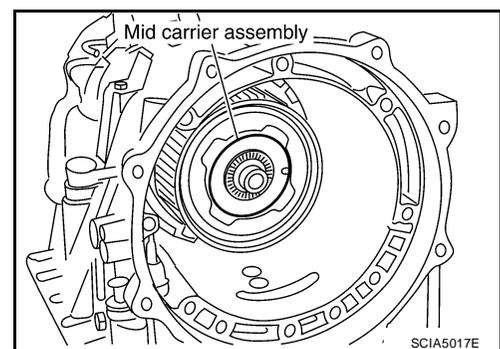


17. Remove mid carrier assembly from rear carrier assembly.

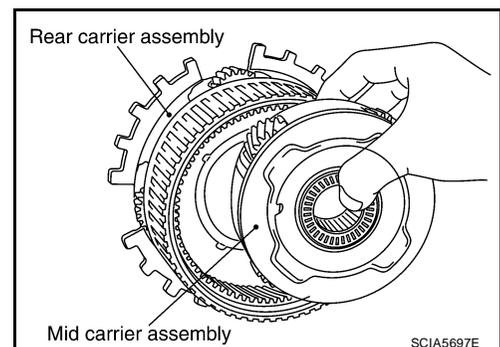


DISASSEMBLY


18. Remove needle bearing (front side) from mid carrier assembly.

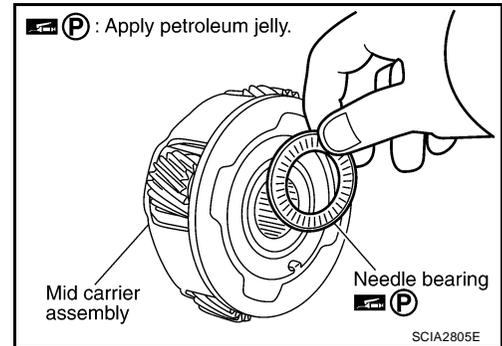


19. Remove needle bearing (rear side) from mid carrier assembly.

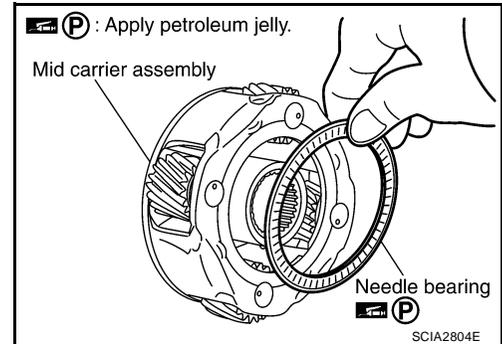

20. Remove bearing race from rear carrier assembly.

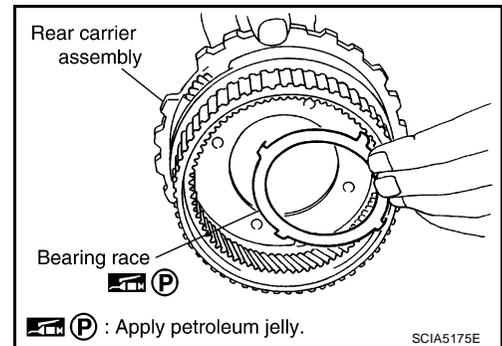


21. Remove needle bearing from rear carrier assembly.

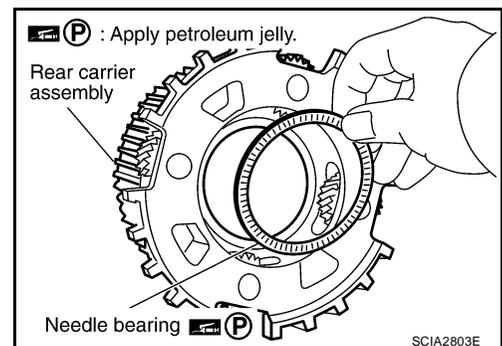

22. Remove mid sun gear assembly, rear sun gear assembly and high and low reverse clutch hub as a unit.

CAUTION:

Be careful to remove them with bearing race and needle bearing.

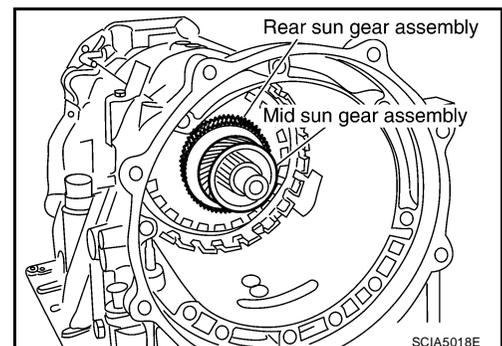


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


23. Remove high and low reverse clutch assembly from direct clutch assembly.

CAUTION:


Make sure that needle bearing is installed to the high and low reverse clutch assembly edge surface.

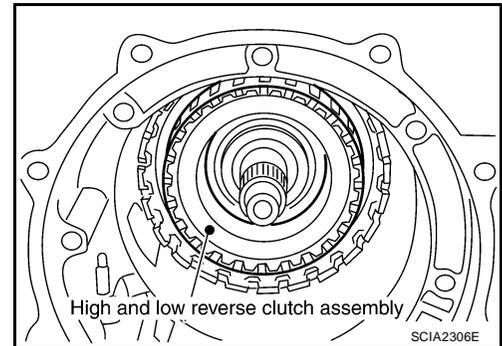


24. Remove needle bearing from drum support.

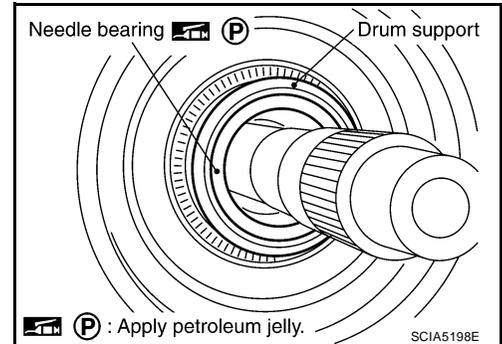

25. Remove direct clutch assembly from reverse brake.

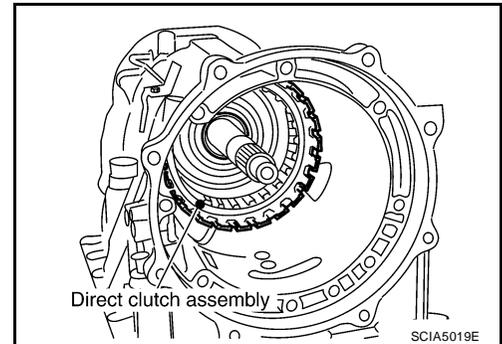


26. Remove snap ring from A/T assembly harness connector.

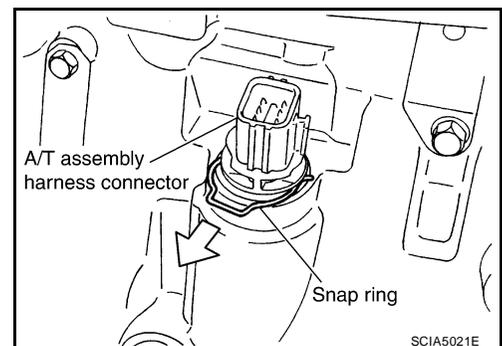

27. Push A/T assembly harness connector.


CAUTION:

Be careful not to damage connector.

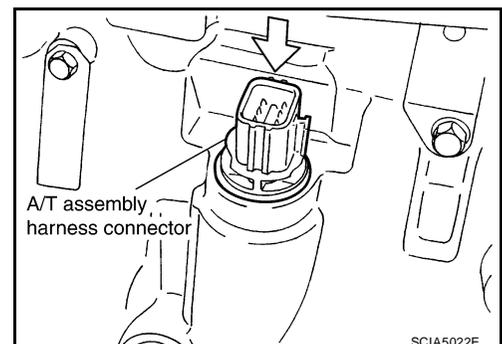


DISASSEMBLY

28. Remove oil pan and oil pan gasket.

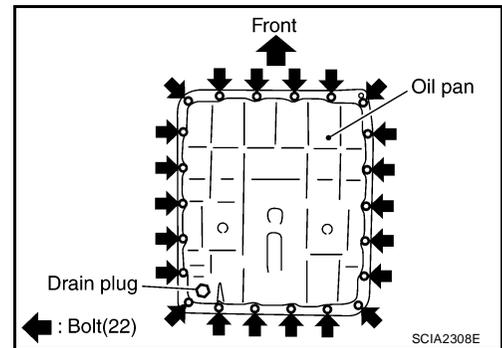


29. Check foreign materials in oil pan to help determine causes of malfunction. If the A/T fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [AT-13, "A/T Fluid Cooler Cleaning"](#).

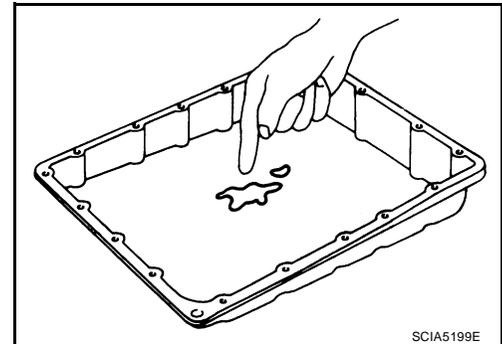


30. Remove magnets from oil pan.

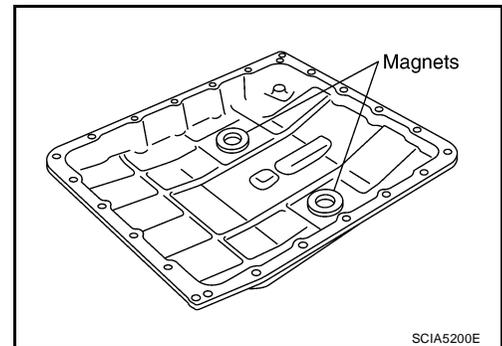

31. Straighten terminal clips to free terminal cord assembly and A/T fluid temperature sensor 2 harness.

32. Disconnect A/T fluid temperature sensor 2 connector.


- CAUTION:**
Be careful not to damage connector.

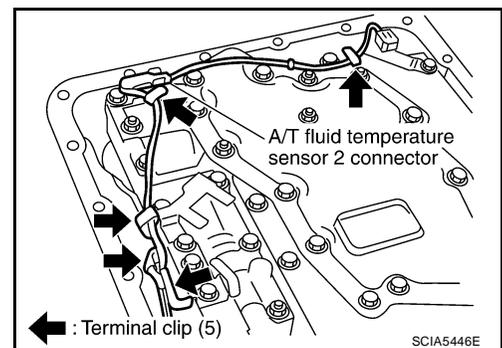

33. Straighten terminal clips to free revolution sensor harness.

34. Disconnect revolution sensor connector.


- CAUTION:**
Be careful not to damage connector.

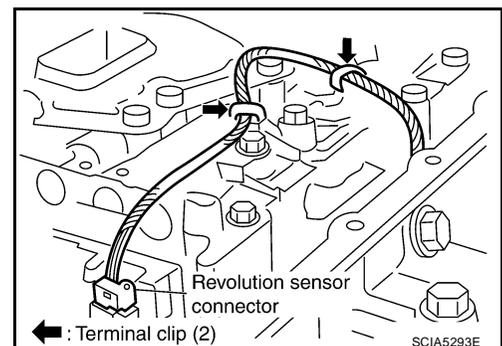

DISASSEMBLY

35. Remove bolts A, B and C from control valve with TCM.


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

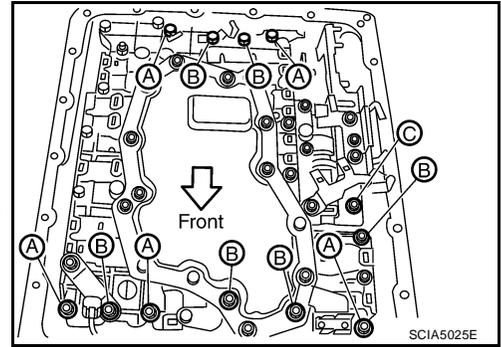


36. Remove control valve with TCM from transmission case.

CAUTION:


When removing, be careful with the manual valve notch and manual plate height. Remove it vertically.

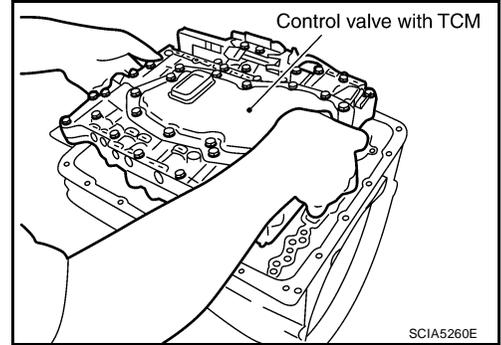


37. Remove A/T fluid temperature sensor 2 with bracket from control valve with TCM.

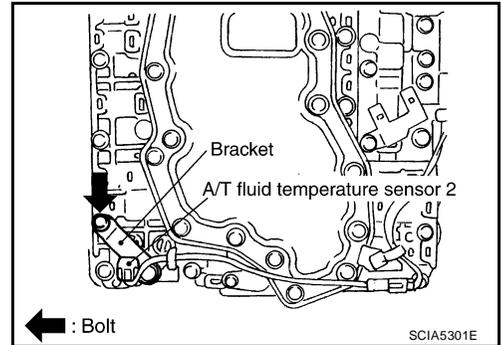

38. Remove bracket from A/T fluid temperature sensor 2.

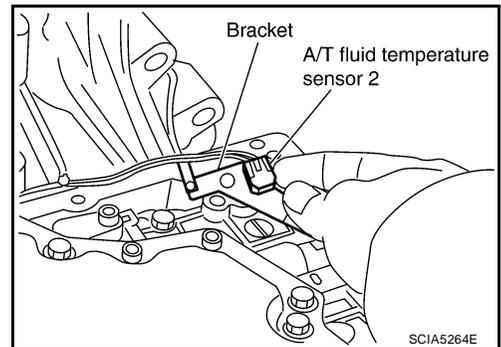

39. Remove O-ring from A/T assembly harness connector.

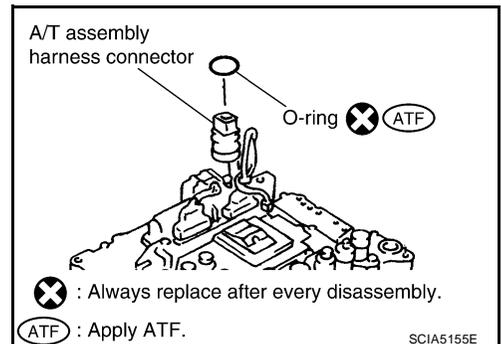


DISASSEMBLY


40. Disconnect TCM connectors.

CAUTION:

Be careful not to damage connectors.

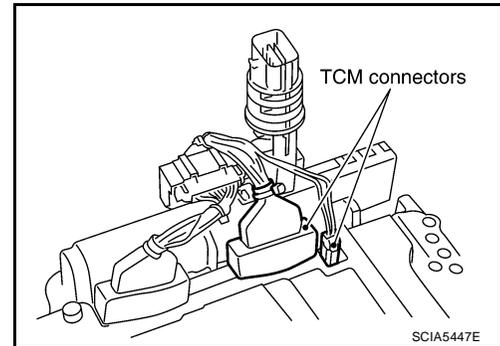


41. Remove A/T assembly harness connector from control valve with TCM using a flat-bladed screwdriver.

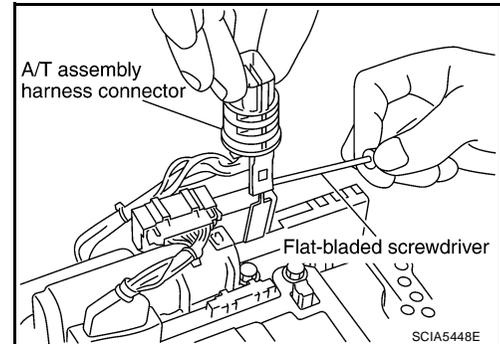

42. Disconnect TCM connector and park/neutral position switch connector.

CAUTION:


Be careful not to damage connectors.

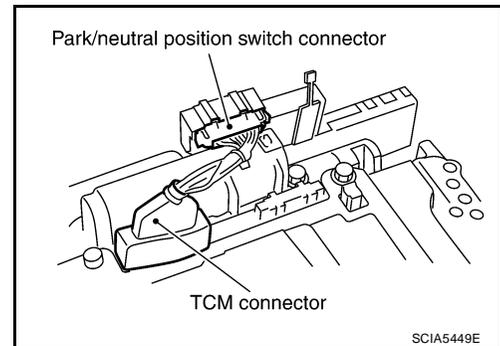

43. Remove rear extension assembly (2WD models) or adapter case assembly (4WD models) according to the following procedures.


a. **2WD models**

i. Remove tightening bolts for rear extension assembly and transmission case.

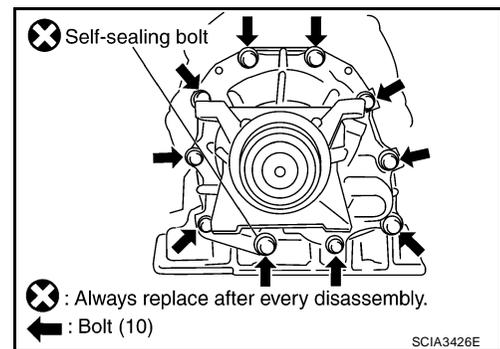


DISASSEMBLY

ii. Tap rear extension assembly with soft hammer.

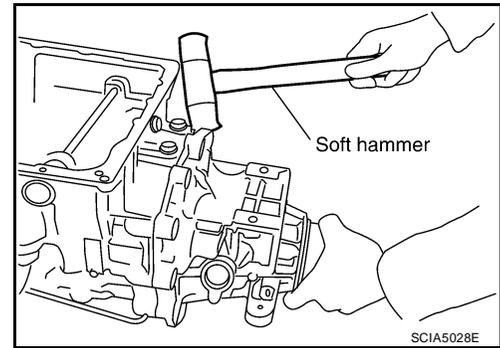


iii. Remove rear extension assembly from transmission case. (With needle bearing.)

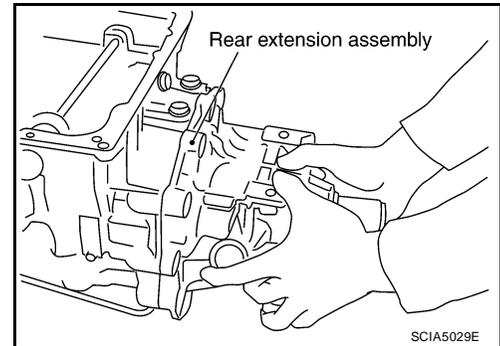


b. 4WD models

i. Remove tightening bolts (1) for adapter case assembly and transmission case. (With terminal bracket (2).)

- Self-sealing bolt (3)

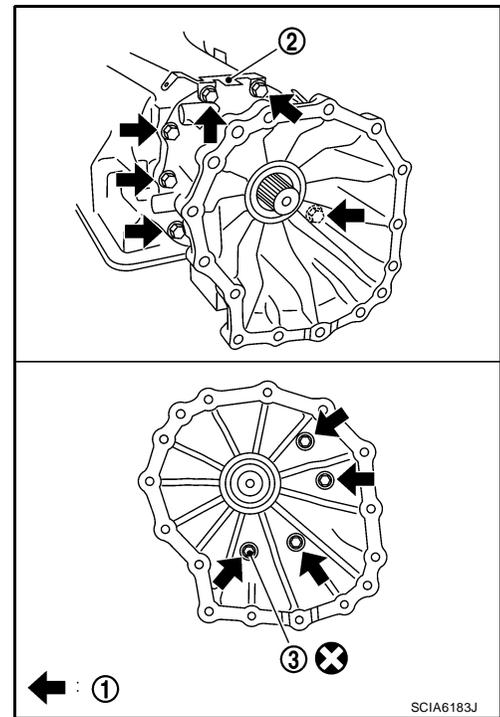


ii. Tap adapter case assembly with soft hammer.

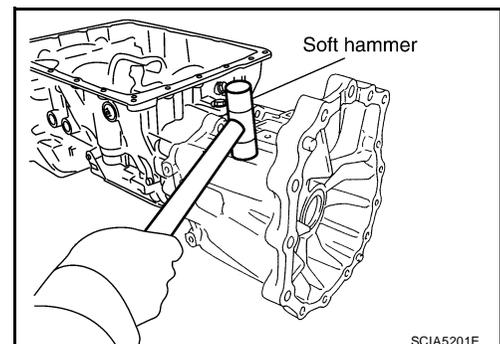


DISASSEMBLY


- iii. Remove adapter case assembly from transmission case. (With needle bearing)

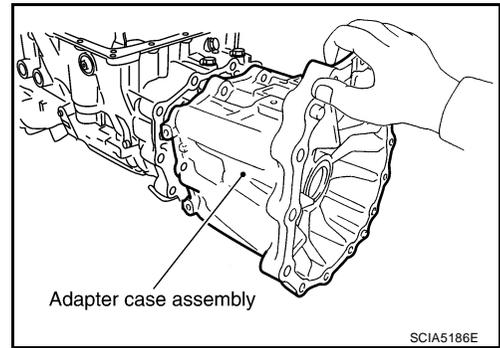


- iv. Remove gasket from transmission case.

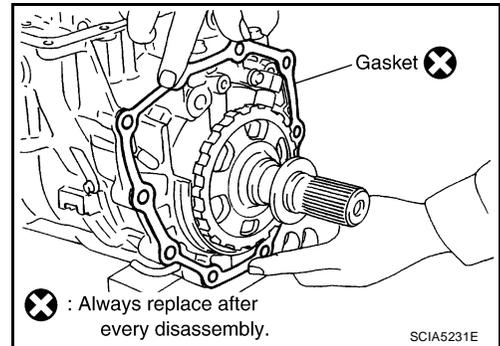


44. Remove bearing race from output shaft.

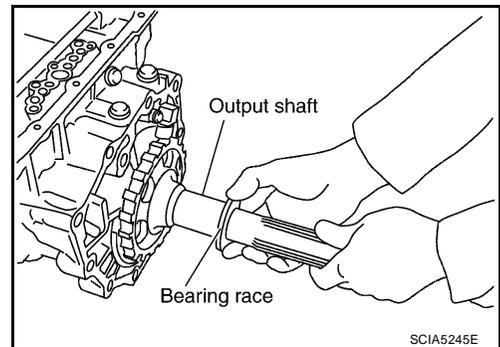

45. Remove output shaft from transmission case by rotating left/right.

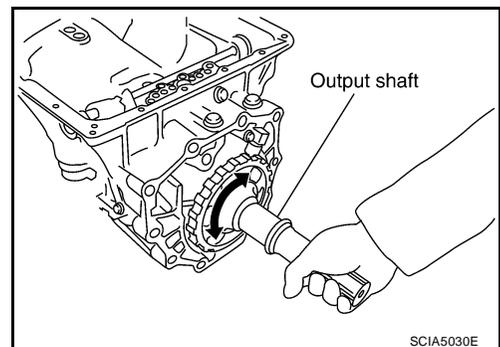


46. Remove parking gear from output shaft.

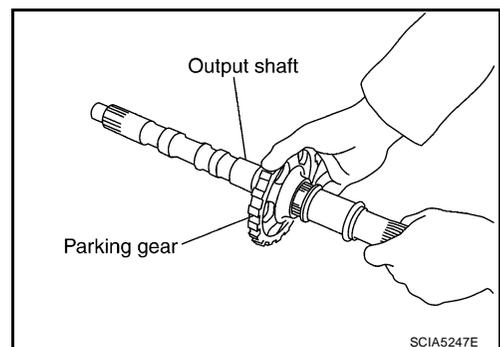


DISASSEMBLY

47. Remove seal rings from output shaft.

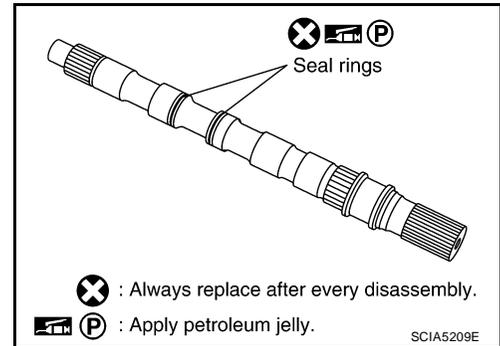


48. Remove needle bearing from transmission case.

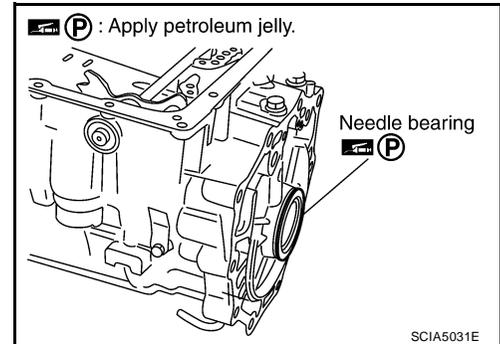

49. Remove revolution sensor from transmission case.

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

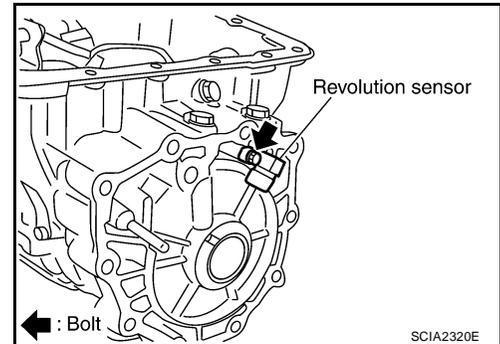


50. Remove reverse brake snap ring (fixing plate) using 2 flat-bladed screwdrivers.

NOTE:


Press out snap ring from the transmission case oil pan side gap using a flat-bladed screwdriver, and remove it using a another screwdriver.

51. Remove reverse brake retaining plate from transmission case.

- Check facing for burns, cracks or damage. If necessary, replace the plate.

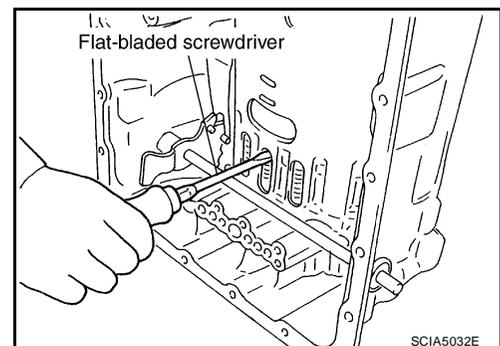


52. Remove N-spring from transmission case.

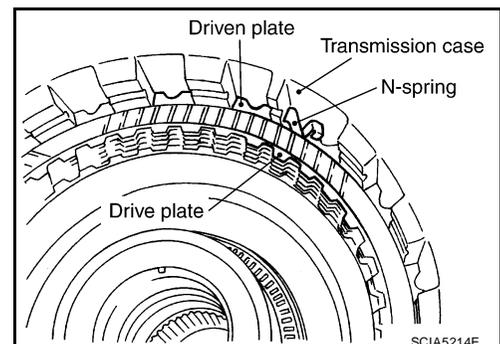


DISASSEMBLY

53. Remove reverse brake drive plates, driven plates and dish plate from transmission case.


- Check facing for burns, cracks or damage. If necessary, replace the plate.

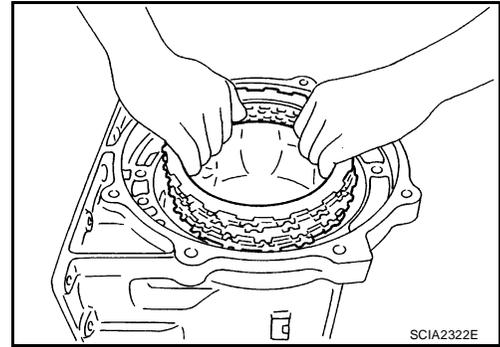


54. Remove snap ring (fixing spring retainer) using a flat-bladed screwdriver.

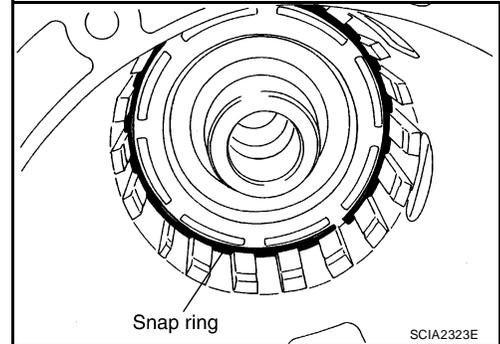


55. Remove spring retainer and return spring from transmission case.

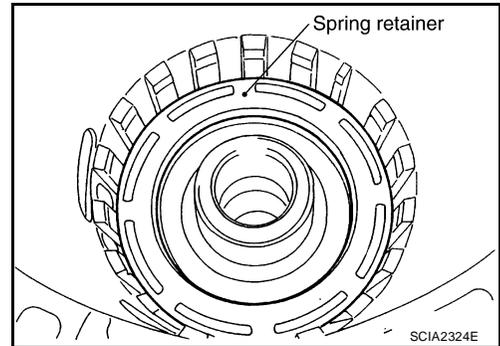

56. Remove seal rings from drum support.

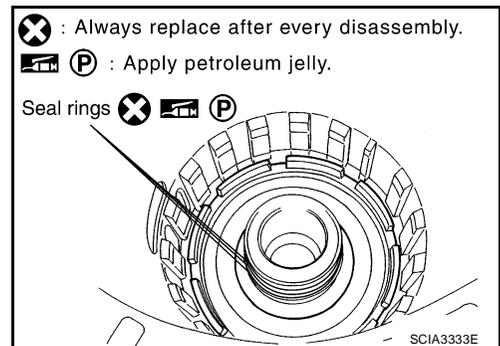

57. Remove needle bearing from drum support edge surface.

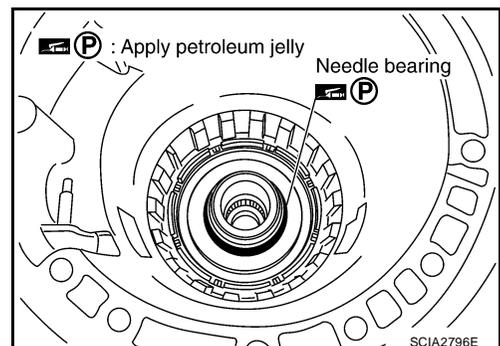


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


58. Remove reverse brake piston from transmission case with compressed air. Refer to [AT-259, "Oil Channel"](#) .

CAUTION:


Care should be taken not to abruptly blow air. It makes pistons incline, as the result, it becomes hard to disassemble the pistons.

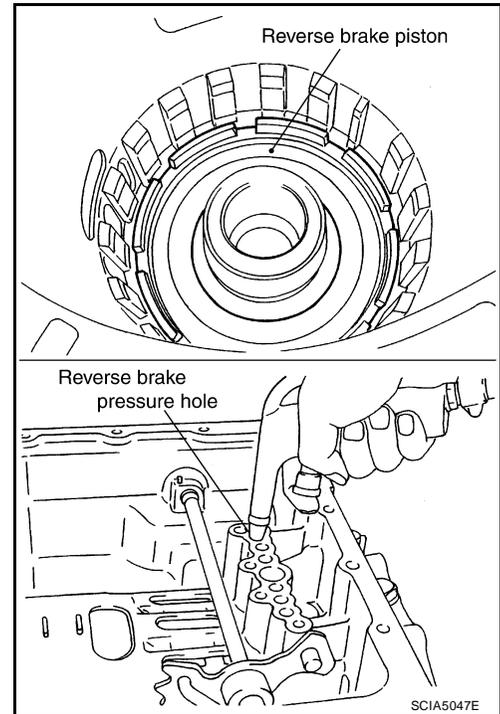


59. Remove D-rings from reverse brake piston.

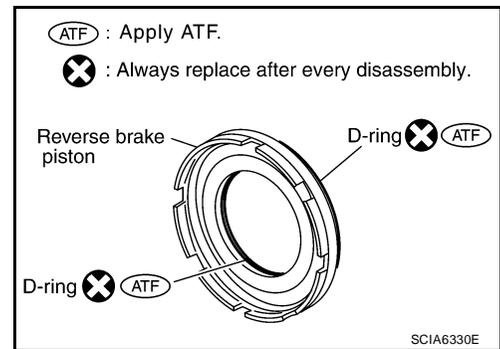

60. Use a pin punch (4mm dia. commercial service tool) to knock out retaining pin.

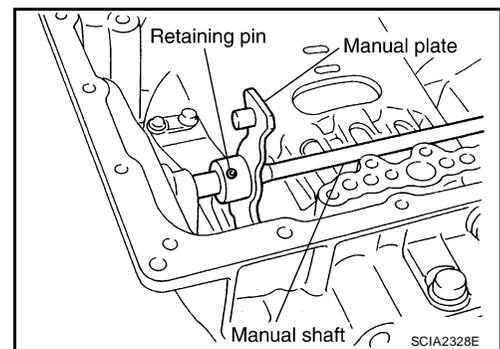


61. Remove manual shaft retaining pin with a pair of nippers.

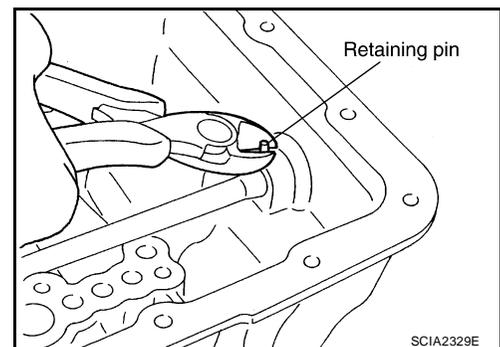


DISASSEMBLY


62. Remove manual plate (with parking rod) from manual shaft.

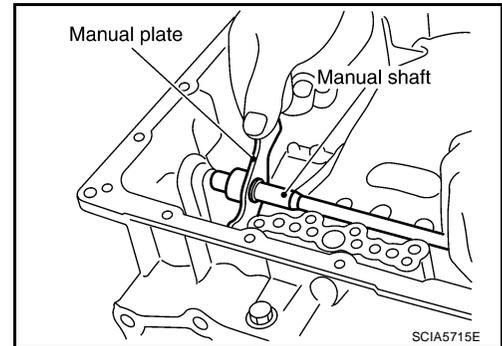

63. Remove parking rod from manual plate.

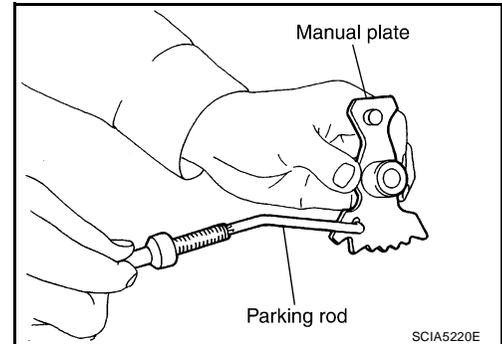


64. Remove manual shaft from transmission case.

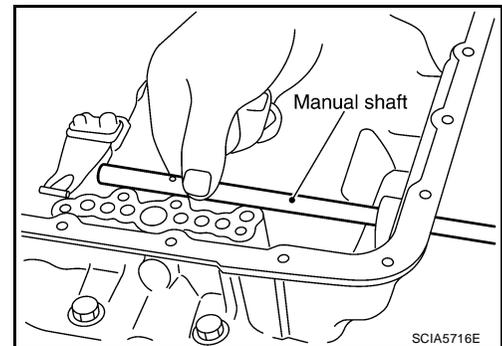


65. Remove manual shaft oil seals using a flat-bladed screwdriver.

CAUTION:
Be careful not to scratch transmission case.

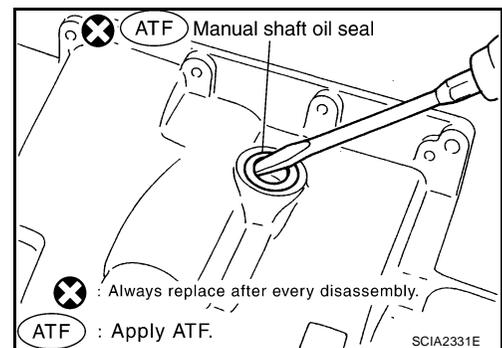


66. Remove detent spring and spacer from transmission case.

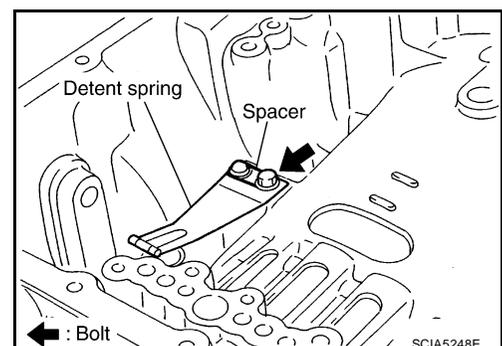


A
B
AT
D
E
F
G
H
I
J
K
L
M

DISASSEMBLY


67. Using a pair of snap ring pliers, remove snap ring from transmission case.

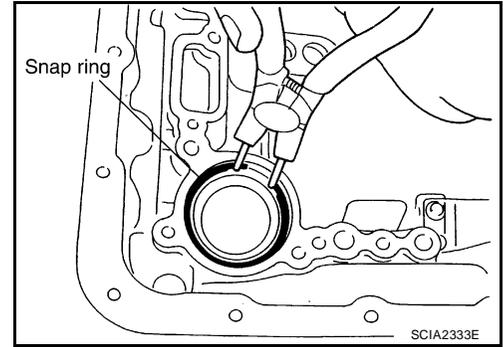


68. Remove servo assembly (with return spring) from transmission case.

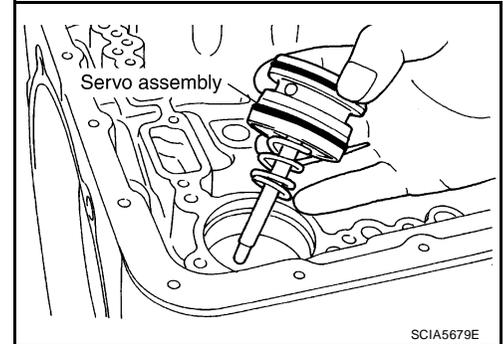


69. Remove return spring from servo assembly.

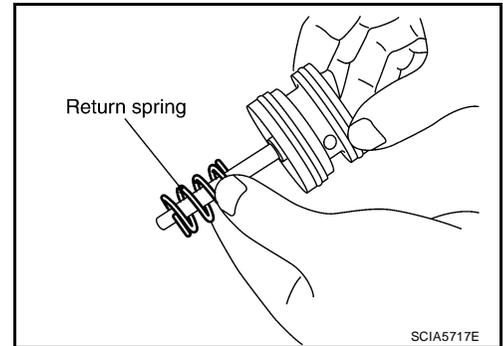

70. Remove O-rings from servo assembly.

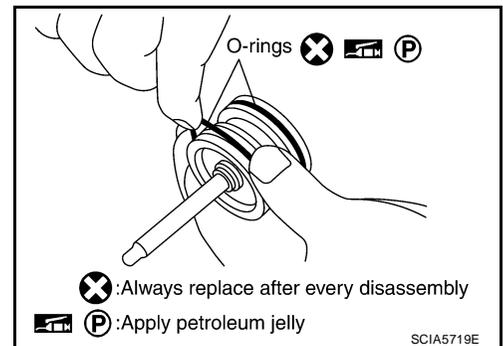


71. Remove needle bearing (1) from rear extension (2WD models) or adapter case (4WD models).

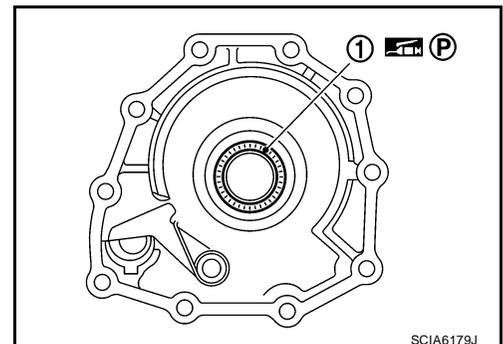


DISASSEMBLY


72. Remove parking actuator support from rear extension (2WD models) or adapter case (4WD models).

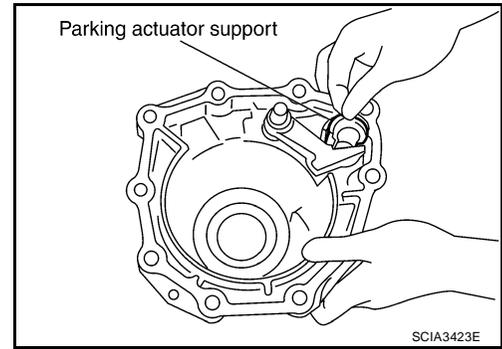

73. Remove parking pawl (with return spring) and pawl shaft from rear extension (2WD models) or adapter case (4WD models).

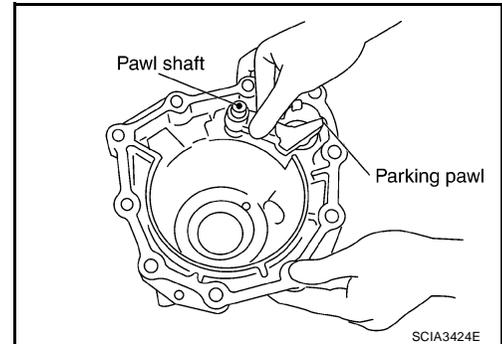


74. Remove return spring (1) from parking pawl (2).

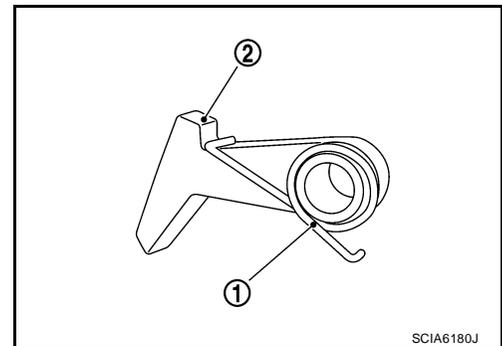

75. Remove rear oil seal from rear extension (2WD models) or adapter case (4WD models).

CAUTION:

Be careful not to scratch rear extension (2WD models) or adapter case (4WD models).

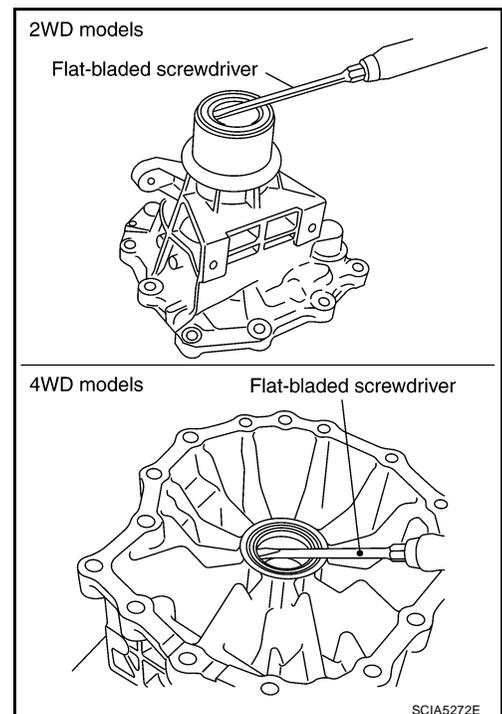


REPAIR FOR COMPONENT PARTS

PFP:00000

UCS003Z5

REPAIR FOR COMPONENT PARTS


Oil Pump COMPONENTS

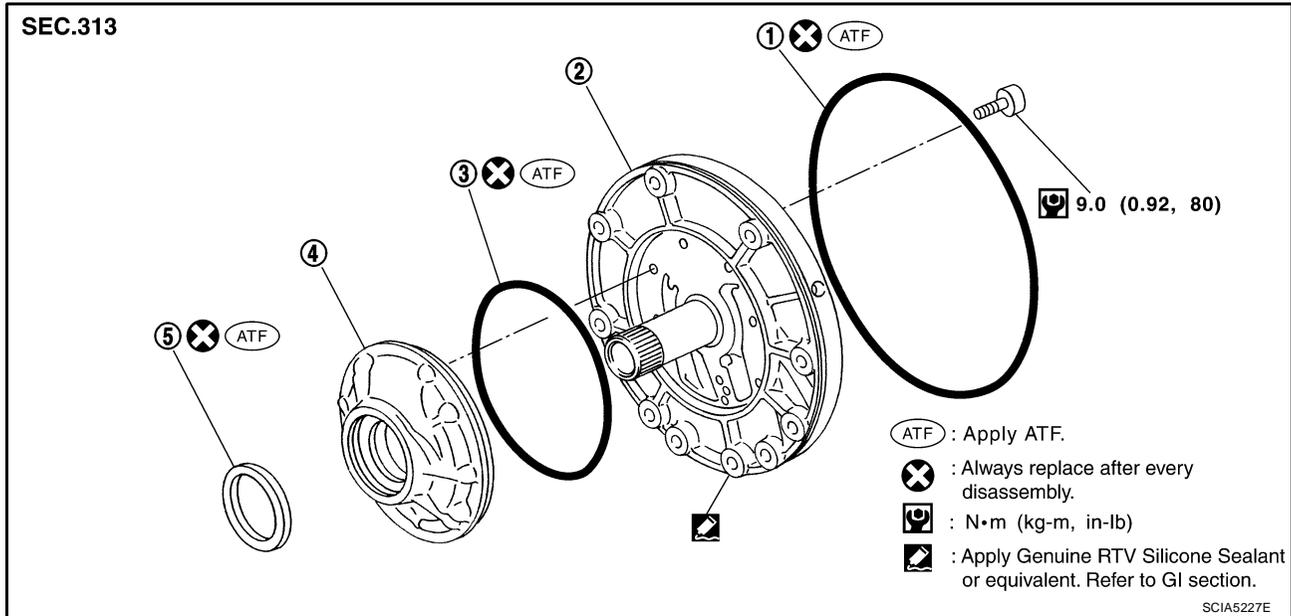

1. O-ring
2. Oil pump cover
3. O-ring
4. Oil pump housing
5. Oil pump housing oil seal

DISASSEMBLY


1. Remove oil pump housing from oil pump cover.

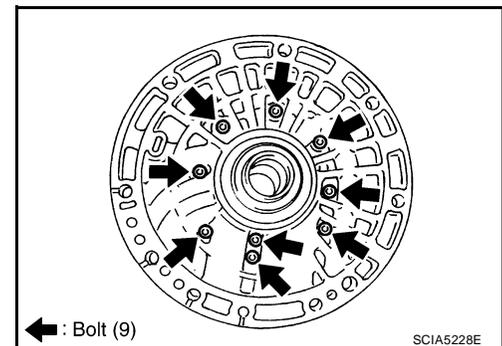

2. Remove oil pump housing oil seal using a flat-bladed screwdriver.


CAUTION:

Be careful not to scratch oil pump housing.

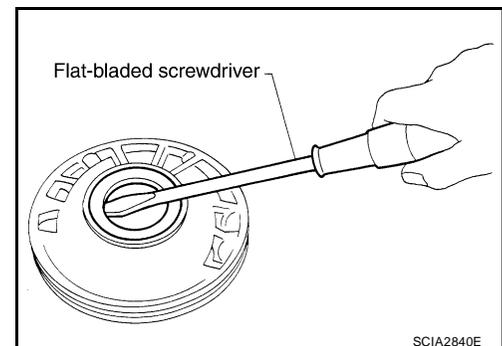

REPAIR FOR COMPONENT PARTS

3. Remove O-ring from oil pump housing.

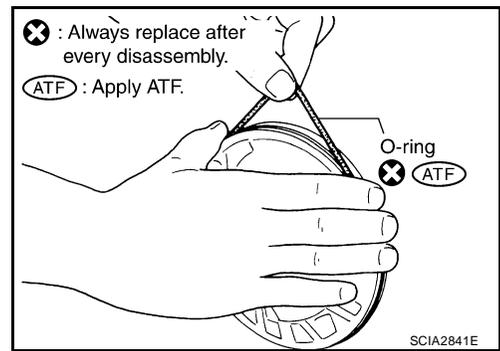

4. Remove O-ring from oil pump cover.



ASSEMBLY

1. Install O-ring to oil pump cover.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.



2. Install O-ring to oil pump housing.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

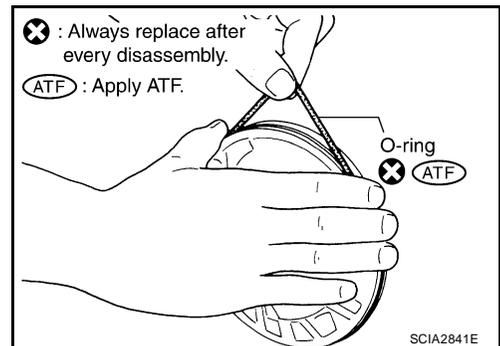


A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

3. Using the drift, install oil pump housing oil seal to the oil pump housing until it is flush.


CAUTION:

- Do not reuse oil seal.
- Apply ATF to oil seal.

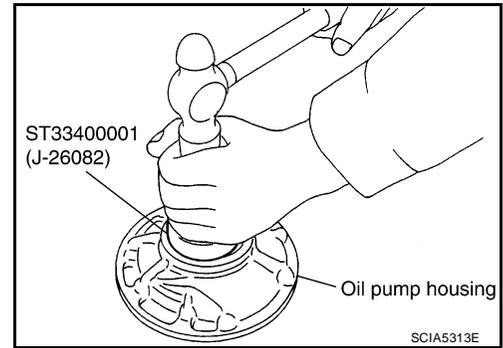

4. After temporarily tightening the bolts for the oil pump housing to the oil pump cover, tighten them with the in the figure.


 : 9.0 N·m (0.92 kg-m, 80 in-lb.)

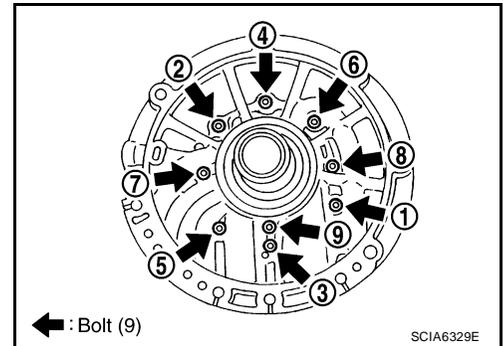

REPAIR FOR COMPONENT PARTS

Front Sun Gear, 3rd One-Way Clutch COMPONENTS


UCS003Z6

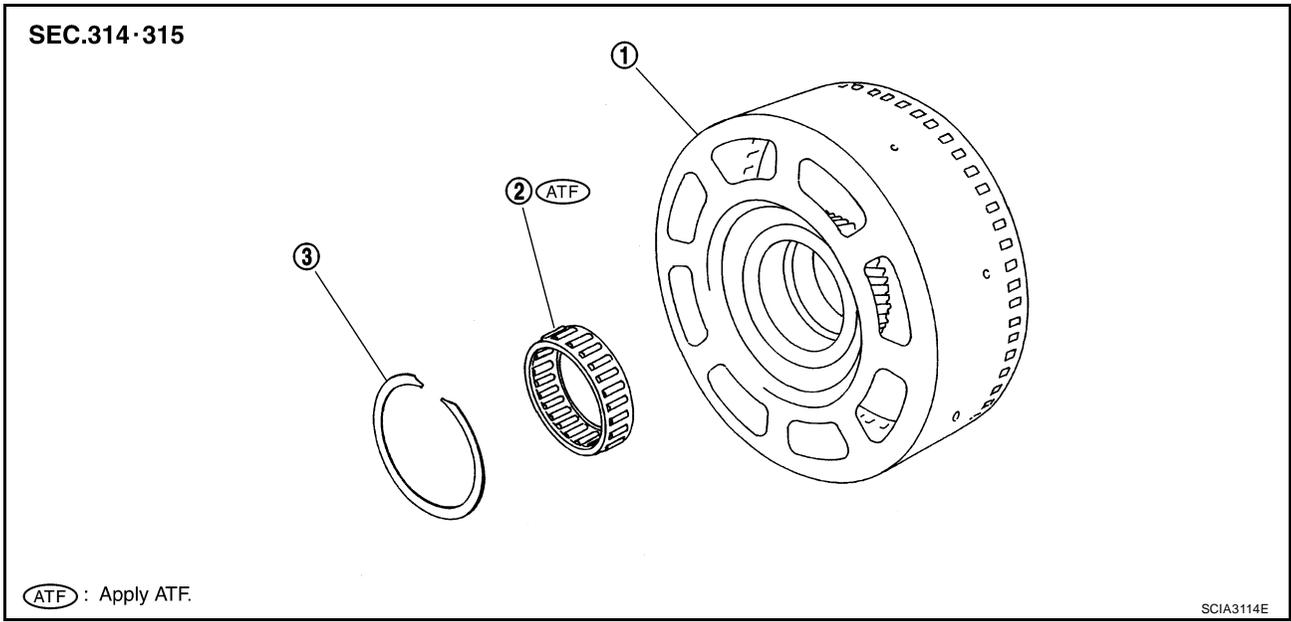


1. Front sun gear
2. 3rd one-way clutch
3. Snap ring

DISASSEMBLY

1. Using a flat-bladed screwdriver, remove snap ring from front sun gear.

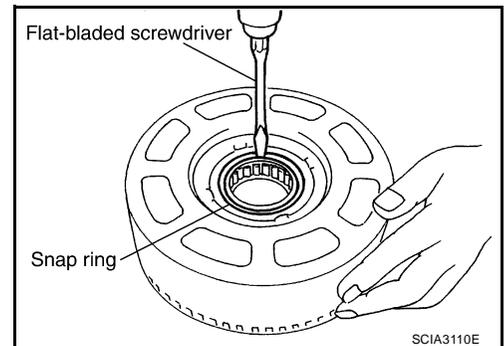

2. Remove 3rd one-way clutch from front sun gear.

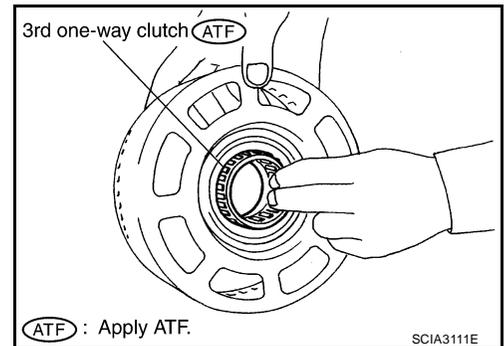

A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

INSPECTION

3rd One-way Clutch

- Check frictional surface for wear or damage.

CAUTION:

If necessary, replace the 3rd one-way clutch.

Front Sun Gear Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the snap ring.

Front Sun Gear

- Check for deformation, fatigue or damage.

CAUTION:


If necessary, replace the front sun gear.

ASSEMBLY


1. Install 3rd one-way clutch in front sun gear.

CAUTION:

Apply ATF to 3rd one-way clutch.

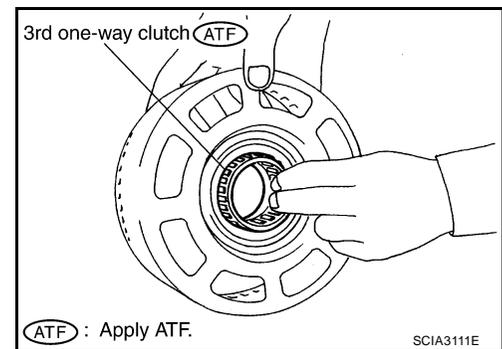


2. Using a flat-bladed screwdriver, install snap ring in front sun gear.

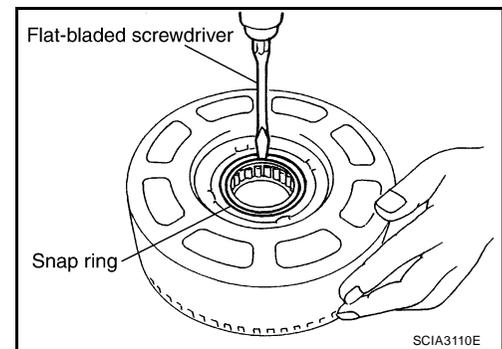

3. Check operation of 3rd one-way clutch.
 - a. Hold oil pump assembly and turn front sun gear.
 - b. Check 3rd one-way clutch for correct locking and unlocking directions.

CAUTION:


If not as shown in figure, check installation direction of 3rd one-way clutch.

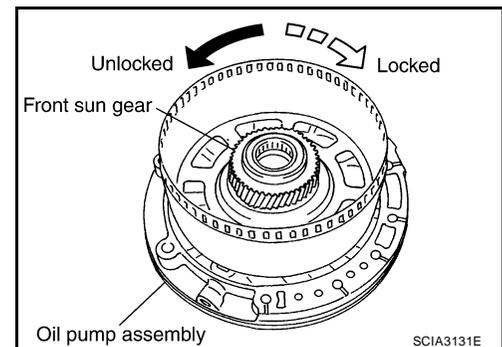


REPAIR FOR COMPONENT PARTS

DISASSEMBLY

1. Compress snap ring using 2 flat-bladed screwdrivers.
2. Remove front carrier assembly and input clutch assembly from rear internal gear.
3. Remove front carrier assembly from input clutch assembly.

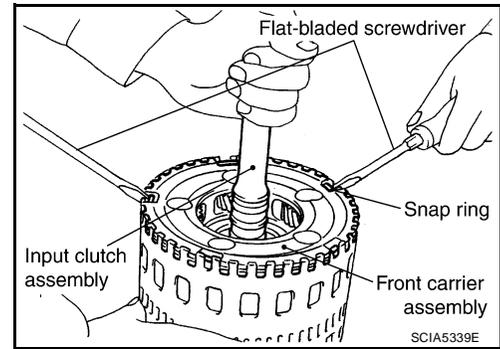


- a. Remove bearing race from front carrier assembly.

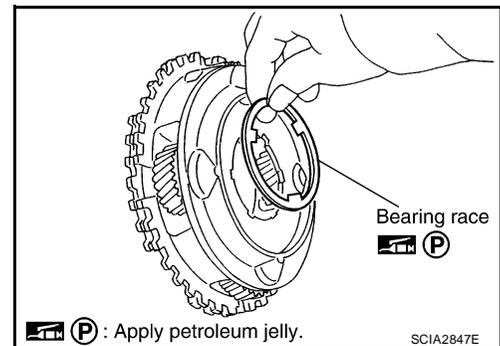


- b. Remove snap ring from front carrier assembly.

CAUTION:
Do not expand snap ring excessively.

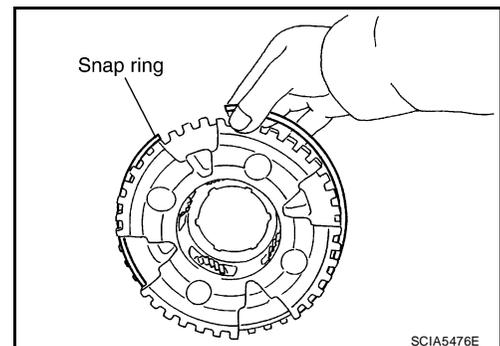


4. Disassemble input clutch assembly.

 - a. Remove O-ring and seal rings from input clutch assembly.

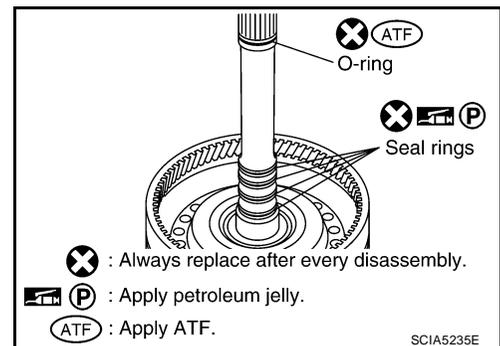


REPAIR FOR COMPONENT PARTS

- b. Remove needle bearing from input clutch assembly.

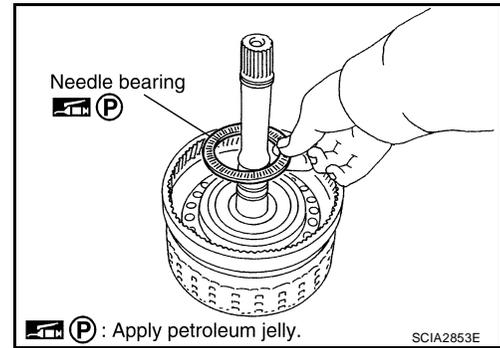

- c. Using a flat-bladed screwdriver, remove snap ring from input clutch drum.
- d. Remove drive plates, driven plates and retaining plate from input clutch drum.

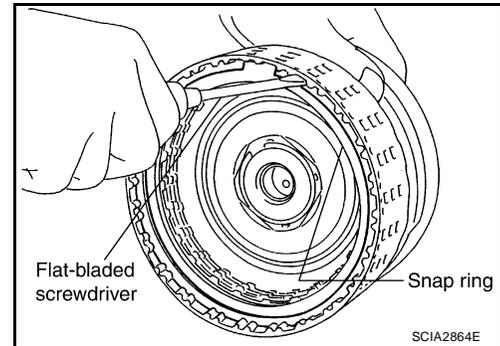

INSPECTION

Front Carrier Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the snap ring.

Input Clutch Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the input clutch assembly.

Input Clutch Drum

- Check for deformation, fatigue or damage or burns.

CAUTION:

If necessary, replace the input clutch assembly.

Input Clutch Drive Plates

- Check facing for burns, cracks or damage.

CAUTION:

If necessary, replace the input clutch assembly.

Input Clutch Retaining Plate and Driven Plates

- Check facing for burns, cracks or damage.

CAUTION:

If necessary, replace the input clutch assembly.

Front Carrier

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the front carrier assembly.

Rear Internal Gear

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the rear internal gear assembly.

A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS


ASSEMBLY

1. Install input clutch.
 - a. Install drive plates, driven plates and retaining plate in input clutch drum.

CAUTION:

Take care with order of plates.


- b. Using a flat-bladed screwdriver, install snap ring in input clutch drum.

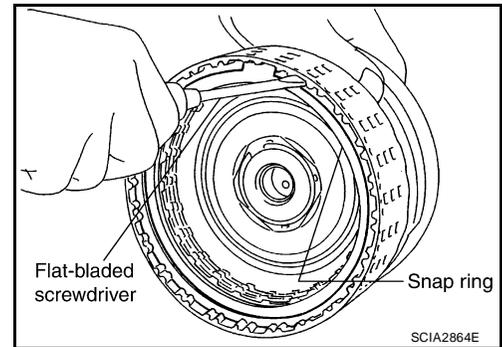

- c. Install needle bearing in input clutch assembly.

CAUTION:


Apply petroleum jelly to needle bearing.

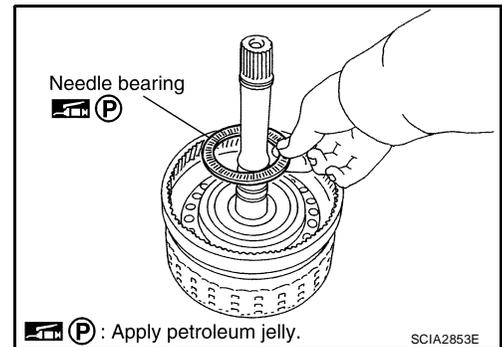

- d. Install O-ring and seal rings in input clutch assembly.

CAUTION:

- Do not reuse O-ring and seal rings.
- Apply ATF to O-ring.
- Apply petroleum jelly to seal rings.

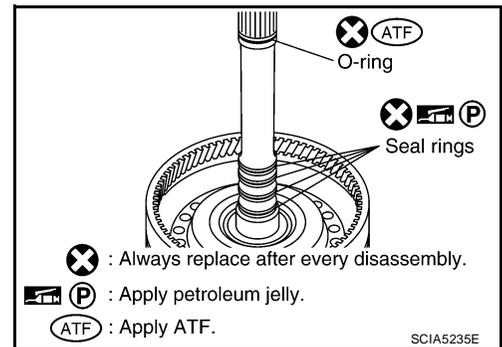


2. Install front carrier assembly.

- a. Install snap ring to front carrier assembly.

CAUTION:

Do not expand snap ring excessively.

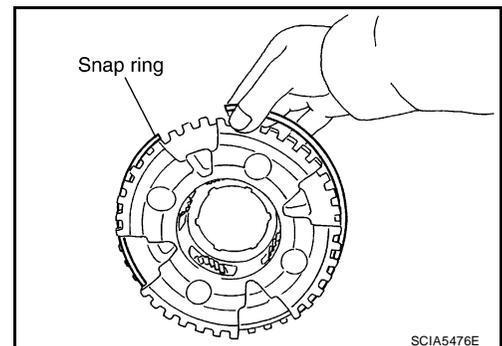


REPAIR FOR COMPONENT PARTS

- b. Install bearing race in front carrier assembly.


CAUTION:

Apply petroleum jelly to bearing race.

- c. Install front carrier assembly to input clutch assembly.

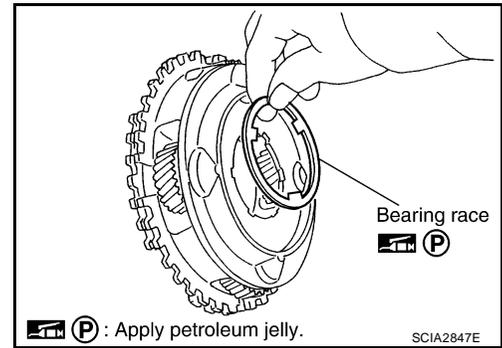

3. Compress snap ring using 2 flat-bladed screwdrivers.
4. Install front carrier assembly and input clutch assembly to rear internal gear.

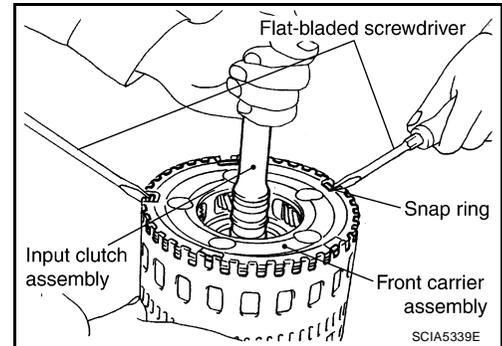

A
B
AT


D
E
F
G

H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

Mid Sun Gear, Rear Sun Gear, High and Low Reverse Clutch Hub COMPONENTS


UCS003Z8

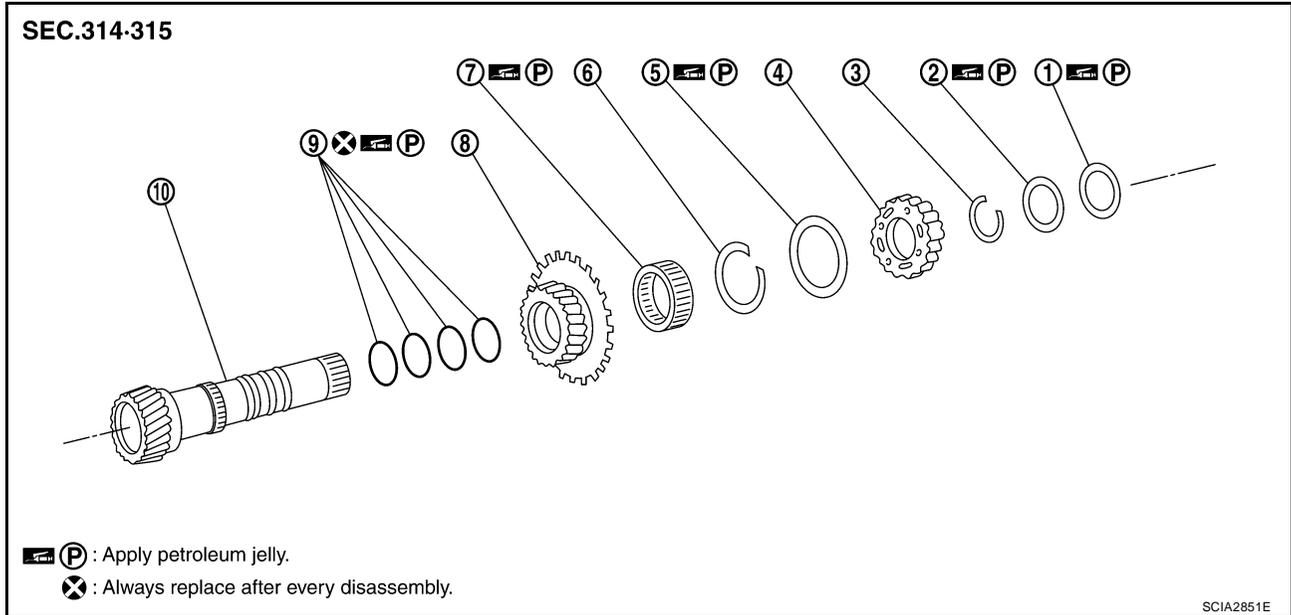

- | | | |
|------------------------------------|-------------------|--------------|
| 1. Needle bearing | 2. Bearing race | 3. Snap ring |
| 4. High and low reverse clutch hub | 5. Needle bearing | 6. Snap ring |
| 7. 1st one-way clutch | 8. Rear sun gear | 9. Seal ring |
| 10. Mid sun gear | | |

DISASSEMBLY


1. Remove needle bearing and bearing race from high and low reverse clutch hub.

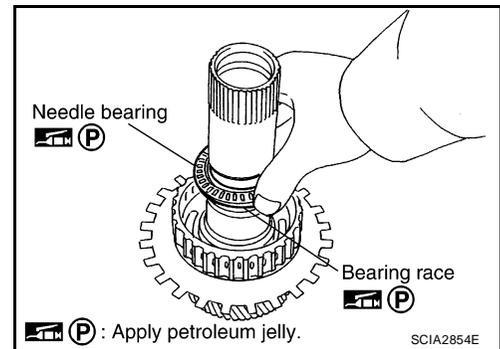

2. Using a pair of snap ring pliers, remove snap ring from mid sun gear assembly.


CAUTION:

Do not expand snap ring excessively.

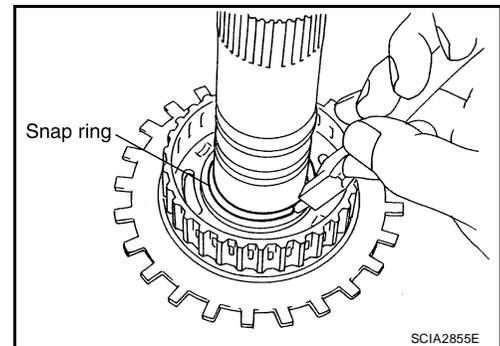


REPAIR FOR COMPONENT PARTS


3. Remove high and low reverse clutch hub from mid sun gear assembly.

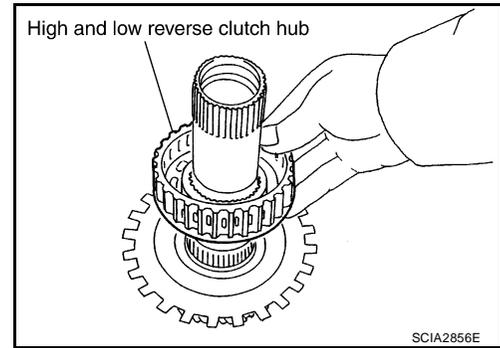


- a. Remove needle bearing from high and low reverse clutch hub.

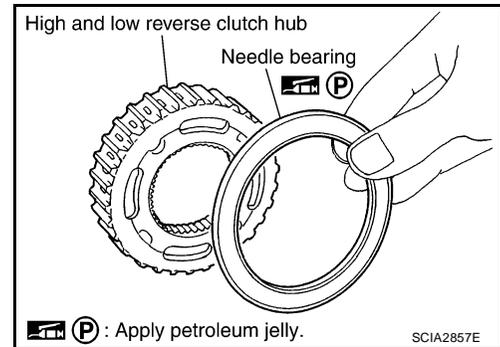

4. Remove rear sun gear assembly from mid sun gear assembly.

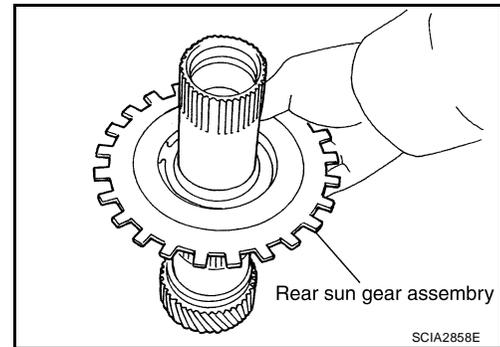


- a. Using a flat-bladed screwdriver, remove snap ring from rear sun gear.

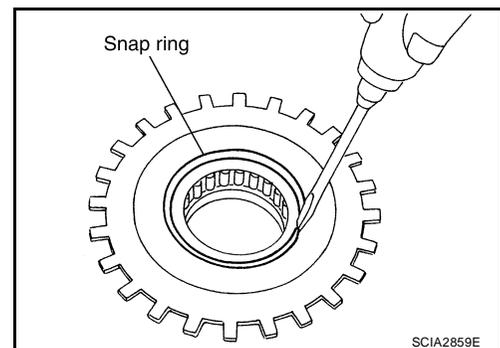


A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

- b. Remove 1st one-way clutch from rear sun gear.

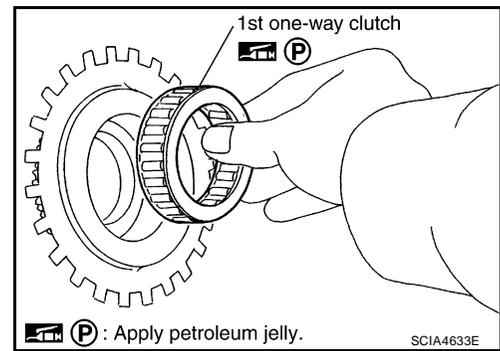

5. Remove seal rings from mid sun gear.

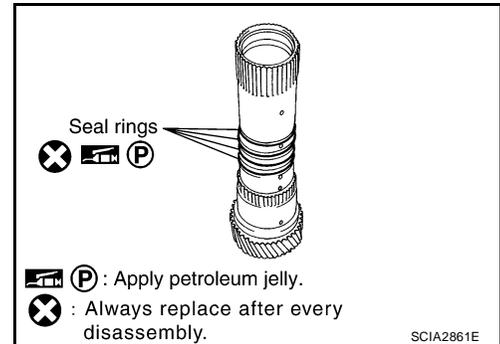

INSPECTION

High and Low Reverse Clutch Hub Snap Ring, Rear Sun Gear Snap Ring

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the snap ring.

1st One-way Clutch

- Check frictional surface for wear or damage.

CAUTION:

If necessary, replace the 1st one-way clutch.

Mid Sun Gear

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the mid sun gear.

Rear Sun Gear

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the rear sun gear.

High and Low Reverse Clutch Hub

- Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the high and low reverse clutch hub.


REPAIR FOR COMPONENT PARTS

ASSEMBLY

1. Install seal rings to mid sun gear.

CAUTION:


- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

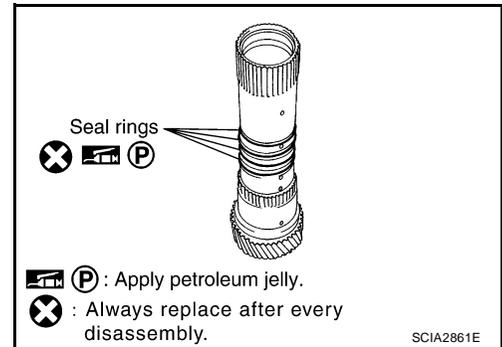


2. Install 1st one-way clutch to rear sun gear.

CAUTION:


- Apply petroleum jelly to 1st one-way clutch.

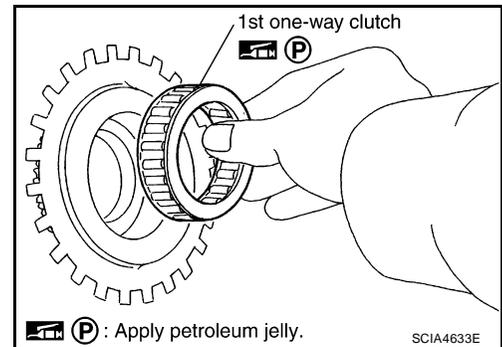

3. Using a flat-bladed screwdriver, install snap ring to rear sun gear.

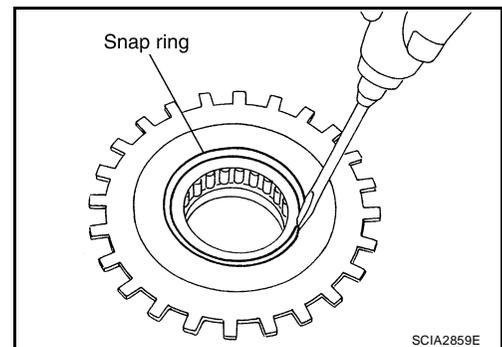

4. Install rear sun gear assembly to mid sun gear assembly.

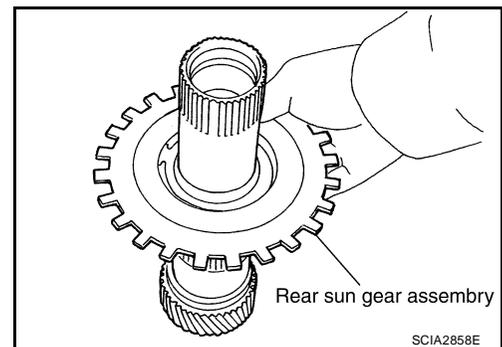


A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS


5. Install needle bearing to high and low reverse clutch hub.

CAUTION:

Apply petroleum jelly to needle bearing.

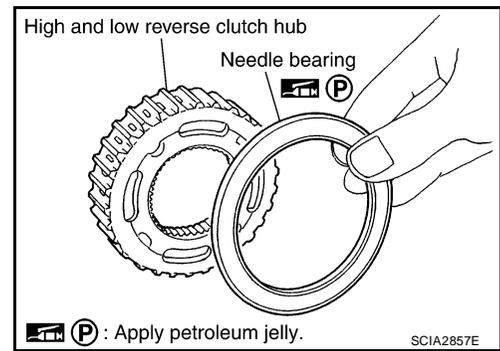


6. Install high and low reverse clutch hub to mid sun gear assembly.

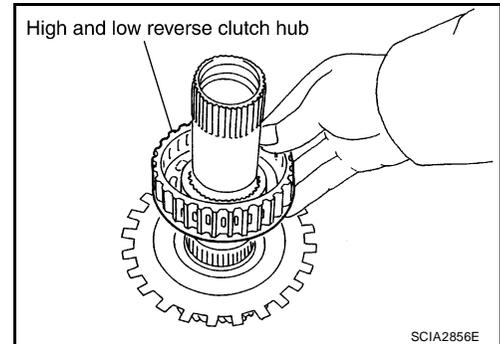

7. Using a pair of snap ring pliers, install snap ring to mid sun gear assembly.

CAUTION:

Do not expand snap ring excessively.

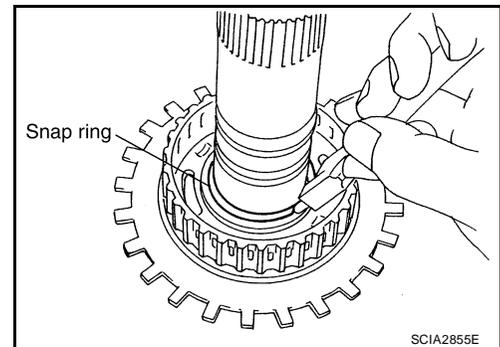


8. Check operation of 1st one-way clutch.

a. Hold mid sun gear and turn rear sun gear.

b. Check 1st one-way clutch for correct locking and unlocking directions.

CAUTION:


If not as shown in figure, check installation direction of 1st one-way clutch.

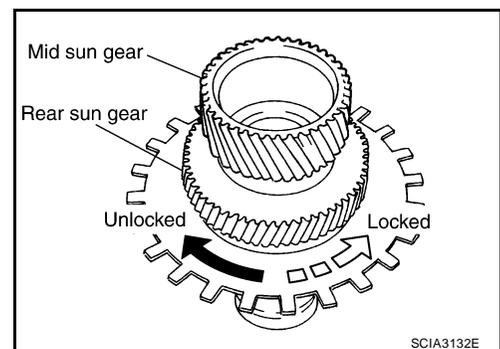

9. Install needle bearing and bearing race to high and low reverse clutch hub.

CAUTION:


Apply petroleum jelly to needle bearing and bearing race.

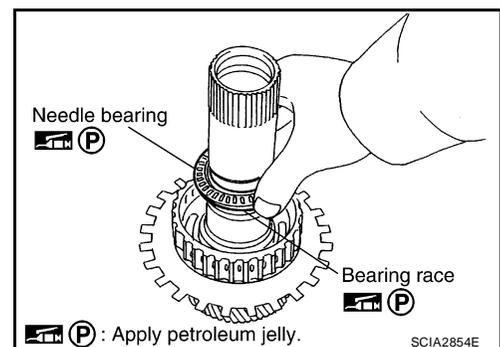

REPAIR FOR COMPONENT PARTS

UCS003Z9


High and Low Reverse Clutch COMPONENTS

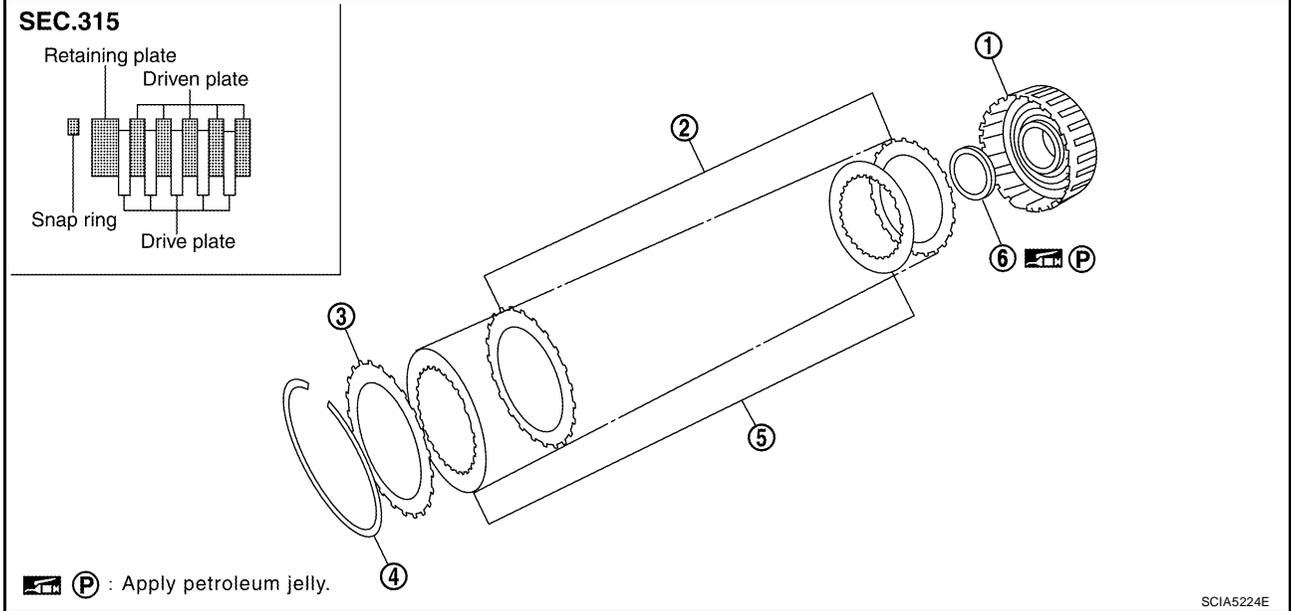


- | | | |
|-------------------------------------|-----------------|--------------------|
| 1. High and low reverse clutch drum | 2. Driven plate | 3. Retaining plate |
| 4. Snap ring | 5. Drive plate | 6. Bearing race |

DISASSEMBLY

1. Remove bearing race from high and low reverse clutch drum.

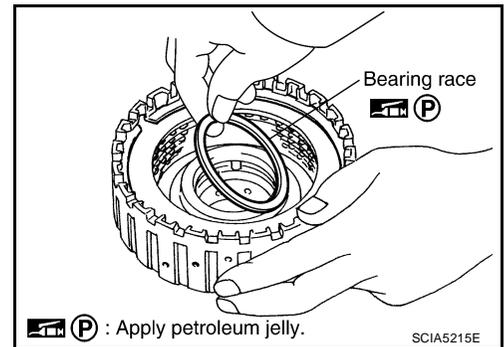

2. Using a flat-bladed screwdriver, remove snap ring from high and low reverse clutch drum.
3. Remove drive plates, driven plates and retaining plate from high and low reverse clutch drum.

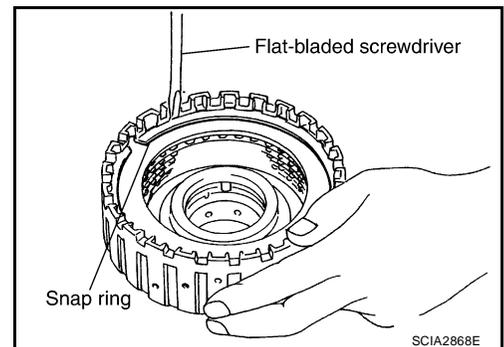

A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS

INSPECTION

- Check the following, and replace high and low reverse clutch assembly if necessary.

High and Low Reverse Clutch Snap Ring

- Check for deformation, fatigue or damage.

High and Low Reverse Clutch Drive Plates

- Check facing for burns, cracks or damage.

High and Low Reverse Clutch Retaining Plate and Driven Plates

- Check facing for burns, cracks or damage.


ASSEMBLY

1. Install drive plates, driven plates and retaining plate in high and low reverse clutch drum.

CAUTION:

Take care with order of plates.


2. Using a flat-bladed screwdriver, install snap ring in high and low reverse clutch drum.

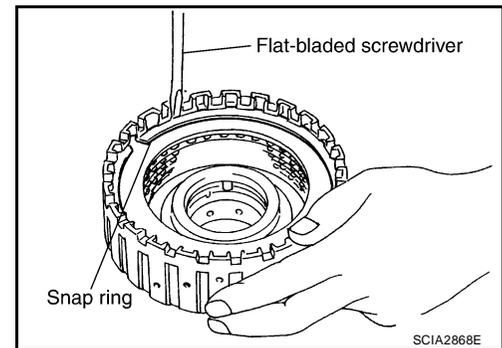

3. Install bearing race to high and low reverse clutch drum.

CAUTION:


Apply petroleum jelly to bearing race.

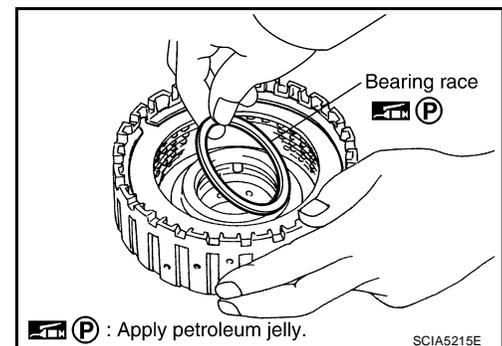

REPAIR FOR COMPONENT PARTS

UCS003ZA


Direct Clutch COMPONENTS

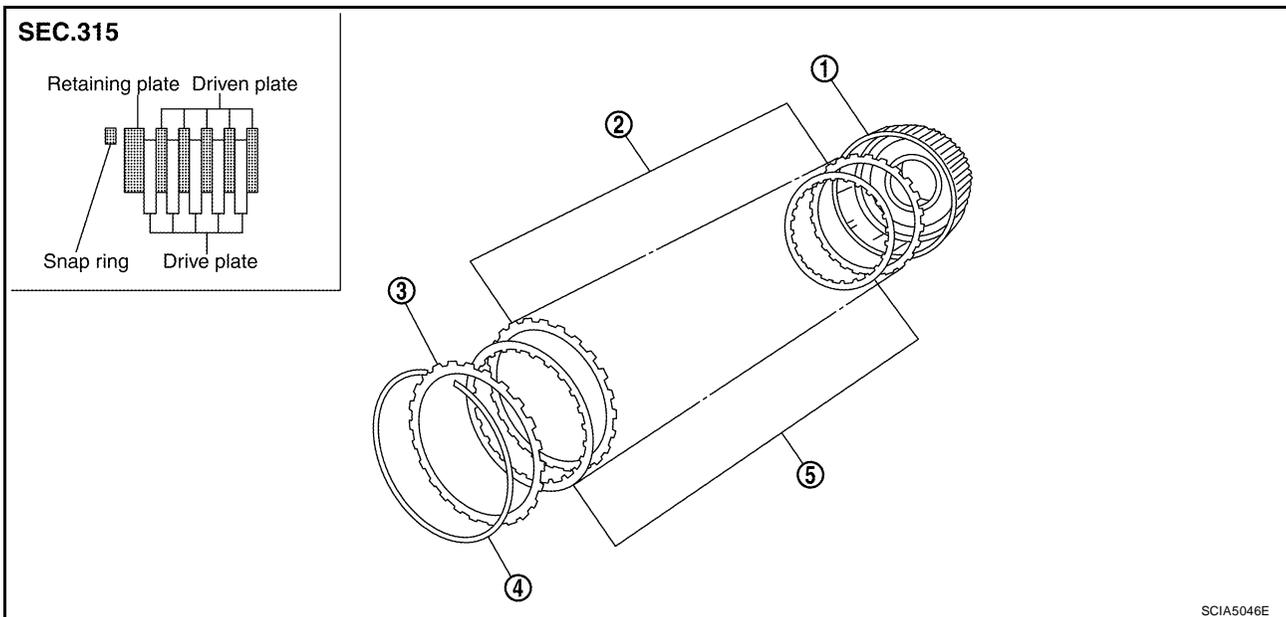

1. Direct clutch drum
2. Driven plate
3. Retaining plate
4. Snap ring
5. Drive plate

DISASSEMBLY

1. Using a flat-bladed screwdriver, remove snap ring from direct clutch drum.
2. Remove drive plates, driven plates and retaining plate from direct clutch drum.

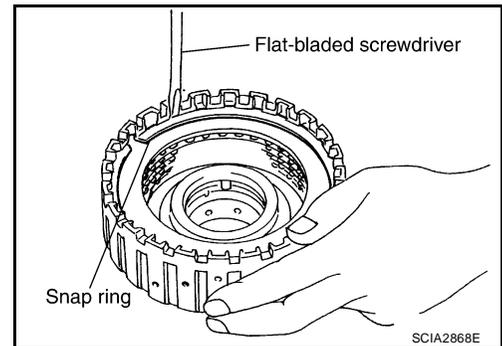

INSPECTION

- Check the following, and replace direct clutch assembly if necessary.

Direct Clutch Snap Ring

- Check for deformation, fatigue or damage.

Direct Clutch Drive Plates

- Check facing for burns, cracks or damage.

Direct Clutch Retaining Plate and Driven Plates

- Check facing for burns, cracks or damage.

A
B
AT
D
E
F
G
H
I
J
K
L
M

REPAIR FOR COMPONENT PARTS


ASSEMBLY

1. Install drive plates, driven plates and retaining plate in direct clutch drum.

CAUTION:

Take care with order of plates.

2. Using a flat-bladed screwdriver, install snap ring in direct clutch drum.

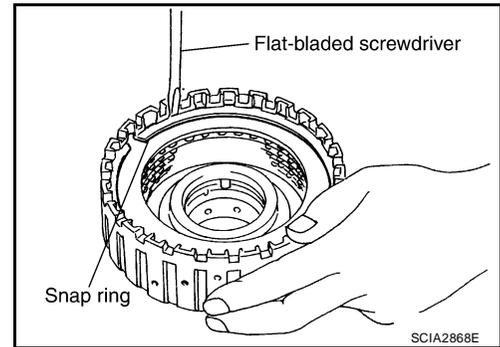

ASSEMBLY

PFP:00000

UCS003ZB


ASSEMBLY

Assembly (1)

1. As shown in the right figure, use a drift [commercial service tool: 22 mm (0.87 in) dia.] to drive manual shaft oil seals into the transmission case until it is flush.


CAUTION:

- Apply ATF to manual shaft oil seals.
- Do not reuse manual shaft oil seals.

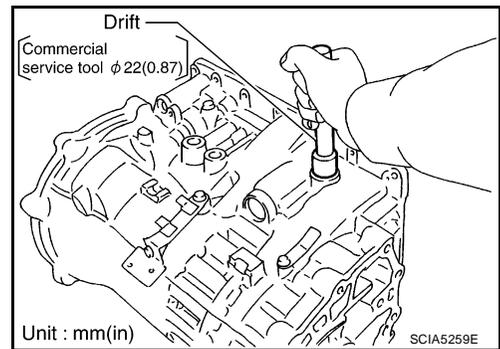


2. Install detent spring and spacer in transmission case.


 : 7.9 N-m (0.81 kg-m, 70 in-lb)

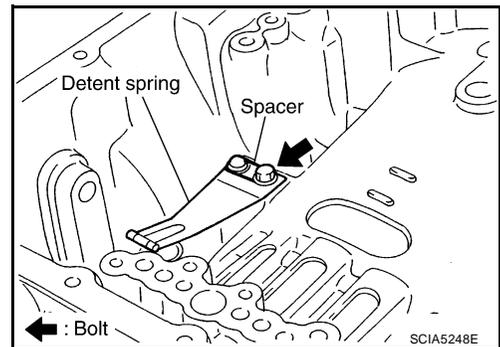

3. Install manual shaft to transmission case.

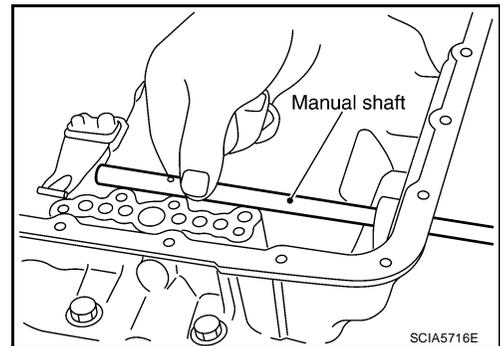


4. Install parking rod to manual plate.

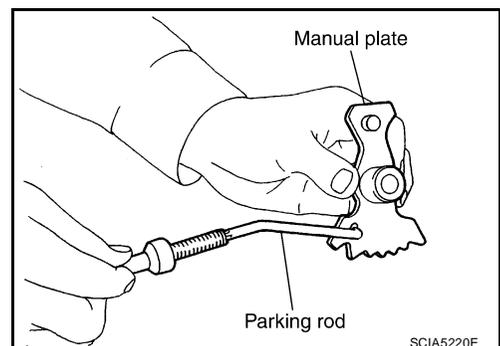

A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY

5. Install manual plate (with parking rod) to manual shaft.

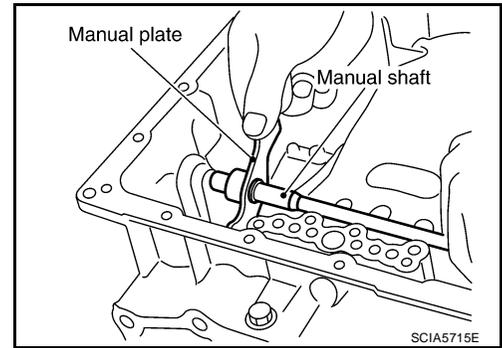


6. Install retaining pin into the manual plate and manual shaft.

- a. Fit pinhole of the manual plate to pinhole of the manual shaft with a pin punch.
- b. Use a hammer to tap the retaining pin into the manual plate.

CAUTION:

- Drive retaining pin to 2 ± 0.5 mm (0.08 ± 0.020 in) over the manual plate.
- Do not reuse retaining pin.

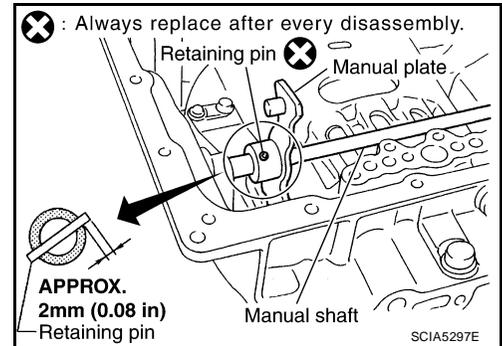


7. Install retaining pin into the transmission case and manual shaft.

- a. Fit pinhole of the transmission case to pinhole of the manual shaft with a pin punch.
- b. Use a hammer to tap the retaining pin into the transmission case.

CAUTION:


- Drive retaining pin to 5 ± 1 mm (0.20 ± 0.04 in) over the transmission case.
- Do not reuse retaining pin.

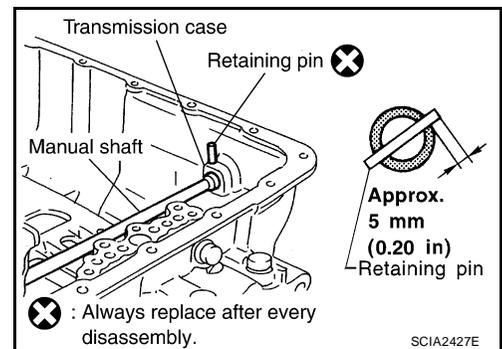


8. Install O-rings to servo assembly.

CAUTION:

- Do not reuse O-rings.
- Apply petroleum jelly to O-rings.

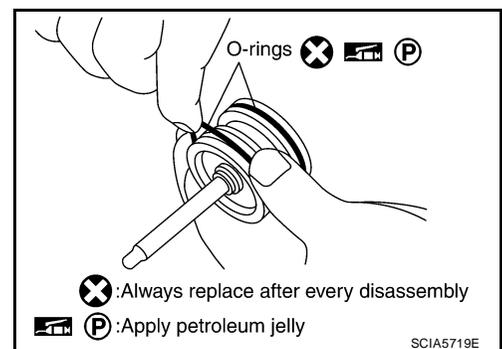


9. Install return spring to servo assembly.

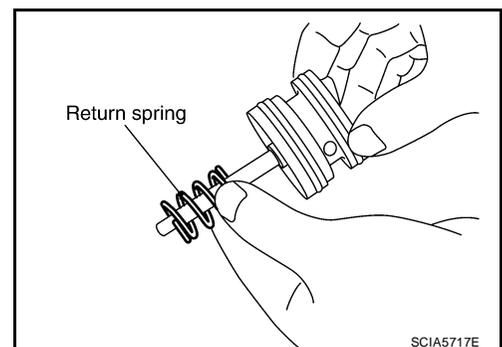


ASSEMBLY

10. Install servo assembly in transmission case.

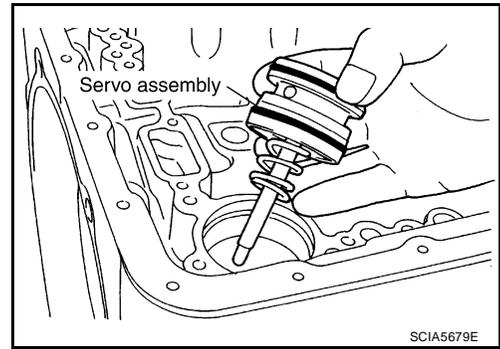


11. Using a pair of snap ring pliers, install snap ring to transmission case.

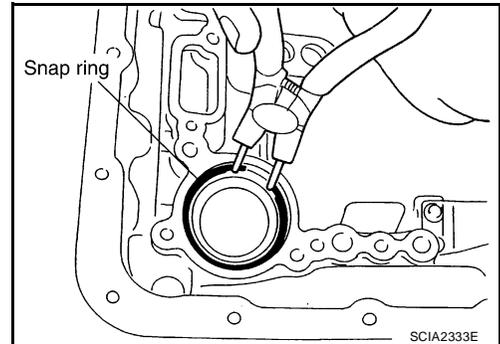


12. Install D-rings in reverse brake piston.

CAUTION:

- Do not reuse D-rings.
- Apply ATF to D-rings.

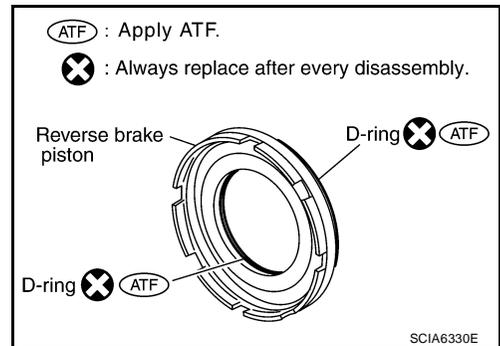


13. Install reverse brake piston in transmission case.

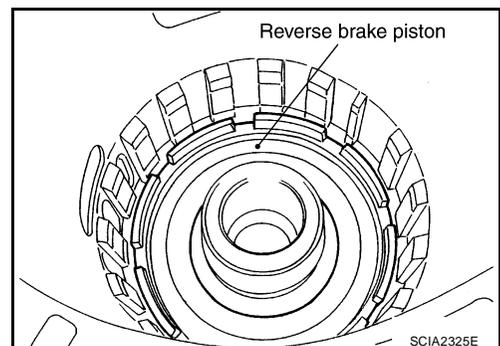

14. Install needle bearing to drum support edge surface.

CAUTION:

- Apply petroleum jelly to needle bearing.

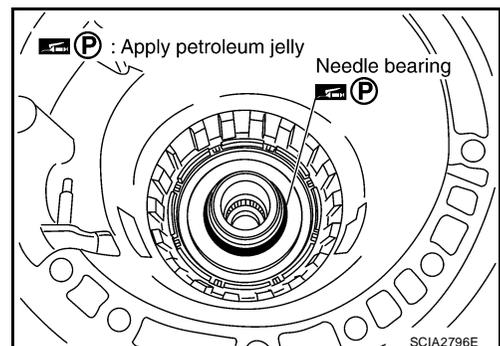


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


15. Install seal rings to drum support.

CAUTION:

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

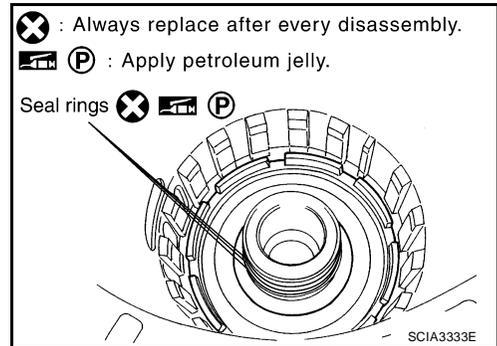


16. Install spring retainer and return spring in transmission case.

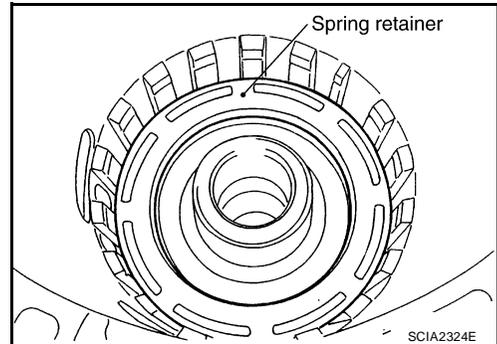

17. Set the SST on spring retainer and install snap ring (fixing spring retainer) in transmission case while compressing return spring.

CAUTION:

Securely assemble them using a flat-bladed screwdriver so that snap ring tension is slightly weak.

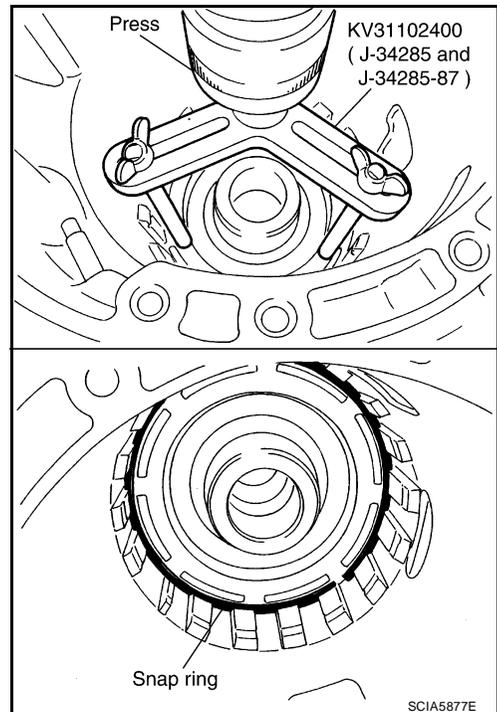


ASSEMBLY

18. Install reverse brake drive plates, driven plates and dish plate in transmission case.


CAUTION:

Take care with order of plates.

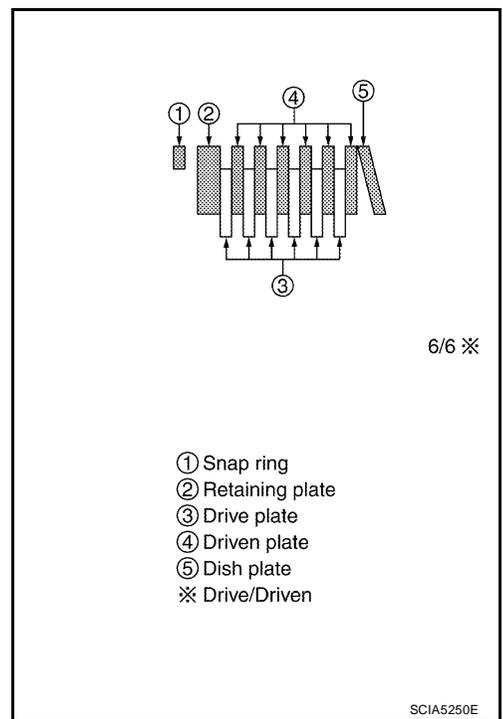


19. Assemble N-spring.

20. Install reverse brake retaining plate in transmission case.

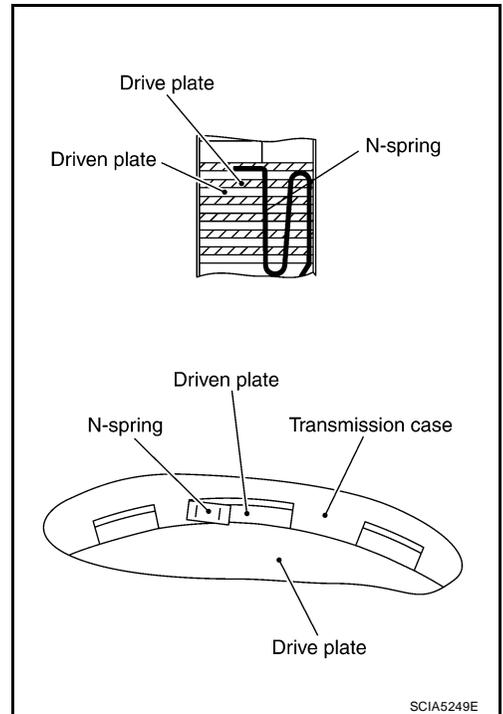

21. Install snap ring in transmission case.

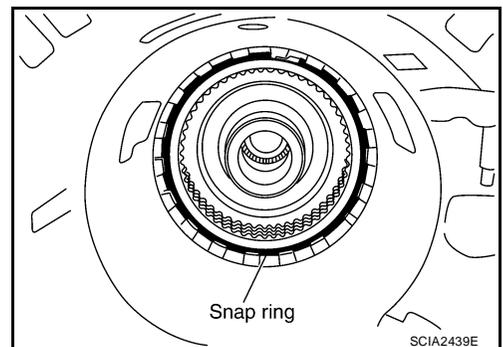

A
 B
 AT
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M

ASSEMBLY


22. Measure clearance between retaining plate and snap ring. If not within specified clearance, select proper retaining plate.

Specified clearance "A":

Standard: 0.7 - 1.1mm (0.028 - 0.043 in)

Retaining plate:


Refer to [AT-323, "Reverse brake"](#) .

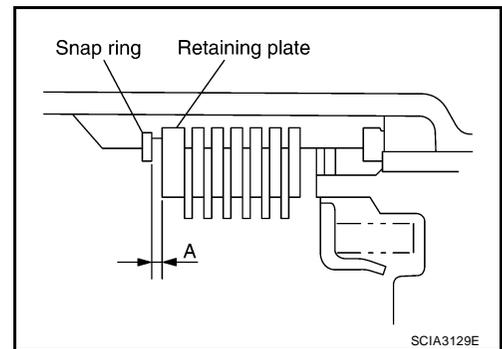

23. Install needle bearing to transmission case.

CAUTION:

Apply petroleum jelly to needle bearing.

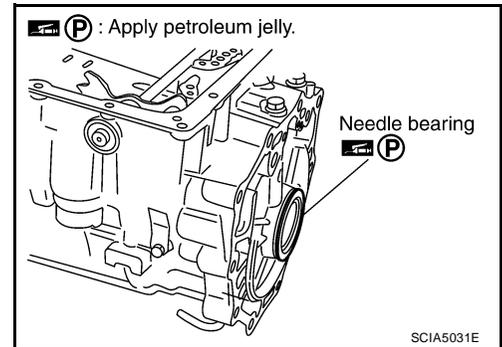


24. Install revolution sensor to transmission case.


CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.


 : 5.8 N-m (0.59 kg-m, 51 in-lb)

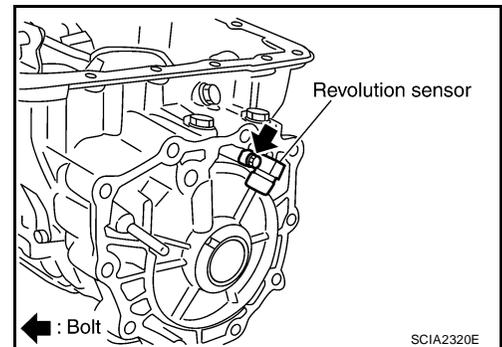

25. Install return spring (1) to parking pawl (2).

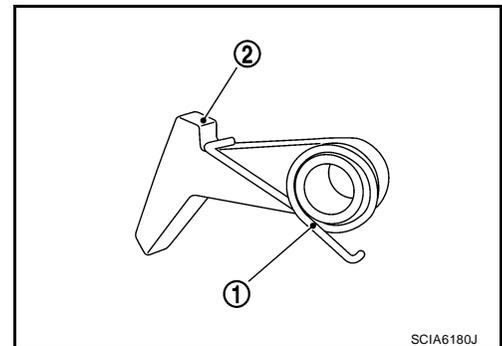


26. Install parking pawl (with return spring) and pawl shaft to rear extension (2WD models) or adapter case (4WD models).

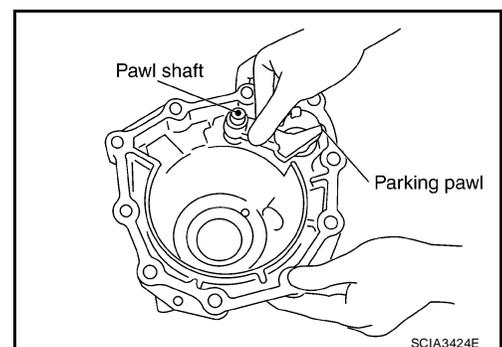

ASSEMBLY


27. Install parking actuator support to rear extension (2WD models) or adapter case (4WD models).

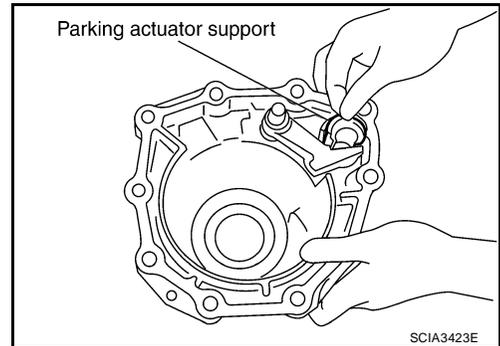

28. Install needle bearing (1) to rear extension (2WD models) or adapter case (4WD models).

CAUTION:


Apply petroleum jelly to needle bearing.

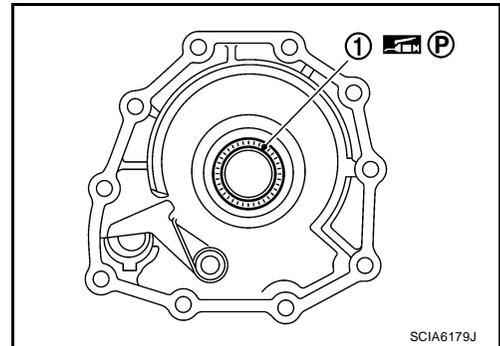


29. Install seal rings to output shaft.

CAUTION:

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

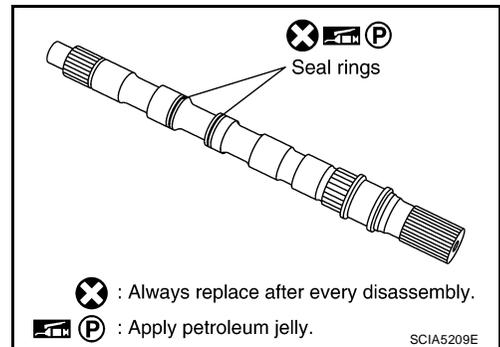


30. Install parking gear to output shaft.

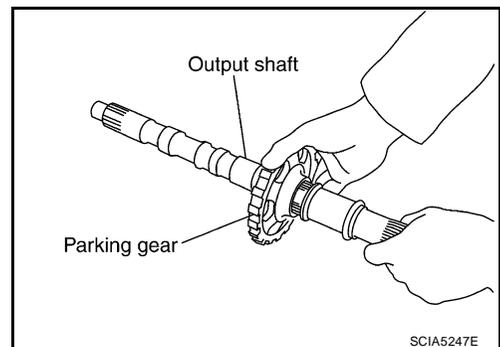

31. Install output shaft in transmission case.


CAUTION:

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

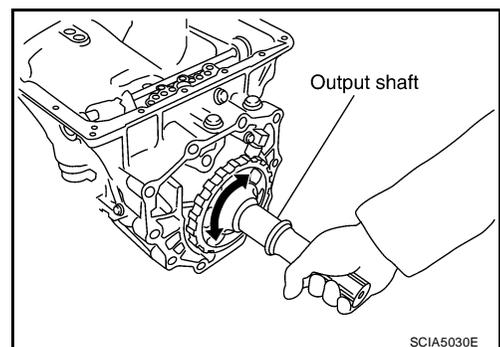

ASSEMBLY

32. Install bearing race to output shaft.

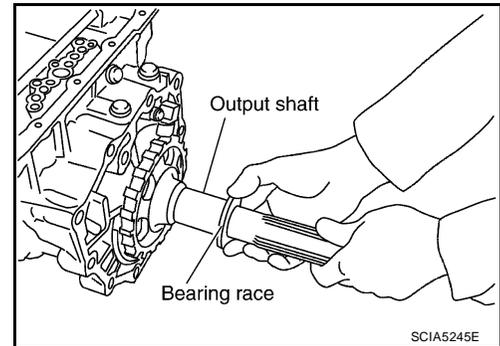


33. Install rear extension assembly (2WD models) or adapter case assembly (4WD models) according to the following procedures.

a. **2WD models**

i. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-45, "Recommended Chemical Products and Sealants"](#) .) to rear extension assembly as shown in illustration.

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from the transmission case and rear extension assembly mounting surfaces.

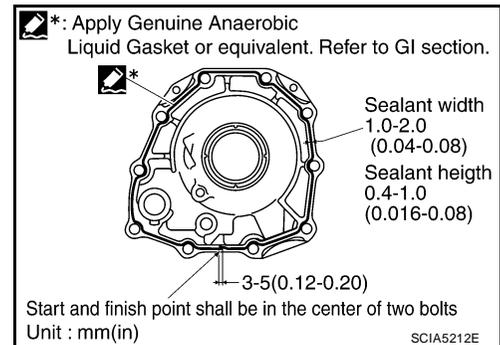

ii. Install rear extension assembly to transmission case.

CAUTION:

Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the rear extension assembly.

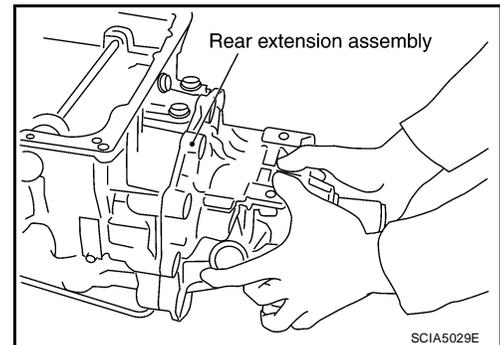

iii. Tighten rear extension assembly mounting bolts to specified torque.

CAUTION:


Do not reuse self-sealing bolt.

Rear extension assembly mounting bolt:

: 52 N·m (5.3 kg·m, 38 ft·lb)

Self-sealing bolt:

: 61 N·m (6.2 kg·m, 45 ft·lb)

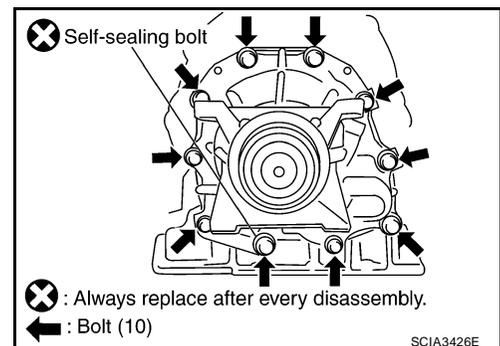


ASSEMBLY

b. 4WD models

i. Install gasket onto transmission case.

CAUTION:


- Completely remove all moisture, oil and old gasket, etc. from the transmission case and adapter case assembly mounting surfaces.
- Do not reuse gasket.

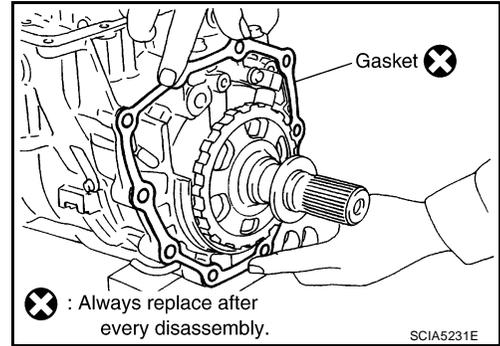

ii. Install adapter case assembly to transmission case.

CAUTION:

Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the rear extension assembly.

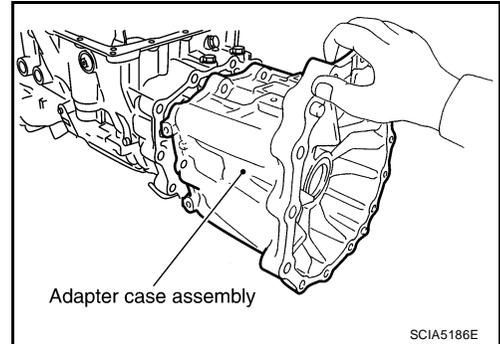

iii. Tighten adapter case assembly mounting bolts (1) to specified torque. (With terminal bracket (2).)

CAUTION:


Do not reuse self-sealing bolt (3).

Adapter case assembly mounting bolt (1):

 : 52 N·m (5.3 kg·m, 38 ft·lb)

Self-sealing bolt (3):


 : 61 N·m (6.2 kg·m, 45 ft·lb)

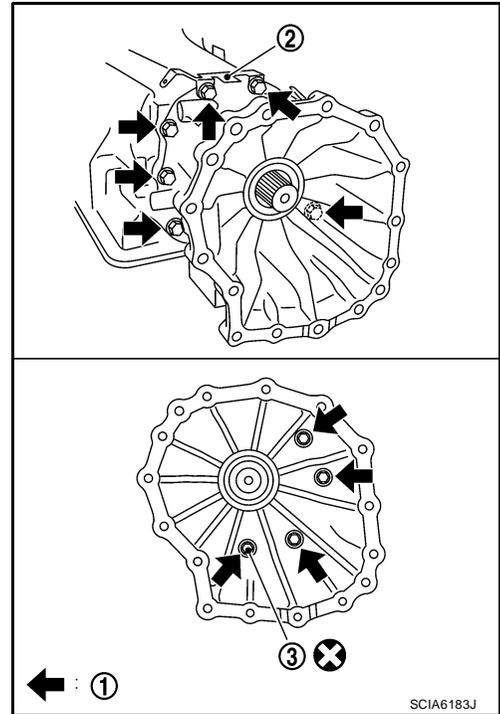

34. Install direct clutch assembly in reverse brake.

CAUTION:

Make sure that drum support edge surface and direct clutch inner boss edge surface come to almost same place.

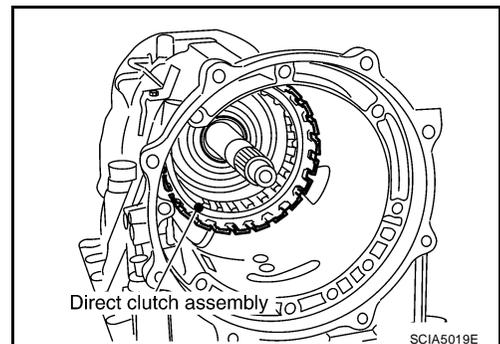


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


35. Install needle bearing in drum support.

CAUTION:


Apply petroleum jelly to needle bearing.

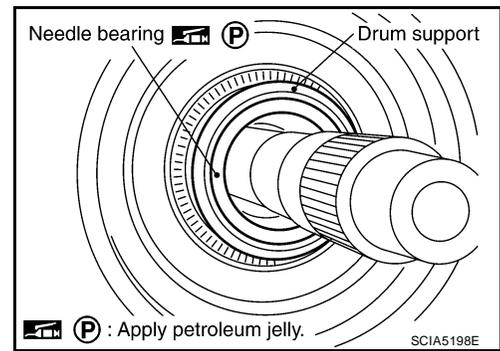


36. Install high and low reverse clutch assembly in direct clutch.

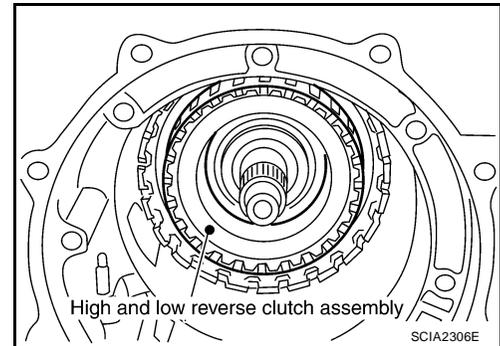

37. Using a flat-bladed screwdriver, align the drive plate.

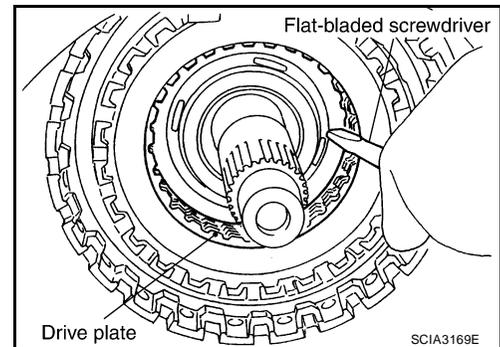


38. Install high and low reverse clutch hub, mid sun gear assembly and rear sun gear assembly as a unit.

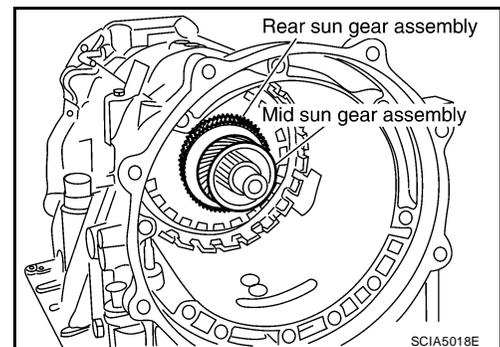

ASSEMBLY

CAUTION:

Make sure that portion "A" of high and low reverse clutch drum protrudes approximately 2 mm (0.08 in) beyond portion "B" of rear sun gear.

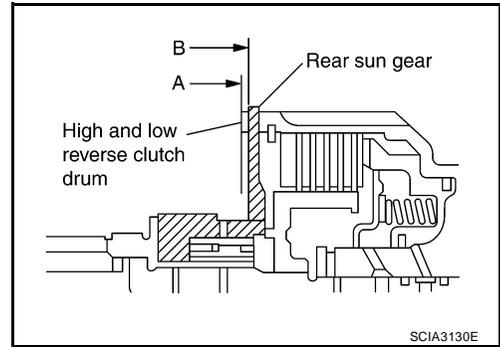


A
B
AT
D

39. Install needle bearing in rear carrier assembly.

CAUTION:

Apply petroleum jelly to needle bearing.

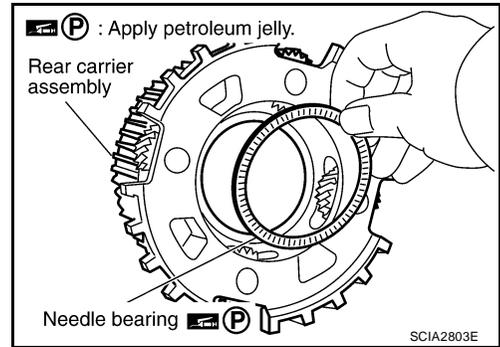


E
F
G

40. Install bearing race in rear carrier assembly.


CAUTION:

Apply petroleum jelly to bearing race.

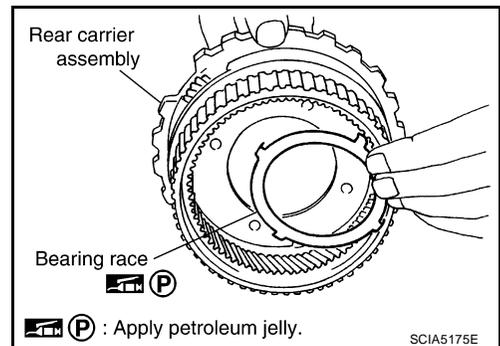

H
I
J
K

41. Install rear carrier assembly in direct clutch drum.

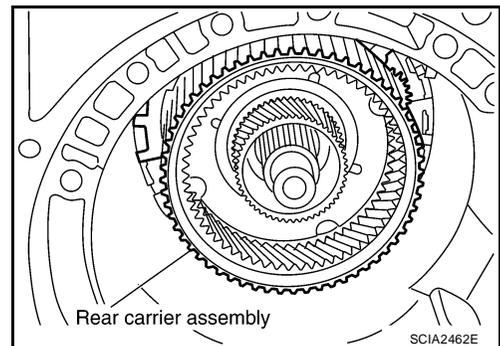


L
M

ASSEMBLY

42. Install needle bearing (rear side) to mid carrier assembly.

CAUTION:


Apply petroleum jelly to needle bearing.

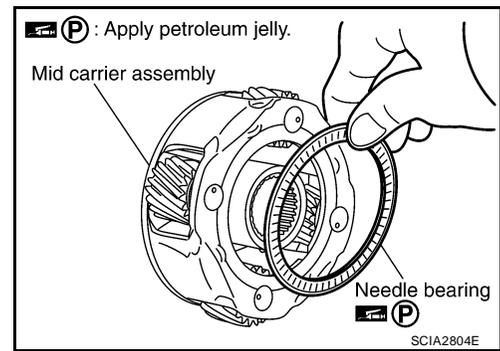


43. Install needle bearing (front side) to mid carrier assembly.

CAUTION:


Apply petroleum jelly to needle bearing.

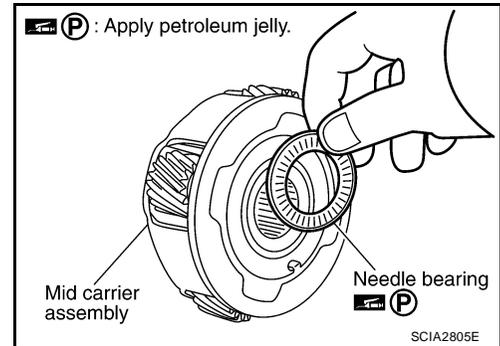

44. Install mid carrier assembly in rear carrier assembly.

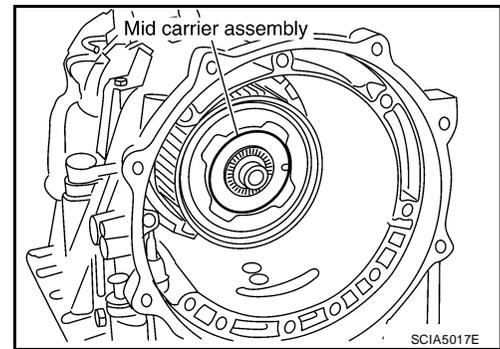


45. Install front carrier assembly, input clutch assembly and rear internal gear as a unit.

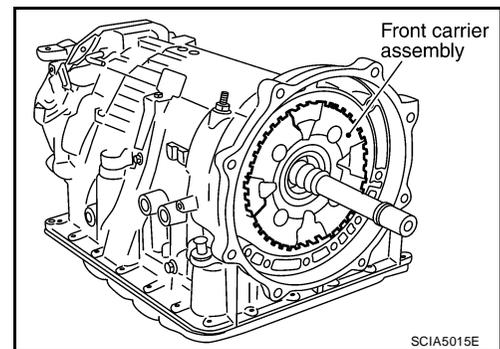

46. Install seal rings in input clutch assembly.

CAUTION:

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

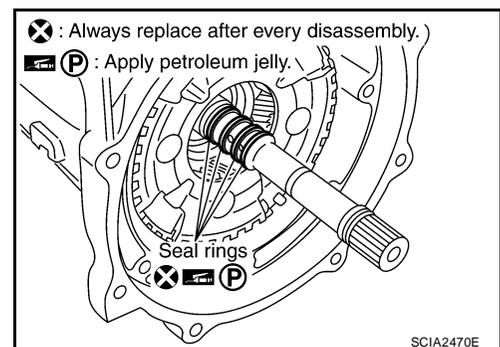


ASSEMBLY

47. Install band servo anchor end pin and lock nut in transmission case.

CAUTION:


Do not reuse band servo anchor end pin.

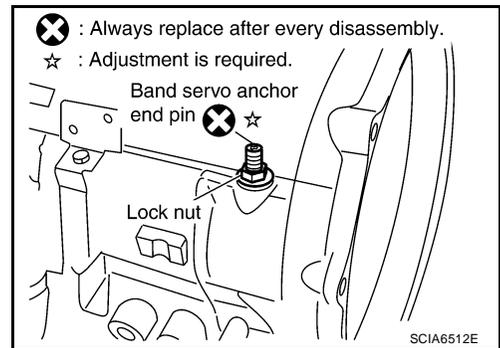

48. Install brake band in transmission case.

CAUTION:


Assemble it so that identification to avoid incorrect installation faces servo side.

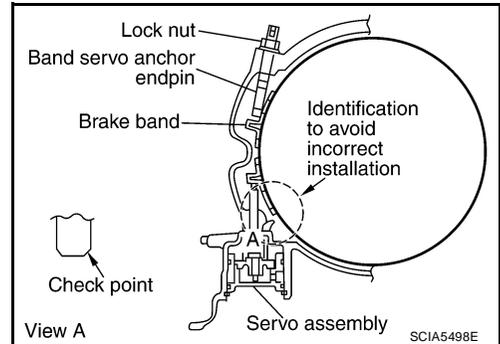

49. Install front sun gear to front carrier assembly.

CAUTION:


Apply ATF to front sun gear bearing and 3rd one-way clutch end bearing.

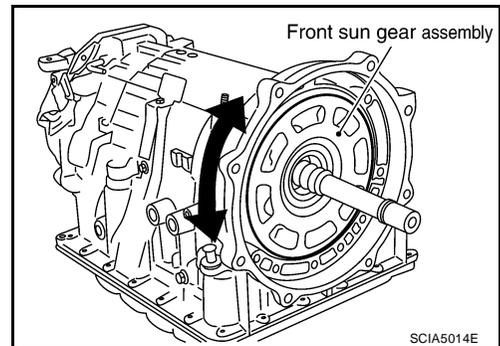


50. Install needle bearing to front sun gear.

CAUTION:

Apply petroleum jelly to needle bearing.

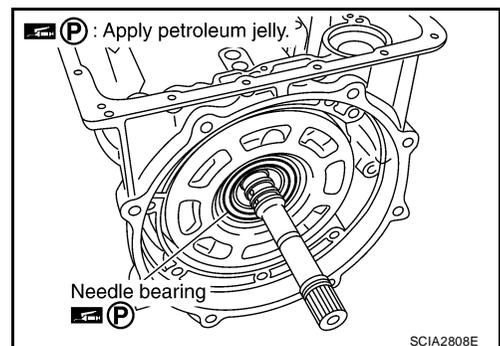

51. Adjust brake band tilting using a clips so that brake band contacts front sun gear drum evenly.

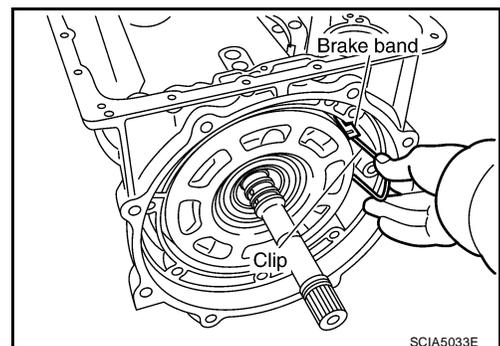

A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


52. Adjust brake band.

- a. Loosen lock nut.
- b. Tighten band servo anchor end pin to specified torque.

 : **5.0 N·m (0.51 kg-m, 44 in-lb)**

- c. Back of band servo anchor end pin three turns.
- d. Holding band servo anchor end pin, tighten lock nut to specified torque.


 : **46 N·m (4.7 kg-m, 34 ft-lb)**

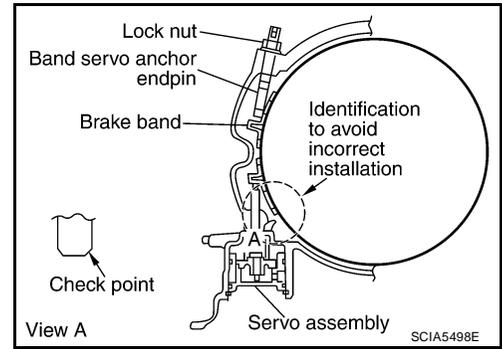


Adjustment TOTAL END PLAY

UCS003ZC


- Measure clearance between front sun gear and bearing race for oil pump cover.
- Select proper thickness of bearing race so that end play is within specifications.

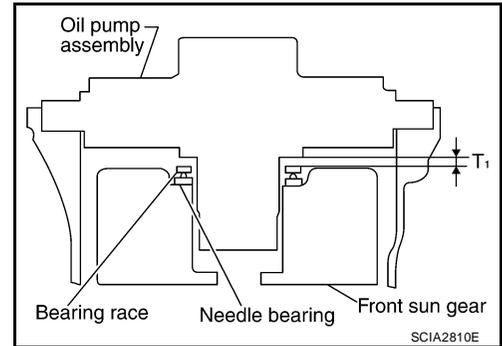

1. Measure dimensions "K" and "L" and then calculate dimension "J".

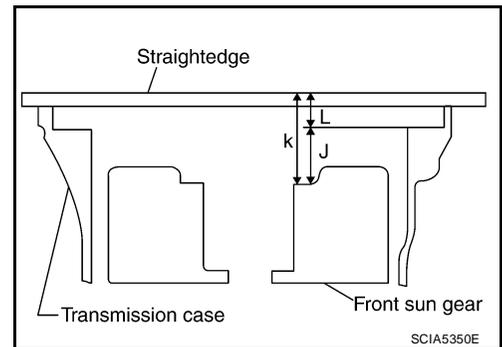

- a. Measure dimension "K".

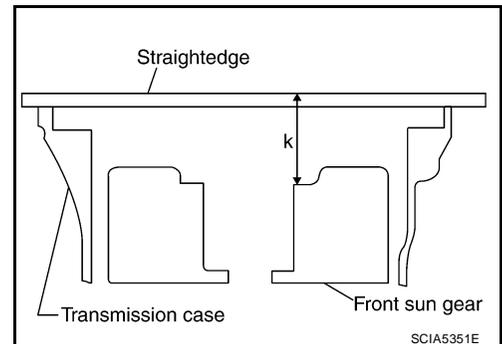


ASSEMBLY


- b. Measure dimension "L".
- c. Calculate dimension "J".

"J": Distance between oil pump fitting surface of transmission case and needle bearing mating surface of front sun gear.


$$J = K - L$$

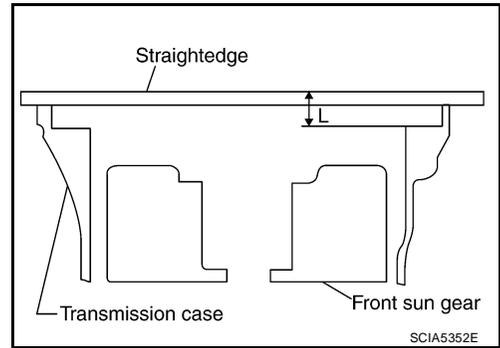


- 2. Measure dimensions "M1" and "M2" and then calculate dimension "M".

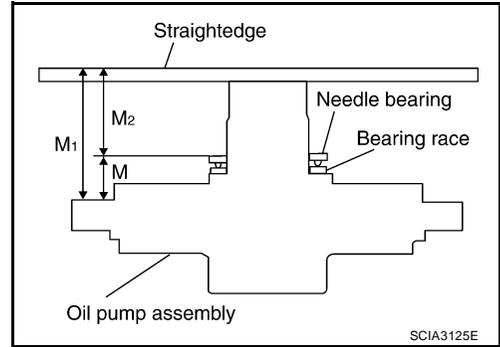


- a. Place bearing race and needle bearing on oil pump assembly.

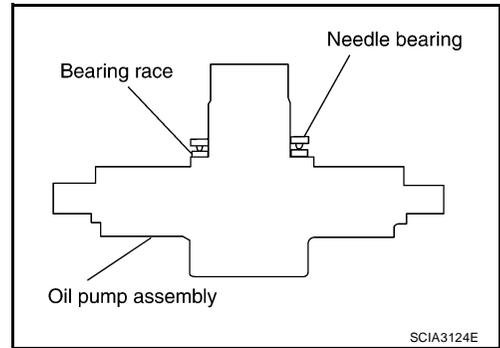

- b. Measure dimension "M1".

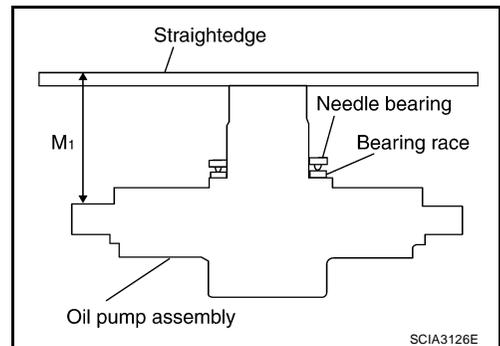

- c. Measure dimension "M2".

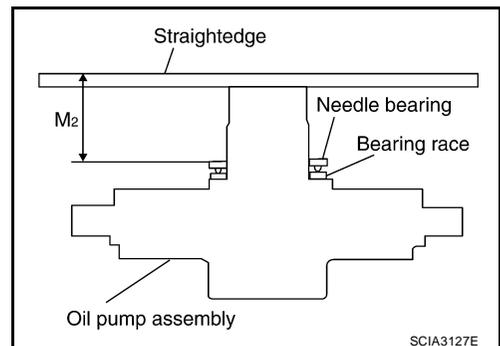


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY

d. Calculate dimension "M".

"M": Distance between transmission case fitting surface of oil pump and needle bearing on oil pump.

$$M = M_1 - M_2$$

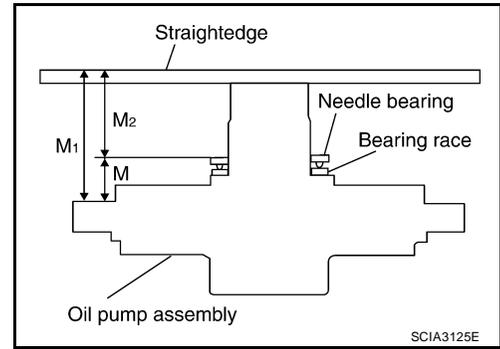

3. Adjust total end play "T₁".

$$T_1 = J - M$$


Total end play "T₁":

0.25 - 0.55 mm (0.0098 - 0.0217 in)

- Select proper thickness of bearing race so that total end play is within specifications.

Bearing races:

Refer to [AT-323, "BEARING RACE FOR ADJUSTING TOTAL END PLAY"](#).

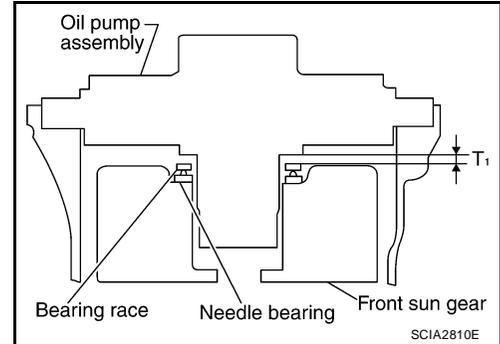


Assembly (2)

1. Install O-ring to oil pump assembly.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.

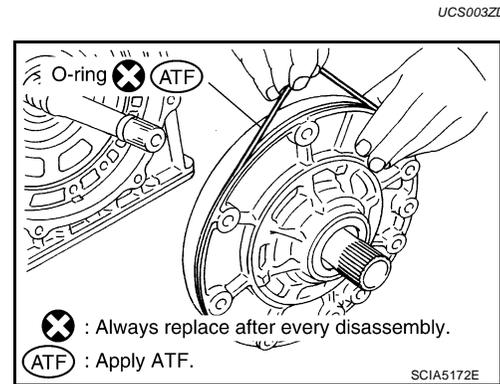

2. Install bearing race to oil pump assembly.

CAUTION:

Apply petroleum jelly to bearing race.

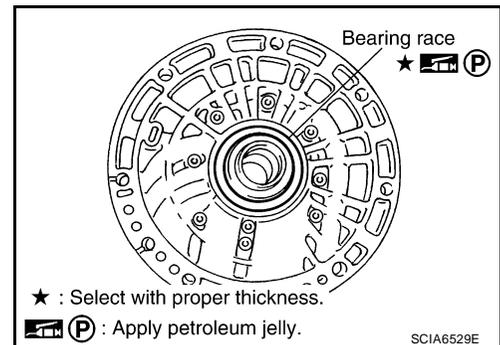


ASSEMBLY

3. Install oil pump assembly in transmission case.

CAUTION:


Apply ATF to oil pump baring.

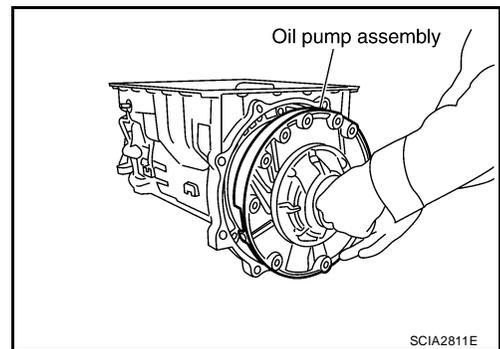

4. Apply recommended sealant (Genuine RTV Silicone Sealant or equivalent. Refer to [GI-45, "Recommended Chemical Products and Sealants"](#) .) to oil pump assembly as shown in the figure.

CAUTION:

Completely remove all moisture, oil and old sealant, etc. from the oil pump mounting bolts and oil pump mounting bolt mounting surfaces.

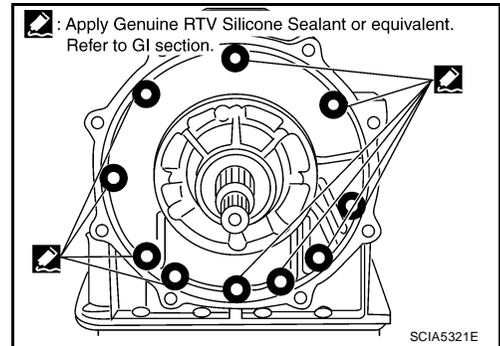


5. Tighten oil pump mounting bolts to specified torque.

CAUTION:

Apply ATF to oil pump bushing.


 : 48 N·m (4.9 kg·m, 35 ft·lb)

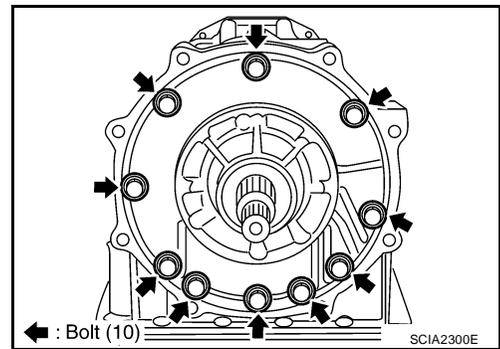

6. Install O-ring to input clutch assembly.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

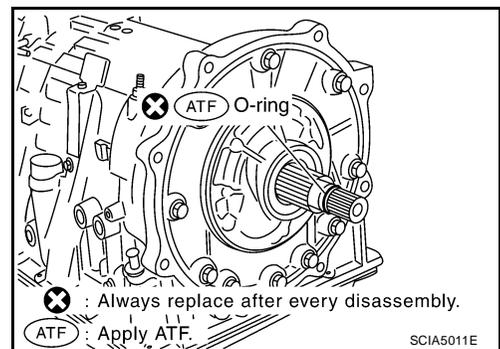

7. Install converter housing to transmission case.

CAUTION:


Do not reuse self-sealing bolt.

Converter housing mounting bolt:

 : 52 N·m (5.3 kg·m, 38 ft·lb)

Self-sealing bolt:


 : 61 N·m (6.2 kg·m, 45 ft·lb)

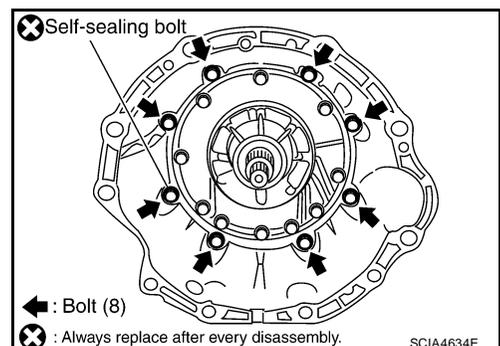


A
B
AT
D
E
F
G
H
I
J
K
L
M

ASSEMBLY


8. Make sure that brake band does not close turbine revolution sensor hole.

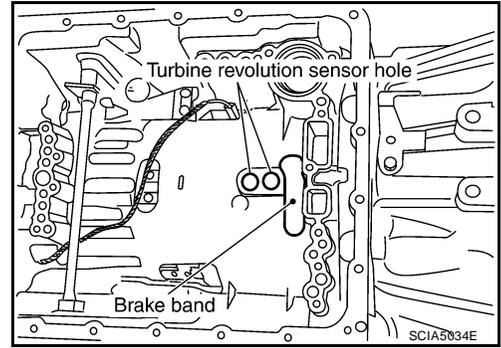


9. Install control valve with TCM.
- a. Connect TCM connector and park/neutral position switch connector.

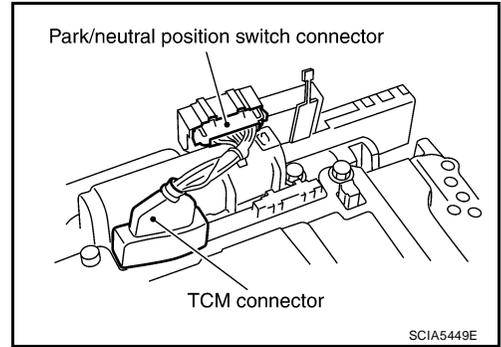

- b. Install A/T assembly harness connector to control valve with TCM.

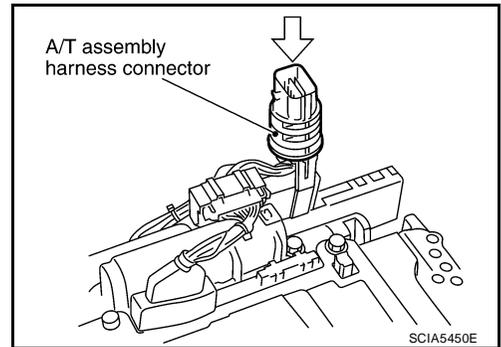

- c. Connect TCM connectors.

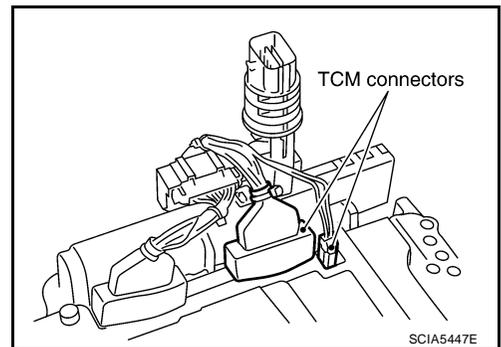


ASSEMBLY


d. Install O-ring to A/T assembly harness connector.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

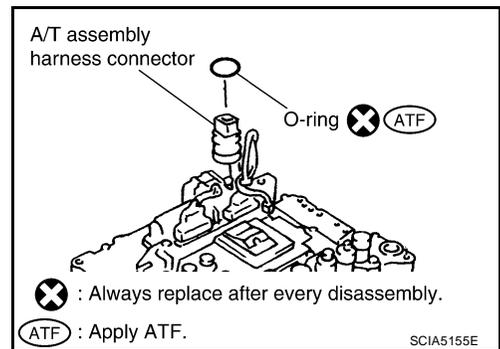

e. Install A/T fluid temperature sensor 2 to bracket.

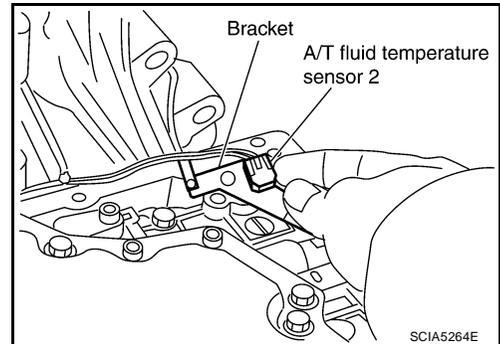


f. Install A/T fluid temperature sensor 2 (with bracket) in control valve with TCM.

CAUTION:

Adjust bolt hole of bracket to bolt hole of control valve.


 : 7.9 N·m (0.81 kg-m, 70 in-lb)

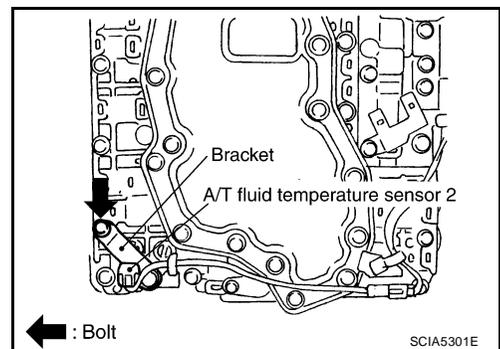


g. Install control valve with TCM in transmission case.

CAUTION:

- Make sure that turbine revolution sensor securely installs turbine revolution sensor hole.
- Hang down revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

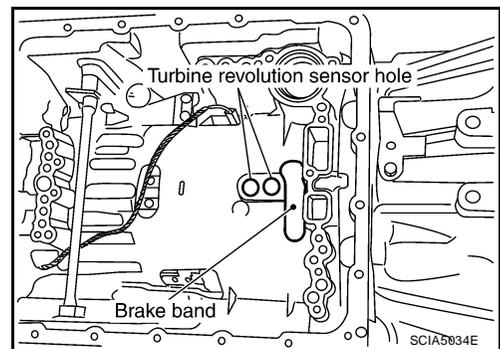

- Assemble it so that manual valve cutout is engaged with manual plate projection.

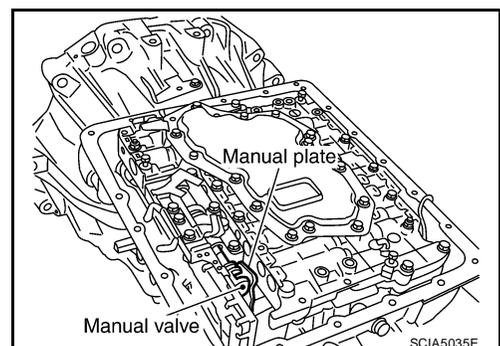

A
B
AT

D
E
F
G


H
I
J
K

L
M

ASSEMBLY


h. Install bolts A, B and C to control valve with TCM.

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

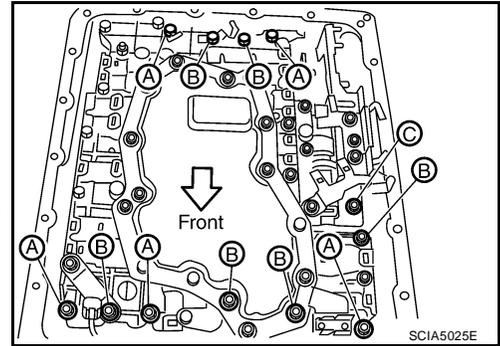


i. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts.


 : 7.9 N-m (0.81 kg-m, 70 in-lb)

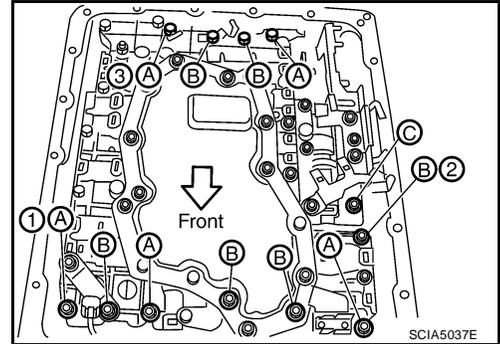

10. Connect A/T fluid temperature sensor 2 connector.
11. Securely fasten terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips.

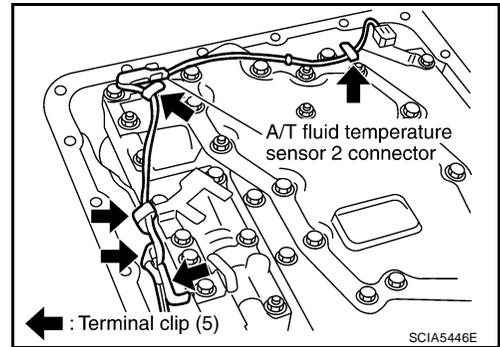


12. Connect revolution sensor connector.
13. Securely fasten revolution sensor harness with terminal clips.

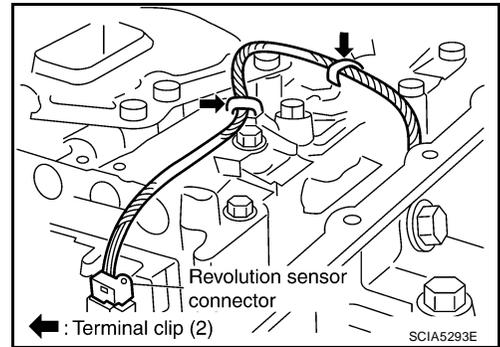


14. Pull down A/T assembly harness connector.

CAUTION:
Be careful not to damage connector.

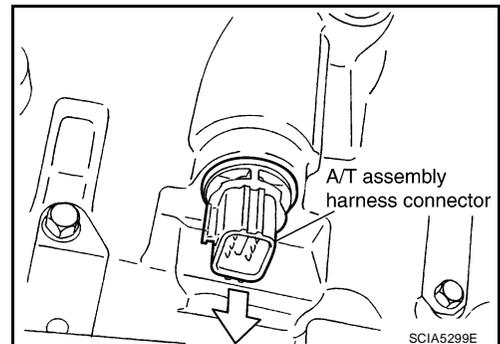


ASSEMBLY

15. Install snap ring to A/T assembly harness connector.

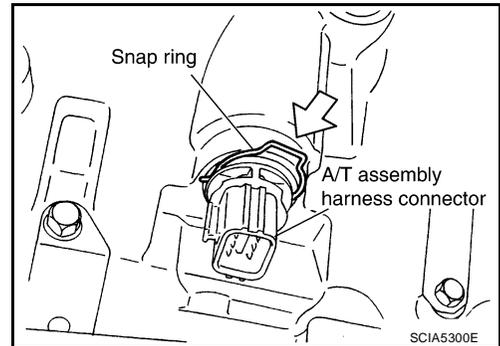

16. Install magnets in oil pan.

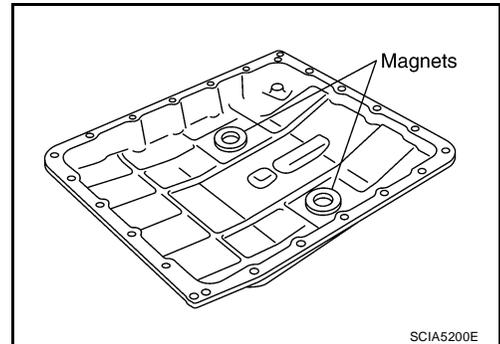

17. Install oil pan to transmission case.

a. Install oil pan gasket to transmission case.


CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

b. Install oil pan to transmission case.

CAUTION:

- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

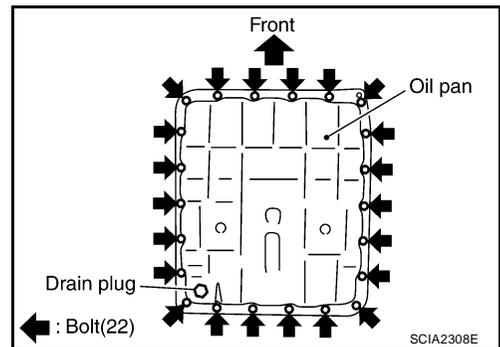

c. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them.

CAUTION:

Do not reuse oil pan mounting bolts.


 : 7.9 N·m (0.81 kg·m, 70 in·lb)

18. Install drain plug to oil pan.

CAUTION:

Do not reuse drain plug gasket.

 : 34 N·m (3.5 kg·m, 25 ft·lb)

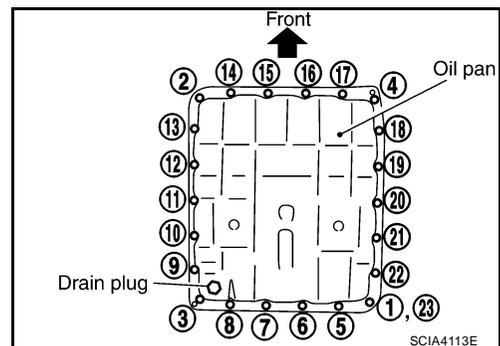


19. Install torque converter.

ASSEMBLY


a. Pour ATF into torque converter.

- Approximately 2 liter (2-1/8 US qt, 1-3/4 Imp qt) of fluid is required for a new torque converter.
- When reusing old torque converter, add the same amount of fluid as was drained.

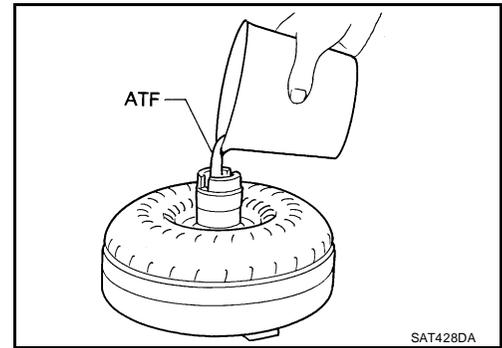


b. Install torque converter while aligning notches of torque converter with notches of oil pump.

CAUTION:
Install torque converter while rotating it.

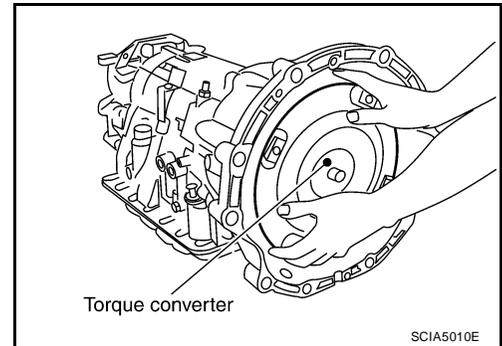

c. Measure distance "A" to make sure that torque converter is in proper position.

Distance "A": 25.0 mm (0.98 in) or more

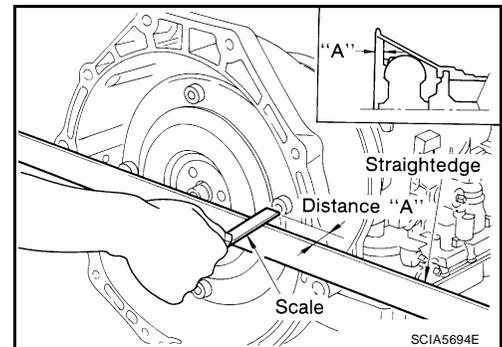

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PF0:00030

General Specifications

UCS0038U

Applied model		4x2	4x4
Automatic transmission model	RE5R05A		
Transmission model code number		97X00	97X01
Stall torque ratio	1.76: 1		
Transmission gear ratio	1st	3.842	
	2nd	2.353	
	3rd	1.529	
	4th	1.000	
	5th	0.389	
	Reverse	2.765	
Recommended fluid	NISSAN Matic Fluid J*1		
Fluid capacity	10.3 liter (10-7/8 US qt, 9-1/8 Imp qt)		

CAUTION:

- Use only Genuine NISSAN ATF Matic Fluid J. Do not mix with other fluid.
- Using automatic transmission fluid other than Genuine NISSAN an ATF Matic Fluid J will deteriorate in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by the warranty.

*1: Refer to [MA-11, "Fluids and Lubricants"](#).

Vehicle Speed at Which Gear Shifting Occurs

UCS0038V

2WD MODELS

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
3.133	Full throttle	60 - 74 (37 - 46)	99 - 119 (62 - 74)	153 - 183 (95 - 114)	234 - 267 (145 - 166)	230 - 264 (143 - 164)	142 - 171 (88 - 106)	87 - 104 (54 - 65)	41 - 48 (25 - 30)
	Half throttle	49 - 59 (30 - 37)	80 - 96 (50 - 60)	123 - 149 (76 - 93)	152 - 178 (94 - 111)	115 - 138 (71 - 86)	71 - 86 (44 - 53)	51 - 61 (32 - 38)	12 - 14 (7 - 9)
	Full throttle	60 - 68 (37 - 42)	99 - 110 (62 - 68)	153 - 170 (95 - 106)	234 - 259 (145 - 161)	230 - 255 (143 - 158)	142 - 158 (88 - 98)	87 - 97 (54 - 60)	41 - 47 (25 - 30)
	Half throttle	49 - 55 (30 - 34)	80 - 90 (50 - 56)	123 - 137 (76 - 85)	152 - 168 (94 - 104)	115 - 128 (71 - 80)	71 - 79 (44 - 49)	51 - 57 (32 - 35)	12 - 14 (7 - 9)

- At half throttle, the accelerator opening is 4/8 of the full opening.

4WD MODELS

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)							
		D1 →D2	D2 →D3	D3 →D4	D4 →D5	D5 →D4	D4 →D3	D3 →D2	D2 →D1
3.357	Full throttle	58 - 65 (36 - 40)	94 - 104 (60 - 65)	144 - 160 (89 - 90)	221 - 245 (137 - 152)	218 - 241 (135 - 150)	135 - 150 (84 - 93)	82 - 92 (51 - 57)	40 - 45 (25 - 28)
	Half throttle	46 - 52 (29 - 32)	76 - 84 (47 - 52)	117 - 130 (73 - 81)	143 - 159 (89 - 99)	109 - 121 (68 - 75)	67 - 75 (42 - 47)	48 - 54 (30 - 34)	12 - 14 (7 - 9)
	Full throttle	60 - 68 (37 - 42)	99 - 110 (62 - 68)	153 - 170 (95 - 106)	234 - 259 (145 - 161)	230 - 255 (143 - 158)	142 - 158 (88 - 98)	87 - 97 (54 - 60)	41 - 47 (25 - 29)
	Half throttle	49 - 55 (30 - 34)	80 - 90 (50 - 56)	123 - 137 (76 - 85)	152 - 168 (94 - 104)	115 - 128 (71 - 80)	71 - 79 (44 - 49)	51 - 57 (32 - 35)	12 - 14 (7 - 9)

- At half throttle, the accelerator opening is 4/8 of the full opening.

SERVICE DATA AND SPECIFICATIONS (SDS)

Vehicle Speed at Which Lock-up Occurs/Releases 2WD MODELS

UCS0038W

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
3.133	Closed throttle	78 - 93 (48 - 58)	68 - 82 (42 - 51)
	Half throttle	188 - 218 (117 - 135)	147 - 175 (91 - 109)
	Closed throttle	78 - 87 (48 - 54)	68 - 76 (42 - 47)
	Half throttle	188 - 208 (117 - 129)	147 - 163 (91 - 101)

- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal: OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

4WD MODELS

Final gear ratio	Throttle position	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
3.357	Closed throttle	73 - 81 (45 - 50)	64 - 72 (40 - 45)
	Half throttle	179 - 198 (111 - 123)	140 - 155 (87 - 96)
	Closed throttle	78 - 87 (48 - 54)	68 - 76 (42 - 47)
	Half throttle	188 - 208 (117 - 129)	147 - 163 (91 - 101)

- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal: OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

Stall Speed

UCS0038Y

Stall speed	2,200 - 2,500 rpm
-------------	-------------------

Line Pressure

UCS0038Z

Engine speed	Line pressure [kPa (kg/cm ² , psi)]	
	"R" position	"D" position
At idle speed	392 - 441 (4.0 - 4.5, 57 - 64)	373 - 422 (3.8 - 4.3, 54 - 61)
At stall speed	1,700 - 1,890 (17.3 - 19.3, 247 - 274)	1,310 - 1,500 (13.3 - 15.3, 190 - 218)

A/T Fluid Temperature Sensor

UCS00390

Name	Condition	CONSULT-II "DATA MONITOR" (Approx.) (V)	Resistance (Approx.) (kΩ)
A/T fluid temperature sensor 1	0°C (32°F)	3.2	15
	20°C (68°F)	2.5	6.5
	80°C (176°F)	0.8	0.9
A/T fluid temperature sensor 2	0°C (32°F)	3.2	10
	20°C (68°F)	2.4	4
	80°C (176°F)	0.65	0.5

Turbine Revolution Sensor

UCS00391

Name	Condition	Data (Approx.)
Turbine revolution sensor 1	When running at 50 km/h (31 MPH) in 4th speed with the closed throttle position switch "OFF".	1.3 (kHz)
Turbine revolution sensor 2	When moving at 20 km/h (12 MPH) in 1st speed with the closed throttle position switch "OFF".	

SERVICE DATA AND SPECIFICATIONS (SDS)

Vehicle Speed Sensor A/T (Revolution Sensor)

UCS00392

Name	Condition	Data (Approx.)
Revolution sensor	When moving at 20 km/h (12 MPH).	185 (Hz)

Reverse brake

UCS00393

	Thickness mm (in)	Part number*
Thickness of retaining plates	4.2 (0.165)	31667 90X14
	4.4 (0.173)	31667 90X15
	4.6 (0.181)	31667 90X16
	4.8 (0.189)	31667 90X17
	5.0 (0.197)	31667 90X18
	5.2 (0.205)	31667 90X19

*: Always check with the Parts Department for the latest parts information.

Total End Play

UCS00394

Total end play mm (in)	0.25 - 0.55 (0.0098 - 0.0217)
------------------------	-------------------------------

BEARING RACE FOR ADJUSTING TOTAL END PLAY

Thickness mm (in)	Part number*
0.8 (0.031)	31435 95X00
1.0 (0.039)	31435 95X01
1.2 (0.047)	31435 95X02
1.4 (0.055)	31435 95X03
1.6 (0.063)	31435 95X04
1.8 (0.071)	31435 95X05

*: Always check with the Parts Department for the latest parts information.

SERVICE DATA AND SPECIFICATIONS (SDS)
