

SECTION **IDX**
ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-96 , TF-166
4LO switch	TF-228
4WD - Wiring diagram	TF-26 , TF-203
4WD shift switch	TF-69 , TF-232
4WD solenoid valve	TF-92 , TF-166
4WD system description	TF-17 , TF-195
4WD system diagram	TF-21 , TF-198

A

A/C air flow	ATC-29 , MTC-25
A/C compressor clutch removal and installation ..	ATC-159 , MTC-102
A/C compressor mounting	ATC-158 , MTC-101
A/C compressor precaution	ATC-11 , MTC-9
A/C compressor special service tool .	ATC-14 , MTC-12
A/C control operation (auto A/C)	ATC-26 , MTC-24
A/C diagnostic work flow (auto A/C)	ATC-115
A/C evaporator	ATC-166 , MTC-108
A/C HFC134a (R134a) system identification	ATC-7 , MTC-6
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-154 , MTC-98
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-9
A/C lubricant (R134a)	ATC-22 , MTC-19
A/C lubrication oil	ATC-22 , MTC-19
A/C operational check	ATC-52 , ATC-55 , MTC-40
A/C self-diagnoses (auto A/C)	ATC-50 , ATC-115
A/C service data specification	ATC-174 , MTC-113
A/C trouble diagnoses (auto A/C)	ATC-33 , MTC-28
A/C, A - Wiring diagram	ATC-40 , MTC-34
A/T fluid checking	AT-13 , AT-50 , MA-22
A/T fluid cooler cleaning	AT-13
A/T fluid replacement	AT-13 , MA-24
A/T fluid temperature sensor	AT-130
A/T IND - Wiring diagram	DI-44
A/T indicator	DI-44
A/T self-diagnoses	AT-98
A/T shift lock system	AT-223
A/T shift lock system - Wiring diagram	AT-224
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-101
A/T Wiring diagram AT - FTS	AT-131
A/T Wiring diagram AT - MAIN	AT-172
A/T Wiring diagram AT - NONDTC	AT-180
A/T Wiring diagram AT - PNP/SW	AT-109
A/T Wiring diagram AT - STSIG	AT-104
A/T Wiring diagram AT - VSS A/T	AT-114
ABS - Wiring diagram	BRC-17 , BRC-80
ABS (anti-lock brake system)	BRC-8 , BRC-70
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor .	EC-630 , EC-

[636](#), [EC-650](#)

Accelerator pedal released position learning	EC-88
AF1B1-Wiring diagram	EC-485 , EC-494 , EC-503 , EC-513 , EC-524 , EC-534 , EC-546
AF1B2-Wiring diagram	EC-487 , EC-496 , EC-505 , EC-515 , EC-526 , EC-536 , EC-548
AF1HB1-Wiring diagram	EC-401
AF1HB2-Wiring diagram	EC-403
Aiming adjustment	LT-27 , LT-72
Air bag	SRS-3
Air bag precautions	AP-2
Air cleaner and air duct	EM-15
Air cleaner filter	EM-15
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-183 , EC-192
Air fuel ratio sensor 1 ..	EC-483 , EC-492 , EC-501 , EC-511 , EC-521 , EC-531 , EC-543
Air fuel ratio sensor 1 heater	EC-399
Air mix. door motor	ATC-63 , MTC-49
Ambient sensor	ATC-117 , ATC-128
Angular tightening application	EM-4
APPS1 - Wiring diagram	EC-632
APPS2 - Wiring diagram	EC-638
APPS3 - Wiring diagram	EC-652
ASC/BS - Wiring diagram	EC-606
ASC/SW - Wiring diagram	EC-599
ASCBOF - Wiring diagram	EC-698
ASCD	EC-30
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-705
ATP switch	TF-117 , TF-253
Audio	AV-6
AUDIO - Wiring diagram	AV-11
AUT/DP - Wiring diagram	SE-19
Auto air conditioner - Wiring diagram	ATC-40 , MTC-34
Auto anti-dazzling inside mirror	GW-71
Autolamp	LT-45
Automatic amplifier	MTC-42
Automatic drive positioner	SE-11
Automatic transmission number	GI-48
AV and NAVI control unit	AV-71
AV communication line	AV-95

B

B/COMP - Wiring diagram	DI-64
Back door trim	EI-25
BACK/L - Wiring diagram	LT-100
Back-up lamp	LT-100
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery current sensor .	EC-569 , EC-576 , EC-583 , EC-590
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-22
BCM (Body control module)	BCS-3

ALPHABETICAL INDEX

Block heater	EM-105	Component Location (auto A/C)	ATC-36 , MTC-31	A
Blower motor	ATC-75 , ATC-132 , MTC-57 , MTC-84	Compression pressure	EM-91	
Body alignment	BL-138	Compressor clutch removal and installation ..	ATC-159 , MTC-102	B
Body component parts	BL-125	Compressor mounting	ATC-158 , MTC-101	
Body construction	BL-137	Compressor precaution	ATC-11 , MTC-9	
Body exterior paint color	BL-124	Compressor special service tool	ATC-14 , MTC-12	
Body mounting	BL-123	Condenser	ATC-165 , MTC-106	C
Body repair	BL-124	Connecting rod	EM-123	
Body sealing	BL-134	Connecting rod bearing clearance	EM-127	
Boring/horning cylinder block	EM-126	Connecting rod bushing clearance	EM-123	
Bose speaker amp.	AV-7	Console box - See Instrument panel	IP-10	D
Brake booster	BR-18	CONSULT for VDC	BRC-29 , BRC-93	
Brake fluid level	MA-28	Control units (terminal arrangement)	PG-76	E
Brake hydraulic line	BR-13	Control valve (A/T)	AT-35	
Brake inspection	MA-28	Control valve (Transfer)	TF-166	
Brake lines and cables inspection	MA-28	Controller Area Network (CAN) ..	WT-9 , BRC-11 , BRC-74 , SE-16 , LAN-34 , LAN-63 , LAN-92 , LAN-124 , LAN-161 , LAN-191 , LAN-222 , LAN-256	F
Brake master cylinder	BR-16	Converter housing installation	AT-247 , AT-250	
Brake switch	EC-625	COOL/F - Wiring diagram	EC-467	G
BRK/SW - Wiring diagram	EC-626	Coolant mixture ratio	MA-12	
Bulb specifications	LT-164	Coolant replacement	MA-13	
Bumper, front	EI-14	Cooling circuit (engine)	CO-7	H
Bumper, rear	EI-15	Cooling fan	CO-14	
	C	Cooling fan motor	EC-473	
		Cooling unit (A/C evaporator)	ATC-136 , ATC-166 , MTC-87 , MTC-108	I
Camshaft	EM-74	Corrosion protection	BL-131	
Camshaft inspection	EM-76	Crankcase ventilation system - See Positive crankcase ventilation	EC-45	J
Camshaft position sensor (PHASE)	EC-305	Crankshaft	EM-127	
CAN - Wiring diagram ..	EC-168 , LAN-36 , LAN-65 , LAN-94 , LAN-126 , LAN-163 , LAN-193 , LAN-224 , LAN-258	Crankshaft position sensor (POS)	EC-298	
CAN (Controller Area Network) ..	WT-9 , BRC-11 , BRC-74 , SE-16 , LAN-34 , LAN-63 , LAN-92 , LAN-124 , LAN-161 , LAN-191 , LAN-222 , LAN-256	Crash zone sensor	SRS-54	K
CAN communication ..	EC-167 , AT-100 , TF-22 , TF-115 , TF-199 , TF-250 , WT-9 , BRC-11 , BRC-74 , SE-16 , LAN-34 , LAN-63 , LAN-92 , LAN-124 , LAN-161 , LAN-191 , LAN-222 , LAN-256	CUR/SE - Wiring diagram ..	EC-571 , EC-578 , EC-585 , EC-592	
Canister-See EVAP canister	EC-36	Cylinder block	EM-105	L
Center case (Transfer)	TF-166	Cylinder head	EM-91	
CHARGE - Wiring diagram	SC-21	Cylinder head bolt tightening	EM-94	
Charging system	SC-19		D	IDX
Chassis and body maintenance	MA-21	Daytime light system	LT-31	
Chassis and body maintenanceSchedule 1	MA-8	Daytime running light - See Daytime light system ..	LT-31	
Chassis and body maintenanceSchedule 2	MA-10	DEF - Wiring diagram	GW-75	
CHIME - Wiring diagram	DI-49	Diagnosis sensor unit	SRS-57	
Circuit breaker	PG-71	Diagnostic trouble code (DTC) for OBD system ..	EC-9	
Closed loop control	EC-26	Diagnostic trouble code (DTC) inspection priority chart	EC-99	
Clutch drum (Transfer)	TF-166	Differential gear oil replacement	MA-26 , MA-27	
Clutch pressure switch (Transfer)	TF-166	Dimensions	GI-49	
Coil spring (front)	FSU-10	Direct clutch solenoid valve	AT-152 , AT-154	
Collision diagnosis	SRS-59	Display and amp.assembly	MTC-42	
Combination lamp, rear, removal and installation ..	LT-120	Display Control Unit	AV-166	
Combination meter	DI-4	Dome light - See Interior lamp	LT-128	
Combination switch	LT-91	Door glass	GW-59 , GW-63	
COMBSW - Wiring diagram	LT-91	Door lock	BL-96	
COMM - Wiring diagram	AV-95	Door mirror lamp	LT-128	
COMPAS - Wiring diagram	DI-28			
Compass	DI-27			

ALPHABETICAL INDEX

Door trim [EI-25](#)
Door, front [BL-91](#), [GW-59](#)
Door, rear [BL-91](#), [GW-63](#)
Drive belt [EM-13](#)
Drive chain (Transfer) [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#), [TF-283](#)
Drive shaft (rear) [RAX-7](#)
Driver air bag [SRS-44](#)
DTC work support [EC-137](#)
DTRL - Wiring diagram [LT-35](#)
Duct and grilles [ATC-149](#), [MTC-94](#)
DVD - Wiring Diagram [AV-63](#)
DVD Player [AV-68](#)

E

ECM input/output signal [EC-116](#)
ECM power supply [EC-159](#), [EC-407](#)
ECM/PW - Wiring diagram [EC-408](#)
ECTS - Wiring diagram [EC-206](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator .. [EM-18](#), [EC-418](#), [EC-420](#)
Electrical load signal circuit [EC-696](#)
Electrical units location [PG-68](#)
Electronic ignition (EI) system [EC-27](#)
Engine control circuit diagram [EC-114](#)
Engine control component parts location [EC-106](#)
Engine control module (ECM) [EC-396](#)
Engine control system diagram [EC-24](#)
Engine coolant temperature sensor (ECTS) .. [EC-204](#), [EC-216](#)
Engine fail-safe system [EC-101](#)
Engine oil [LU-6](#)
Engine oil filter replacement [MA-18](#)
Engine oil precautions [GI-7](#)
Engine oil replacement [MA-17](#)
Engine removal [EM-102](#)
Engine room cover [EM-12](#)
Engine serial number [GI-48](#)
ETC1 - Wiring diagram [EC-421](#)
ETC2 - Wiring diagram [EC-428](#)
ETC3 - Wiring diagram [EC-432](#)
EVAP canister [EC-36](#)
EVAP canister purge volume control solenoid valve [EC-332](#)
EVAP canister vent control valve [EC-339](#), [EC-563](#)
EVAP control system (small leak) diagnosis .. [EC-324](#), [EC-363](#)
EVAP control system pressure sensor [EC-346](#), [EC-349](#), [EC-355](#)
EVAP control system purge flow monitoring diagnosis [EC-319](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-33](#)
Evaporator [ATC-166](#), [MTC-108](#)
Exhaust manifold [EM-21](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#)

Expansion valve [ATC-169](#), [MTC-109](#)

F

F/FOG - Wiring diagram [LT-65](#)
F/PUMP - Wiring diagram [EC-687](#)
Final drive pre-inspection [FFD-17](#), [RFD-17](#)
Final drive removal and installation [RFD-13](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-130](#)
Fluids [MA-11](#)
Fluorescent leak detector [ATC-170](#), [MTC-109](#)
Fog lamp, front [LT-63](#)
Foot lamp [LT-129](#)
Freeze frame data [EC-53](#)
Front brake solenoid valve [AT-148](#), [AT-150](#)
Front bumper [EI-14](#)
Front case (Transfer) [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#), [TF-283](#)
Front door [BL-91](#), [BL-96](#), [GW-59](#)
Front Door Trim [EI-25](#)
Front drive shaft (Transfer) .. [TF-148](#), [TF-175](#), [TF-275](#), [TF-277](#), [TF-283](#), [TF-295](#)
Front final drive removal and installation (4WD) . [FFD-14](#)
Front fog lamp [LT-63](#)
Front passenger air bag [SRS-48](#)
Front seat [SE-91](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SRS-3](#), [SRS-56](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-268](#), [EC-273](#)
Fuel cut control (at no load high engine speed) [EC-28](#)
Fuel filter replacement [FL-6](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-246](#), [EC-256](#)
Fuel injection system (Bank 2) [EC-246](#), [EC-256](#)
Fuel injector and fuel tube [EM-34](#)
Fuel level sensor [EC-379](#), [EC-381](#), [EC-383](#)
Fuel line inspection [FL-5](#)
Fuel pressure check [EC-91](#)
Fuel pressure release [EC-91](#)
Fuel pump [EC-686](#)
Fuel pump and gauge [FL-6](#)
Fuel system [FL-5](#)
Fuel tank [FL-11](#)
Fuel tank temperature sensor [EC-266](#), [EC-272](#)
Fuel tank vacuum relief valve [EC-36](#)
FUELB1 - Wiring diagram [EC-248](#), [EC-258](#)
FUELB2 - Wiring diagram [EC-249](#), [EC-259](#)
Fuse [PG-71](#), [PG-82](#)
Fuse and fusible link box [PG-82](#)
Fuse block [PG-81](#)
Fusible link [PG-71](#), [PG-82](#)

G

Garage jack and safety stand [GI-40](#)

ALPHABETICAL INDEX

<p>Gauges DI-4</p> <p>Generator SC-19</p> <p>Generic scan tool (GST) EC-139</p> <p>Glass GW-11, GW-59, GW-63</p> <p>Glove box lamp LT-150</p> <p>GPS antenna AV-70</p> <p>Grease MA-11</p> <p>Ground distribution PG-30</p>	<p>ILL - Wiring diagram LT-155</p> <p>Illumination LT-149</p> <p>Illumination control LT-163</p> <p>In vehicle sensor ATC-120, ATC-129</p> <p>INJECT - Wiring diagram EC-680</p> <p>Injector EC-679</p> <p>Input clutch solenoid valve AT-144, AT-146</p> <p>Instrument panel IP-10</p> <p>INT/L - Wiring diagram LT-134</p> <p>Intake air temperature sensor EC-199, EC-219</p> <p>Intake door control linkage adjustment MTC-54</p> <p>Intake door motor ATC-72, ATC-74, ATC-143, MTC-53, MTC-90</p> <p>Intake manifold EM-19</p> <p>Intake manifold collector EM-16</p> <p>Intake sensor .. ATC-125, ATC-131, MTC-80, MTC-83</p> <p>Intake valve timing control (Bank 1) EC-170</p> <p>Intake valve timing control (Bank 2) EC-170</p> <p>Intake valve timing control solenoid valve (Bank 1) EC-411</p> <p>Intake valve timing control solenoid valve (Bank 2) EC-411</p> <p>Integrated homelink transmitter - See Homelink universal transceiver BL-120</p> <p>Interior EI-27</p> <p>Interior lamp LT-128</p> <p>Interior lamp on-off control LT-129</p> <p>Internal gear (Transfer) .. TF-148, TF-175, TF-275, TF-277, TF-283</p> <p>IPDM (Intelligent power distribution module engine room) PG-17</p> <p>IVCB1 - Wiring diagram EC-412</p> <p>IVCB2 - Wiring diagram EC-414</p> <p>IVIS (Infiniti vehicle immobilizer system) precautions ... GI-3</p>
H	
<p>H/LAMP - Wiring diagram LT-8</p> <p>Handling precautions for plastics BL-153</p> <p>Harness connector PG-72</p> <p>Harness layout PG-40</p> <p>Hazard warning lamp LT-74</p> <p>Headlamp LT-5</p> <p>Heated oxygen sensor 2 (bank 1) ... EC-224, EC-234, EC-436, EC-448</p> <p>Heated oxygen sensor 2 (bank 2) ... EC-224, EC-234, EC-436, EC-448</p> <p>Heated oxygen sensor 2 heater (bank 1) EC-174</p> <p>Heated oxygen sensor 2 heater (bank 2) EC-174</p> <p>Heated seat SE-86</p> <p>Heater and cooling unit (Heater core) . ATC-136, ATC-140, MTC-87, MTC-89</p> <p>Heater unit (heater core) ATC-136, ATC-140, MTC-87, MTC-89</p> <p>Height (Dimensions) GI-49</p> <p>HFC134a (R134a) system identification ATC-7, MTC-6</p> <p>HFC134a (R134a) system precaution .. ATC-5, MTC-4</p> <p>HFC134a (R134a) system service procedure ATC-154, MTC-98</p> <p>HFC134a (R134a) system service tools ATC-14, MTC-12</p> <p>HFC134a system service equipment precaution ATC-11, MTC-9</p> <p>High & low reverse clutch solenoid valve . AT-156, AT-158</p> <p>Homelink universal transceiver BL-120</p> <p>Horn WW-55</p> <p>HORN - Wiring diagram WW-55</p> <p>How to erase DTC for OBD system EC-61</p> <p>HSEAT - Wiring diagram SE-88</p>	<p>ILL - Wiring diagram LT-155</p> <p>Illumination LT-149</p> <p>Illumination control LT-163</p> <p>In vehicle sensor ATC-120, ATC-129</p> <p>INJECT - Wiring diagram EC-680</p> <p>Injector EC-679</p> <p>Input clutch solenoid valve AT-144, AT-146</p> <p>Instrument panel IP-10</p> <p>INT/L - Wiring diagram LT-134</p> <p>Intake air temperature sensor EC-199, EC-219</p> <p>Intake door control linkage adjustment MTC-54</p> <p>Intake door motor ATC-72, ATC-74, ATC-143, MTC-53, MTC-90</p> <p>Intake manifold EM-19</p> <p>Intake manifold collector EM-16</p> <p>Intake sensor .. ATC-125, ATC-131, MTC-80, MTC-83</p> <p>Intake valve timing control (Bank 1) EC-170</p> <p>Intake valve timing control (Bank 2) EC-170</p> <p>Intake valve timing control solenoid valve (Bank 1) EC-411</p> <p>Intake valve timing control solenoid valve (Bank 2) EC-411</p> <p>Integrated homelink transmitter - See Homelink universal transceiver BL-120</p> <p>Interior EI-27</p> <p>Interior lamp LT-128</p> <p>Interior lamp on-off control LT-129</p> <p>Internal gear (Transfer) .. TF-148, TF-175, TF-275, TF-277, TF-283</p> <p>IPDM (Intelligent power distribution module engine room) PG-17</p> <p>IVCB1 - Wiring diagram EC-412</p> <p>IVCB2 - Wiring diagram EC-414</p> <p>IVIS (Infiniti vehicle immobilizer system) precautions ... GI-3</p>
I	
<p>I/MIRR - Wiring diagram GW-70</p> <p>IATS - Wiring diagram EC-201</p> <p>Identification plate GI-47</p> <p>Idle air volume learning EC-89</p> <p>Idle mixture ratio EC-77</p> <p>Idle speed EC-77</p> <p>Idle speed control (ISC) EC-387, EC-389</p> <p>Ignition coil EM-31, EC-657</p> <p>Ignition control system EC-657</p> <p>Ignition key hole illumination LT-128</p> <p>Ignition timing EC-77</p> <p>IGNSYS - Wiring diagram EC-658</p>	<p>Jacking points GI-40</p> <p>Junction box (J/B) PG-81</p>
J	
K	
<p>Key illumination LT-129</p> <p>KEYLES - Wiring diagram BL-46</p> <p>Knock sensor (KS) EC-293</p> <p>KS - Wiring diagram EC-294</p>	<p>Key illumination LT-129</p> <p>KEYLES - Wiring diagram BL-46</p> <p>Knock sensor (KS) EC-293</p> <p>KS - Wiring diagram EC-294</p>
L	
<p>Length (Dimensions) GI-49</p> <p>License lamp LT-102</p> <p>Lifting points GI-41</p> <p>Line pressure solenoid valve AT-123</p> <p>Line pressure switch (Transfer) TF-166</p> <p>Line pressure test (A/T) AT-51</p> <p>Liquid gasket application EM-5, LU-2, CO-2</p> <p>Location of electrical units PG-68</p> <p>Low coast brake solenoid valve AT-160, AT-162</p>	<p>Length (Dimensions) GI-49</p> <p>License lamp LT-102</p> <p>Lifting points GI-41</p> <p>Line pressure solenoid valve AT-123</p> <p>Line pressure switch (Transfer) TF-166</p> <p>Line pressure test (A/T) AT-51</p> <p>Liquid gasket application EM-5, LU-2, CO-2</p> <p>Location of electrical units PG-68</p> <p>Low coast brake solenoid valve AT-160, AT-162</p>

ALPHABETICAL INDEX

Low tire pressure warning system [WT-7](#)
Low tire pressure warning system - trouble diagnoses .
[WT-10](#)
Low tire pressure warning system - Wiring diagram
[WT-10](#)
Lubricant (R134a) A/C [ATC-22](#), [MTC-19](#)
Lubricants [MA-11](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-22](#), [MTC-19](#)
Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-186](#), [EC-194](#)
Magnet clutch . [ATC-96](#), [ATC-159](#), [MTC-65](#), [MTC-102](#)
MAIN - Wiring diagram [EC-159](#)
Main oil pump (Transfer) [TF-166](#)
Mainshaft (Transfer) [TF-166](#), [TF-275](#), [TF-277](#), [TF-283](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-16](#), [RFD-16](#)
Major overhaul (Transfer) [TF-145](#), [TF-275](#)
Malfunction indicator lamp (MIL) [EC-62](#)
Map lamp [LT-129](#)
Mass air flow sensor (MAFS) [EC-183](#), [EC-192](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-707](#)
MIL/DL - Wiring diagram [EC-707](#)
MIRROR - Wiring diagram [GW-92](#)
Misfire [EC-284](#)
Mode door control linkage adjustment [MTC-46](#)
Mode door motor [ATC-59](#), [ATC-61](#), [ATC-144](#), [MTC-45](#),
[MTC-91](#)
Model variation [GI-46](#)
Multiport fuel injection (MFI) system [EC-25](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry
system [BL-41](#)

N

NATS - Wiring diagram [BL-104](#)
NAVI - Wiring diagram [AV-87](#)
NAVI Control Unit [AV-165](#)
Neutral-4LO switch [TF-65](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-10](#)
NVH troubleshooting (Final drive) [FFD-6](#), [RFD-7](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-12](#), [TF-191](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-3](#)
NVIS (Nissan vehicle immobilizer system) [BL-101](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-176](#)
O2H2B2 - Wiring diagram [EC-178](#)
O2S2B1 - Wiring diagram .. [EC-226](#), [EC-237](#), [EC-439](#),
[EC-451](#)
O2S2B2 - Wiring diagram .. [EC-228](#), [EC-239](#), [EC-441](#),
[EC-453](#)
Oil cooler (engine) [LU-10](#)
Oil filter [LU-9](#)
Oil filter (Transfer) [TF-142](#)
Oil pan (engine) [EM-26](#)
Oil pressure (engine) [LU-7](#)
Oil pump (A/T) [AT-280](#)
Oil pump (engine) [LU-12](#)
Oil pump regulator valve (engine) [LU-12](#)
Oil seal replacement (engine) [EM-88](#)
Oil seal replacement (front of final drive) [FFD-9](#), [RFD-](#)
[10](#)
Oil seal replacement (side of final drive) [FFD-12](#), [RFD-](#)
[12](#)
On board diagnostic system [EC-48](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-40](#)
Overheat [EC-463](#)
Oversize piston [EM-125](#)

P

P/SCKT - Wiring diagram [WW-53](#)
Pantograph jack [GI-40](#)
Park/Neutral position switch [EC-615](#)
Park/neutral position switch (A/T) [AT-108](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-45](#)
Personal lamp [LT-129](#)
PGC/V - Wiring diagram [EC-334](#), [EC-557](#)
PHSB1 - Wiring diagram [EC-307](#)
PHSB2 - Wiring diagram [EC-309](#)
Pilot bushing replacement - See Pilot converter ... [EM-](#)
[106](#)
Piston assembly [EM-116](#)
Piston pin inspection [EM-121](#)
Piston ring inspection [EM-122](#)
Piston to bore clearance [EM-125](#)
Planetary carrier (Transfer) .. [TF-148](#), [TF-175](#), [TF-275](#),
[TF-277](#), [TF-283](#), [TF-291](#)
PNP/SW - Wiring diagram [EC-617](#)
POS - Wiring diagram [EC-300](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power door mirror [GW-92](#)
Power seat [SE-82](#)
Power steering fluid level [MA-29](#)
Power steering gear [PS-15](#)
Power steering oil pump [PS-20](#)
Power steering pressure (PSP) sensor [EC-391](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-15](#)

ALPHABETICAL INDEX

PRE/SE - Wiring diagram	EC-351 , EC-357	Seat belt, front	SB-3	
Precautions (General)	GI-4	Seat belt, rear	SB-5	A
Precautions in repairing high strength steel	BL-156	Seat, front	SE-91	
Pressure switch 1	AT-150 , AT-164	Seat, rear	SE-97	
Pressure switch 2	AT-162	Self-diagnosis (Transfer)	TF-53 , TF-215	B
Pressure switch 3	AT-146 , AT-166	SEN/PW - Wiring diagram	EC-479	
Pressure switch 5	AT-154 , AT-168	SHIFT - Wiring diagram	AT-224	
Pressure switch 6	AT-158 , AT-170	Shift control (Transfer) ...	TF-148 , TF-175 , TF-275 , TF-277 , TF-283 , TF-297	C
Pressure test (A/T)	AT-51	Shift lock system	AT-223	
Propeller shaft	PR-4 , PR-9	Shock absorber (front)	FSU-10	
Propeller shaft inspection	MA-25	Shock absorber (rear)	RSU-13	D
Propeller shaft on vehicle service	PR-9	Side air bag (satellite) sensor	SRS-55	
Propeller shaft vibration	PR-4 , PR-9	Side curtain air bag	SRS-52	
PS/SEN - Wiring diagram	EC-392	Side trim	EI-27	E
R				
Radiator	CO-11	SMJ (super multiple junction)	PG-79	
Radio - See Audio	AV-6	Spare tire size	GI-49	
Rear axle	RAX-5	Spark plug	EM-32	F
Rear bumper	EI-15	Spark plug replacement	MA-19	
Rear case (Transfer) TF-147 , TF-180 , TF-275 , TF-277 , TF-283		Specification value	EC-148	
Rear combination lamp removal and installation ...	LT-120	Speedometer	DI-4	G
Rear cover packing replacement diff.	FFD-13	Spiral cable	SRS-46	
Rear door	BL-91 , GW-63	SROOF - Wiring diagram	RF-13	
Rear seat	SE-97	SRS - See Supplemental Restraint System	SRS-5	H
Rear seat belt	SB-5	SRS - Wiring diagram	SRS-12	
Rear suspension	RSU-5	SRS Trouble diagnoses	SRS-8	
Rear washer	WW-35	Stabilizer bar (front)	FSU-12	
Rear window defogger	GW-72	Stabilizer bar (rear)	RSU-20	I
Rear wiper	WW-35	Stall test (A/T)	AT-50	
Refrigerant connection precaution	ATC-7 , MTC-6	Standardized relay	PG-77	
Refrigerant discharging evacuating charging ATC-154 , MTC-98		START - Wiring diagram	SC-11	J
Refrigerant general precaution	ATC-6 , MTC-5	Starting system	SC-10	
Refrigerant lines ATC-154 , ATC-162 , ATC-163 , MTC-98 , MTC-105 , MTC-106		Steering gear, linkage and transfer gear inspection	MA-29	
Refrigerant pressure sensor . EC-691 , ATC-165 , MTC-106		Steering linkage	PS-15	K
Relay box	PG-83	Steering wheel and column	PS-8	
Remote keyless entry system	BL-41	Step lamp	LT-129	
Removal and installation (A/T)	AT-245 , AT-248	Stop lamp	LT-97	L
Removal and installation (Transfer) ...	TF-144 , TF-274	Stop lamp switch	EC-625	
Revolution sensor (A/T)	AT-112	STOP/L - Wiring diagram	LT-98	
Road wheel size	GI-49	Strut (front)	FSU-10	
Rocker cover	EM-40	Sub-oil pump (Transfer)	TF-166	
Room lamp	LT-128	Sun gear (Transfer) TF-148 , TF-175 , TF-275 , TF-277 , TF-283		
Room lamp - See Interior lamp	LT-128	Sun roof, electric	RF-10	
ROOM/L - Wiring diagram	LT-134	Sunload sensor	ATC-123	
RP/SEN - Wiring diagram	EC-692	Sunroof	RF-25	
S				
SAE J1979 - Service \$01 - 09	EC-48	Supplemental Restraint System	SRS-5	
SEAT - Wiring diagram	SE-82 , SE-83	Symbols and abbreviations	GI-10 , GI-22	
Seat belt inspection	SB-9 , MA-32	Symptom matrix chart	EC-102	
Seat belt pre-tensioner	SRS-56	System readiness test (SRT) code	EC-54	
T				
T/TOW - Wiring diagram	LT-124	Tachometer	DI-4	
Tail lamp	LT-102	Tail lamp	LT-102	
TAIL/L - Wiring diagram	LT-105	TCM circuit diagram	AT-49	

ALPHABETICAL INDEX

TCM inspection table	AT-83	Valve seat	EM-100
TCS - Wiring diagram	BRC-17 , BRC-80	Valve spring	EM-101
TCS (traction control system)	BRC-8 , BRC-70	Vanity mirror lamp	LT-128
TCS component parts and connector location	BRC-15 , BRC-78	Variable induction air control system (VIAS) ..	EC-620 , EC-670
TCS wheel sensors	BRC-15 , BRC-78	VDC (vehicle dynamics control)	BRC-8 , BRC-70
Theft warning system - See Vehicle security (Theft warn- ing) system	BL-69	VDC -Wiring diagram	BRC-17 , BRC-80
Thermometer	DI-27	Vehicle identification number	GI-47
Thermostat	CO-21	Vehicle recovery (freeing a stuck vehicle)	GI-43
Three way catalyst	EM-21	Vehicle security (theft warning) system	BL-69
Three way catalyst function (Bank 1)	EC-314	Vehicle speed sensor (VSS)	EC-385
Three way catalyst function (Bank 2)	EC-314	VEHSEC - Wiring diagram	BL-74
Three way catalyst precautions	GI-5	VENT/V - Wiring diagram	EC-341 , EC-565
Throttle control motor	EC-431	VIAS - Wiring diagram	EC-672
Throttle control motor relay	EC-426	VIAS/V - Wiring diagram	EC-621
Throttle position sensor (TPS) ..	EC-209 , EC-277 , EC-474 , EC-476 , EC-643	Video Monitor	AV-68
Tie-rod	PS-15	VIN registration	EC-88
Timing chain	EM-54	Viscosity number (SAE)	MA-12
Tire rotation	MA-28		
Tire size	GI-49	W	
Torque converter installation	AT-247 , AT-250	W/ANT - Wiring diagram	AV-57
Torque convertor clutch solenoid valve ..	AT-119 , AT-121	Wait detection switch	TF-72 , TF-235
Tow truck towing	GI-42	WARN - Wiring diagram	DI-34
Towing point	GI-43	Warning chime	DI-46
TPS1 - Wiring diagram	EC-279	Warning lamps	DI-33
TPS2 - Wiring diagram	EC-211	Washer, front	WW-4
TPS3 - Wiring diagram	EC-645	Washer, rear	WW-35
Traction control system - Wiring diagram	BRC-17 , BRC-80	Water pump	CO-16
Transfer control device	TF-79 , TF-83 , TF-139 , TF-242 , TF-271	Water temperature gauge	DI-4
Transfer control unit inspection table	TF-38 , TF-209	Wheel alignment (front)	FSU-6
Transfer dropping resistor	TF-92	Wheel alignment (rear)	RSU-6
Transfer fluid temperature sensor	TF-106 , TF-166	Wheel balance	MA-27
Transfer motor	TF-104 , TF-141	Wheel bearing (front)	FAX-5
Transfer motor relay	TF-104	Wheel bearing (rear)	RAX-5
Transfer oil replacement	MA-25	Wheel hub (rear)	RAX-5
Transfer serial number	GI-48	Wheel size	GI-49
Transmission serial number	GI-48	Wheelbase (Dimensions)	GI-49
Tread-FR&RR (Dimensions)	GI-49	Width (Dimensions)	GI-49
Trim	EI-27	WINDOW - Wiring diagram	GW-21
TRNSCV - Wiring diagram	BL-120	Window antenna	AV-56
Trouble diagnoses	GI-10	Window, door	GW-59 , GW-63
Turbine revolution sensor	AT-135	Windshield	GW-11
TURN - Wiring diagram	LT-77	WIP/R - Wiring diagram	WW-37
Turn signal lamp	LT-74	WIPER - Wiring diagram	WW-9
Two trip detection logic	EC-48	Wiper, front	WW-4
Two-pole lift	GI-41	Wiper, rear	WW-35
		Wiring Diagram (Cell code) list	PG-65
		Wiring diagrams	GI-15
		WT-T/WARN - Wiring diagram	WT-10

V

Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-113
Valve clearance	EM-83
Valve guide	EM-98
Valve lifter	EM-78