

SECTION **MIR**
MIRRORS

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

CONTENTS

COMPONENT DIAGNOSIS	2	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	10
DOOR MIRROR	2	SERVICE INFORMATION	11
Wiring Diagram — Door Mirror (With Heated Mirrors) —	2	PREPARATION	11
Wiring Diagram — Door Mirror (Without Heated Mirrors) —	5	Special Service Tool	11
INSIDE MIRROR	8	Commercial Service Tool	11
Wiring Diagram	8	INSIDE MIRROR	12
PRECAUTION	10	Removal and Installation	12
PRECAUTIONS	10	DOOR MIRROR	13
		Door Mirror Assembly	13
		Door Mirror Glass	13

MIR

DOOR MIRROR

< COMPONENT DIAGNOSIS >


COMPONENT DIAGNOSIS

DOOR MIRROR

Wiring Diagram — Door Mirror (With Heated Mirrors) —

INFOID:000000001716868

DOOR MIRROR - WITH HEATED MIRRORS

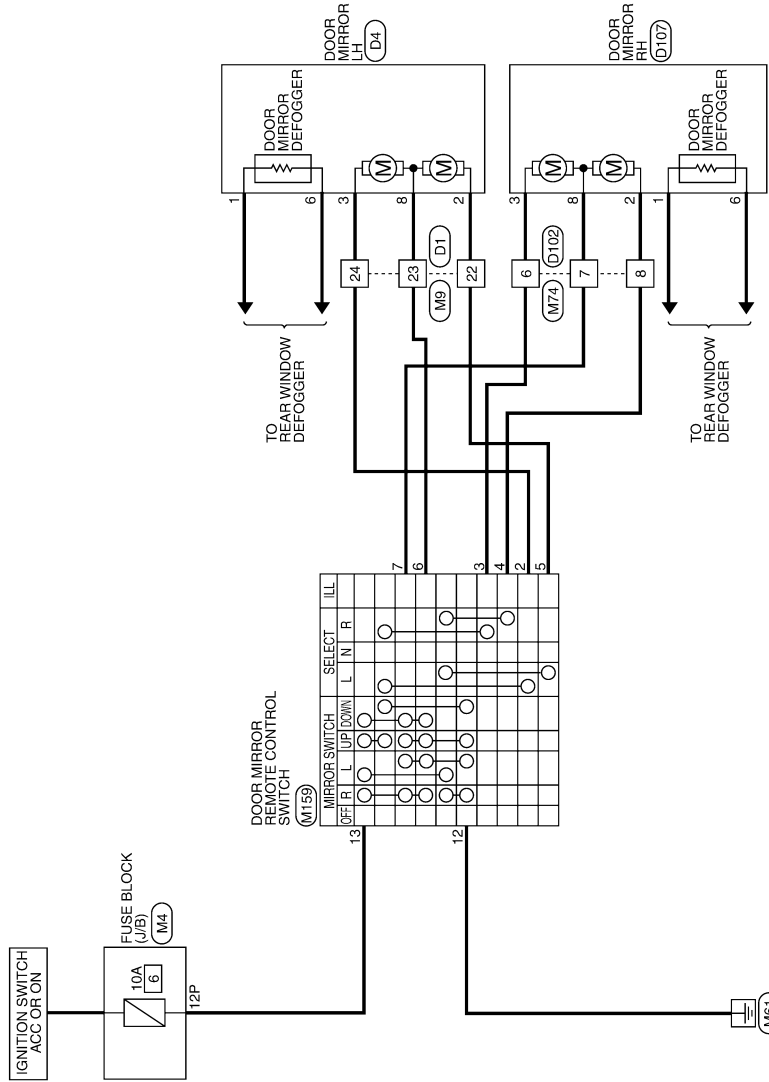


ALLWA0037GB

DOOR MIRROR

< COMPONENT DIAGNOSIS >


DOOR MIRROR - WITH HEATED MIRRORS CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
12P	G/Y	-

Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
22	Y	-
23	V	-
24	L	-

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
6	R	-
7	P	-
8	LG	-

Connector No.	M159
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	L	-
3	R	-
4	LG	-
5	Y	-
6	V	-
7	P	-
12	B	-
13	G/Y	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
22	Y/R	-
23	V/W	-
24	L/R	-

ALLIA0227GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MIR

DOOR MIRROR


< COMPONENT DIAGNOSIS >

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	Y/B	-
3	L/B	-
6	B	-
8	V/W	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	L/B	-
7	V/W	-
8	Y/B	-

Connector No.	D4
Connector Name	DOOR MIRROR LH
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	Y/R	-
3	L/R	-
6	B	-
8	V/W	-

ALLIA00228GB


DOOR MIRROR

< COMPONENT DIAGNOSIS >

Wiring Diagram — Door Mirror (Without Heated Mirrors) —

INFOID:000000001716869

DOOR MIRROR - WITHOUT HEATED MIRRORS

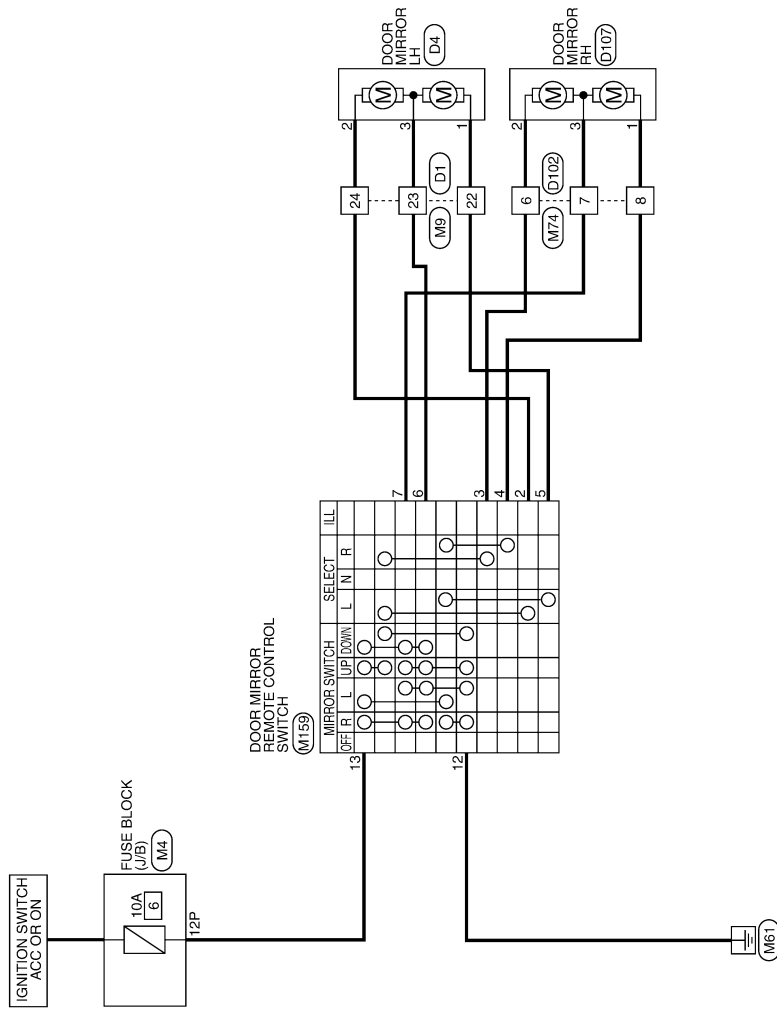

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MIR

ALLWA0038GB

DOOR MIRROR

< COMPONENT DIAGNOSIS >


DOOR MIRROR - WITHOUT HEATED MIRRORS CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12P	G/Y	-

Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
22	Y	-
23	V	-
24	L	-

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
6	R	-
7	P	-
8	LG	-

Connector No.	M159
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	L	-
3	R	-
4	LG	-
5	Y	-
6	V	-
7	P	-
12	B	-
13	G/Y	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
22	Y/R	-
23	V/W	-
24	L/R	-

DOOR MIRROR

< COMPONENT DIAGNOSIS >

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y/B	-
2	L/B	-
3	V/W	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	L/B	-
7	V/W	-
8	Y/B	-

Connector No.	D4
Connector Name	DOOR MIRROR LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y/R	-
2	L/R	-
3	V/W	-

A
B
C
D
E
F
G
H
I
J
K
MIR
N
O
P

ALLIA0230GB

INSIDE MIRROR


< COMPONENT DIAGNOSIS >

INSIDE MIRROR

Wiring Diagram

INFOID:000000001716870

- ◊WH◊ : WITH HOMELINK UNIVERSAL TRANSCIEVER
- ◊XK◊ : WITHOUT HOMELINK UNIVERSAL TRANSCIEVER
- *1 6: ◊WH◊
- 7: ◊XK◊
- *2 3: ◊WH◊
- 6: ◊XK◊

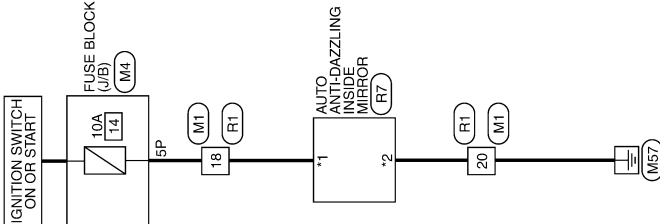

INSIDE MIRROR


ALLWA0040GB

INSIDE MIRROR

< COMPONENT DIAGNOSIS >


INSIDE MIRROR CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
18	W/G	-
20	B	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
5P	W/G	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
18	W/G	-
20	B	-

Connector No.	R7
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR (WITHOUT HOMELINK UNIVERSAL TRANSCIEVER)
Connector Color	RED



Terminal No.	Color of Wire	Signal Name
6	B	GND
7	W/G	IGN

Connector No.	R7
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR (WITH HOMELINK UNIVERSAL TRANSCIEVER)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	B	GND
6	W/G	IGN

ALLIA0265GB

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001716872

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PREPARATION

< SERVICE INFORMATION >

SERVICE INFORMATION


PREPARATION

Special Service Tool


INFOID:000000001712799

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
— (J-39570) Chassis ear	Locating the noise
— (J-43980) NISSAN Squeak and Rattle Kit	Repairing the cause of noise

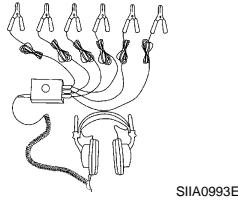

SIA0993E

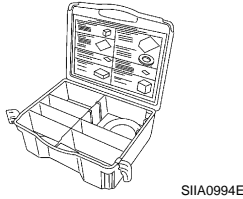


SIA0994E


Commercial Service Tool

INFOID:000000001712800

(Kent-Moore No.) Tool name	Description
(J-39565) Engine ear	Locating the noise
(—) Suction Lifter	Holding door glass

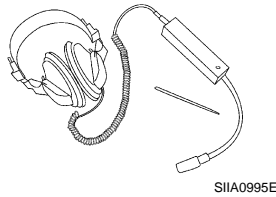

SIA0995E

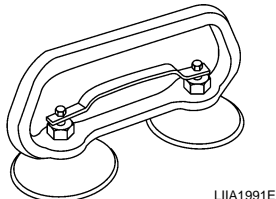

LIA1991E

A

B

C

D

E

F

G

H

I

J

K

MIR

M

N

O

P

INSIDE MIRROR

< SERVICE INFORMATION >


INSIDE MIRROR

Removal and Installation

INFOID:000000001712342

INSIDE MIRROR

1. Remove inside mirror finisher.
2. Slide the mirror upward to remove.
3. Disconnect the connector.

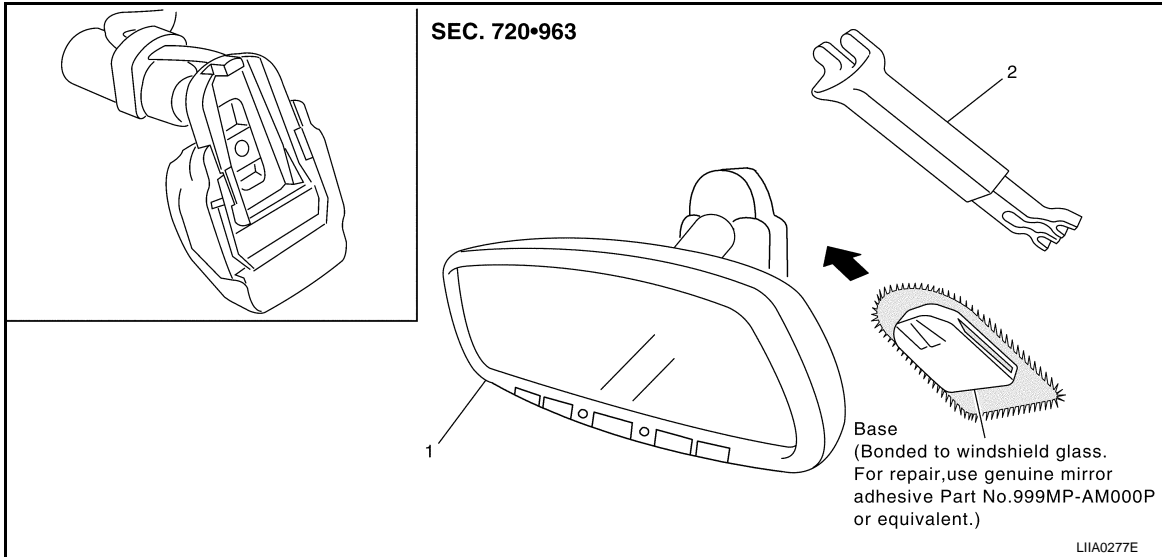

1. Inside mirror
2. Inside mirror finisher

Installation is in the reverse order of removal.


DOOR MIRROR

< SERVICE INFORMATION >

DOOR MIRROR

Door Mirror Assembly

INFOID:000000001712339

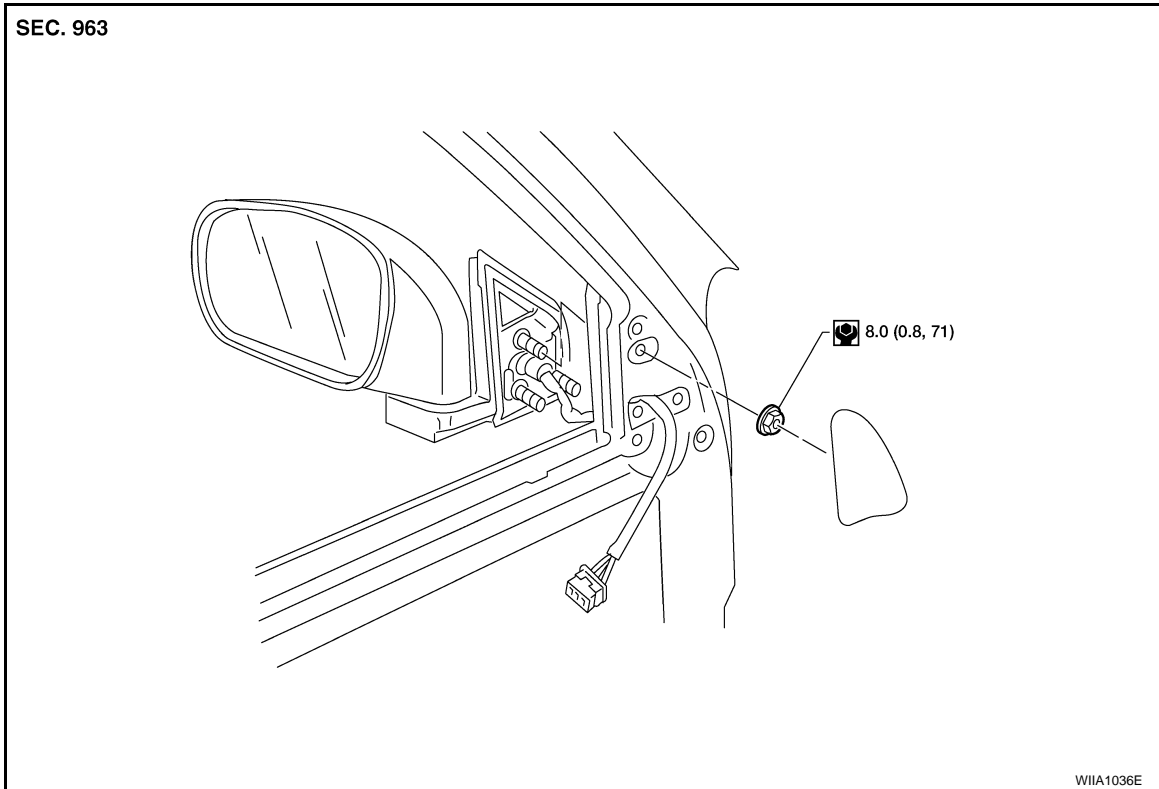

REMOVAL

NOTE:

Be careful not to damage the mirror bodies.

1. Remove the adhesive front door sash cover.
2. Remove the front door finisher. Refer to [INT-10, "Removal and Installation"](#).
3. Position the front door seal aside.
4. Disconnect the door mirror harness connector.
5. Remove the nuts and the door mirror assembly.


INSTALLATION

Installation is in the reverse order of removal.

Door Mirror Glass

INFOID:000000001712340

REMOVAL AND INSTALLATION

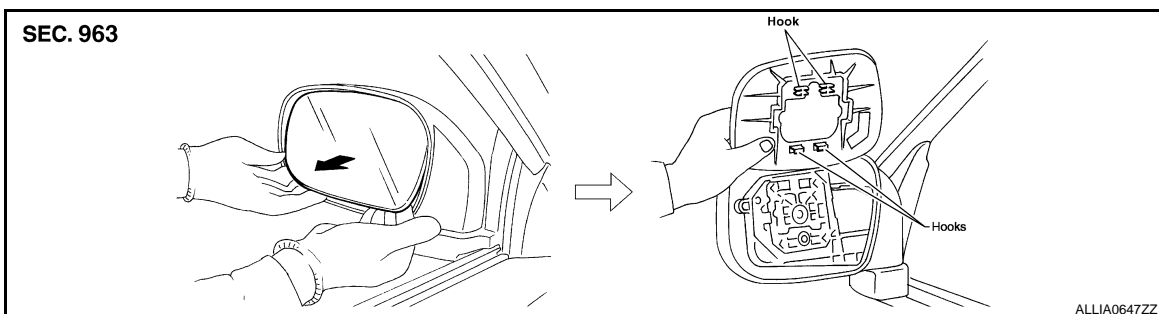

1. Angle the mirror fully up.
2. Remove the mirror.
 - Pull from the bottom to disengage the clips.
 - Continue to pivot the mirror upward from the bottom to separate the hooks.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

MIR

DOOR MIRROR

< SERVICE INFORMATION >

Installation is in the reverse order of removal.