SUPER MULTIPLE JUNCTION (SMJ)

INSTALLATION


To install SMJ, tighten bolts to specified torque.

[7]:3 - 5 N·m

(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

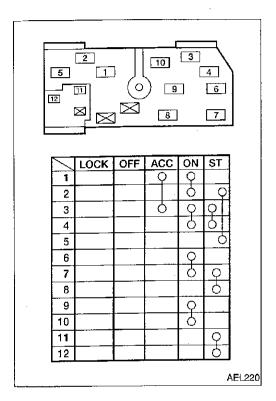


IGNITION SWITCH

Terminal Arrangement

Terminal Arrangement

MAIN HARNESS

A1 A2 A3 A4 A5 A6 B1 B2 B3 B4 B5 B6 A7 A8 A9 A10 A11 A12 B7 B8 B9 B10 B11 B12 C1 C2 C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 D1 D2 D11 D12 (M9) E11 E12 E1 E2 F1 F2 F11 F12 G7 G8 G9 G10 G11 G12 H7 H8 H9 H10 H11 H12 17 18 19 110 111 112 G1 G2 G3 G4 G5 G6 H1 H2 H3 H4 H5 H6 H1 I2 I3 I4 I5 I6

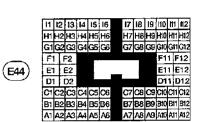

A1 A2 A3 A4 A5 A6

 
ENGINE ROOM HARNESS

ECM (ECCS CONTROL MODULE)



View from harness side


A/T CONTROL UNIT




View from harness side

JOINT CONNECTOR (J/C)

Location

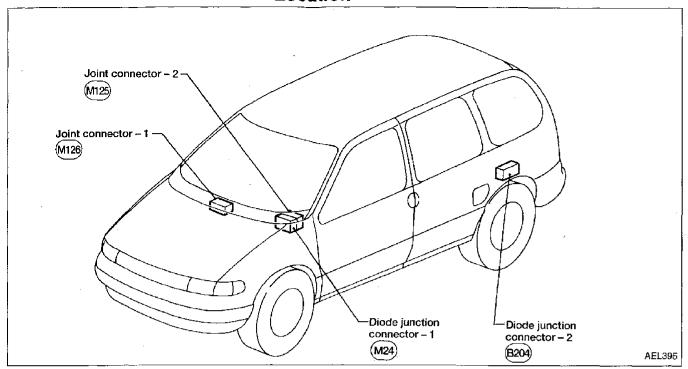

Terminal Arrangement

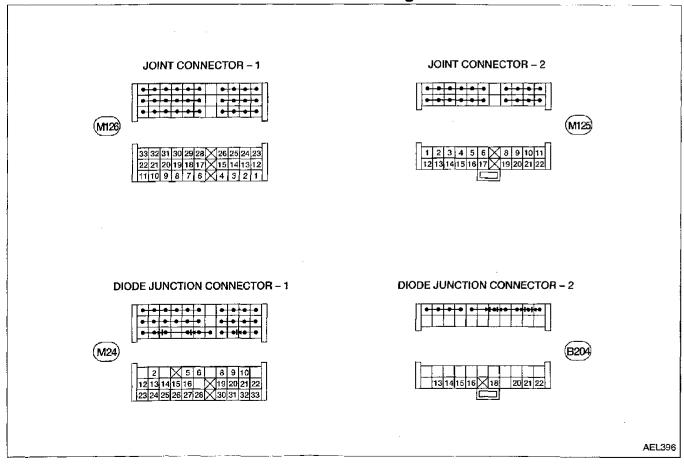

1994 NISSAN QUEST ECCS WIRING DIAGRAM

