

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EP &  
EC

FE

AT

FA

RA

BR

ST

BF

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS actuator ..... BR-32  
ABS (anti-lock brake system)..... BR-29  
ABS circuit diagram..... BR-40  
ABS control unit ..... BR-32  
ABS hydraulic circuit ..... BR-6, BR-19  
ABS self-diagnosis ..... BR-35  
ABS system components ..... BR-30  
ABS trouble diagnoses..... BR-34  
ABS wheel sensors ..... BR-31  
ABS wiring diagram..... BR-41  
A/C air flow ..... HA-16  
A/C circuit diagram..... HA-37  
A/C component layout..... HA-15  
A/C compressor clutch removal and  
installation ..... HA-79  
A/C compressor description ..... HA-94  
A/C compressor mounting..... HA-78  
A/C compressor precaution..... HA-5  
A/C compressor special service tool..... HA-8  
A/C control linkage adjustment ..... HA-66  
A/C control operation ..... HA-14  
A/C diagnostic work flow..... HA-20  
A/C lubricant..... HA-76  
A/C operational check..... HA-21  
A/C performance test diagnoses..... HA-32  
A/C pressure switch ..... HA-64  
A/C R134a system identification ..... HA-2  
A/C R134a system introduction ..... HA-2  
A/C R134a system precaution ..... HA-2, HA-3  
A/C R134a system service procedure ..... HA-68  
A/C R134a system service tools..... HA-6  
A/C relay..... HA-36, HA-65  
A/C service data specification..... HA-94  
A/C switch ..... HA-14  
A/C symptom chart..... HA-24  
A/C trouble diagnoses..... HA-20  
A/C wiring diagram..... HA-38  
Acceleration cut control..... EF & EC-24  
Accelerator control system..... FE-2  
Accelerator wire adjustment..... FE-2  
Activated carbon canister..... EF & EC-16  
Activated carbon canister inspection ..... EF & EC-174  
Air bag precautions ..... GI-2  
Air bleeding for brake system ..... BR-5  
Air cleaner filter replacement ..... MA-14  
Air mix door control linkage adjustment..... HA-67  
Angular tightening application ..... EM-2  
Anti-freeze coolant ..... MA-7  
ASCD (automatic speed control device)..... EL-145  
AT control unit ..... AT-86  
AT mode switch..... AT-88

AT removal and installation..... AT-107  
AT self diagnoses..... AT-46  
Audio ..... EL-134  
Autolamp ..... EL-54  
Automatic transaxle number ..... GI-22  
Automatic transmission fluid ..... MA-7  
Automatic transmission fluid replacement ..... MA-17  
Auxiliary air control (AAC) valve ..... EF & EC-14  
Axle housing (rear)..... RA-10

## B

Back door ..... BF-10, BF-11  
Back door window ..... BF-97  
Back up lamp ..... EL-63  
Battery ..... EL-14  
Belt inspection (drive belt)..... MA-8  
Blower motor ..... HA-64  
Blower relay..... HA-35, HA-65  
Blower resistor..... HA-64  
Body alignment..... BF-103  
Boring/honing cylinder block ..... EM-43  
Brake booster ..... BR-16  
Brake fluid ..... MA-7  
Brake fluid change ..... BR-4  
Brake fluid level..... MA-18  
Brake fluid level and line check ..... BR-4  
Brake hydraulic line..... BR-4  
Brake inspection..... MA-18  
Brake lines and cables inspection ..... MA-18  
Brake lining wear temporary checking..... MA-20  
Brake pedal ..... BR-11

## C

Camshaft inspection..... EM-26  
Camshaft position sensor (CMPS)..... EF & EC-10  
Camshaft position sensor inspection ..... EF & EC-163  
Charging system ..... EL-25  
Chassis and body maintenance..... MA-17  
Check connector for ECCS checker box.. EF & EC-16  
Cigarette lighter ..... EL-129  
Clearance lamp ..... EL-60  
Clock..... EL-129  
Coil spring (front)..... FA-25  
Combination meter ..... EL-83  
Combination meter (needle type)..... EL-82  
Combination switch ..... EL-31  
Compression pressure ..... EM-8  
Compressor clutch removal and installation..... HA-79  
Compressor description ..... HA-94  
Compressor mounting..... HA-78

# ALPHABETICAL INDEX

Compressor precaution.....	HA-5
Compressor special service tool.....	HA-8
Connecting rod.....	EM-42
Connecting rod bearing clearance.....	EM-46
Connecting rod bushing clearance.....	EM-48
CONSULT for ECCS.....	EF & EC-44
CONSULT general information.....	GI-18
Control valve (AT).....	AT-24
Converter housing installation.....	AT-203
Convertible roof.....	BF-35
Coolant.....	MA-7
Coolant replacement.....	MA-9
Cooling circuit (engine).....	LC-8
Cooling fan control.....	EF & EC-25
Cooling fan control system.....	LC-15
Cooling fan motor.....	HA-36
Cooling fan motor inspection.....	EF & EC-170
Cooling fan relay.....	HA-36, HA-65
Cornering lamp.....	EL-70
Courtesy lamp.....	EL-78
Crankcase emission control system.....	EF & EC-176
Crankshaft assembly.....	EM-49
Crankshaft bearing clearance.....	EM-45
Crankshaft inspection.....	EM-44
Cylinder block.....	EM-40
Cylinder head.....	EM-21
Cylinder head bolt tightening.....	EM-34

## D

Data link connector for CONSULT.....	EF & EC-15
Daytime lamp system.....	EL-42
Device (FICD) solenoid valve.....	EF & EC-14
Digital touch entry system.....	EL-160
Dimensions.....	GI-22
Door adjustment (front).....	BF-13
Door adjustment (sliding).....	BF-14
Door mirror.....	BF-100
Drive plate runout.....	EM-48
Drive shaft (front).....	FA-14
Dropping resistor (AT).....	AT-86
Dual pressure switch.....	HA-64

## E

ECCS basic inspection.....	EF & EC-55
ECCS circuit diagram.....	EF & EC-9
ECCS component parts location.....	EF & EC-5
ECCS fail-safe system.....	EF & EC-26
ECCS on-board diagnostic system.....	EF & EC-37
ECCS relay inspection.....	EF & EC-169
ECCS system diagram and chart.....	EF & EC-6

ECCS trouble diagnoses.....	EF & EC-33
ECM input/output signal inspection.....	EF & EC-158
EGR control (EGRC) — solenoid valve.....	EF & EC-15
EGR temperature sensor.....	EF & EC-15
EGR temperature sensor inspection.....	EF & EC-166
EGR valve inspection.....	EF & EC-165
EGRC-BPT valve inspection.....	EF & EC-166
Electrical units location.....	EL-181
Electronic ignition (EI) system.....	EF & EC-20
Energy conserving oils.....	MA-7
Engine control module (ECM).....	EF & EC-10
Engine coolant temperature (ECT) sensor.....	EF & EC-11
Engine coolant temperature sensor inspection.....	EF & EC-164
Engine oil.....	MA-7
Engine oil filter replacement.....	MA-15
Engine oil precautions.....	GI-4
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-6
Engine removal.....	EM-37
Engine serial number.....	GI-22
Evaporative emission system.....	EF & EC-174
Exhaust gas recirculation (EGR) system.....	EF & EC-24
Exhaust gas recirculation (EGR) valve.....	EF & EC-15
Exhaust system.....	FE-7
Exhaust system inspection.....	MA-17
Exterior.....	BF-37
Exterior lamp.....	EL-60

## F

Fan switch.....	HA-64
Final drive (FF AT).....	AT-183
Fluid temperature sensor (AT).....	AT-88
Fluids.....	MA-7
Foot lamp.....	EL-78
Forward clutch.....	AT-159
Front axle.....	FA-5
Front bumper.....	BF-6
Front suspension.....	FA-4
Fuel check valve inspection.....	EF & EC-175
Fuel damper.....	EF & EC-13
Fuel filler lid.....	BF-10, BF-11
Fuel filter.....	EF & EC-16
Fuel filter replacement.....	MA-13
Fuel gauge.....	EL-84
Fuel injector.....	EF & EC-12
Fuel line inspection.....	MA-13
Fuel precautions.....	GI-5
Fuel pressure check.....	EF & EC-171
Fuel pressure regulator.....	EF & EC-12
Fuel pressure release.....	EF & EC-171

GI  
 MA  
 EM  
 LC  
 EF & EC  
 FE  
 AT  
 FA  
 RA  
 BR  
 ST  
 BF  
 HA  
 EL  
**IDX**

# ALPHABETICAL INDEX

Fuel pump ..... EF & EC-13  
Fuel pump control ..... EF & EC-23  
Fuel pump inspection ..... EF & EC-165  
Fuel system ..... FE-4  
Fuel tank vacuum relief valve  
inspection ..... EF & EC-175  
Fuse ..... EL-13  
Fusible link ..... EL-13

## G

Generator ..... EL-28  
Grease ..... MA-7

## H

Harness connector ..... EL-3  
Harness layout ..... EL-184  
Hazard warning lamp ..... EL-64  
Headlamp ..... EL-34  
Heated oxygen sensor (HO2S) ..... EF & EC-12  
Heated oxygen sensor heater  
inspection ..... EF & EC-169  
Heated oxygen sensor monitor ..... EF & EC-43  
Heater wiring diagram ..... HA-38  
Height (Dimensions) ..... GI-22  
High clutch ..... AT-154  
Hood adjustment ..... BF-6  
Horn ..... EL-129  
How to follow flow chart in trouble diagnosis ..... GI-15  
How to read wiring diagrams ..... GI-8  
How to use this manual ..... GI-6  
Hydraulic lash adjuster inspection ..... EM-32

## I

IACV - FICD solenoid valve inspection... EF & EC-168  
IACV — air regulator inspection ..... EF & EC-168  
IACV-AAC valve inspection ..... EF & EC-167  
Identification plate ..... GI-21  
Idle air adjusting (IAA) unit ..... EF & EC-14  
Idle air control (IAC) system ..... EF & EC-22  
Idle air control (IACV) — fast idle control. EF & EC-14  
Idle air control valve (IACV) ..... EF & EC-14  
Idle air control valve (IACV) — air  
regulator ..... EF & EC-14  
Idle mixture ratio inspection ..... EF & EC-28  
Idle speed inspection ..... EF & EC-28  
Ignition coil inspection ..... EF & EC-164  
Ignition timing inspection ..... EF & EC-28  
Illuminated entry system ..... EL-104

Illumination ..... EL-73  
Inhibitor switch ..... AT-87, AT-105  
Injector inspection ..... EF & EC-169  
Injector removal and installation ..... EF & EC-172  
Instrument panel ..... BF-28  
Intake door control linkage adjustment ..... HA-67  
Intake manifold ..... EM-6  
Interior ..... BF-31  
Interior lamp ..... EL-73

## J

Jacking points ..... GI-23  
Joint connector (J/C) ..... Foldout page

## K

Knock sensor inspection ..... EF & EC-168  
Knock sensor (KS) ..... EF & EC-14

## L

Leaf spring (rear) ..... RA-11  
Length (Dimensions) ..... GI-22  
Lifting points ..... GI-23  
Line pressure solenoid valve ..... AT-86  
Line pressure test (AT) ..... AT-95  
Liquid gasket application ..... EM-2  
Low and reverse brake ..... AT-165  
LSV (load sensing valve) ..... BR-8  
Lubricant A/C ..... HA-76  
Lubricants ..... MA-7  
Lubrication circuit (engine) ..... LC-4  
Lubrication — locks, hinges and hood  
latches ..... MA-22

## M

Magnet clutch ..... HA-79  
Maintenance ..... MA-2  
Maintenance (engine) ..... MA-8  
Maintenance general ..... MA-2  
Maintenance periodic ..... MA-4  
Maintenance schedule (1) ..... MA-4  
Maintenance schedule (2) ..... MA-4  
Map lamp ..... EL-78  
Mass air flow sensor inspection ..... EF & EC-163  
Mass air flow (MAF) sensor ..... EF & EC-10  
Master cylinder (brake) ..... BR-14  
Meter and gauges ..... EL-82

# ALPHABETICAL INDEX

Mode door control linkage adjustment.....	HA-66
Model variation.....	GI-20
Molding.....	BF-37
Multi purpose grease.....	MA-7
Multiport fuel injection (MFI) system.....	EF & EC-17
Multiport fuel injection precautions.....	GI-4

## O

Oil change (capacity).....	MA-7
Oil change (interval).....	MA-4
Oil pan (engine).....	EM-9
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-7
Oil pump regulator valve (engine).....	LC-5, LC-6
Oil seal replacement (engine).....	EM-19
Overdrive switch.....	AT-89
Overrun clutch.....	AT-159
Overrun clutch solenoid valve.....	AT-87
Oversize piston.....	EM-44

## P

Parking brake control.....	BR-28
PCV (positive crankcase ventilation) inspection.....	EF & EC-176
Personal lamp.....	EL-78
Piston assembly.....	EM-48
Piston pin inspection.....	EM-41
Piston ring inspection.....	EM-42
Piston to bore clearance.....	EM-43
Power antenna.....	EL-138
Power door lock.....	BF-16
Power door lock trouble diagnoses.....	BF-20
Power seat.....	BF-44
Power steering fluid.....	MA-7
Power steering fluid level.....	MA-20, ST-6
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EF & EC-12
Power steering oil pressure switch inspection.....	EF & EC-170
Power steering oil pump.....	ST-28
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-6
Power transistor Ignition coil.....	EF & EC-13
Power transistor inspection.....	EF & EC-164
Power window.....	BF-22
Power window trouble diagnoses.....	BF-27
Precautions (General).....	GI-2
Pressure test (AT).....	AT-95

## R

R134a system identification.....	HA-2	GI
R134a system introduction.....	HA-2	
R134a system precaution.....	HA-2, HA-3	MA
R134a system service procedure.....	HA-68	
R134a system service tools.....	HA-6	EM
Radiator.....	LC-14	
Rear axle.....	RA-6	
Rear axle (drum brake type).....	RA-6	LC
Rear bumper.....	BF-10, BF-11	
Rear drum brake.....	BR-24	EF & EC
Rear side window.....	BF-98	
Rear suspension.....	RA-9	
Rear window defogger.....	EL-130	
Refilling engine coolant.....	LC-9	FE
Refrigerant connection precaution.....	HA-4	
Refrigerant discharging evacuating charging.....	HA-68	AT
Refrigerant general precaution.....	HA-3	
Refrigerant lines.....	HA-90	
Refrigeration cycle.....	HA-18	FA
Resistor inspection.....	EF & EC-170	
Reverse clutch.....	AT-150	
Road wheel size.....	GI-22	RA
Room lamp.....	EL-78	

## S

SAE J1930 terminology list.....	GI-26	
Seat belt inspection.....	MA-22	
Seat belt system.....	BF-56	BF
Seat belt system trouble diagnoses.....	BF-63	
Seat (front).....	BF-43	
Seat (rear).....	BF-48	HA
Self-diagnostic results.....	EF & EC-41	
Shift schedule.....	AT-38	EL
Shift solenoid valve (AT).....	AT-87	
Shock absorber (rear).....	RA-13	
Side guard molding.....	BF-42	
SMJ (super multiple junction).....	Foldout page	
Soft/Hard closed throttle position (CTP) switch.....	EF & EC-11	
Spark plug replacement.....	MA-15	
Speedometer.....	EL-84	
Spot lamp.....	EL-78	
Stabilizer bar (front).....	FA-26	
Stabilizer bar (rear).....	RA-15	
Stall test (AT).....	AT-93	
Standardized relay.....	EL-4	
Starter.....	EL-22	
Starting system.....	EL-20	
Steering gear and linkage inspection.....	MA-20	

IDX

# ALPHABETICAL INDEX

Steering gear oil level .....	MA-20
Steering knuckle.....	FA-12
Steering wheel and column.....	ST-12
Steering wheel play.....	ST-5
Steering wheel turning force .....	ST-7
Step lamp .....	EL-78
Stop lamp .....	EL-60
Strut (front) .....	FA-24
Sun roof.....	BF-92
Supplemental air bag .....	BF-109
Supplemental air bag caution labels.....	BF-111
Supplemental air bag removal and installation .....	BF-115, BF-116
Supplemental air bag scrapping .....	BF-119
Supplemental air bag system trouble diagnoses.....	BF-121
Supplemental restraint system.....	BF-109

## T

Tachometer.....	EL-84
Tail lamp .....	EL-60
Tailgate lamp .....	EL-78
Temperature control cable and linkage adjustment.....	HA-67
Thermostat .....	LC-12
Three way catalyst precautions .....	GI-4
Throttle bodies.....	EM-7
Throttle drum adjustment.....	FE-2
Throttle position sensor inspection and adjustment.....	EF & EC-166
Throttle position (TP) sensor.....	EF & EC-11
Tie rod ball joints .....	ST-25
Tightening torque of standard bolts .....	GI-25
Time control system .....	EL-104
Timing belt.....	EM-12
Tire rotation .....	MA-20
Tire size.....	GI-22
Torque converter installation .....	AT-206
Torque convertor clutch solenoid valve.....	AT-87
Tow truck towing.....	GI-24
Towing point .....	GI-24
Transverse link (front) .....	FA-27
Tread — FR RR (Dimensions).....	GI-22

Trim — back door .....	BF-31, BF-32
Trim — door .....	BF-31, BF-33
Trim — luggage compartment .....	BF-31
Trim — side and floor .....	BF-31
Turn signal lamp.....	EL-64

## V

Vacuum hose (brake system) .....	BR-18
Vacuum hose drawing (ECCS) .....	EF & EC-8
Valve clearance .....	EM-30
Valve guide inspection .....	EM-28
Valve seat inspection .....	EM-30, EM-31
Vapor lines inspection .....	MA-16
Vehicle identification number .....	GI-21
Vehicle speed pulse generator.....	AT-88, AT-105
Vehicle speed sensor (VSS) .....	EF & EC-14
Vent mode switch.....	HA-14
Viscosity number (SAE) .....	MA-7

## W

Warning chime .....	EL-100
Warning lamps .....	EL-92
Washer, front.....	EL-120
Water cock control rod adjustment .....	HA-66
Water pump.....	LC-10
Water temperature gauge .....	EL-84
Weatherstrip .....	BF-37
Wheel alignment (front).....	FA-6
Wheel alignment (rear).....	RA-4
Wheel balance.....	MA-20
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear) .....	RA-4
Wheel hub and steering knuckle.....	FA-10
Wheel hub (front) .....	FA-12
Wheel hub (rear) .....	RA-7
Wheelarch height .....	FA-5
Wheelbase (Dimensions) .....	GI-22
Width (Dimensions).....	GI-22
Windshield and windows.....	BF-97
Wiper and washer .....	EL-120
Wiper, front.....	EL-120