



SUPER MULTIPLE JUNCTION (SMJ)

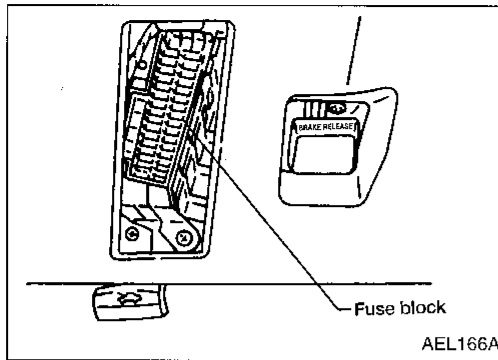


INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:



Do not overtighten bolts, otherwise, they may be damaged.

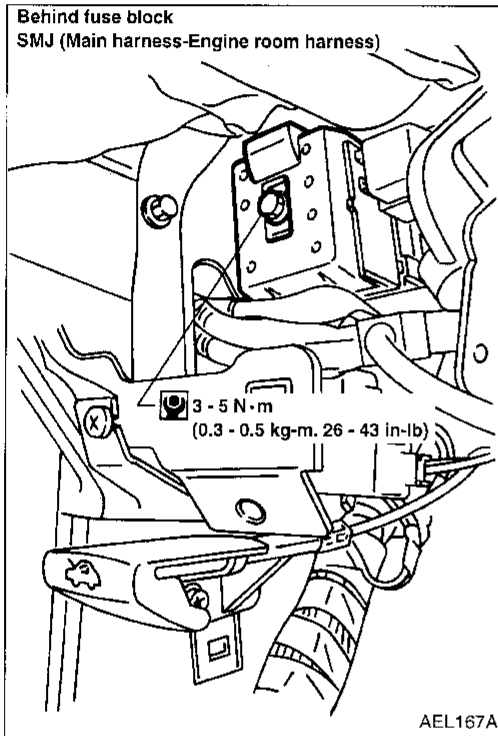

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS

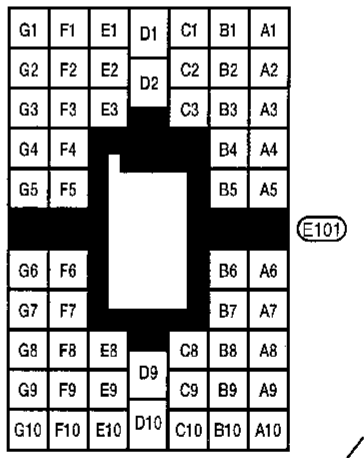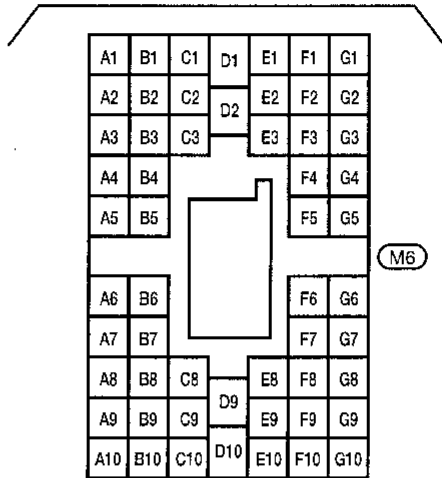

ENGINE ROOM HARNESS






JOINT CONNECTOR (J/C)

Location

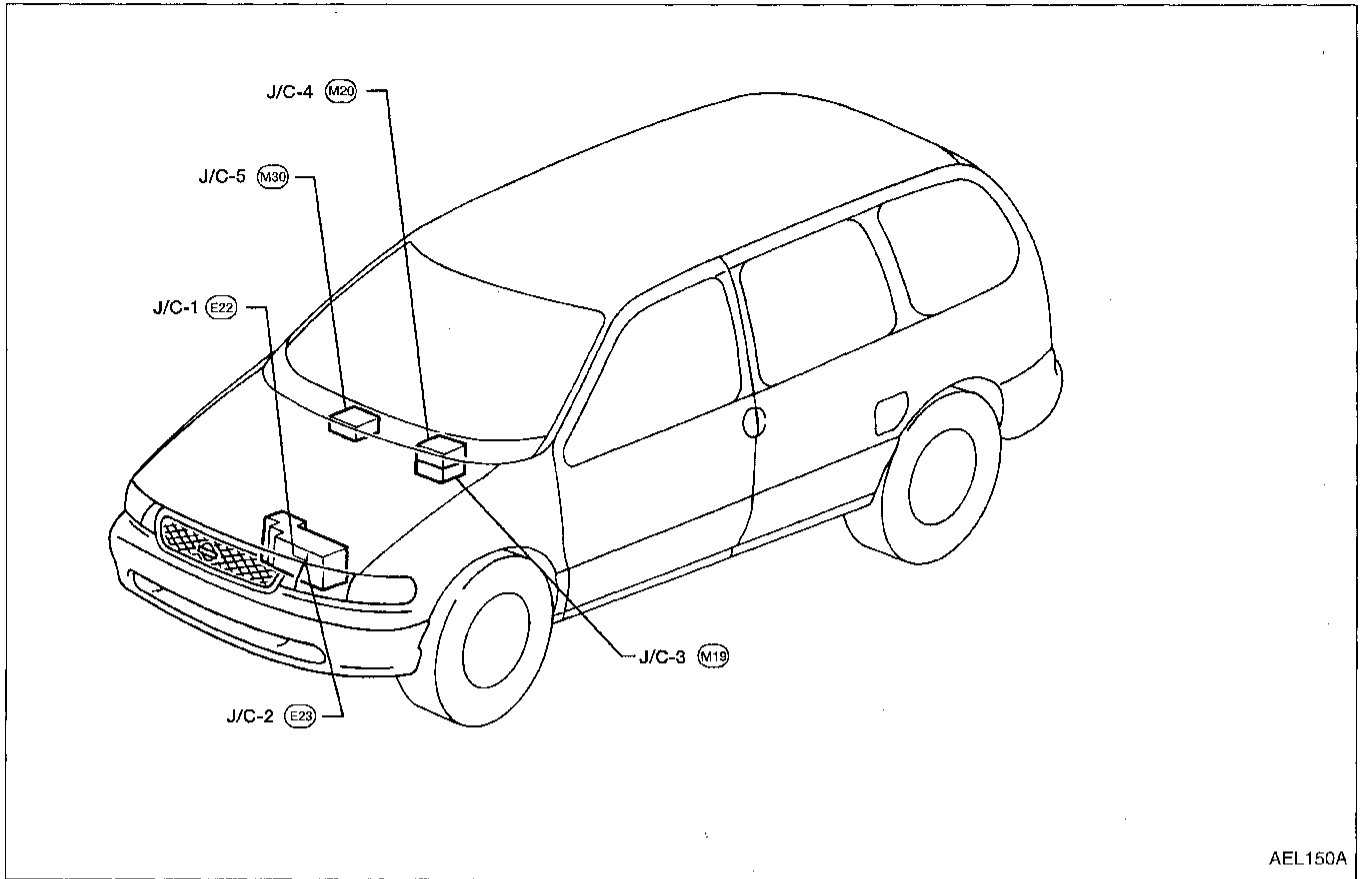

AEL150A



Terminal Arrangement

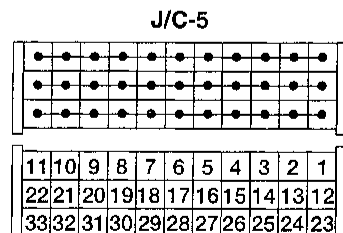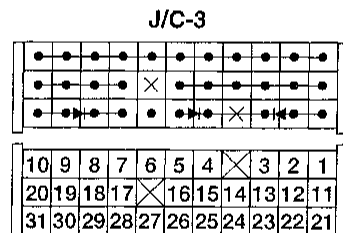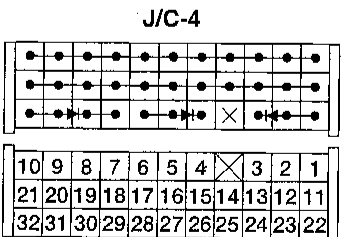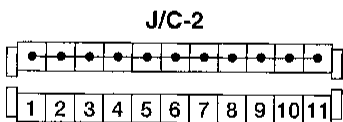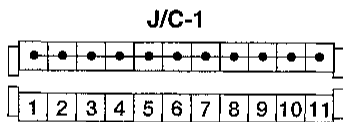

AEL151A

FUSE BLOCK/FUSE AND FUSIBLE LINK BOX

Fuse Arrangement

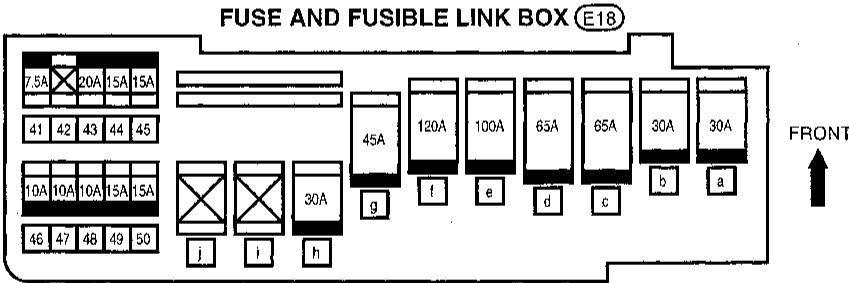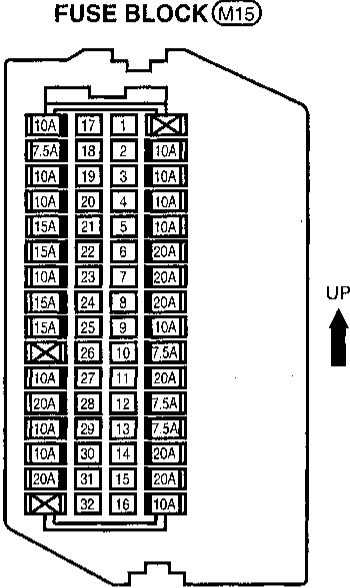

CONTROL UNITS

SMART ENTRANCE CONTROL UNIT



View from harness side

 


View from harness side




View from harness side

AIRBAG DIAGNOSIS SENSOR UNIT




View from harness side

 ABS CONTROL UNIT




View from harness side

 A/T CONTROL UNIT



View from harness side

ECM (ECCS CONTROL MODULE)

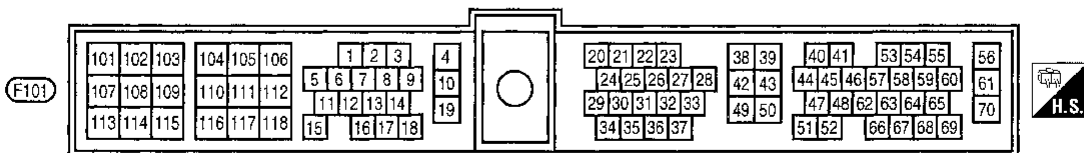

View from harness side