

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagramEC-391
ABS - Wiring diagramBR-36
ABS sensor rotorAX-5, 19
Absolute pressure sensorEC-138
A/C air flowHA-26
A/C component layoutHA-20, 165
A/C compressor clutch removal and
 installationHA-127, 235
A/C compressor descriptionHA-18, 163
A/C compressor precautionHA-9, 154
A/C compressor special service
 toolHA-16, 161
A/C control linkage adjustment (auto
 A/C)HA-62
A/C control linkage adjustment (manual
 A/C)HA-192
A/C control operation (auto A/C)HA-24
A/C control operation (manual A/C)HA-167
A/C diagnostic work flow (auto A/C)HA-35
A/C diagnostic work flow (manual
 A/C)HA-177
A/C HFC134a (R134a) system
 precautionHA-4, 149
A/C HFC134a (R134a) system service
 toolsHA-13, 158
A/C HFC134a system service equipment
 precautionHA-9, 155
A/C lubricant (R134a)HA-124, 232
A/C lubrication oilHA-124, 232
A/C operational checkHA-36, 178
A/C pressure switchHA-103, 222
A/C relayHA-103, 222
A/C self-diagnoses (auto A/C)HA-38
A/C service data specificationHA-147, 256
A/C switchHA-25, 167
A/C symptom chart (auto A/C)HA-41
A/C symptom chart (manual A/C)HA-180
A/C trouble diagnoses (auto A/C)HA-27
A/C trouble diagnoses (manual A/C)HA-169
A/C, A - Wiring diagramHA-31
A/C, M - Wiring diagramHA-173
Accelerator control systemFE-3
Accelerator wire adjustmentFE-3
Air bagRS-11, 16
Air bag disposalRS-20
Air bag precautionsGI-3
Air bleeding for brake systemBR-7
Air cleaner filter replacementMA-19
Air conditioner cut controlEC-29
Air flow meter - See Mass air flow
 sensorEC-129
Air mix door control linkage
 adjustmentHA-53
Air mix. door motorHA-48
Air spoiler, rearBT-35

AlternatorSC-14
Ambient sensorHA-113
Angular tightening applicationEM-3
AntennaEL-141
Anti-lock brake system - Wiring
 diagramBR-36
AP/SEN - Wiring diagramEC-141
ASCD (automatic speed control
 device)EL-185
ASCD - Wiring diagramEL-189
A/T - Wiring diagramAT-15
A/T - Wiring diagram - AT - FTSAT-111
A/T - Wiring diagram - AT - MAINAT-99
A/T - Wiring diagram - AT - PNP/SWAT-104
A/T - Wiring diagram - AT - VSS A/TAT-118
A/T controlEC-403
A/T diagnosis communication lineEC-505
A/T fluid temperature sensorAT-115
A/T self-diagnosesAT-39, 48
A/T shift lock systemAT-259
A/T shift lock system - Wiring
 diagramAT-260
A/T trouble diagnosesAT-55
A/T Wiring diagram - AT - ENG SSAT-123
A/T Wiring diagram AT - 1STAT-129
A/T Wiring diagram AT - 2NDAT-135
A/T Wiring diagram AT - 3RDAT-141
A/T Wiring diagram AT - 4THAT-148
A/T Wiring diagram AT - BA/FTSAT-196
A/T Wiring diagram AT - LPSVAT-168
A/T Wiring diagram AT - NONDTCAT-209
A/T Wiring diagram AT - OVRCVAT-191
A/T Wiring diagram AT - SSV/AAT-174
A/T Wiring diagram AT - SSV/BAT-179
A/T Wiring diagram AT - TCCSIGAT-160
A/T Wiring diagram AT - TCVAT-155
A/T Wiring diagram AT - TPSAT-184
A/T Wiring diagram AT - VSSMTRAT-203
AT/C - Wiring diagramEC-405
ATDIAG - Wiring diagramEC-506
AudioEL-129
AUDIO - Wiring diagramEL-131
Audio and A/C control removal and installation -
 See Instrument panelBT-23
AUT/DP - Wiring diagramEL-150
Auto air conditioner - Wiring diagramHA-31
AutolampEL-32
Automatic drive positionerEL-146
Automatic speed control system - See
 ASCDEL-185
Automatic transaxle numberGI-42
Automatic transmission fluid
 replacementMA-25
Auxiliary air control (AAC) valveEC-388

ALPHABETICAL INDEX

B

Back door	BT-17
Back door opener - See Back door	BT-17
Back door trim	BT-32
Back-up lamp	EL-55
BACK/L - Wiring diagram	EL-55
Ball joint (front).....	SU-11
Basic inspection.....	EC-88
Battery.....	SC-3
Blower motor.....	HA-83
Blower relay	HA-83, 96, 203, 214
Blower resistor.....	HA-97, 204, 215
Body alignment.....	BT-59
BPT valve	EC-330
Brake booster	BR-18
Brake fluid change.....	BR-6
Brake fluid level.....	MA-25
Brake fluid level and line check.....	BR-6
Brake hydraulic line	BR-8
Brake inspection.....	MA-26
Brake lines and cables inspection	MA-26
Brake lining wear temporary checking.....	MA-27
Brake master cylinder.....	BR-15
Brake pedal.....	BR-13
Bulb specifications.....	EL-310
Bumper, front.....	BT-14
Bumper, rear.....	BT-17
BYPS/V - Wiring diagram.....	EC-492, 500

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS)	EC-312
Canister-See EVAP canister.....	EC-30
CHARGE - Wiring diagram.....	SC-12
Charging system	SC-11
Chassis and body maintenance.....	MA-24
CHIME - Wiring diagram	EL-102
CIGAR - Wiring diagram	EL-120
Cigarette lighter	EL-120
Circuit breaker	EL-19
CKPS - Wiring diagram	EC-308, 434
Clock.....	EL-129
Closed loop control.....	EC-423
Closed throttle position switch.....	EC-395
CMPS - Wiring diagram	EC-315
Coil spring (front)	SU-8
Collision diagnosis.....	RS-49
Combination lamp, front, removal and installation	BT-14
Combination lamp, rear, removal and installation	BT-35
Combination meter	EL-80
Combination meter (needle type).....	EL-80

Combination meter removal and installation - See Instrument panel	BT-23
Combination switch	EL-29
Component Location (auto A/C)	HA-27
Component Location (manual A/C)	HA-169
Compression pressure	EM-13
Compressor clutch removal and installation	HA-127, 235
Compressor description	HA-18, 163
Compressor precaution	HA-9, 154
Compressor special service tool	HA-16, 161
Connecting rod	EM-50
Connecting rod bearing clearance	EM-54
Connecting rod bushing clearance	EM-55
Connector inspection	GI-20
Console box - See Instrument panel	BT-23
CONSULT for ABS	BR-41
CONSULT for engine	EC-70
CONSULT-II general information	GI-37
Control valve (A/T)	AT-298
Converter housing installation	AT-270
COOL/F - Wiring diagram.....	EC-519
Coolant mixture ratio	MA-12
Coolant replacement	MA-14
Cooling circuit (engine)	LC-8
Cooling fan control.....	EC-516
Cooling fan control system	LC-15
Cooling fan motor	EC-531
Cooling fan relay	EC-530
CORNER - Wiring diagram	EL-57
Cornering lamp	EL-56
Crank angle sensor built into distributor - See Camshaft position sensor	EC-312
Crankcase emission control system - See positive crankcase ventilation	EC-36
Crankshaft	EM-52
Crankshaft position sensor (OBD).....	EC-306
Crankshaft position sensor (OBD) cog chipping	EC-432
Cruise control - See ASCD	EL-185
Cylinder block	EM-47
Cylinder block boring	EM-52
Cylinder head	EM-27
Cylinder head bolt tightening	EM-40

D

Data link connector for Consult	EC-70
Daytime light system	EL-46
Daytime running light - See Daytime light system.....	EL-46
DEF - Wiring diagram	EL-123
Detonation sensor - See Knock sensor.....	EC-301
Diagnosis sensor unit	RS-14
Diagnostic trouble code (DTC) for OBD system.....	EC-8, 52

ALPHABETICAL INDEX

Diagnostic trouble code (DTC) inspection	
priority chart	EC-101
Differential gear (FF A/T)	AT-342
Dimensions	GI-42
Distributor	EC-28
Distributor ignition (DI) system	EC-28
D/LOCK - Wiring diagram	EL-217
Dome light - See Interior lamp	EL-72
Door glass	BT-20
Door lock	BT-20
Door mirror	BT-57
Door trim	BT-31
Door, front	BT-20
Drive belt inspection	MA-13
Drive plate runout	EM-56
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-171
DTC work support	EC-79
DTRL - Wiring diagram	EL-49

E

ECM input/output signal	EC-112
ECTS - Wiring diagram	EC-158, 174
EGR control (EGRC) - BPT valve	EC-330
EGR control (EGRC) - solenoid	
valve	EC-438
EGR control valve	EC-320, 451
EGR temperature sensor	EC-444
EGR/TS - Wiring diagram	EC-447
EGRC/V - Wiring diagram	EC-440
EGRC1 - Wiring diagram	EC-324, 454
Electric sun roof	EL-142
Electrical diagnoses	GI-23
Electrical ignition system	EC-28
Electrical unit	EL-318
Electrical units location	EL-287
Engine compartment	BT-60
Engine control circuit diagram	EC-21
Engine control component parts	
location	EC-19
Engine control module (ECM)	EC-408
Engine control system diagram and	
chart	EC-22
Engine coolant temperature sensor	
(ECTS)	EC-156, 172
Engine fail-safe system	EC-102
Engine oil filter replacement	MA-20
Engine oil precautions	GI-6
Engine oil replacement	MA-19
Engine outer component parts	EM-10
Engine removal	EM-43
Engine room - See Engine	
compartment	BT-60
Engine serial number	GI-42
EVAP canister	EC-31

EVAP canister purge volume control	
solenoid valve	EC-30, 351, 460
EVAP canister vent control	
valve	EC-358, 469, 483
EVAP control system (small leak)	
diagnosis	EC-340, 458
EVAP control system pressure	
sensor	EC-365
EVAP control system purge flow monitoring	
diagnosis	EC-475
EVAP vapor lines inspection	MA-22
Evaporative emission (EVAP) system	EC-30
Exhaust gas recirculation (EGR)	
valve	EC-320, 451
Exhaust system	FE-8
Exterior	BT-35

F

Fan switch	HA-83
Fast idle cam (FIC) inspection and	
adjustment	EC-39
FICD - Wiring diagram	EC-553
Final drive (FF A/T)	AT-342
Finisher, interior - See Trim	BT-28
Floor trim	BT-28
Fluid temperature sensor (A/T)	AT-115, 200
Fluids	MA-11
Flywheel runout	EM-56
Forward clutch	AT-320
F/PUMP - Wiring diagram	EC-542
Freeze frame data	EC-53
FRO2 - Wiring diagram	EC-181, 204, 215
FRO2/H - Wiring diagram	EC-223
Front axle	AX-2
Front bumper	BT-14
Front combination lamp removal and	
installation	BT-14
Front disc brake	BR-21
Front door	BT-20
Front heated oxygen sensor	
(HO2S)	EC-178, 187, 194, 201, 212
Front heated oxygen sensor (HO2S)	
heater	EC-221
Front passenger air bag	RS-18
Front seat	BT-39
Front seat belt	RS-4
Front suspension	SU-2
Front washer	EL-108
Front wiper	EL-108
FUEL - Wiring diagram	EC-274, 282
Fuel cut control (at no load & high engine	
speed)	EC-30
Fuel gauge	EL-80
Fuel injection system	EC-272, 281
Fuel injector	EC-532
Fuel precautions	GI-7

ALPHABETICAL INDEX

Fuel pressure check	EC-37
Fuel pressure regulator	EC-38
Fuel pressure release.....	EC-37
Fuel pump.....	EC-541
Fuel pump and gauge.....	FE-6
Fuel pump relay.....	EC-547
Fuel system.....	FE-4
Fuel tank temperature sensor	EC-288
Fuel tank vacuum relief valve.....	EC-31
Fuse.....	EL-19
Fuse block.....	EL-315
Fusible link	EL-19

G

Garage jack and safety stand.....	GI-44
Gauges	EL-80
Generator.....	SC-14
Generator - See Alternator	SC-14
Generic scan tool (GST).....	EC-81
Glass	BT-20
Grease	MA-11
Ground distribution	EL-20

H

Harness connector	EL-5
Harness connector inspection	GI-20
Harness layout	EL-290
Hazard warning lamp	EL-58
Headlamp	EL-32
Headlamp aiming control	EL-44
Headlamp leveler - See Headlamp aiming control	EL-44
Headlining - See Roof trim.....	BT-33
Heater mirror	EL-145
Height (Dimensions)	GI-42
HFC134a (R134a) system precaution	HA-4, 149
HFC134a (R134a) system service tools.....	HA-13, 158
HFC134a system service equipment precaution	HA-9, 155
High clutch.....	AT-315
H/LAMP - Wiring diagram	EL-34
H/MIRROR - Wiring diagram	EL-145
Hood.....	BT-14
Horn	EL-119
HORN - Wiring diagram	EL-119

How to erase DTC for OBD system.....	EC-63
Hydraulic lash adjuster inspection	EM-38

I

IACV-AAC valve.....	EC-388
IACV-FICD solenoid valve	EC-552
IATS - Wiring diagram	EC-152
Idle air control valve (IACV)	EC-388
Idle mixture ratio	EC-41
Idle speed	EC-41
IGN/SG - Wiring diagram	EC-427
Ignition control system.....	EC-425
Ignition timing.....	EC-41
Ignition wire inspection	EC-300
ILL - Wiring diagram.....	EL-68
Illumination	EL-65
In vehicle sensor	HA-116
INJECT - Wiring diagram	EC-533
Injector	EC-532
Injector removal and installation.....	EC-38
Instrument panel.....	BT-23
INT/L - Wiring diagram.....	EL-75
Intake air temperature sensor	EC-150
Intake door control linkage adjustment.....	HA-62, 192
Intake door motor	HA-56, 189
Integrated homelink transmitter.....	EL-284
Interior	BT-28
Interior lamp	EL-72

J

Jacking points	GI-43, 44
Joint connector (J/C)	EL-317

K

Keyless entry system - See Multi-remote control system.....	EL-234
Knock sensor (KS).....	EC-301
Knuckle spindle.....	AX-5
KS - Wiring diagram	EC-302

L

Leaf spring (rear).....	SU-20
Length (Dimensions).....	GI-42
License lamp	EL-53
Lifting points	GI-45
Line pressure solenoid valve	AT-152, 171
Line pressure test (A/T)	AT-65
Liquid gasket application.....	EM-3
Location of electrical units.....	EL-287
Lock, door.....	BT-20
Low and reverse brake.....	AT-325

ALPHABETICAL INDEX

LSV (Load sensing valve)	BR-10
Lubricant (R134a) A/C.....	HA-124, 232
Lubricants	MA-11
Lubrication circuit (engine).....	LC-3
Lubrication oil A/C	HA-124, 232
Lubrication-locks, hinges and hood latches.....	MA-28

M

MAFS - Wiring diagram.....	EC-133
Magnet clutch	HA-127, 235
MAIN - Wiring diagram.....	EC-122
Maintenance (engine).....	MA-13
MAJOR OVERHALL	AT-272
Malfunction indicator lamp (MIL)	EC-65
Manual air conditioner - Wiring diagram	HA-173
MAP/BARO switch solenoid valve.....	EC-410
Mass air flow sensor (MAFS)	EC-129
Master cylinder (brake).....	BR-15
Meter	EL-80
METER - Wiring diagram.....	EL-84
MIL & Data link connectors circuit.....	EC-562
MIL/DL - Wiring diagram	EC-562
MIRROR - Wiring diagram	EL-144
Mirror defogger.....	EL-145
Mirror, door	BT-57
Mirror, out side	BT-57
Misfire	EC-293
Mode door control linkage adjustment	HA-71
Model variation.....	GI-40
Molding - See Exterior	BT-35
Mud guard - See Exterior.....	BT-35
MULTI - Wiring diagram	EL-238
Multi-remote control system	EL-234
Multiport fuel injection (MFI) system	EC-26
Multiport fuel injection precautions	GI-5

N

NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (EM)	EM-8
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-3

O

Oil change (capacity).....	MA-11
Oil change (interval).....	MA-6
Oil pan (engine).....	EM-14
Oil pressure (engine)	LC-3
Oil pump (A/T)	AT-294

Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-5
Oil seal replacement (engine)	EM-25
On board diagnostic system.....	EC-51
Out side mirror	BT-57
Overdrive control switch	AT-257
Overrun clutch	AT-320
Overrun clutch solenoid valve	AT-193, 301
Oversize piston.....	EM-52

P

Park/Neutral position switch	EC-508
Park/neutral position switch (A/T)	AT-102, 257
Parking brake control.....	BR-29
Parking drum brake	BR-25
Parking lamp	EL-53
PCV (positive crankcase ventilation)	EC-36
PGC/V - Wiring diagram.....	EC-354, 463
Pilot bushing replacement.....	EM-58
Piston assembly	EM-56
Piston pin inspection	EM-49
Piston ring inspection	EM-49
Piston to bore clearance	EM-51
PNP/SW - Wiring diagram.....	EC-510
POWER - Wiring diagram	EL-12
Power door lock	EL-214
Power door mirror	EL-144
Power seat	EL-183
Power steering fluid level	MA-27, ST-7
Power steering gear	ST-16
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-548
Power steering oil pump	ST-21
Power steering system bleeding	ST-7
Power supply routing	EL-9
Power transistor & ignition coil	EC-425
Power window	EL-209
PRE/SE - Wiring diagram.....	EC-367
Precautions (General).....	GI-3
Pressure test (A/T)	AT-65
PST/SW - Wiring diagram	EC-549

R

Radiator.....	LC-12
Radio - See Audio	EL-129
Rear air spoiler	BT-35
Rear axle.....	AX-18
Rear bumper	BT-17
Rear combination lamp removal and installation	BT-35
Rear drum brake.....	BR-25
Rear heated oxygen sensor (HO2S).....	EC-228, 238, 248, 257

ALPHABETICAL INDEX

Rear heated oxygen sensor (HO2S)	
heater	EC-265
Rear seat belt	RS-5
Rear side window	BT-55
Rear suspension	SU-15
Rear washer	EL-113
Rear window defogger	EL-121
Rear wiper	EL-113
Refrigerant connection precaution	HA-5, 150
Refrigerant discharging evacuating	
charging	HA-122, 230
Refrigerant general precaution	HA-5, 150
Refrigerant lines	HA-134, 242
Refrigeration cycle	HA-18, 163
Removal and installation (A/T)	AT-269
Reverse clutch	AT-312
Revolution sensor (A/T)	AT-121
Road wheel size	GI-42
Roof trim	BT-33
Room lamp	EL-72
Room lamp - See Interior lamp	EL-72
RRO2 - Wiring	
diagram	EC-231, 241, 250, 259
RRO2/H - Wiring diagram	EC-267

S

SAE J1930 terminology list	GI-48
Screw jack	GI-43
Seal - See Exterior	BT-35
SEAT - Wiring diagram	EL-183
Seat belt inspection	MA-28, RS-8
Seat belt, front	RS-4
Seat belt, rear	RS-5
Seat, front	BT-39
Seat, second (2nd)	BT-41
Second (2nd) seat	BT-41
SHIFT - Wiring diagram	AT-260
Shift lock system	AT-259
Shift schedule	AT-365
Shift solenoid valve A	
(A/T)	AT-131, 143, 176, 301
Shift solenoid valve B	
(A/T)	AT-131, 137, 301
Shock absorber (front)	SU-8
Shock absorber (rear)	SU-23
Side trim	BT-28
Side window - See Rear side window	BT-55
Smart entrance control unit	EL-278
SMJ (super multiple junction)	EL-313
Spare tire size	GI-42
Spark plug replacement	MA-21
Speedometer	EL-80
Spiral cable	RS-16
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-143

SRS - See Supplemental Restraint	
System	RS-11
SRS - Wiring diagram	RS-29
SRS Trouble diagnoses	RS-25
S/SIG - Wiring diagram	EC-538
Stabilizer bar (front)	SU-10
Stabilizer bar (rear)	SU-23
Stall test (A/T)	AT-61
Standardized relay	EL-7
START - Wiring diagram	SC-7
Start signal	EC-537
Starter	SC-9
Starting system	SC-6
Steering gear and linkage inspection	MA-27
Steering linkage	ST-16
Steering switch	EL-31
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-54
STOP/L - Wiring diagram	EL-54
Strut (front)	SU-8
Sun roof, electric	EL-142
Sunload sensor	HA-119
Sunroof	BT-48
Supplemental Restraint System	RS-11
Supplemental restraint system - Wiring	
diagram	RS-29
SW/V - Wiring diagram	EC-414
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-103
System readiness test (SRT) code	EC-53

T

Tachometer	EL-80
Tail lamp	EL-53
TAIL/L - Wiring diagram	EL-53
TCM circuit diagram	AT-15
TCM inspection table	AT-95
TFTS - Wiring diagram	EC-290
THEFT - Wiring diagram	EL-259
Theft warning system	EL-253
Thermostat	LC-11
Three way catalyst	EC-335
Three way catalyst precautions	GI-5
Throttle drum adjustment	FE-3
Throttle position sensor (TPS)	EC-162
Throttle position sensor adjustment	EC-88
Throttle position switch	AT-188, 257, EC-395
Tie-rod	ST-19
Tie-rod ball joints	ST-19
Tightening torque of standard bolts	GI-47
Timing belt	EM-17
Tire rotation	MA-25
Tire size	GI-42
Torque converter installation	AT-270, 359

ALPHABETICAL INDEX

Torque convertor clutch solenoid valve.....	AT-157
Tow truck towing	GI-45
Towing point.....	GI-46
TP/SW - Wiring diagram.....	EC-398
TPS - Wiring diagram	EC-166
Transaxle serial number	GI-42
TRANSMT - Wiring diagram	EL-284
Tread-FR&RR (Dimensions).....	GI-42
Trim	BT-28
Trouble diagnoses	GI-33
T/TOW - Wiring diagram.....	EL-63
TURN - Wiring diagram.....	EL-59
Turn signal lamp.....	EL-58
Two trip detection logic.....	EC-51
Two-pole lift.....	GI-45

U

Under body.....	BT-62
-----------------	-------

V

Vacuum cut valve	EC-30, 504
Vacuum cut valve bypass valve.....	EC-30, 490, 497
Vacuum hose (brake system).....	BR-20
Vacuum hose drawing (Engine control)	EC-24
Valve clearance	EM-60
Valve guide	EM-33
Valve seat.....	EM-35
Valve spring.....	EM-37
Vehicle identification number	GI-41
Vehicle recovery (freeing a stuck vehicle)	GI-46
Vehicle speed sensor (VSS).....	EC-384
VENT/V - Wiring diagram.....	EC-360, 471, 486
Viscosity number (SAE)	MA-12
VSS - Wiring diagram.....	EC-386

W

WARN - Wiring diagram.....	EL-95
----------------------------	-------

Warning buzzer	EL-100
Warning chime	EL-100
Warning lamps	EL-92
Washer, front	EL-108
Washer, rear	EL-113
Water pump.....	LC-9
Water temperature gauge	EL-80
Weatherstrip - See Exterior.....	BT-35
Wheel alignment (front)	SU-5
Wheel alignment (rear)	SU-17
Wheel balance.....	MA-25
Wheel bearing (front)	AX-4
Wheel bearing (rear).....	AX-18
Wheel hub (front)	AX-5
Wheel hub (rear).....	AX-19
Wheel sensors (ABS)	BR-53, 73
Wheel size	GI-42
Wheelarch height.....	SU-5
Wheelbase (Dimensions).....	GI-42
Wide open & closed throttle position switch	EC-162
Width (Dimensions).....	GI-42
WINDOW - Wiring diagram	EL-211
Window, door.....	BT-20
Window, rear side.....	BT-55
Window, side - See Rear side window	BT-55
Windshield	BT-54
Windshield washer - See Front washer	EL-108
Windshield wiper - See Front wiper.....	EL-108
WIP/R - Wiring diagram	EL-114, 116
WIPER - Wiring diagram.....	EL-109
Wiper and washer	EL-108
Wiper, front	EL-108
Wiper, rear	EL-113
Wiring Diagram (Cell code) list	EL-311
Wiring diagrams	GI-10
Wrist pin - See Piston pin inspection	EM-49

X