

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

Numerics	
4LO switch .....	<a href="#">TF-42</a>
4WD shift switch .....	<a href="#">TF-45</a>
4WD system description .....	<a href="#">TF-15</a>
4WD system diagram .....	<a href="#">TF-18</a>
<b>A</b>	
A/C air flow .....	<a href="#">MTC-25</a>
A/C compressor clutch removal and installation .	<a href="#">MTC-116</a>
A/C compressor mounting .....	<a href="#">MTC-115</a>
A/C compressor precaution .....	<a href="#">MTC-9</a>
A/C compressor special service tool .....	<a href="#">MTC-12</a>
A/C control operation (auto A/C) .....	<a href="#">MTC-24</a>
A/C diagnostic work flow (auto A/C) .....	<a href="#">MTC-89</a>
A/C evaporator .....	<a href="#">MTC-122</a>
A/C HFC134a (R134a) system identification ....	<a href="#">MTC-6</a>
A/C HFC134a (R134a) system precaution .....	<a href="#">MTC-4</a>
A/C HFC134a (R134a) system service procedure .....	<a href="#">MTC-112</a>
A/C HFC134a (R134a) system service tools ..	<a href="#">MTC-12</a>
A/C HFC134a system service equipment precaution ...	<a href="#">MTC-9</a>
A/C lubricant (R134a) .....	<a href="#">MTC-20</a>
A/C lubrication oil .....	<a href="#">MTC-20</a>
A/C operational check .....	<a href="#">MTC-47</a>
A/C self-diagnoses (auto A/C) .....	<a href="#">MTC-45</a> , <a href="#">MTC-89</a>
A/C service data specification .....	<a href="#">MTC-127</a>
A/C trouble diagnoses (auto A/C) .....	<a href="#">MTC-28</a>
A/C, A - Wiring diagram .....	<a href="#">MTC-37</a>
A/T fluid checking .....	<a href="#">AT-12</a> , <a href="#">AT-52</a> , <a href="#">MA-21</a>
A/T fluid replacement .....	<a href="#">AT-12</a> , <a href="#">MA-23</a>
A/T fluid temperature sensor .....	<a href="#">AT-127</a>
A/T IND - Wiring diagram .....	<a href="#">DI-40</a>
A/T indicator .....	<a href="#">DI-40</a>
A/T self-diagnoses .....	<a href="#">AT-87</a>
A/T shift lock system .....	<a href="#">AT-239</a>
A/T trouble diagnoses .....	<a href="#">AT-43</a>
A/T Wiring diagram AT - CAN .....	<a href="#">AT-98</a>
A/T Wiring diagram AT - FTS .....	<a href="#">AT-128</a>
A/T Wiring diagram AT - MAIN .....	<a href="#">AT-174</a>
A/T Wiring diagram AT - MMSW .....	<a href="#">AT-162</a>
A/T Wiring diagram AT - NONDTC .....	<a href="#">AT-183</a>
A/T Wiring diagram AT - PNP/SW .....	<a href="#">AT-106</a>
A/T Wiring diagram AT - STSIG .....	<a href="#">AT-101</a>
A/T Wiring diagram AT - VSS A/T .....	<a href="#">AT-111</a>
ABS - Wiring diagram .....	<a href="#">BRC-16</a> , <a href="#">BRC-56</a> , <a href="#">BRC-103</a>
ABS (anti-lock brake system) .....	<a href="#">BRC-8</a> , <a href="#">BRC-47</a> , <a href="#">BRC-94</a>
Accelerator control system .....	<a href="#">ACC-2</a>
Accelerator pedal position (APP) sensor .	<a href="#">EC-568</a> , <a href="#">EC-574</a> , <a href="#">EC-588</a>
Accelerator pedal released position learning .....	<a href="#">EC-89</a>
AF1B1-Wiring diagram .....	<a href="#">EC-457</a> , <a href="#">EC-466</a> , <a href="#">EC-475</a> , <a href="#">EC-485</a> , <a href="#">EC-496</a> , <a href="#">EC-506</a> , <a href="#">EC-518</a>
AF1B2-Wiring diagram .....	<a href="#">EC-459</a> , <a href="#">EC-468</a> , <a href="#">EC-477</a> , <a href="#">EC-487</a> , <a href="#">EC-498</a> , <a href="#">EC-508</a> , <a href="#">EC-520</a>
AF1HB1-Wiring diagram .....	<a href="#">EC-383</a>
AF1HB2-Wiring diagram .....	<a href="#">EC-385</a>
Aiming adjustment .....	<a href="#">LT-29</a> , <a href="#">LT-73</a>
Air bag .....	<a href="#">SRS-3</a>
Air bag disposal .....	<a href="#">SRS-60</a>
Air bag precautions .....	<a href="#">AP-2</a>
Air cleaner and air duct .....	<a href="#">EM-14</a>
Air cleaner filter replacement .....	<a href="#">MA-16</a>
Air conditioner cut control .....	<a href="#">EC-28</a>
Air flow meter - See Mass air flow sensor .....	<a href="#">EC-171</a> , <a href="#">EC-180</a>
Air fuel ratio sensor 1 ..	<a href="#">EC-455</a> , <a href="#">EC-464</a> , <a href="#">EC-473</a> , <a href="#">EC-483</a> , <a href="#">EC-493</a> , <a href="#">EC-503</a> , <a href="#">EC-515</a>
Air fuel ratio sensor 1 heater .....	<a href="#">EC-382</a>
Air mix. door motor .....	<a href="#">MTC-56</a>
Angular tightening application .....	<a href="#">EM-3</a>
APPS1 - Wiring diagram .....	<a href="#">EC-570</a>
APPS2 - Wiring diagram .....	<a href="#">EC-576</a>
APPS3 - Wiring diagram .....	<a href="#">EC-590</a>
ASC/BS - Wiring diagram .....	<a href="#">EC-550</a>
ASC/SW - Wiring diagram .....	<a href="#">EC-543</a>
ASCBOF - Wiring diagram .....	<a href="#">EC-627</a>
ASCD .....	<a href="#">EC-29</a>
ASCD (automatic speed control device) .....	<a href="#">ACS-2</a>
ASCD brake switch .....	<a href="#">EC-548</a> , <a href="#">EC-626</a>
ASCD indicator lamp .....	<a href="#">EC-633</a>
ASCD steering switch .....	<a href="#">EC-541</a>
ASCIND - Wiring diagram .....	<a href="#">EC-634</a>
ATP switch .....	<a href="#">TF-64</a>
AUDIO - Wiring diagram .....	<a href="#">AV-14</a>
AUT/DP - Wiring diagram .....	<a href="#">SE-19</a>
Auto air conditioner - Wiring diagram .....	<a href="#">MTC-37</a>
Auto anti-dazzling inside mirror .....	<a href="#">GW-93</a>
Autolamp .....	<a href="#">LT-46</a>
Automatic amplifier .....	<a href="#">MTC-49</a>
Automatic drive positioner .....	<a href="#">SE-11</a>
Automatic transmission number .....	<a href="#">GI-49</a>
AV and NAVI control unit .....	<a href="#">AV-80</a>
AV communication line .....	<a href="#">AV-104</a>
<b>B</b>	
Back door trim .....	<a href="#">EI-32</a>
Back sonar .....	<a href="#">DI-59</a>
BACK/L - Wiring diagram .....	<a href="#">LT-102</a>
Back-up lamp .....	<a href="#">LT-102</a>
Ball joint (front) .....	<a href="#">FSU-14</a>
Basic inspection .....	<a href="#">EC-71</a>
Battery .....	<a href="#">SC-4</a>
Battery/Starting/Charging System Tester .....	<a href="#">SC-6</a> , <a href="#">SC-12</a> , <a href="#">SC-19</a>
BCM (Body control module) .....	<a href="#">BCS-3</a>
Block heater .....	<a href="#">EM-76</a>
Blower motor .....	<a href="#">MTC-67</a> , <a href="#">MTC-97</a>
Body alignment .....	<a href="#">BL-179</a>
Body component parts .....	<a href="#">BL-161</a>
Body construction .....	<a href="#">BL-177</a>
Body exterior paint color .....	<a href="#">BL-160</a>
Body mounting .....	<a href="#">BL-158</a> , <a href="#">BL-159</a>
Body repair .....	<a href="#">BL-160</a>

# ALPHABETICAL INDEX

Body sealing .....	<a href="#">BL-173</a>	Connecting rod .....	<a href="#">EM-94</a>
Brake booster .....	<a href="#">BR-18</a>	Connecting rod bearing clearance .....	<a href="#">EM-94</a>
Brake fluid level .....	<a href="#">MA-30</a>	Connecting rod bushing clearance .....	<a href="#">EM-94</a>
Brake hydraulic line .....	<a href="#">BR-12</a>	Console box - See Instrument panel .....	<a href="#">IP-10</a>
Brake inspection .....	<a href="#">MA-30</a>	CONSULT for VDC .....	<a href="#">BRC-23</a> , <a href="#">BRC-64</a> , <a href="#">BRC-115</a>
Brake lines and cables inspection .....	<a href="#">MA-30</a>	CONSULT-áU for engine .....	<a href="#">EC-124</a>
Brake master cylinder .....	<a href="#">BR-15</a>	Control units (terminal arrangement) .....	<a href="#">PG-72</a>
Brake switch .....	<a href="#">EC-548</a> , <a href="#">EC-563</a> , <a href="#">EC-626</a>	Control valve (A/T) .....	<a href="#">AT-37</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-564</a>	Controller Area Network (CAN) .	<a href="#">WT-9</a> , <a href="#">BRC-10</a> , <a href="#">BRC-50</a> , <a href="#">BRC-97</a> , <a href="#">SE-16</a> , <a href="#">LAN-24</a> , <a href="#">LAN-52</a> , <a href="#">LAN-80</a> , <a href="#">LAN-110</a> , <a href="#">LAN-143</a> , <a href="#">LAN-172</a> , <a href="#">LAN-206</a> , <a href="#">LAN-235</a> , <a href="#">LAN-267</a> , <a href="#">LAN-301</a> , <a href="#">LAN-333</a> , <a href="#">LAN-369</a> , <a href="#">LAN-408</a>
Bulb specifications .....	<a href="#">LT-167</a>	Converter housing installation .....	<a href="#">AT-267</a> , <a href="#">AT-270</a>
Bumper, front .....	<a href="#">EI-14</a>	COOL/F - Wiring diagram .....	<a href="#">EC-439</a>
Bumper, rear .....	<a href="#">EI-18</a>	Coolant mixture ratio .....	<a href="#">MA-12</a>

## C

Camshaft .....	<a href="#">EM-44</a>	Coolant replacement .....	<a href="#">MA-13</a>
Camshaft inspection .....	<a href="#">EM-47</a>	Cooling circuit (engine) .....	<a href="#">CO-8</a>
Camshaft position sensor (PHASE) .....	<a href="#">EC-288</a>	Cooling fan .....	<a href="#">CO-15</a>
CAN - Wiring diagram	<a href="#">EC-161</a> , <a href="#">LAN-26</a> , <a href="#">LAN-54</a> , <a href="#">LAN-82</a> , <a href="#">LAN-112</a> , <a href="#">LAN-145</a> , <a href="#">LAN-174</a> , <a href="#">LAN-208</a> , <a href="#">LAN-237</a> , <a href="#">LAN-269</a> , <a href="#">LAN-303</a> , <a href="#">LAN-335</a> , <a href="#">LAN-371</a> , <a href="#">LAN-410</a>	Cooling fan control .....	<a href="#">EC-436</a>
CAN (Controller Area Network) .	<a href="#">WT-9</a> , <a href="#">BRC-10</a> , <a href="#">BRC-50</a> , <a href="#">BRC-97</a> , <a href="#">SE-16</a> , <a href="#">LAN-24</a> , <a href="#">LAN-52</a> , <a href="#">LAN-80</a> , <a href="#">LAN-110</a> , <a href="#">LAN-143</a> , <a href="#">LAN-172</a> , <a href="#">LAN-206</a> , <a href="#">LAN-235</a> , <a href="#">LAN-267</a> , <a href="#">LAN-301</a> , <a href="#">LAN-333</a> , <a href="#">LAN-369</a> , <a href="#">LAN-408</a>	Cooling fan motor .....	<a href="#">EC-445</a>
CAN communication ...	<a href="#">EC-31</a> , <a href="#">EC-160</a> , <a href="#">AT-97</a> , <a href="#">TF-19</a> , <a href="#">TF-64</a> , <a href="#">RFD-45</a> , <a href="#">RFD-71</a> , <a href="#">WT-9</a> , <a href="#">BRC-10</a> , <a href="#">BRC-50</a> , <a href="#">BRC-97</a> , <a href="#">SE-16</a> , <a href="#">LAN-24</a> , <a href="#">LAN-52</a> , <a href="#">LAN-80</a> , <a href="#">LAN-110</a> , <a href="#">LAN-143</a> , <a href="#">LAN-172</a> , <a href="#">LAN-206</a> , <a href="#">LAN-235</a> , <a href="#">LAN-267</a> , <a href="#">LAN-301</a> , <a href="#">LAN-333</a> , <a href="#">LAN-369</a> , <a href="#">LAN-408</a>	Cooling unit (A/C evaporator) .....	<a href="#">MTC-100</a> , <a href="#">MTC-122</a>
Canister-See EVAP canister .....	<a href="#">EC-35</a>	Corrosion protection .....	<a href="#">BL-170</a>
CHARGE - Wiring diagram .....	<a href="#">SC-18</a>	Crankcase ventilation system - See Positive crankcase ventilation .....	<a href="#">EC-45</a>
Charging system .....	<a href="#">SC-17</a>	Crankshaft .....	<a href="#">EM-77</a>
Chassis and body maintenance .....	<a href="#">MA-20</a>	Crankshaft position sensor (POS) .....	<a href="#">EC-281</a>
Chassis and body maintenanceSchedule 1 .....	<a href="#">MA-8</a>	Crash zone sensor .....	<a href="#">SRS-55</a>
Chassis and body maintenanceSchedule 2 .....	<a href="#">MA-10</a>	Cylinder block .....	<a href="#">EM-76</a>
CHIME - Wiring diagram .....	<a href="#">DI-45</a>	Cylinder block boring .....	<a href="#">EM-97</a>
Circuit breaker .....	<a href="#">PG-68</a>		
Closed loop control .....	<a href="#">EC-25</a>		
Closed loop control (Bank 1) .....	<a href="#">EC-433</a>		
Closed loop control (Bank 2) .....	<a href="#">EC-433</a>		
Coil spring (front) .....	<a href="#">FSU-9</a>		
Collision diagnosis .....	<a href="#">SRS-67</a>		
Combination lamp, front, removal and installation .	<a href="#">LT-31</a>		
Combination lamp, rear, removal and installation ..	<a href="#">LT-118</a>		
Combination meter .....	<a href="#">DI-5</a>		
Combination switch .....	<a href="#">LT-92</a>		
COMBSW - Wiring diagram .....	<a href="#">LT-92</a>		
COMM - Wiring diagram .....	<a href="#">AV-104</a>		
COMPAS - Wiring diagram .....	<a href="#">DI-27</a>		
Compass .....	<a href="#">DI-26</a>		
Component Location (auto A/C) .....	<a href="#">MTC-34</a>		
Compressor clutch removal and installation	<a href="#">MTC-116</a>		
Compressor mounting .....	<a href="#">MTC-115</a>		
Compressor precaution .....	<a href="#">MTC-9</a>		
Compressor special service tool .....	<a href="#">MTC-12</a>		
Condenser .....	<a href="#">MTC-120</a>		

## D

Data link connector for Consult .....	<a href="#">EC-126</a> , <a href="#">EC-137</a>
Daytime light system .....	<a href="#">LT-32</a>
Daytime running light - See Daytime light system ..	<a href="#">LT-32</a>
DEF - Wiring diagram .....	<a href="#">GW-99</a>
Diagnosis sensor unit .....	<a href="#">SRS-58</a>
Diagnostic trouble code (DTC) for OBD system .	<a href="#">EC-8</a> , <a href="#">EC-52</a>
Diagnostic trouble code (DTC) inspection priority chart	<a href="#">EC-100</a>
Differential gear oil replacement .....	<a href="#">MA-27</a>
DIFLOC - Wiring diagram .....	<a href="#">RFD-48</a>
Dimensions .....	<a href="#">GI-50</a>
Direct clutch solenoid valve .....	<a href="#">AT-149</a> , <a href="#">AT-151</a>
Display and amp.assembly .....	<a href="#">MTC-49</a>
Display Control Unit .....	<a href="#">AV-175</a>
Dome light - See Interior lamp .....	<a href="#">LT-126</a>
Door glass .....	<a href="#">GW-85</a> , <a href="#">GW-88</a>
Door lock .....	<a href="#">BL-127</a>
Door mirror lamp .....	<a href="#">LT-126</a>
Door trim .....	<a href="#">EI-32</a>
Door, front .....	<a href="#">BL-123</a> , <a href="#">GW-85</a>
Door, rear .....	<a href="#">BL-123</a> , <a href="#">GW-88</a>
Drive belt .....	<a href="#">EM-12</a>
Drive chain (Transfer) .....	<a href="#">TF-88</a>
Driver air bag .....	<a href="#">SRS-44</a>
DTC work support .....	<a href="#">EC-133</a>

# ALPHABETICAL INDEX

DTRL - Wiring diagram ..... [LT-36](#)  
Duct and grilles ..... [MTC-109](#)  
DVD Player ..... [AV-77](#)

## E

ECM input/output signal ..... [EC-116](#), [EC-138](#)  
ECM power supply ..... [EC-154](#), [EC-389](#)  
ECM relay ..... [EC-154](#)  
ECM/PW - Wiring diagram ..... [EC-390](#)  
ECTS - Wiring diagram ..... [EC-194](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator ..... [EC-393](#), [EC-395](#)  
Electrical load signal circuit ..... [EC-625](#)  
Electronic ignition (EI) system ..... [EC-26](#)  
Engine control circuit diagram ..... [EC-114](#)  
Engine control component parts location ..... [EC-107](#)  
Engine control module (ECM) ..... [EC-379](#)  
Engine coolant ..... [CO-10](#)  
Engine coolant temperature sensor (ECTS) ... [EC-192](#),  
[EC-205](#)  
Engine fail-safe system ..... [EC-102](#)  
Engine oil ..... [LU-7](#)  
Engine oil filter replacement ..... [MA-17](#)  
Engine oil precautions ..... [GI-6](#)  
Engine oil replacement ..... [MA-17](#)  
Engine removal ..... [EM-72](#)  
Engine room cover ..... [EM-11](#)  
Engine serial number ..... [GI-49](#)  
ETC1 - Wiring diagram ..... [EC-396](#)  
ETC2 - Wiring diagram ..... [EC-403](#)  
ETC3 - Wiring diagram ..... [EC-407](#)  
EVAP canister ..... [EC-35](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-314](#), [EC-527](#)  
EVAP canister vent control valve ..... [EC-321](#), [EC-535](#)  
EVAP control system (small leak) diagnosis .. [EC-306](#),  
[EC-345](#), [EC-353](#)  
EVAP control system pressure sensor .... [EC-328](#), [EC-331](#),  
[EC-337](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-301](#)  
EVAP vapor lines inspection ..... [MA-19](#)  
Evaporative emission (EVAP) system ..... [EC-32](#)  
Evaporator ..... [MTC-122](#)  
Exhaust manifold ..... [EM-19](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#)  
Expansion valve ..... [MTC-123](#)

## F

F/FOG - Wiring diagram ..... [LT-66](#)  
F/PUMP - Wiring diagram ..... [EC-615](#)  
Final drive removal and installation . [FFD-12](#), [RFD-14](#),  
[RFD-82](#)  
Flow charts ..... [GI-27](#)  
Fluid temperature sensor (A/T) ..... [AT-127](#)  
Fluids ..... [MA-11](#)

Fluorescent leak detector ..... [MTC-123](#)  
Fog lamp, front ..... [LT-64](#)  
Foot lamp ..... [LT-127](#)  
Freeze frame data ..... [EC-53](#), [EC-127](#)  
Front brake solenoid valve ..... [AT-145](#), [AT-147](#)  
Front bumper ..... [EI-14](#)  
Front case (Transfer) ..... [TF-88](#)  
Front combination lamp removal and installation [LT-31](#)  
Front door ..... [BL-123](#), [BL-127](#), [GW-85](#)  
Front Door Trim ..... [EI-32](#)  
Front drive shaft (Transfer) ..... [TF-88](#), [TF-108](#)  
Front fog lamp ..... [LT-64](#)  
Front passenger air bag ..... [SRS-49](#)  
Front seat ..... [SE-91](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner ..... [SRS-3](#), [SRS-57](#)  
Front side air bag ..... [SRS-52](#)  
Front washer ..... [WW-4](#)  
Front wiper ..... [WW-4](#)  
FTTS - Wiring diagram ..... [EC-252](#), [EC-257](#)  
Fuel cut control (at no load high engine speed) [EC-27](#)  
Fuel filter replacement ..... [FL-5](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system (Bank 1) ..... [EC-233](#), [EC-242](#)  
Fuel injection system (Bank 2) ..... [EC-233](#), [EC-242](#)  
Fuel injector and fuel tube ..... [EM-29](#)  
Fuel level sensor ..... [EC-362](#), [EC-364](#), [EC-366](#)  
Fuel line inspection ..... [FL-3](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-92](#)  
Fuel pressure release ..... [EC-92](#)  
Fuel pump ..... [EC-614](#)  
Fuel pump and gauge ..... [FL-5](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-10](#)  
Fuel tank temperature sensor ..... [EC-250](#), [EC-256](#)  
Fuel tank vacuum relief valve ..... [EC-35](#)  
FUELB1 - Wiring diagram ..... [EC-235](#), [EC-244](#)  
FUELB2 - Wiring diagram ..... [EC-236](#), [EC-245](#)  
Fuse ..... [PG-68](#), [PG-78](#)  
Fuse block ..... [PG-77](#)  
Fusible link ..... [PG-68](#), [PG-78](#)

## G

Garage jack and safety stand ..... [GI-40](#)  
Gauges ..... [DI-5](#)  
Generator ..... [SC-17](#)  
Generic scan tool (GST) ..... [EC-136](#)  
Glass ..... [GW-11](#), [GW-13](#), [GW-85](#), [GW-88](#)  
Glove box lamp ..... [LT-152](#)  
GPS antenna ..... [AV-79](#)  
Grease ..... [MA-11](#)  
Ground distribution ..... [PG-29](#)

## H

Handling precautions for plastics ..... [BL-198](#)  
Harness connector ..... [PG-69](#)

# ALPHABETICAL INDEX

<p>Harness layout ..... <a href="#">PG-38</a></p> <p>Hazard warning lamp ..... <a href="#">LT-75</a></p> <p>Headlamp removal and installation ..... <a href="#">LT-31</a></p> <p>Heated oxygen sensor 2 (bank 1) .... <a href="#">EC-213</a>, <a href="#">EC-222</a>, <a href="#">EC-411</a>, <a href="#">EC-422</a></p> <p>Heated oxygen sensor 2 (bank 2) .... <a href="#">EC-213</a>, <a href="#">EC-222</a>, <a href="#">EC-411</a>, <a href="#">EC-422</a></p> <p>Heated oxygen sensor 2 heater (bank 1) ..... <a href="#">EC-163</a></p> <p>Heated oxygen sensor 2 heater (bank 2) ..... <a href="#">EC-163</a></p> <p>Heated seat ..... <a href="#">SE-88</a></p> <p>Heater and cooling unit (Heater core) <a href="#">MTC-100</a>, <a href="#">MTC-102</a></p> <p>Heater unit (heater core) ..... <a href="#">MTC-100</a>, <a href="#">MTC-102</a></p> <p>Height (Dimensions) ..... <a href="#">GI-50</a></p> <p>HFC134a (R134a) system identification ..... <a href="#">MTC-6</a></p> <p>HFC134a (R134a) system precaution ..... <a href="#">MTC-4</a></p> <p>HFC134a (R134a) system service procedure <a href="#">MTC-112</a></p> <p>HFC134a (R134a) system service tools ..... <a href="#">MTC-12</a></p> <p>HFC134a system service equipment precaution <a href="#">MTC-9</a></p> <p>High &amp; low reverse clutch solenoid valve . <a href="#">AT-153</a>, <a href="#">AT-155</a></p> <p>Horn ..... <a href="#">WW-37</a></p> <p>HORN - Wiring diagram ..... <a href="#">WW-37</a></p> <p>How to erase DTC for OBD system ..... <a href="#">EC-61</a></p> <p>HSEAT - Wiring diagram ..... <a href="#">SE-89</a></p>	<p>room) ..... <a href="#">PG-16</a></p>
<b>J</b>	
<p>Jacking points ..... <a href="#">GI-40</a></p> <p>Junction box (J/B) ..... <a href="#">PG-77</a></p>	
<b>K</b>	
<p>Key illumination ..... <a href="#">LT-127</a></p> <p>Keyless entry system - See Multi-remote control system <a href="#">BL-53</a></p> <p>Knock sensor (KS) ..... <a href="#">EC-276</a></p> <p>KS - Wiring diagram ..... <a href="#">EC-277</a></p>	
<b>L</b>	
<p>Leaf spring (rear) ..... <a href="#">RSU-8</a></p> <p>Length (Dimensions) ..... <a href="#">GI-50</a></p> <p>License lamp ..... <a href="#">LT-104</a></p> <p>Lifting points ..... <a href="#">GI-41</a></p> <p>Line pressure solenoid valve ..... <a href="#">AT-120</a></p> <p>Line pressure test (A/T) ..... <a href="#">AT-53</a></p> <p>Location of electrical units ..... <a href="#">PG-65</a></p> <p>Low coast brake solenoid valve ..... <a href="#">AT-157</a>, <a href="#">AT-159</a></p> <p>Low tire pressure warning system ..... <a href="#">WT-7</a></p> <p>Low tire pressure warning system - trouble diagnoses <a href="#">WT-10</a></p> <p>Low tire pressure warning system - Wiring diagram ..... <a href="#">WT-10</a></p> <p>Lubricant (R134a) A/C ..... <a href="#">MTC-20</a></p> <p>Lubricants ..... <a href="#">MA-11</a></p> <p>Lubrication circuit (engine) ..... <a href="#">LU-5</a></p> <p>Lubrication oil A/C ..... <a href="#">MTC-20</a></p> <p>Lubrication-locks, hinges and hood latches ..... <a href="#">MA-33</a></p>	
<b>M</b>	
<p>I/MIRR - Wiring diagram ..... <a href="#">GW-93</a></p> <p>IATS - Wiring diagram ..... <a href="#">EC-189</a></p> <p>Identification plate ..... <a href="#">GI-48</a></p> <p>Idle air volume learning ..... <a href="#">EC-90</a></p> <p>Idle mixture ratio ..... <a href="#">EC-78</a></p> <p>Idle speed ..... <a href="#">EC-71</a>, <a href="#">EC-76</a></p> <p>Idle speed control (ISC) ..... <a href="#">EC-370</a>, <a href="#">EC-372</a></p> <p>Ignition coil ..... <a href="#">EM-26</a>, <a href="#">EC-596</a></p> <p>Ignition control system ..... <a href="#">EC-596</a></p> <p>Ignition key hole illumination ..... <a href="#">LT-126</a></p> <p>Ignition timing ..... <a href="#">EC-71</a>, <a href="#">EC-76</a></p> <p>IGNSYS - Wiring diagram ..... <a href="#">EC-597</a></p> <p>ILL - Wiring diagram ..... <a href="#">LT-157</a></p> <p>Illumination ..... <a href="#">LT-151</a></p> <p>INJECT - Wiring diagram ..... <a href="#">EC-609</a></p> <p>Injector ..... <a href="#">EC-608</a></p> <p>Input clutch solenoid valve ..... <a href="#">AT-141</a>, <a href="#">AT-143</a></p> <p>Instrument panel ..... <a href="#">IP-10</a></p> <p>Instrument panel speaker ..... <a href="#">AV-66</a></p> <p>INT/L - Wiring diagram ..... <a href="#">GW-122</a></p> <p>Intake air temperature sensor ..... <a href="#">EC-188</a>, <a href="#">EC-208</a></p> <p>Intake door control linkage adjustment <a href="#">MTC-61</a>, <a href="#">MTC-64</a></p> <p>Intake door motor ..... <a href="#">MTC-60</a>, <a href="#">MTC-105</a></p> <p>Intake manifold ..... <a href="#">EM-15</a></p> <p>Intake sensor ..... <a href="#">MTC-92</a>, <a href="#">MTC-96</a></p> <p>Interior ..... <a href="#">EI-36</a></p> <p>Interior lamp ..... <a href="#">LT-126</a></p> <p>Interior lamp on-off control ..... <a href="#">LT-127</a></p> <p>Internal gear (Transfer) ..... <a href="#">TF-88</a></p> <p>IPDM (Intelligent power distribution module engine</p>	<p>MAFS - Wiring diagram ..... <a href="#">EC-174</a>, <a href="#">EC-182</a></p> <p>Magnet clutch ..... <a href="#">MTC-74</a>, <a href="#">MTC-116</a></p> <p>MAIN - Wiring diagram ..... <a href="#">EC-154</a></p> <p>Mainshaft (Transfer) ..... <a href="#">TF-88</a></p> <p>Maintenance (engine)Schedule 1 ..... <a href="#">MA-7</a></p> <p>Maintenance (engine)Schedule 2 ..... <a href="#">MA-9</a></p> <p>Major overhaul (Final drive) ..... <a href="#">RFD-15</a>, <a href="#">RFD-83</a></p> <p>Major overhaul (Transfer) ..... <a href="#">TF-88</a></p> <p>Malfunction indicator lamp (MIL) ..... <a href="#">EC-63</a></p> <p>Map lamp ..... <a href="#">LT-127</a></p> <p>Mass air flow sensor (MAFS) ..... <a href="#">EC-171</a>, <a href="#">EC-180</a></p> <p>Meter ..... <a href="#">DI-5</a></p> <p>METER - Wiring diagram ..... <a href="#">DI-10</a></p> <p>MIL data link connectors circuit ..... <a href="#">EC-636</a></p> <p>MIL/DL - Wiring diagram ..... <a href="#">EC-636</a></p> <p>MIRROR - Wiring diagram ..... <a href="#">GW-121</a></p> <p>Misfire ..... <a href="#">EC-268</a></p> <p>Mode door control linkage adjustment ..... <a href="#">MTC-53</a></p> <p>Mode door motor ..... <a href="#">MTC-52</a>, <a href="#">MTC-106</a></p> <p>Model variation ..... <a href="#">GI-46</a></p> <p>Multiport fuel injection (MFI) system ..... <a href="#">EC-24</a></p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

Multipoint fuel injection precautions ..... [GI-5](#)  
Multi-remote control system ..... [BL-53](#)

## N

NATS - Wiring diagram ..... [BL-139](#)  
NAVI - Wiring diagram ..... [AV-96](#)  
NAVI Control Unit ..... [AV-174](#)  
NVH troubleshooting (AX) ..... [FAX-4](#)  
NVH troubleshooting (EM) ..... [EM-9](#)  
NVH troubleshooting (Final drive) ..... [RFD-8](#), [RFD-41](#)  
NVH troubleshooting (Propeller shaft) ..... [PR-3](#)  
NVH troubleshooting (ST) ..... [PS-5](#)  
NVH troubleshooting (Transfer) ..... [TF-11](#)  
NVH troubleshooting (WT)NVH troubleshooting (WT) .  
[WT-3](#)

## O

O2H2B1 - Wiring diagram ..... [EC-165](#)  
O2H2B2 - Wiring diagram ..... [EC-167](#)  
O2S2B1 - Wiring diagram .. [EC-215](#), [EC-225](#), [EC-414](#),  
[EC-425](#)  
O2S2B2 - Wiring diagram .. [EC-217](#), [EC-227](#), [EC-416](#),  
[EC-427](#)  
Oil cooler (engine) ..... [LU-11](#)  
Oil filter ..... [LU-10](#)  
Oil pan (engine) ..... [EM-22](#)  
Oil pressure (engine) ..... [LU-7](#)  
Oil pressure relief valve (engine) ..... [LU-5](#)  
Oil pump (engine) ..... [LU-13](#)  
Oil seal replacement (engine) ..... [EM-57](#)  
Oil seal replacement (front of final drive) ..... [FFD-8](#)  
Oil seal replacement (side of final drive) ..... [FFD-10](#)  
On board diagnostic system ..... [EC-48](#)  
ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)  
Overheat ..... [EC-436](#)

## P

P/SCKT - Wiring diagram ..... [WW-35](#)  
Pantograph jack ..... [GI-40](#)  
Park/Neutral position switch ..... [EC-558](#)  
Park/neutral position switch (A/T) ..... [AT-105](#)  
Parking brake control ..... [PB-4](#)  
PCV (positive crankcase ventilation) ..... [EC-45](#)  
Personal lamp ..... [LT-127](#)  
PGC/V - Wiring diagram ..... [EC-316](#), [EC-529](#)  
PHASE - Wiring diagram ..... [EC-288](#), [EC-290](#)  
Piston pin inspection ..... [EM-92](#)  
Piston ring inspection ..... [EM-93](#)  
Piston to bore clearance ..... [EM-97](#)  
Planetary carrier (Transfer) ..... [TF-88](#), [TF-104](#)  
PNP/SW - Wiring diagram ..... [EC-560](#)  
POS - Wiring diagram ..... [EC-283](#)  
POWER - Wiring diagram ..... [PG-6](#)  
Power seat ..... [SE-84](#)  
Power steering fluid level ..... [MA-31](#)  
Power steering gear ..... [PS-16](#)

Power steering oil pump ..... [PS-27](#)  
Power steering pressure (PSP) sensor ..... [EC-374](#)  
Power steering system bleeding ..... [PS-6](#)  
Power supply routing ..... [PG-4](#)  
Power window ..... [GW-19](#)  
PRE/SE - Wiring diagram ..... [EC-333](#), [EC-339](#)  
Precautions (General) ..... [GI-3](#)  
Precautions in repairing high strength steel ..... [BL-201](#)  
Pressure switch 1 ..... [AT-147](#), [AT-166](#)  
Pressure switch 2 ..... [AT-159](#)  
Pressure switch 3 ..... [AT-143](#), [AT-168](#)  
Pressure switch 5 ..... [AT-151](#), [AT-170](#)  
Pressure switch 6 ..... [AT-155](#), [AT-172](#)  
Pressure test (A/T) ..... [AT-53](#)  
Propeller shaft ..... [PR-4](#), [PR-8](#)  
Propeller shaft inspection ..... [MA-26](#)  
Propeller shaft on vehicle service ..... [PR-8](#)  
Propeller shaft vibration ..... [PR-4](#), [PR-8](#)  
PS/SEN - Wiring diagram ..... [EC-375](#)

## R

Radiator ..... [CO-12](#)  
Rear Audio Remote Control Unit ..... [AV-67](#)  
Rear bumper ..... [EI-18](#)  
Rear case (Transfer) ..... [TF-88](#)  
Rear combination lamp removal and installation ... [LT-118](#)  
Rear door ..... [BL-123](#), [GW-88](#)  
Rear seat ..... [SE-100](#)  
Rear seat belt ..... [SB-8](#)  
Rear window ..... [GW-13](#)  
Rear window defogger ..... [GW-95](#)  
Refrigerant connection precaution ..... [MTC-6](#)  
Refrigerant discharging evacuating charging [MTC-112](#)  
Refrigerant general precaution ..... [MTC-5](#)  
Refrigerant lines ..... [MTC-112](#), [MTC-119](#), [MTC-120](#)  
Refrigerant pressure sensor .. [EC-620](#), [MTC-79](#), [MTC-120](#)  
Remote keyless entry system ..... [BL-53](#)  
Removal and installation (A/T) ..... [AT-265](#), [AT-268](#)  
Removal and installation (Transfer) ..... [TF-87](#)  
Revolution sensor (A/T) ..... [AT-109](#)  
Road wheel size ..... [GI-50](#)  
Rocker cover ..... [EM-33](#)  
Room lamp ..... [LT-126](#)  
Room lamp - See Interior lamp ..... [LT-126](#)  
ROOM/L - Wiring diagram ..... [LT-134](#)  
RP/SEN - Wiring diagram ..... [EC-621](#)

## S

SAE J1979 - Service \$01 - 09 ..... [EC-48](#)  
SEAT - Wiring diagram ..... [SE-84](#), [SE-85](#)  
Seat belt inspection ..... [SB-10](#), [MA-34](#)  
Seat belt pre-tensioner ..... [SRS-57](#)  
Seat belt pre-tensioner disposal ..... [SRS-60](#)  
Seat belt, front ..... [SB-3](#)  
Seat belt, rear ..... [SB-8](#)

# ALPHABETICAL INDEX

Seat, front .....	<a href="#">SE-91</a>	TCS component parts and connector location <a href="#">BRC-14</a> ,	
Seat, rear .....	<a href="#">SE-100</a>	<a href="#">BRC-54</a> , <a href="#">BRC-101</a>	
Self-diagnosis (Transfer) .....	<a href="#">TF-33</a>	TCS wheel sensors .....	<a href="#">BRC-14</a> , <a href="#">BRC-54</a> , <a href="#">BRC-101</a>
SEN/PW - Wiring diagram .....	<a href="#">EC-451</a>	Thermometer .....	<a href="#">DI-26</a>
Shift control (Transfer) .....	<a href="#">TF-88</a> , <a href="#">TF-110</a>	Three way catalyst .....	<a href="#">EM-19</a>
Shift lock system .....	<a href="#">AT-239</a>	Three way catalyst function (Bank 1) .....	<a href="#">EC-295</a>
Shock absorber (front) .....	<a href="#">FSU-9</a>	Three way catalyst function (Bank 2) .....	<a href="#">EC-295</a>
Shock absorber (rear) .....	<a href="#">RSU-7</a>	Three way catalyst precautions .....	<a href="#">GI-5</a>
Side air bag .....	<a href="#">SRS-52</a>	Throttle control motor .....	<a href="#">EC-406</a>
Side air bag (satellite) sensor .....	<a href="#">SRS-56</a>	Throttle control motor relay .....	<a href="#">EC-401</a>
Side curtain air bag .....	<a href="#">SRS-53</a>	Throttle position sensor (TPS) ...	<a href="#">EC-198</a> , <a href="#">EC-261</a> , <a href="#">EC-446</a> , <a href="#">EC-448</a> , <a href="#">EC-581</a>
Side trim .....	<a href="#">EI-36</a>	Throttle valve closed position learning .....	<a href="#">EC-89</a>
SMJ (super multiple junction) .....	<a href="#">PG-75</a>	Tie-rod .....	<a href="#">PS-16</a>
SONAR - Wiring diagram .....	<a href="#">DI-62</a>	Timing chain .....	<a href="#">EM-35</a>
Spare tire size .....	<a href="#">GI-50</a>	Tire rotation .....	<a href="#">MA-30</a>
Spark plug .....	<a href="#">EM-27</a>	Tire size .....	<a href="#">GI-50</a>
Spark plug replacement .....	<a href="#">MA-18</a>	Torque converter installation <a href="#">AT-266</a> , <a href="#">AT-267</a> , <a href="#">AT-269</a> ,	
Specification value .....	<a href="#">EC-143</a>	<a href="#">AT-270</a>	
Speedometer .....	<a href="#">DI-5</a>	Torque convertor clutch solenoid valve ...	<a href="#">AT-116</a> , <a href="#">AT-118</a>
Spiral cable .....	<a href="#">SRS-46</a>	Tow truck towing .....	<a href="#">GI-42</a>
SROOF - Wiring diagram .....	<a href="#">RF-13</a>	Towing point .....	<a href="#">GI-43</a>
SRS - See Supplemental Restraint System .....	<a href="#">SRS-6</a>	TPS1 - Wiring diagram .....	<a href="#">EC-263</a>
SRS - Wiring diagram .....	<a href="#">SRS-13</a>	TPS2 - Wiring diagram .....	<a href="#">EC-200</a>
SRS Trouble diagnoses .....	<a href="#">SRS-9</a>	TPS3 - Wiring diagram .....	<a href="#">EC-583</a>
Stabilizer bar (front) .....	<a href="#">FSU-11</a>	Traction control system - Wiring diagram .....	<a href="#">BRC-15</a> , <a href="#">BRC-56</a> , <a href="#">BRC-103</a>
Stall test (A/T) .....	<a href="#">AT-52</a>	Transfer case .....	<a href="#">TF-88</a>
Standardized relay .....	<a href="#">PG-73</a>	Transfer control device .....	<a href="#">TF-60</a>
START - Wiring diagram .....	<a href="#">SC-11</a>	Transfer control unit inspection table .....	<a href="#">TF-27</a>
Starter .....	<a href="#">SC-10</a>	Transfer oil replacement .....	<a href="#">MA-24</a>
Starting system .....	<a href="#">SC-10</a>	Transfer serial number .....	<a href="#">GI-49</a>
Steering gear, linkage and transfer gear inspection .....	<a href="#">MA-31</a>	Transmission serial number .....	<a href="#">GI-49</a>
Steering linkage .....	<a href="#">PS-16</a>	TRANSMT - Wiring diagram .....	<a href="#">BL-155</a>
Steering wheel and column .....	<a href="#">PS-7</a>	Tread-FR&RR (Dimensions) .....	<a href="#">GI-50</a>
Step lamp .....	<a href="#">LT-127</a>	Trim .....	<a href="#">EI-36</a>
Stop lamp .....	<a href="#">LT-98</a>	Trouble diagnoses .....	<a href="#">GI-9</a>
Stop lamp switch .....	<a href="#">EC-548</a> , <a href="#">EC-563</a> , <a href="#">EC-626</a>	Turbine revolution sensor .....	<a href="#">AT-132</a>
STOP/L - Wiring diagram .....	<a href="#">LT-99</a>	TURN - Wiring diagram .....	<a href="#">LT-78</a>
Strut (front) .....	<a href="#">FSU-9</a>	Turn signal lamp .....	<a href="#">LT-75</a>
Sun gear (Transfer) .....	<a href="#">TF-88</a>	Two trip detection logic .....	<a href="#">EC-48</a>
Sun roof, electric .....	<a href="#">RF-10</a>	Two-pole lift .....	<a href="#">GI-41</a>
Sunroof .....	<a href="#">RF-23</a>		
Supplemental Restraint System .....	<a href="#">SRS-6</a>		
Supplemental restraint system - Wiring diagram .....	<a href="#">SRS-13</a>		
Symbols and abbreviations .....	<a href="#">GI-9</a> , <a href="#">GI-22</a>		
Symptom matrix chart .....	<a href="#">EC-103</a>		
System readiness test (SRT) code .....	<a href="#">EC-54</a>		

## T

Tachometer .....	<a href="#">DI-5</a>
Tail lamp .....	<a href="#">LT-104</a>
TAIL/L - Wiring diagram .....	<a href="#">LT-106</a>
TCM circuit diagram .....	<a href="#">AT-51</a>
TCM inspection table .....	<a href="#">AT-84</a>
TCS - Wiring diagram .....	<a href="#">BRC-15</a> , <a href="#">BRC-16</a> , <a href="#">BRC-56</a> , <a href="#">BRC-103</a>
TCS (traction control system) <a href="#">BRC-8</a> , <a href="#">BRC-47</a> , <a href="#">BRC-94</a>	

## V

Vacuum hose (brake system) .....	<a href="#">BR-22</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-113</a>
Valve clearance .....	<a href="#">EM-52</a>
Valve guide .....	<a href="#">EM-67</a>
Vanity mirror lamp .....	<a href="#">LT-126</a>
VDC (vehicle dynamics control) <a href="#">BRC-8</a> , <a href="#">BRC-47</a> , <a href="#">BRC-94</a>	
VDC -Wiring diagram .....	<a href="#">BRC-16</a> , <a href="#">BRC-56</a> , <a href="#">BRC-103</a>
Vehicle identification number .....	<a href="#">GI-48</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-43</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-368</a>
VENT/V - Wiring diagram .....	<a href="#">EC-323</a> , <a href="#">EC-537</a>
Video Monitor .....	<a href="#">AV-77</a>

# ALPHABETICAL INDEX

---

VIN registration ..... [EC-89](#)  
Viscosity number (SAE) ..... [MA-12](#)

## W

---

Wait detection switch ..... [TF-49](#)  
WARN - Wiring diagram ..... [DI-31](#)  
Warning chime ..... [DI-42](#)  
Warning lamps ..... [DI-30](#)  
Washer, front ..... [WW-4](#)  
Water pump ..... [CO-17](#)  
Water temperature gauge ..... [DI-5](#)  
Wheel alignment (front) ..... [FSU-6](#)  
Wheel bearing (front) ..... [FAX-5](#)  
Wheel size ..... [GI-50](#)  
Wheelbase (Dimensions) ..... [GI-50](#)  
Width (Dimensions) ..... [GI-50](#)  
WINDOW - Wiring diagram ..... [GW-26](#), [GW-35](#)  
Window, door ..... [GW-85](#), [GW-88](#)  
Window, rear ..... [GW-13](#)  
Windshield ..... [GW-11](#)  
WIPER - Wiring diagram ..... [WW-11](#)  
Wiper, front ..... [WW-4](#)  
Wiring Diagram (Cell code) list ..... [PG-63](#)  
Wiring diagram (Transfer) ..... [TF-23](#)  
Wiring diagrams ..... [GI-14](#)  
WT-T/WARN - Wiring diagram ..... [WT-10](#)