

SECTION HAC

HEATER & AIR CONDITIONING CONTROL SYSTEM

CONTENTS

AUTOMATIC AIR CONDITIONER	
BASIC INSPECTION	5
DIAGNOSIS AND REPAIR WORKFLOW	5
How to Perform Trouble Diagnosis For Quick And Accurate Repair	5
INSPECTION AND ADJUSTMENT	6
Operational Check	6
FUNCTION DIAGNOSIS	8
FUNCTION INFORMATION	8
Component Part Location	8
Symptom Table	10
REFRIGERATION SYSTEM	11
Refrigerant Cycle	11
Refrigerant System Protection	11
AUTOMATIC AIR CONDITIONER SYSTEM	13
Control System Diagram	13
Control System Description	13
Discharge Air Flow	15
Switches And Their Control Function	16
DIAGNOSIS SYSTEM (HVAC)	17
CONSULT-III Function (HVAC)	17
DIAGNOSIS SYSTEM (BCM)	19
CONSULT-III Function (BCM - COMMON ITEM)...	19
CONSULT-III Function (BCM - AUTO AIR CONDITIONER)	19
SELF-DIAGNOSIS FUNCTION	21
Front Air Control Self-Diagnosis	21
Front Air Control Self-Diagnosis Code Chart	21
COMPONENT DIAGNOSIS	22
MODE DOOR MOTOR	22
System Description	22
Mode Door Motor Component Function Check	23
Mode Door Motor Diagnosis Procedure	24
AIR MIX DOOR MOTOR	28
System Description	28
Air Mix Door Motor Component Function Check	29
Air Mix Door Motor (Driver) Diagnosis Procedure...	30
Air Mix Door Motor (Passenger) Diagnosis Procedure	33
INTAKE DOOR MOTOR	37
System Description	37
Intake Door Motor Component Function Check	38
Intake Door Motor Diagnosis Procedure	39
DEFROSTER DOOR MOTOR CIRCUIT	41
System Description	41
Defroster Door Motor Component Function Check	41
Defroster Door Motor Diagnosis Procedure	42
BLOWER MOTOR CONTROL SYSTEM	46
System Description	46
Front Blower Motor Component Function Check	47
Front Blower Motor Diagnosis Procedure	48
Front Blower Motor Component Inspection	51
MAGNET CLUTCH	53
System Description	53
Magnet Clutch Component Function Check	53
Magnet Clutch Diagnosis Procedure	54
WATER VALVE CIRCUIT	58
Description	58
Water Valve Diagnosis Procedure	58
AMBIENT SENSOR	60
Component Description	60
Ambient Sensor Diagnosis Procedure	60
Ambient Sensor Component Inspection	61
IN-VEHICLE SENSOR	63

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

Component Description	63	How to Perform Trouble Diagnosis For Quick And Accurate Repair	99
In-Vehicle Sensor Diagnosis Procedure	63		
In-Vehicle Sensor Component Inspection	65		
OPTICAL SENSOR	66	INSPECTION AND ADJUSTMENT	100
Component Description	66	Operational Check	100
Optical Sensor Diagnosis Procedure	66		
INTAKE SENSOR	68	FUNCTION DIAGNOSIS	102
System Description	68		
Intake Sensor Diagnosis Procedure	68	MANUAL A/C IDENTIFICATION TABLE	102
Intake Sensor Component Inspection	69	Application Table	102
POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER	70	FUNCTION INFORMATION	103
Component Description	70	Component Part Location	103
Front Air Control Component Function Check	70	Symptom Table	105
Front Air Control Power and Ground Diagnosis Procedure	71	REFRIGERATION SYSTEM	106
ECU DIAGNOSIS	72	Refrigerant Cycle	106
		Refrigerant System Protection	106
AIR CONDITIONER CONTROL	72	MANUAL AIR CONDITIONER SYSTEM	108
Front Air Control Terminals Reference Values	72	Control System Diagram	108
Wiring Diagram	74	Control System Description	108
SYMPTOM DIAGNOSIS	83	Discharge Air Flow	110
		Switches And Their Control Function	110
AIR CONDITIONER CONTROL	83	DIAGNOSIS SYSTEM (HVAC)	112
Symptom Matrix Chart	83	CONSULT-III Function (HVAC)	112
INSUFFICIENT COOLING	84	DIAGNOSIS SYSTEM (BCM)	113
Component Function Check	84	CONSULT-III Function (BCM - COMMON ITEM)	113
Diagnostic Work Flow	85	CONSULT-III Function (BCM - AUTO AIR CONDITIONER)	113
Performance Chart	87	SELF-DIAGNOSIS FUNCTION	115
Trouble Diagnoses for Abnormal Pressure	88	Front Air Control Self-Diagnosis	115
INSUFFICIENT HEATING	92	Front Air Control Self-Diagnosis Code Chart	115
Component Function Check	92	COMPONENT DIAGNOSIS	116
NOISE	94	MANUAL A/C IDENTIFICATION TABLE	116
Component Function Check	94	Application Table	116
MEMORY FUNCTION DOES NOT OPERATE..	95	MODE DOOR MOTOR	117
Memory Function Check	95	System Description	117
PRECAUTION	96	Mode Door Motor Component Function Check ...	117
		Mode Door Motor Diagnosis Procedure	118
PRECAUTIONS	96	AIR MIX DOOR MOTOR	122
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	96	System Description	122
Working with HFC-134a (R-134a)	96	Air Mix Door Motor Component Function Check .	122
Precaution for Service Equipment	97	Air Mix Door Motor Diagnosis Procedure	123
MANUAL A/C (TYPE 1)		INTAKE DOOR MOTOR	127
BASIC INSPECTION	98	System Description	127
		Intake Door Motor Component Function Check ...	127
MANUAL A/C IDENTIFICATION TABLE	98	Intake Door Motor Diagnosis Procedure	128
Application Table	98	DEFROSTER DOOR MOTOR CIRCUIT	130
DIAGNOSIS AND REPAIR WORKFLOW	99	System Description	130
		Defroster Door Motor Component Function Check	130
		Defroster Door Motor Diagnosis Procedure	131

BLOWER MOTOR CONTROL SYSTEM	135	PRECAUTIONS	180	
System Description	135	Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	180	A
Front Blower Motor Component Function Check ..	135	Working with HFC-134a (R-134a)	180	
Front Blower Motor Diagnosis Procedure	136	Precaution for Service Equipment	181	B
Front Blower Motor Component Inspection	139			
MAGNET CLUTCH	141			
System Description	141	MANUAL A/C (TYPE 2)		
Magnet Clutch Component Function Check	141	BASIC INSPECTION	182	C
Magnet Clutch Diagnosis Procedure	142	MANUAL A/C IDENTIFICATION TABLE	182	
WATER VALVE CIRCUIT	146	Application Table	182	D
Description	146	DIAGNOSIS AND REPAIR WORKFLOW	183	
Water Valve Diagnosis Procedure	146	How to Perform Trouble Diagnosis For Quick And Accurate Repair	183	E
AMBIENT SENSOR	148	INSPECTION AND ADJUSTMENT	184	
Component Description	148	Operational Check	184	F
Ambient Sensor Diagnosis Procedure	148	FUNCTION DIAGNOSIS	186	
Ambient Sensor Component Inspection	149	MANUAL A/C IDENTIFICATION TABLE	186	G
INTAKE SENSOR	151	Application Table	186	
System Description	151	FUNCTION INFORMATION	187	
Intake Sensor Diagnosis Procedure	151	Component Part Location	187	H
Intake Sensor Component Inspection	152	Symptom Table	189	
POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER	153	REFRIGERATION SYSTEM	190	HAC
Component Description	153	Refrigerant Cycle	190	
Front Air Control Component Function Check	153	Refrigerant System Protection	190	
Front Air Control Power and Ground Diagnosis Procedure	154	MANUAL AIR CONDITIONER SYSTEM	192	J
ECU DIAGNOSIS	155	Control System Diagram	192	
MANUAL A/C IDENTIFICATION TABLE	155	Control System Description	192	
Application Table	155	Discharge Air Flow	193	K
AIR CONDITIONER CONTROL	156	Switches And Their Control Function	194	
Front Air Control Terminals Reference Values	156	DIAGNOSIS SYSTEM (BCM)	196	L
Wiring Diagram	158	CONSULT-III Function (BCM - COMMON ITEM)..	196	
SYMPTOM DIAGNOSIS	166	CONSULT-III Function (BCM - AUTO AIR CONDITIONER)	196	
MANUAL A/C IDENTIFICATION TABLE	166	COMPONENT DIAGNOSIS	198	M
Application Table	166	MANUAL A/C IDENTIFICATION TABLE	198	
AIR CONDITIONER CONTROL	167	Application Table	198	N
Symptom Matrix Chart	167	MODE DOOR MOTOR	199	
INSUFFICIENT COOLING	168	System Description	199	O
Component Function Check	168	Mode Door Motor Component Function Check	199	
Diagnostic Work Flow	169	Mode Door Motor Diagnosis Procedure	200	
Performance Chart	171	AIR MIX DOOR MOTOR	204	P
Trouble Diagnoses for Abnormal Pressure	172	System Description	204	
INSUFFICIENT HEATING	176	Air Mix Door Motor Component Function Check ..	204	
Component Function Check	176	Air Mix Door Motor Diagnosis Procedure	205	
NOISE	178	INTAKE DOOR MOTOR	209	
Component Function Check	178	System Description	209	
PRECAUTION	180	Intake Door Motor Component Function Check ..	209	
		Intake Door Motor Diagnosis Procedure	210	

DEFROSTER DOOR MOTOR CIRCUIT	212	MANUAL A/C IDENTIFICATION TABLE	234
System Description	212	Application Table	234
Defroster Door Motor Component Function Check	212	AIR CONDITIONER CONTROL	235
Defroster Door Motor Diagnosis Procedure	213	Front Air Control Terminals Reference Values	235
BLOWER MOTOR CONTROL SYSTEM	217	Wiring Diagram	237
System Description	217	SYMPTOM DIAGNOSIS	245
Front Blower Motor Component Function Check ..	217	MANUAL A/C IDENTIFICATION TABLE	245
Front Blower Motor Diagnosis Procedure	218	Application Table	245
Front Blower Motor Component Inspection	221	AIR CONDITIONER CONTROL	246
MAGNET CLUTCH	223	Symptom Matrix Chart	246
System Description	223	INSUFFICIENT COOLING	247
Magnet Clutch Component Function Check	223	Component Function Check	247
Magnet Clutch Diagnosis Procedure	223	Diagnostic Work Flow	248
WATER VALVE CIRCUIT	228	Performance Chart	250
Description	228	Trouble Diagnoses for Abnormal Pressure	251
Water Valve Diagnosis Procedure	228	INSUFFICIENT HEATING	255
INTAKE SENSOR	230	Component Function Check	255
System Description	230	NOISE	257
Intake Sensor Diagnosis Procedure	230	Component Function Check	257
Intake Sensor Component Inspection	231	PRECAUTION	258
POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER	232	PRECAUTIONS	258
Component Description	232	Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	258
Front Air Control Component Function Check	232	Working with HFC-134a (R-134a)	258
Front Air Control Power and Ground Diagnosis Procedure	233	Precaution for Service Equipment	259
ECU DIAGNOSIS	234		

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

How to Perform Trouble Diagnosis For Quick And Accurate Repair

INFOID:000000003790016

WORK FLOW

1. LISTEN TO CUSTOMER COMPLAINT

Listen to customer complaint. Get detailed information about the conditions and environment when the symptom occurs.

>> GO TO 2

2. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 3.

3. VERIFY THE SYMPTOM WITH OPERATIONAL CHECK

Verify the symptom with operational check. Refer to [HAC-6, "Operational Check"](#).

Can a symptom be duplicated?

YES >> GO TO 4

NO >> GO TO 5

4. GO TO APPROPRIATE TROUBLE DIAGNOSIS

Go to appropriate trouble diagnosis. Refer to [HAC-83, "Symptom Matrix Chart"](#).

Can a symptom be duplicated?

>> GO TO 5.

5. PERFORM THE FRONT AIR CONTROL SELF-DIAGNOSIS

Perform front air control self-diagnosis. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

>> If any diagnostic trouble codes set. Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).

>> Confirm the repair by performing operational check. Refer to [HAC-6, "Operational Check"](#).

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

INSPECTION AND ADJUSTMENT

Operational Check

INFOID:000000003790017

The purpose of the operational check is to confirm that the system operates properly.

Conditions : Engine running and at normal operating temperature

CHECKING MEMORY FUNCTION

1. Set the temperature to 32° (90°F).
2. Press the OFF switch.
3. Turn ignition switch OFF.
4. Turn ignition switch ON.
5. Press the AUTO switch.
6. Confirm that the set temperature remains at previous temperature.

7. Press the OFF switch.

If NG, go to trouble diagnosis procedure for [HAC-95. "Memory Function Check"](#).

If OK, continue with next check.


CHECKING BLOWER

1. Rotate the blower control dial clockwise once, blower should operate on low speed.
2. Rotate the blower control dial again, and continue checking blower speed until all speeds are checked.
3. Leave blower on maximum speed.

If NG, go to trouble diagnosis procedure for [HAC-48. "Front Blower Motor Diagnosis Procedure"](#).

If OK, continue with next check.

CHECKING DISCHARGE AIR

1. Press each MODE switch and the DEF  switch.
2. Each MODE position indicator should illuminate.
3. Confirm that discharge air comes out according to the air distribution table. Refer to [HAC-15. "Discharge Air Flow"](#).

Mode door position is checked in the next step.



If NG, go to trouble diagnosis procedure for [HAC-24. "Mode Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected.





CHECKING RECIRCULATION ( ,  ONLY)

1. Press recirculation () switch one time. Recirculation indicator should illuminate.
2. Press recirculation () switch one more time. Recirculation indicator should go off.
3. Listen for intake door position change (blower sound should change slightly).

If NG, go to trouble diagnosis procedure for [HAC-39. "Intake Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected. REC () is not allowed in DEF () D/F () or FOOT ().

CHECKING TEMPERATURE DECREASE

1. Rotate temperature control dial (driver or passenger) counterclockwise until 18°C (60°F) is displayed.
2. Check for cold air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [HAC-84. "Component Function Check"](#). If air mix door motor appears to be malfunctioning, go to [HAC-29. "Air Mix Door Motor Component Function Check"](#).

INSPECTION AND ADJUSTMENT

[AUTOMATIC AIR CONDITIONER]

< BASIC INSPECTION >

If OK, continue the check.

CHECKING TEMPERATURE INCREASE

1. Rotate temperature control dial clockwise (drive or passenger) until 32°C (90°F) is displayed.
2. Check for hot air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [HAC-92, "Component Function Check"](#). If air mix door motor appears to be malfunctioning, go to [HAC-29, "Air Mix Door Motor Component Function Check"](#).

If OK, continue with next check.

CHECK A/C SWITCH

1. Press A/C switch when AUTO switch is ON, or in manual mode.
2. A/C switch indicator will turn ON.
 - Confirm that the compressor clutch engages (sound or visual inspection).

NOTE:

If current mode setting is DEF or D/F, compressor clutch will already be engaged and cannot be turned off.

If NG, go to trouble diagnosis procedure for [HAC-54, "Magnet Clutch Diagnosis Procedure"](#).

If OK, continue with next check.

CHECKING AUTO MODE

1. Press AUTO switch.
2. AUTO indicator should illuminate.
 - If ambient temperature is warm, and selected temperature is cool, confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle, and set temperatures.)

If NG, go to trouble diagnosis procedure for [HAC-71, "Front Air Control Power and Ground Diagnosis Procedure"](#), then if necessary, trouble diagnosis procedure for [HAC-54, "Magnet Clutch Diagnosis Procedure"](#).

If all operational checks are OK (symptom cannot be duplicated), go to malfunction Simulation Tests in [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#) and perform tests as outlined to simulate driving conditions environment. If symptom appears. Refer to [HAC-83, "Symptom Matrix Chart"](#), and perform applicable trouble diagnosis procedures.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC


FUNCTION DIAGNOSIS

FUNCTION INFORMATION

Component Part Location

INFOID:000000003790018

ENGINE COMPARTMENT

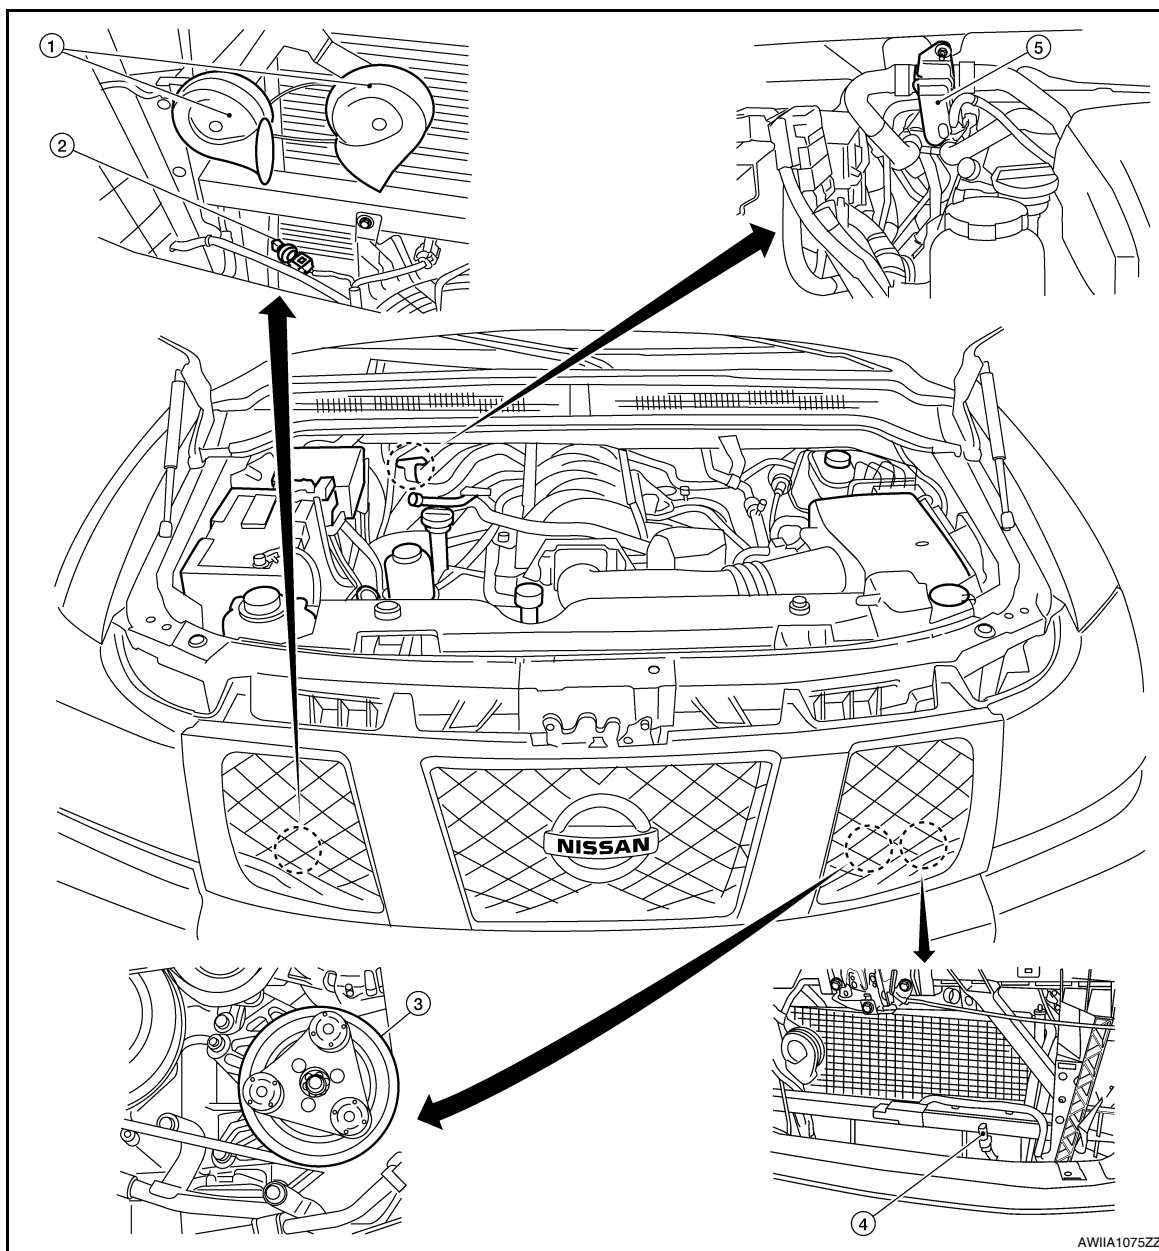

- | | | |
|---|------------------------------------|----------------------|
| 1. Horn (view with grille removed) | 2. Refrigerant pressure sensor E48 | 3. A/C compressor F3 |
| 4. Ambient sensor E1 (view with grille removed) | 5. Water valve F68 | |


AWIA1075ZZ

FUNCTION INFORMATION

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

PASSENGER COMPARTMENT

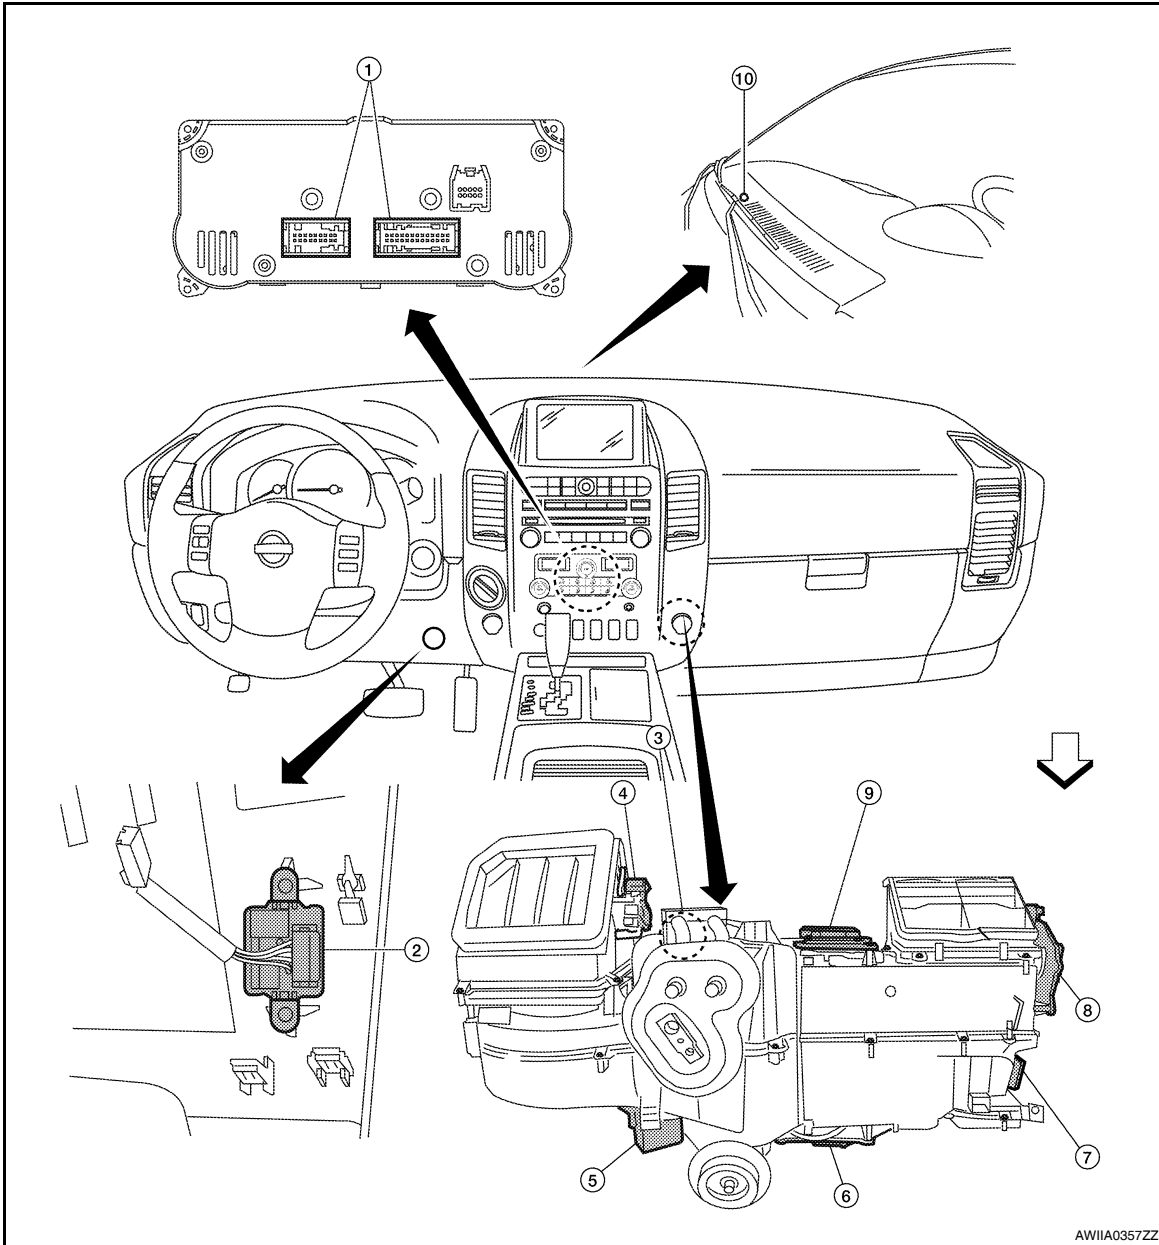

- | | | |
|-------------------------------|---------------------------------|--|
| 1. Front air control M49, M50 | 2. In-vehicle sensor M32 | 3. Intake sensor M146 |
| 4. Intake door motor M58 | 5. Variable blower control M122 | 6. Air mix door motor (Passenger) M143 |
| 7. Mode door motor M142 | 8. Defroster door motor M144 | 9. Air mix door motor (driver) M185 |
| 10. Optical sensor M302 | ← :Front | |

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

FUNCTION INFORMATION

[AUTOMATIC AIR CONDITIONER]

< FUNCTION DIAGNOSIS >

Symptom Table

INFOID:000000003790019

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-71
A/C system cannot be controlled.	Go to Self-diagnosis Function.	HAC-21
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	HAC-24
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	HAC-29
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	HAC-39
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	HAC-42
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-48
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-54
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-84
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-92
Noise	Go to Trouble Diagnosis Procedure for Noise.	HAC-94
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	HAC-21
Memory function does not operate.	Go to Trouble Diagnosis Procedure for Memory Function.	HAC-95

REFRIGERATION SYSTEM

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

REFRIGERATION SYSTEM

Refrigerant Cycle

INFOID:000000004110942

REFRIGERANT FLOW

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation through the evaporator coils are controlled by externally equalized expansion valve, located inside the evaporator case.

Refrigerant System Protection

INFOID:000000004110943

REFRIGERANT PRESSURE SENSOR

The refrigerant system is protected against excessively high or low pressures by the refrigerant pressure sensor, located on the condenser. If the system pressure rises above or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends a voltage signal to the ECM. The ECM de-energizes the A/C relay to disengage the magnetic compressor clutch when pressure on the high pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm², 398 psi), or below about 120 kPa (1.22 kg/cm², 17.4 psi).

PRESSURE RELIEF VALVE

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 2,990 kPa (30.5 kg/

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O


P

REFRIGERATION SYSTEM

[AUTOMATIC AIR CONDITIONER]

< FUNCTION DIAGNOSIS >

cm², 433.6 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

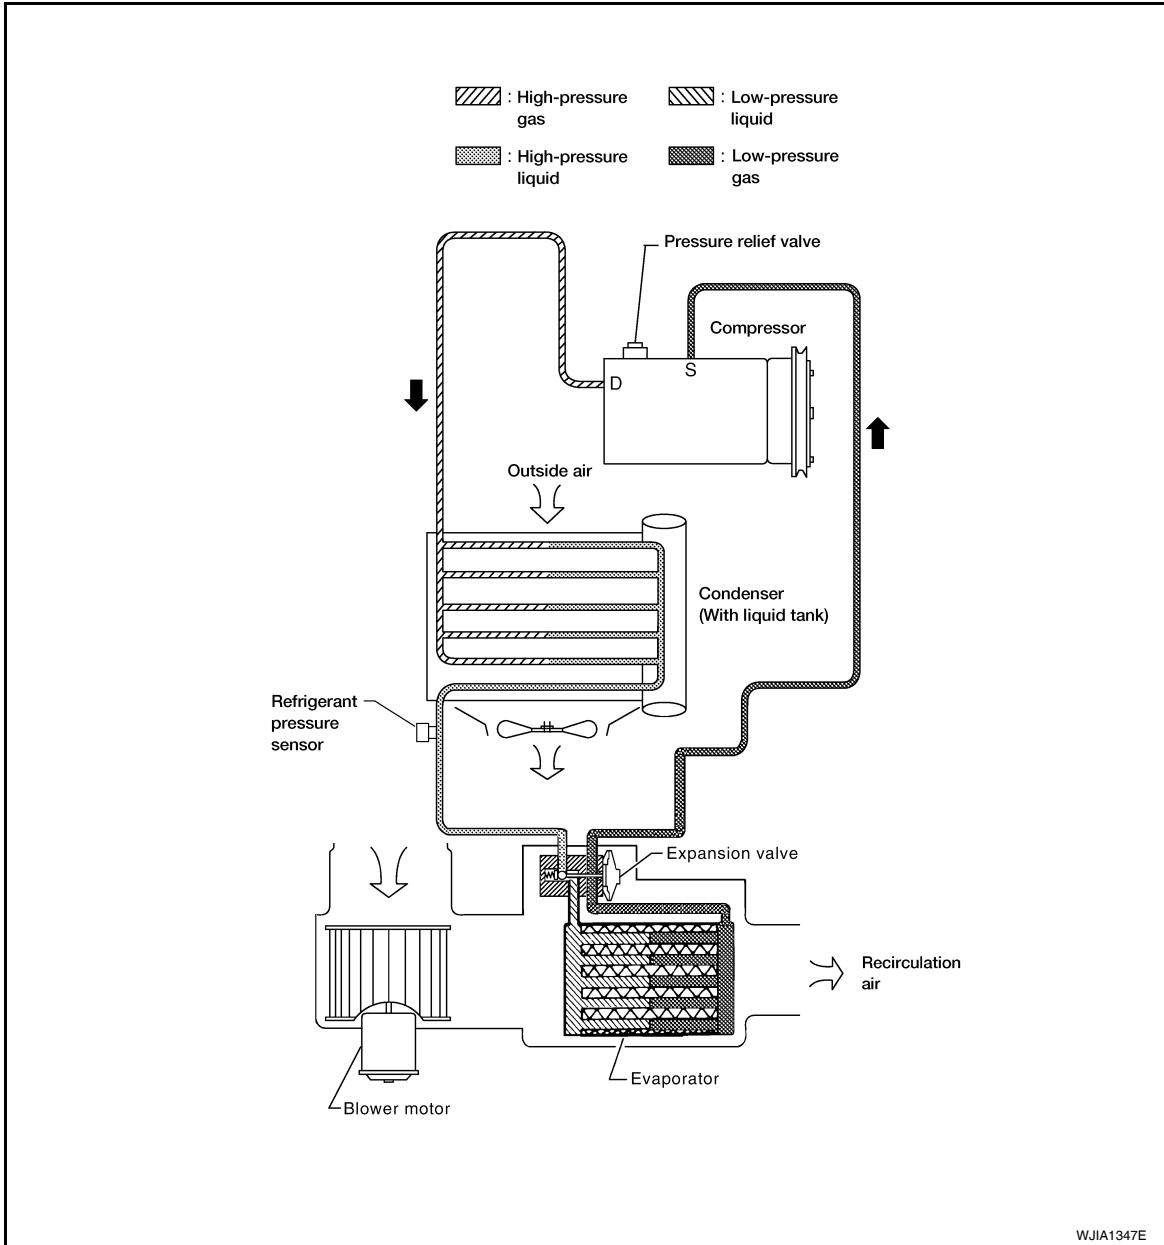

AUTOMATIC AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]


AUTOMATIC AIR CONDITIONER SYSTEM

Control System Diagram

INFOID:000000003790022

CONTROL SYSTEM

The control system consists of input sensors, switches, the front air control (microcomputer) and outputs. The relationship of these components is shown in the figure below:

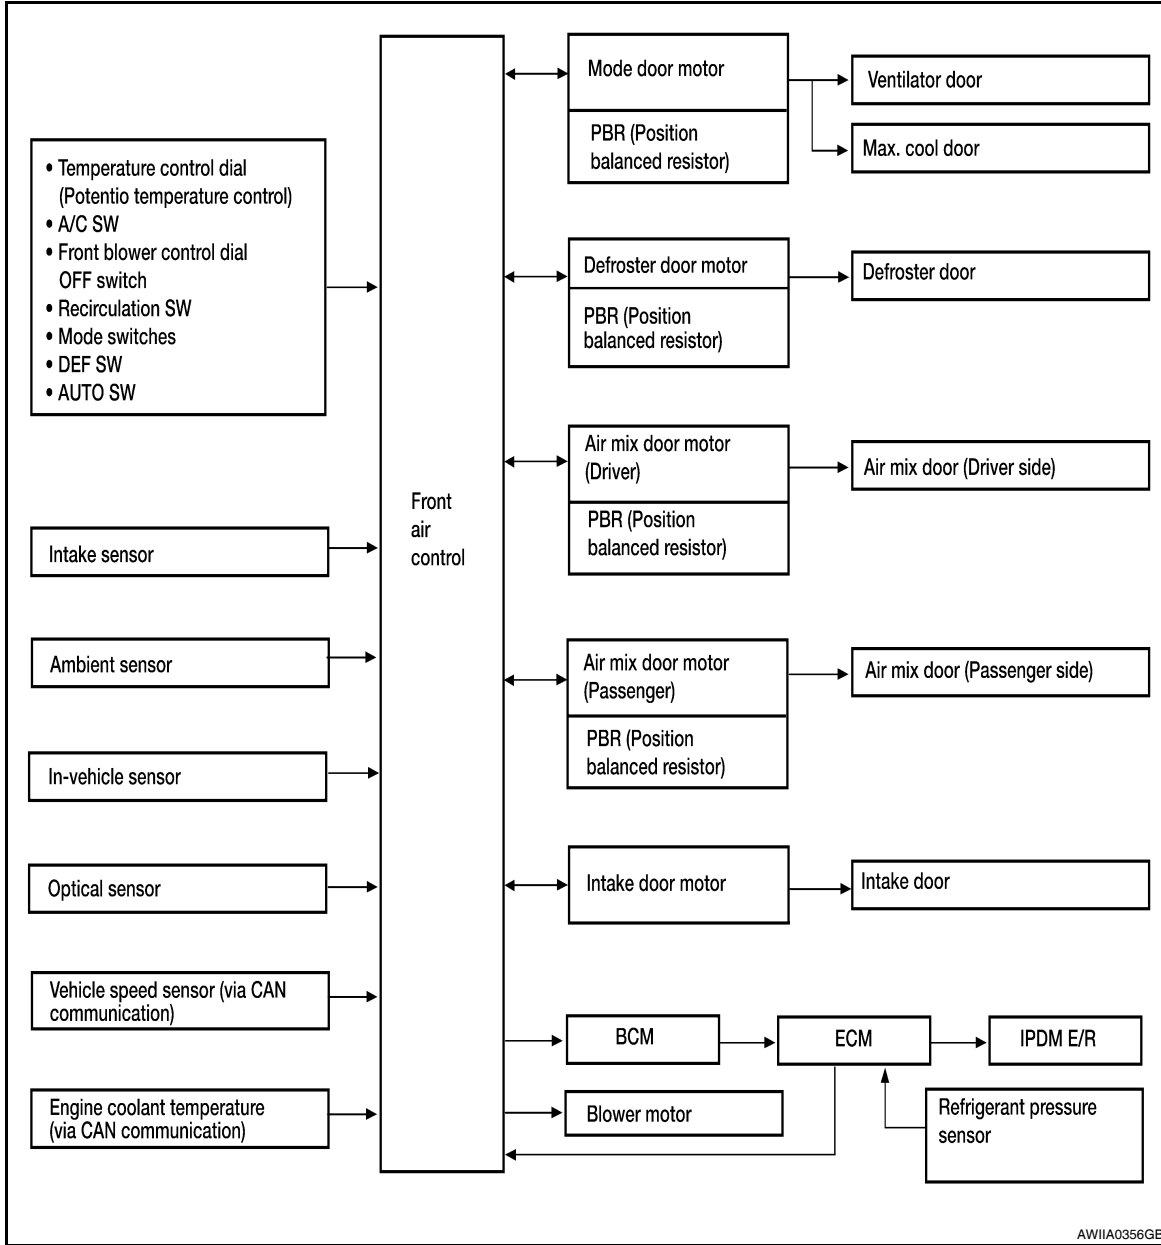

Control System Description

INFOID:000000003790023


CONTROL OPERATION

AUTOMATIC AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Front air control

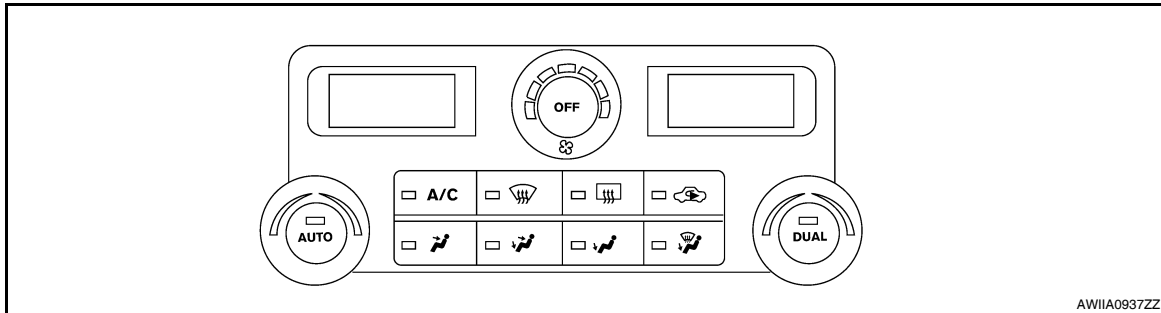

AUTO SWITCH

- The compressor, intake door, air mix doors, outlet doors and blower speed are automatically controlled so that the in-vehicle temperature will reach, and be maintained at the set temperature selected by the operator.
- When pressing AUTO switch, air inlet, air outlet, blower speed, and discharge air temperature are automatically controlled.

TEMPERATURE CONTROL DIAL (DRIVER)

Increases or decreases the set temperature.

TEMPERATURE CONTROL DIAL (PASSENGER)

Increases or decreases the set temperature.

RECIRCULATION () SWITCH

- When REC switch is ON, REC switch indicator turns ON, and air inlet is set to REC.
- When REC switch is turned OFF, or when compressor is turned from ON to OFF, REC switch is automatically turned OFF. REC mode can be re-entered by pressing REC switch again.
- REC switch is not operated when DEF switch is turned ON, at the D/F position, or in floor position.

DEFROSTER () SWITCH

Positions the air outlet doors to the defrost position. Also positions the intake doors to the outside air position, and turns A/C compressor ON.

REAR WINDOW DEFOGGER SWITCH (CREW CAB)

When switch is ON, rear window and door mirrors are defogged.

OFF SWITCH

The compressor and blower are OFF, the intake doors are set to the outside air position, and the air outlet doors are set to the foot (75% foot and 25% defrost) position.

BLOWER CONTROL DIAL

The blower speed is manually controlled with this dial.

A/C SWITCH

The compressor is ON or OFF.

(Pressing the A/C switch when the AUTO switch is ON will turn off the A/C switch and compressor.)

MODE SWITCHES

Controls the air discharge outlets.

DUAL SWITCH


- When the DUAL switch indicator is illuminated, the driver and passenger temperature can each be set independently.
- When the DUAL switch indicator is not illuminated, the driver temperature setting is applied to both sides.

AUTOMATIC AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

MAGNET CLUTCH CONTROL

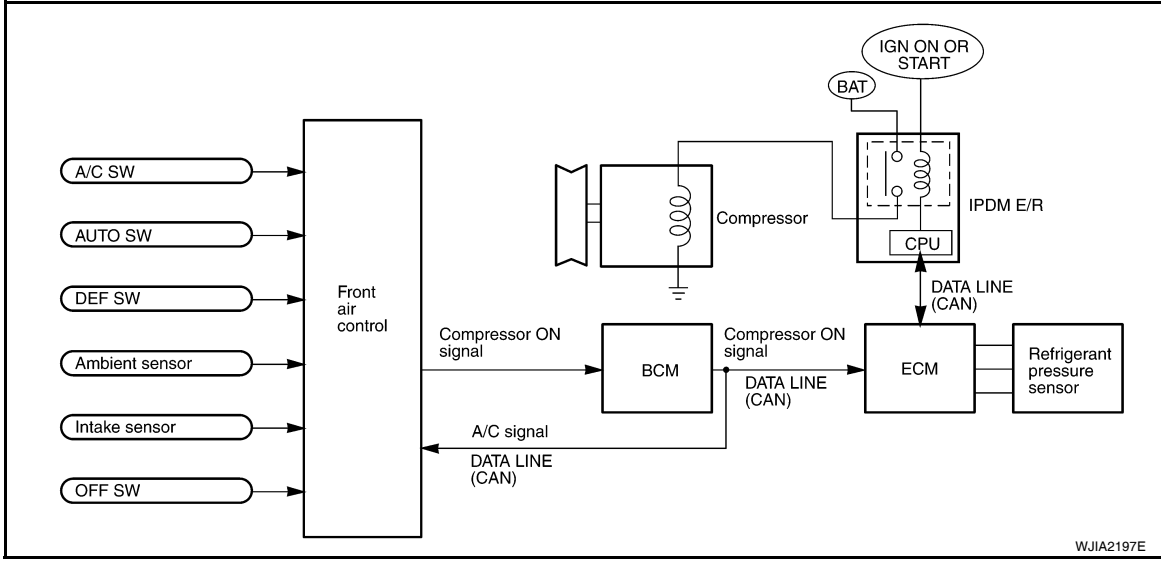


When A/C switch or DEF switch is pressed, front air control inputs compressor ON signal to BCM. BCM sends compressor ON signal to ECM and front air control, via CAN communication line. ECM judges whether compressor can be turned ON, based on each sensor status (refrigerant pressure sensor signal, throttle angle sensor, etc.). If it judges compressor can be turned ON, it sends compressor ON signal to IPDM E/R, via CAN communication line. Upon receipt of compressor ON signal from ECM, IPDM E/R turns air conditioner relay ON to operate compressor.

Discharge Air Flow

INFOID:000000003790024

HAC

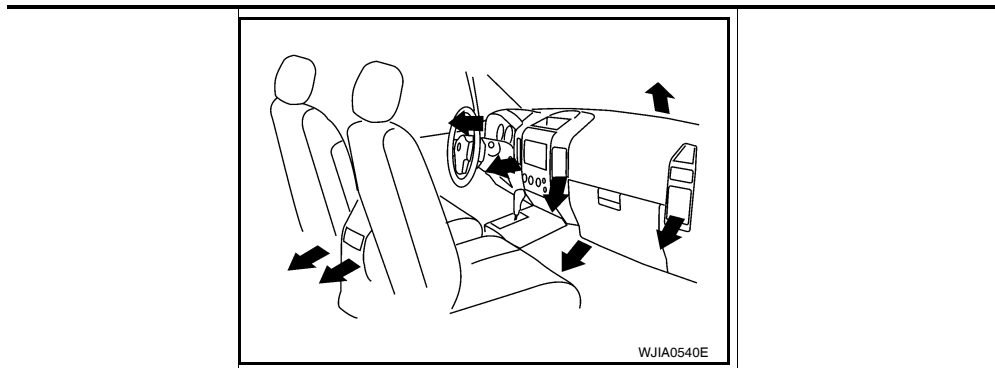

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	95%	5%	—
	60%	40%	—
	—	70%	30%
	—	60%	40%
	—	10%	90%


AUTOMATIC AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Switches And Their Control Function

INFOID:000000003790025

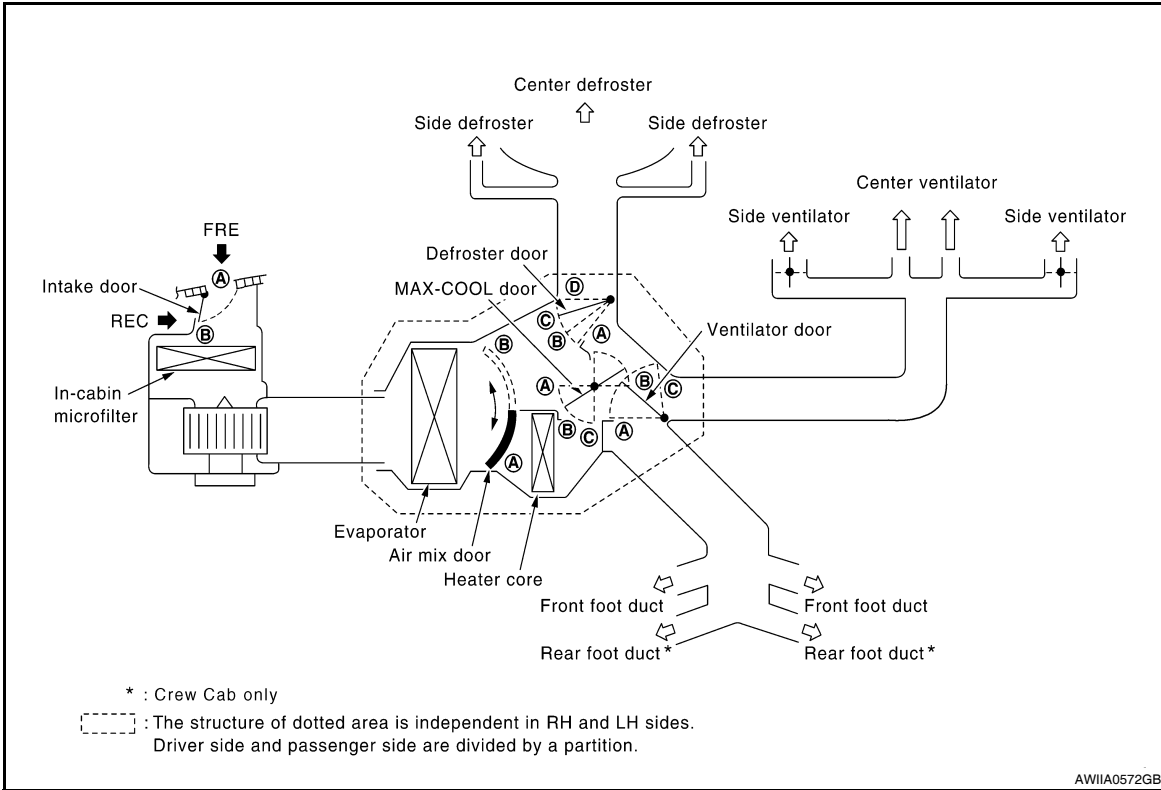

AWIA0572GB

Position or switch	MODE SW				DEF SW		REC SW		Temperature control dial			OFF SW
	VENT	B/L	FOOT	D/F	ON	OFF	ON	OFF				
Door					FRONT 							
Ventilator door	(A)	(B)	(C)	(C)	(C)							(C)
MAX-COOL door	(A)	(B)	(B)	(B)	(C)							(B)
Defroster door	(D)	(D)	(D _{or} C)	(B)	(A)							(C)
Intake door					(B)		(A)	(B)				(B)
Air mix door									(A)	AUTO	(B)	

AWIA0359GB

DIAGNOSIS SYSTEM (HVAC)

[AUTOMATIC AIR CONDITIONER]

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (HVAC)

CONSULT-III Function (HVAC)

INFOID:000000003790026

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic mode	Description
SELF-DIAG RESULTS	Displays Front air control self-diagnosis results.
DATA MONITOR	Displays Front air control input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ECU PART NUMBER	Front air control part number can be read.

SELF-DIAGNOSIS

Display Item List

DTC	Description	Reference page
B2573	Battery voltage out of range	CHG-4, "Work Flow"
B2578	In-vehicle sensor circuit out of range (low)	HAC-63, "In-Vehicle Sensor Diagnosis Procedure"
B2579	In-vehicle sensor circuit out of range (high)	
B257B	Ambient sensor circuit short	HAC-61, "Ambient Sensor Component Inspection"
B257C	Ambient sensor circuit open	
B257F	Optical sensor (Driver) circuit open or short	HAC-66, "Optical Sensor Diagnosis Procedure".
B2580	Optical sensor (Passenger) circuit open or short	
B2581	Intake sensor circuit short	HAC-69, "Intake Sensor Component Inspection"
B2582	Intake sensor circuit open	
B2587	Stuck button	VTL-8, "Removal and Installation"
U1000	CAN bus fault	LAN-14, "Trouble Diagnosis Flow Chart"

DATA MONITOR

Display Item List

Monitor item	Value	Contents
BATT VIA CAN	"V"	Displays battery voltage signal.
IGN VIA CAN	"ON/OFF"	Displays ignition switch signal.
DVR SUNLD SEN	"w/m2"	Displays optical sensor (driver) signal.
PAS SUNLD SEN	"w/m2"	Displays optical sensor (passenger) signal.
AMB TEMP SEN	"°C"	Displays ambient sensor signal.
EVAP TEMP SEN	"°C"	Displays intake sensor signal.
INCAR TMP SEN	"°C"	Displays in-vehicle sensor signal.
MODE FDBCK	"V"	Displays mode door motor feedback signal.
DVR MIX FDBCK	"V"	Displays air mix door motor (driver) feedback signal.
PAS MIX FDBCK	"V"	Displays air mix door motor (passenger) feedback signal.
DEF FDBCK	"V"	Displays defroster door motor feedback signal.
RECIRC	"ON/OFF"	Displays recirculation switch signal.
DEFROST	"ON/OFF"	Displays defroster switch signal.
AUTO	"ON/OFF"	Displays AUTO switch signal.
A/C	"ON/OFF"	Displays A/C switch signal.

DIAGNOSIS SYSTEM (HVAC)

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Monitor item	Value	Contents
L TEMP UP	"ON/OFF"	Displays driver side temperature control dial (temp increase) signal.
L TEMP DOWN	"ON/OFF"	Displays driver side temperature control dial (temp decrease) signal.
R TEMP UP	"ON/OFF"	Displays passenger temperature control dial (temp increase) signal.
R TEMP DOWN	"ON/OFF"	Displays passenger temperature control dial (temp decrease) signal.
RR DEFOG	"ON/OFF"	Displays rear defroster request signal.
FAN UP	"ON/OFF"	Displays blower motor (blower speed increase) signal.
FAN DOWN	"ON/OFF"	Displays blower motor (blower speed decrease) signal.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

DIAGNOSIS SYSTEM (BCM)

CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000004110944

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to BCS-49, "DTC Index" .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"> Enables to read and save the vehicle specification. Enables to write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITONER		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	PANIC ALARM			×

CONSULT-III Function (BCM - AUTO AIR CONDITIONER)

INFOID:000000004110945

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Monitor Item [Unit]	Contents
IGN ON SW [ON/OFF]	Display [ignition switch position (On)/(Off), ACC position (Off)] status as judged from ignition switch signal
FAN ON SIG [ON/OFF]	Display [FAN (On)/FAN (Off)] status as judged from blower fan motor switch signal
AIR COND SW [ON/OFF]	Display [COMP (On)/COMP (Off)] status as judged from air conditioner switch signal

SELF-DIAGNOSIS FUNCTION

< FUNCTION DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

SELF-DIAGNOSIS FUNCTION

Front Air Control Self-Diagnosis

INFOID:000000003790029




A/C SYSTEM SELF-DIAGNOSIS FUNCTION


The self-diagnosis function is built into the front air control to quickly locate the cause of malfunctions.

DESCRIPTION

The self-diagnostic system diagnoses sensors, CAN system, and battery voltage on front air control. Refer to applicable sections (items) for details. Fault codes (if any are present) will be displayed in the ambient temperature display area. Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).

SELF-DIAGNOSTIC MODE

1. Press the OFF switch.
2. Press the FLOOR/DEF () and DEF () mode switches together and release on the front air control.
3. Press the REC () to enter self diagnostic mode.
4. Turn ignition switch OFF to exit out of self-diagnostic mode.

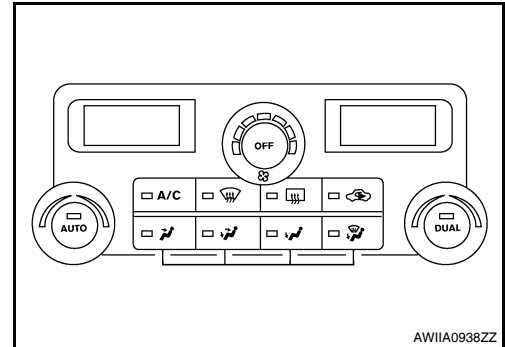

Front Air Control Self-Diagnosis Code Chart

INFOID:000000003790030

SELF-DIAGNOSTIC CODE CHART

Code No.	Reference page	
03	Battery voltage out of range	CHG-4, "Work Flow"
30	In-vehicle sensor circuit out of range (low)	HAC-63, "In-Vehicle Sensor Diagnosis Procedure"
31	In-vehicle sensor circuit out of range (high)	
40	Ambient sensor circuit short	HAC-60, "Ambient Sensor Diagnosis Procedure"
41	Ambient sensor circuit open	
50	Optical sensor (Driver) circuit open or short	HAC-66, "Optical Sensor Diagnosis Procedure"
52	Optical sensor (Passenger) circuit open or short	
56	Intake sensor circuit short	HAC-68, "Intake Sensor Diagnosis Procedure"
57	Intake sensor circuit open	
80	CAN bus fault	LAN-14, "Trouble Diagnosis Flow Chart"
90	Stuck button	VTL-8, "Removal and Installation"

COMPONENT DIAGNOSIS

MODE DOOR MOTOR

System Description

INFOID:000000003790031

SYSTEM DESCRIPTION


Component Parts

Mode door control system components are:

- Front air control
- Mode door motor
- PBR (built into mode door motor)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation


The mode door position (vent, B/L, foot, D/F, and defrost) is set by the front air control by means of the mode door motor. When a mode door position is selected on the front air control, voltage is applied to one circuit of the mode door motor while ground is applied to the other circuit, causing the mode door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the mode door position by measuring the voltage signal on the PBR circuit. In AUTO mode the mode door position is set by the front air control which determines the proper position based on inputs from the in-vehicle sensor, ambient sensor, optical sensor, intake sensor, and the temperature selected by the driver or passenger.

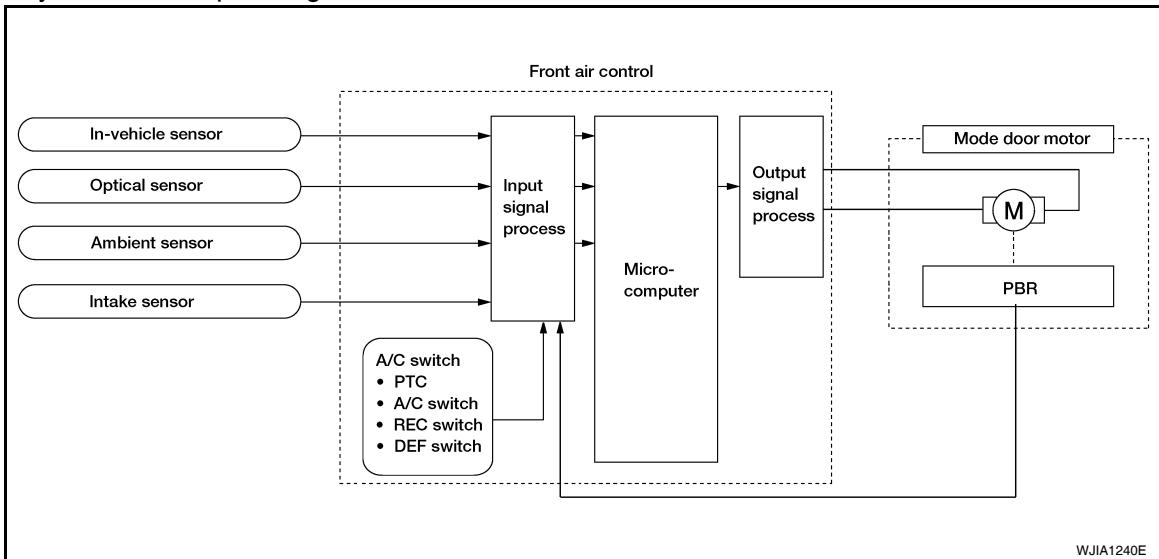

Mode Door Control Specification

COMPONENT DESCRIPTION

Mode Door Motor

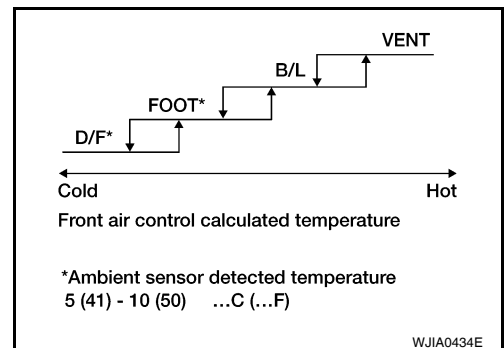


MODE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

The mode door motor is attached to the heater & cooling unit assembly. It rotates so that air is discharged from the outlet as indicated by the front air control. Motor rotation is conveyed to a link which activates the mode door.

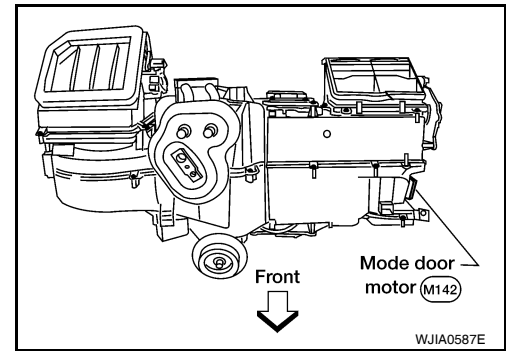


Mode Door Motor Component Function Check




INFOID:000000003790032

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - DISCHARGE AIR

1. Press each mode switch and press the  (DEF) switch. Each position indicator should illuminate.
2. Confirm that discharge air comes out according to the air distribution table. Refer to [HAC-15, "Discharge Air Flow"](#).

NOTE:

Confirm that the compressor clutch is engaged (visual inspection) and intake door position is at FRESH  when DEF () or D/F () is selected.

Can a symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK MODE DOOR OPERATION

Check and verify mode door mechanism for smooth operation in each mode.

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair as necessary.

5. PERFORM FRONT AIR CONTROL SELF-DIAGNOSIS

Perform self-diagnosis to check for any codes. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

Are any self-diagnosis codes present?

- YES >> Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).
- NO >> GO TO 6.

6. CHECK THE MODE DOOR MOTOR PBR CIRCUIT

Perform diagnostic procedure for the mode door motor. Refer to [HAC-23, "Mode Door Motor Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Repair PBR circuit or replace motor. Refer to [HAC-24, "Mode Door Motor Diagnosis Procedure"](#).

7. RECHECK FOR CODES

MODE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

Perform front air control self-diagnosis. Refer to [HAC-21. "Front Air Control Self-Diagnosis"](#).

Are any self-diagnostic codes present?

- YES >> Refer to [HAC-21. "Front Air Control Self-Diagnosis Code Chart"](#).
- NO >> GO TO 8.

8.RECHECK FOR SYMPTOMS

Perform a complete operational check and check for any symptoms. Refer to [HAC-6. "Operational Check"](#).

Does another symptom exist?

- YES >> Repair as necessary.
- NO >> Replace front air control Refer to [VTL-8. "Removal and Installation"](#).

Mode Door Motor Diagnosis Procedure

INFOID:000000003790033


SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

1.CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Press the B/L (☺) mode switch.
3. Check voltage between front air control harness connector M49 terminal 19 and terminal 20 while pressing the mode switch to the floor (☹) mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	20	19	Press mode switch	Battery voltage

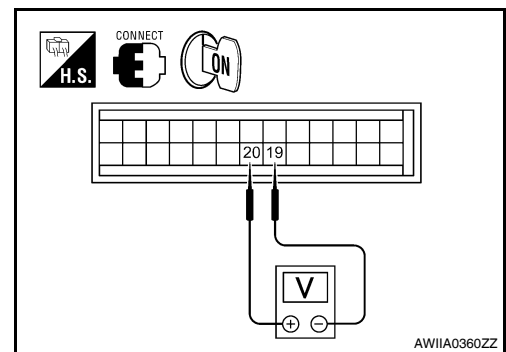

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2.CHECK MODE DOOR MOTOR CIRCUITS FOR SHORT TO GROUND


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 19, 20 and ground.

- 19 - Ground : Continuity should not exist.**
- 20 - Ground : Continuity should not exist.**

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

3.CHECK FRONT AIR CONTROL FOR GROUND AND POWER

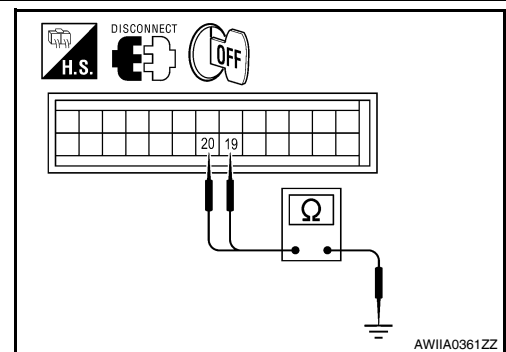


MODE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Press the mode switch to the D/F () mode.
2. Check voltage between front air control harness connector M49 terminal 19 and terminal 20 while pressing the mode switch to the vent () mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	19	20	Press mode switch	Battery voltage

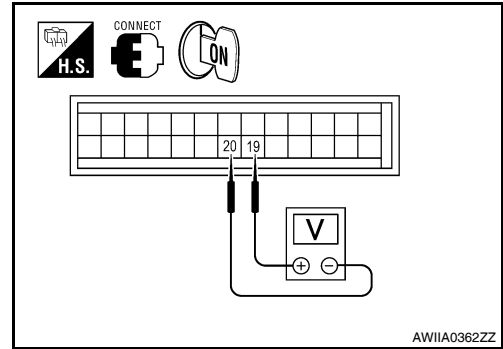

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

4. CHECK MODE DOOR MOTOR AND CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 19 and terminal 20.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

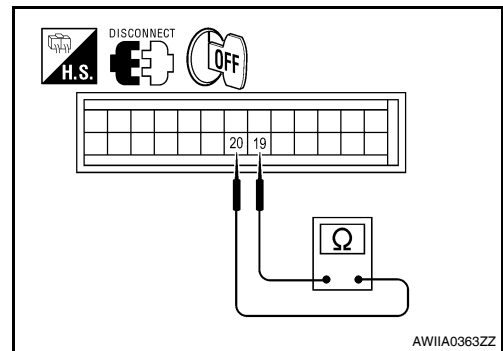

5. CHECK MODE DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the mode door motor harness connector.
2. Check continuity between front air control harness connector M49 (A) terminal 19, 20 and the mode door motor harness connector M142 (B) terminal 5, 6.


5 - 19 : Continuity should exist.

6 - 20 : Continuity should exist.

Is the inspection result normal?

YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

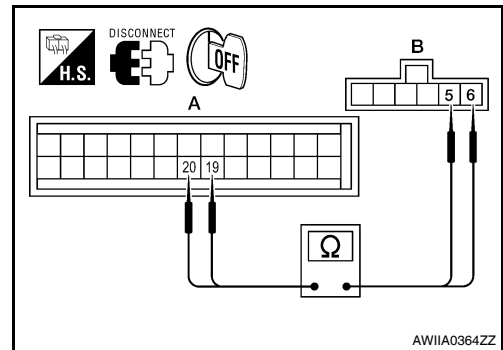

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND


1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M49, M50	28	3	5V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

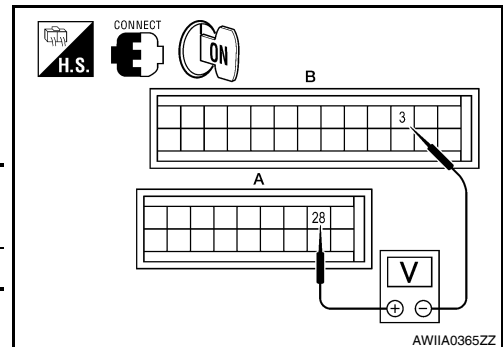

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

MODE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 terminal 28 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

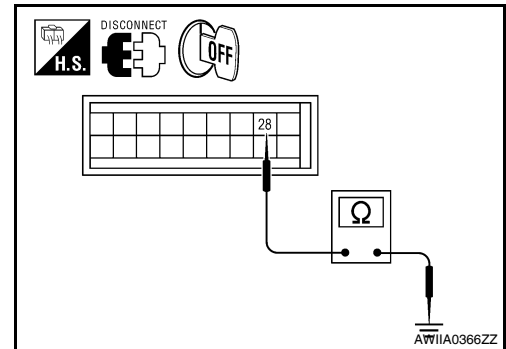


8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
- NO >> GO TO 9

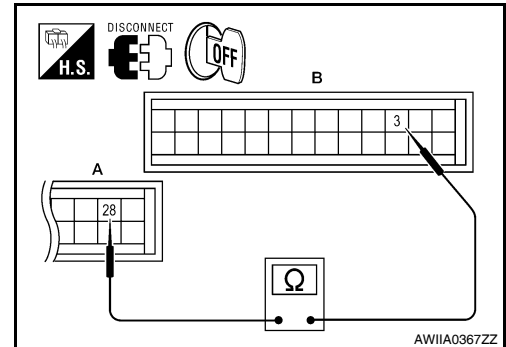

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN


1. Disconnect the mode door motor harness connector.
2. Check continuity between mode door motor harness connector M142 (B) terminal 3, 1 and front air control harness connector M49 (C) terminal 3, M50 (A) terminal 28.

28 - 1 : Continuity should exist.

3 - 3 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

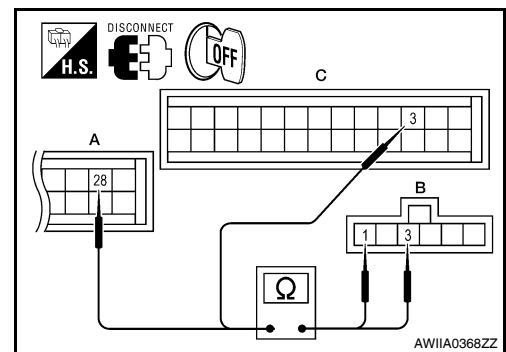


10. CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 7 and ground while cycling mode switch through all modes.

Voltage : Approx. 1V - 4.5V

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> GO TO 11.

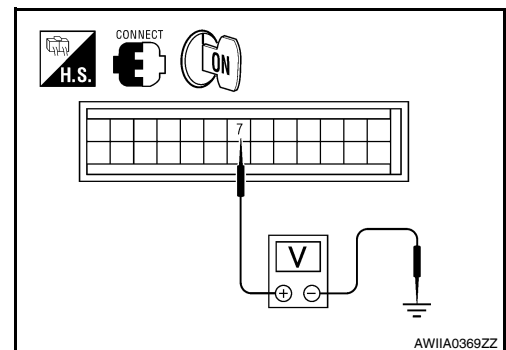

11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

MODE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >


1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 7 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

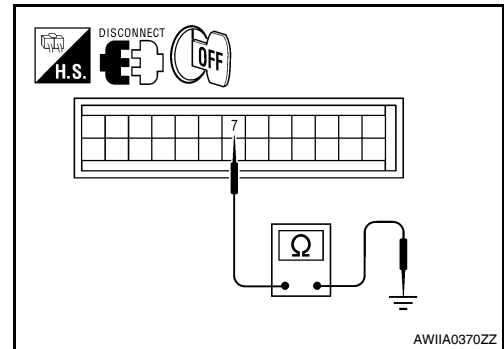

12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the mode door motor harness connector and front air control harness connector.
3. Check continuity between mode door motor harness connector M142 (B) terminal 2 and front air control harness connector M49 (A) terminal 7.

Continuity should exist.

Is the inspection result normal?

YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

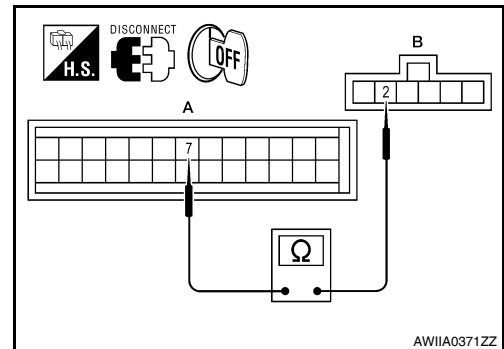

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AIR MIX DOOR MOTOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

AIR MIX DOOR MOTOR

System Description

INFOID:000000003790034

SYSTEM DESCRIPTION

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

SYSTEM DESCRIPTION

Component Parts

Air mix door control system components are:


- Front air control
- Air mix door motors (driver, passenger)
- PBR (built-into air mix door motors)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation

The front air control receives data from the temperature selected by the driver side, passenger side, and rear. The front air control then applies a voltage to one circuit of the appropriate air mix door motor, while ground is applied to the other circuit, causing the appropriate air mix door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the air mix door positions by measuring the voltage signal on the PBR circuits of each door.

In AUTO mode the air mix, intake, mode door, and defrost door positions are set by the front air control which determines the proper position based on inputs from the in-vehicle sensor, ambient sensor, optical sensor, intake sensor, and the temperature selected by the driver and front and rear passengers.

Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new door position data is returned to the front air control

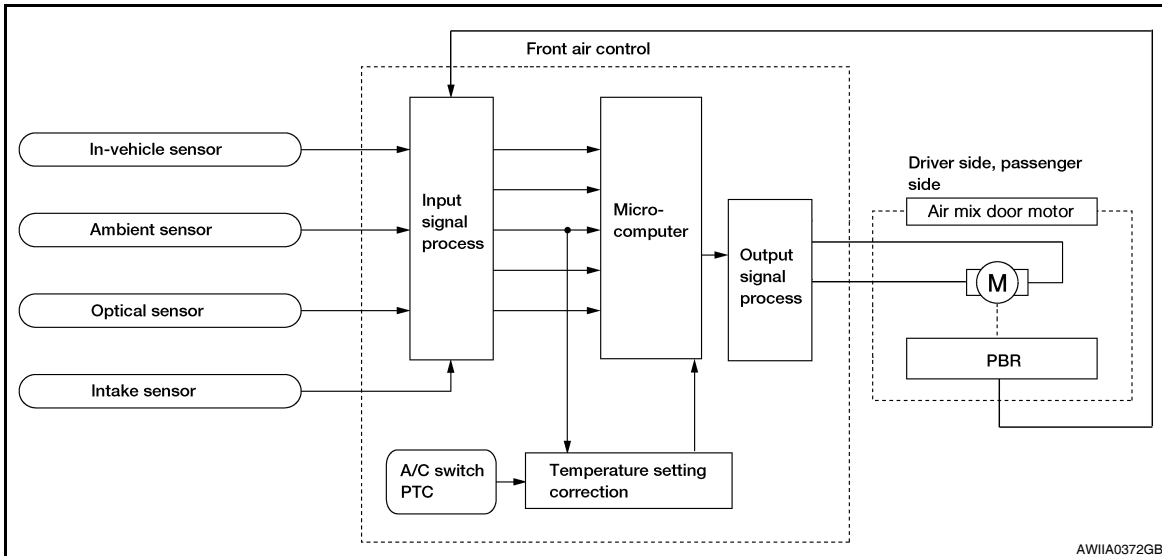


AIR MIX DOOR MOTOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]


Air Mix Door Control Specification

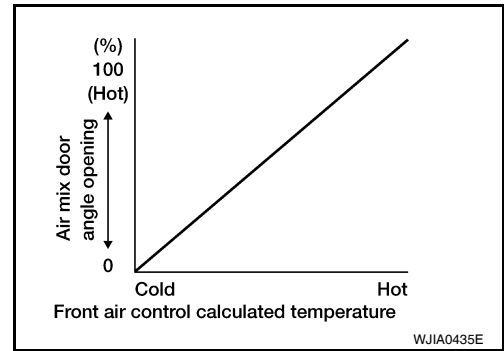

COMPONENT DESCRIPTION

Air Mix Door Motors

The driver (1) and passenger (2) air mix door motors are attached to the front heater & cooling unit assembly. These motors rotate so that the air mix door is opened or closed to a position set by the front air control. Motor rotation is then conveyed through a shaft and the air mix door position is then fed back to the front air control by the PBR built into the air mix door motors.

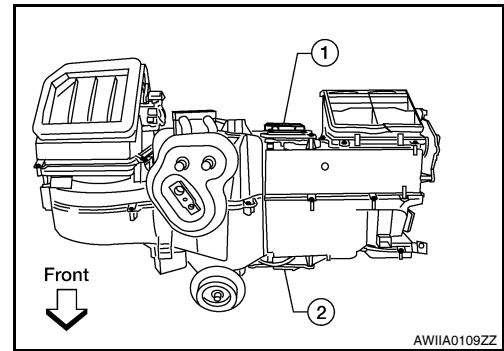

Air Mix Door Motor Component Function Check

INFOID:000000003790035

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE INCREASE

1. Turn the temperature control dial (driver) clockwise until 32°C (90°F) is displayed.
2. Check for hot air at discharge air outlets.

>> GO TO 2.

2. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE DECREASE

1. Turn the temperature control dial (driver) counterclockwise until 18°C (60°F) is displayed.
2. Check for cold air at discharge air outlets.

Can a symptom be duplicated?

- YES >> GO TO 4.
NO >> GO TO 3.

3. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

4. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 5.

5. CHECK AIR MIX DOOR OPERATION

Check and verify air mix door mechanism for smooth operation from 18°C (60°F) to 32°C (90°F) in each mode.

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair as necessary.

6. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis to check for any codes. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

Are any self-diagnosis codes present?

- YES >> Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).
- NO >> GO TO 7.

7. CHECK THE AIR MIX DOOR MOTOR PBR CIRCUIT

Perform diagnostic procedure for the air mix door motors. Refer to [HAC-29, "Air Mix Door Motor Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 8.
- NO >> Repair PBR circuit or replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

8. RECHECK FOR CODES

Perform self-diagnosis. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

Are any self-diagnostic codes present?

- YES >> Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).
- NO >> GO TO 9.

9. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).

Air Mix Door Motor (Driver) Diagnosis Procedure

INFOID:000000003790036

SYMPTOM:


- Discharge air temperature does not change.
- Air mix door motor does not operate.

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (DRIVER)

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Rotate temperature control dial (driver) to 32°C (90°F).
3. Check voltage between front air control harness connector M49 terminal 17 and terminal 18 while rotating temperature control dial (driver) to 18°C (60°F).

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	17	18	Rotate temp control dial	Battery voltage

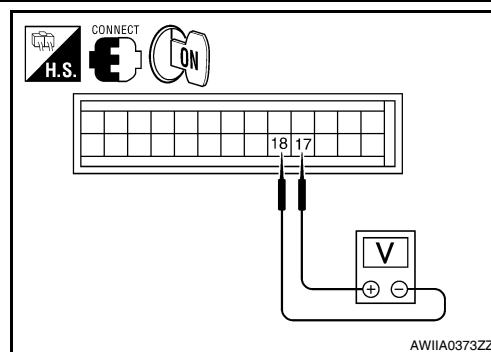

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. CHECK AIR MIX DOOR MOTOR (DRIVER) CIRCUITS FOR SHORT TO GROUND

AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 17, 18 and ground.


17 - Ground : Continuity should not exist.

18 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

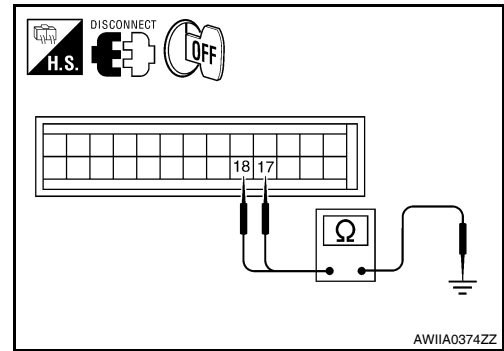

3. CHECK FRONT AIR CONTROL FOR POWER AND GROUND


1. Turn ignition switch ON.
2. Rotate temperature control dial (driver) to 32°C (90°F).
3. Check voltage between front air control harness connector M49 terminal 17 and terminal 18 while rotating temperature control dial (driver) to 18°C (60°F).

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	18	17	Rotate temp control dial	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

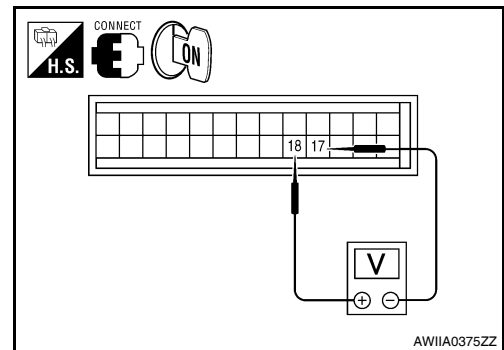

4. CHECK AIR MIX DOOR MOTOR (DRIVER) CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 17 and terminal 18.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

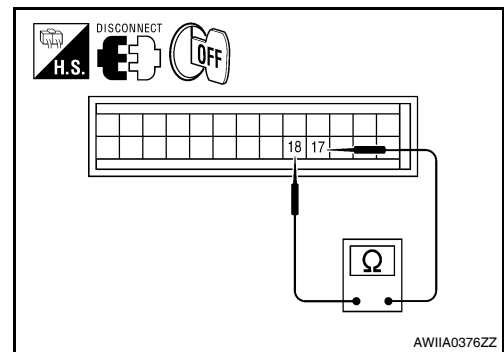

5. CHECK AIR MIX DOOR MOTOR (DRIVER) CIRCUITS FOR OPEN

1. Disconnect the air mix door motor (driver) harness connector.
2. Check continuity between front air control harness connector M49 (A) terminal 17, 18 and the air mix door motor (driver) harness connector M185 (B) terminal 1, 6.


17 - 1 : Continuity should exist.

18 - 6 : Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor (driver). Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

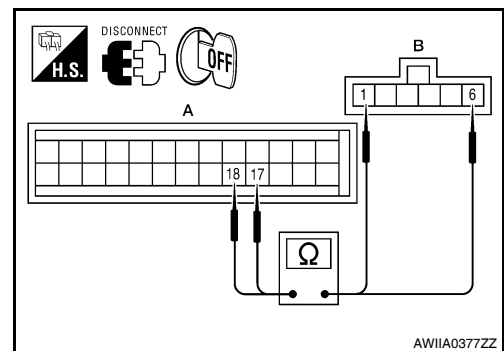

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND

AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M50, M49	28	3	5V

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 7.

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 terminal 28 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
NO >> GO TO 9.

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN

1. Disconnect the air mix door motor (driver) harness connector.
2. Check continuity between air mix door motor (driver) harness connector M185 (B) terminal 3, 2 and front air control harness connector M49 (C) terminal 3 and M50 (A) terminal 28.





28 - 3 : Continuity should exist.

3 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace air mix door motor (driver). Refer to [VTL-20. "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

10. CHECK PBR FEEDBACK VOLTAGE

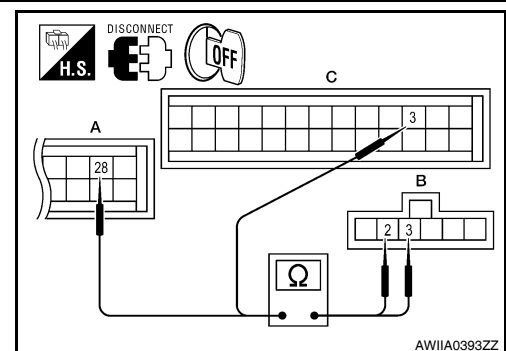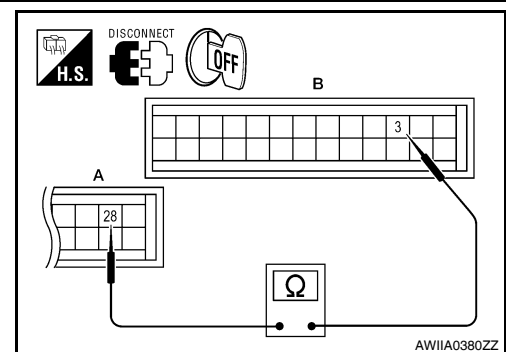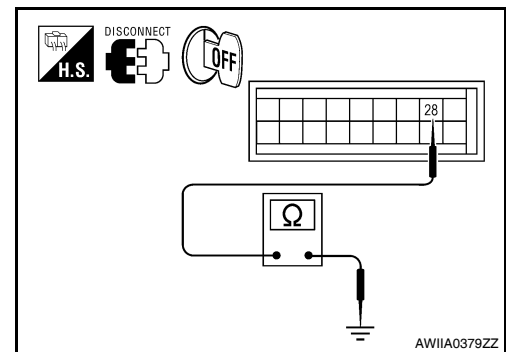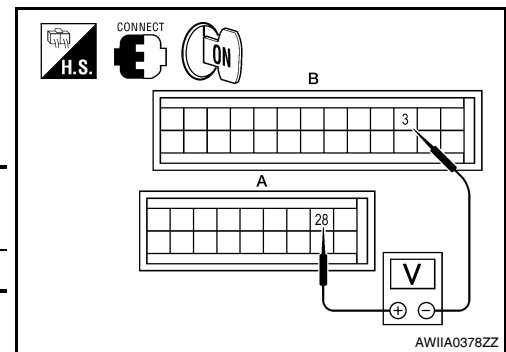

AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 6 and ground while rotating temperature control dial from 32°C (90°F) to 18°C (60°F).

Voltage : **Approx. .5V - 4.5V**

Is the inspection result normal?

- YES >> GO TO 12.
NO >> GO TO 11.

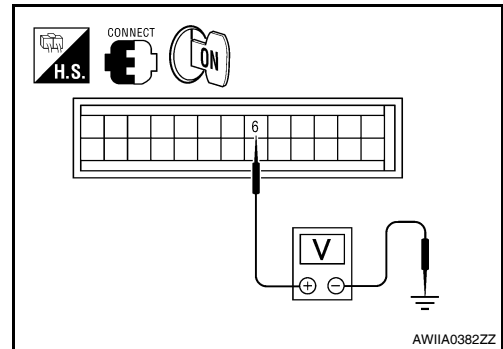


11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 6 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

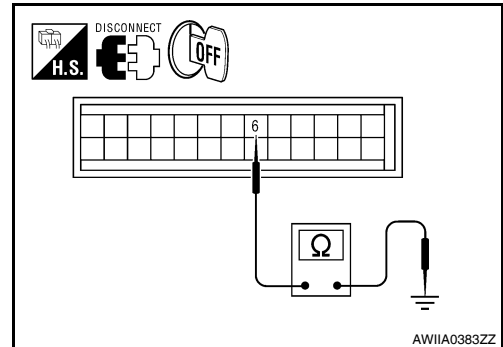


12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the air mix door motor (driver) harness connector and front air control harness connector.
3. Check continuity between air mix door motor (driver) harness connector M185 (B) terminal 4 and front air control harness connector M49 (A) terminal 6.

Continuity should exist.

Is the inspection result normal?

- YES >> Replace air mix door motor (driver). Refer to [VTL-20, "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

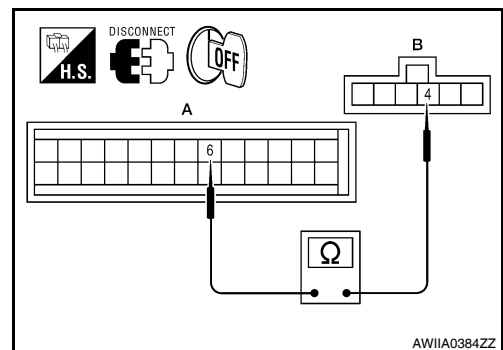

Air Mix Door Motor (Passenger) Diagnosis Procedure

INFOID:000000003790037

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR (PASSENGER)

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND


AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch ON.
2. Rotate temperature control dial (passenger) to 32°C (90°F).
3. Check voltage between front air control harness connector M49 terminal 14 and terminal 2 while rotating temperature control dial (passenger) to 18°C (60°F).

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	2	14	Rotate temp control dial	Battery voltage

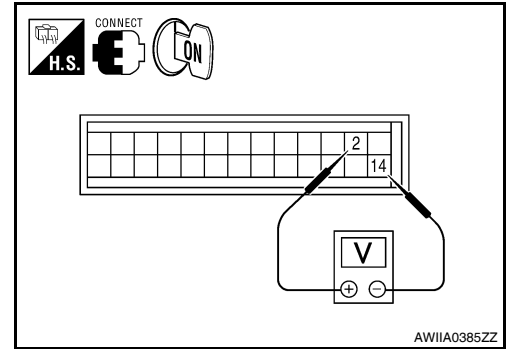

Is the inspection result normal?

- OK >> GO TO 3.
 NG >> GO TO 2.


2. CHECK AIR MIX DOOR MOTOR (PASSENGER) CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 14, 2 and ground.

- 14 - Ground : Continuity should not exist.**
2 - Ground : Continuity should not exist.

Is the inspection result normal?


- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

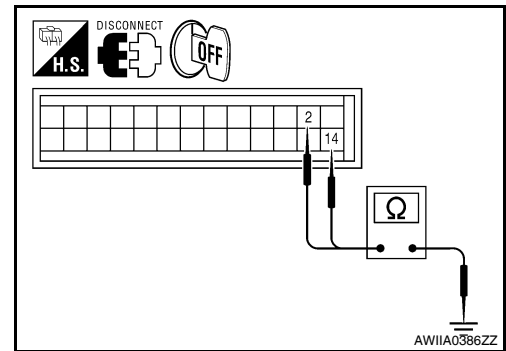

3. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Rotate temperature control dial (passenger) to 18°C (60°F).
3. Check voltage between front air control harness connector M49 terminal 14 and terminal 2 while rotating temperature control dial (passenger) to 32°C (90°F).

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	14	2	Rotate temp control dial	Battery voltage

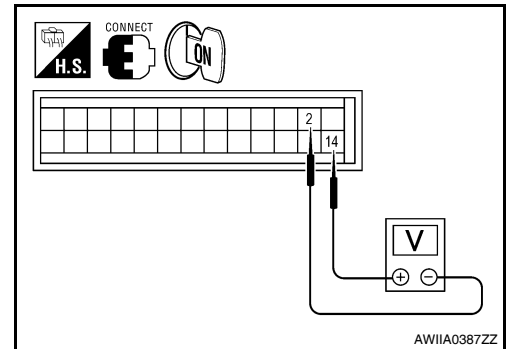

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).


4. CHECK AIR MIX DOOR MOTOR (PASSENGER) CIRCUITS FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 terminal 14 and terminal 2.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> GO TO 5.

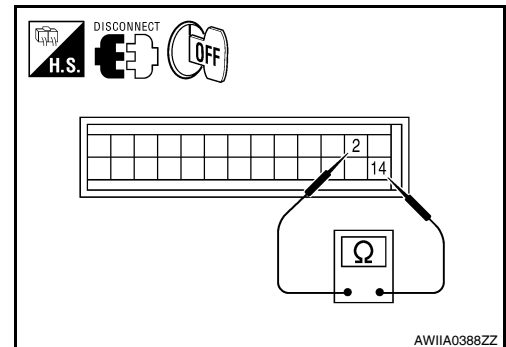

5. CHECK AIR MIX DOOR MOTOR (PASSENGER) CIRCUITS FOR OPEN

AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >


1. Disconnect the air mix door motor (passenger) harness connector.
2. Check continuity between front air control harness connector M49 (A) terminal 14, 2 and the air mix door motor (passenger) harness connector M143 (B) terminal 1, 6.

14 - 1 : Continuity should exist.
2 - 6 : Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor (passenger). Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

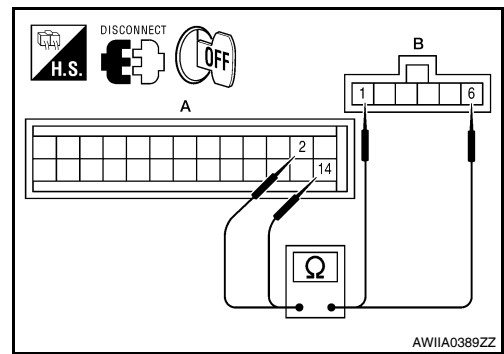

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND


1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M49	28	3	5V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

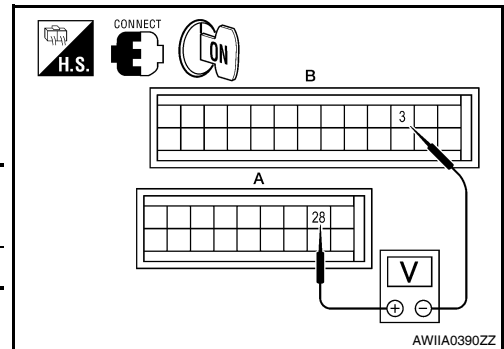

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 29 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

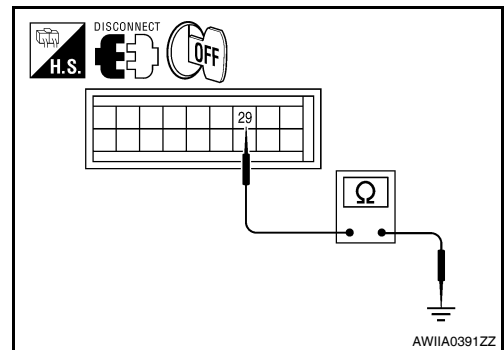

8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

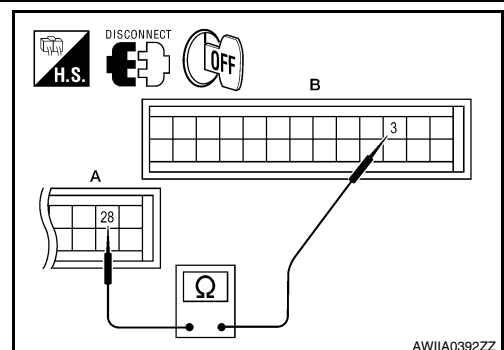

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN

AIR MIX DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Disconnect the air mix door motor (passenger) harness connector.
2. Check continuity between air mix door motor (passenger) harness connector M143 (B) terminal 3, 2 and front air control harness connector M49 (C) terminal 3 and M50 (A) terminal 28.

28 - 3 : Continuity should exist.

3 - 2 : Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor (passenger). Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

10. CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 terminal 29 and ground while rotating temperature control dial (passenger) from 32°C (90°F) to 18°C (60°F).

Voltage : **Approx. .5V - 4.5V**

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 11.

11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M50 terminal 29 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN





1. Turn ignition switch OFF.
2. Disconnect the air mix door motor (passenger) harness connector and front air control harness connector.
3. Check continuity between air mix door motor (passenger) harness connector M143 (B) terminal 4 and front air control harness connector M50 (A) terminal 29.

Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor (passenger). Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

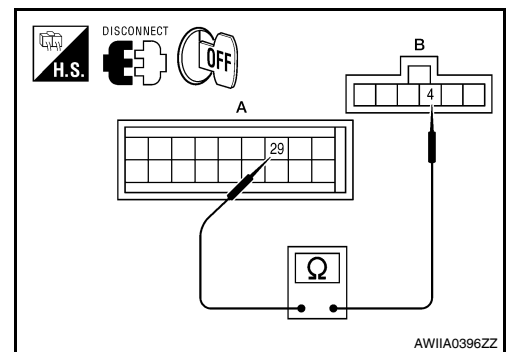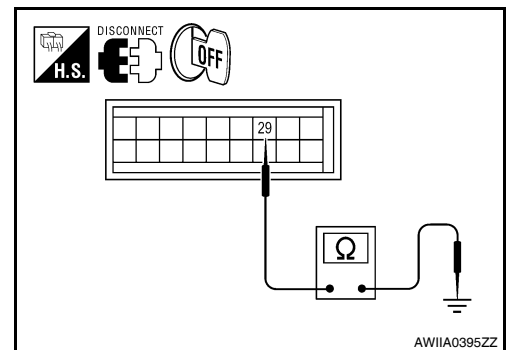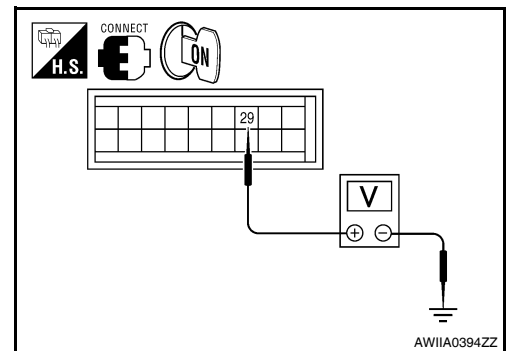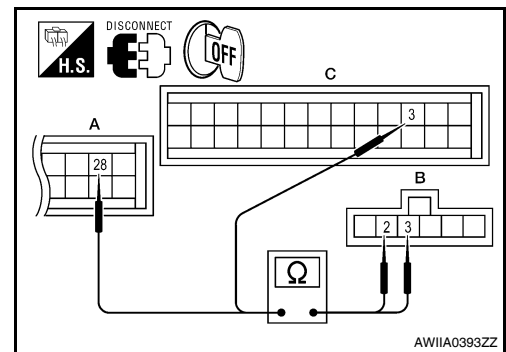

INTAKE DOOR MOTOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

INTAKE DOOR MOTOR

System Description

INFOID:000000003790038

SYSTEM DESCRIPTION

SYMPTOM:

- Intake door motor does not operate normally.
- Intake door does not change.

SYSTEM DESCRIPTION

Component Parts


Intake door control system components are:

- Front air control
- Intake door motor (PRB built into the intake door motor)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor


System Operation

The intake door control determines the intake door position based on the position of the recirculation switch. When the recirculation switch is depressed the intake door motor rotates closing off the fresh air inlet and recirculating the cabin air. If the recirculation switch is depressed again, the intake door motor rotates in the opposite direction, again allowing fresh air into the cabin.

In the AUTO mode, the front air control determines the intake door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature. When the DEF, D/F, FLOOR or OFF switches are pushed, the front air control sets the intake door at the fresh position.

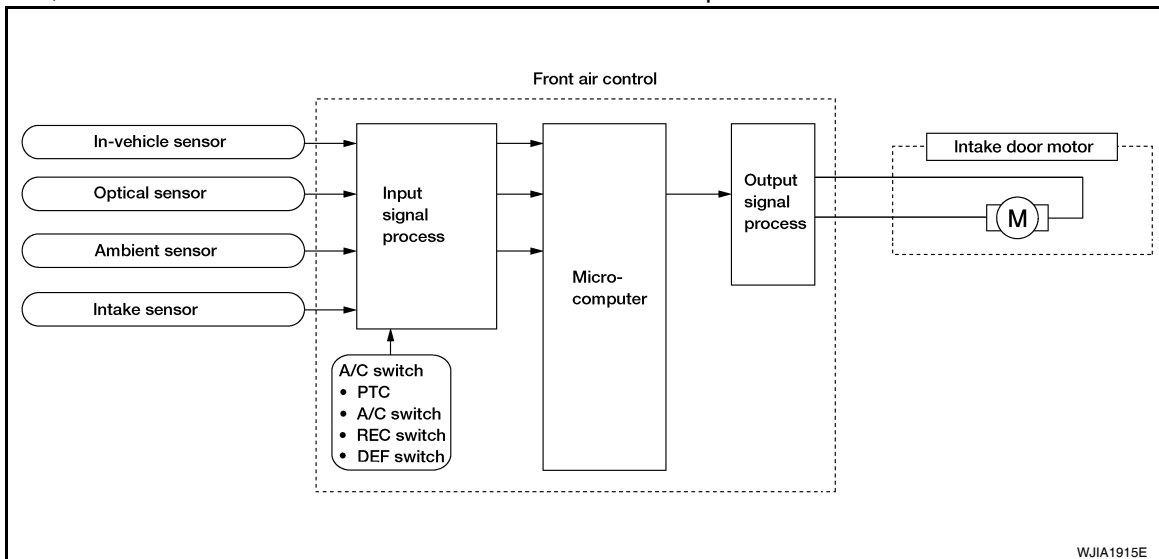

Intake Door Control Specification

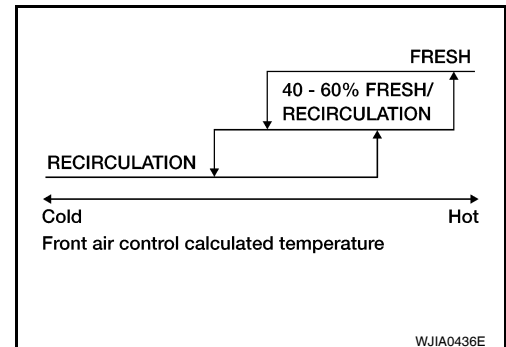

COMPONENT DESCRIPTION

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC


INTAKE DOOR MOTOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Intake door motor

The intake door motor is attached to the intake unit. It rotates so that air is drawn from inlets set by the front air control. Motor rotation is conveyed to a lever which activates the intake door.

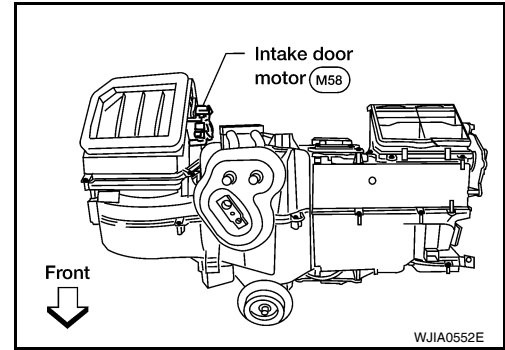






INFOID:000000003790039

Intake Door Motor Component Function Check

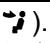INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - REC ()

1. Press the mode switch to vent mode ().
2. Press REC () switch. The REC () indicator should illuminate.
3. Press REC () switch again. The REC () indicator should go out.
4. Listen for intake door position change (you should hear blower sound change slightly).

Can a symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK INTAKE DOOR OPERATION

Check and verify intake door mechanism for smooth operation.

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair intake door mechanism.

5. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis to check for any codes. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

Are any self-diagnosis codes present?

- YES >> Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).
- NO >> GO TO 6.

6. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

INTAKE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

INFOID:000000003790040

Intake Door Motor Diagnosis Procedure

SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR


1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Check voltage between front air control harness connector M49 terminal 21 and terminal 22 while placing the HVAC system into self-diagnostic mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	21	22	Self-diagnostic mode	Battery voltage

Is the inspection result normal?

- OK >> GO TO 3.
NO >> GO TO 2.

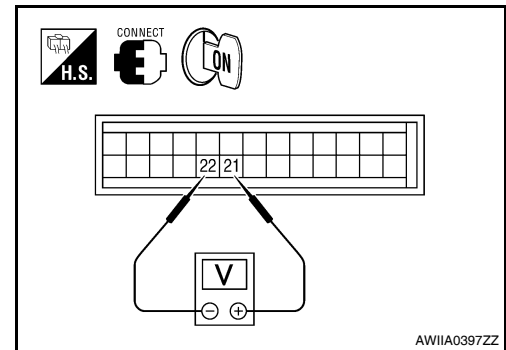


2. CHECK INTAKE DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 21, 22 and ground.

- 21 - Ground : Continuity should not exist.**
22 - Ground : Continuity should not exist.

Is the inspection result normal?

- OK >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

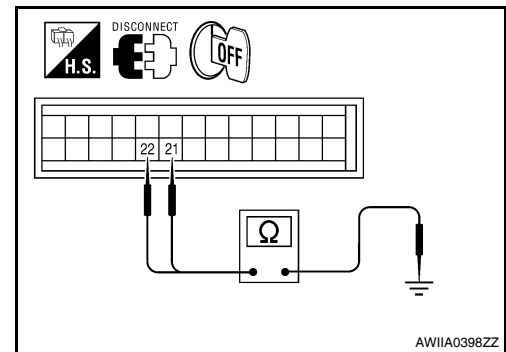


3. CHECK FRONT AIR CONTROL FOR GROUND AND POWER

1. Press the BACK button to back out of self-diagnostic mode.
2. Check voltage between front air control harness connector M49 terminal 21 and terminal 22 while placing the HVAC system into self-diagnostic mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	22	21	Self-diagnostic mode	Battery voltage

Is the inspection result normal?

- OK >> GO TO 4.
NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

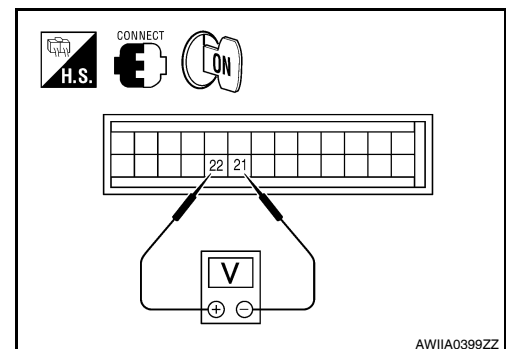

4. CHECK INTAKE DOOR MOTOR AND CIRCUITS FOR OPEN

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

INTAKE DOOR MOTOR

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 21 and terminal 22.

Continuity should exist.

Is the inspection result normal?

- OK >> Replace intake door motor. Refer to [VTL-18, "Removal and Installation"](#).
- NO >> GO TO 5.

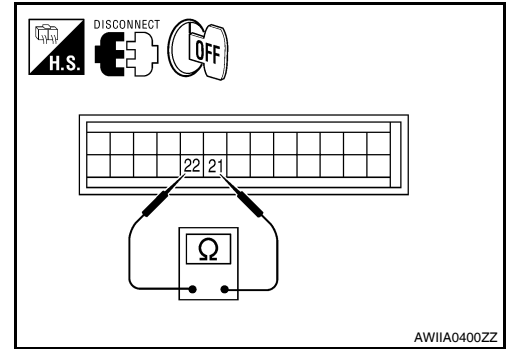

5. CHECK INTAKE DOOR MOTOR CIRCUITS FOR OPEN


1. Disconnect the intake door motor harness connector.
2. Check continuity between front air control harness connector M49 (A) terminal 21, 22 and the intake door motor harness connector M58 (B) terminal 1, 6.

21 - 6 : Continuity should exist.

22 - 1 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace intake door motor. Refer to [VTL-18, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

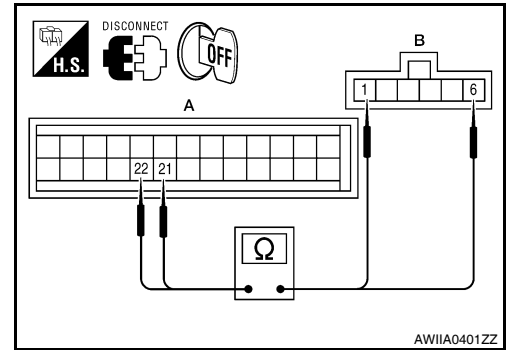

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

DEFROSTER DOOR MOTOR CIRCUIT

System Description

INFOID:000000003790041

SYSTEM DESCRIPTION

Component Parts


Defroster door control system components are:

- Front air control
- Defroster door motor
- PBR (Built into defroster door motor)
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation

The front air control determines defroster door position based on the position of the defroster switch. When the defroster switch is depressed, the defroster door motor rotates directing air to the defroster ducts. When any mode other than defroster is selected, the defroster motor rotates in the opposite direction closing off air flow to the defroster ducts.


In the AUTO mode, the front air control determines defroster door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature.

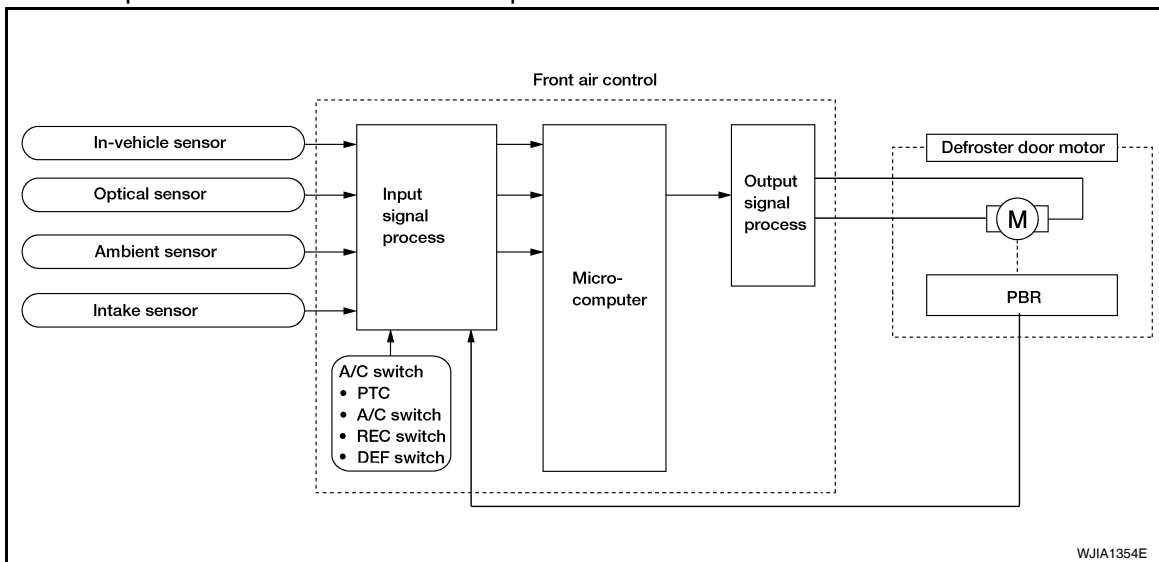

COMPONENT DESCRIPTION

Defroster door motor

The defroster door motor is attached to the front heater & cooling unit assembly. The front air control sends a voltage to rotate to the defroster door directing the air flow either to the defroster ducts, or to the floor ducts, depending on which way the voltage and ground are applied to the motor leads. Motor rotation is conveyed to a lever which activates the defroster door.

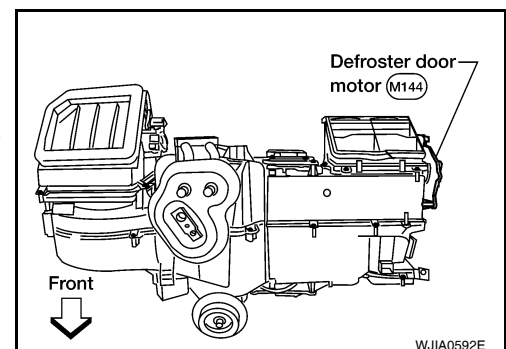

Defroster Door Motor Component Function Check

INFOID:000000003790042

INSPECTION FLOW

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



HAC

DEFROSTER DOOR MOTOR CIRCUIT

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - DEFROSTER DOOR

1. Select vent () mode.
2. Press the defrost switch (). Defroster indicator should illuminate.
3. Listen for defroster door position change (blower sound should change slightly).

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6. "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-5. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> SYSTEM OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK DEFROSTER DOOR MOTOR

Perform diagnostic procedure for defroster door motor. Refer to [HAC-41. "Defroster Door Motor Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair PBR circuit or replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).

5. CHECK DEFROSTER DOOR OPERATION

Check and verify defroster door mechanism for smooth operation.

Is the inspection result normal?

- YES >> Replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).
NO >> Repair defroster door mechanism.

Defroster Door Motor Diagnosis Procedure



INFOID:000000003790043

SYMPTOM:


- Defroster door does not change.
- Defroster door motor does not operate normally.

DIAGNOSTIC PROCEDURE FOR DEFROSTER DOOR MOTOR

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

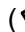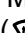1. Turn ignition switch ON.
2. Press the defroster switch ().
3. Check voltage between front air control harness connector M49 terminal 24 and terminal 23 and press the defroster switch () again.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	24	23	Press defroster switch	Battery voltage

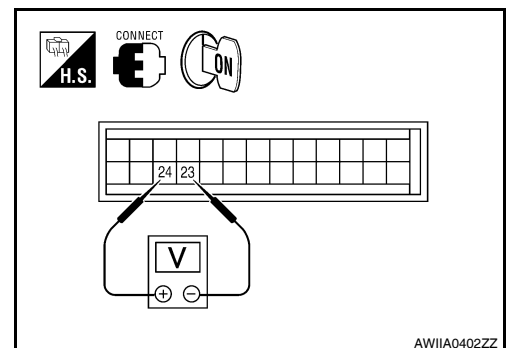

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

DEFROSTER DOOR MOTOR CIRCUIT

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

2. CHECK DEFROSTER DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 23, 24 and ground.


23 - Ground : Continuity should not exist.

24 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

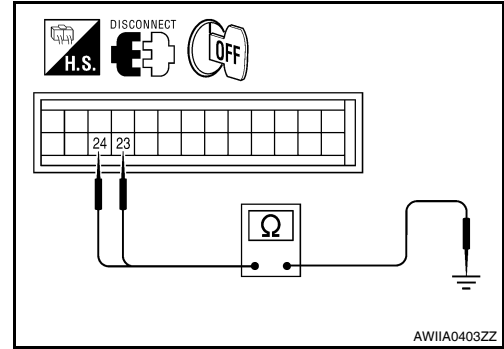

3. CHECK FRONT AIR CONTROL FOR GROUND AND POWER


1. Press the defroster switch (☐).
2. Check voltage between front air control harness connector M49 terminal 23 and terminal 24 and press the defroster switch (☐) again.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M49	23	24	Press defroster switch	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

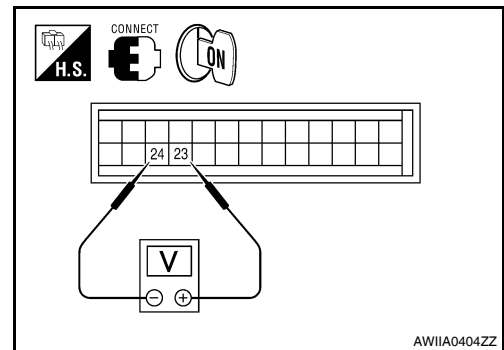

4. CHECK DEFROSTER DOOR MOTOR AND CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 23 and terminal 24.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

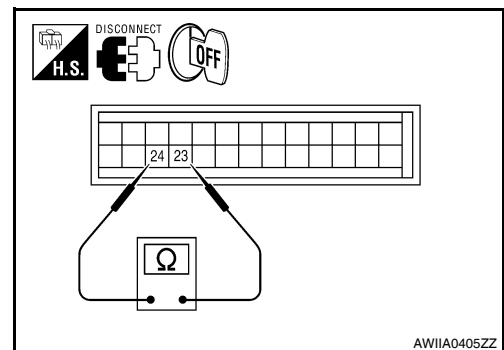

5. CHECK DEFROSTER DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the defroster door motor harness connector.
2. Check continuity between front air control harness connector M49 (A) terminal 23, 24 and the defroster door motor harness connector M144 (B) terminal 1, 6.


23 - 1 : Continuity should exist.

24 - 6 : Continuity should exist.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

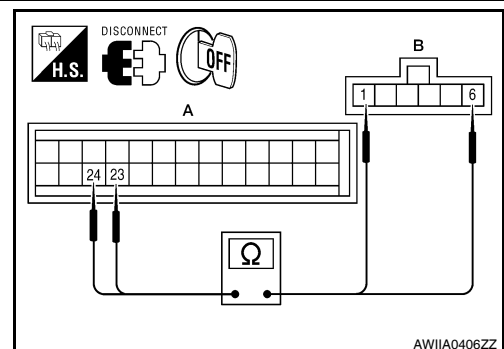

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

DEFROSTER DOOR MOTOR CIRCUIT

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M50, M49	28	3	5V

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 7.

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 terminal 28 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M50 (A) terminal 28 and M49 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
NO >> GO TO 9.

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN

1. Disconnect the defroster door motor harness connector.
2. Check continuity between defroster door motor harness connector M144 (B) terminal 3, 2 and front air control harness connector M50 (A) terminal 28, and M49 (C) terminal 3.





28 - 3 : Continuity should exist.

3 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

10. CHECK PBR FEEDBACK VOLTAGE

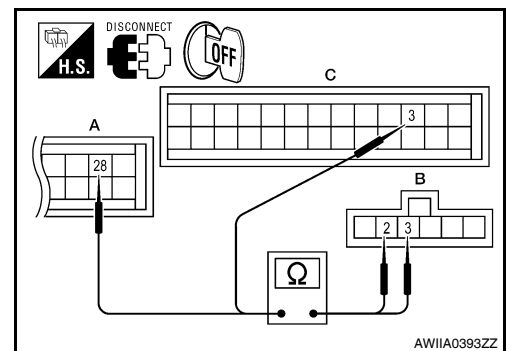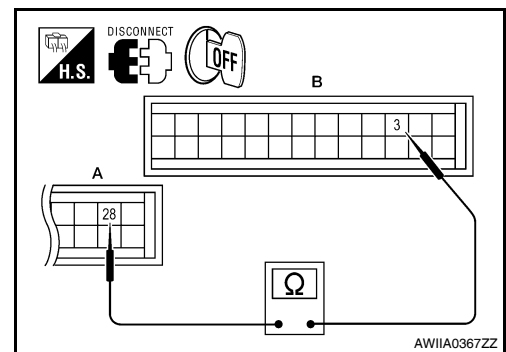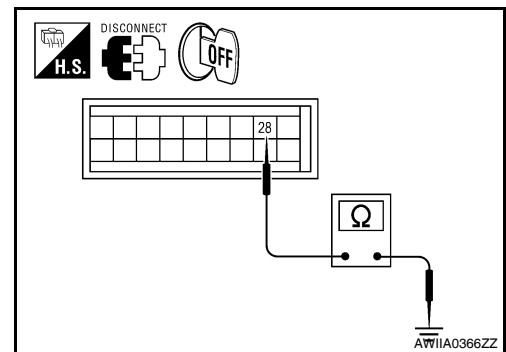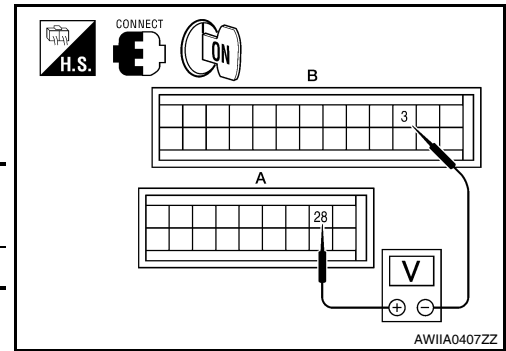

DEFROSTER DOOR MOTOR CIRCUIT

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 10 and ground while cycling defroster switch on and off.

Voltage : Approx. 1V - 4.5V

Is the inspection result normal?

- YES >> GO TO 12.
NO >> GO TO 11.

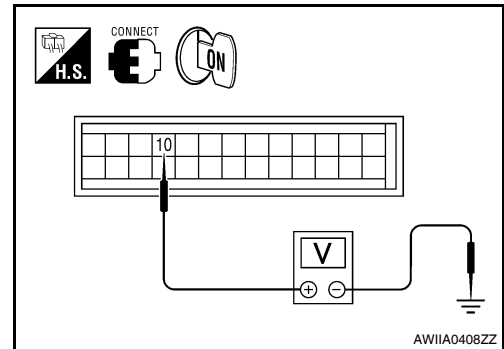


11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M49 terminal 10 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

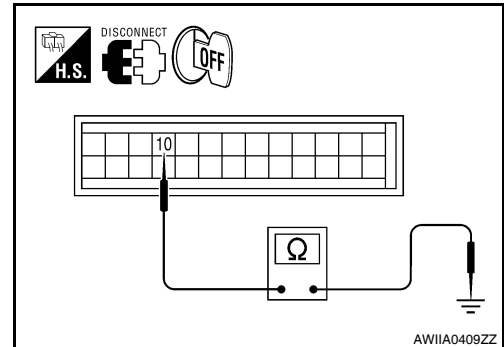


12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the defroster door motor harness connector and front air control harness connector.
3. Check continuity between defroster door motor harness connector M144 (B) terminal 4 and front air control harness connector M49 (A) terminal 10

Continuity should exist.

Is the inspection result normal?

- YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

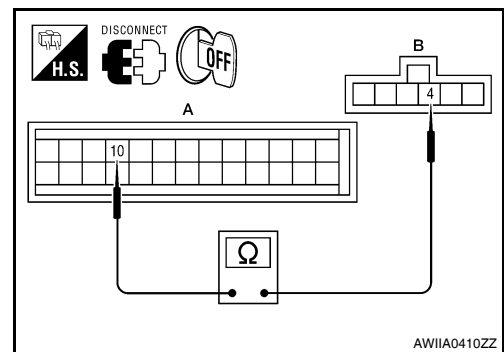

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

BLOWER MOTOR CONTROL SYSTEM

System Description

INFOID:000000003790044


SYSTEM DESCRIPTION

Component Parts

Blower speed control system components are:

- Front air control
- Variable blower control
- Front blower motor relay
- Front blower motor
- In-vehicle sensor
- Ambient sensor
- Optical sensor
- Intake sensor

System Operation

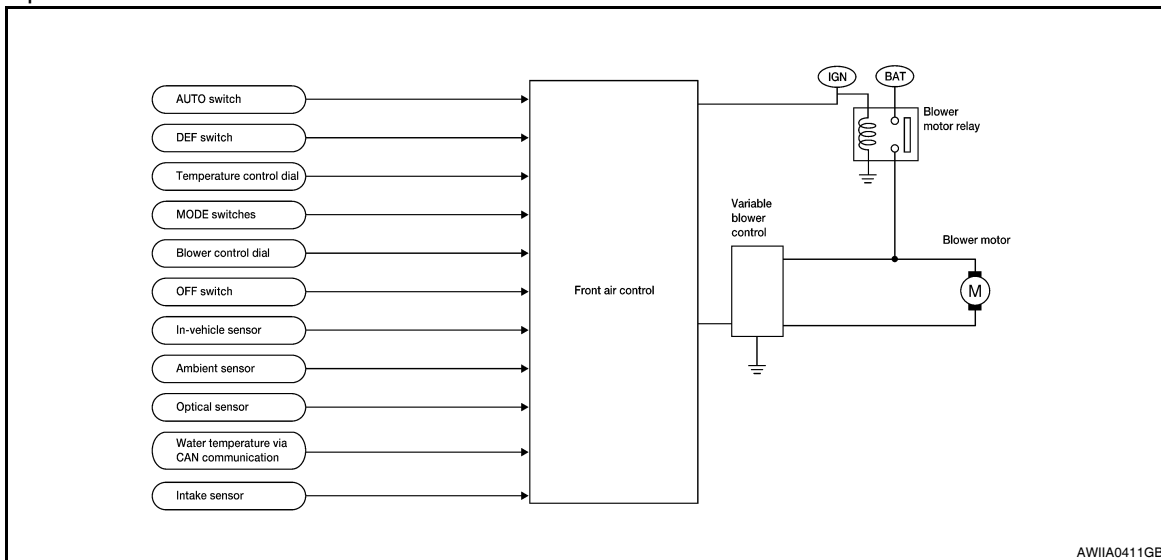

Automatic Mode

In the automatic mode, the blower motor speed is calculated by the front air control and variable blower control based on input from the in-vehicle sensor, optical sensor, intake sensor and ambient sensor, and potentiometer temperature control (PTC).

When the air flow is increased, the blower motor speed is adjusted gradually to prevent a sudden increase in air flow.

In addition to manual air flow control and the usual automatic air flow control, starting air flow control, low water temperature starting control and high passenger compartment temperature starting control are available.

Starting Blower Speed Control

Start up from cold soak condition (Automatic mode).

In a cold start up condition where the engine coolant temperature is below 50°C (122°F), the blower will not operate at blower speed 1 for a short period of time (up to 210 seconds). The exact start delay time varies depending on the ambient and engine coolant temperatures.

In the most extreme case (very low ambient temperature) the blower starting delay will be 210 seconds as described above. After the coolant temperature reaches 50°C (122°F), or the 210 seconds has elapsed, the blower speed will increase to the objective blower speed.

Start up from usual operating or hot soak condition (Automatic mode).

The blower will begin operation momentarily after the AUTO switch is pushed. The blower speed will gradually rise to the objective speed over a time period of 3 seconds or less (actual time depends on the objective blower speed).

Blower Speed Compensation - Sunload


BLOWER MOTOR CONTROL SYSTEM

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The speed will vary depending on the sunload. During conditions of low or no sunload, the blower operates at low speed. During high sunload conditions, the front air control causes the blower speed to increase.


Blower Speed Control Specification

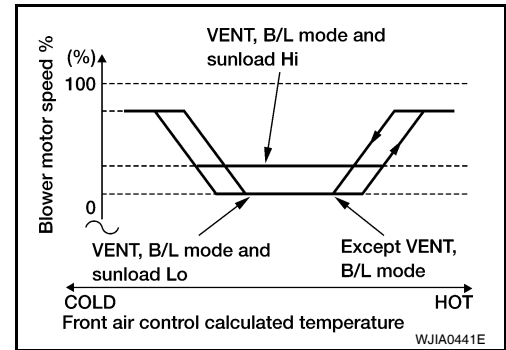

COMPONENT DESCRIPTION

Variable Blower Control

The variable blower control is located on the cooling unit. The variable blower control receives a gate voltage from the front air control to steplessly maintain the blower motor voltage in the 0 to 5 volt range (approx.).

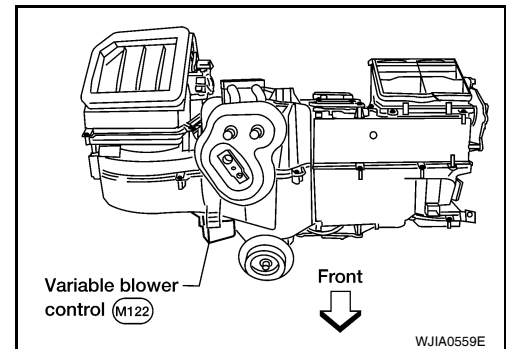

Front Blower Motor Component Function Check

INFOID:000000003790045

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - FRONT BLOWER

1. Rotate the blower control dial clockwise once. Blower motor should operate in low speed.
2. Rotate the blower control dial clockwise, and continue checking blower speed until all speeds are checked.

Can the symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. PERFORM FRONT AIR CONTROL SELF-DIAGNOSIS

Perform self-diagnosis to check for any codes. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

Are any self-diagnosis codes present?

BLOWER MOTOR CONTROL SYSTEM

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

YES >> Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).

NO >> GO TO 5.

5.CHECK BLOWER MOTOR OPERATION

Check and verify blower motor operates manually in all speeds.

Does blower motor operate in all speeds?

YES >> GO TO 6.

NO >> Refer to [HAC-48, "Front Blower Motor Diagnosis Procedure"](#).

6.CHECK ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT

Check engine coolant temperature sensor circuit. Refer to [EC-126, "Diagnosis Procedure"](#).

Is the inspection results normal?

YES >> GO TO 7.

NO >> Replace enging coolant temperature sensor.

7.RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#) .

NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).


Front Blower Motor Diagnosis Procedure

INFOID:000000003790046

SYMPTOM: Blower motor operation is malfunctioning.

DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning under starting blower speed control.

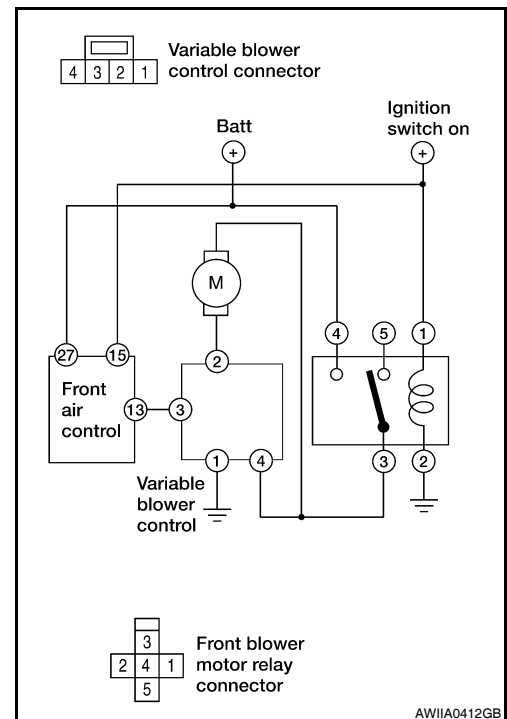

1.CHECK FUSES

Check 20A fuses [No. 24 and 27 (Located in the fuse and fusible link box)]. For fuse layout. Refer to [PG-74, "Terminal Arrangement"](#).

Fuses are good.

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 9.

BLOWER MOTOR CONTROL SYSTEM

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >


2. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector.
3. Turn ignition switch ON.
4. Press the A/C switch.
5. Rotate blower control dial to maximum speed.
6. Check voltage between front blower motor harness connector M62 terminal 2 and ground.

2 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 11.
NO >> GO TO 3.

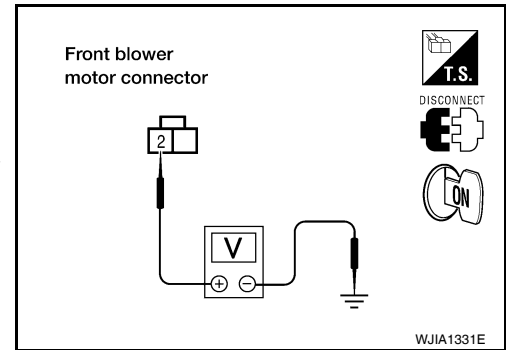


3. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor relay.
3. Check voltage between front blower motor relay harness connector M107 terminal 5 and ground.

5 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

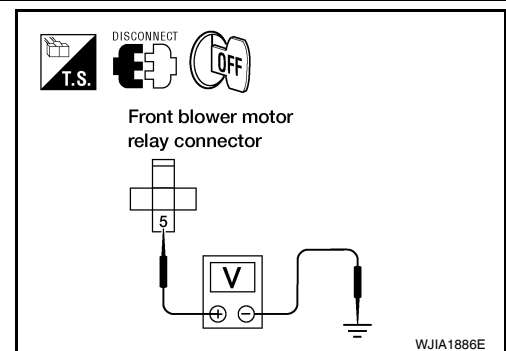

4. CHECK FRONT BLOWER MOTOR RELAY

Turn ignition switch OFF.

Check front blower motor relay. Refer to [HAC-51, "Front Blower Motor Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace front blower motor relay.


5. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) CIRCUIT FOR OPEN

Check continuity between front blower motor relay harness connector M107 terminal 3 and front blower motor harness connector M62 terminal 2.

3 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair harness or connector.

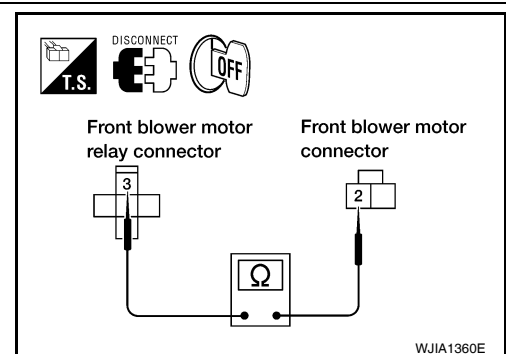

6. CHECK VARIABLE BLOWER CONTROL POWER SUPPLY CIRCUIT FOR OPEN

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

BLOWER MOTOR CONTROL SYSTEM

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Disconnect variable blower control harness connector.
2. Check continuity between front blower motor relay harness connector M107 (A) terminals 3 and variable blower control harness connector M122 (B) terminal 4.

3 - 4 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

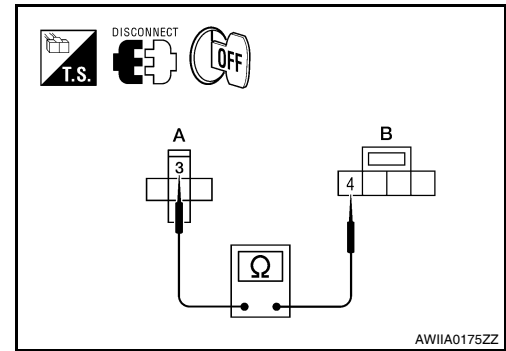


7. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

1. Disconnect front air control connector.
2. Check continuity between front air control harness connector M49 (B) terminal 13 and variable blower control harness connector M122 (A) terminal 3.

13 - 3 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair harness or connector.

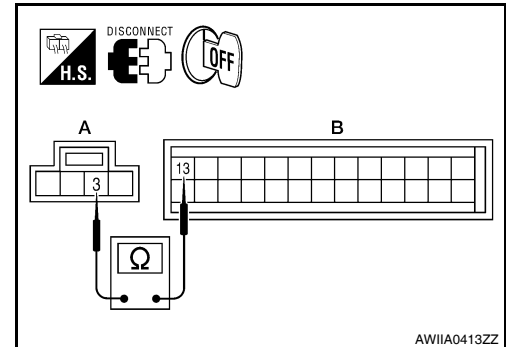


8. CHECK FRONT BLOWER MOTOR RELAY (COIL SIDE) POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front blower motor relay harness connector M107 terminal 2 and ground.

2 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 9.
NO >> Repair front blower motor ground circuit or connector.

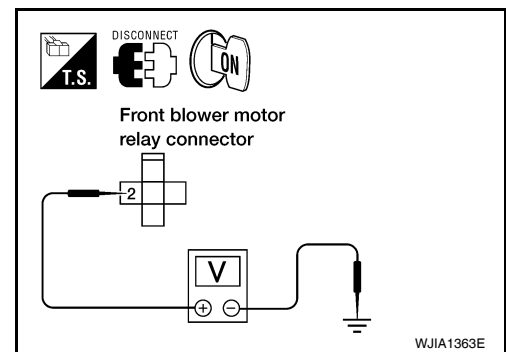

9. REPLACE FUSES

1. Replace fuses.
2. Activate the front blower motor.

Does the fuse blow?

- YES >> GO TO 10.
NO >> Inspection End.


10. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT FOR SHORT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector and variable blower control connector.
3. Check continuity between variable blower control harness connector M122 terminal 4 and ground.

4 - Ground : Continuity should not exist.

Is the inspection result normal?

- YES >> GO TO 11.
NO >> Repair harness or connector.

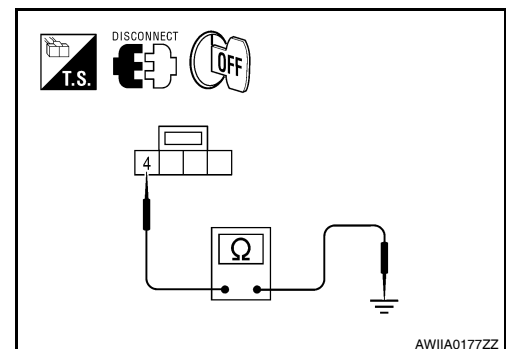

11. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

BLOWER MOTOR CONTROL SYSTEM

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >


1. Disconnect front air control connector.
2. Check continuity between front air control harness connector M49 (B) terminal 13 and variable blower control harness connector M122 (A) terminal 3.

13 - 3 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair harness or connector.

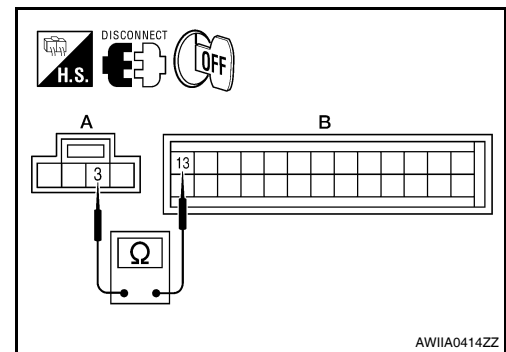

12. CHECK FRONT BLOWER MOTOR

Check front blower motor. Refer to [HAC-51, "Front Blower Motor Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace front blower motor. Refer to [VTL-12, "Removal and Installation"](#).

13. CHECK BLOWER MOTOR GROUND CIRCUIT


Check continuity between front blower motor harness connector M62 (B) terminal 1 and variable blower control harness connector M122 (A) terminal 2.

1 - 2 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

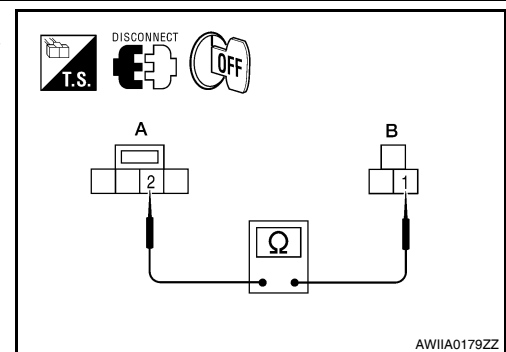

14. CHECK VARIABLE BLOWER CONTROL GROUND CIRCUIT


Check continuity between variable blower control harness connector M122 terminal 1 and ground.

1 - Ground : Continuity should exist.

Is the inspection result normal?

YES >> Replace variable blower control. Refer to [VTL-22, "Removal and Installation"](#).

NO >> Repair harness or connector.

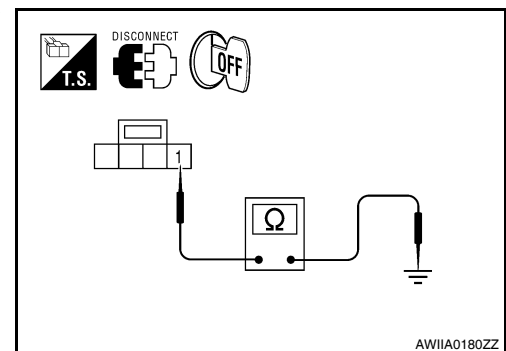

Front Blower Motor Component Inspection

INFOID:000000003790047


COMPONENT INSPECTION

BLOWER MOTOR CONTROL SYSTEM

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >


Check continuity between terminals 3, and 5 by supplying 12 volts and ground to coil side terminals 1 and 2 of relay.

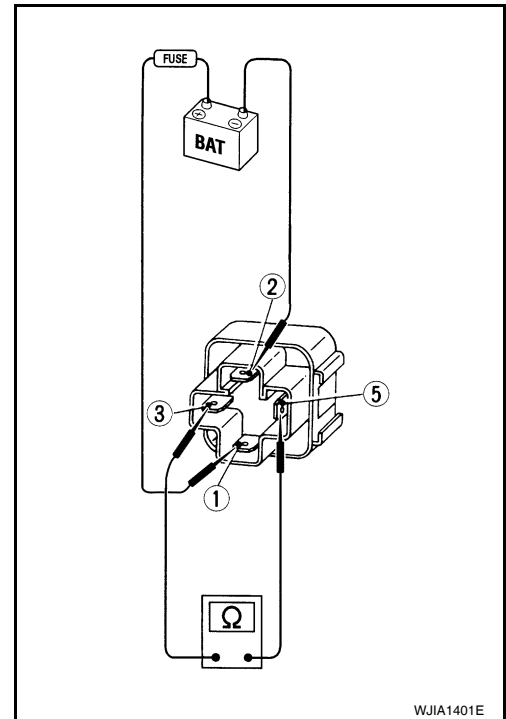

Front Blower Motor

Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the blower unit.
- Apply 12 volts to terminal 2 and ground to terminal 1 and verify that the motor operates freely and quietly.

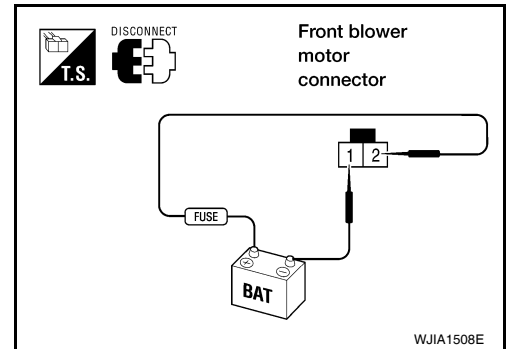

MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

MAGNET CLUTCH

System Description

INFOID:000000003790048

SYSTEM DESCRIPTION

The front air control controls compressor operation based on ambient and intake temperature and a signal from ECM.

Low Temperature Protection Control

The front air control will turn the compressor ON or OFF as determined by a signal detected by the intake sensor and the ambient sensor.

When intake air temperature is higher than the preset value, the compressor turns ON. The compressor turns OFF when intake air temperature is lower than the preset value. That preset value is dependent on the ambient temperature, refer to the following table.

Ambient temperature °C (°F)	Compressor ON intake temperature °C (°F)	Compressor OFF intake temperature °C (°F)
0 (32)	5.5 (42)	5.0 (41)
10 (50)	5.5 (42)	5.0 (41)
20 (68)	5.5 (42)	5.0 (41)
30 (86)	4.0 (39)	3.5 (38)
40 (104)	3.5 (38)	3.0 (37)
50 (122)	3.5 (38)	3.0 (37)

Magnet Clutch Component Function Check

INFOID:000000003790049

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - MAGNET CLUTCH

1. Turn ignition switch ON.
2. Press the A/C switch.
3. Press vent mode switch (❏).
4. Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6. "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-5. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis to check for any codes. Refer to [HAC-21. "Front Air Control Self-Diagnosis"](#).

Are any self-diagnosis codes present?

- YES >> Refer to [HAC-21. "Front Air Control Self-Diagnosis Code Chart"](#).
NO >> GO TO 5.

5. CHECK AMBIENT SENSOR

A
B
C
D
E
F
G
H

HAC

J
K
L
M
N
O
P

MAGNET CLUTCH

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

Check and verify ambient sensor circuit. Refer to [HAC-60. "Ambient Sensor Diagnosis Procedure"](#).

>> GO TO 6.

6. CHECK INTAKE SENSOR

Check and verify intake sensor circuit. Refer to [HAC-68. "Intake Sensor Diagnosis Procedure"](#).

>> GO TO 7.

7. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6. "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-5. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).


NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

Magnet Clutch Diagnosis Procedure

INFOID:000000003790050

DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

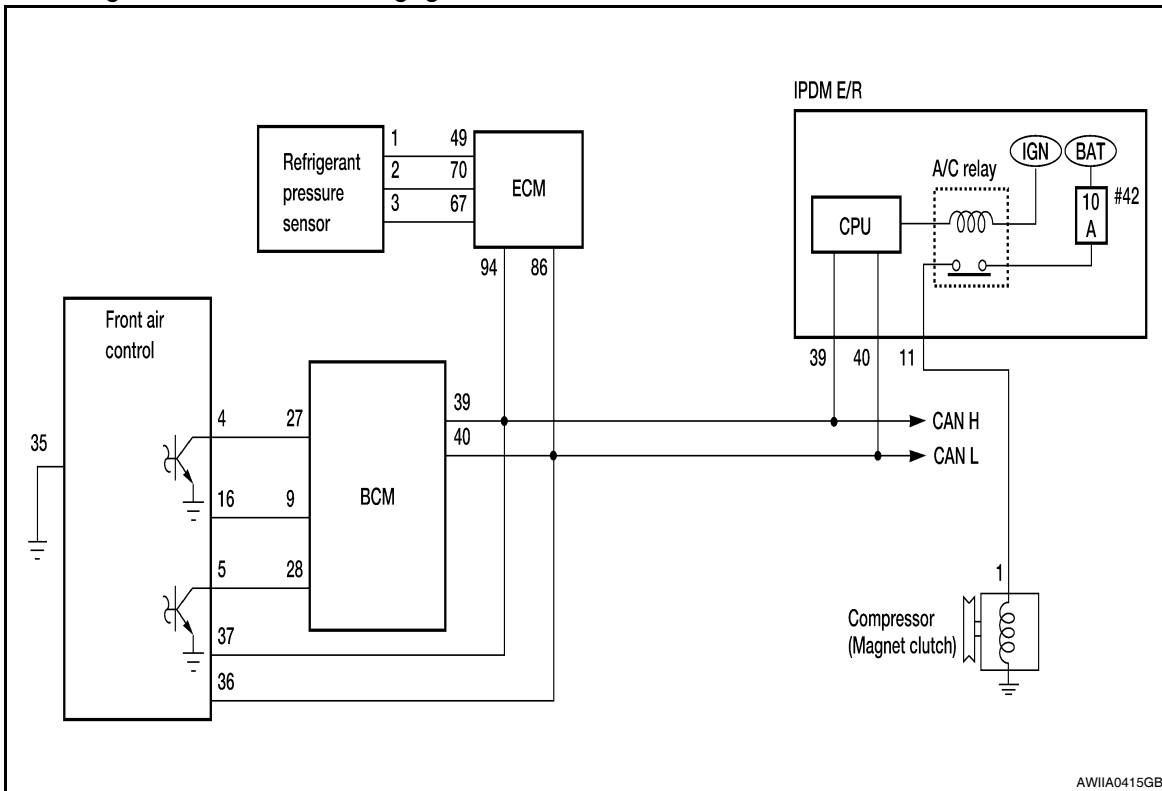

1. CHECK INTAKE AND AMBIENT SENSOR CIRCUITS

Check intake and ambient sensors. Refer to [HAC-21. "Front Air Control Self-Diagnosis"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> • Malfunctioning intake sensor. Refer to [HAC-68. "Intake Sensor Diagnosis Procedure"](#).
• Malfunctioning ambient sensor. Refer to [HAC-60. "Ambient Sensor Diagnosis Procedure"](#).

2. PERFORM AUTO ACTIVE TEST

Refer to [PCS-11. "Diagnosis Description"](#).

Does magnet clutch operate?

YES >> • WITH CONSULT-III
GO TO 5.
• WITHOUT CONSULT-III

MAGNET CLUTCH

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

GO TO 6.

NO >> Check 10A fuse (No. 42, located in IPDM E/R), and GO TO 3.

3. CHECK CIRCUIT CONTINUITY BETWEEN IPDM E/R AND COMPRESSOR


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and compressor (magnet clutch) connector.
3. Check continuity between IPDM E/R harness connector E119 terminal 11 and A/C compressor harness connector F3 terminal 1.

11 - 1 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

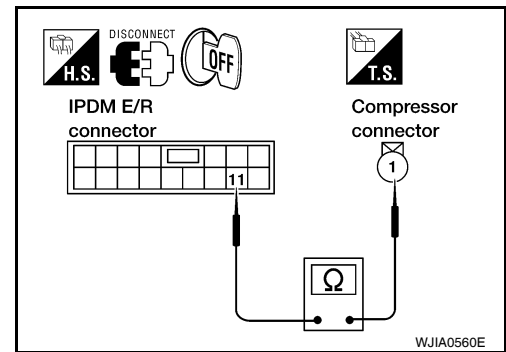


4. CHECK MAGNET CLUTCH CIRCUIT

Check for operation sound when applying battery voltage direct current to terminal.

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

NO >> Replace magnet clutch. Refer to [HA-34, "Removal and Installation for Compressor Clutch"](#).

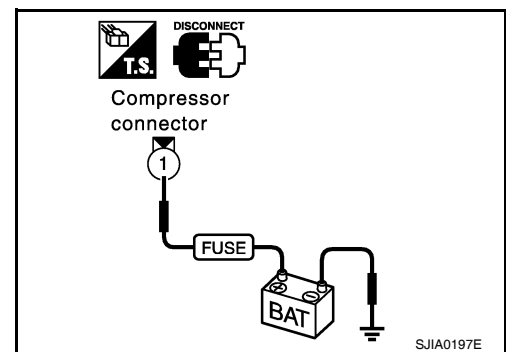

5. CHECK BCM INPUT (COMPRESSOR ON) SIGNAL

Check compressor ON/OFF signal. Refer to [HAC-17, "CONSULT-III Function \(HVAC\)"](#).

A/C SW ON : COMP ON SIG ON

A/C SW OFF : COMP ON SIG OFF

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 6.

6. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect BCM connector and front air control connector.
3. Check continuity between BCM harness connector M18 (A) terminal 27 and front air control harness connector M49 (B) terminal 4.

27 - 4 Continuity should exist.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair harness or connector.

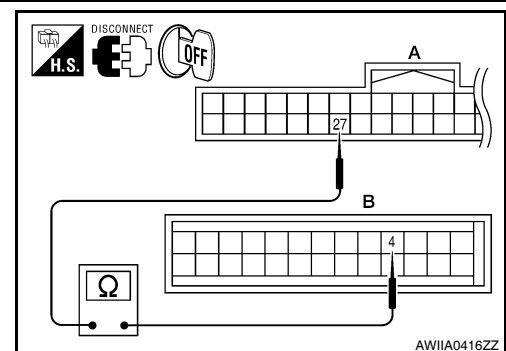

7. CHECK VOLTAGE FOR FRONT AIR CONTROL (A/C COMPRESSOR ON SIGNAL)


MAGNET CLUTCH

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 4 and ground.

Terminals			Condition	Voltage
(+)		(-)		
Front air control connector	Terminal No.			
M49	4	Ground	A/C switch: ON	Approx. 0V
			A/C switch: OFF	Approx. 5V

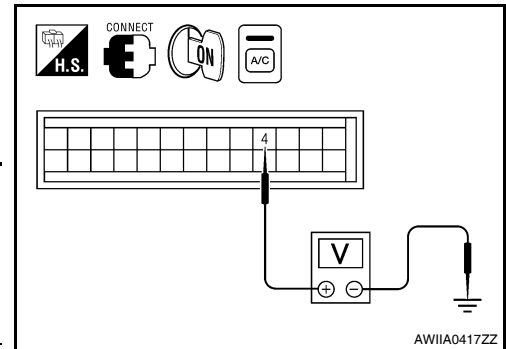

Is the inspection result normal?

YES >> GO TO 8.


NO-1 >> If the voltage is approx. 5V when A/C switch is ON, replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO-2 >> If the voltage is approx. 0V when A/C switch is OFF, replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

8. CHECK REFRIGERANT PRESSURE SENSOR

1. Start engine.
2. Check voltage between ECM harness connector F54 terminal 70 and ground.

Terminals			Condition	Voltage
(+)		(-)		
ECM connector	Terminal No.			
F54	70	Ground	A/C switch: ON	Approx. 0.36 - 3.88V

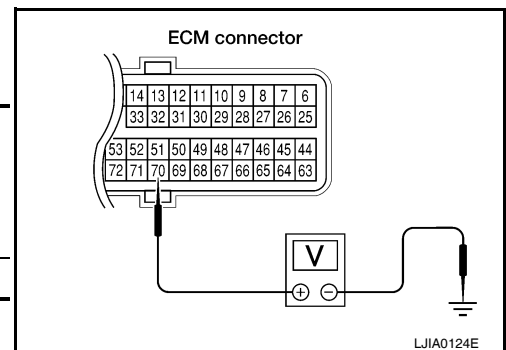

Is the inspection result normal?

YES >> GO TO 9.

NO >> Refer to [EC-412, "Diagnosis Procedure"](#).

9. CHECK BCM INPUT (FAN ON) SIGNAL

Check FAN ON/OFF signal. Refer to [HAC-17, "CONSULT-III Function \(HVAC\)"](#).

**FRONT BLOWER CONTROL : FAN ON SIG ON
DIAL ON**

**FRONT BLOWER CONTROL : FAN ON SIG OFF
DIAL OFF**

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 10.

10. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL

MAGNET CLUTCH

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM connector and front air control connector.
3. Check continuity between BCM harness connector M18 (A) terminal 28 and front air control harness connector M49 (B) terminal 5.


28 - 5

Continuity should exist.

Is the inspection result normal?


YES >> GO TO 11.

NO >> Repair harness or connector.

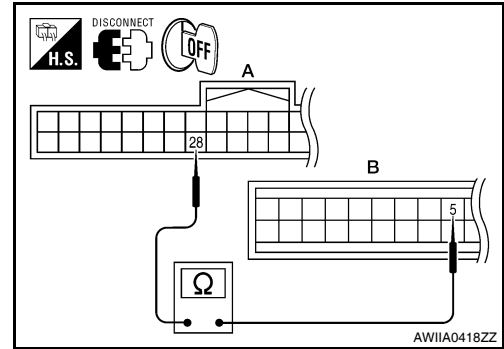

11. CHECK VOLTAGE FOR FRONT AIR CONTROL (FAN ON SIGNAL)

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M49 terminal 5 and ground.

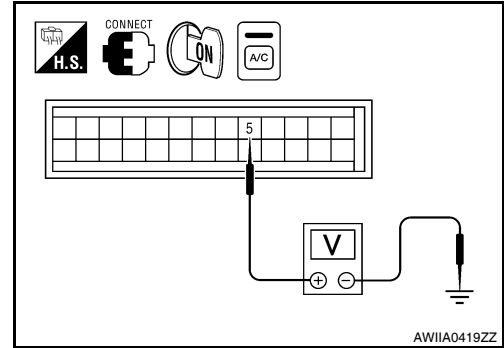

Terminals		(-)	Condition	Voltage
(+)	Terminal No.			
Front air control connector				
M49	5	Ground	A/C switch: ON Blower motor operates	Approx. 0V
			A/C switch: OFF	Approx. 5V

Is the inspection result normal?

YES >> GO TO 12.

NO-1 >> If the voltage is approx. 5V when blower motor is ON, replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO-2 >> If the voltage is approx. 0V when blower motor is OFF, replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

12. CHECK CAN COMMUNICATION

Check CAN communication. Refer to [LAN-4, "System Description"](#).

- BCM – ECM
- ECM – IPDM E/R
- ECM – Front air control

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace malfunctioning part(s).

WATER VALVE CIRCUIT

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

WATER VALVE CIRCUIT


Description

INFOID:000000003790051

COMPONENT DESCRIPTION

Water Valve

The water valve (1) cuts the flow of engine coolant to the heater core to allow for maximum cooling during A/C operation. It is controlled by the front air control.

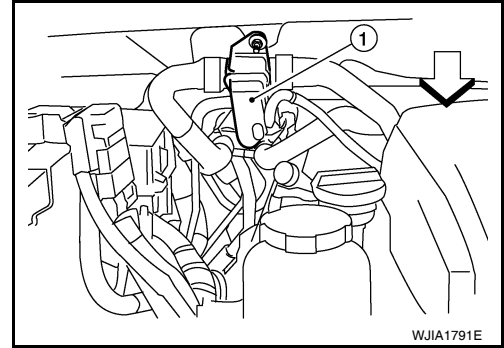

WJIA1791E

Water Valve Diagnosis Procedure


INFOID:000000003790052

DIAGNOSTIC PROCEDURE FOR WATER VALVE

1. CHECK WATER VALVE POWER AND GROUND CIRCUITS

1. Disconnect water valve connector F68.
2. Turn ignition switch ON.
3. Rotate temperature control dial (driver) to 32°C (90°F).
4. Check voltage between water valve harness connector F68 terminal 1 and terminal 2 while rotating temperature control dial (driver) to 16°C (60°F).

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Water valve: F68	2	1	Rotate temperature control dial	Battery voltage

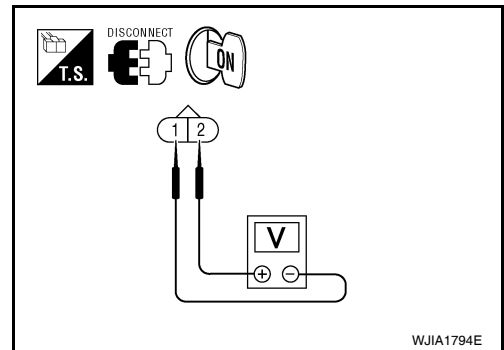

WJIA1794E

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.


2. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M50.
3. Check continuity between water valve harness connector F68 (A) terminal 2 and front air control harness connector M50 (B) terminal 42.

2 - 42 : Continuity should exist.

4. Check continuity between water valve harness connector F68 terminal 2 and ground.

2 - Ground : Continuity should not exist.

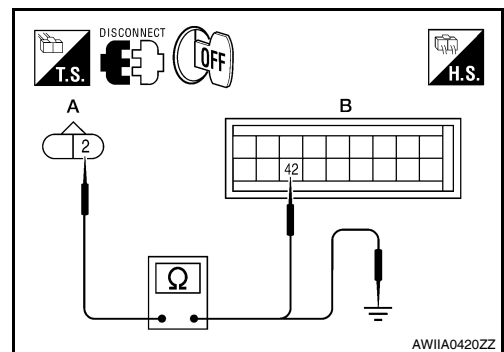

AW1IA0420ZZ

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
NO >> Repair harness or connector.

3. CHECK WATER VALVE POWER AND GROUND CIRCUITS

WATER VALVE CIRCUIT

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Rotate temperature control dial (driver) to 16°C (60°F).
2. Check voltage between water valve harness connector F68 terminal 1 and terminal 2 while rotating temperature control dial (driver) to 32°C (90°F).

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Water valve: F68	1	2	Rotate temperature control dial	Battery voltage

Is the inspection result normal?

- YES >> Replace the water valve.
 NO >> GO TO 4.

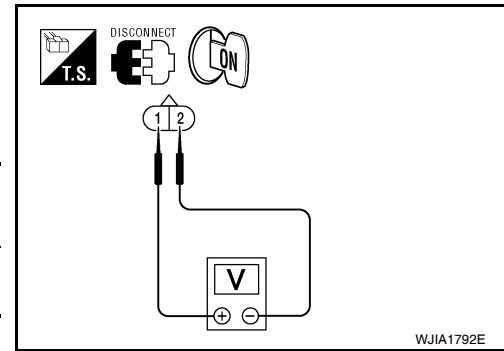


4. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M50.
3. Check continuity between water valve harness connector F68 (A) terminal 1 and front air control harness connector M50 (B) terminal 41.

1 - 41 : Continuity should exist.

4. Check continuity between water valve harness connector F68 (A) terminal 1 and ground.

1 - Ground : Continuity should not exist.

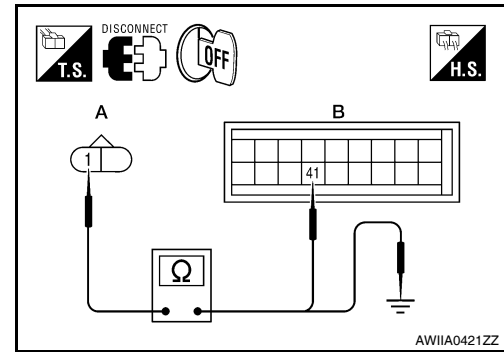

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AMBIENT SENSOR


Component Description

INFOID:000000003790053

COMPONENT DESCRIPTION

Ambient Sensor

The ambient sensor (1) is attached on the radiator core support (left side). It detects ambient temperature and converts it into a value which is then input into the front air control.

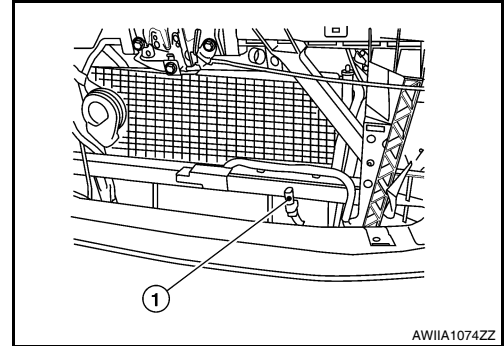

AMBIENT TEMPERATURE INPUT PROCESS

The front air control includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the front air control function. It only allows the front air control to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.


This prevents constant adjustments due to momentary conditions, such as stopping after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front grille area, location of the ambient sensor.

Ambient Sensor Diagnosis Procedure

INFOID:000000003790054

DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR

SYMPTOM: Ambient sensor circuit is open or shorted. Using the Consult-III, DTC B257B or B257C is displayed. Without Consult-III, code 40 or 41 is indicated on front air control as a result of conducting the front air control self-diagnosis.

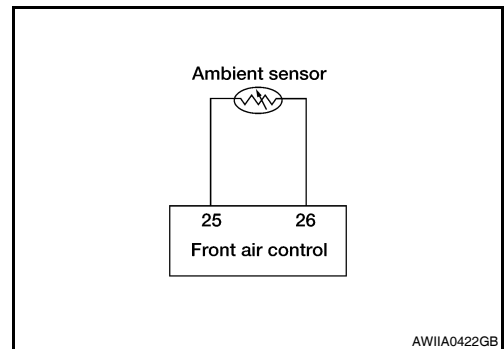


1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR AND GROUND

1. Disconnect ambient sensor connector.
2. Turn ignition switch ON.
3. Check voltage between ambient sensor harness connector E1 terminal 1 and ground.

1 - Ground : Approx. 5V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

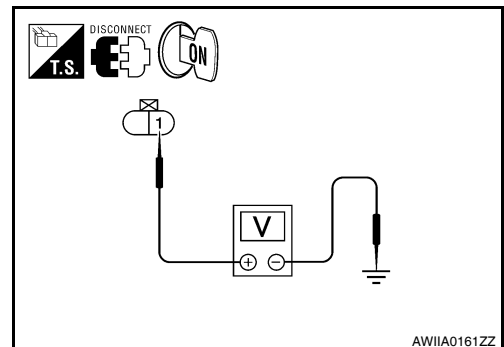

2. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND FRONT AIR CONTROL

AMBIENT SENSOR

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between ambient sensor harness connector E1 (B) terminal 2 and front air control harness connector M49 (A) terminal 26.

2 - 26 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

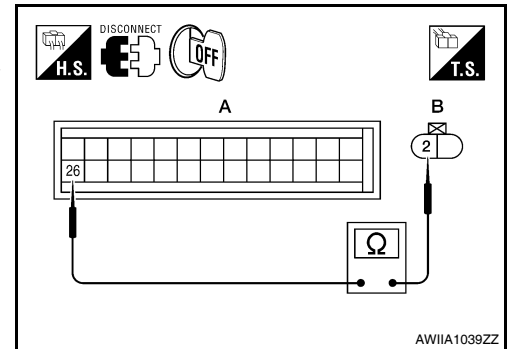

3. CHECK AMBIENT SENSOR

Check the ambient sensor circuit. Refer to [HAC-61, "Ambient Sensor Component Inspection"](#).

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
2. GO TO [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
NO >> 1. Replace ambient sensor. Refer to [HA-45, "Removal and Installation"](#).
2. GO TO [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.


4. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between ambient sensor harness connector E1 (B) terminal 1 and front air control harness connector M49 (A) terminal 25.

1 - 25 : Continuity should exist.

4. Check continuity between ambient sensor harness connector E1 (B) terminal 1 and ground.

1 - Ground : Continuity should not exist.

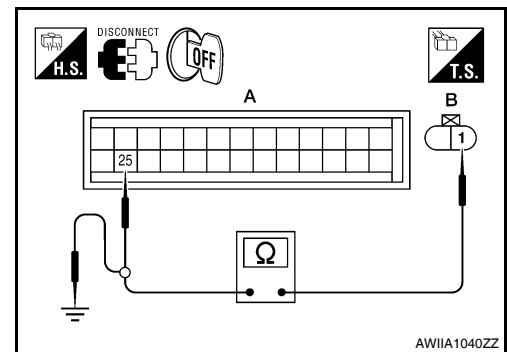

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
2. GO TO [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
NO >> Repair harness or connector.

Ambient Sensor Component Inspection

INFOID:000000003790055

COMPONENT INSPECTION

Ambient Sensor


AMBIENT SENSOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

After disconnecting ambient sensor (1) connector E1, measure resistance between terminals 1 and 2 at sensor component side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

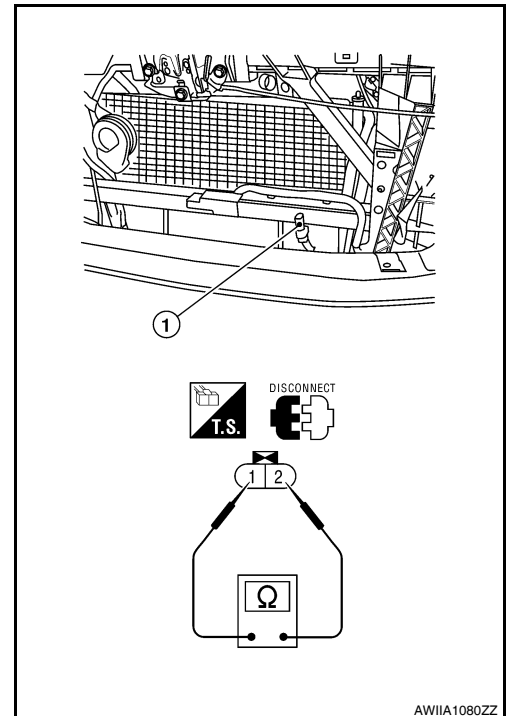

AWIIA1080ZZ

If NG, replace ambient sensor. Refer to [HA-45. "Removal and Installation"](#).

IN-VEHICLE SENSOR



Component Description

INFOID:000000003790056

COMPONENT DESCRIPTION

In-vehicle Sensor

The in-vehicle sensor (1) is located on the lower instrument panel LH. It converts variations in temperature of passenger compartment air (drawn in through the integrated fan) into a resistance value. It is then input into the front air control.

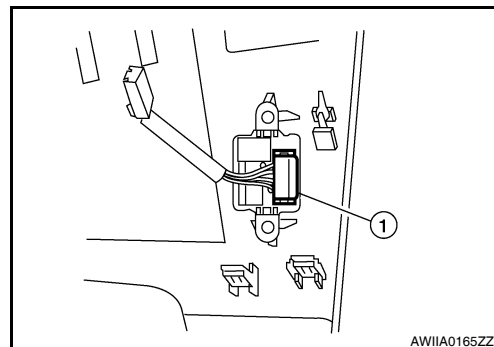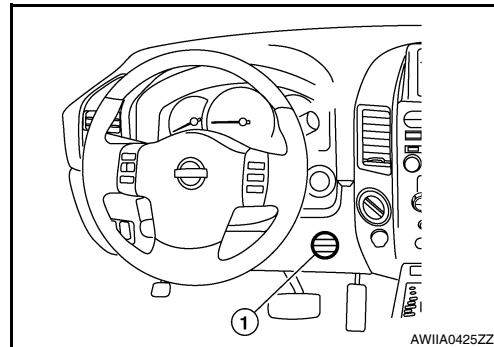


In-Vehicle Sensor Diagnosis Procedure

INFOID:000000003790057

DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR

SYMPTOM: In-vehicle sensor circuit is open or shorted. Using the CONSULT-III, DTC B2578 or B2579 is displayed. Without a CONSULT-III, code 30, 31 is indicated on front air control as a result of conducting self-diagnosis.

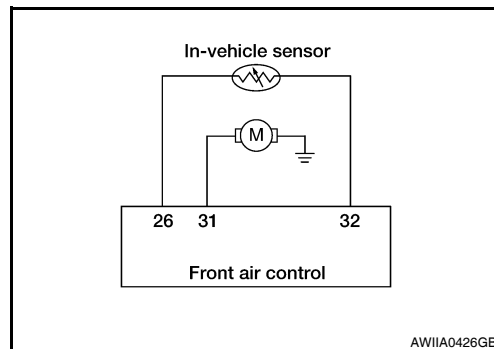

1. CHECK IN-VEHICLE SENSOR CIRCUIT

Is self-diagnosis DTC B2578 or B2579 (with CONSULT-III) or code 30, 31 (without CONSULT-III) present?

YES or NO?

YES >> GO TO 6.

NO >> GO TO 2.

2. CHECK VOLTAGE BETWEEN IN-VEHICLE SENSOR AND GROUND

IN-VEHICLE SENSOR

[AUTOMATIC AIR CONDITIONER]


< COMPONENT DIAGNOSIS >

1. Disconnect in-vehicle sensor connector.
2. Turn ignition switch ON.
3. Check voltage between in-vehicle sensor harness connector M32 terminal 4 and ground.

4 - Ground : **Approx. 5V.**

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 5.

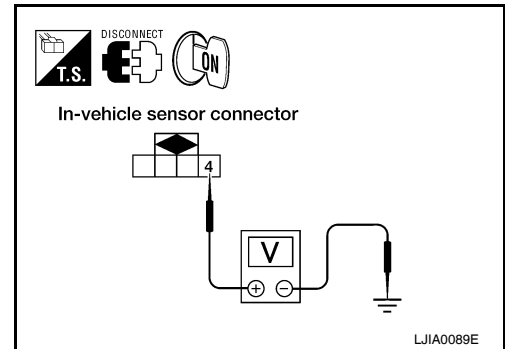


3. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector M49.
3. Check continuity between in-vehicle sensor harness connector M32 (B) terminal 1 and front air control harness connector M49 (A) terminal 26.

1 - 26 : **Continuity should exist.**

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

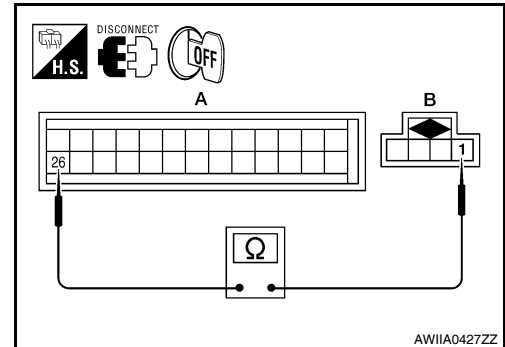

4. CHECK IN-VEHICLE SENSOR

Check in-vehicle sensor. Refer to [HAC-65, "In-Vehicle Sensor Component Inspection"](#).

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
2. Go to [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
NO >> 1. Replace in-vehicle sensor. Refer to [VTL-9, "Removal and Installation"](#).
2. Go to [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.

5. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between in-vehicle sensor harness connector M32 (B) terminal 4 and front air control harness connector M50 (A) terminal 32.


4 - 32 : **Continuity should exist.**

4. Check continuity between in-vehicle sensor harness connector M32 (B) terminal 4 and ground.

4 - Ground : **Continuity should not exist.**

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
2. Go to [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
NO >> Repair harness or connector.

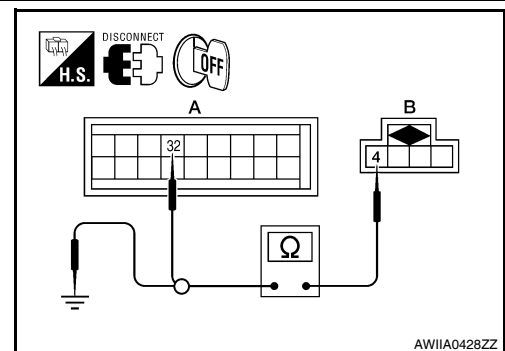

6. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR MOTOR AND FRONT AIR CONTROL (SELF-DIAGNOSIS CODES 30, 31, 44, 46 OR DTC B2578, B2579)

IN-VEHICLE SENSOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]


1. Turn ignition switch OFF.
2. Disconnect front air control connector and in-vehicle sensor connector.
3. Check continuity between in-vehicle sensor harness connector M32 (B) terminal 3 and front air control harness connector M50 (A) terminal 31.

3 - 31 : Continuity should exist.

4. Check continuity between in-vehicle sensor harness connector M32 (B) terminal 3 and ground.

2 - Ground : Continuity should exist.

3 - Ground : Continuity should not exist.

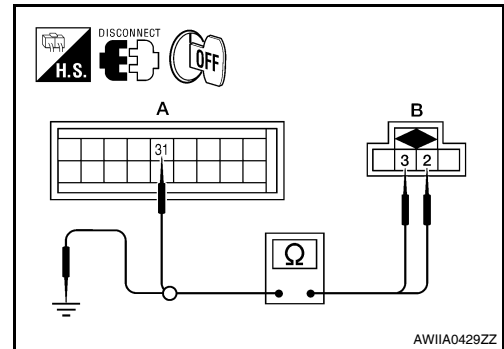

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 2. Go to [HAC-21, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
- NO >> Repair harness or connector.

In-Vehicle Sensor Component Inspection


INFOID:000000003790058

COMPONENT INSPECTION

In-vehicle Sensor

After disconnecting in-vehicle sensor connector M32, measure resistance between terminals 1 and 4 at sensor component side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	21.40
-10 (14)	16.15
-5 (23)	12.29
0 (32)	9.41
5 (41)	7.27
10 (50)	5.66
15 (59)	4.45
20 (68)	3.51
25 (77)	2.79
30 (86)	2.24
35 (95)	1.80
40 (104)	1.45
45 (113)	1.18

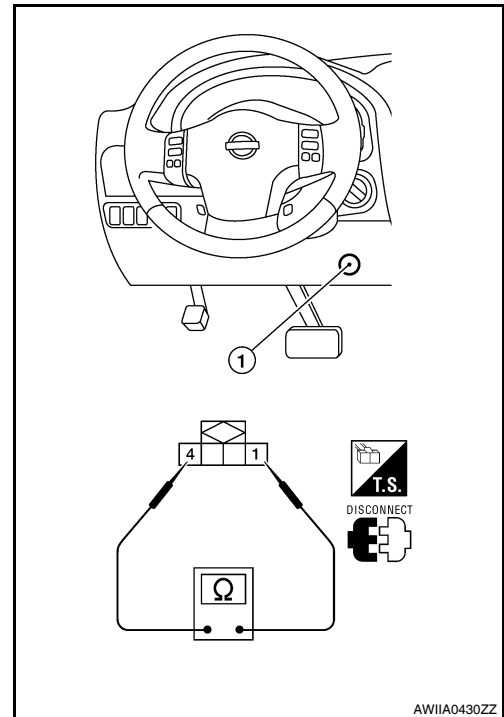

If NG, replace in-vehicle sensor. Refer to [VTL-9, "Removal and Installation"](#).


OPTICAL SENSOR

Component Description

INFOID:000000003790059

COMPONENT DESCRIPTION

The optical sensor (1) is located in the center of the defroster grille. It detects sunload entering through windshield by means of a photo diode. The sensor converts the sunload into a current value which is then input into the front air control.

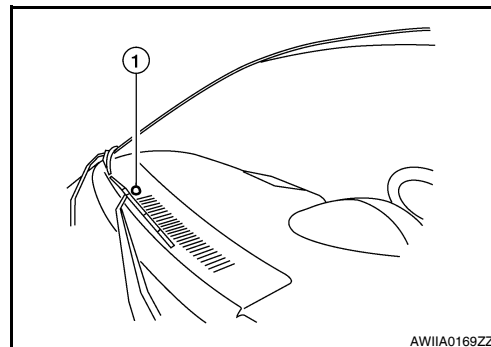

OPTICAL INPUT PROCESS

The front air control includes a processing circuit which averages the variations in detected sunload over a period of time. This prevents adjustments in the ATC system operation due to small or quick variations in detected sunload.


For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the optical sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the ATC system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.

Optical Sensor Diagnosis Procedure

INFOID:000000003790060

DIAGNOSTIC PROCEDURE FOR OPTICAL SENSOR

SYMPTOM: Optical sensor circuit is open or shorted. Using the CONSULT-III, DTC B257F or B2580 is displayed. Without a CONSULT-III, code 50 or 52 is indicated on front air control as a result of conducting self-diagnosis.

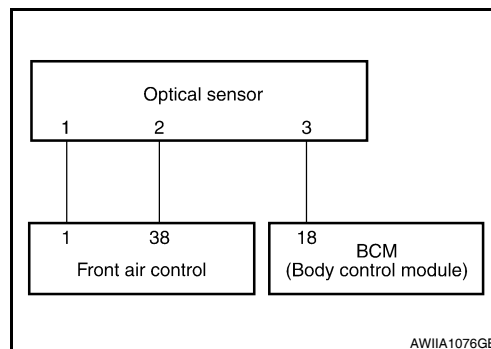


1. CHECK CIRCUIT CONTINUITY BETWEEN OPTICAL SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector and optical sensor connector.
3. Check continuity between optical sensor harness connector M302 (B) terminals 1 and 2 and front air control harness connector M50 (C) terminal 38 and M49 (A) terminal 1.

1 - 1 : Continuity should exist.

2 - 38 : Continuity should exist.

4. Check continuity between optical sensor harness connector M302 (B) terminal 1 and 2 and ground.

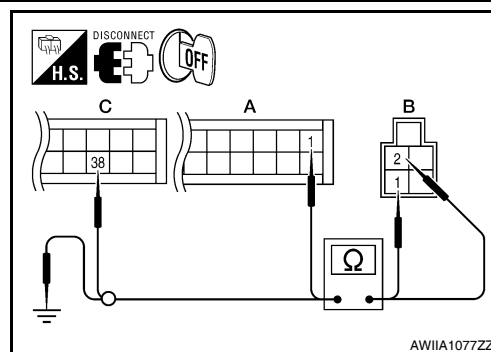

OPTICAL SENSOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

1, 2 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK CIRCUIT CONTINUITY BETWEEN OPTICAL SENSOR AND BCM

1. Disconnect BCM connector.
2. Check continuity between optical sensor harness connector M302 (B) terminal 3 and BCM harness connector M18 (A) terminal 18.

3 - 18 : Continuity should exist.


3. Check continuity between optical sensor harness connector M302 (B) terminal 4 and ground.

3 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace optical sensor. Refer to [VTL-10. "Removal and Installation"](#).

NO >> Repair harness or connector.

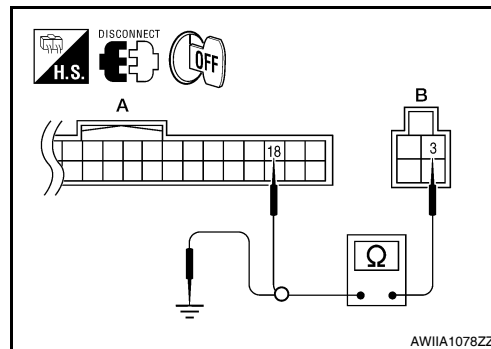

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

INTAKE SENSOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

INTAKE SENSOR


System Description

INFOID:000000003790061

COMPONENT DESCRIPTION

Intake Sensor

The intake sensor is located on the heater & cooling unit assembly. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the front air control.

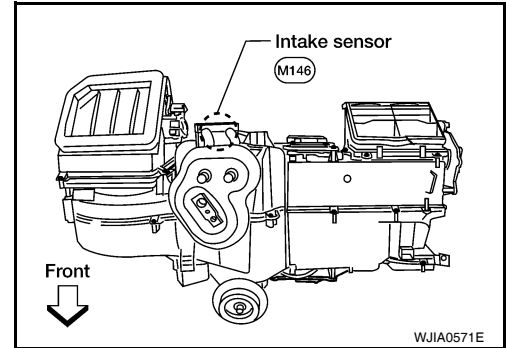


Intake Sensor Diagnosis Procedure

INFOID:000000003790062

DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted. Using the CONSULT-III, DTC B2581 or B2582 is displayed. Without a CONSULT-III, code 56 or 57 is indicated on front air control as a result of conducting self-diagnosis.

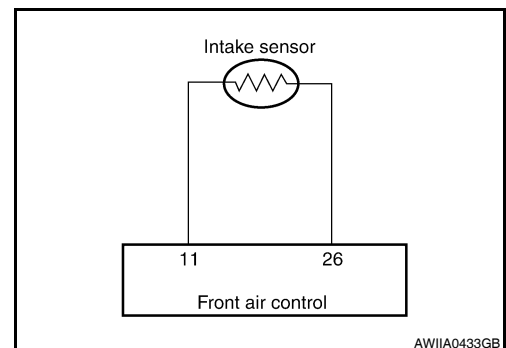


1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND

1. Disconnect intake sensor connector.
2. Turn ignition switch ON.
3. Check voltage between intake sensor harness connector M146 terminal 2 and ground.

2 - Ground : Approx. 5V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

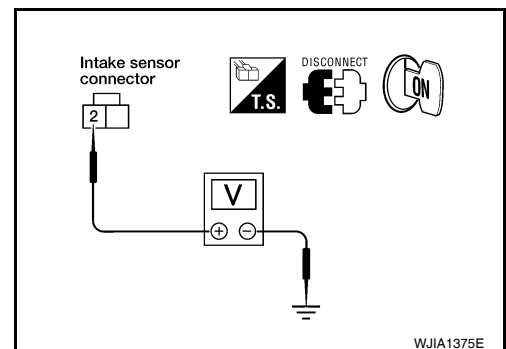


2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between intake sensor harness connector M146 (B) terminal 1 and front air control harness connector M49 (A) terminal 26.

1 - 26 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

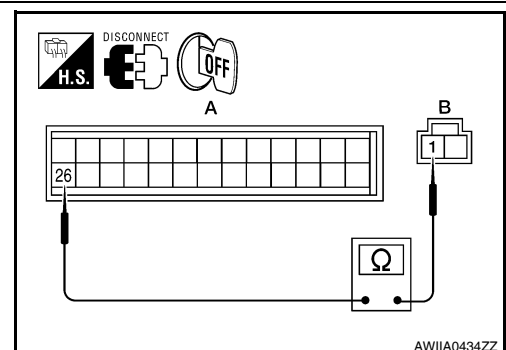

INTAKE SENSOR

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

3. CHECK INTAKE SENSOR

Check intake sensor. Refer to [HAC-69. "Intake Sensor Component Inspection"](#).

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 2. Go to [HAC-21. "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
- NO >> 1. Replace intake sensor. Refer to [VTL-11. "Removal and Installation"](#).
 2. Go to [HAC-21. "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.


4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

- Turn ignition switch OFF.
- Disconnect front air control connector.
- Check continuity between intake sensor harness connector M146 (B) terminal 2 and front air control harness connector M49 (A) terminal 11.

2 - 11 : Continuity should exist.

- Check continuity between intake sensor harness connector M146 (B) terminal 2 and ground.

2 - Ground : Continuity should not exist.

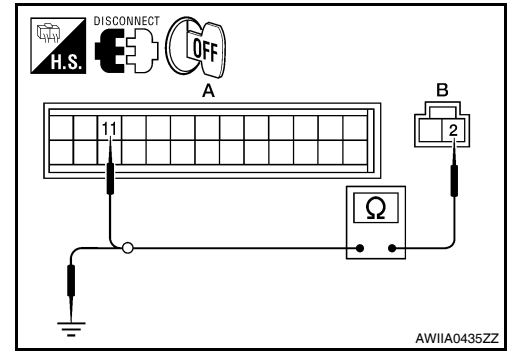

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 2. Go to [HAC-21. "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
- NO >> Repair harness or connector.

Intake Sensor Component Inspection

INFOID:000000003790063


HAC

COMPONENT INSPECTION

Intake Sensor

After disconnecting intake sensor connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	209.0
-10 (14)	160.0
-5 (23)	123.0
0 (32)	95.8
5 (41)	74.9
10 (50)	58.9
15 (59)	46.7
20 (68)	37.3
25 (77)	30.0
30 (86)	24.2
35 (95)	19.7
40 (104)	16.1
45 (113)	13.2

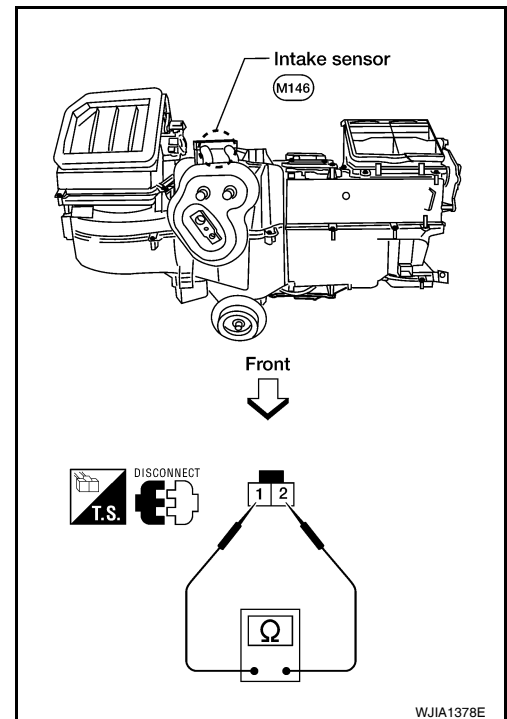

If NG, replace intake sensor. Refer to [VTL-11. "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

< COMPONENT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

Component Description

INFOID:000000003790064


COMPONENT DESCRIPTION

Front Air Control

The front air control has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motors, mode door motor, intake door motor, defroster door motor, blower motor and compressor are then controlled.


The front air control is unitized with control mechanisms. When the various switches and temperature dials are operated, data is input to the front air control.

Self-diagnostic functions are also built into the front air control to provide quick check of malfunctions in the auto air conditioner system.

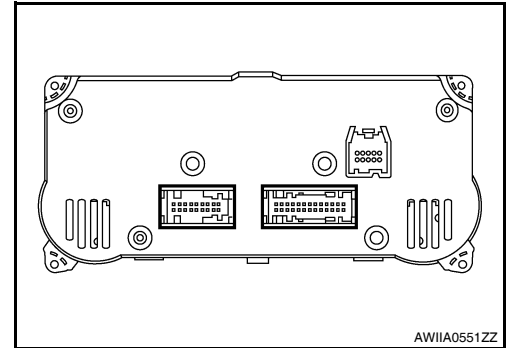

Potential Temperature Control (PTC)

There are two PTCs (driver and passenger) built into the front air control. They can be set at an interval of 0.5°C (1.0°F) in the 18°C (60°F) to 32°C (90°F) temperature range by rotating the temperature dial. The set temperature is displayed.

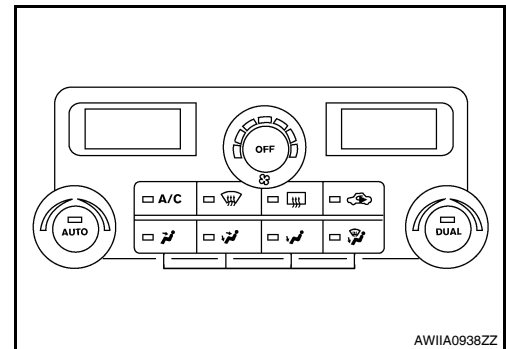

Front Air Control Component Function Check

INFOID:000000003790065

SYMPTOM: A/C system does not come on.

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - AUTO MODE

1. Press AUTO switch.
2. Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

Can a symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK POWER AND GROUND CIRCUIT

Check main power supply and ground circuit. Refer to [HAC-71, "Front Air Control Power and Ground Diagnosis Procedure"](#).

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

[AUTOMATIC AIR CONDITIONER]

< COMPONENT DIAGNOSIS >

Is the inspection result normal?

YES >> System OK.


NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

Front Air Control Power and Ground Diagnosis Procedure

INFOID:000000003790066

DIAGNOSTIC PROCEDURE FOR A/C SYSTEM


SYMPTOM: A/C system does not come on.

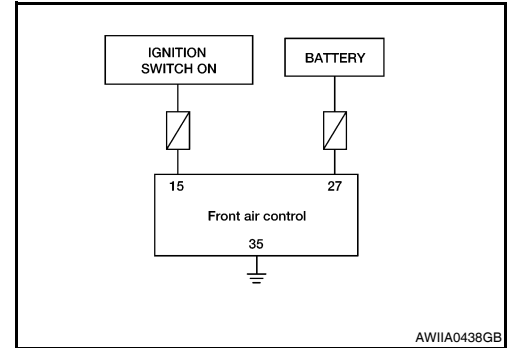

1. CHECK POWER SUPPLY CIRCUITS FOR FRONT AIR CONTROL

1. Turn ignition switch ON.
2. Check voltage between front air control harness connector M49 (B) terminal 15 and M50 (A) terminal 27, and ground.

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
front air control connector	Terminal No.				
M49	15	Ground	Approx. 0V	Approx. 0V	Battery voltage
M50	27		Battery voltage	Battery voltage	Battery voltage

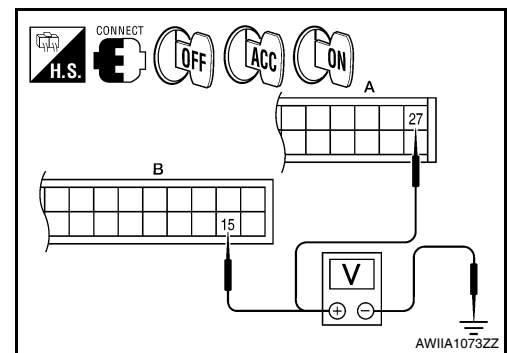

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check 10A fuses [Nos. 8 and 19, located in the fuse block (J/B)]. Refer to [PG-74. "Terminal Arrangement"](#).

- If fuses are OK, check harness for open circuit. Repair or replace as necessary.
- If fuses are NG, replace fuse and check harness for short circuit. Repair or replace as necessary.

2. CHECK GROUND CIRCUIT FOR FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect front air control connectors.
3. Check continuity between front air control harness connector M50 terminal 35 and ground.

35 - Ground : Continuity should exist.

Is the inspection result normal?

OK >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

NG >> Repair harness or connector.

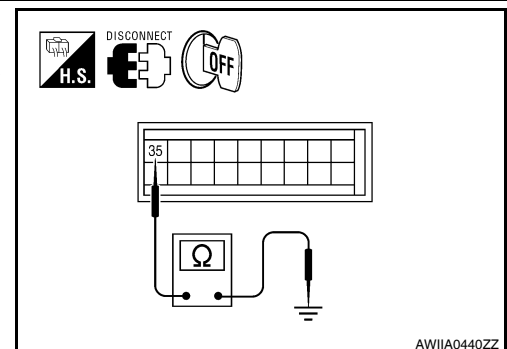

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]


ECU DIAGNOSIS

AIR CONDITIONER CONTROL

Front Air Control Terminals Reference Values


INFOID:000000003790067

Measure voltage between each terminal and ground by following Terminals and Reference Value for front air control (1).

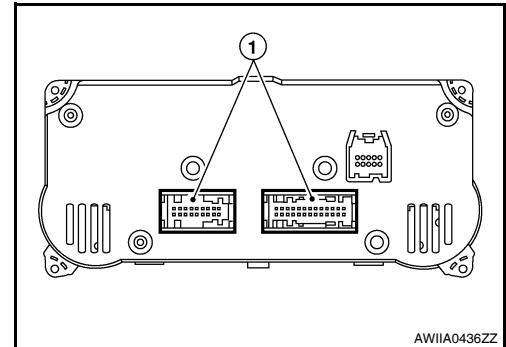

AWIIA0436ZZ

FRONT AIR CONTROL HARNESS CONNECTOR TERMINAL LAYOUT

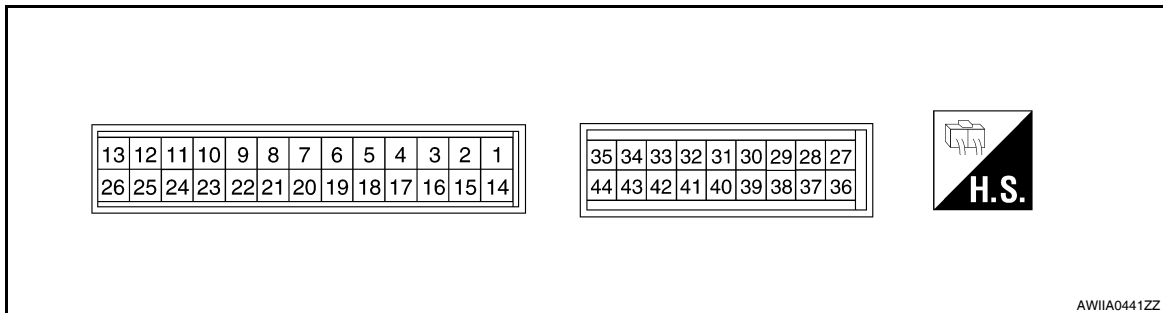

AWIIA0441ZZ

TERMINALS AND REFERENCE VALUES FOR FRONT AIR CONTROL

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
1	G/O	Optical sensor (driver)	ON	-	0 - 5V
2	L	Air mix door motor (passenger) CCW	ON	-	Battery voltage
3	P	V ref ACTR (ground)	ON	-	5V
4	W/R	Compressor ON signal	ON	A/C switch OFF	5V
			ON	A/C switch ON	0V
5	L/R	Fan ON signal	ON	Blower switch OFF	5V
			ON	Blower switch ON	0V
6	SB	Air mix door motor (driver) feedback	ON	-	0 - 5V
7	GR	Mode door motor feedback	ON	-	0 - 5V
8	R/L	Illumination +	ON	Park lamps ON	Battery voltage
9	BR	Illumination -	-	Park lamps ON	<p>(V)</p> <p>15</p> <p>10</p> <p>5</p> <p>0</p> <p>200 ms</p>
10	LG/B	Defroster door motor feedback	ON	-	0 - 5V
11	L/B	Intake sensor	ON	-	0 - 5V
13	G/R	Variable blower control	ON	-	0 - 5V
14	G/W	Air mix door motor (passenger) CW	ON	Clockwise rotation	Battery voltage

PIIA2344E

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< ECU DIAGNOSIS >

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
15	Y/G	Power supply for IGN	ON	-	Battery voltage
16	Y/B	Rear Defogger request *1	ON		Battery voltage
17	W/G	Air mix door motor (driver) CW	ON	Clockwise rotation	Battery voltage
18	G	Air mix door motor (driver) CCW	ON	Counterclockwise rotation	Battery voltage
19	BR/W	Mode door motor CW	ON	Clockwise rotation	Battery voltage
20	P/L	Mode door motor CCW	ON	Counterclockwise rotation	Battery voltage
21	G/B	Intake door motor CCW	ON	Counterclockwise rotation	Battery voltage
22	O	Intake door motor CW	ON	Clockwise rotation	Battery voltage
23	LG	Defroster door motor CW	ON	Clockwise rotation	Battery voltage
24	P/B	Defroster door motor CCW	ON	Counterclockwise rotation	Battery voltage
25	P	Ambient sensor	ON	-	0 - 5V
26	V/R	Sensor ground	ON	-	0V
27	Y/R	Power supply for BAT	-	-	Battery voltage
28	Y	V ref ACTR (5V)	ON	-	0 - 5V
29	R/W	Air mix door motor (passenger) feedback	ON	-	0 - 5V
31	BR/Y	In-vehicle sensor motor (+)	ON	-	Battery voltage
32	LG/R	In-vehicle sensor signal	ON	-	0 - 5V
35	B	Ground	-	-	0V
36	P	CAN-L	ON	-	0 - 5V
37	L	CAN-H	ON	-	0 - 5V
38	W/V	Optical sensor (passenger)	ON	-	0 - 5V
41	Y/L	Water valve	ON	Water valve open	Battery voltage
				Water valve closed	0V
42	W/G	Water valve	ON	Water valve open	0V
				Water valve closed	Battery voltage

*1: If equipped

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P


AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< ECU DIAGNOSIS >


Wiring Diagram

INFOID:000000003790068

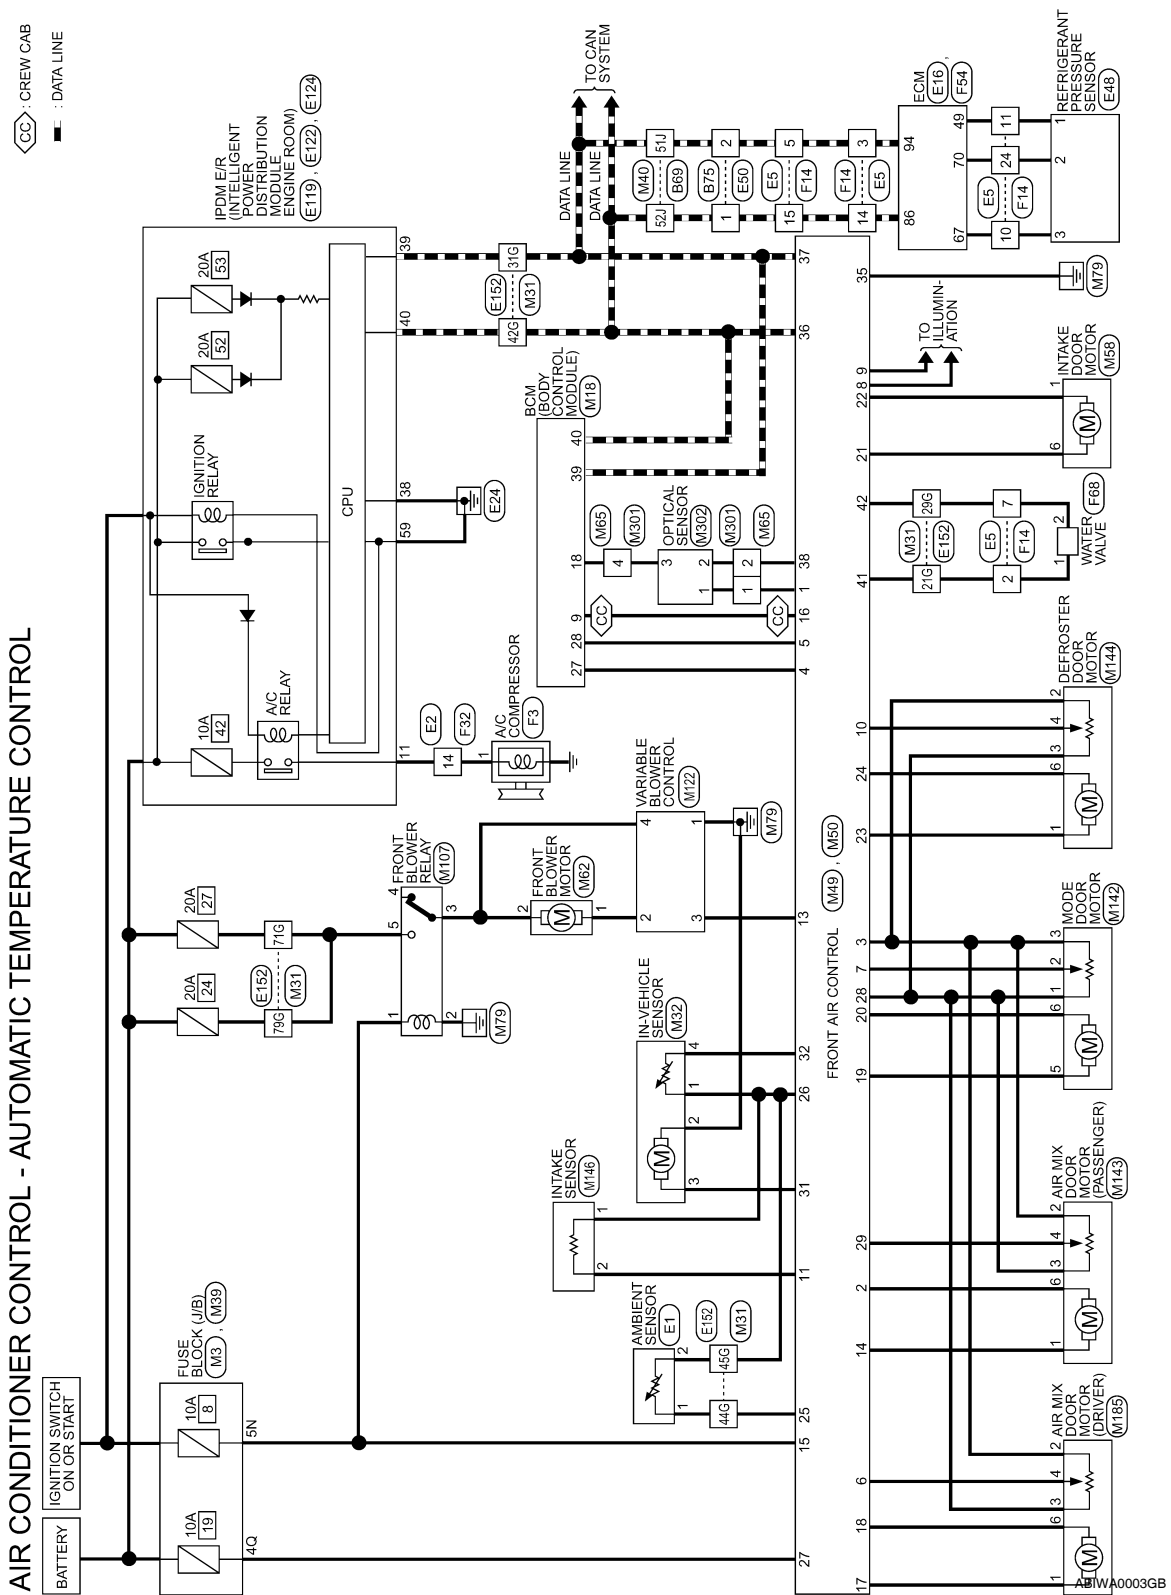


AIR CONDITIONER CONTROL CONNECTORS - AUTOMATIC TEMPERATURE

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
5N	Y/G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	Y/B	REAR DEFOGGER SW
18	P	KEYLESS AND AUTO LIGHT SENSOR GND
27	W/R	AIRCON SW
28	L/R	BLOWER FAN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

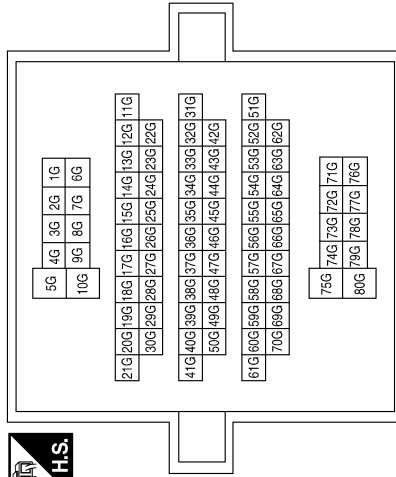

Terminal No.	Color of Wire	Signal Name
21G	Y/L	-
29G	W/G	-
31G	L	-
42G	P	-
44G	P	-
45G	V/R	-
71G	P	-
79G	P	-

Connector No.	M32
Connector Name	IN-VEHICLE SENSOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	V/R	-
2	O/B	-
3	BR/Y	-
4	LG/R	-

ABIA0009GB


AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]


< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

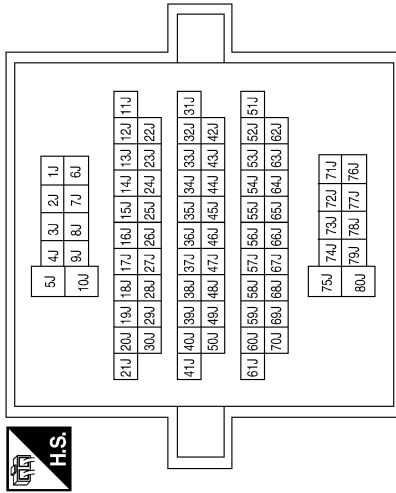

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-



Terminal No.	Color of Wire	Signal Name
20	P/L	PNL/FLR DR B
21	G/B	RECIRC DRT A
22	O	RECIRC DRT B
23	LG	DEFROST DR A
24	P/B	DEFROST DR B
25	P	AMBIENT TEMP SEN
26	V/R	SENSOR RETURN

Terminal No.	Color of Wire	Signal Name
10	LG/B	DEFROST FEEDBACK
11	L/B	EVAP TEMP SENSOR
12	-	-
13	G/R	FRONT BLWR SPEED
14	GW	PASS BLND DR A
15	Y/G	IGN
16	Y/B	REAR DEF REQ
17	W/G	DRVR BLND DR A
18	G	DRVR BLND DR B
19	BR/W	PNL/FLR DR A

Connector No.	M49
Connector Name	FRONT AIR CONTROL (WITH AUTOMATIC TEMPERATURE CONTROL)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	G/O	SUN LD SEN LFT
2	L	PASS BLND DR B
3	P	V REF RET
4	W/R	AC REQ
5	L/R	FAN ON
6	SB	DRVR BLND DR FF
7	GR	PNL/FLR DR FB
8	R/L	ILLUM +
9	BR	ILLUM -

ABIA0010GB

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< ECU DIAGNOSIS >


Connector No.	M58
Connector Name	INTAKE DOOR MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	O	-
6	G/B	-


Terminal No.	Color of Wire	Signal Name
32	LG/R	IN-CAR TEMP SEN
33	-	-
34	-	-
35	B	GND
36	P	CAN-L
37	L	CAN-H
38	W/V	SUN LD SEN RIGHT
39	-	-
40	-	-
41	Y/L	WATER VALVE A
42	W/G	WATER VALVE B
43	-	-
44	-	-

Connector No.	M50
Connector Name	FRONT AIR CONTROL (WITH AUTOMATIC TEMPERATURE CONTROL)
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
27	Y/R	V BAT
28	Y	5V REF VOLTAGE
29	R/W	PASS BLIND DR FB
30	-	-
31	BR/Y	IN-CAR TMP MTR+

Connector No.	M107
Connector Name	FRONT BLOWER RELAY
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	Y/G	-
2	B	-
3	W/L	-
4	-	-
5	GR	-

Connector No.	M65
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G/O	-
2	W/V	-
4	P	-

Connector No.	M62
Connector Name	FRONT BLOWER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	W/L	-

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

ABIA0011GB

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]


< ECU DIAGNOSIS >

Connector No.	M122
Connector Name	VARIABLE BLOWER CONTROL
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	L/W	-
3	G/R	-
4	W/L	-

Connector No.	M142
Connector Name	MODE DOOR MOTOR
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	GR	-
3	P	-
5	BR/W	-
6	P/L	-

Connector No.	M143
Connector Name	AIR MIX DOOR MOTOR (PASSENGER)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	P	-
3	Y	-
4	R/W	-
6	L	-

Connector No.	M144
Connector Name	DEFROSTER DOOR MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	P	-
3	Y	-
4	LG/B	-
6	P/B	-

Connector No.	M146
Connector Name	INTAKE SENSOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V/R	-
2	L/B	-

Connector No.	M185
Connector Name	AIR MIX DOOR MOTOR (DRIVER)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	P	-
3	Y	-
4	SB	-
6	G	-


ABIA0012GB

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< ECU DIAGNOSIS >

Connector No.	E1
Connector Name	AMBIENT SENSOR
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	V/R	-

Connector No.	M302
Connector Name	OPTICAL SENSOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	G/O	-
2	W/V	-
3	P	-

Connector No.	M301
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	G/O	-
2	W/V	-
4	P	-

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

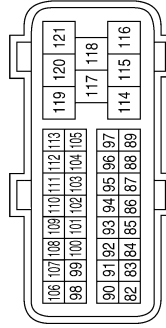


Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	Y/L	-
3	L	-
5	L	-
7	W/G	-
10	B	-
11	R/Y	-
14	P	-
15	P	-
24	B/W	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
14	Y/B	-

ABIA0013GB

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< ECU DIAGNOSIS >

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	Y/B	AC_COMPRESSOR

Connector No.	E50
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

Connector No.	E48
Connector Name	REFRIGERANT PRESSURE SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	B/W	-
3	B	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L


ABIA0014GB

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< ECU DIAGNOSIS >

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

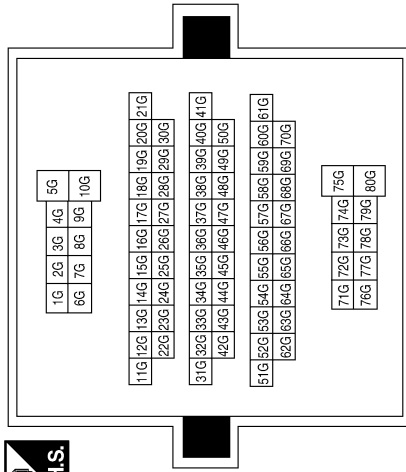


Terminal No.	Color of Wire	Signal Name
21G	Y/L	-
29G	W/G	-
31G	L	-
42G	P	-
44G	P	-
45G	V/R	-
71G	GR	-
79G	P	-

Connector No.	F3
Connector Name	A/C COMPRESSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	Y/B	-

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2	Y/L	-
3	L	-
5	L	-
7	W/G	-
10	B	-
11	R/Y	-
14	P	-
15	P	-
24	B/W	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
14	Y/B	-

Connector No.	F54
Connector Name	ECM
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
49	R/Y	AVCC (PDPRES)
67	B	GND -A
70	B/W	PD PRES

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]


< ECU DIAGNOSIS >

Connector No.	F68
Connector Name	WATER VALVE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y/L	-
2	W/G	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

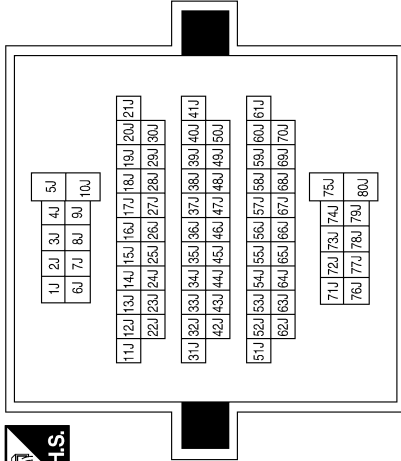

Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

Connector No.	B75
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

ABIA0016GB

AIR CONDITIONER CONTROL

[AUTOMATIC AIR CONDITIONER]

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

AIR CONDITIONER CONTROL

Symptom Matrix Chart

INFOID:000000003790069

SYMPTOM TABLE

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-70
A/C system cannot be controlled.	Go to Self-diagnosis Function.	HAC-21
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	HAC-23
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	HAC-29
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	HAC-38
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	HAC-41
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-47
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-53
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-84
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-92
Noise	Go to Trouble Diagnosis Procedure for Noise.	HAC-94
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	HAC-70
Memory function does not operate.	Go to Trouble Diagnosis Procedure for Memory Function.	HAC-95

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HAC

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

INSUFFICIENT COOLING

Component Function Check

INFOID:000000003790070

SYMPTOM: Insufficient cooling

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE DECREASE

1. Press the AUTO switch.
2. Turn temperature control dial (driver) counterclockwise until 16°C (60°F) is displayed.
3. Check for cold air at discharge air outlets.

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6. "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-83. "Symptom Matrix Chart"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis Refer to [HAC-21. "Front Air Control Self-Diagnosis"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Refer to [HAC-21. "Front Air Control Self-Diagnosis Code Chart"](#).

5. CHECK DRIVE BELTS

Check compressor belt tension. Refer to [EM-13. "Checking Drive Belts"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Adjust or replace compressor belt. Refer to [EM-13. "Removal and Installation"](#).

6. CHECK AIR MIX DOOR OPERATION

Check and verify air mix door mechanism for smooth operation. Refer to [HAC-29. "Air Mix Door Motor Component Function Check"](#).

Does air mix door operate correctly?

- YES >> GO TO 7.
NO >> Check air mix door motor circuit. Refer to [HAC-30. "Air Mix Door Motor \(Driver\) Diagnosis Procedure"](#) or [HAC-33. "Air Mix Door Motor \(Passenger\) Diagnosis Procedure"](#).

7. CHECK COOLING FAN MOTOR OPERATION

Check and verify cooling fan motor for smooth operation. Refer to [EC-386. "Component Inspection"](#).

Does cooling fan motor operate correctly?

- YES >> GO TO 8.
NO >> Check cooling fan motor. Refer to [EC-386. "Diagnosis Procedure"](#).

8. CHECK WATER VALVE OPERATION

Check and verify water valve for smooth operation. Refer to [HAC-58. "Description"](#).

Does water valve operate correctly?

- YES >> GO TO 9.

INSUFFICIENT COOLING

[AUTOMATIC AIR CONDITIONER]

< SYMPTOM DIAGNOSIS >

NO >> Check water valve circuit. Refer to [HAC-58. "Water Valve Diagnosis Procedure"](#).

9.CHECK RECOVERY/RECYCLING EQUIPMENT BEFORE USAGE

Check recovery/recycling equipment before connecting to vehicle. Verify there is no pressure in the recovery/recycling equipment by checking the gauges. If pressure exists, recover refrigerant from equipment lines.

>> GO TO 10.

10.CHECK REFRIGERANT PURITY

1. Connect recovery/recycling equipment to vehicle.
2. Confirm refrigerant purity in supply tank using recovery/recycling and refrigerant identifier.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Check contaminated refrigerant. Refer to [HAC-96. "Working with HFC-134a \(R-134a\)"](#).

11.CHECK FOR EVAPORATOR FREEZE UP

Start engine and run A/C. Check for evaporator freeze up.

Does evaporator freeze up?

YES >> Perform performance test diagnoses. Refer to [HAC-85. "Diagnostic Work Flow"](#).

NO >> GO TO 12.

12.CHECK REFRIGERANT PRESSURE

Check refrigerant pressure with manifold gauge connected. Refer to [HAC-87. "Performance Chart"](#).

Is the inspection result normal?

YES >> Perform performance test diagnoses. Refer to [HAC-85. "Diagnostic Work Flow"](#).

NO >> GO TO 13.

13.CHECK AIR DUCTS

Check ducts for air leaks.

Is the inspection result normal?

YES >> System OK.

NO >> Repair air leaks.

Diagnostic Work Flow

INFOID:000000003790071


A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

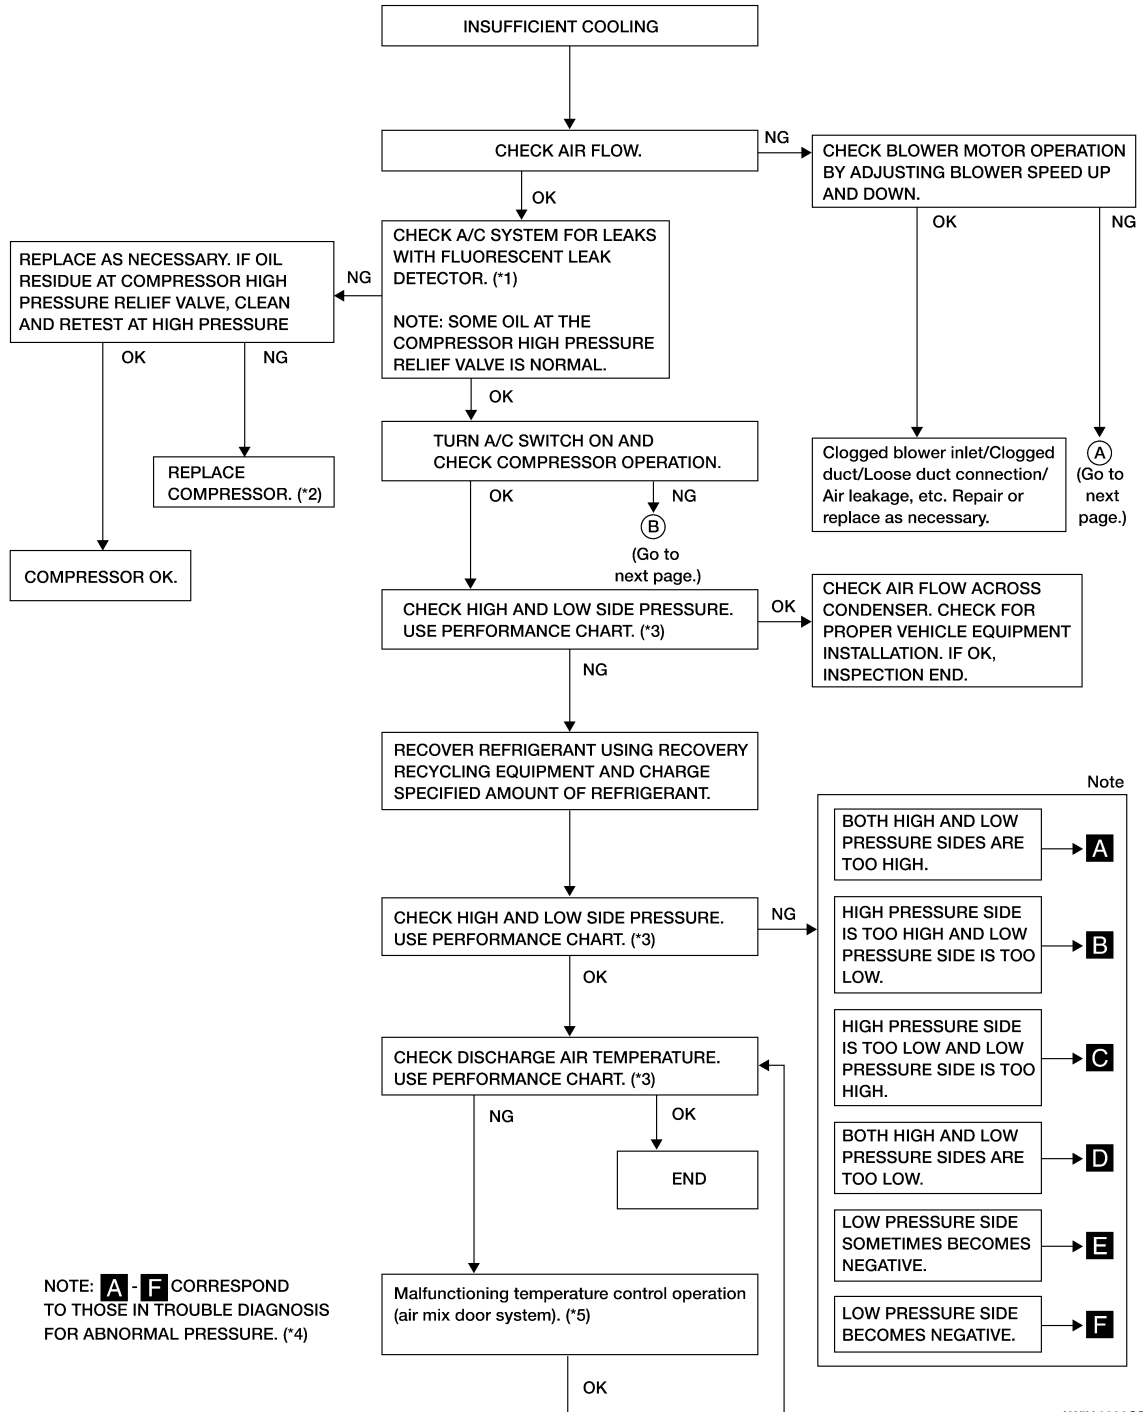

AWIIA0999GB

*1 [HA-25. "Checking System for Leaks Using the Fluorescent Dye Leak Detector"](#)

*2 [HA-33. "Removal and Installation for Compressor"](#)

*3 [HAC-87. "Performance Chart"](#)


*4 [HAC-88. "Trouble Diagnoses for Abnormal Pressure"](#)

*5 [HAC-29. "Air Mix Door Motor Component Function Check"](#)

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

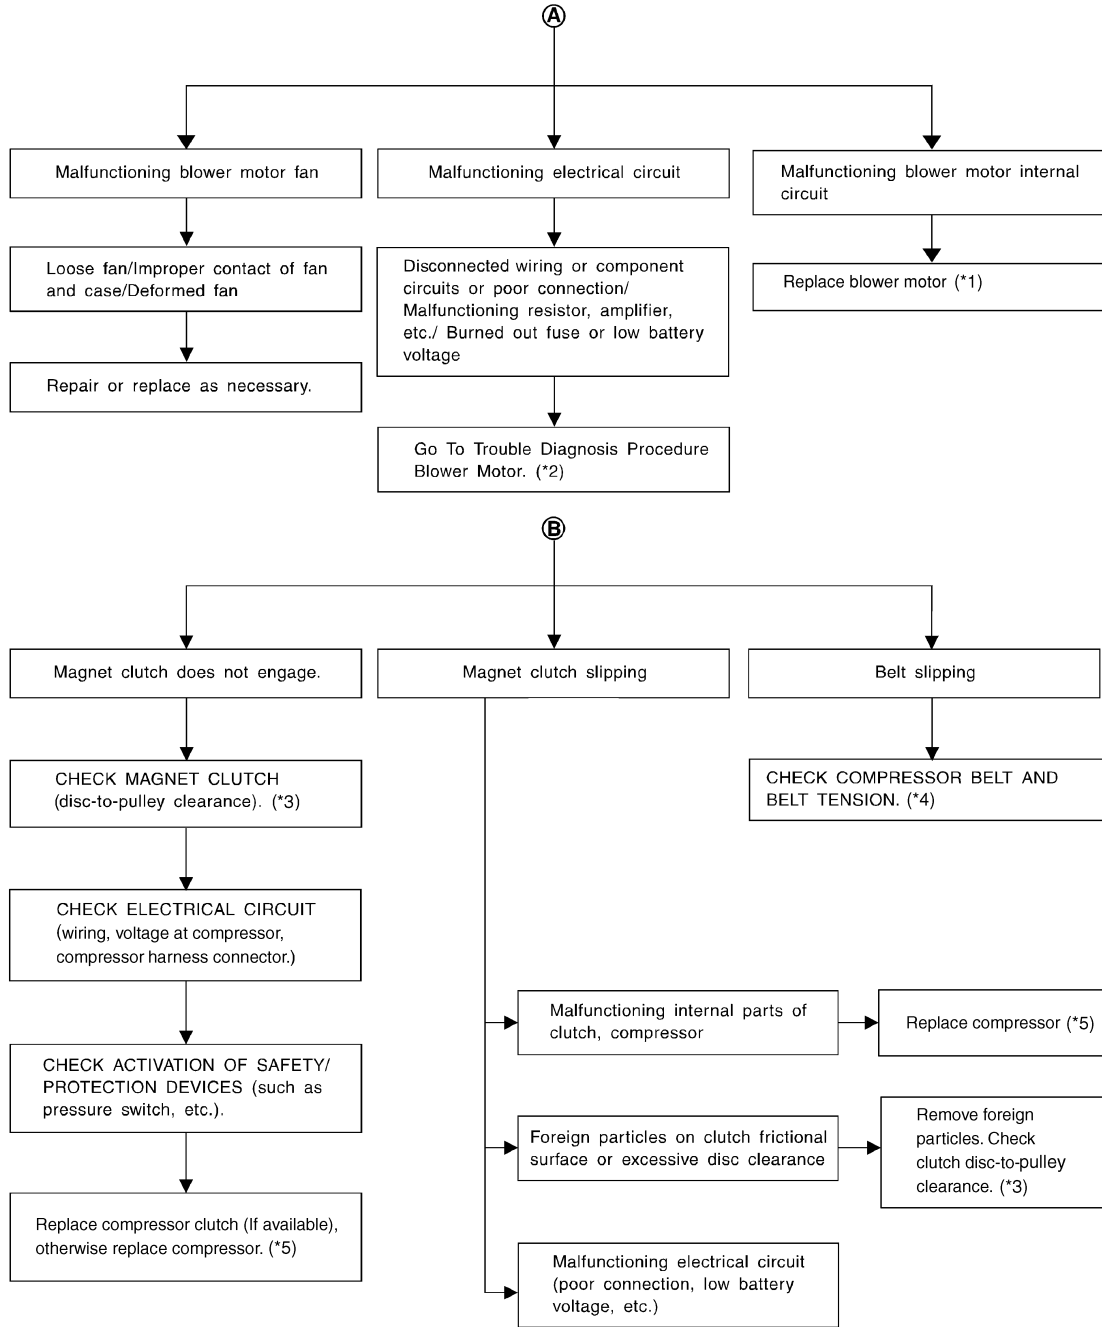

AWIA1000GB

*1 [HA-33. "Removal and Installation for Compressor"](#)

*2 [HAC-47. "Front Blower Motor Component Function Check"](#)

*3 [HA-34. "Removal and Installation for Compressor Clutch"](#)

*4 [EM-13. "Checking Drive Belts"](#)

*5 [HA-33. "Removal and Installation for Compressor"](#)

Performance Chart

INFOID:000000003790072




TEST CONDITION

Testing must be performed as follows:

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door window	Open
Hood	Open
TEMP.	Max. COLD
Mode switch	 (Ventilation) set
Recirculation (REC) switch	 (Recirculation) set
 Blower speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	9.9 - 13.9 (50 - 57)
	25 (77)	14.6 - 18.6 (58 - 65)
	30 (86)	16.8 - 21.8 (62 - 71)
	35 (95)	21.1 - 27.1 (70 - 81)
	40 (104)	25.3 - 31.5 (78 - 89)
60 - 70	20 (68)	11.4 - 15.2 (53 - 59)
	25 (77)	15.5 - 20.0 (60 - 68)
	30 (86)	19.9 - 25.0 (68 - 77)
	35 (95)	24.5 - 29.6 (76 - 85)
	40 (104)	28.7 - 34.9 (84 - 95)

Ambient Air Temperature-to-operating Pressure Table

Ambient air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	1020 - 1250 (10.4 - 12.7, 147.9 - 181.3)	160 - 190 (1.63 - 1.94, 23.2 - 27.6)
	25 (77)	1236 - 1510 (12.6 - 15.4, 179.2 - 219)	206 - 245 (2.1 - 2.5, 29.9 - 35.6)
	30 (86)	1569 - 1,922 (16.0 - 19.6, 227.6 - 278.8)	265 - 324 (2.7 - 3.3, 38.4 - 46.9)
	35 (95)	1,697 - 2079 (17.3 - 21.2, 246.1 - 301.5)	304 - 363 (3.1 - 3.7, 44.1 - 52.6)
	40 (104)	1971 - 2403 (20.1 - 24.5, 285.9 - 348.5)	373 - 451 (3.8 - 4.6, 54.0 - 65.4)

Trouble Diagnoses for Abnormal Pressure

INFOID:000000003790074


Whenever system's high and/or low side pressure is unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the standard (usual) pressure, however, differs from vehicle to vehicle, refer to above table (Ambient air temperature-to-operating pressure table).

INSUFFICIENT COOLING


[AUTOMATIC AIR CONDITIONER]

< SYMPTOM DIAGNOSIS >


Both High- and Low-pressure Sides are Too High

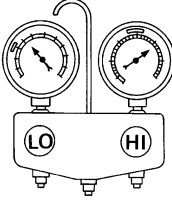Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>A Both high- and low-pressure sides are too high.</p>  <p style="text-align: right; font-size: small;">AC359A</p>	Pressure is reduced soon after water is splashed on condenser.	Excessive refrigerant charge in refrigeration cycle	Reduce refrigerant until specified pressure is obtained.
	Air suction by cooling fan is insufficient.	Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan	<ul style="list-style-type: none"> • Clean condenser. • Check and repair cooling fan if necessary.
	<ul style="list-style-type: none"> • Low-pressure pipe is not cold. • When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then decreases gradually thereafter. 	Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.) ↓ Air in refrigeration cycle	Evacuate and recharge system.
	Engine tends to overheat.	Engine cooling systems malfunction.	Check and repair engine cooling system.
	<ul style="list-style-type: none"> • An area of the low-pressure pipe is colder than areas near the evaporator outlet. • Plates are sometimes covered with frost. 	<ul style="list-style-type: none"> • Excessive liquid refrigerant on low-pressure side • Excessive refrigerant discharge flow • Expansion valve is open a little compared with the specification. ↓ Improper expansion valve adjustment	Replace expansion valve.

High-pressure Side is Too High and Low-pressure Side is Too Low

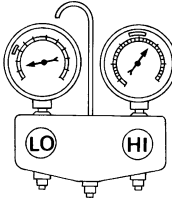Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>B High-pressure side is too high and low-pressure side is too low.</p>  <p style="text-align: right; font-size: small;">AC360A</p>	Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.	High-pressure tube or parts located between compressor and condenser are clogged or crushed.	<ul style="list-style-type: none"> • Check and repair or replace malfunctioning parts. • Check oil for contamination.

High-pressure Side is Too Low and Low-pressure Side is Too High

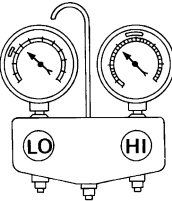
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>C High-pressure side is too low and low-pressure side is too high.</p>  <p style="text-align: right; font-size: small;">AC356A</p>	High- and low-pressure sides become equal soon after compressor operation stops.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.
	No temperature difference between high- and low-pressure sides.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.

INSUFFICIENT COOLING


< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Both High- and Low-pressure Sides are Too Low

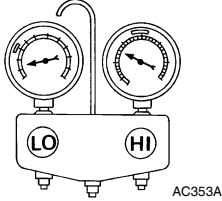Gauge indication	Refrigerant cycle	Probable cause	Corrective action
	<ul style="list-style-type: none"> There is a big temperature difference between liquid tank outlet and inlet. Outlet temperature is extremely low. Liquid tank inlet and expansion valve are frosted. 	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> Replace liquid tank. Check oil for contamination.
	<ul style="list-style-type: none"> Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank. Expansion valve inlet may be frosted. Temperature difference occurs somewhere in high-pressure side. 	High-pressure pipe located between liquid tank and expansion valve is clogged.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check oil for contamination.
<p>D Both high- and low-pressure sides are too low.</p> 	Expansion valve and liquid tank are warm or only cool when touched.	Low refrigerant charge. ↓ Leaking fittings or components.	Check refrigerant system for leaks. Refer to HA-23. "Checking of Refrigerant Leaks" .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment. 2. Malfunctioning expansion valve. 3. Outlet and inlet may be clogged.	<ul style="list-style-type: none"> Remove foreign particles by using compressed air. Check oil for contamination.
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check oil for contamination.
	Air flow volume is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> Check intake sensor circuit. Refer to HAC-68. "Intake Sensor Diagnosis Procedure". Repair evaporator fins. Replace evaporator. Refer to HAC-47. "Front Blower Motor Component Function Check".

Low-pressure Side Sometimes Becomes Negative

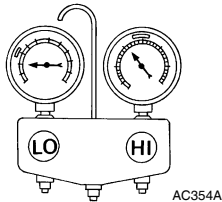
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>E Low-pressure side sometimes becomes negative.</p> 	<ul style="list-style-type: none"> Air conditioning system does not function and does not cyclically cool the compartment air. The system constantly functions for a certain period of time after compressor is stopped and restarted. 	Refrigerant does not discharge cyclically. ↓ Moisture is frozen at expansion valve outlet and inlet. ↓ Water is mixed with refrigerant.	<ul style="list-style-type: none"> Drain water from refrigerant or replace refrigerant. Replace liquid tank.

Low-pressure Side Becomes Negative

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

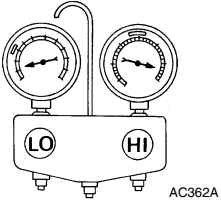Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>F Low-pressure side becomes negative.</p> 	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.</p>	<p>High-pressure side is closed and refrigerant does not flow. ↓ Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles.</p> <ul style="list-style-type: none"> • If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant. • If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air). • If either of the above methods cannot correct the malfunction, replace expansion valve. • Replace liquid tank. • Check oil for contamination.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

INSUFFICIENT HEATING

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

INSUFFICIENT HEATING

Component Function Check

INFOID:000000003790075

SYMPTOM: Insufficient heating

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE INCREASE

1. Press the AUTO switch.
2. Turn the temperature control dial (driver) clockwise until 32°C (90°F) is displayed.
3. Check for hot air at discharge air outlets.

Can this symptom be duplicated?

- YES >> GO TO 2.
NO >> Perform complete system operational check. Refer to [HAC-6. "Operational Check"](#).

2. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 3.

3. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis. Refer to [HAC-21. "Front Air Control Self-Diagnosis"](#).

Is the inspection results normal?

- YES >> GO TO 4.
NO >> Refer to [HAC-21. "Front Air Control Self-Diagnosis Code Chart"](#).

4. CHECK ENGINE COOLING SYSTEM

1. Check for proper engine coolant level. Refer to [CO-10. "Inspection"](#).
2. Check hoses for leaks or kinks.
3. Check radiator cap. Refer to [CO-10. "Inspection"](#).
4. Check for air in cooling system.

>> GO TO 5.

5. CHECK AIR MIX DOOR OPERATION

Check the operation of the air mix door.

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Check the air mix door motor circuit. Refer to [HAC-29. "Air Mix Door Motor Component Function Check"](#).

6. CHECK AIR DUCTS

Check for disconnected or leaking air ducts.

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair all disconnected or leaking air ducts.

7. CHECK HEATER HOSE TEMPERATURES

1. Start engine and warm it up to normal operating temperature.
2. Touch both the inlet and outlet heater hoses.

Is the inspection result normal?

- YES >> Hot inlet hose and a warm outlet hose: GO TO 8.
NO >> • Inlet hose cold: GO TO 11.
• Both hoses warm: GO TO 9.

8. CHECK ENGINE COOLANT SYSTEM

Check engine control temperature sensor. Refer to [EC-127. "Component Inspection"](#).

INSUFFICIENT HEATING

[AUTOMATIC AIR CONDITIONER]

< SYMPTOM DIAGNOSIS >

Is the inspection result normal?

YES >> System OK.

NO >> Repair or replace as necessary. Retest.

9.CHECK HEATER HOSES

Check heater hoses for proper installation.

Is the inspection result normal?

YES >> System OK.

NO >> 1. Back flush heater core.

2. Drain the water from the system.

3. Refill system with new engine coolant. Refer to [CO-11, "Changing Engine Coolant"](#).

4. GO TO 10 to retest.

10.CHECK HEATER HOSE TEMPERATURES

1. Start engine and warm it up to normal operating temperature.

2. Touch both the inlet and outlet heater hoses.

Is the inspection result normal?

YES >> System OK.

NO >> Replace heater core. Refer to [VTL-15, "Removal and Installation"](#).

11.CHECK WATER VALVE

Check the operation of the water valve. Refer to [HAC-58, "Water Valve Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> System OK.

NO >> Replace water valve.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P


NOISE

Component Function Check

INFOID:000000003790076

SYMPTOM: Noise

INSPECTION FLOW

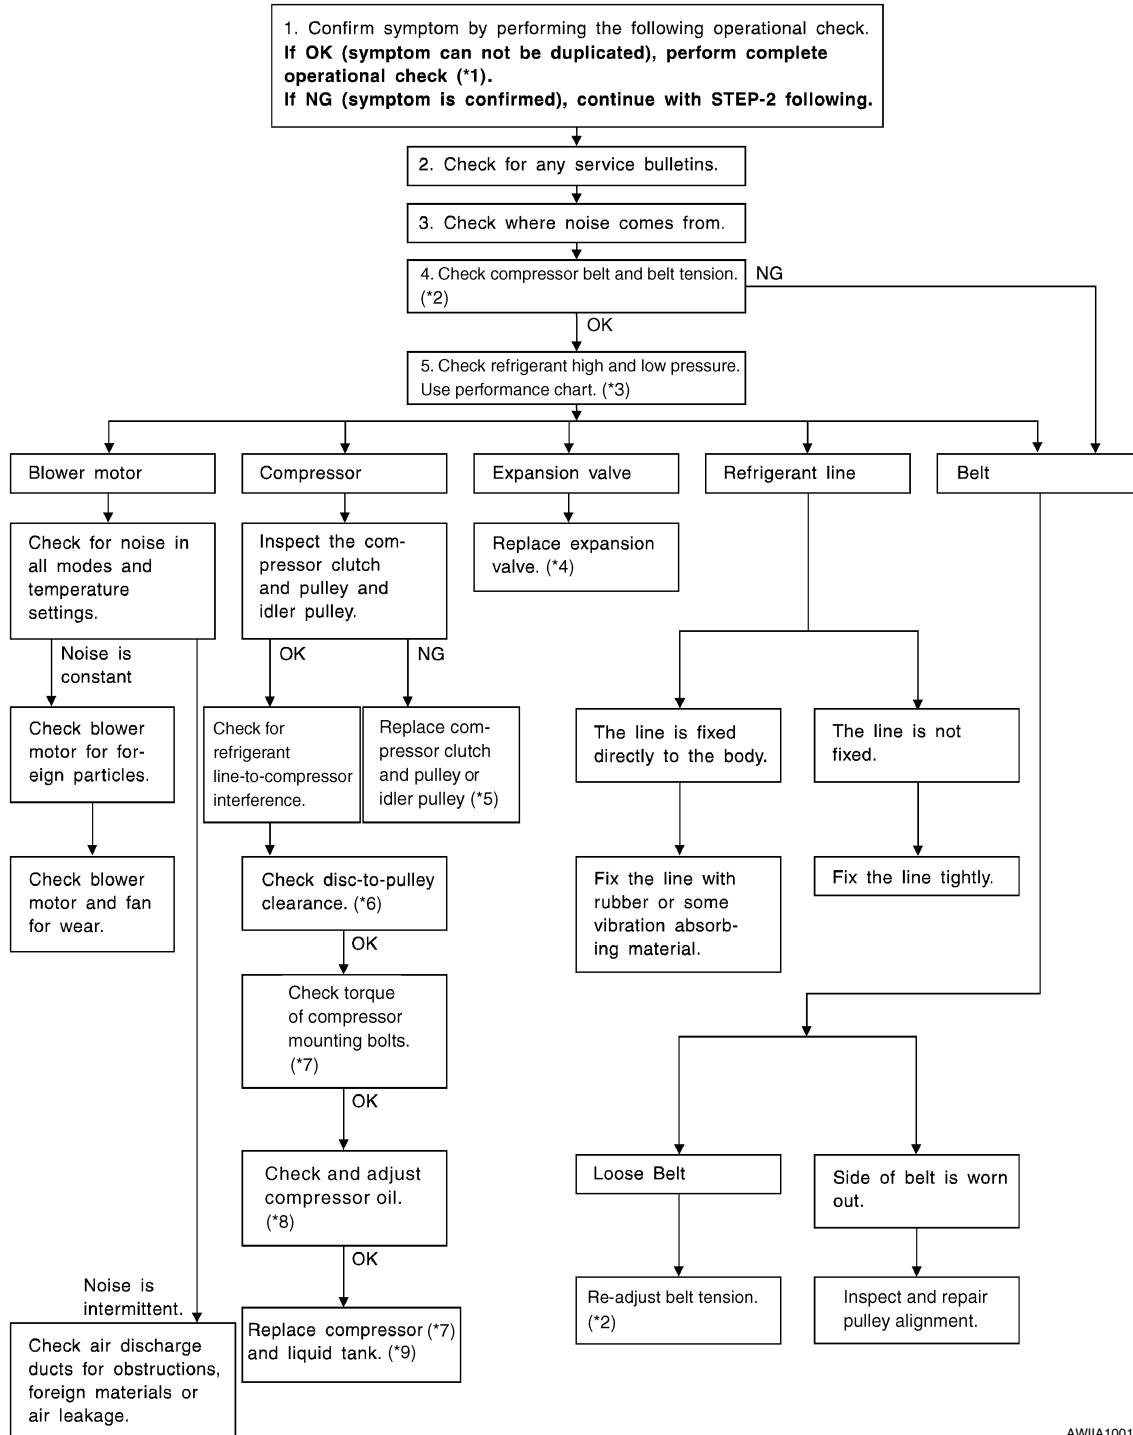

AWIIA1001GB

*1 [HAC-6, "Operational Check"](#)

*2 [EM-13, "Checking Drive Belts"](#)

*3 [HAC-87, "Performance Chart"](#)

*4 [HA-44, "Removal and Installation for Expansion Valve"](#)

*5 [HA-34, "Removal and Installation for Compressor Clutch"](#)

*6 [HA-34, "Removal and Installation for Compressor Clutch"](#)

*7 [HA-33, "Removal and Installation for Compressor"](#)

*8 [HA-20, "Maintenance of Oil Quantity in Compressor"](#)

*9 [HA-42, "Removal and Installation for Condenser"](#)

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

MEMORY FUNCTION DOES NOT OPERATE

Memory Function Check

INFOID:000000003790077

SYMPTOM: Memory function does not operate.

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - MEMORY FUNCTION

1. Set the temperature to 32°C (90°F).
2. Rotate the front blower control dial (driver) to turn system OFF.
3. Turn ignition switch OFF.
4. Turn ignition switch ON.
5. Press the AUTO switch.
6. Confirm that the set temperature remains at previous temperature.
7. Press the OFF switch.

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis to check for any codes. Refer to [HAC-21, "Front Air Control Self-Diagnosis"](#).

Are any self-diagnosis codes present?

- YES >> Refer to [HAC-21, "Front Air Control Self-Diagnosis Code Chart"](#).
NO >> GO TO 5.

5. CHECK POWER AND GROUND CIRCUIT

Check main power supply and ground circuit. Refer to [HAC-70, "Front Air Control Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace as necessary.

6. RECHECK FOR SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-6, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-5, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003790078

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Working with HFC-134a (R-134a)

INFOID:000000003790079

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer to [HA-4, "Contaminated Refrigerant"](#). To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/ Recycling Recharging equipment and Refrigerant Identifier.
- Use only specified oil for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If oil other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) oil rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified oil from a sealed container. Immediately reseal containers of oil. Without proper sealing, oil will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and oil vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recycling equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and oil manufacturers.
 - Do not allow A/C oil to come in contact with styrofoam parts. Damage may result.

CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment.** If your facility does

PRECAUTIONS

[AUTOMATIC AIR CONDITIONER]

< PRECAUTION >


- not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

Precaution for Service Equipment

INFOID:000000003790080


MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified oil.

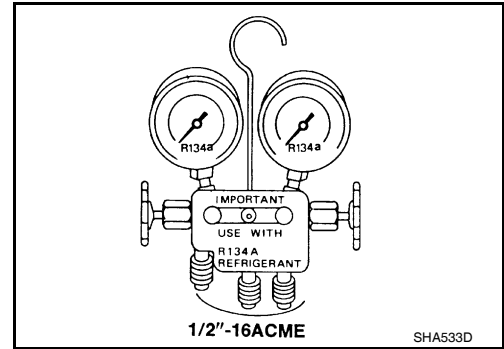

SERVICE HOSES


Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

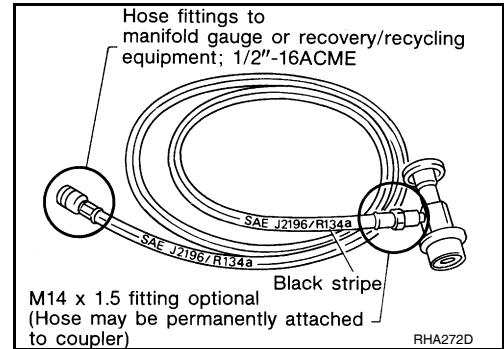

SERVICE COUPLERS

Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

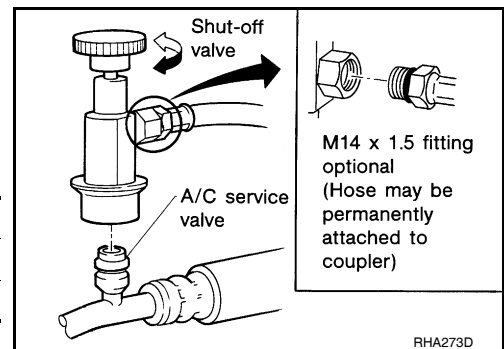

MANUAL A/C IDENTIFICATION TABLE

< BASIC INSPECTION >



[MANUAL A/C (TYPE 1)]

BASIC INSPECTION

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790081

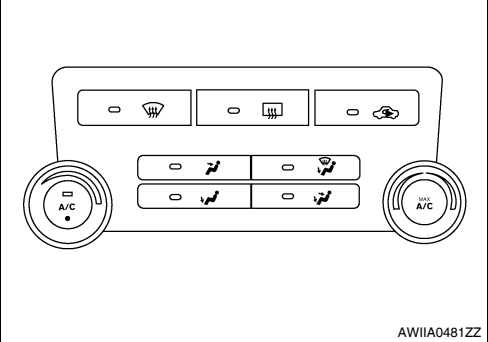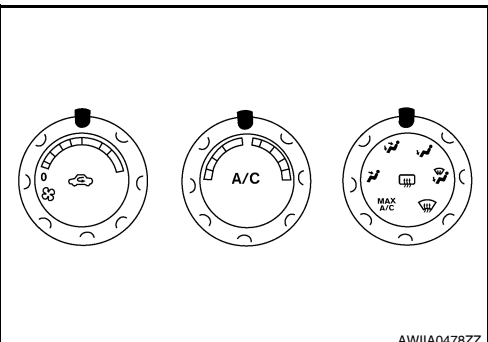Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

DIAGNOSIS AND REPAIR WORKFLOW

How to Perform Trouble Diagnosis For Quick And Accurate Repair

INFOID:000000003790082

WORK FLOW

1. LISTEN TO CUSTOMER COMPLAINT

Listen to customer complaint. Get detailed information about the conditions and environment when the symptom occurs.

>> GO TO 2

2. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 3.

3. VERIFY THE SYMPTOM WITH OPERATIONAL CHECK

Verify the symptom with operational check. Refer to [HAC-100. "Operational Check"](#).

>> GO TO 4

4. GO TO APPROPRIATE TROUBLE DIAGNOSIS

Go to appropriate trouble diagnosis. Refer to [HAC-167. "Symptom Matrix Chart"](#).

>> If equipped with NAVI, GO TO 5.

>> If equipped without NAVI, GO TO 6.

5. PERFORM THE FRONT AIR CONTROL SELF-DIAGNOSIS

Perform front air control self-diagnosis. Refer to [HAC-21. "Front Air Control Self-Diagnosis"](#).

>> If any diagnostic trouble codes set. Refer to [HAC-21. "Front Air Control Self-Diagnosis Code Chart"](#).

>> Confirm the repair by performing operational check. Refer to [HAC-6. "Operational Check"](#).

6. REPAIR OR REPLACE

Repair or replace the specific parts.

>> GO TO 7

7. FINAL CHECK

Final check.

Is the inspection result normal?

YES >> Inspection End

NO >> GO TO 4

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

INSPECTION AND ADJUSTMENT

Operational Check

INFOID:000000003790083

The purpose of the operational check is to confirm that the system operates properly.

Conditions : Engine running and at normal operating temperature


CHECKING BLOWER

1. Rotate the blower control dial clockwise once, blower should operate on low speed.
2. Rotate the blower control dial again, and continue checking blower speed until all speeds are checked.
3. Leave blower on maximum speed.

If NG, go to trouble diagnosis procedure for [HAC-136. "Front Blower Motor Diagnosis Procedure"](#).

If OK, continue with next check.

CHECKING DISCHARGE AIR

1. Press each MODE switch and the DEF  switch.
2. Each MODE position indicator should illuminate.
3. Confirm that discharge air comes out according to the air distribution table. Refer to [HAC-110. "Discharge Air Flow"](#).
Mode door position is checked in the next step.



If NG, go to trouble diagnosis procedure for [HAC-118. "Mode Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected.





CHECKING RECIRCULATION (,  ONLY)

1. Press recirculation () switch one time. Recirculation indicator should illuminate.
2. Press recirculation () switch one more time. Recirculation indicator should go off.
3. Listen for intake door position change (blower sound should change slightly).

If NG, go to trouble diagnosis procedure for [HAC-128. "Intake Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

NOTE:

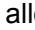Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected. REC () is not allowed in DEF () D/F () or FOOT ().

CHECKING TEMPERATURE DECREASE

1. Rotate temperature control dial counterclockwise until maximum cold.
2. Check for cold air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [HAC-168. "Component Function Check"](#). If air mix door motor appears to be malfunctioning, go to [HAC-123. "Air Mix Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

CHECKING TEMPERATURE INCREASE

1. Rotate temperature control dial clockwise until maximum hot.
2. Check for hot air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [HAC-176. "Component Function Check"](#). If air mix door motor appears to be malfunctioning, go to [HAC-122. "Air Mix Door Motor Component Function Check"](#).

If OK, continue with next check.

CHECK A/C SWITCH

1. Press A/C switch.
2. A/C switch indicator will turn ON.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[MANUAL A/C (TYPE 1)]

- Confirm that the compressor clutch engages (sound or visual inspection).

NOTE:

If current mode setting is DEF or D/F, compressor clutch will already be engaged and cannot be turned off.

If NG, go to trouble diagnosis procedure for [HAC-142. "Magnet Clutch Diagnosis Procedure"](#).

If all operational checks are OK (symptom cannot be duplicated), go to [HAC-99. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#) and perform tests as outlined. If symptom appears, refer to [HAC-167. "Symptom Matrix Chart"](#) and perform applicable trouble diagnosis procedures.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

MANUAL A/C IDENTIFICATION TABLE

< FUNCTION DIAGNOSIS >



[MANUAL A/C (TYPE 1)]

FUNCTION DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790084

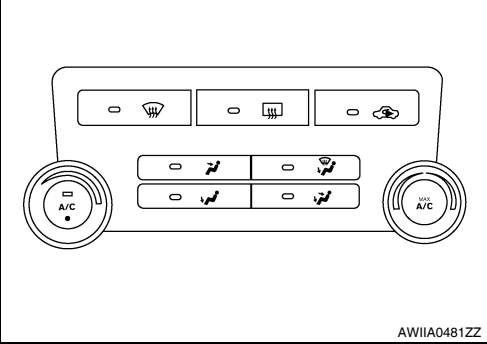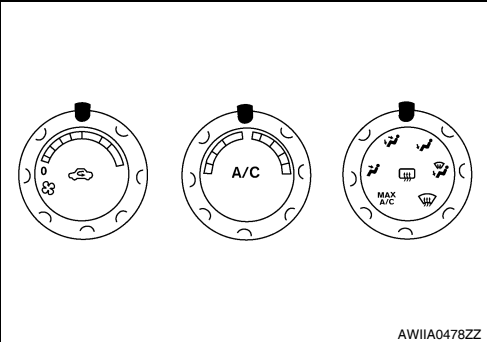
Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

FUNCTION INFORMATION

Component Part Location

INFOID:000000003790085

ENGINE COMPARTMENT

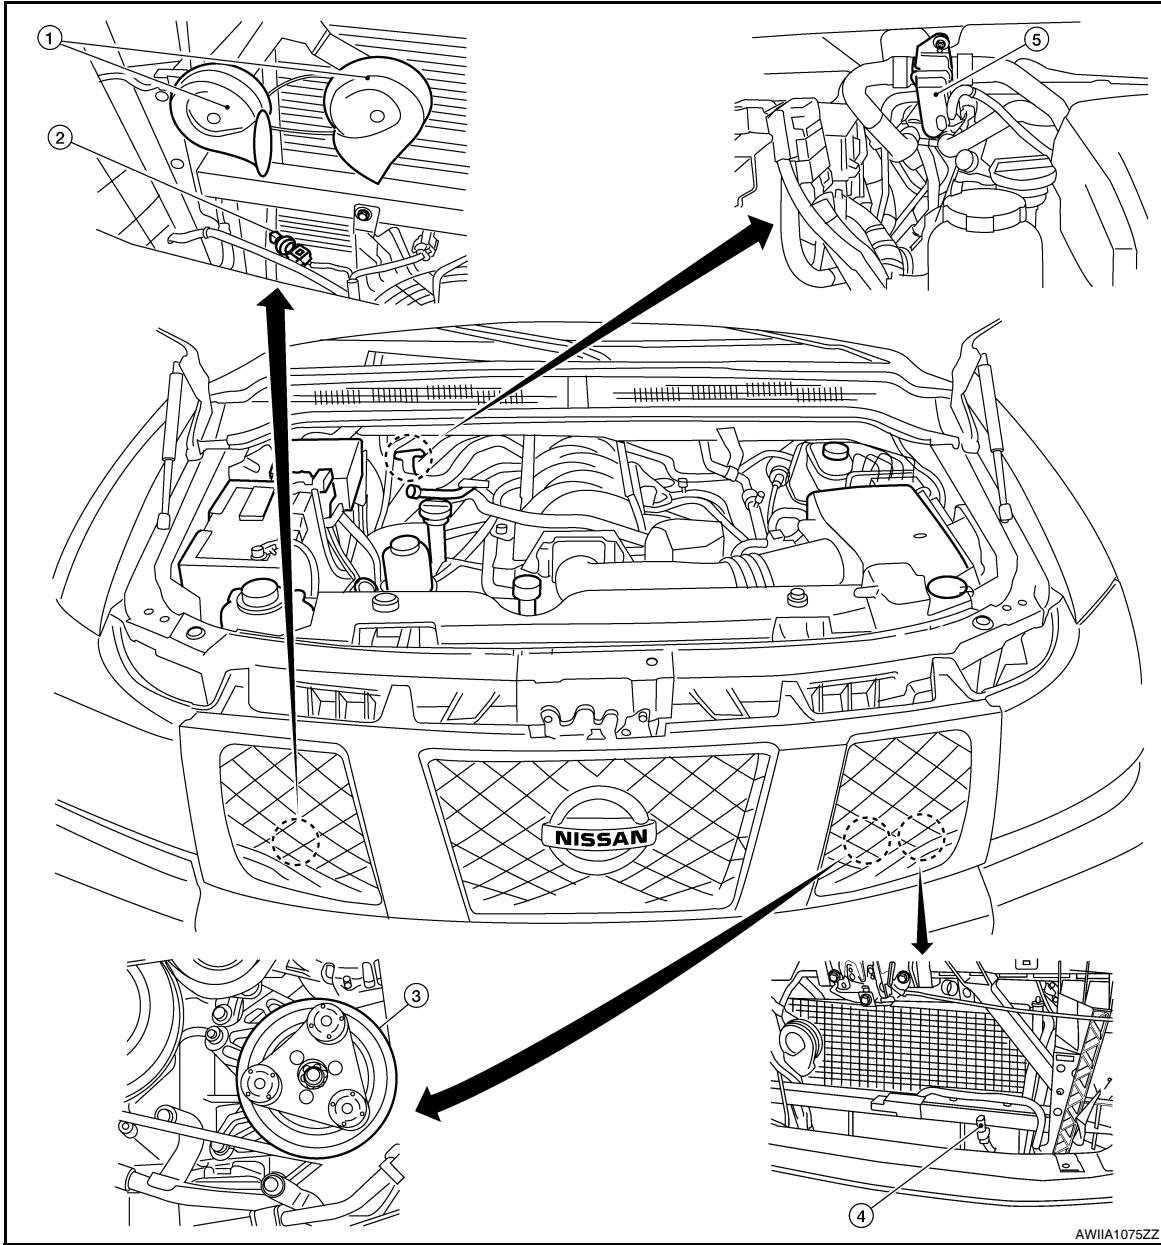

- | | | |
|---|---|----------------------|
| 1. Horn (view with grille removed) | 2. Refrigerant pressure sensor E48 (view with grille removed) | 3. A/C compressor F3 |
| 4. Ambient sensor E1 (view with grille removed) | 5. Water valve F68 | |


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

FUNCTION INFORMATION

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

PASSENGER COMPARTMENT

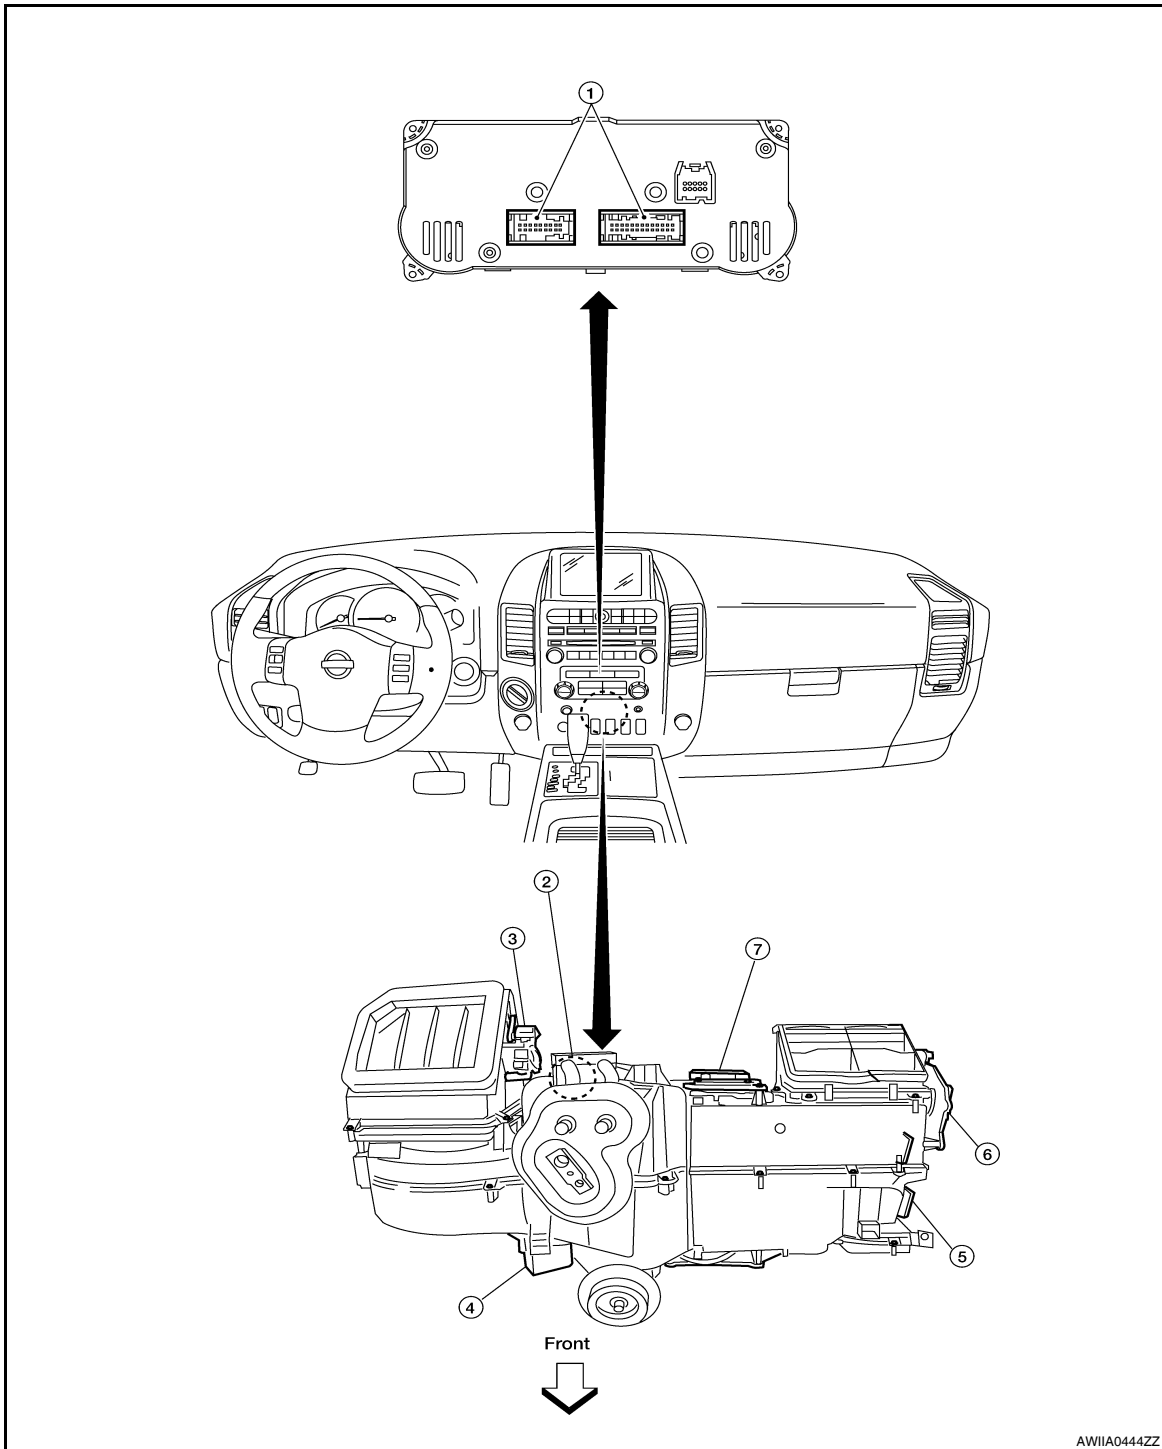

AWIIA0444ZZ

- | | | |
|------------------------------------|-------------------------|------------------------------|
| 1. Front air control M180, M181 | 2. Intake sensor M146 | 3. Intake door motor M58 |
| 4. Variable blower control M122 | 5. Mode door motor M142 | 6. Defroster door motor M144 |
| 7. Air mix door motor (front) M147 | | |

Symptom Table

INFOID:000000003790086

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-154
A/C system cannot be controlled.	Go to Self-diagnosis Function.	HAC-115
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	HAC-118
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	HAC-122
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	HAC-128
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	HAC-131
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-136
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-142
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-168
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-176
Noise	Go to Trouble Diagnosis Procedure for Noise.	HAC-178
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	HAC-115

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

REFRIGERATION SYSTEM

Refrigerant Cycle

INFOID:000000004113210

REFRIGERANT FLOW

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation through the evaporator coils are controlled by externally equalized expansion valve, located inside the evaporator case.

Refrigerant System Protection

INFOID:000000004113211

REFRIGERANT PRESSURE SENSOR

The refrigerant system is protected against excessively high or low pressures by the refrigerant pressure sensor, located on the condenser. If the system pressure rises above or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends a voltage signal to the ECM. The ECM de-energizes the A/C relay to disengage the magnetic compressor clutch when pressure on the high pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm², 398 psi), or below about 120 kPa (1.22 kg/cm², 17.4 psi).

PRESSURE RELIEF VALVE


The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 2,990 kPa (30.5 kg/

REFRIGERATION SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

cm², 433.6 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

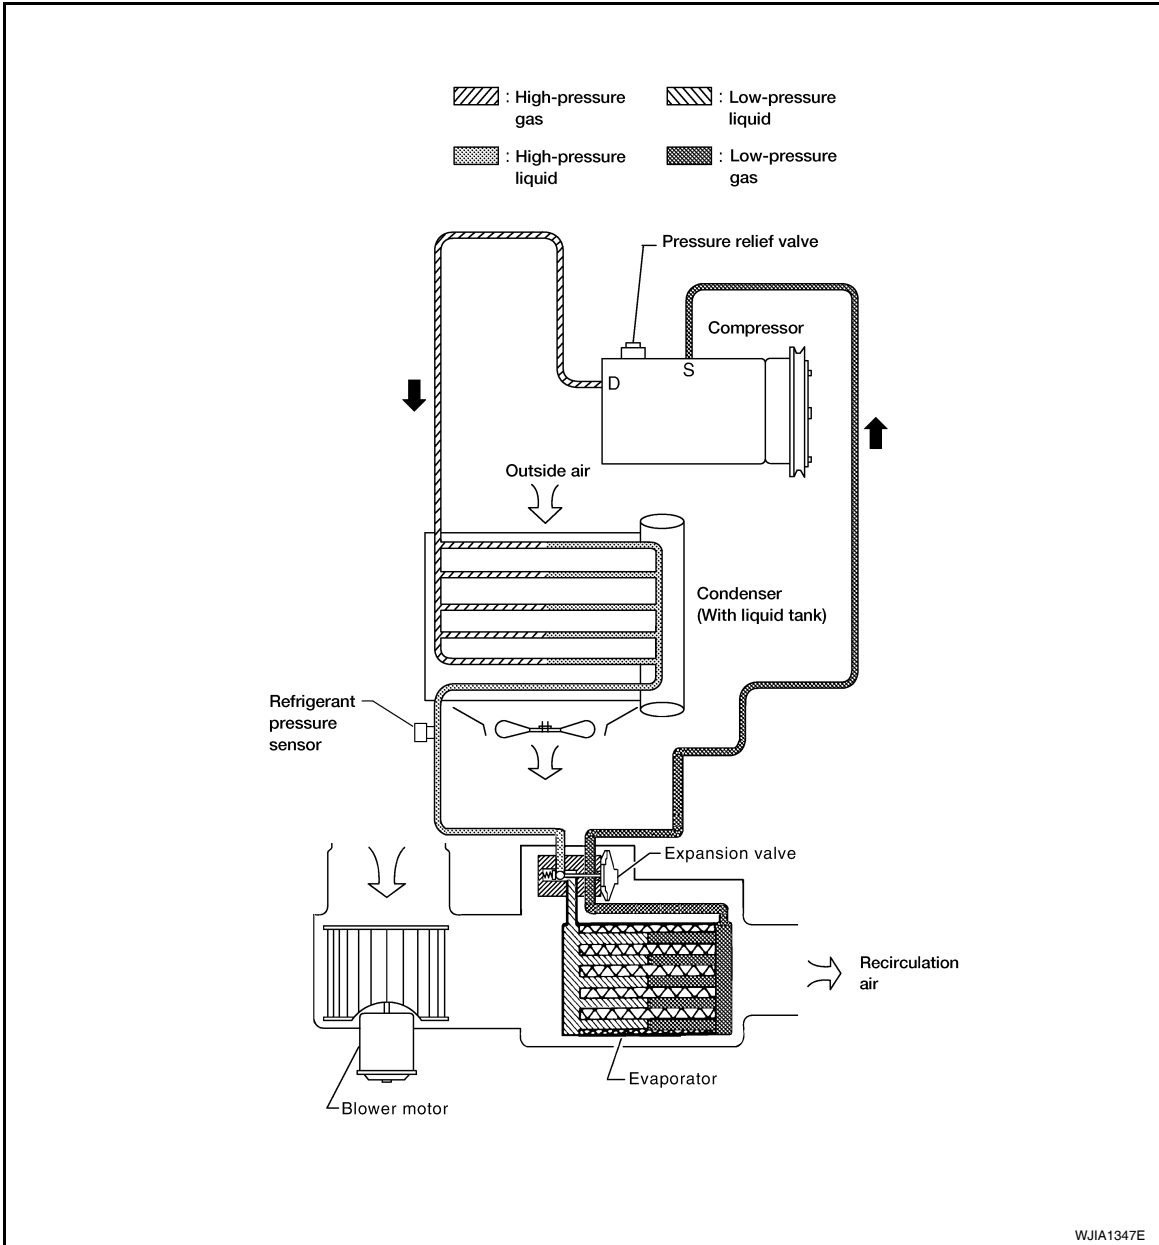

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]


MANUAL AIR CONDITIONER SYSTEM

Control System Diagram

INFOID:000000003790089

CONTROL SYSTEM

The control system consists of input sensors, switches, the front air control (microcomputer) and outputs. The relationship of these components is shown in the figure below:

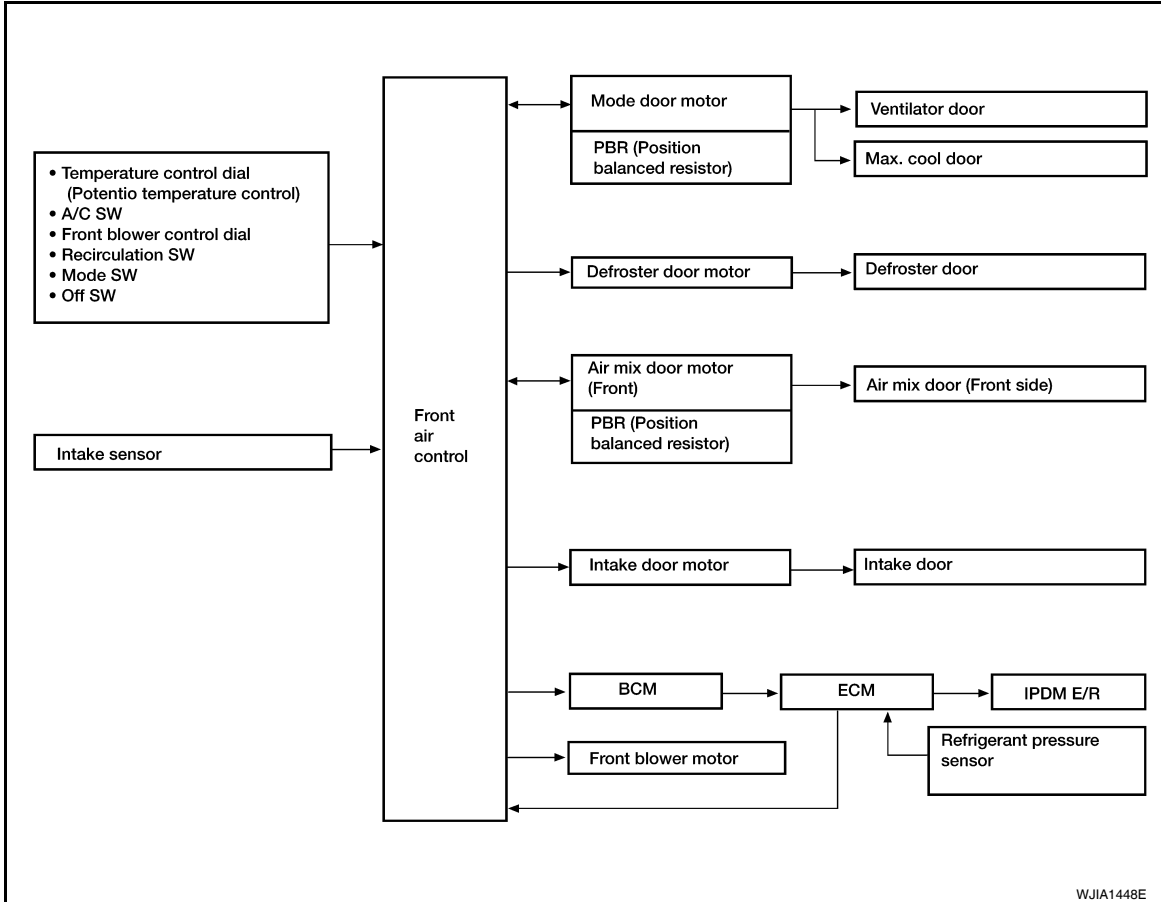


Control System Description

INFOID:000000003790090

CONTROL OPERATION

Front air control

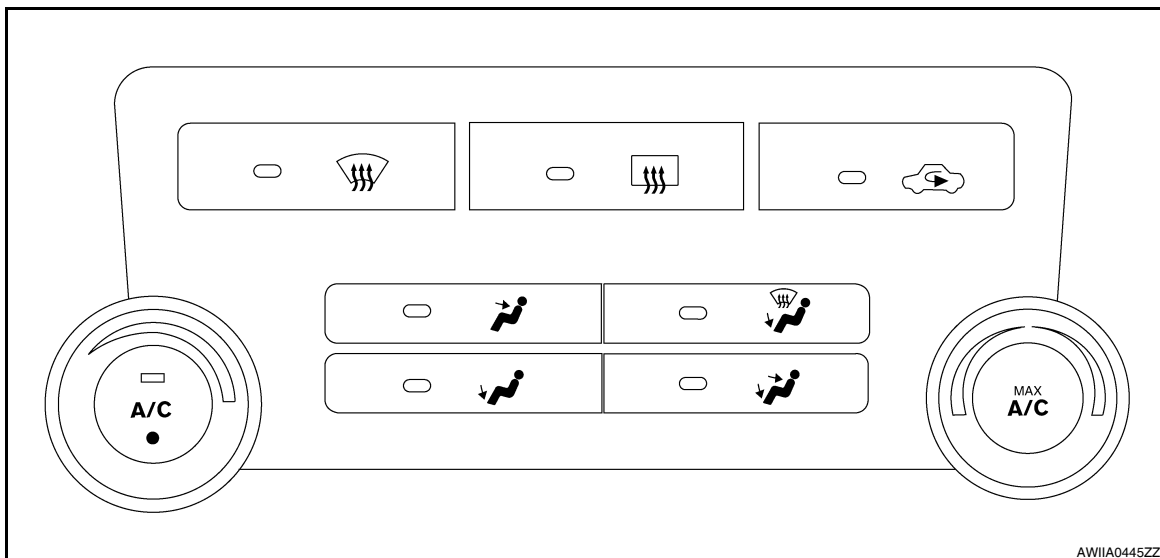

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

TEMPERATURE CONTROL DIAL

Increases or decreases the set temperature.

RECIRCULATION () SWITCH

- When REC switch is ON, REC switch indicator turns ON, and air inlet is set to REC.
- When REC switch is turned OFF, or when compressor is turned from ON to OFF, REC switch is automatically turned OFF. REC mode can be re-entered by pressing REC switch again.
- REC switch is not operated when DEF switch is turned ON, at the D/F position, or in floor position.

DEFROSTER () SWITCH

Positions the air outlet doors to the defrost position. Also positions the intake doors to the outside air position, and turns A/C compressor ON.

REAR WINDOW DEFOGGER SWITCH (IF EQUIPPED)

When switch is ON, rear window and door mirrors are defogged.

OFF SWITCH

The compressor and blower are OFF, the intake doors are set to the outside air position, and the air outlet doors are set to the foot (75% foot and 25% defrost) position.

BLOWER CONTROL DIAL/OFF SWITCH

- The blower speed is manually controlled with this dial.
- The compressor and blower are OFF, the intake doors are set to the outside air position, and the air outlet doors are set to the foot position.

A/C SWITCH


The compressor is ON or OFF.

(Pressing the A/C switch when the AUTO switch is ON will turn off the A/C switch and compressor.)

MODE SWITCHES

Controls the air discharge outlets.

MAGNET CLUTCH CONTROL

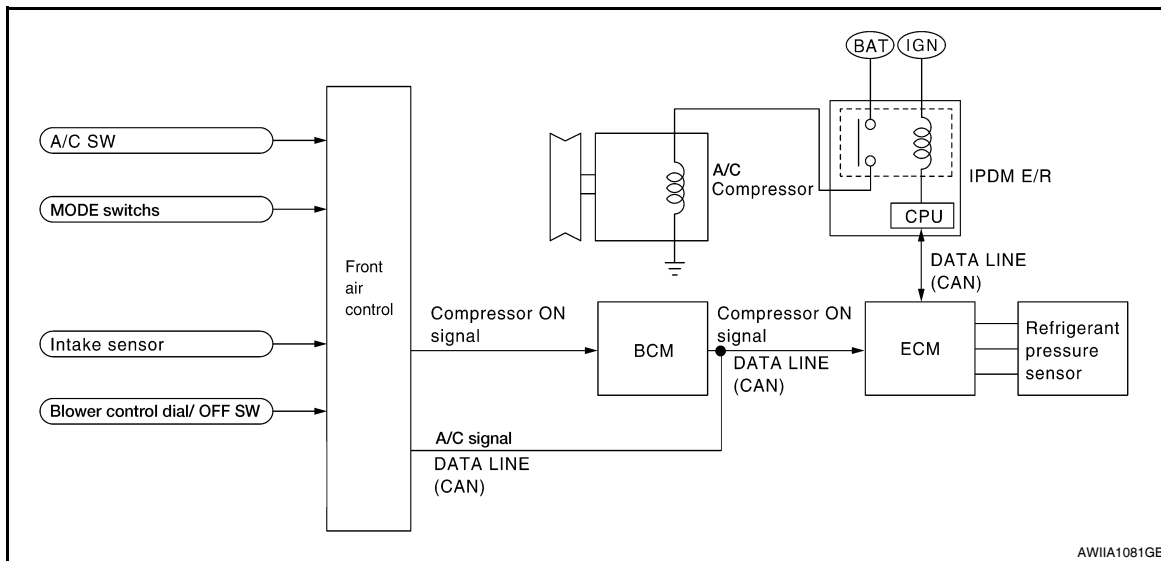

When A/C switch or DEF switch is pressed, front air control inputs compressor ON signal to BCM. BCM sends compressor ON signal to ECM and front air control, via CAN communication line. ECM judges whether compressor can be turned ON, based on each sensor status (refrigerant pressure sensor signal, throttle angle sensor, etc.). If it judges compressor can be turned ON, it sends compressor ON signal to IPDM E/R, via CAN communication line. Upon receipt of compressor ON signal from ECM, IPDM E/R turns air conditioner relay ON to operate compressor.


MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Discharge Air Flow


INFOID:000000003790091

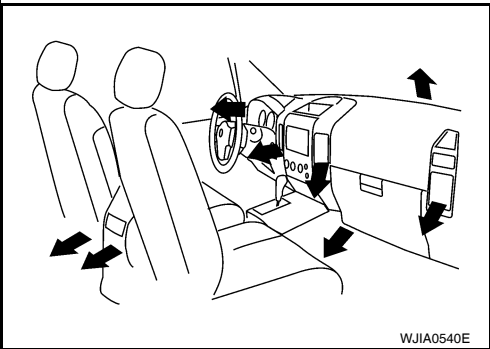

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	95%	5%	—
	60%	40%	—
	—	70%	30%
	—	60%	40%
	—	10%	90%

Switches And Their Control Function

INFOID:000000003790092

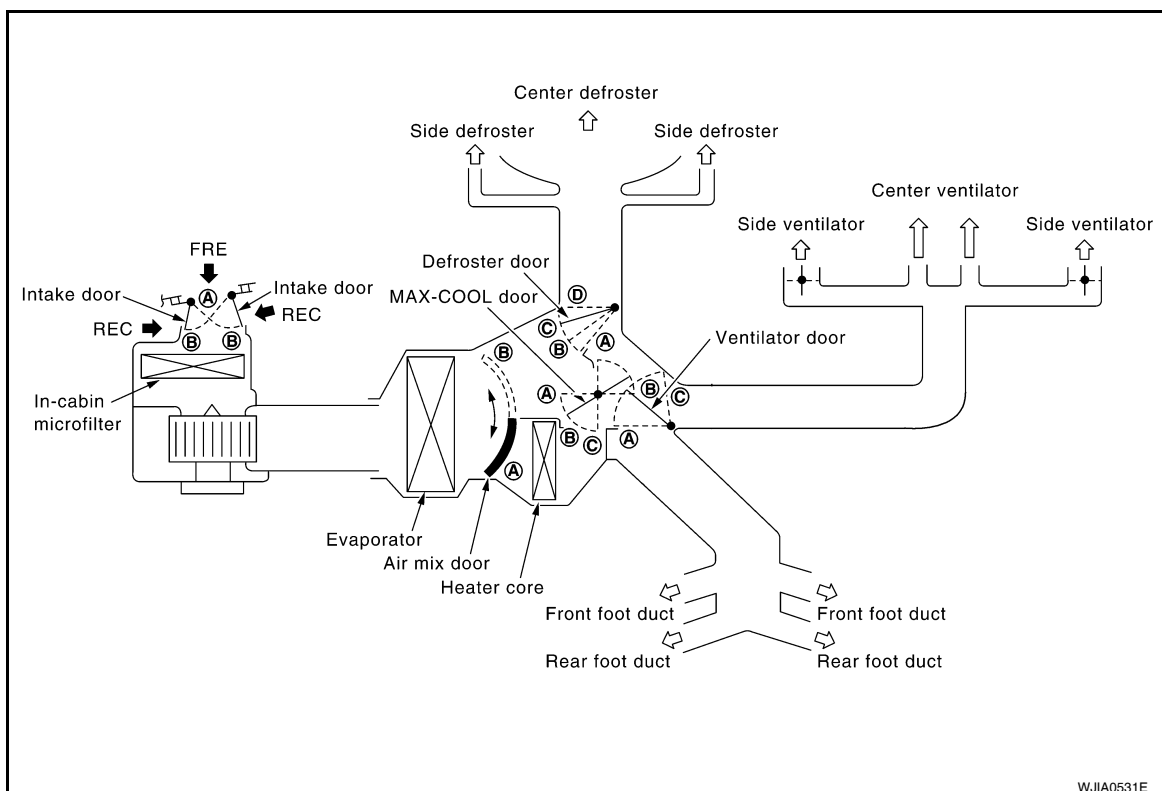

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Position or switch	MODE SW				DEF SW		REC SW		Temperature switch			OFF SW
	VENT	B/L	FOOT	D/F	ON	OFF	ON	OFF				
Door					FRONT 							
Ventilator door	(A)	(B)	(C)	(C)	(C)	—	—		—			(C)
MAX-COOL door	(A)	(B)	(B)	(B)	(C)		—		—			(B)
Defroster door	(D)	(D)	(D _{or} C)	(B)	(A)		—		—			(C)
Intake door	—				(B)		(A)	(B)	—			(B)
Air mix door	—				—		—		(A)		(B)	—

AWIIA0447GB

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

DIAGNOSIS SYSTEM (HVAC)

CONSULT-III Function (HVAC)

INFOID:000000003790093

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic mode	Description
SELF-DIAG RESULTS	Displays Front air control self-diagnosis results.
DATA MONITOR	Displays Front air control input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ECU PART NUMBER	Front air control part number can be read.

SELF-DIAGNOSIS

Display Item List

DTC	Description	Reference page
B2573	Battery voltage out of range	CHG-4, "Work Flow"
B257B	Ambient sensor circuit short	HAC-148, "Ambient Sensor Diagnosis Procedure"
B257C	Ambient sensor circuit open	
B2581	Intake sensor circuit short	HAC-151, "Intake Sensor Diagnosis Procedure"
B2582	Intake sensor circuit open	
U1000	CAN bus fault	LAN-14, "Trouble Diagnosis Flow Chart"

DATA MONITOR

Display Item List

Monitor item	Value	Contents
BATT VIA CAN	"V"	Displays battery voltage signal.
IGN VIA CAN	"ON/OFF"	Displays ignition switch signal.
AMB TEMP SEN	"°C"	Displays ambient sensor signal.
EVAP TEMP SEN	"°C"	Displays intake sensor signal.
MODE FDBCK	"V"	Displays mode door motor feedback signal.
DVR MIX FDBCK	"V"	Displays air mix door motor feedback signal.
DEF FDBCK	"V"	Displays defroster door motor feedback signal.
RECIRC	"ON/OFF"	Displays recirculation switch signal.
DEFROST	"ON/OFF"	Displays defroster switch signal.
A/C	"ON/OFF"	Displays A/C switch signal.
L TEMP UP	"ON/OFF"	Displays driver side temperature control dial (temp increase) signal.
L TEMP DOWN	"ON/OFF"	Displays driver side temperature control dial (temp decrease) signal.
RR DEFOG	"ON/OFF"	Displays rear defroster request signal.
FAN UP	"ON/OFF"	Displays blower motor (blower speed increase) signal.
FAN DOWN	"ON/OFF"	Displays blower motor (blower speed decrease) signal.

DIAGNOSIS SYSTEM (BCM)

CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000004113208

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to BCS-49, "DTC Index" .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"> • Enables to read and save the vehicle specification. • Enables to write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITONER		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	PANIC ALARM			×

CONSULT-III Function (BCM - AUTO AIR CONDITIONER)

INFOID:000000004113209

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Monitor Item [Unit]	Contents
IGN ON SW [ON/OFF]	Display [ignition switch position (On)/(Off), ACC position (Off)] status as judged from ignition switch signal
FAN ON SIG [ON/OFF]	Display [FAN (On)/FAN (Off)] status as judged from blower fan motor switch signal
AIR COND SW [ON/OFF]	Display [COMP (On)/COMP (Off)] status as judged from air conditioner switch signal

SELF-DIAGNOSIS FUNCTION

Front Air Control Self-Diagnosis

INFOID:000000003790096




A/C SYSTEM SELF-DIAGNOSIS FUNCTION


The self-diagnosis function is built into the front air control to quickly locate the cause of malfunctions.

DESCRIPTION

The self-diagnostic system diagnoses sensors, CAN system, and battery voltage on front air control. Refer to applicable sections (items) for details. Fault codes (if any are present) will be displayed in the ambient temperature display area (if equipped). Refer to [HAC-115, "Front Air Control Self-Diagnosis Code Chart"](#).

SELF-DIAGNOSTIC MODE

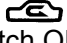1. Rotate the blower control dial counterclockwise to the OFF position.
2. Press the FLOOR/DEF () and DEF () mode switches together and release on the front air control.
3. Press the REC () to enter self diagnostic mode.
4. Turn ignition switch OFF to exit out of self-diagnostic mode.

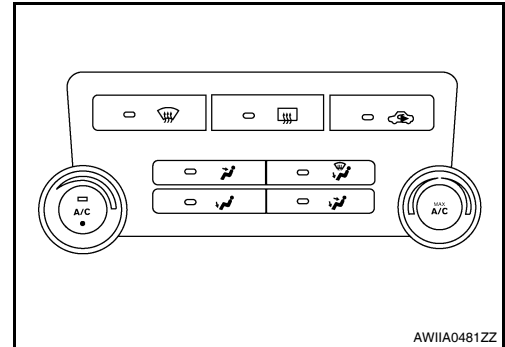

Front Air Control Self-Diagnosis Code Chart

INFOID:000000003790097

SELF-DIAGNOSTIC CODE CHART

Code No.	Reference page	
03	Battery voltage out of range	CHG-4, "Work Flow"
40	Ambient sensor circuit short	HAC-60, "Ambient Sensor Diagnosis Procedure"
41	Ambient sensor circuit open	
56	Intake sensor circuit short	HAC-68, "Intake Sensor Diagnosis Procedure"
57	Intake sensor circuit open	
80	CAN bus fault	LAN-14, "Trouble Diagnosis Flow Chart"
90	Stuck button	VTL-8, "Removal and Installation"

MANUAL A/C IDENTIFICATION TABLE

< COMPONENT DIAGNOSIS >



[MANUAL A/C (TYPE 1)]

COMPONENT DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790098

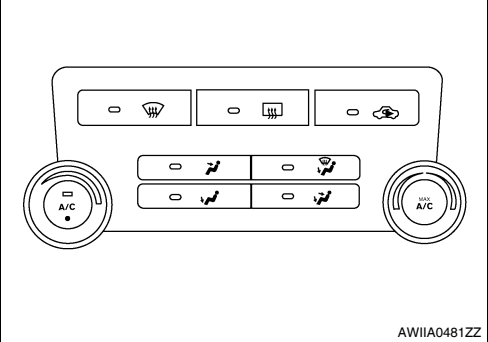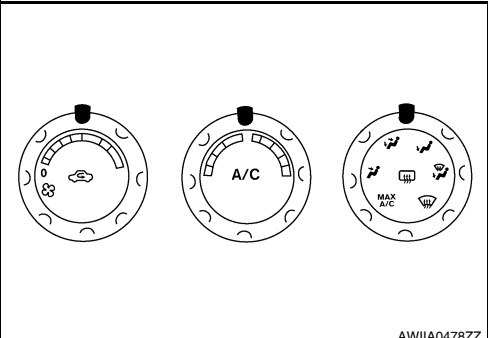Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

MODE DOOR MOTOR

System Description

INFOID:000000003790099

SYSTEM DESCRIPTION

Component Parts

Mode door control system components are:

- Front air control
- Mode door motor
- PBR (built into mode door motor)
- Intake sensor


System Operation

The mode door position (vent, B/L, foot, D/F, and defrost) is set by the front air control by means of the mode door motor. When a mode door position is selected on the front air control, voltage is applied to one circuit of the mode door motor while ground is applied to the other circuit, causing the mode door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the mode door position by measuring the voltage signal on the PBR circuit.

COMPONENT DESCRIPTION

Mode Door Motor

The mode door motor is attached to the heater & cooling unit assembly. It rotates so that air is discharged from the outlet as indicated by the front air control. Motor rotation is conveyed to a link which activates the mode door.

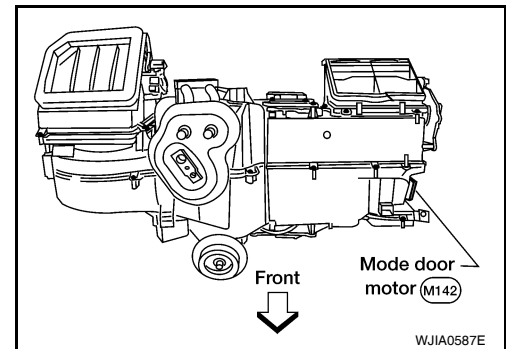


Mode Door Motor Component Function Check




INFOID:000000003790100

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - DISCHARGE AIR

1. Press each mode switch and press the  (DEF) switch. Each position indicator should illuminate.
2. Confirm that discharge air comes out according to the air distribution table. Refer to [HAC-110, "Discharge Air Flow"](#).

NOTE:

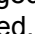Confirm that the compressor clutch is engaged (visual inspection) and intake door position is at FRESH  when DEF () or D/F () is selected.

Can a symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

MODE DOOR MOTOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

>> GO TO 4.

4. CHECK MODE DOOR OPERATION

Check and verify mode door mechanism for smooth operation in each mode.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair as necessary.

5. CHECK THE MODE DOOR MOTOR PBR CIRCUIT

Perform diagnostic procedure for the mode door motor. Refer to [HAC-117. "Mode Door Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair PBR circuit or replace motor. Refer to [HAC-118. "Mode Door Motor Diagnosis Procedure"](#).

6. RECHECK FOR SYMPTOMS

Perform a complete operational check and check for any symptoms. Refer to [HAC-100. "Operational Check"](#).

Does another symptom exist?

YES >> Repair as necessary.

NO >> Replace front air control Refer to [VTL-8. "Removal and Installation"](#).

Mode Door Motor Diagnosis Procedure

INFOID:000000003790101


SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Press the B/L (↺) mode switch.
3. Check voltage between front air control harness connector M180 terminal 19 and terminal 20 while pressing the mode switch to the floor (↵) mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M180	20	19	Press mode switch	Battery voltage

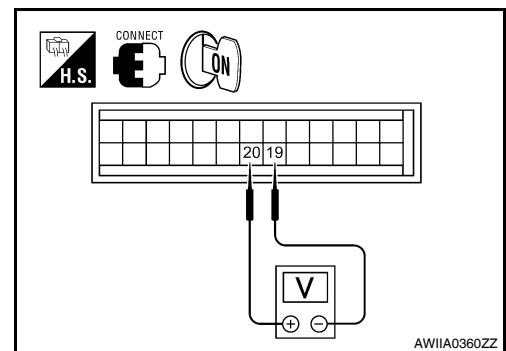

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK MODE DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 19, 20 and ground.


19 - Ground : Continuity should not exist.

20 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

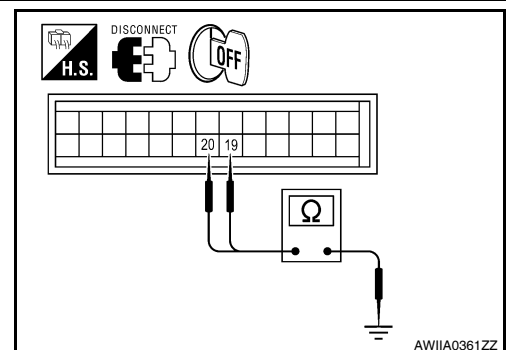



MODE DOOR MOTOR


< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

3. CHECK FRONT AIR CONTROL FOR GROUND AND POWER

1. Press the mode switch to the D/F () mode.
2. Check voltage between front air control harness connector M180 terminal 19 and terminal 20 while pressing the mode switch to the vent () mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M180	19	20	Press mode switch	Battery voltage

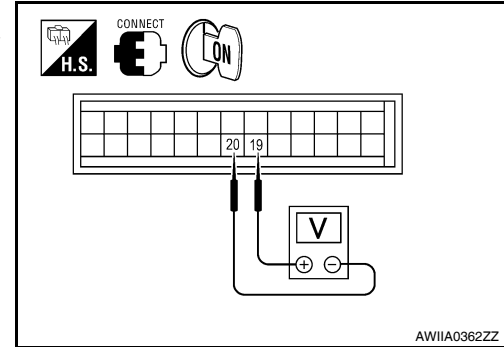

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

4. CHECK MODE DOOR MOTOR AND CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 19 and terminal 20.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

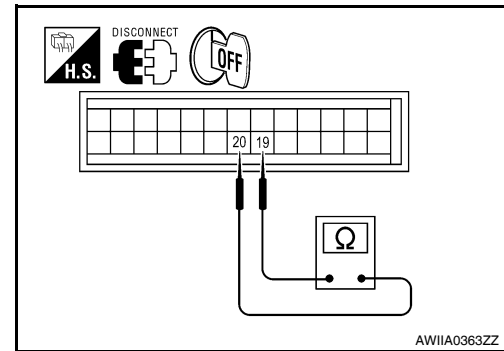

5. CHECK MODE DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the mode door motor harness connector.
2. Check continuity between front air control harness connector M180 (A) terminal 19, 20 and the mode door motor harness connector M142 (B) terminal 5, 6.


5 - 19 : Continuity should exist.

6 - 20 : Continuity should exist.

Is the inspection result normal?

YES >> Replace mode door motor. Refer to [VTL-19. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

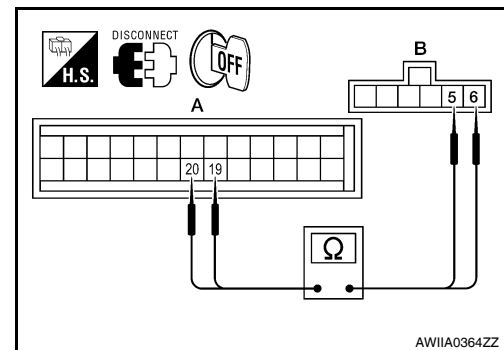

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND


1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M181 (A) terminal 28 and M180 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M180, M181	28	3	5V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

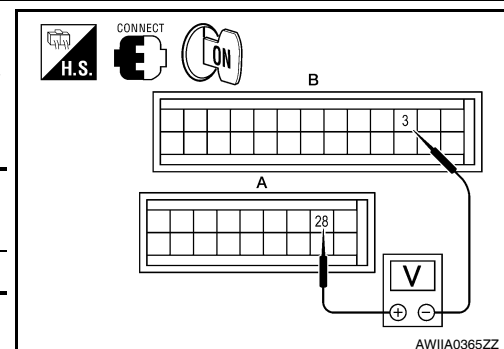

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

MODE DOOR MOTOR

[MANUAL A/C (TYPE 1)]


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M181 terminal 28 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

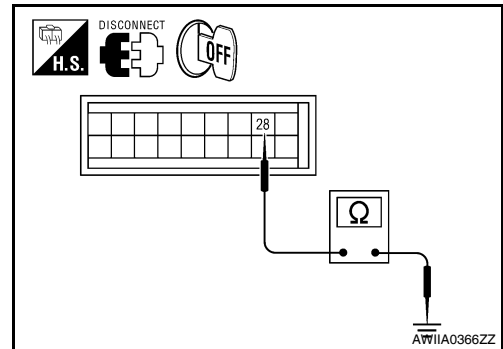


8.CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M181 (A) terminal 28 and M180 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
- NO >> GO TO 9.

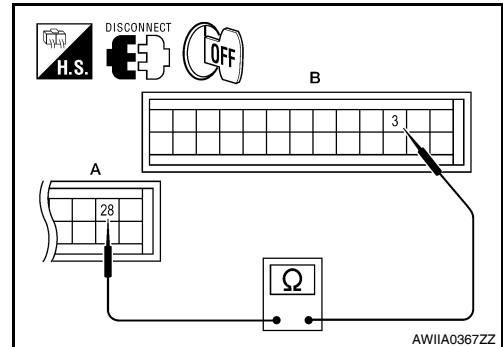

9.CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN


1. Disconnect the mode door motor harness connector.
2. Check continuity between mode door motor harness connector M142 (B) terminal 3, 1 and front air control harness connector M180 (C) terminal 3, M181 (A) terminal 28.

28 - 1 : Continuity should exist.

3 - 3 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

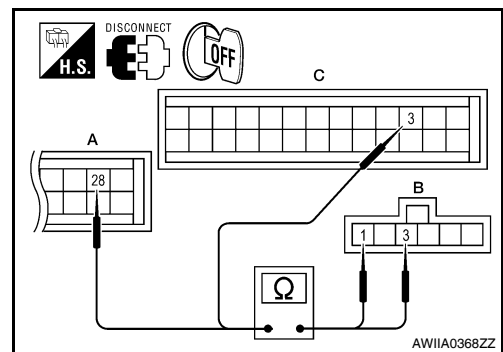


10.CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M180 terminal 7 and ground while cycling mode switch through all modes.

Voltage : Approx. 1V - 4.5V

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> GO TO 11.

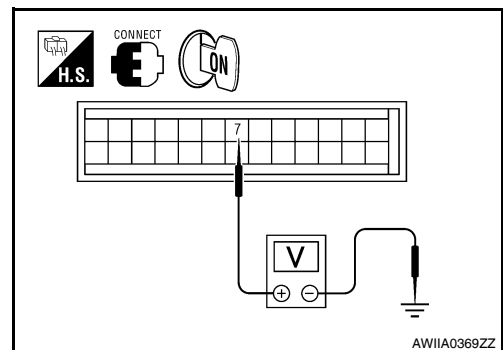

11.CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

MODE DOOR MOTOR

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 7 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

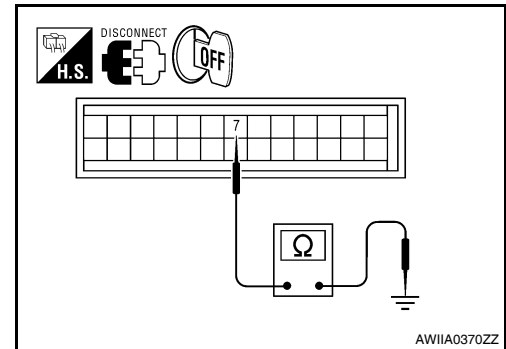


12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the mode door motor harness connector and front air control harness connector.
3. Check continuity between mode door motor harness connector M142 (B) terminal 2 and front air control harness connector M180 (A) terminal 7.

Continuity should exist.

Is the inspection result normal?

- YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

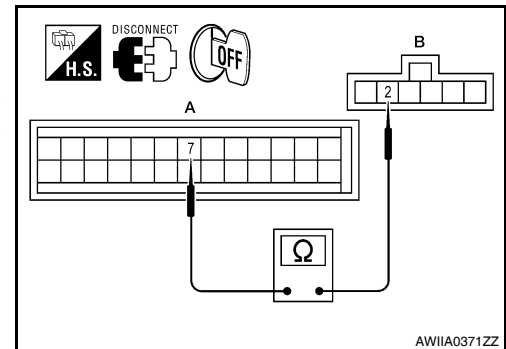

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AIR MIX DOOR MOTOR

System Description

INFOID:000000003790102

SYSTEM DESCRIPTION

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

SYSTEM DESCRIPTION

Component Parts


Air mix door control system components are:

- Front air control
- Air mix door motor
- PBR (built-into air mix door motors)
- Intake sensor

System Operation

The front air control receives data from the temperature selected by the driver side, passenger side, and rear. The front air control then applies a voltage to one circuit of the appropriate air mix door motor, while ground is applied to the other circuit, causing the appropriate air mix door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the air mix door positions by measuring the voltage signal on the PBR circuits of each door.


Air Mix Door Control Specification

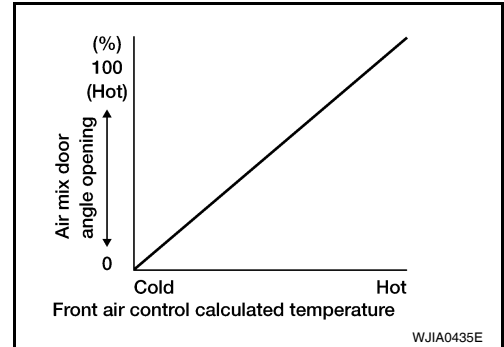

COMPONENT DESCRIPTION

Air Mix Door Motors

The air mix door motor is attached to the front heater & cooling unit assembly. The motor rotates so that the air mix door is opened or closed to a position set by the front air control. Motor rotation is then conveyed through a shaft and the air mix door position is then fed back to the front air control by the PBR built into the air mix door motor.

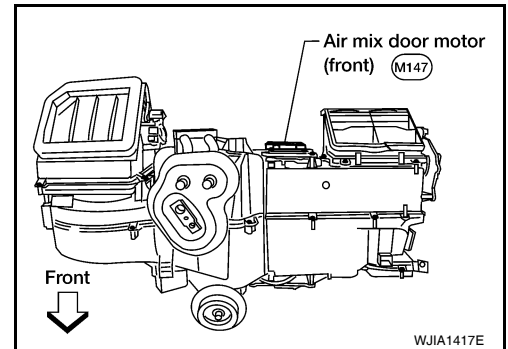

Air Mix Door Motor Component Function Check

INFOID:000000003790103

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE INCREASE

1. Turn the temperature control dial clockwise to maximum hot.
2. Check for hot air at discharge air outlets.

AIR MIX DOOR MOTOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

>> GO TO 2.

2. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE DECREASE

1. Turn the temperature control dial counterclockwise to maximum cold.
2. Check for cold air at discharge air outlets.

Can a symptom be duplicated?

YES >> GO TO 4.

NO >> GO TO 3.

3. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Can a symptom be duplicated?

YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> System OK.

4. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 5.

5. CHECK AIR MIX DOOR OPERATION

Check and verify air mix door mechanism for smooth operation from maximum cold °to maximum hot in each mode.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair as necessary.

6. CHECK THE AIR MIX DOOR MOTOR PBR CIRCUIT

Perform diagnostic procedure for the air mix door motor. Refer to [HAC-122, "Air Mix Door Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair PBR circuit or replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

7. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).

Air Mix Door Motor Diagnosis Procedure

INFOID:000000003790104

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND


AIR MIX DOOR MOTOR

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch ON.
2. Rotate temperature control dial to maximum hot.
3. Check voltage between front air control harness connector M180 terminal 17 and terminal 18 while rotating temperature control dial to maximum cold.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M180	17	18	Rotate temp control dial	Battery voltage

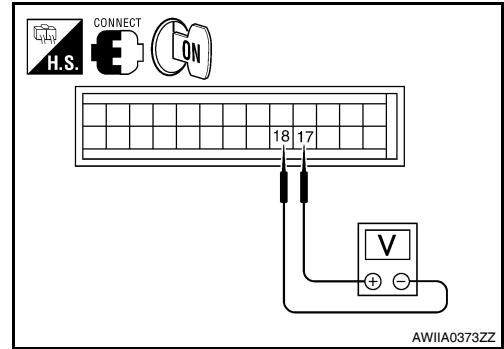

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.


2. CHECK AIR MIX DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 17, 18 and ground.

- 17 - Ground : Continuity should not exist.**
18 - Ground : Continuity should not exist.

Is the inspection result normal?


- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

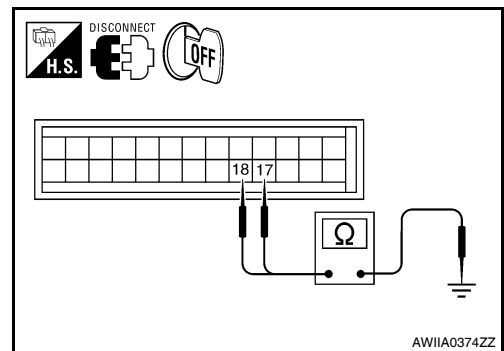

3. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Rotate temperature control dial to maximum hot.
3. Check voltage between front air control harness connector M180 terminal 17 and terminal 18 while rotating temperature control dial to maximum cold.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M180	18	17	Rotate temp control dial	Battery voltage

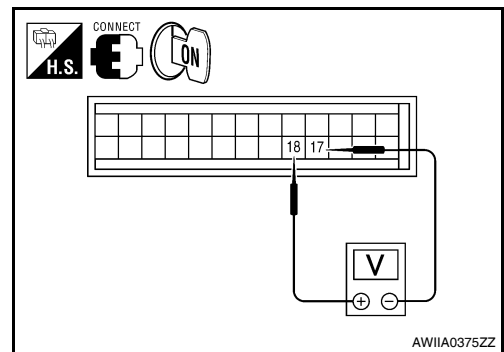

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).


4. CHECK AIR MIX DOOR MOTOR CIRCUITS FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 17 and terminal 18.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 6.
NO >> GO TO 5.

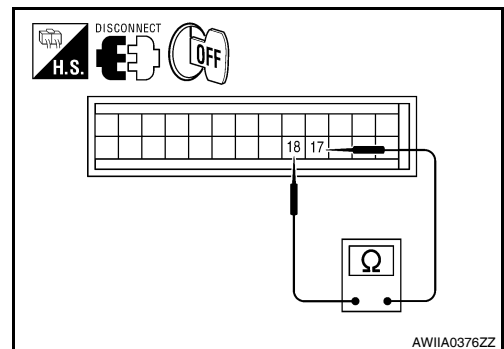

5. CHECK AIR MIX DOOR MOTOR CIRCUITS FOR OPEN

AIR MIX DOOR MOTOR

[MANUAL A/C (TYPE 1)]


< COMPONENT DIAGNOSIS >

1. Disconnect the air mix door motor harness connector.
2. Check continuity between front air control harness connector M180 (A) terminal 17, 18 and the air mix door motor harness connector M147 (B) terminal 1, 6.

17 - 1 : Continuity should exist.
18 - 6 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace air mix door motor. Refer to [VTL-20. "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

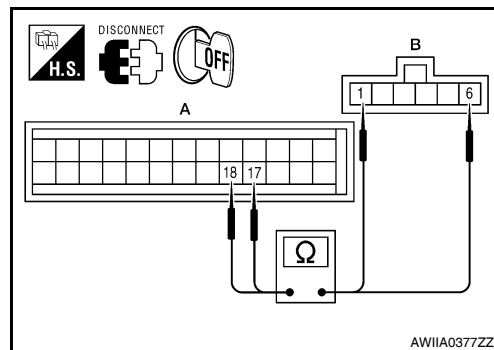


6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND

1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M181 (A) terminal 28 and M180 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M181, M180	28	3	5V

Is the inspection result normal?

- YES >> GO TO 8.
 NO >> GO TO 7.

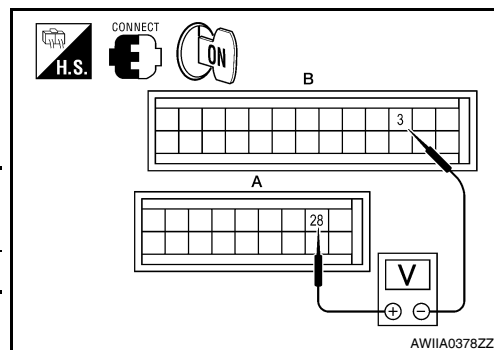


7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M181 terminal 28 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

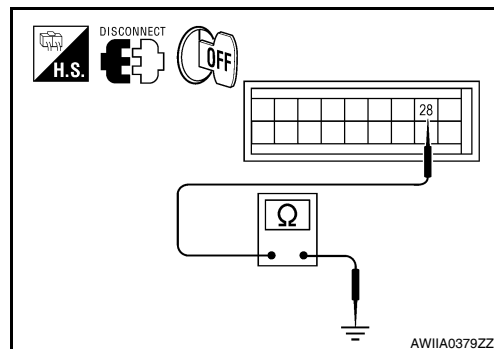


8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M181 (A) terminal 28 and M180 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
 NO >> GO TO 9.

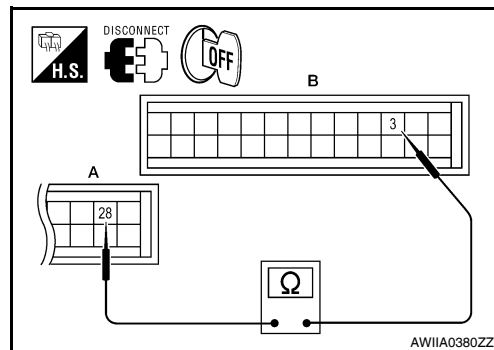

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AIR MIX DOOR MOTOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

1. Disconnect the air mix door motor harness connector.
2. Check continuity between air mix door motor harness connector M147 (B) terminal 3, 2 and front air control harness connector M180 (C) terminal 3 and M181 (A) terminal 28.

28 - 3 : Continuity should exist.

3 - 2 : Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

10. CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M180 terminal 6 and ground while rotating temperature control dial from maximum hot to maximum cold.

Voltage : Approx. .5V - 4.5V

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 11.

11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 6 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN





1. Turn ignition switch OFF.
2. Disconnect the air mix door motor harness connector and front air control harness connector.
3. Check continuity between air mix door motor harness connector M147 (B) terminal 4 and front air control harness connector M180 (A) terminal 6.

Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

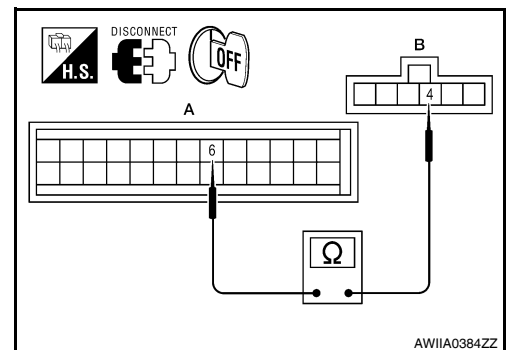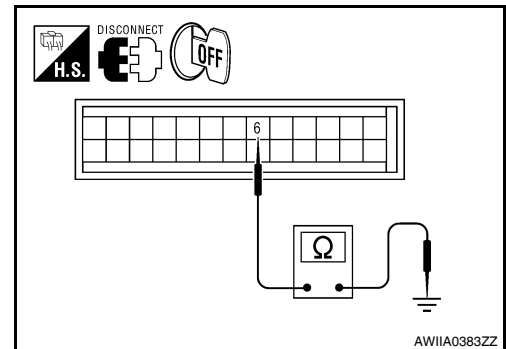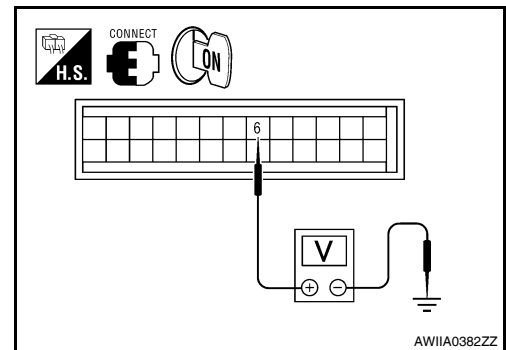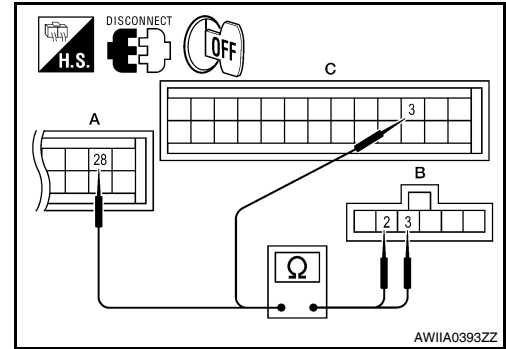

INTAKE DOOR MOTOR

System Description

INFOID:000000003790105

SYSTEM DESCRIPTION

SYMPTOM:

- Intake door motor does not operate normally.
- Intake door does not change.

SYSTEM DESCRIPTION

Component Parts


Intake door control system components are:

- Front air control
- Intake door motor (PRB built into the intake door motor)
- Ambient sensor
- Intake sensor

System Operation

The intake door control determines the intake door position based on the position of the recirculation switch. When the recirculation switch is depressed the intake door motor rotates closing off the fresh air inlet and recirculating the cabin air. If the recirculation switch is depressed again, the intake door motor rotates in the opposite direction, again allowing fresh air into the cabin.


Intake Door Control Specification

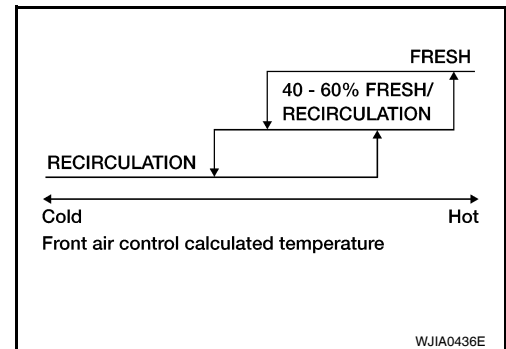

COMPONENT DESCRIPTION

Intake door motor

The intake door motor is attached to the intake unit. It rotates so that air is drawn from inlets set by the front air control. Motor rotation is conveyed to a lever which activates the intake door.

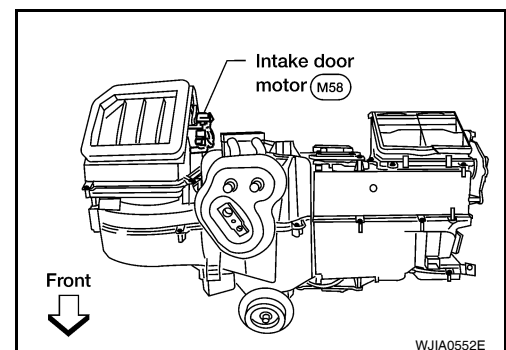






Intake Door Motor Component Function Check

INFOID:000000003790106

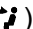INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - REC ()

1. Press the vent mode switch ().
2. Press REC () switch. The REC () indicator should illuminate.
3. Press REC () switch again. The REC () indicator should go out.
4. Listen for intake door position change (you should hear blower sound change slightly).

INTAKE DOOR MOTOR

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >

Can a symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2.PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-100. "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-99. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3.CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4.CHECK INTAKE DOOR OPERATION

Check and verify intake door mechanism for smooth operation.

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair intake door mechanism.

5.RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100. "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-99. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

Intake Door Motor Diagnosis Procedure

INFOID:000000003790107

SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR

1.CHECK FRONT AIR CONTROL FOR POWER AND GROUND


1. Turn ignition switch ON.
2. Check voltage between front air control harness connector M180 terminal 21 and terminal 22 while placing the HVAC system into self-diagnostic mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
front air control: M180	21	22	Self-diagnostic mode	Battery voltage

Is the inspection result normal?

- OK >> GO TO 3.
- NO >> GO TO 2.

2.CHECK INTAKE DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

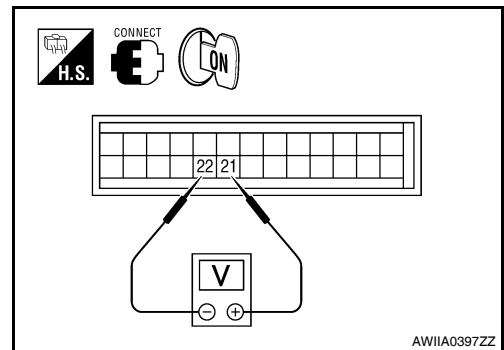

INTAKE DOOR MOTOR

[MANUAL A/C (TYPE 1)]


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 21, 22 and ground.

21 - Ground : Continuity should not exist.
22 - Ground : Continuity should not exist.

Is the inspection result normal?

- OK >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

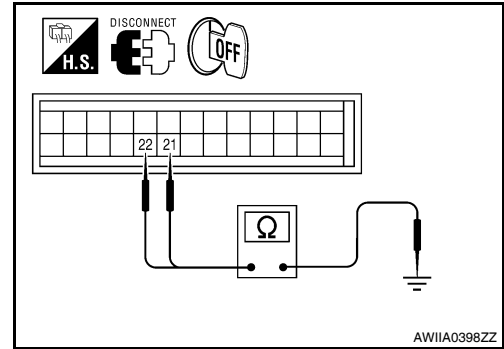


3. CHECK FRONT AIR CONTROL FOR GROUND AND POWER

1. Press the BACK button to back out of self-diagnostic mode.
2. Check voltage between front air control harness connector M180 terminal 21 and terminal 22 while placing the HVAC system into self-diagnostic mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
front air control: M180	22	21	Self-diagnostic mode	Battery voltage

Is the inspection result normal?

- OK >> GO TO 4.
 NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

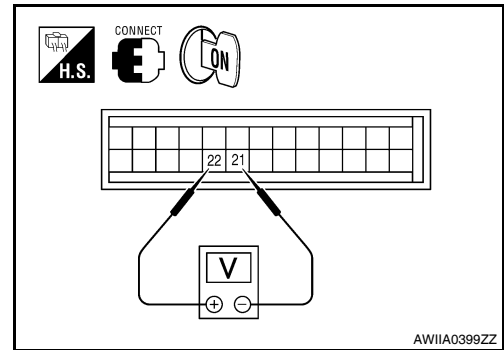


4. CHECK INTAKE DOOR MOTOR AND CIRCUITS FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 21 and terminal 22.

Continuity should exist.

Is the inspection result normal?

- OK >> Replace intake door motor. Refer to [VTL-11, "Removal and Installation"](#).
 NO >> GO TO 5.

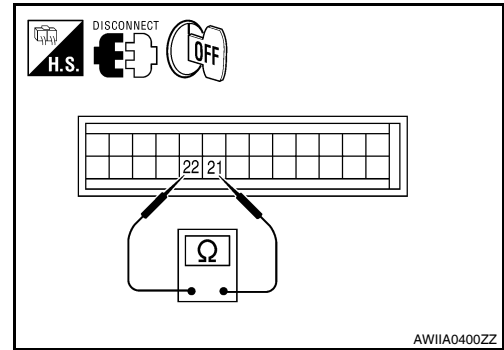


5. CHECK INTAKE DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the intake door motor harness connector.
2. Check continuity between front air control harness connector M180 (A) terminal 21, 22 and the intake door motor harness connector M58 (B) terminal 1, 6.

21 - 6 : Continuity should exist.
22 - 1 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace intake door motor. Refer to [VTL-11, "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

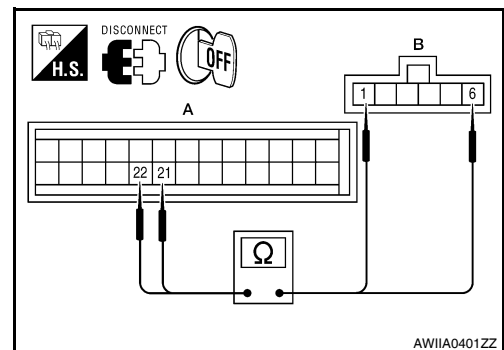

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

DEFROSTER DOOR MOTOR CIRCUIT

System Description

INFOID:000000003790108

SYSTEM DESCRIPTION

Component Parts

Defroster door control system components are:

- Front air control
- Defroster door motor
- PBR (Built into defroster door motor)
- Ambient sensor
- Intake sensor


System Operation

The front air control determines defroster door position based on the position of the defroster switch. When the defroster switch is depressed, the defroster door motor rotates directing air to the defroster ducts. When any mode other than defroster is selected, the defroster motor rotates in the opposite direction closing off air flow to the defroster ducts.

COMPONENT DESCRIPTION

Defroster door motor

The defroster door motor is attached to the front heater & cooling unit assembly. The front air control sends a voltage to rotate to the defroster door directing the air flow either to the defroster ducts, or to the floor ducts, depending on which way the voltage and ground are applied to the motor leads. Motor rotation is conveyed to a lever which activates the defroster door.

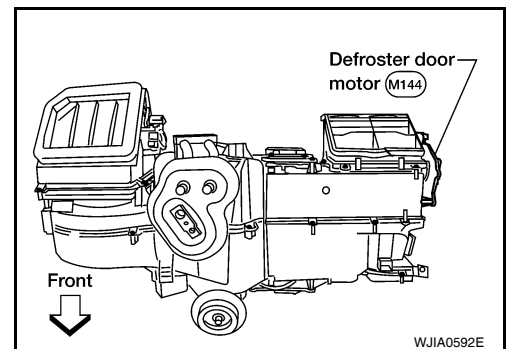



Defroster Door Motor Component Function Check

INFOID:000000003790109

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - DEFROSTER DOOR

1. Select vent () mode.
2. Press the defrost switch (). Defroster indicator should illuminate.
3. Listen for defroster door position change (blower sound should change slightly).

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> SYSTEM OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK DEFROSTER DOOR MOTOR

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Perform diagnostic procedure for defroster door motor. Refer to [HAC-130. "Defroster Door Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair PBR circuit or replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).

5.CHECK DEFROSTER DOOR OPERATION

Check and verify defroster door mechanism for smooth operation.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).

NO >> Repair defroster door mechanism.

Defroster Door Motor Diagnosis Procedure

INFOID:000000003790110

SYMPTOM:


- Defroster door does not change.
- Defroster door motor does not operate normally.

DIAGNOSTIC PROCEDURE FOR DEFROSTER DOOR MOTOR

1.CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Press the defroster switch (☞).
3. Check voltage between front air control harness connector M180 terminal 24 and terminal 23 and then press the defroster switch (☞) again.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M180	24	23	Press defroster switch	Battery voltage

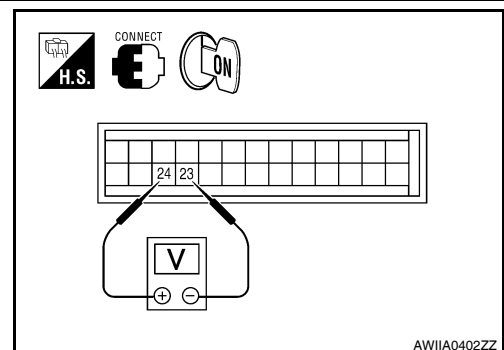

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DEFROSTER DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 23, 24 and ground.

23 - Ground : Continuity should not exist.


24 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

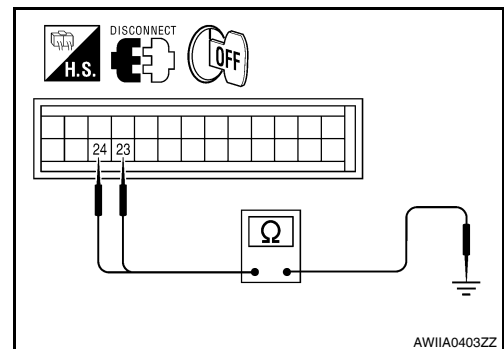

3.CHECK FRONT AIR CONTROL FOR GROUND AND POWER




DEFROSTER DOOR MOTOR CIRCUIT

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >

1. Press the defroster switch ().
2. Check voltage between front air control harness connector M180 terminal 23 and terminal 24 and the press the defroster switch () again.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M180	23	24	Press defroster switch	Battery voltage

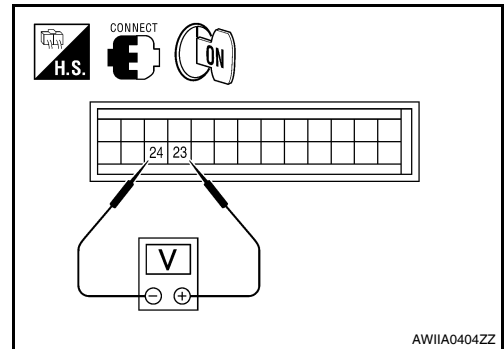

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

4. CHECK DEFROSTER DOOR MOTOR AND CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 23 and terminal 24.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

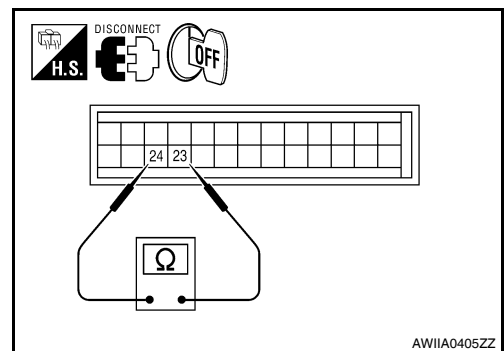

5. CHECK DEFROSTER DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the defroster door motor harness connector.
2. Check continuity between front air control harness connector M180 (A) terminal 23, 24 and the defroster door motor harness connector M144 (B) terminal 1, 6.

23 - 1 : Continuity should exist.

24 - 6 : Continuity should exist.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND


1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M181 (A) terminal 28 and M180 (B) terminal 3.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M181, M180	28	3	5V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

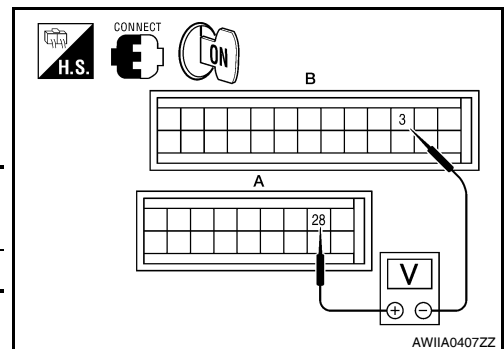

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M181 terminal 28 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

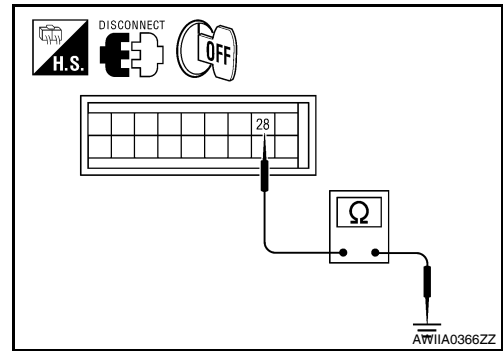


8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M181 (A) terminal 28 and M180 (B) terminal 3.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
- NO >> GO TO 9.

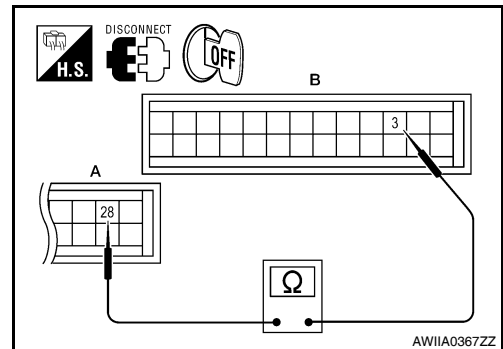

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN


1. Disconnect the defroster door motor harness connector.
2. Check continuity between defroster door motor harness connector M144 (B) terminal 3, 2 and front air control harness connector M181 (A) terminal 28, and M180 (C) terminal 3.

28 - 3 : Continuity should exist.

3 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

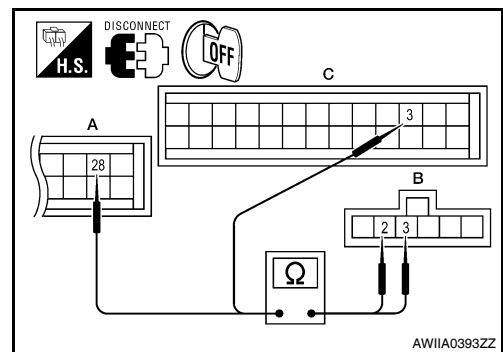


10. CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M180 terminal 10 and ground while cycling defroster switch on and off.

Voltage : Approx. 1V - 4.5V

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> GO TO 11.

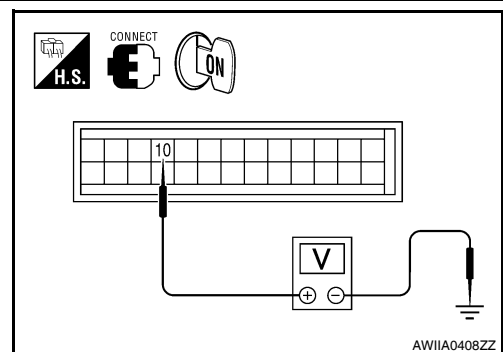

11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

DEFROSTER DOOR MOTOR CIRCUIT

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >


1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M180 terminal 10 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

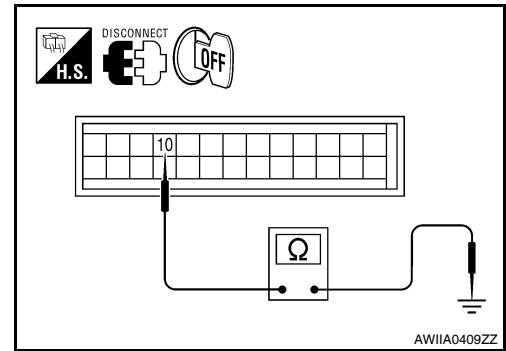

12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the defroster door motor harness connector and front air control harness connector.
3. Check continuity between defroster door motor harness connector M144 (B) terminal 4 and front air control harness connector M180 (A) terminal 10.

Continuity should exist.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

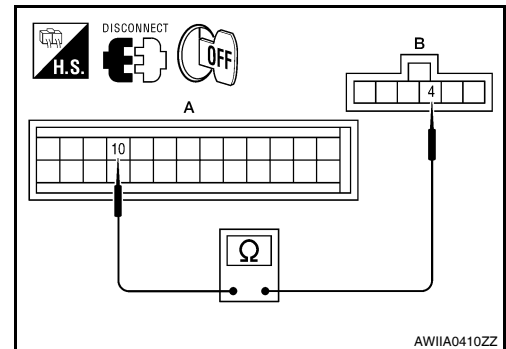

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

BLOWER MOTOR CONTROL SYSTEM

System Description

INFOID:000000003790111


SYSTEM DESCRIPTION

Component Parts

Blower speed control system components are:

- Front air control
- Variable blower control
- Front blower motor relay
- Front blower motor
- Ambient sensor
- Intake sensor


System Operation

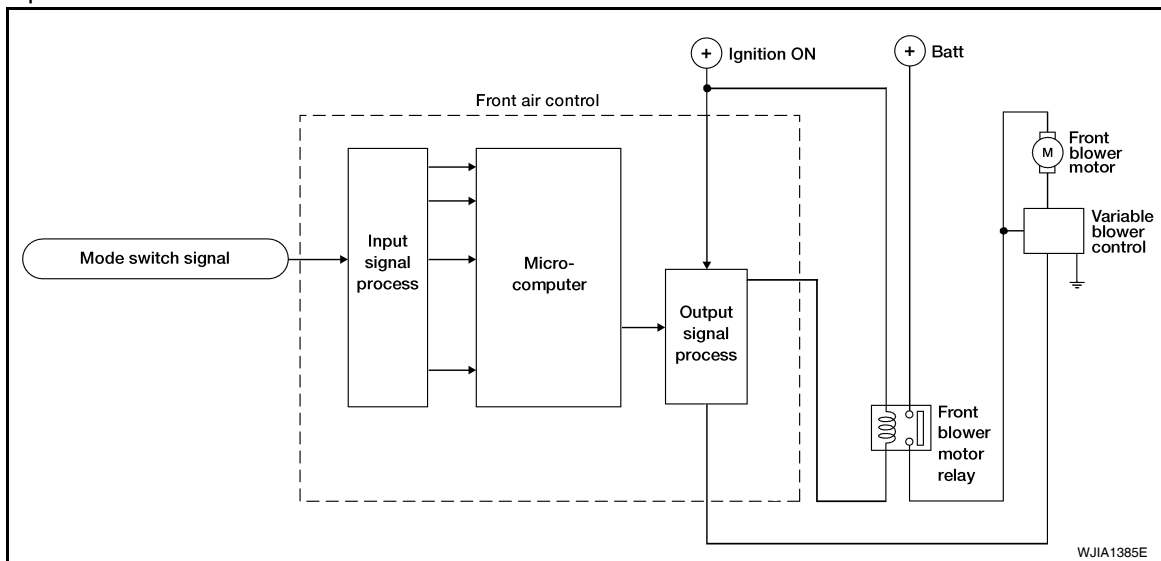

COMPONENT DESCRIPTION

Variable Blower Control

The variable blower control is located on the cooling unit. The variable blower control receives a gate voltage from the front air control to steplessly maintain the blower motor voltage in the 0 to 5 volt range (approx.).

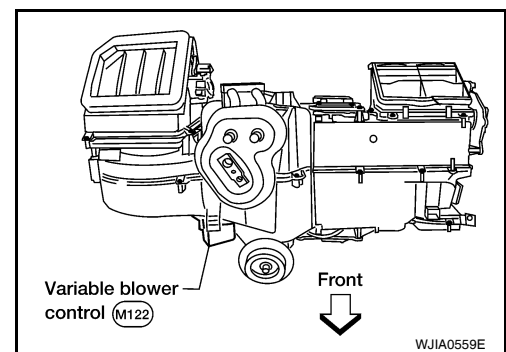

Front Blower Motor Component Function Check

INFOID:000000003790112

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - FRONT BLOWER

1. Rotate the blower control dial clockwise once. Blower motor should operate in low speed.
2. Rotate the blower control dial clockwise, and continue checking blower speed until all speeds are checked.

Can the symptom be duplicated?

YES >> GO TO 3.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

BLOWER MOTOR CONTROL SYSTEM

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >

NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK BLOWER MOTOR OPERATION

Check and verify blower motor operates manually in all speeds.

Does blower motor operate in all speeds?

YES >> GO TO 5.

NO >> Refer to [HAC-136, "Front Blower Motor Diagnosis Procedure"](#).

5. CHECK ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT

Check engine coolant temperature sensor circuit. Refer to [EC-126, "Diagnosis Procedure"](#).

Is the inspection results normal?

YES >> GO TO 6.

NO >> Replace engine coolant temperature sensor.

6. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).


Front Blower Motor Diagnosis Procedure

INFOID:000000003790113

SYMPTOM: Blower motor operation is malfunctioning.

DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning under starting blower speed control.

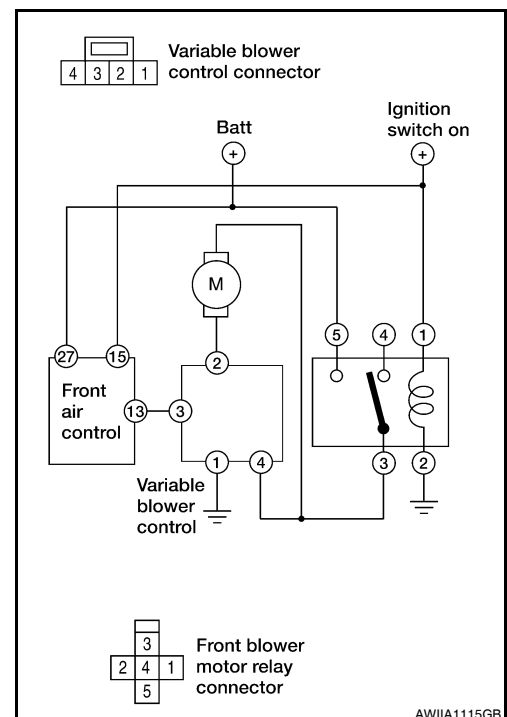

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

1. CHECK FUSES

Check 20A fuses [No. 24 and 27 (Located in the fuse and fusible link box)]. For fuse layout. Refer to [PG-73, "Terminal Arrangement"](#).

Fuses are good.

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> GO TO 9.


2. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector.
3. Turn ignition switch ON.
4. Press the A/C switch.
5. Rotate blower control dial to maximum speed.
6. Check voltage between front blower motor harness connector M62 terminal 2 and ground.

2 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 11.
- NO >> GO TO 3.

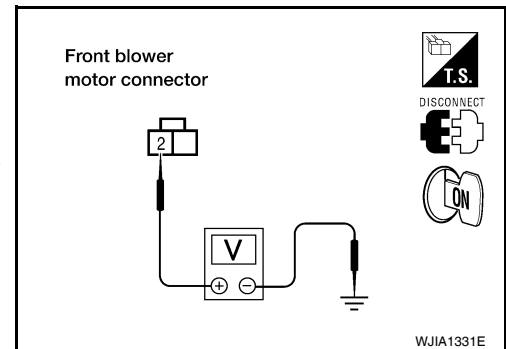


3. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor relay.
3. Check voltage between front blower motor relay harness connector M107 terminal 5 and ground.

5 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

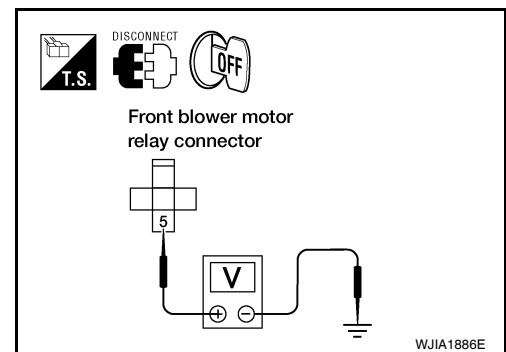

4. CHECK FRONT BLOWER MOTOR RELAY

Turn ignition switch OFF.

Check front blower motor relay. Refer to [HAC-139, "Front Blower Motor Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace front blower motor relay.


5. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) CIRCUIT FOR OPEN

Check continuity between front blower motor relay harness connector M107 terminal 3 and front blower motor harness connector M62 terminal 2.

3 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair harness or connector.

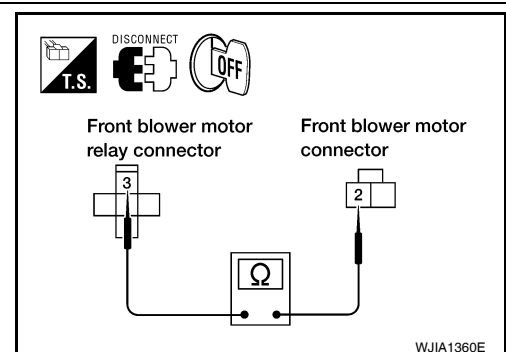

6. CHECK VARIABLE BLOWER CONTROL POWER SUPPLY CIRCUIT FOR OPEN

BLOWER MOTOR CONTROL SYSTEM

[MANUAL A/C (TYPE 1)]


< COMPONENT DIAGNOSIS >

1. Disconnect variable blower control harness connector.
2. Check continuity between front blower motor relay harness connector M107 (A) terminals 3 and variable blower control harness connector M122 (B) terminal 4.

3 - 4 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

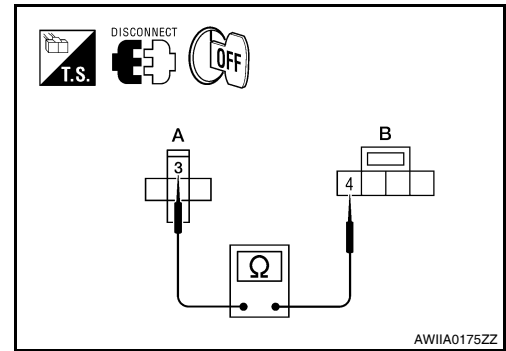


7. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

1. Disconnect front air control connector.
2. Check continuity between front air control harness connector M180 (B) terminal 13 and variable blower control harness connector M122 (A) terminal 3.

13 - 3 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair harness or connector.

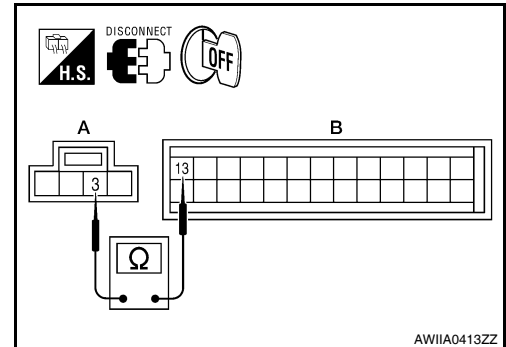


8. CHECK FRONT BLOWER MOTOR RELAY (COIL SIDE) POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front blower motor relay harness connector M107 terminal 2 and ground.

2 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 9.
NO >> Repair front blower motor ground circuit or connector.

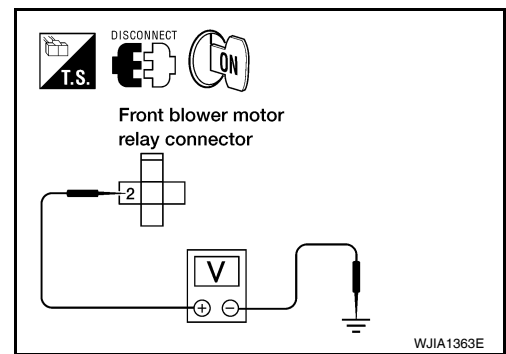

9. REPLACE FUSES

1. Replace fuses.
2. Activate the front blower motor.

Does the fuse blow?

- YES >> GO TO 10.
NO >> Inspection End.


10. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT FOR SHORT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector and variable blower control connector.
3. Check continuity between variable blower control harness connector M122 terminal 4 and ground.

4 - Ground : Continuity should not exist.

Is the inspection result normal?

- YES >> GO TO 11.
NO >> Repair harness or connector.

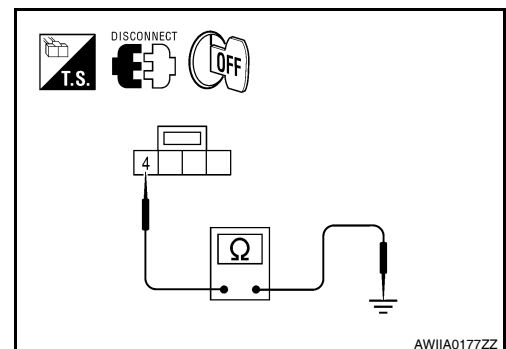

11. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

BLOWER MOTOR CONTROL SYSTEM

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >


1. Disconnect front air control connector.
2. Check continuity between front air control harness connector M180 (B) terminal 13 and variable blower control harness connector M122 (A) terminal 3.

13 - 3 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair harness or connector.

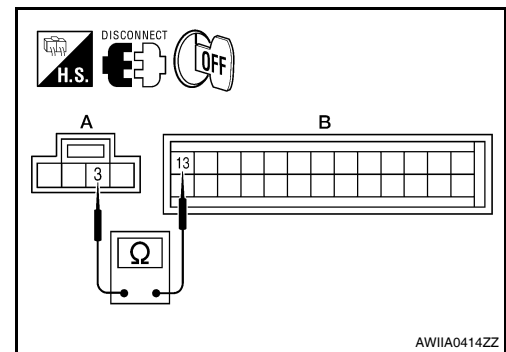

12. CHECK FRONT BLOWER MOTOR

Check front blower motor. Refer to [HAC-135, "Front Blower Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace front blower motor. Refer to [VTL-12, "Removal and Installation"](#).

13. CHECK BLOWER MOTOR GROUND CIRCUIT


Check continuity between front blower motor harness connector M62 (B) terminal 1 and variable blower control harness connector M122 (A) terminal 2.

1 - 2 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

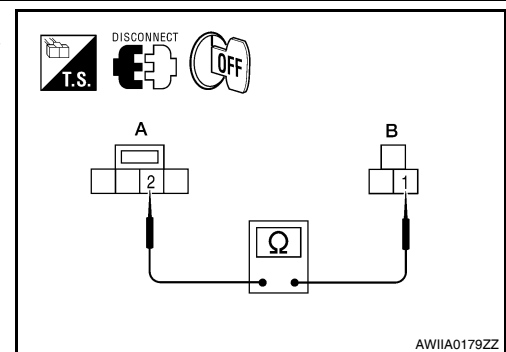

14. CHECK VARIABLE BLOWER CONTROL GROUND CIRCUIT


Check continuity between variable blower control harness connector M122 terminal 1 and ground.

1 - Ground : Continuity should exist.

Is the inspection result normal?

YES >> Replace variable blower control. Refer to [VTL-22, "Removal and Installation"](#).

NO >> Repair harness or connector.

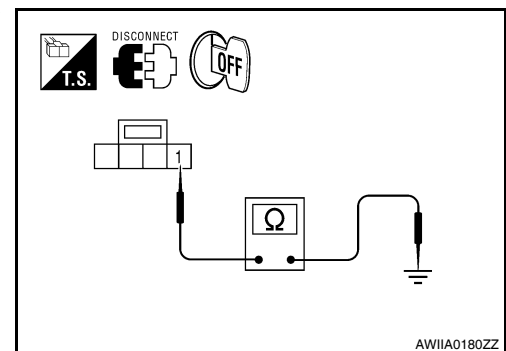

INFOID:000000003790114

Front Blower Motor Component Inspection


COMPONENT INSPECTION

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]


Check continuity between terminals 3 and 5 by supplying 12 volts and ground to coil side terminals 1 and 2 of the relay.

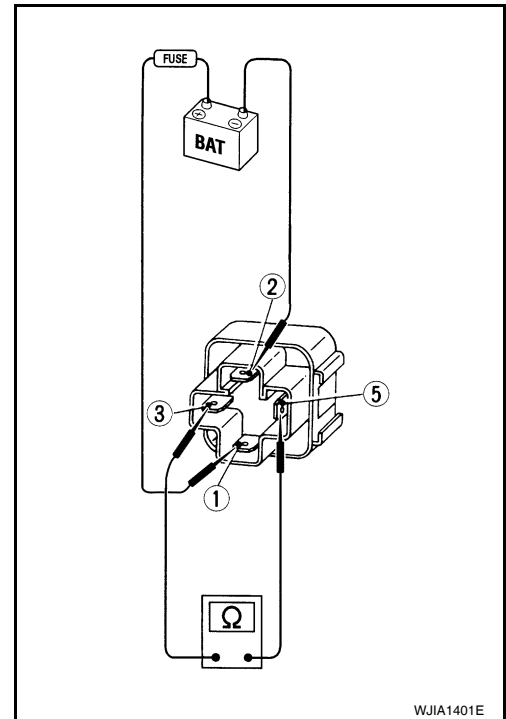

Front Blower Motor

Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the blower unit.
- Apply 12 volts to terminal 2 and ground to terminal 1 and verify that the motor operates freely and quietly.

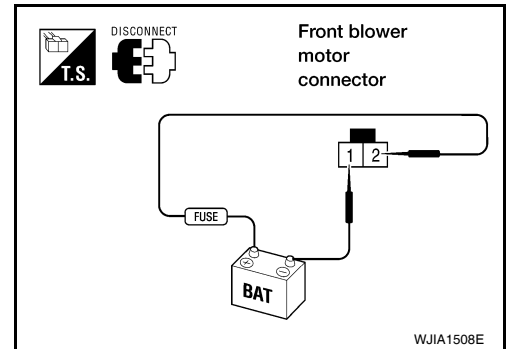

MAGNET CLUTCH

System Description

INFOID:000000003790115

SYSTEM DESCRIPTION

The front air control controls compressor operation based on ambient and intake temperature and a signal from ECM.

Low Temperature Protection Control

The front air control will turn the compressor ON or OFF as determined by a signal detected by the intake sensor and the ambient sensor.

When intake air temperature is higher than the preset value, the compressor turns ON. The compressor turns OFF when intake air temperature is lower than the preset value. That preset value is dependent on the ambient temperature, refer to the following table.


Ambient temperature °C (°F)	Compressor ON intake temperature °C (°F)	Compressor OFF intake temperature °C (°F)
0 (32)	5.5 (42)	5.0 (41)
10 (50)	5.5 (42)	5.0 (41)
20 (68)	5.5 (42)	5.0 (41)
30 (86)	4.0 (39)	3.5 (38)
40 (104)	3.5 (38)	3.0 (37)
50 (122)	3.5 (38)	3.0 (37)

Magnet Clutch Component Function Check

INFOID:000000003790116

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - MAGNET CLUTCH

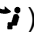1. Turn ignition switch ON.
2. Turn the blower control dial to low speed and press the A/C switch.
3. Press vent mode switch ().
4. Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

Can the symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100. "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-99. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK AMBIENT SENSOR

Check and verify ambient sensor circuit. Refer to [HAC-148. "Ambient Sensor Diagnosis Procedure"](#).

>> GO TO 5.

5. CHECK INTAKE SENSOR

Check and verify intake sensor circuit. Refer to [HAC-151. "Intake Sensor Diagnosis Procedure"](#).

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

>> GO TO 6.

6. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-100, "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-99, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).


NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

Magnet Clutch Diagnosis Procedure

INFOID:000000003790117

DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

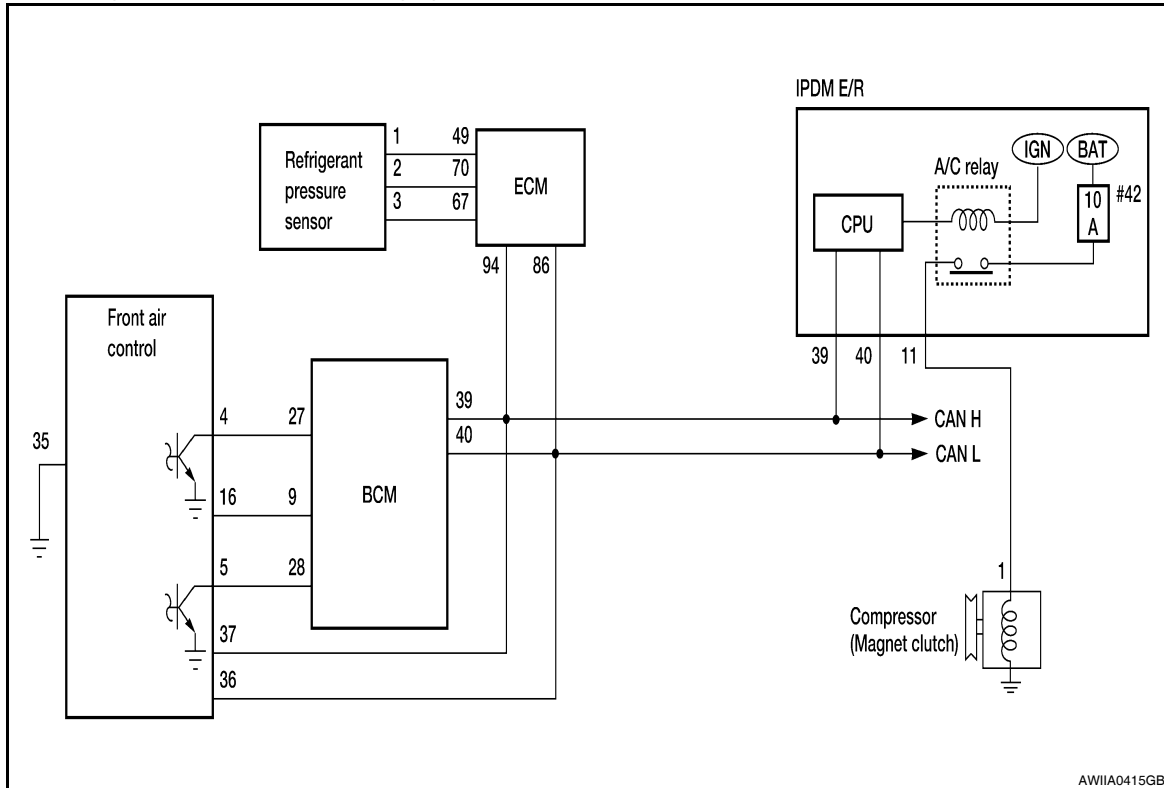

1. CHECK INTAKE AND AMBIENT SENSOR CIRCUITS

Check intake and ambient sensors. Refer to [HAC-115, "Front Air Control Self-Diagnosis"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> • Malfunctioning intake sensor. Refer to [HAC-151, "Intake Sensor Diagnosis Procedure"](#).

• Malfunctioning ambient sensor. Refer to [HAC-148, "Ambient Sensor Diagnosis Procedure"](#).

2. PERFORM AUTO ACTIVE TEST

Refer to [PCS-11, "Diagnosis Description"](#).

Does magnet clutch operate?

YES >> • WITH CONSULT-III
GO TO 5.

• WITHOUT CONSULT-III
GO TO 6.

NO >> Check 10A fuse (No. 42, located in IPDM E/R), and GO TO 3.

3. CHECK CIRCUIT CONTINUITY BETWEEN IPDM E/R AND COMPRESSOR

MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and compressor (magnet clutch) connector.
3. Check continuity between IPDM E/R harness connector E119 terminal 11 and A/C compressor harness connector F3 terminal 1.

11 - 1 : Continuity should exist.

Is the inspection result normal?



- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK MAGNET CLUTCH CIRCUIT

Check for operation sound when applying battery voltage direct current to terminal.

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).
NO >> Replace magnet clutch. Refer to [HA-34, "Removal and Installation for Compressor Clutch"](#).

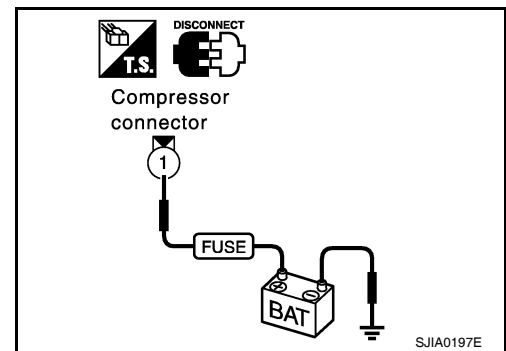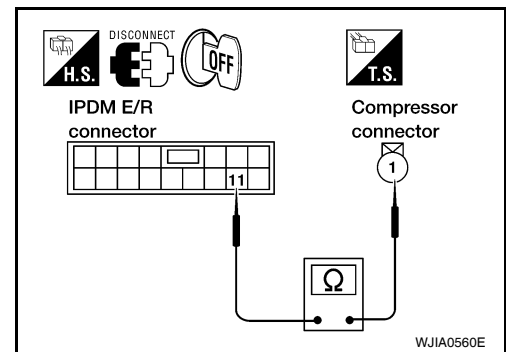

5. CHECK BCM INPUT (COMPRESSOR ON) SIGNAL

Check compressor ON/OFF signal. Refer to [HAC-112, "CONSULT-III Function \(HVAC\)"](#).

A/C SW ON : COMP ON SIG ON
A/C SW OFF : COMP ON SIG OFF

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 6.


6. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect BCM connector and front air control connector.
3. Check continuity between BCM harness connector M18 (A) terminal 27 and front air control harness connector M180 (B) terminal 4.

27 - 4 Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

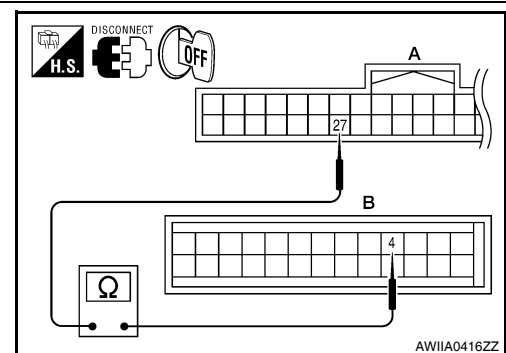

7. CHECK VOLTAGE FOR FRONT AIR CONTROL (A/C COMPRESSOR ON SIGNAL)


MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M180 terminal 4 and ground.

Terminals			Condition	Voltage
(+)		(-)		
front air control connector	Terminal No.			
M180	4	Ground	A/C switch: ON	Approx. 0V
			A/C switch: OFF	Approx. 5V

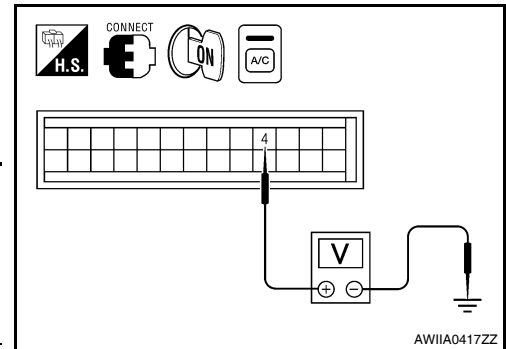

AWIIA0417ZZ

Is the inspection result normal?

YES >> GO TO 8.


NO-1 >> If the voltage is approx. 5V when A/C switch is ON, replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO-2 >> If the voltage is approx. 0V when A/C switch is OFF, replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

8. CHECK REFRIGERANT PRESSURE SENSOR

1. Start engine.
2. Check voltage between ECM harness connector F54 terminal 70 and ground.

Terminals			Condition	Voltage
(+)		(-)		
ECM connector	Terminal No.			
F54	70	Ground	A/C switch: ON	Approx. 0.36 - 3.88V

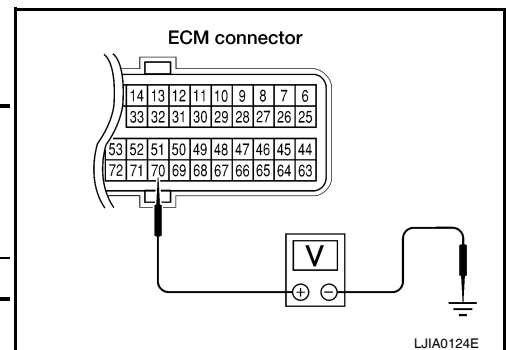

LJIA0124E

Is the inspection result normal?

YES >> GO TO 9.

NO >> Refer to [EC-412, "Diagnosis Procedure"](#).

9. CHECK BCM INPUT (FAN ON) SIGNAL

Check FAN ON/OFF signal. Refer to [HAC-112, "CONSULT-III Function \(HVAC\)"](#).

**FRONT BLOWER CONTROL : FAN ON SIG ON
DIAL ON**

**FRONT BLOWER CONTROL : FAN ON SIG OFF
DIAL OFF**

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 10.

10. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL

MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

1. Turn ignition switch OFF.
2. Disconnect BCM connector and front air control connector.
3. Check continuity between BCM harness connector M18 (A) terminal 28 and front air control harness connector M180 (B) terminal 5.


28 - 5

Continuity should exist.

Is the inspection result normal?


YES >> GO TO 11.

NO >> Repair harness or connector.

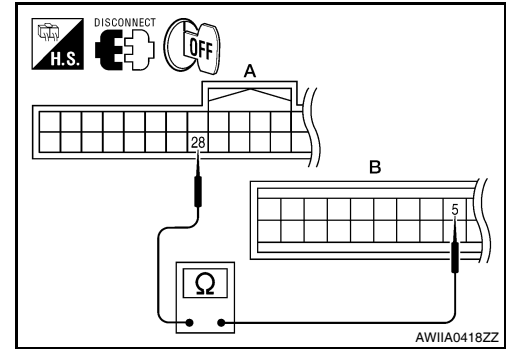

11. CHECK VOLTAGE FOR FRONT AIR CONTROL (FAN ON SIGNAL)

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M180 terminal 5 and ground.

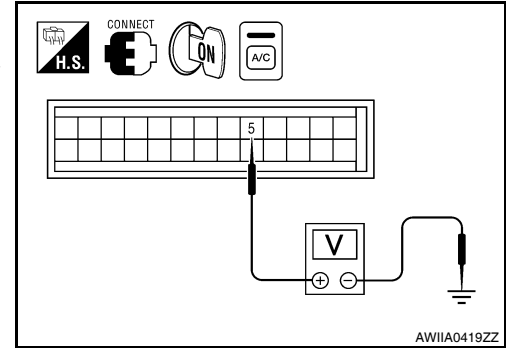

Terminals		(-)	Condition	Voltage
(+)	Terminal No.			
front air control connector				
M180	5	Ground	A/C switch: ON Blower motor operates	Approx. 0V
			A/C switch: OFF	Approx. 5V

Is the inspection result normal?

YES >> GO TO 12.

NO-1 >> If the voltage is approx. 5V when blower motor is ON, replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO-2 >> If the voltage is approx. 0V when blower motor is OFF, replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

12. CHECK CAN COMMUNICATION

Check CAN communication. Refer to [LAN-4, "System Description"](#).

- BCM – ECM
- ECM – IPDM E/R
- ECM – Front air control

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace malfunctioning part(s).

WATER VALVE CIRCUIT

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

WATER VALVE CIRCUIT


Description

INFOID:000000003790118

COMPONENT DESCRIPTION

Water Valve

The water valve (1) cuts the flow of engine coolant to the heater core to allow for maximum cooling during A/C operation. It is controlled by the front air control.

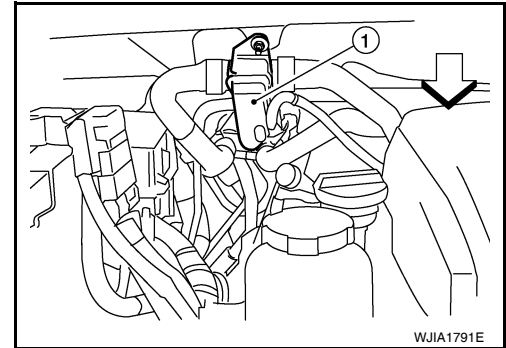

Water Valve Diagnosis Procedure


INFOID:000000003790119

DIAGNOSTIC PROCEDURE FOR WATER VALVE

1. CHECK WATER VALVE POWER AND GROUND CIRCUITS

1. Disconnect water valve connector F68.
2. Turn ignition switch ON.
3. Rotate temperature control dial to maximum heat.
4. Check voltage between water valve harness connector F68 terminal 1 and terminal 2 while rotating temperature control dial to maximum cold.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Water valve: F68	2	1	Rotate temperature control dial	Battery voltage

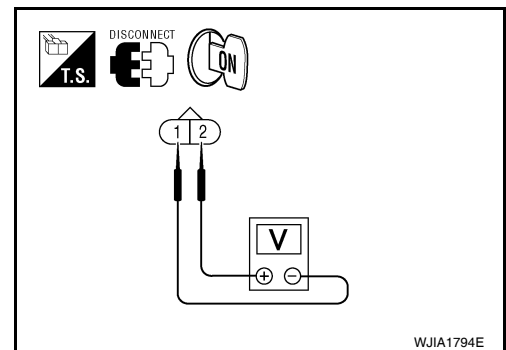

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.


2. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M181.
3. Check continuity between water valve harness connector F68 (A) terminal 2 and front air control harness connector M181 (B) terminal 42.

2 - 42 : Continuity should exist.

4. Check continuity between water valve harness connector F68 (A) terminal 2 and ground.

2 - Ground : Continuity should not exist.

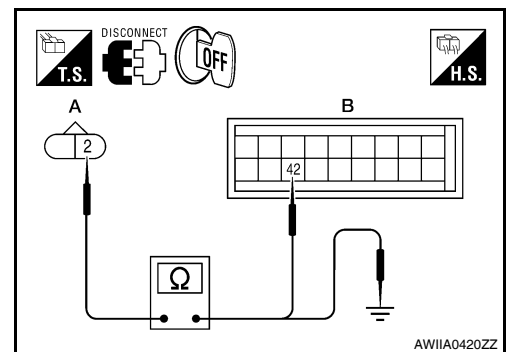

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
NO >> Repair harness or connector.

3. CHECK WATER VALVE POWER AND GROUND CIRCUITS

WATER VALVE CIRCUIT

[MANUAL A/C (TYPE 1)]

< COMPONENT DIAGNOSIS >

1. Rotate temperature control dial to maximum cold.
2. Check voltage between water valve harness connector F68 terminal 1 and terminal 2 while rotating temperature control dial to maximum heat.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Water valve: F68	1	2	Rotate temperature control dial	Battery voltage

Is the inspection result normal?

- YES >> Replace the water valve.
 NO >> GO TO 4.

4. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M181.
3. Check continuity between water valve harness connector F68 (A) terminal 1 and front air control harness connector M181 (B) terminal 41.



1 - 41 : Continuity should exist.

4. Check continuity between water valve harness connector F68 (A) terminal 1 and ground.

1 - Ground : Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 NO >> Repair harness or connector.

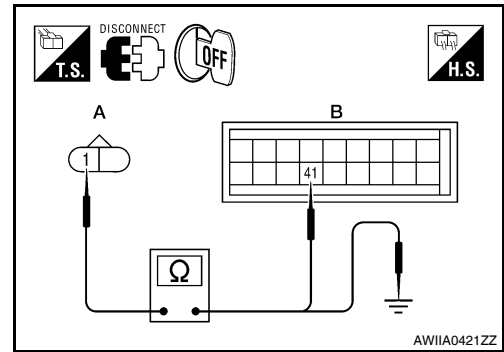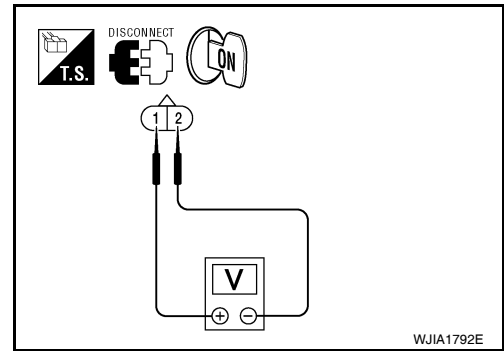

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AMBIENT SENSOR


Component Description

INFOID:000000003790120

COMPONENT DESCRIPTION

Ambient Sensor

The ambient sensor (1) is attached on the radiator core support (left side). It detects ambient temperature and converts it into a value which is then input into the front air control.

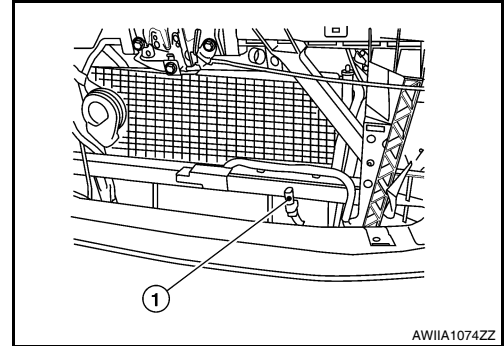

AMBIENT TEMPERATURE INPUT PROCESS

The front air control includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the front air control function. It only allows the front air control to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.


This prevents constant adjustments due to momentary conditions, such as stopping after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front grille area, location of the ambient sensor.

Ambient Sensor Diagnosis Procedure

INFOID:000000003790121

DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR

SYMPTOM: Ambient sensor circuit is open or shorted.

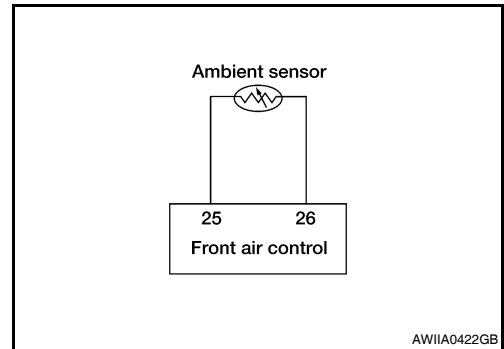


1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR AND GROUND

1. Disconnect ambient sensor connector.
2. Turn ignition switch ON.
3. Check voltage between ambient sensor harness connector E1 terminal 1 and ground.

1 - Ground : Approx. 5V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

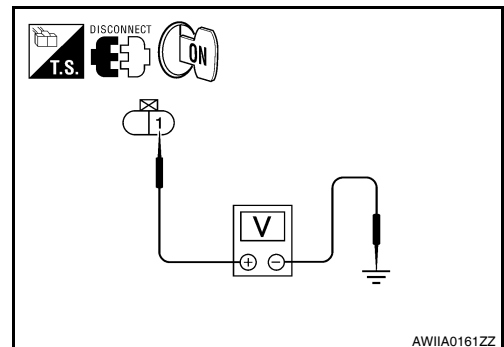

2. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND FRONT AIR CONTROL

AMBIENT SENSOR

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between ambient sensor harness connector E1 (B) terminal 2 and front air control harness connector M180 (A) terminal 26.

2 - 26 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

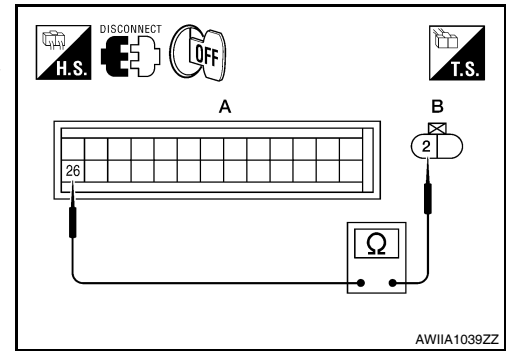

3. CHECK AMBIENT SENSOR

Check the ambient sensor circuit. Refer to [HAC-148, "Ambient Sensor Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
2. GO TO [HAC-115, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
NO >> 1. Replace ambient sensor. Refer to [HA-45, "Removal and Installation"](#).
2. GO TO [HAC-115, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.


4. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between ambient sensor harness connector E1 (B) terminal 1 and front air control harness connector M180 (A) terminal 25.

1 - 25 : Continuity should exist.

4. Check continuity between ambient sensor harness connector E1 (B) terminal 1 and ground.

1 - Ground : Continuity should not exist.

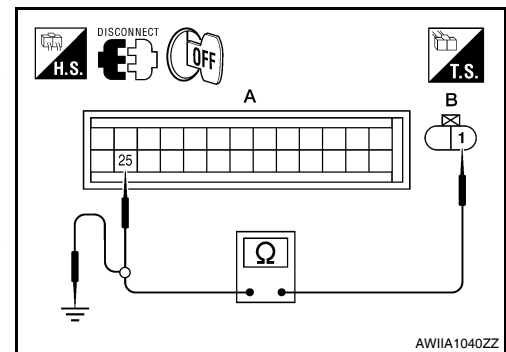

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
2. GO TO [HAC-115, "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
NO >> Repair harness or connector.

Ambient Sensor Component Inspection

INFOID:000000003790122

COMPONENT INSPECTION

Ambient Sensor


AMBIENT SENSOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

After disconnecting ambient sensor (1) connector E1, measure resistance between terminals 1 and 2 at sensor component side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

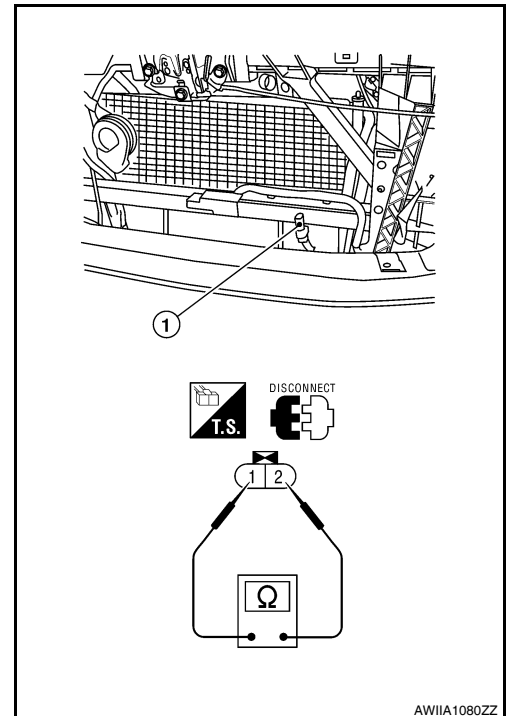

AWI1A1080ZZ

If NG, replace ambient sensor. Refer to [HA-45. "Removal and Installation"](#).

INTAKE SENSOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

INTAKE SENSOR


System Description

INFOID:000000003790123

COMPONENT DESCRIPTION

Intake Sensor

The intake sensor is located on the heater & cooling unit assembly. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the front air control.

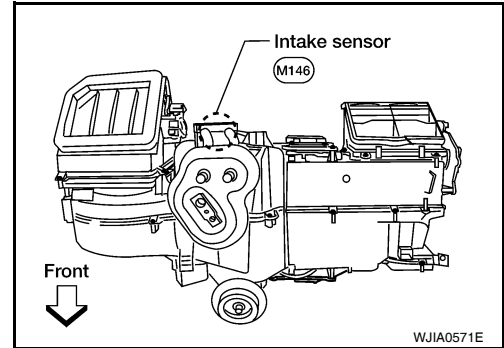


Intake Sensor Diagnosis Procedure

INFOID:000000003790124

DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted.

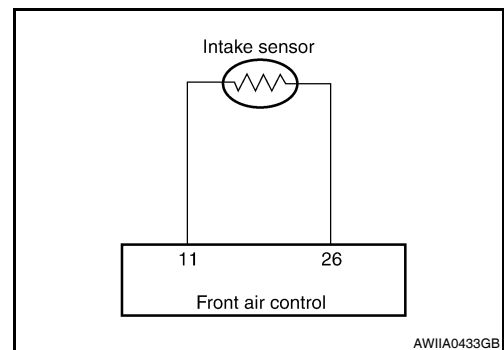


1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND

1. Disconnect intake sensor connector.
2. Turn ignition switch ON.
3. Check voltage between intake sensor harness connector M146 terminal 2 and ground.

2 - Ground : Approx. 5V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

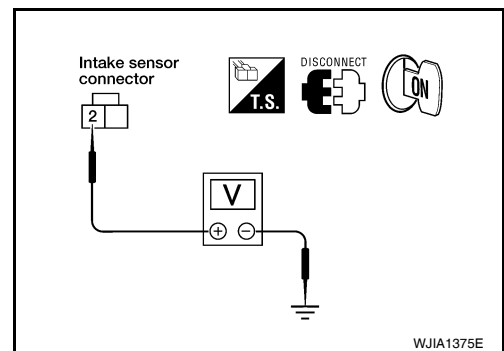


2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between intake sensor harness connector M146 (B) terminal 1 and front air control harness connector M180 (A) terminal 26.

1 - 26 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

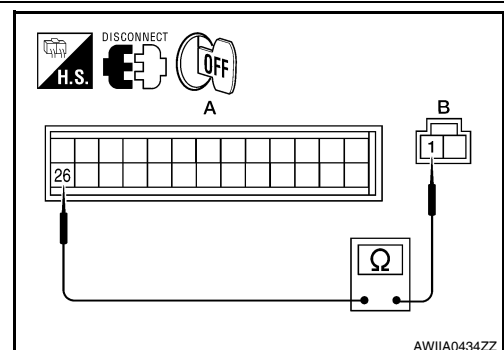

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

INTAKE SENSOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

3. CHECK INTAKE SENSOR

Check intake sensor. Refer to [HAC-152. "Intake Sensor Component Inspection"](#).

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 2. Go to [HAC-115. "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
- NO >> 1. Replace intake sensor. Refer to [VTL-11. "Removal and Installation"](#).
 2. Go to [HAC-115. "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.


4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

- Turn ignition switch OFF.
- Disconnect front air control connector.
- Check continuity between intake sensor harness connector M146 (B) terminal 2 and front air control harness connector M180 (A) terminal 11.

2 - 11 : Continuity should exist.

- Check continuity between intake sensor harness connector M146 (B) terminal 2 and ground.

2 - Ground : Continuity should not exist.

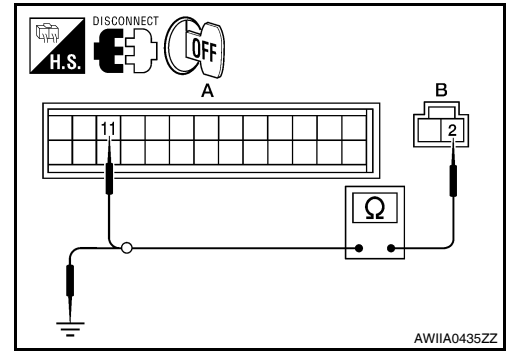

Is the inspection result normal?

- YES >> 1. Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 2. Go to [HAC-115. "Front Air Control Self-Diagnosis"](#) and perform self-diagnosis.
- NO >> Repair harness or connector.

Intake Sensor Component Inspection


INFOID:000000003790125

COMPONENT INSPECTION

Intake Sensor

After disconnecting intake sensor connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	209.0
-10 (14)	160.0
-5 (23)	123.0
0 (32)	95.8
5 (41)	74.9
10 (50)	58.9
15 (59)	46.7
20 (68)	37.3
25 (77)	30.0
30 (86)	24.2
35 (95)	19.7
40 (104)	16.1
45 (113)	13.2

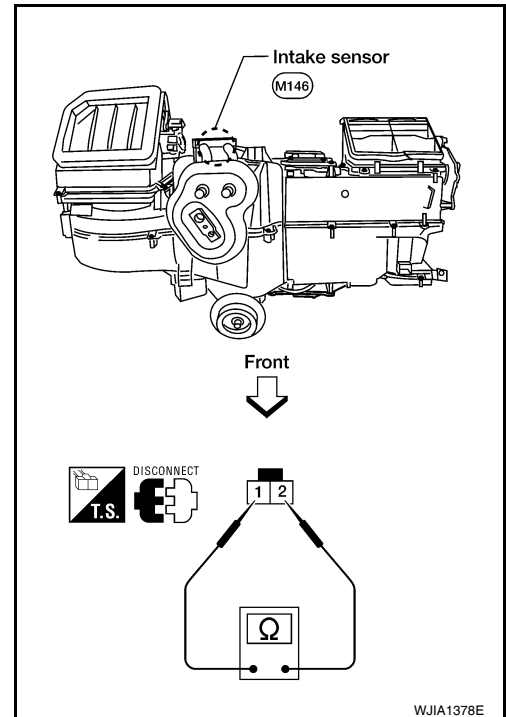

If NG, replace intake sensor. Refer to [VTL-11. "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

Component Description


INFOID:000000003790126

COMPONENT DESCRIPTION

Front Air Control


The front air control has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, defroster door motor, blower motor and A/C compressor are then controlled.

The front air control is unitized with control mechanisms. When the various switches and temperature dials are operated, data is input to the front air control.

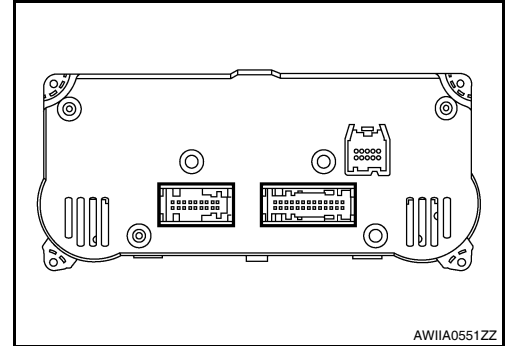

Potential Temperature Control (PTC)

The PTC is built into the front air control. It can be set from cold to hot or any intermediate position by rotating the temperature control dial.

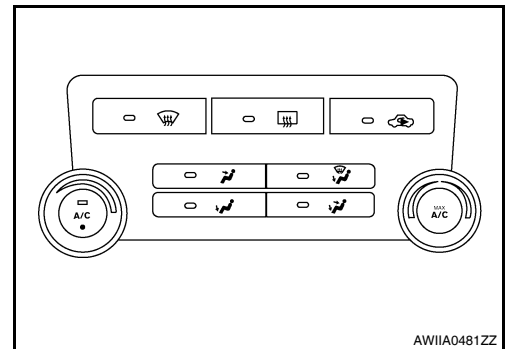

Front Air Control Component Function Check

INFOID:000000003790127

SYMPTOM: A/C system does not come on.

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - AUTO MODE

1. Turn the blower control dial clockwise to low speed.
2. Press the A/C Turn the blower control dial clockwise to low speed.
3. Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

Can a symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-100. "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-99. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK POWER AND GROUND CIRCUIT

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Check main power supply and ground circuit. Refer to [HAC-154, "Front Air Control Power and Ground Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> System OK.


NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

Front Air Control Power and Ground Diagnosis Procedure

INFOID:000000003790128

DIAGNOSTIC PROCEDURE FOR A/C SYSTEM


SYMPTOM: A/C system does not come on.

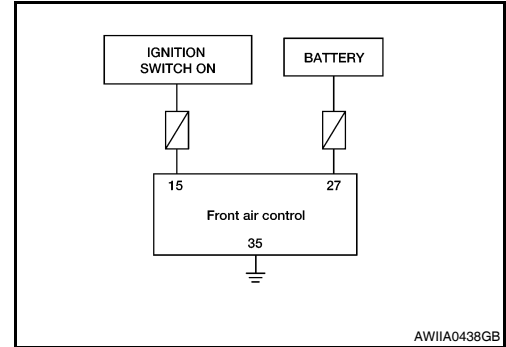

1. CHECK POWER SUPPLY CIRCUITS FOR FRONT AIR CONTROL

1. Turn ignition switch ON.
2. Check voltage between front air control harness connector M180 (B) terminal 15 and M181 (A) terminal 27, and ground.

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Front air control connector	Terminal No.				
M180	15	Ground	Approx. 0V	Approx. 0V	Battery voltage
M181	27		Battery voltage	Battery voltage	Battery voltage

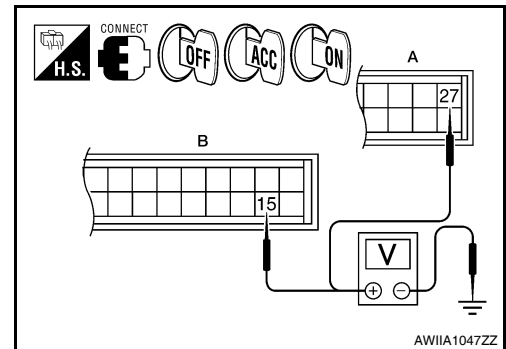

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check 10A fuses [Nos. 8 and 19, located in the fuse block (J/B)]. Refer to [PG-73, "Terminal Arrangement"](#).

- If fuses are OK, check harness for open circuit. Repair or replace as necessary.
- If fuses are NG, replace fuse and check harness for short circuit. Repair or replace as necessary.

2. CHECK GROUND CIRCUIT FOR FRONT AIR CONTROL


1. Turn ignition switch OFF.
2. Disconnect front air control connectors.
3. Check continuity between front air control harness connector M181 terminal 35 and ground.

35 - Ground : Continuity should exist.

Is the inspection result normal?

OK >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NG >> Repair harness or connector.

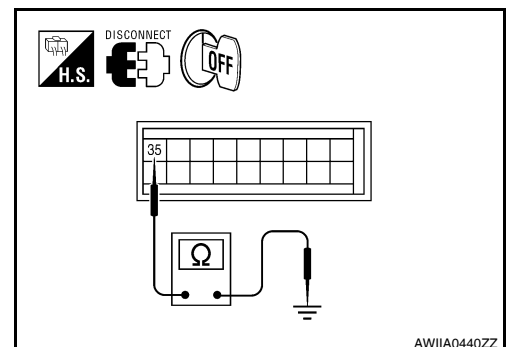

MANUAL A/C IDENTIFICATION TABLE

< ECU DIAGNOSIS >



[MANUAL A/C (TYPE 1)]

ECU DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790129

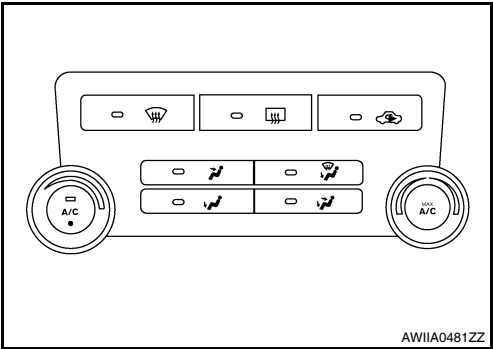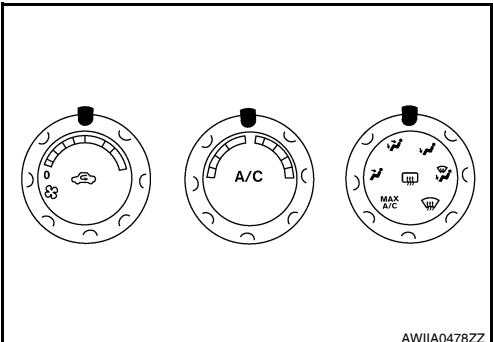Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

AIR CONDITIONER CONTROL


Front Air Control Terminals Reference Values

INFOID:000000003790130

Measure voltage between each terminal and ground by following Terminals and Reference Value for front air control (1).

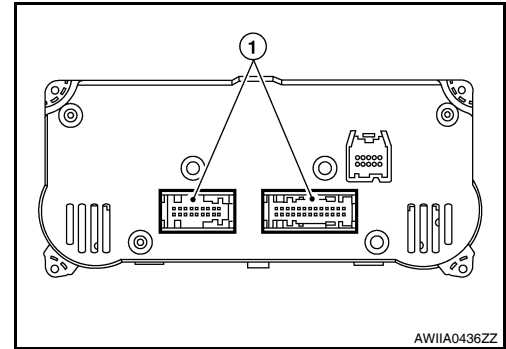

FRONT AIR CONTROL HARNESS CONNECTOR TERMINAL LAYOUT

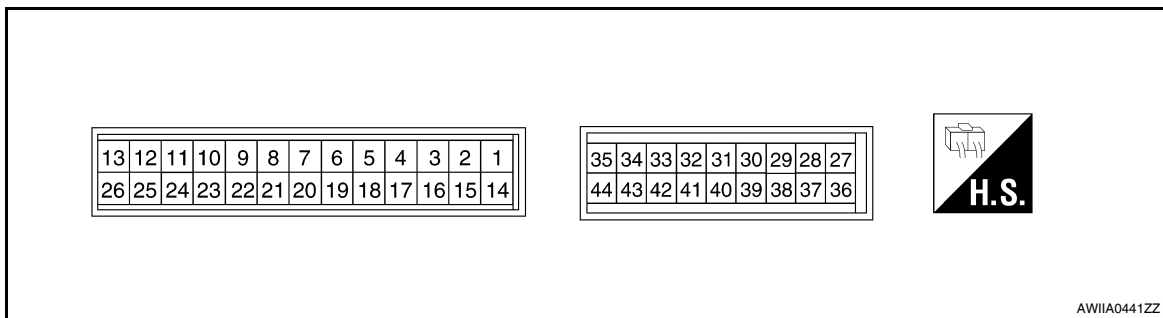

TERMINALS AND REFERENCE VALUES FOR FRONT AIR CONTROL

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
3	P	V ref ACTR (ground)	ON	-	5V
4	W/R	Compressor ON signal	ON	A/C switch OFF	5V
			ON	A/C switch ON	0V
5	L/R	Fan ON signal	ON	Blower switch OFF	5V
			ON	Blower switch ON	0V
6	SB	Air mix door motor feedback	ON	-	0 - 5V
7	GR	Mode door motor feedback	ON	-	0 - 5V
8	R/L	Illumination +	ON	Park lamps ON	Battery voltage
9	BR	Illumination -	-	Park lamps ON	<p style="text-align: right; font-size: small;">PIIA2344E</p>
10	LG/B	Defroster door motor feedback	ON	-	0 - 5V
11	L/B	Intake sensor	ON	-	0 - 5V
13	G/R	Variable blower control	ON	-	0 - 5V
15	Y/G	Power supply for IGN	ON	-	Battery voltage
16	Y/B	Rear defogger request *1	ON	-	Battery voltage
17	W/G	Air mix door motor CW	ON	Clockwise rotation	Battery voltage
18	G	Air mix door motor CCW	ON	Counterclockwise rotation	Battery voltage

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
19	BR/W	Mode door motor CW	ON	Clockwise rotation	Battery voltage
20	P/L	Mode door motor CCW	ON	Counterclockwise rotation	Battery voltage
21	G/B	Intake door motor CCW	ON	Counterclockwise rotation	Battery voltage
22	O	Intake door motor CW	ON	Clockwise rotation	Battery voltage
23	LG	Defroster door motor CW	ON	Clockwise rotation	Battery voltage
24	P/B	Defroster door motor CCW	ON	Counterclockwise rotation	Battery voltage
25	P	Ambient sensor	ON	-	0 - 5V
26	V/R	Sensor ground	ON	-	0V
27	Y/R	Power supply for BAT	-	-	Battery voltage
28	Y	V ref ACTR (5V)	ON	-	0 - 5V
35	B	Ground	-	-	0V
36	P	CAN-L	ON	-	0 - 5V
37	L	CAN-H	ON	-	0 - 5V
41	Y/L	Water valve	ON	Water valve open	Battery voltage
				Water valve closed	0V
42	W/G	Water valve	ON	Water valve open	0V
				Water valve closed	Battery voltage

*1: If equipped

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AIR CONDITIONER CONTROL


< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

INFOID:000000003790131

Wiring Diagram


AIR CONDITIONER CONTROL - MANUAL WITH 2 CONTROL DIAL SYSTEM

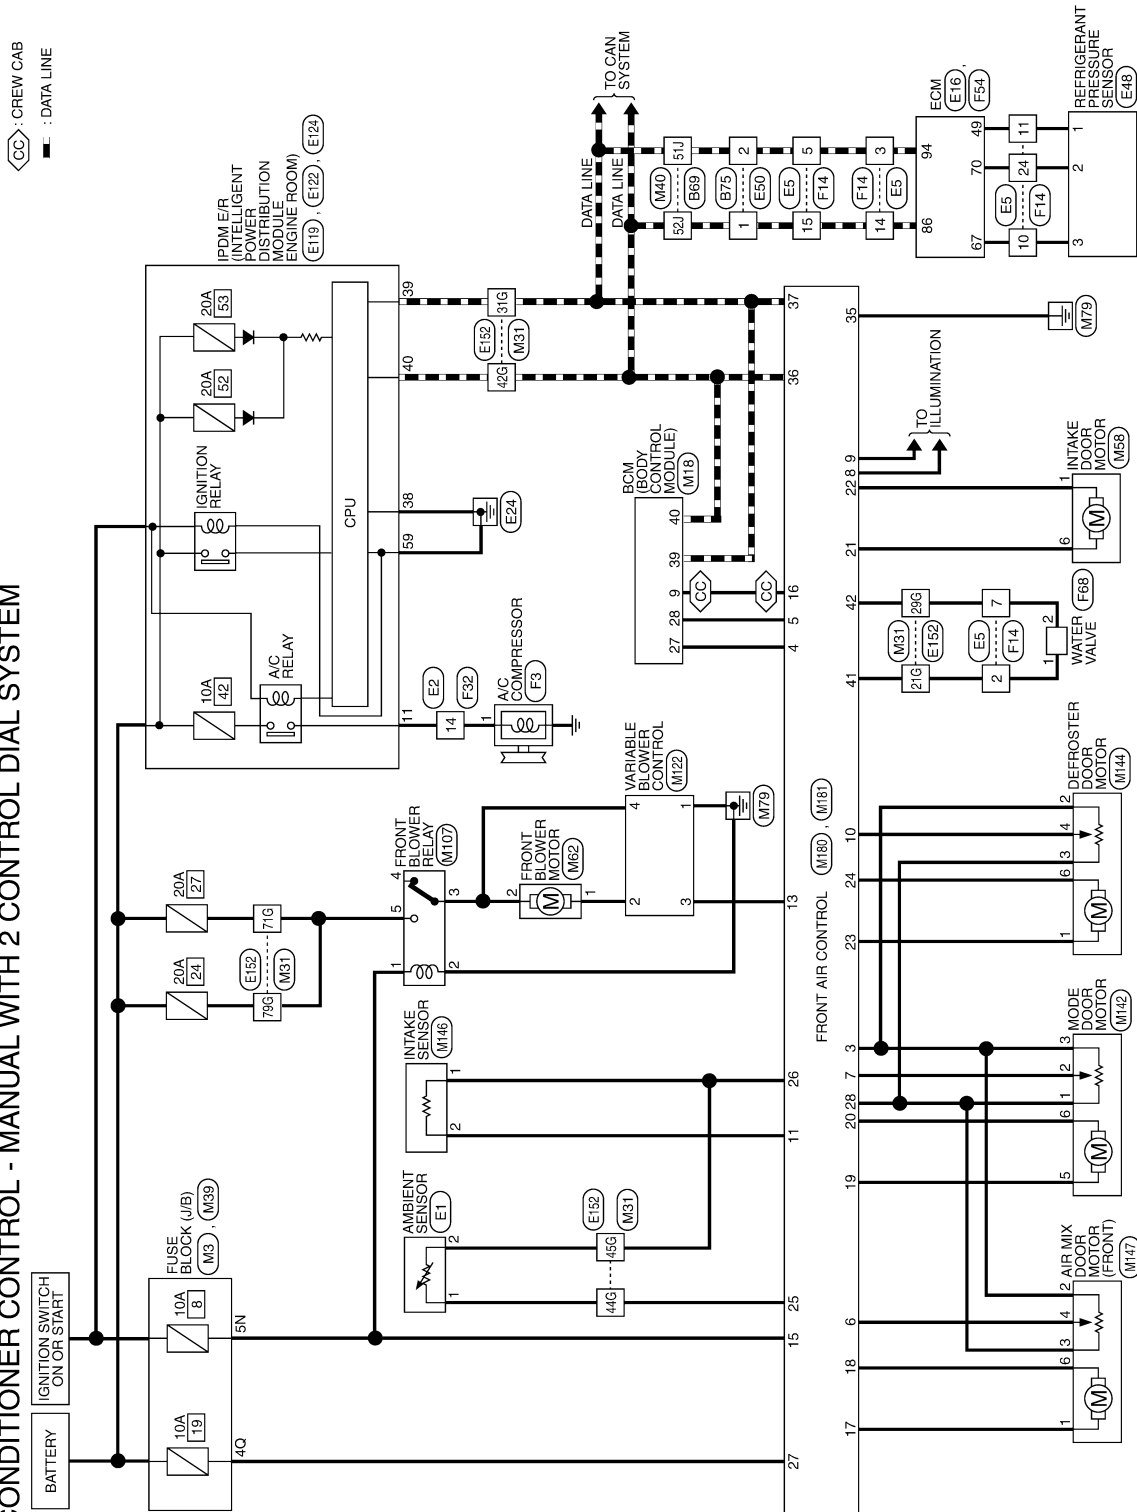

ABIWA0004GB


AIR CONDITIONER CONTROL CONNECTORS - MANUAL WITH 2 CONTROL DIAL SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
5N	Y/G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	Y/B	REAR DEFOGGER SW
27	W/R	AIRCON SW
28	L/R	BLOWER FAN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

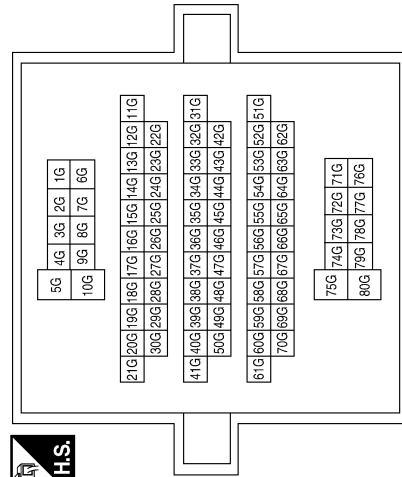

Terminal No.	Color of Wire	Signal Name
21G	Y/L	-
29G	W/G	-
31G	L	-
42G	P	-
44G	P	-
45G	V/R	-
71G	P	-
79G	P	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-


ABIA0017GB

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

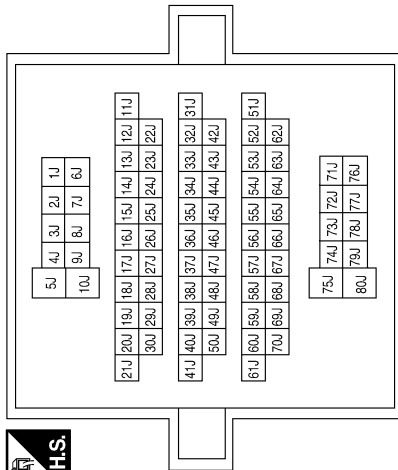


Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

Connector No.	M107
Connector Name	FRONT BLOWER RELAY
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	Y/G	-
2	B	-
3	W/L	-
4	-	-
5	GR	-

Connector No.	M58
Connector Name	INTAKE DOOR MOTOR
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	O	-
6	G/B	-

Connector No.	M62
Connector Name	FRONT BLOWER MOTOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	W/L	-

Connector No.	M122
Connector Name	VARIABLE BLOWER CONTROL
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	L/W	-
3	G/R	-
4	W/L	-

Connector No.	M142
Connector Name	MODE DOOR MOTOR
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	GR	-
3	P	-
5	BR/W	-
6	P/L	-


ABIA0018GB

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Connector No.	M147
Connector Name	AIR MIX DOOR MOTOR (FRONT)
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	P	-
3	Y	-
4	SB	-
6	G	-

Connector No.	M146
Connector Name	INTAKE SENSOR
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	V/R	-
2	L/B	-

Connector No.	M144
Connector Name	DEFROSTER DOOR MOTOR
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	P	-
3	Y	-
4	LG/B	-
6	P/B	-

Connector No.	M180
Connector Name	FRONT AIR CONTROL (WITH MANUAL 2 CONTROL DIAL SYSTEM)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	P	V REF RET
4	W/R	AC REQ
5	L/R	FAN ON
6	SB	DRVR BLND DR FB
7	GR	PNL/FLR DR FB
8	R/L	ILLUM +
9	BR	ILLUM -

Terminal No.	Color of Wire	Signal Name
10	LG/B	DEFROST FEEDBACK
11	L/B	EVAP TEMP SENSOR
12	-	-
13	G/R	FRONT BLWR SPEED
14	-	-
15	Y/G	V IGN
16	Y/B	REAR DEF REQUEST
17	W/G	DRVR BLND DR A
18	G	DRVR BLND DR B
19	BR/W	PNL/FLR DR A
20	P/L	PNL/FLR DR B
21	G/B	RECIRC DRI A
22	O	RECIRC DRI B
23	LG	DEFROST DR A
24	P/B	DEFROST DR B
25	P	AMB TEMP SEN
26	V/R	SENS RETURN


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 1)]


Connector No.	M181
Connector Name	FRONT AIR CONTROL (WITH MANUAL 2 CONTROL DIAL SYSTEM)
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
27	Y/R	V BAT
28	Y	5V REF VOLTAGE
29	-	-
30	-	-
31	-	-
32	-	-


Terminal No.	Color of Wire	Signal Name
33	-	-
34	-	-
35	B	GND
36	P	CAN-L
37	L	CAN-H
38	-	-
39	-	-
40	-	-
41	Y/L	WATER VALVE A
42	W/G	WATER VALVE B
43	-	-
44	-	-

Connector No.	E1
Connector Name	AMBIENT SENSOR
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	V/R	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
14	Y/B	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	Y/L	-
3	L	-
5	L	-
7	W/G	-
10	B	-
11	R/Y	-
14	P	-
15	P	-
24	B/W	-

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

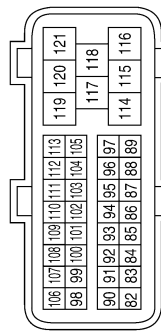


Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
11	Y/B	AC_COMP

Connector No.	E50
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

Connector No.	E48
Connector Name	REFRIGERANT PRESSURE SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	B/W	-
3	B	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

ABIA0021GB


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

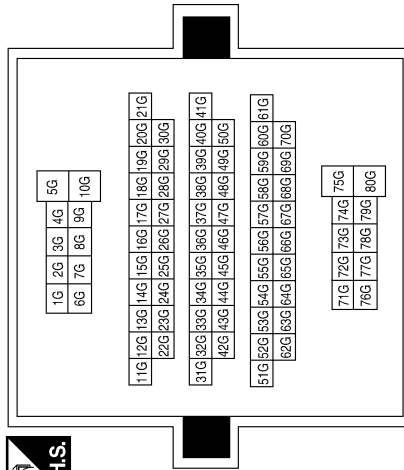


Terminal No.	Color of Wire	Signal Name
21G	Y/L	-
29G	W/G	-
31G	L	-
42G	P	-
44G	P	-
45G	V/R	-
71G	GR	-
79G	P	-

Connector No.	F3
Connector Name	A/C COMPRESSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	Y/B	-


Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	F54
Connector Name	ECM
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
2	Y/L	-
3	L	-
5	L	-
7	W/G	-
10	B	-
11	R/Y	-
14	P	-
15	P	-
24	B/W	-

Terminal No.	14
Color of Wire	Y/B
Signal Name	-

Terminal No.	Color of Wire	Signal Name
49	R/Y	AVCC (PDPRES)
67	B	GND-A
70	B/W	PD PRES

ABIA0022GB

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

Connector No.	F68
Connector Name	WATER VALVE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y/L	-
2	W/G	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

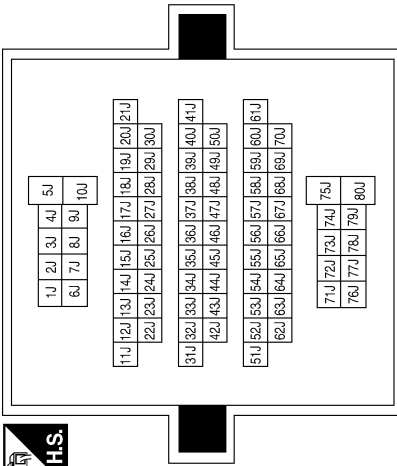

Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

Connector No.	B75
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

MANUAL A/C IDENTIFICATION TABLE

< SYMPTOM DIAGNOSIS >



[MANUAL A/C (TYPE 1)]

SYMPTOM DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790132

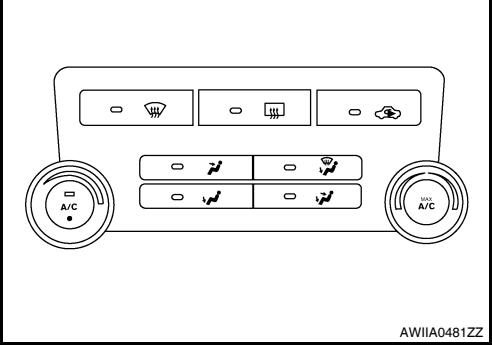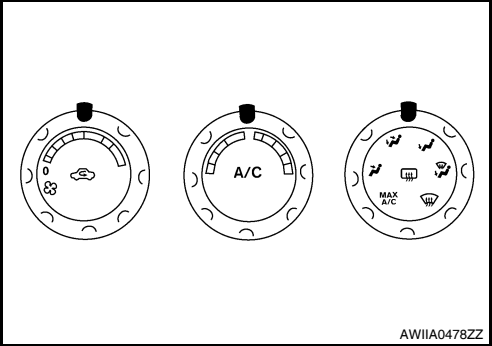Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

AIR CONDITIONER CONTROL

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

AIR CONDITIONER CONTROL

Symptom Matrix Chart

INFOID:000000003790133

SYMPTOM TABLE

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-153
A/C system cannot be controlled.	Go to Self-diagnosis Function.	HAC-115
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	HAC-117
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	HAC-122
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	HAC-127
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	HAC-130
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-135
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-141
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-168
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-176
Noise	Go to Trouble Diagnosis Procedure for Noise.	HAC-178
Self-diagnosis cannot be performed.	Go to Trouble Diagnosis Procedure for Self-diagnosis.	HAC-70

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HAC

INSUFFICIENT COOLING**Component Function Check**

INFOID:000000003790134

SYMPTOM: Insufficient cooling

INSPECTION FLOW**1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE DECREASE**

1. Rotate the blower control dial to the low speed.
2. Turn temperature control dial counterclockwise to maximum cold.
3. Check for cold air at discharge air outlets.

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMSPerform a complete operational check for any symptoms. Refer to [HAC-100. "Operational Check"](#).Does another symptom exist?

- YES >> Refer to [HAC-167. "Symptom Matrix Chart"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

- >> If equipped with NAVI, GO TO 4.
>> If not equipped with NAVI, GO TO 5.

4. PERFORM SELF-DIAGNOSISPerform self-diagnosis Refer to [HAC-115. "Front Air Control Self-Diagnosis"](#).Is the inspection result normal?

- YES >> GO TO 5.
NO >> Refer to [HAC-167. "Symptom Matrix Chart"](#).

5. CHECK DRIVE BELTSCheck compressor belt tension. Refer to [EM-13. "Checking Drive Belts"](#).Is the inspection result normal?

- YES >> GO TO 6.
NO >> Adjust or replace compressor belt. Refer to [EM-13. "Removal and Installation"](#).

6. CHECK AIR MIX DOOR OPERATIONCheck and verify air mix door mechanism for smooth operation. Refer to [HAC-122. "Air Mix Door Motor Component Function Check"](#).Does air mix door operate correctly?

- YES >> GO TO 7.
NO >> Check air mix door motor circuit. Refer to [HAC-123. "Air Mix Door Motor Diagnosis Procedure"](#).

7. CHECK COOLING FAN MOTOR OPERATIONCheck and verify cooling fan motor for smooth operation. Refer to [EC-305. "Overall Function Check"](#).Does cooling fan motor operate correctly?

- YES >> GO TO 8.
NO >> Check cooling fan motor. Refer to [EC-306. "Diagnosis Procedure"](#).

8. CHECK WATER VALVE OPERATIONCheck and verify water valve for smooth operation. Refer to [HAC-146. "Description"](#).Does water valve operate correctly?

- YES >> GO TO 9.

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

NO >> Check water valve circuit. Refer to [HAC-146. "Water Valve Diagnosis Procedure"](#).

9. CHECK RECOVERY/RECYCLING EQUIPMENT BEFORE USAGE

Check recovery/recycling equipment before connecting to vehicle. Verify there is no pressure in the recovery/recycling equipment by checking the gauges. If pressure exists, recover refrigerant from equipment lines.

>> GO TO 10.

10. CHECK REFRIGERANT PURITY

1. Connect recovery/recycling equipment to vehicle.
2. Confirm refrigerant purity in supply tank using recovery/recycling and refrigerant identifier.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Check contaminated refrigerant. Refer to [HAC-180. "Working with HFC-134a \(R-134a\)"](#).

11. CHECK FOR EVAPORATOR FREEZE UP

Start engine and run A/C. Check for evaporator freeze up.

Does evaporator freeze up?

YES >> Perform performance test diagnoses. Refer to [HAC-169. "Diagnostic Work Flow"](#).

NO >> GO TO 12.

12. CHECK REFRIGERANT PRESSURE

Check refrigerant pressure with manifold gauge connected. Refer to [HAC-171. "Performance Chart"](#).

Is the inspection result normal?

YES >> Perform performance test diagnoses. Refer to [HAC-169. "Diagnostic Work Flow"](#).

NO >> GO TO 13.

13. CHECK AIR DUCTS

Check ducts for air leaks.

Is the inspection result normal?

YES >> System OK.

NO >> Repair air leaks.

Diagnostic Work Flow

INFOID:000000003790135


A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

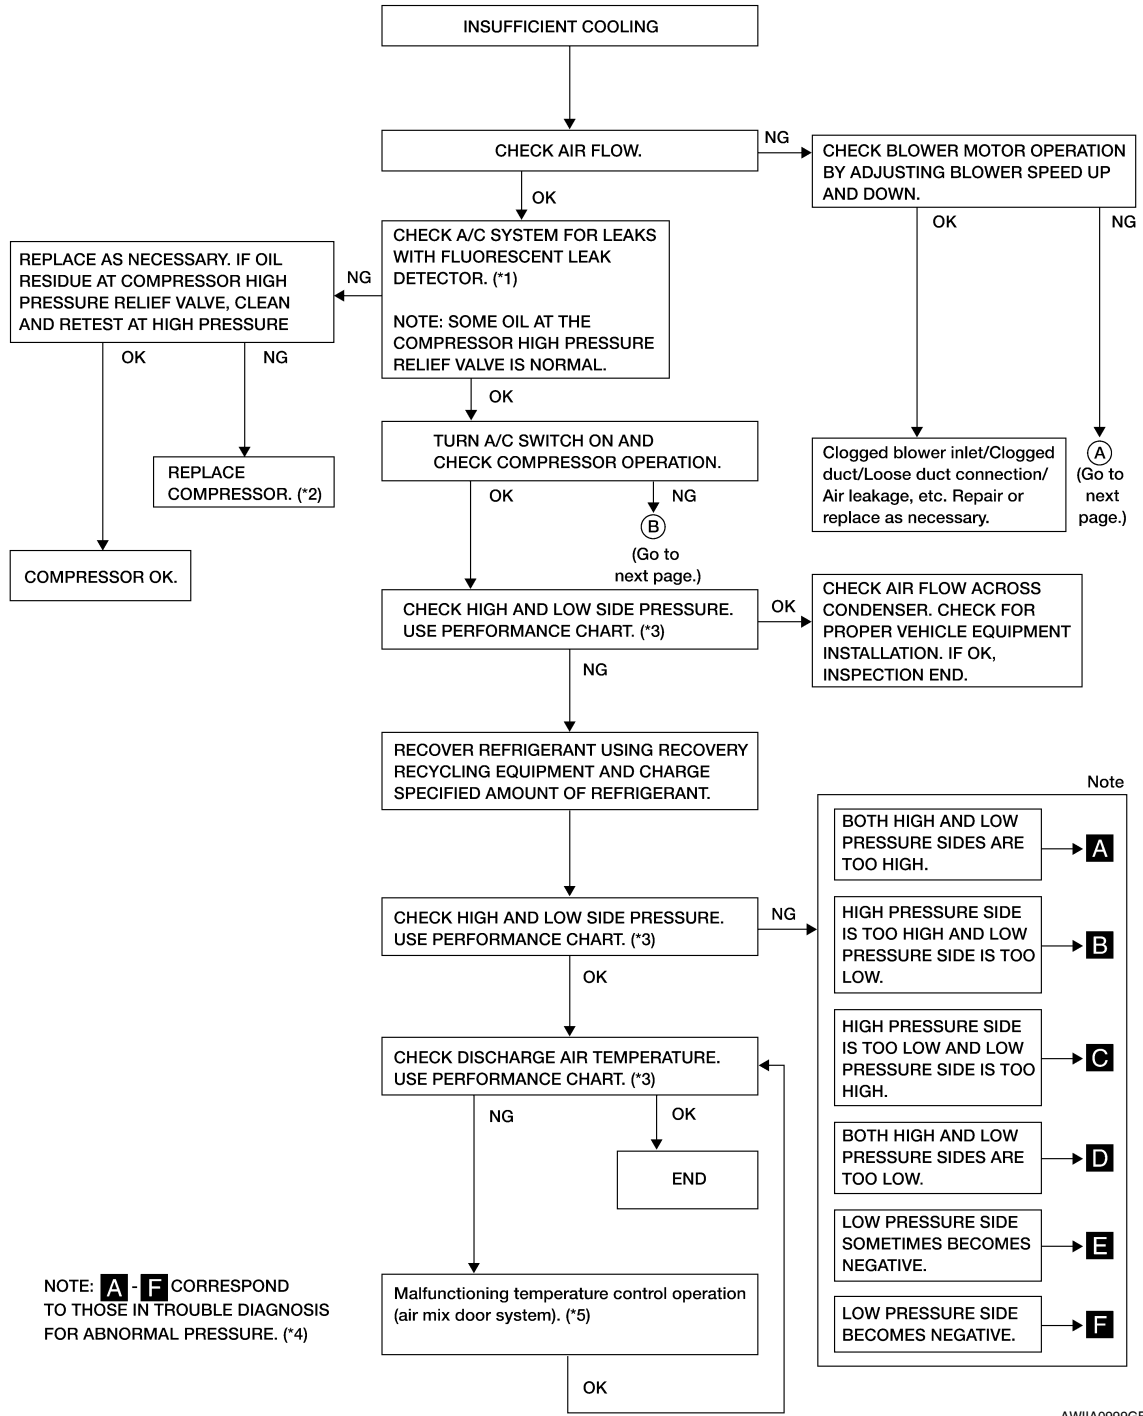

NOTE: **A - F** CORRESPOND TO THOSE IN TROUBLE DIAGNOSIS FOR ABNORMAL PRESSURE. (*4)

AWIIA0999GB

*1 [HA-25. "Checking System for Leaks Using the Fluorescent Dye Leak Detector"](#)

*2 [HA-33. "Removal and Installation for Compressor"](#)

*3 [HAC-171. "Performance Chart"](#)


*4 [HAC-172. "Trouble Diagnoses for Abnormal Pressure"](#)

*5 [HAC-122. "Air Mix Door Motor Component Function Check"](#)

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

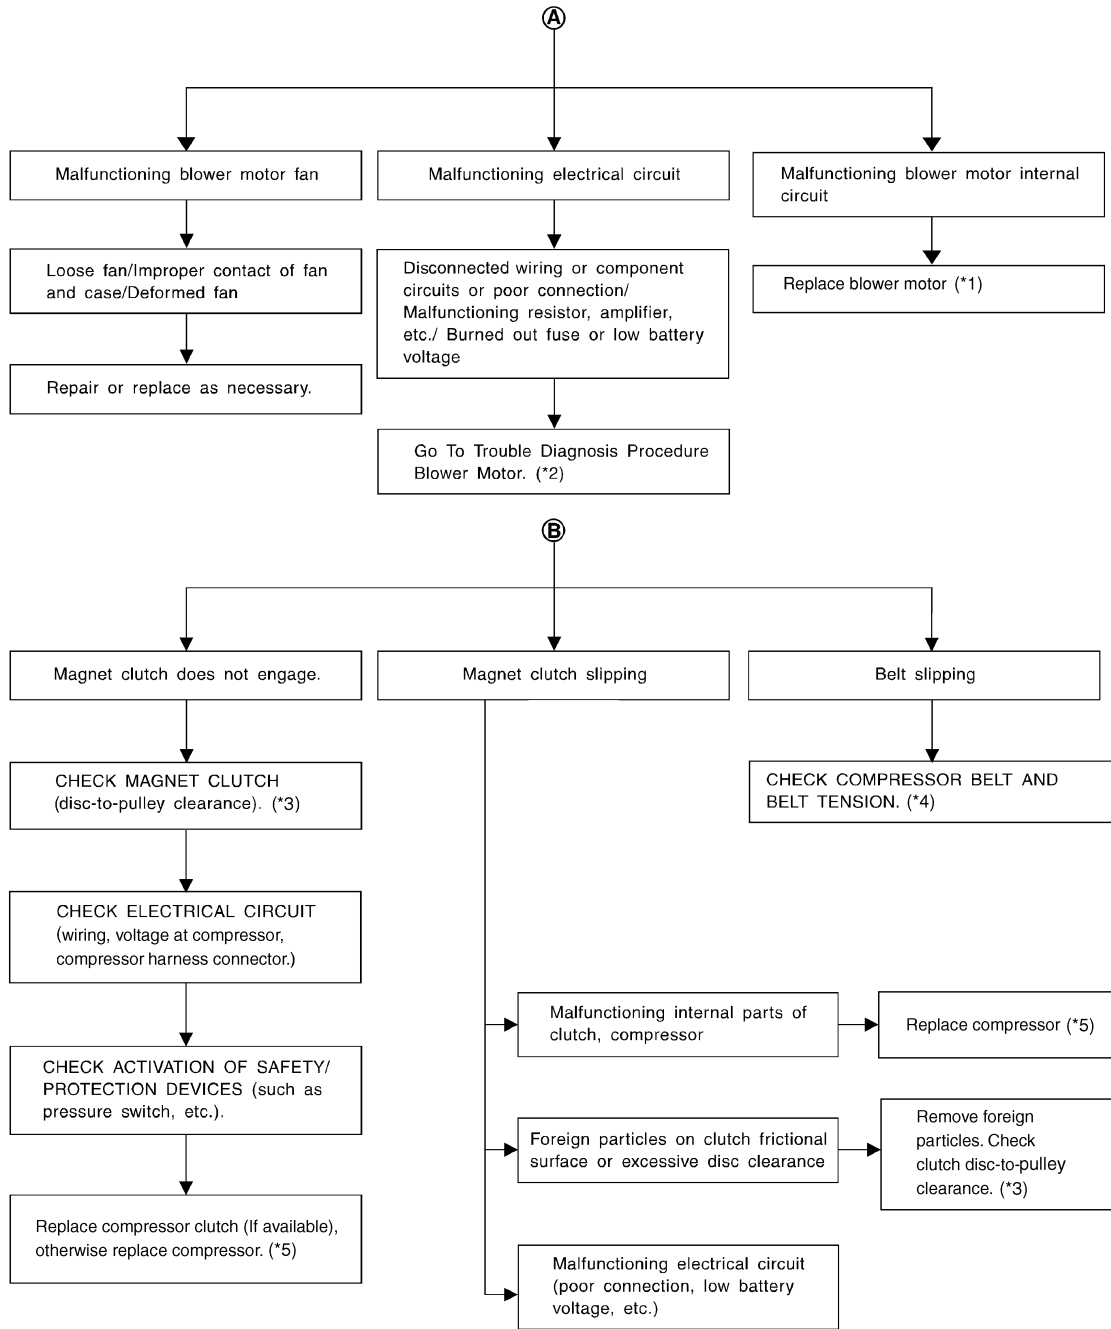

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AWIA1000GB

*1 [VTL-12. "Removal and Installation"](#)

*2 [HAC-135. "Front Blower Motor Component Function Check"](#)

*3 [HA-34. "Removal and Installation for Compressor Clutch"](#)

*4 [EM-13. "Checking Drive Belts"](#)

*5 [HA-33. "Removal and Installation for Compressor"](#)

Performance Chart

INFOID:000000003790136




TEST CONDITION

Testing must be performed as follows:

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door window	Open
Hood	Open
TEMP.	Max. COLD
Mode switch	 (Ventilation) set
Recirculation (REC) switch	 (Recirculation) set
 Blower speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

TEST READING

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	9.9 - 13.9 (50 - 57)
	25 (77)	14.6 - 18.6 (58 - 65)
	30 (86)	16.8 - 21.8 (62 - 71)
	35 (95)	21.1 - 27.1 (70 - 81)
	40 (104)	25.3 - 31.5 (78 - 89)
60 - 70	20 (68)	11.4 - 15.2 (53 - 59)
	25 (77)	15.5 - 20.0 (60 - 68)
	30 (86)	19.9 - 25.0 (68 - 77)
	35 (95)	24.5 - 29.6 (76 - 85)
	40 (104)	28.7 - 34.9 (84 - 95)

Ambient Air Temperature-to-operating Pressure Table

Ambient air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	1020 - 1250 (10.4 - 12.7, 147.9 - 181.3)	160 - 190 (1.63 - 1.94, 23.2 - 27.6)
	25 (77)	1236 - 1510 (12.6 - 15.4, 179.2 - 219)	206 - 245 (2.1 - 2.5, 29.9 - 35.6)
	30 (86)	1569 - 1,922 (16.0 - 19.6, 227.6 - 278.8)	265 - 324 (2.7 - 3.3, 38.4 - 46.9)
	35 (95)	1,697 - 2079 (17.3 - 21.2, 246.1 - 301.5)	304 - 363 (3.1 - 3.7, 44.1 - 52.6)
	40 (104)	1971 - 2403 (20.1 - 24.5, 285.9 - 348.5)	373 - 451 (3.8 - 4.6, 54.0 - 65.4)

Trouble Diagnoses for Abnormal Pressure

INFOID:000000003790138

Whenever system's high and/or low side pressure is unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the stan-


INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >


[MANUAL A/C (TYPE 1)]

Standard (usual) pressure, however, differs from vehicle to vehicle, refer to above table (Ambient air temperature-to-operating pressure table).

Both High- and Low-pressure Sides are Too High

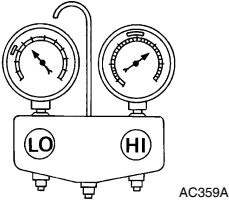Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>A Both high- and low-pressure sides are too high.</p>  <p style="text-align: right; font-size: small;">AC359A</p>	<p>Pressure is reduced soon after water is splashed on condenser.</p>	<p>Excessive refrigerant charge in refrigeration cycle</p>	<p>Reduce refrigerant until specified pressure is obtained.</p>
	<p>Air suction by cooling fan is insufficient.</p>	<p>Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan</p>	<ul style="list-style-type: none"> • Clean condenser. • Check and repair cooling fan if necessary.
	<ul style="list-style-type: none"> • Low-pressure pipe is not cold. • When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then decreases gradually thereafter. 	<p>Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.) ↓ Air in refrigeration cycle</p>	<p>Evacuate and recharge system.</p>
	<p>Engine tends to overheat.</p>	<p>Engine cooling systems malfunction.</p>	<p>Check and repair engine cooling system.</p>
	<ul style="list-style-type: none"> • An area of the low-pressure pipe is colder than areas near the evaporator outlet. • Plates are sometimes covered with frost. 	<ul style="list-style-type: none"> • Excessive liquid refrigerant on low-pressure side • Excessive refrigerant discharge flow • Expansion valve is open a little compared with the specification. <p>↓ Improper expansion valve adjustment</p>	<p>Replace expansion valve.</p>

High-pressure Side is Too High and Low-pressure Side is Too Low

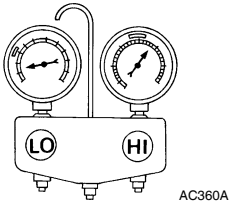
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>B High-pressure side is too high and low-pressure side is too low.</p>  <p style="text-align: right; font-size: small;">AC360A</p>	<p>Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.</p>	<p>High-pressure tube or parts located between compressor and condenser are clogged or crushed.</p>	<ul style="list-style-type: none"> • Check and repair or replace malfunctioning parts. • Check oil for contamination.

High-pressure Side is Too Low and Low-pressure Side is Too High


INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

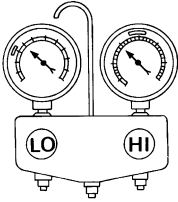Gauge indication	Refrigerant cycle	Probable cause	Corrective action
C High-pressure side is too low and low-pressure side is too high.  <small>AC356A</small>	High- and low-pressure sides become equal soon after compressor operation stops.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.
	No temperature difference between high- and low-pressure sides.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.

Both High- and Low-pressure Sides are Too Low

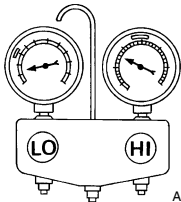
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
D Both high- and low-pressure sides are too low.  <small>AC353A</small>	<ul style="list-style-type: none"> There is a big temperature difference between liquid tank outlet and inlet. Outlet temperature is extremely low. Liquid tank inlet and expansion valve are frosted. 	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> Replace liquid tank. Check oil for contamination.
	<ul style="list-style-type: none"> Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank. Expansion valve inlet may be frosted. Temperature difference occurs somewhere in high-pressure side. 	High-pressure pipe located between liquid tank and expansion valve is clogged.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check oil for contamination.
	Expansion valve and liquid tank are warm or only cool when touched.	Low refrigerant charge. ↓ Leaking fittings or components.	Check refrigerant system for leaks. Refer to HA-23, "Checking of Refrigerant Leaks" .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ <ol style="list-style-type: none"> Improper expansion valve adjustment. Malfunctioning expansion valve. Outlet and inlet may be clogged. 	<ul style="list-style-type: none"> Remove foreign particles by using compressed air. Check oil for contamination.
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check oil for contamination.
	Air flow volume is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> Check intake sensor circuit. Refer to HAC-151, "Intake Sensor Diagnosis Procedure". Repair evaporator fins. Replace evaporator. Refer to HAC-135, "Front Blower Motor Component Function Check".

Low-pressure Side Sometimes Becomes Negative

INSUFFICIENT COOLING


< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

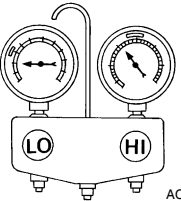Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>E Low-pressure side sometimes becomes negative.</p>  <p style="text-align: right; font-size: small;">AC354A</p>	<ul style="list-style-type: none"> • Air conditioning system does not function and does not cyclically cool the compartment air. • The system constantly functions for a certain period of time after compressor is stopped and restarted. 	<p>Refrigerant does not discharge cyclically.</p> <p>↓</p> <p>Moisture is frozen at expansion valve outlet and inlet.</p> <p>↓</p> <p>Water is mixed with refrigerant.</p>	<ul style="list-style-type: none"> • Drain water from refrigerant or replace refrigerant. • Replace liquid tank.

A
B
C
D

Low-pressure Side Becomes Negative

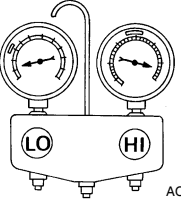Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>F Low-pressure side becomes negative.</p>  <p style="text-align: right; font-size: small;">AC362A</p>	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.</p>	<p>High-pressure side is closed and refrigerant does not flow.</p> <p>↓</p> <p>Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles.</p> <ul style="list-style-type: none"> • If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant. • If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air). • If either of the above methods cannot correct the malfunction, replace expansion valve. • Replace liquid tank. • Check oil for contamination.

E
F
G
H
J
K

HAC

L
M
N
O
P

INSUFFICIENT HEATING**Component Function Check**

INFOID:000000003790139

SYMPTOM: Insufficient heating

INSPECTION FLOW**1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE INCREASE**

1. Turn the blower control dial to low speed.
2. Turn the temperature control dial clockwise to maximum heat
3. Check for hot air at discharge air outlets.

Can this symptom be duplicated?

YES >> GO TO 2.

NO >> Perform complete system operational check. Refer to [HAC-100. "Operational Check"](#).**2. CHECK FOR SERVICE BULLETINS**

Check for any service bulletins.

>> If equipped with NAVI, GO TO 3.

>> If not equipped with NAVI, GO TO 4.

3. PERFORM SELF-DIAGNOSISPerform self-diagnosis. Refer to [HAC-115. "Front Air Control Self-Diagnosis"](#).Is the inspection results normal?

YES >> GO TO 4.

NO >> Refer to [HAC-167. "Symptom Matrix Chart"](#).**4. CHECK ENGINE COOLING SYSTEM**

1. Check for proper engine coolant level. Refer to [CO-10. "Inspection"](#).
2. Check hoses for leaks or kinks.
3. Check radiator cap. Refer to [CO-10. "Inspection"](#).
4. Check for air in cooling system.

>> GO TO 5.

5. CHECK AIR MIX DOOR OPERATION

Check the operation of the air mix door.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the air mix door motor circuit. Refer to [HAC-122. "Air Mix Door Motor Component Function Check"](#).**6. CHECK AIR DUCTS**

Check for disconnected or leaking air ducts.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair all disconnected or leaking air ducts.

7. CHECK HEATER HOSE TEMPERATURES

1. Start engine and warm it up to normal operating temperature.
2. Touch both the inlet and outlet heater hoses.

Is the inspection result normal?

YES >> Hot inlet hose and a warm outlet hose: GO TO 8.

NO >> • Inlet hose cold: GO TO 11.
• Both hoses warm: GO TO 9.**8. CHECK ENGINE COOLANT SYSTEM**

INSUFFICIENT HEATING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

Check engine control temperature sensor. Refer to [EC-127, "Component Inspection"](#).

Is the inspection result normal?

- YES >> System OK.
- NO >> Repair or replace as necessary. Retest.

9.CHECK HEATER HOSES

Check heater hoses for proper installation.

Is the inspection result normal?

- YES >> System OK.
- NO >> 1. Back flush heater core.
- 2. Drain the water from the system.
- 3. Refill system with new engine coolant. Refer to [CO-11, "Changing Engine Coolant"](#).
- 4. GO TO 10 to retest.

10.CHECK HEATER HOSE TEMPERATURES

1. Start engine and warm it up to normal operating temperature.
2. Touch both the inlet and outlet heater hoses.

Is the inspection result normal?

- YES >> System OK.
- NO >> Replace heater core. Refer to [VTL-15, "Removal and Installation"](#).

11.CHECK WATER VALVE

Check the operation of the water valve. Refer to [HAC-146, "Water Valve Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> System OK.
- NO >> Replace water valve.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC


NOISE

Component Function Check

INFOID:000000003790140

SYMPTOM: Noise

INSPECTION FLOW

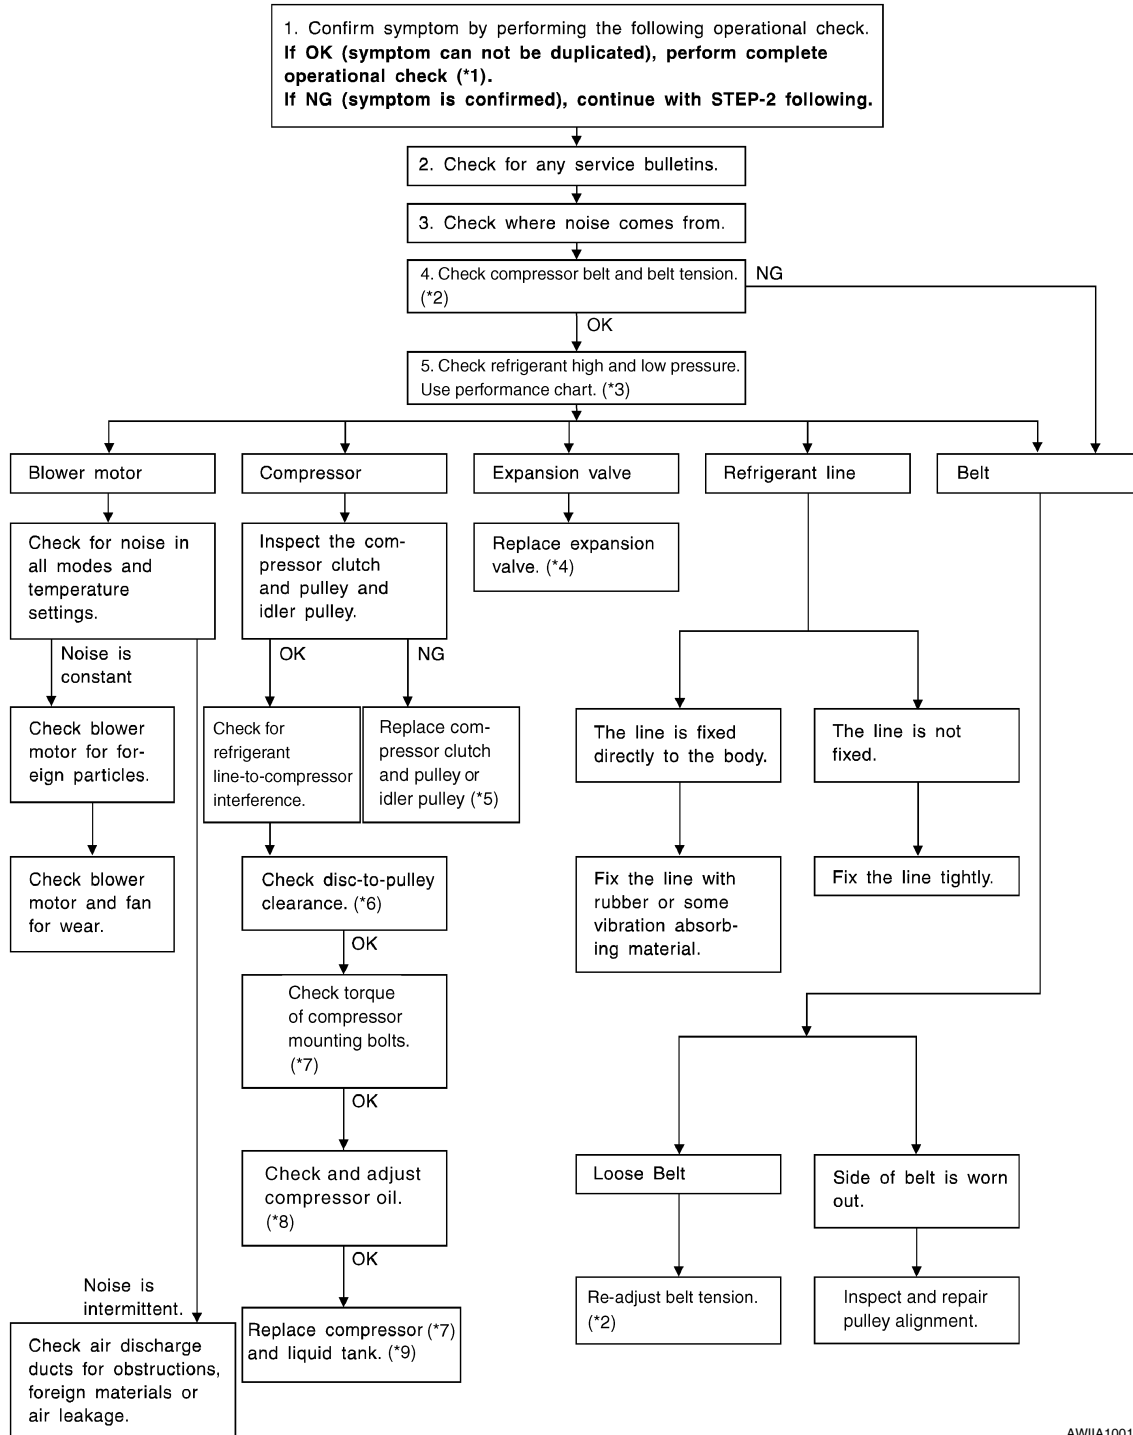

AWIIA1001GB

*1 [HAC-100, "Operational Check" HA-34, "Removal and Installation for Compressor Clutch"](#)

*2 [EM-13, "Checking Drive Belts" HA-34, "Removal and Installation for Compressor Clutch"](#)

*3 [EM-13, "Checking Drive Belts"](#)

NOISE

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 1)]

- | | | | | | |
|----|---|----|---|----|---|
| *4 | HA-44, "Removal and Installation for Expansion Valve" | *5 | HA-34, "Removal and Installation for Compressor Clutch" | *6 | HA-34, "Removal and Installation for Compressor Clutch" |
| *7 | HA-33, "Removal and Installation for Compressor" | *8 | HA-20, "Maintenance of Oil Quantity in Compressor" | *9 | HA-42, "Removal and Installation for Condenser" |

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003790141

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Working with HFC-134a (R-134a)

INFOID:000000003790142

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer to [HA-4, "Contaminated Refrigerant"](#). To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/ Recycling Recharging equipment and Refrigerant Identifier.
- Use only specified oil for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If oil other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) oil rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified oil from a sealed container. Immediately reseal containers of oil. Without proper sealing, oil will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and oil vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recycling equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and oil manufacturers.
 - Do not allow A/C oil to come in contact with styrofoam parts. Damage may result.

CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment.** If your facility does

PRECAUTIONS

[MANUAL A/C (TYPE 1)]

< PRECAUTION >


- not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

Precaution for Service Equipment

INFOID:000000003790143


MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified oil.

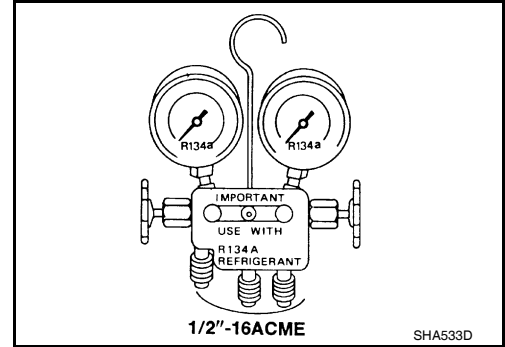

SERVICE HOSES


Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

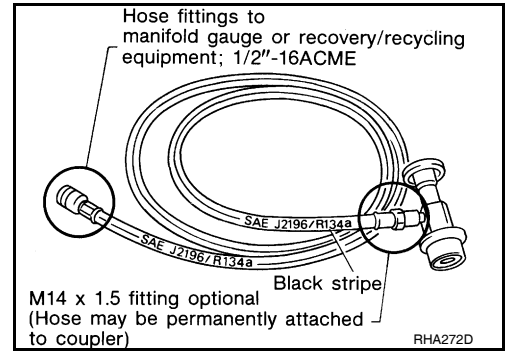

SERVICE COUPLERS

Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

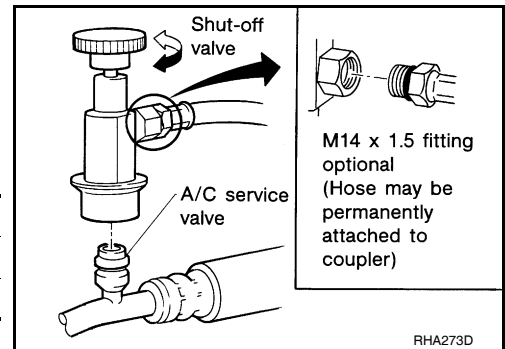

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

MANUAL A/C IDENTIFICATION TABLE

< BASIC INSPECTION >



[MANUAL A/C (TYPE 2)]

BASIC INSPECTION

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790144

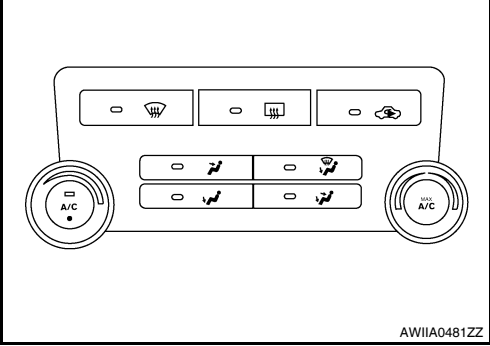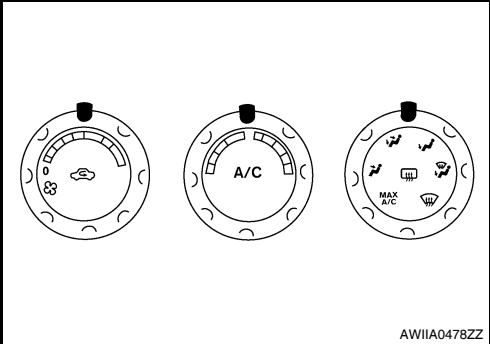Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[MANUAL A/C (TYPE 2)]

DIAGNOSIS AND REPAIR WORKFLOW

How to Perform Trouble Diagnosis For Quick And Accurate Repair

INFOID:000000003790145

WORK FLOW

1. LISTEN TO CUSTOMER COMPLAINT

Listen to customer complaint. Get detailed information about the conditions and environment when the symptom occurs.

>> GO TO 2

2. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 3.

3. VERIFY THE SYMPTOM WITH OPERATIONAL CHECK

Verify the symptom with operational check. Refer to [HAC-184. "Operational Check"](#).

>> GO TO 4

4. GO TO APPROPRIATE TROUBLE DIAGNOSIS

Go to appropriate trouble diagnosis. Refer to [HAC-246. "Symptom Matrix Chart"](#).

>> GO TO 5.

5. REPAIR OR REPLACE

Repair or replace the specific parts.

>> GO TO 7

6. FINAL CHECK

Final check.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 4

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

INSPECTION AND ADJUSTMENT

Operational Check

INFOID:000000003790146

The purpose of the operational check is to confirm that the system operates properly.

Conditions : Engine running and at normal operating temperature


CHECKING BLOWER

1. Rotate the blower control dial clockwise once, blower should operate on low speed.
2. Rotate the blower control dial again, and continue checking blower speed until all speeds are checked.
3. Leave blower on maximum speed.

If NG, go to trouble diagnosis procedure for [HAC-218. "Front Blower Motor Diagnosis Procedure"](#).

If OK, continue with next check.

CHECKING DISCHARGE AIR

1. Rotate MODE control dial to each position and the DEF  mode.
2. Confirm that discharge air comes out according to the air distribution table. Refer to [HAC-193. "Discharge Air Flow"](#).

Mode door position is checked in the next step.



If NG, go to trouble diagnosis procedure for [HAC-200. "Mode Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected.





CHECKING RECIRCULATION (,  ONLY)

1. Press recirculation () switch one time. Recirculation indicator should illuminate.
2. Press recirculation () switch one more time. Recirculation indicator should go off.
3. Listen for intake door position change (blower sound should change slightly).

If NG, go to trouble diagnosis procedure for [HAC-210. "Intake Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

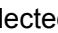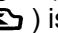NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at fresh when the DEF or D/F is selected. REC () is not allowed in DEF () D/F () or FOOT ()

CHECKING TEMPERATURE DECREASE

1. Rotate temperature control dial counterclockwise until maximum cold.
2. Check for cold air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [HAC-247. "Component Function Check"](#). If air mix door motor appears to be malfunctioning, go to [HAC-205. "Air Mix Door Motor Diagnosis Procedure"](#).

If OK, continue the check.

CHECKING TEMPERATURE INCREASE

1. Rotate temperature control dial clockwise until maximum hot.
2. Check for hot air at appropriate discharge air outlets.

If NG, listen for sound of air mix door motor operation. If OK, go to trouble diagnosis procedure for [HAC-255. "Component Function Check"](#). If air mix door motor appears to be malfunctioning, go to [HAC-205. "Air Mix Door Motor Diagnosis Procedure"](#).

If OK, continue with next check.

CHECK A/C SWITCH

1. Press A/C switch.
 - Confirm that the compressor clutch engages (sound or visual inspection).

NOTE:

If current mode setting is DEF or D/F, compressor clutch will already be engaged and cannot be turned off.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[MANUAL A/C (TYPE 2)]

If NG, go to trouble diagnosis procedure for [HAC-223. "Magnet Clutch Diagnosis Procedure"](#).
If all operational checks are OK (symptom cannot be duplicated), go to [HAC-183. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#) and perform tests as outlined. If symptom appears, refer to [HAC-246. "Symptom Matrix Chart"](#) and perform applicable trouble diagnosis procedures.

- A
- B
- C
- D
- E
- F
- G
- H
- HAC
- J
- K
- L
- M
- N
- O
- P

MANUAL A/C IDENTIFICATION TABLE

< FUNCTION DIAGNOSIS >



[MANUAL A/C (TYPE 2)]

FUNCTION DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790147

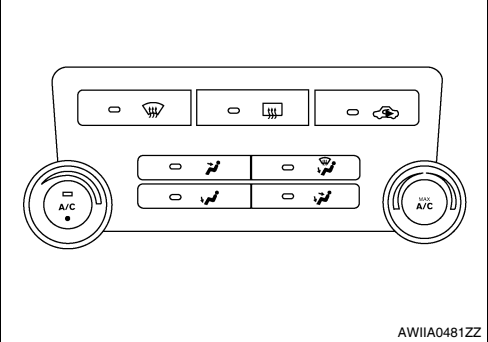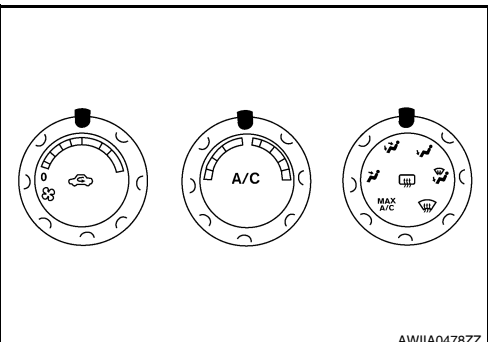
Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

FUNCTION INFORMATION

Component Part Location

INFOID:000000003790148

ENGINE COMPARTMENT

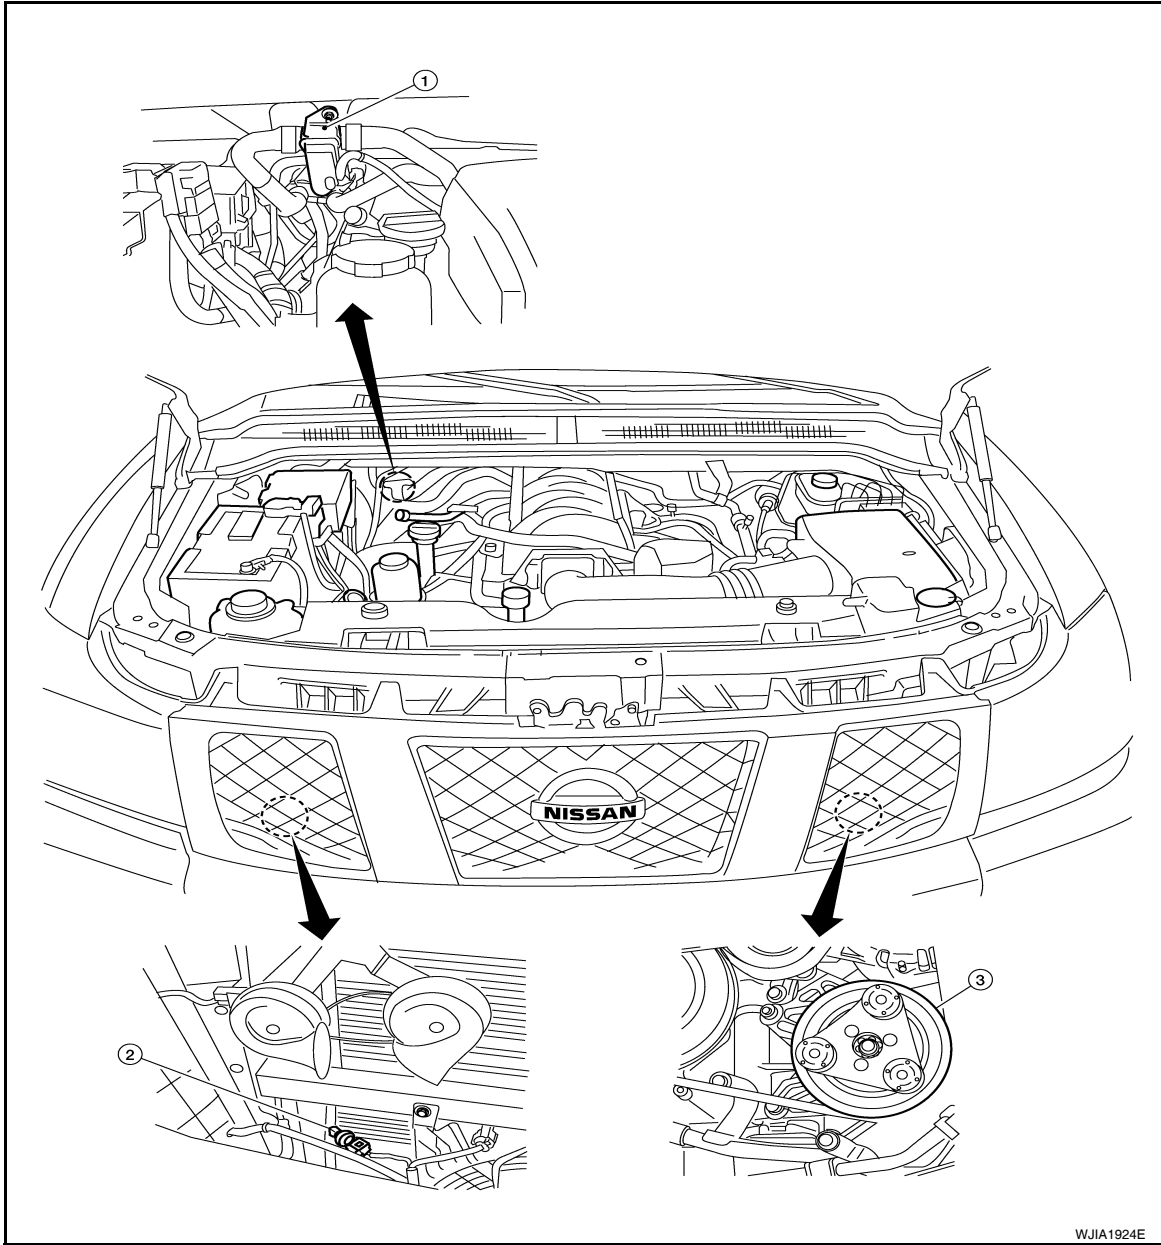

1. Water valve F68

2. Refrigerant pressure sensor E48
(view with grille removed)

3. A/C compressor F3


PASSENGER COMPARTMENT

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

FUNCTION INFORMATION

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

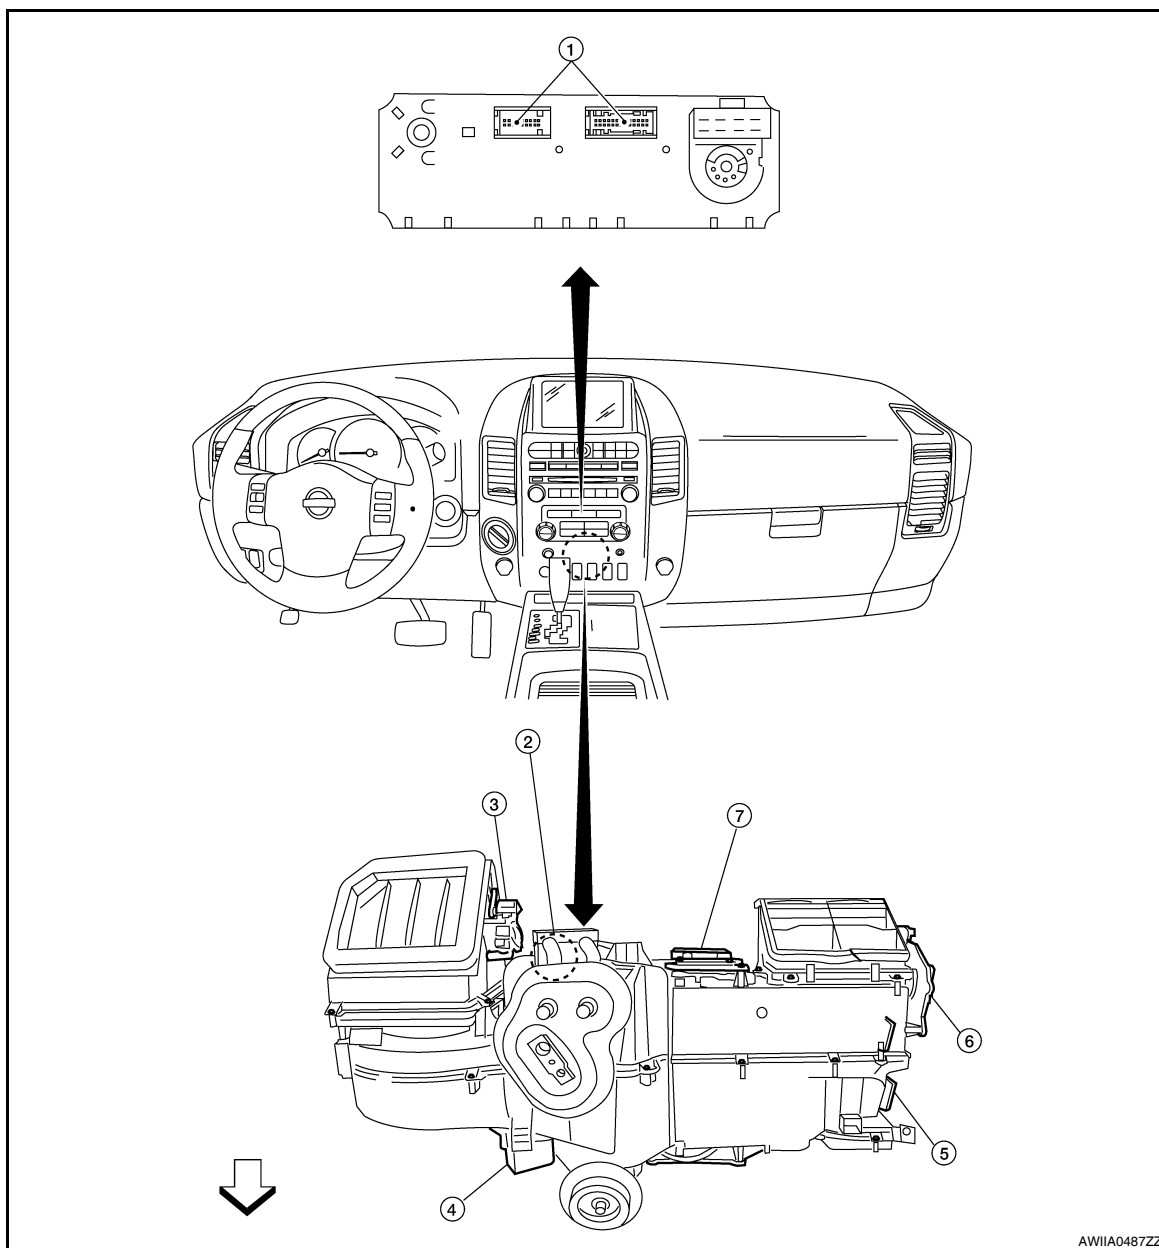

AWIIA0487ZZ

- | | | |
|------------------------------------|-------------------------|------------------------------|
| 1. Front air control M176, M177 | 2. Intake sensor M182 | 3. Intake door motor M58 |
| 4. Variable blower control M179 | 5. Mode door motor M142 | 6. Defroster door motor M144 |
| 7. Air mix door motor (front) M147 | | |

FUNCTION INFORMATION

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Symptom Table

INFOID:000000003790149

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-233
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	HAC-199
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	HAC-204
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	HAC-209
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	HAC-212
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-217
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-223
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-247
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-255
Noise	Go to Trouble Diagnosis Procedure for Noise.	HAC-257

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

REFRIGERATION SYSTEM

Refrigerant Cycle

INFOID:000000004113219

REFRIGERANT FLOW

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation through the evaporator coils are controlled by externally equalized expansion valve, located inside the evaporator case.

Refrigerant System Protection

INFOID:000000004113220

REFRIGERANT PRESSURE SENSOR

The refrigerant system is protected against excessively high or low pressures by the refrigerant pressure sensor, located on the condenser. If the system pressure rises above or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends a voltage signal to the ECM. The ECM de-energizes the A/C relay to disengage the magnetic compressor clutch when pressure on the high pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (28 kg/cm², 398 psi), or below about 120 kPa (1.22 kg/cm², 17.4 psi).

PRESSURE RELIEF VALVE


The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 2,990 kPa (30.5 kg/

REFRIGERATION SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

cm², 433.6 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

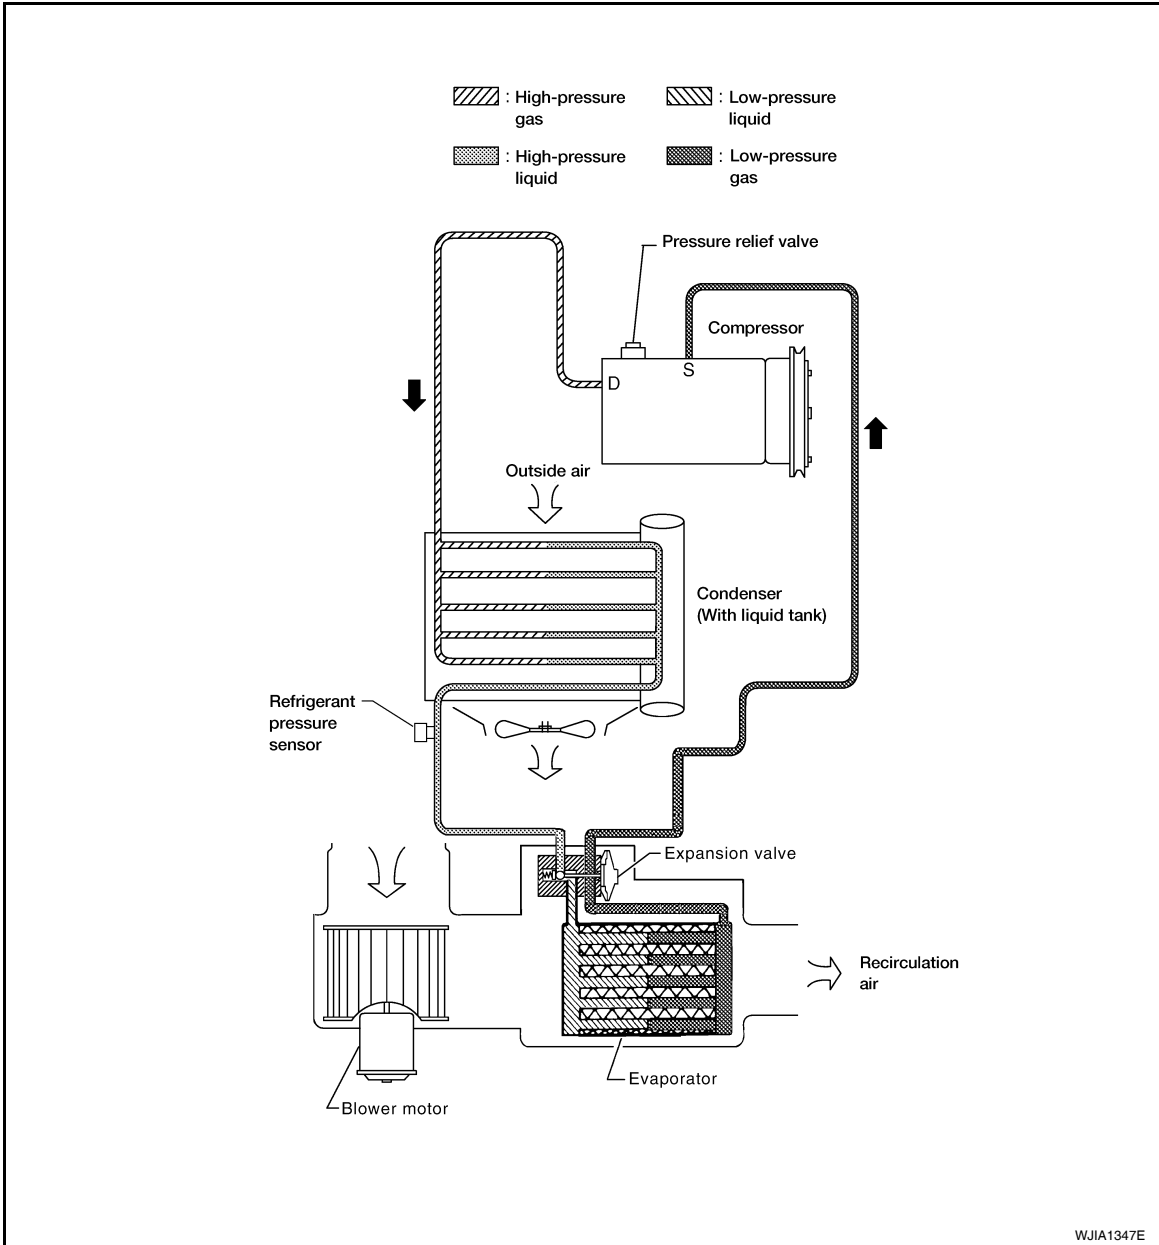

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]


MANUAL AIR CONDITIONER SYSTEM

Control System Diagram

INFOID:000000003790152

CONTROL SYSTEM

The control system consists of input sensors, switches, the front air control (microcomputer) and outputs. The relationship of these components is shown in the figure below:

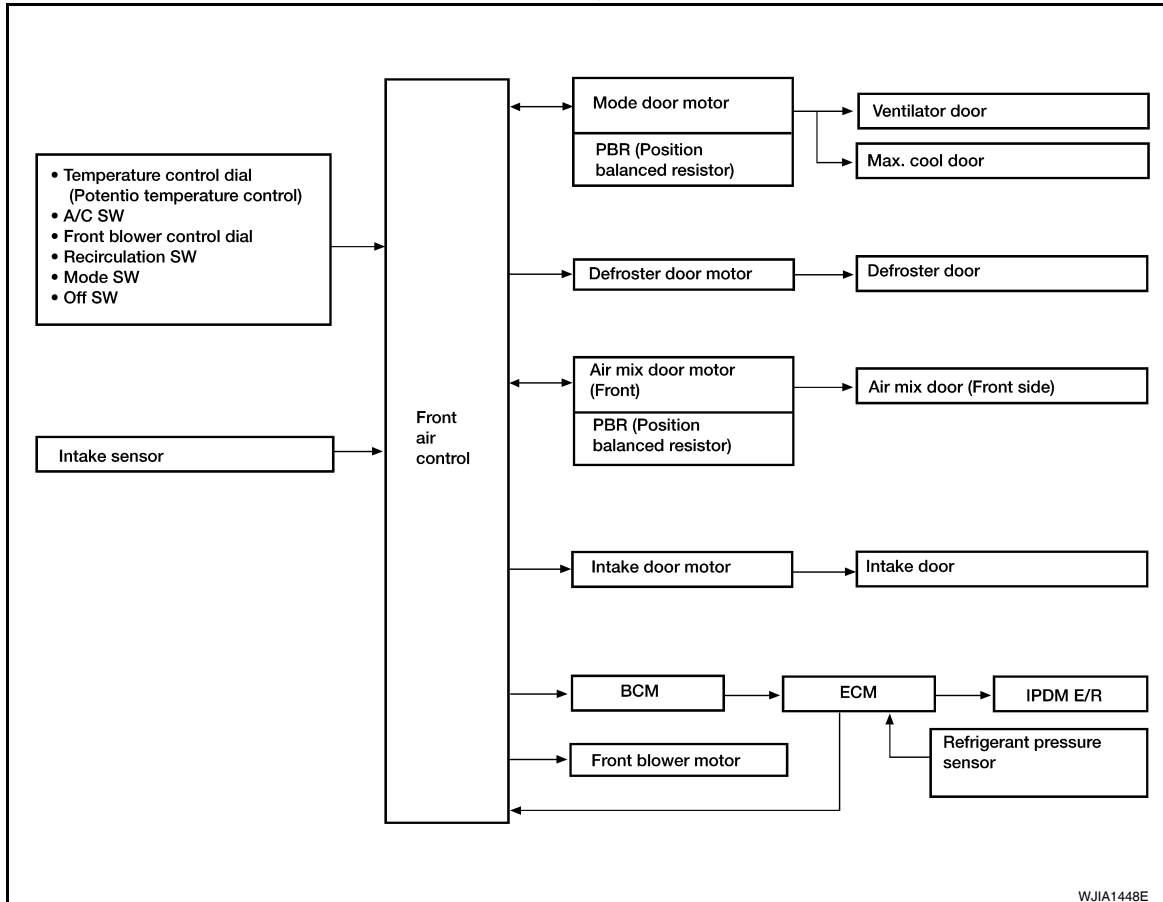


WJIA1448E

Control System Description

INFOID:000000003790153

CONTROL OPERATION

Front air control

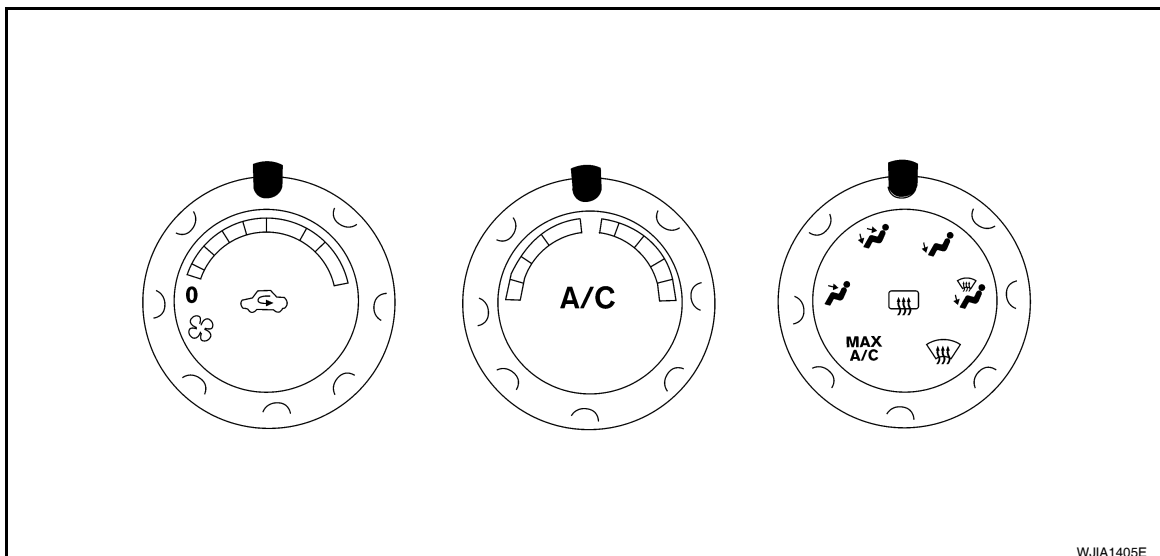

WJIA1405E

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

TEMPERATURE CONTROL DIAL

Increases or decreases the set temperature.

RECIRCULATION () SWITCH

- When REC switch is ON, REC switch indicator turns ON, and air inlet is set to REC.
- When REC switch is turned OFF, or when compressor is turned from ON to OFF, REC switch is automatically turned OFF. REC mode can be re-entered by pressing REC switch again.
- REC switch is not operated when DEF switch is turned ON, at the D/F position, or in floor position.

DEFROSTER () SWITCH

Positions the air outlet doors to the defrost position. Also positions the intake doors to the outside air position, and turns A/C compressor ON.

REAR WINDOW DEFOGGER SWITCH (IF EQUIPPED)

When switch is ON, rear window and door mirrors are defogged.

BLOWER CONTROL DIAL/OFF SWITCH

- The blower speed is manually controlled with this dial.
- The compressor and blower are OFF, the intake doors are set to the outside air position, and the air outlet doors are set to the foot position.

A/C SWITCH


The compressor is ON or OFF.

(Pressing the A/C switch when the AUTO switch is ON will turn off the A/C switch and compressor.)

MODE CONTROL DIAL

Controls the air discharge outlets.

MAGNET CLUTCH CONTROL

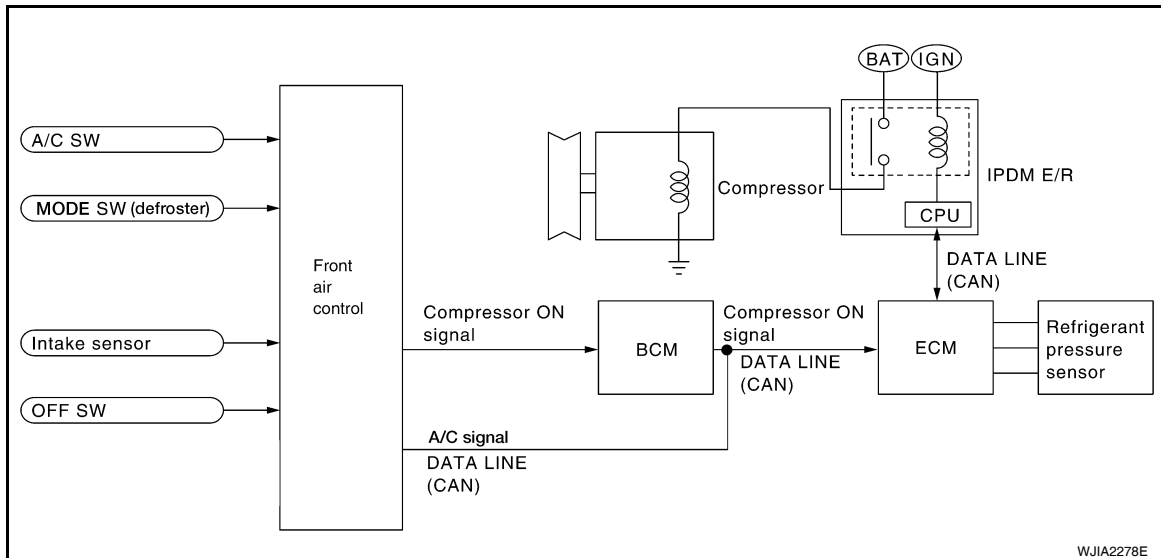

When A/C switch or DEF switch is pressed, front air control inputs compressor ON signal to BCM. BCM sends compressor ON signal to ECM and front air control, via CAN communication line. ECM judges whether compressor can be turned ON, based on each sensor status (refrigerant pressure sensor signal, throttle angle sensor, etc.). If it judges compressor can be turned ON, it sends compressor ON signal to IPDM E/R, via CAN communication line. Upon receipt of compressor ON signal from ECM, IPDM E/R turns air conditioner relay ON to operate compressor.


Discharge Air Flow

INFOID:000000003790154

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

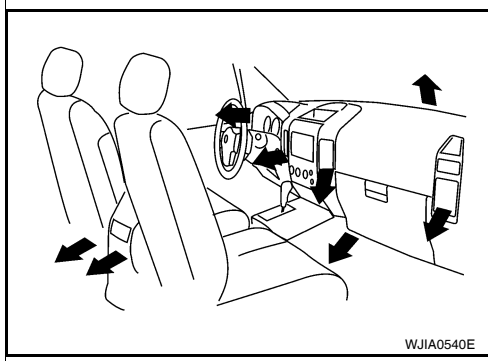

Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	95%	5%	—
	60%	40%	—
	—	70%	30%
	—	60%	40%
	—	10%	90%

Switches And Their Control Function

INFOID:000000003790155

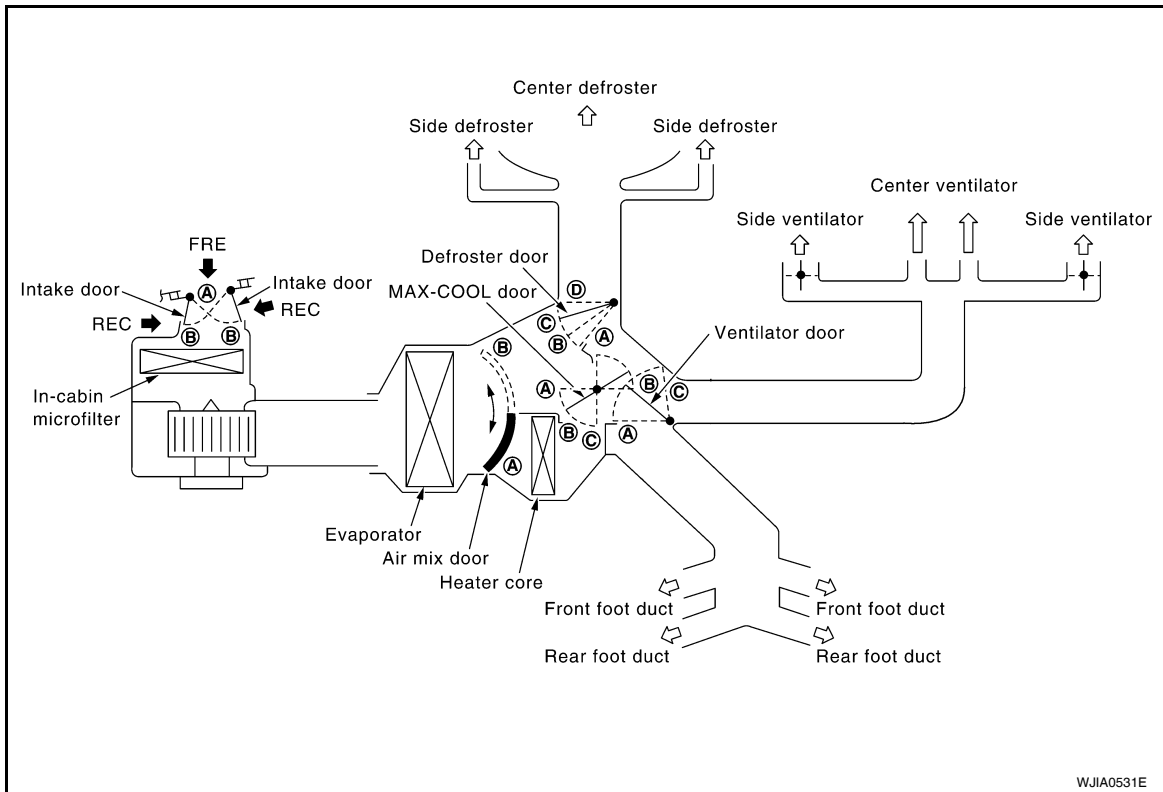

MANUAL AIR CONDITIONER SYSTEM

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Door	Position or switch	MODE SW				DEF SW		REC SW		Temperature switch			OFF SW
		VENT	B/L	FOOT	D/F	ON	OFF	ON	OFF	A/C			
										COLD	~	HOT	
Ventilator door	(A)	(B)	(C)	(C)	(C)	—	—	—	—	—	(C)		
MAX-COOL door	(A)	(B)	(B)	(B)	(C)		—	—	—	(B)			
Defroster door	(D)	(D)	(D _{or} C)	(B)	(A)		—	—	—	(C)			
Intake door	—				(B)		(A)	(B)	—	(B)			
Air mix door	—				—		—	(A)	(B)	—			

WJIA1406E

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

DIAGNOSIS SYSTEM (BCM)

CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000004113217

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to BCS-49, "DTC Index" .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"> Enables to read and save the vehicle specification. Enables to write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITONER		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	PANIC ALARM			×

CONSULT-III Function (BCM - AUTO AIR CONDITIONER)

INFOID:000000004113218

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Monitor Item [Unit]	Contents
IGN ON SW [ON/OFF]	Display [ignition switch position (On)/(Off), ACC position (Off)] status as judged from ignition switch signal
FAN ON SIG [ON/OFF]	Display [FAN (On)/FAN (Off)] status as judged from blower fan motor switch signal
AIR COND SW [ON/OFF]	Display [COMP (On)/COMP (Off)] status as judged from air conditioner switch signal

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

MANUAL A/C IDENTIFICATION TABLE

< COMPONENT DIAGNOSIS >



[MANUAL A/C (TYPE 2)]

COMPONENT DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790158

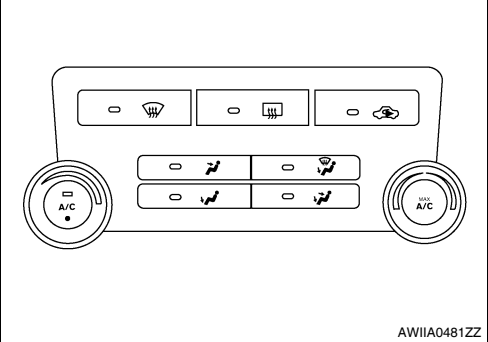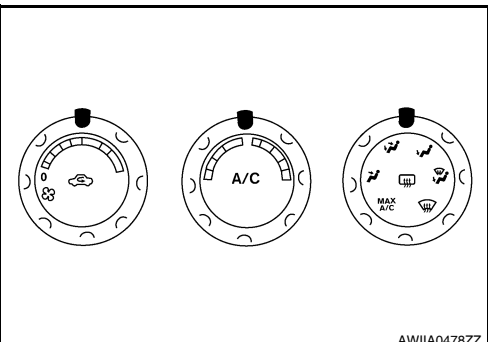Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

MODE DOOR MOTOR

System Description

INFOID:000000003790159

SYSTEM DESCRIPTION

Component Parts

Mode door control system components are:

- Front air control
- Mode door motor
- PBR (built into mode door motor)
- Intake sensor


System Operation

The mode door position (vent, B/L, foot, D/F, and defrost) is set by the front air control by means of the mode door motor. When a mode door position is selected on the front air control, voltage is applied to one circuit of the mode door motor while ground is applied to the other circuit, causing the mode door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the mode door position by measuring the voltage signal on the PBR circuit.

COMPONENT DESCRIPTION

Mode Door Motor

The mode door motor is attached to the heater & cooling unit assembly. It rotates so that air is discharged from the outlet as indicated by the front air control. Motor rotation is conveyed to a link which activates the mode door.

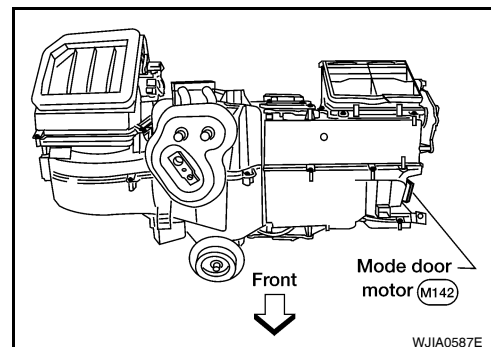


Mode Door Motor Component Function Check


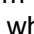

INFOID:000000003790160

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - DISCHARGE AIR

1. Rotate the mode control dial and check each position and press the  (DEF) mode.
2. Confirm that discharge air comes out according to the air distribution table. Refer to [HAC-193, "Discharge Air Flow"](#).

NOTE:

Confirm that the compressor clutch is engaged (visual inspection) and intake door position is at FRESH  when DEF () or D/F () is selected.

Can a symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

MODE DOOR MOTOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

>> GO TO 4.

4. CHECK MODE DOOR OPERATION

Check and verify mode door mechanism for smooth operation in each mode.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair as necessary.

5. CHECK THE MODE DOOR MOTOR PBR CIRCUIT

Perform diagnostic procedure for the mode door motor. Refer to [HAC-199. "Mode Door Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair PBR circuit or replace motor. Refer to [HAC-200. "Mode Door Motor Diagnosis Procedure"](#).

6. RECHECK FOR SYMPTOMS

Perform a complete operational check and check for any symptoms. Refer to [HAC-184. "Operational Check"](#).

Does another symptom exist?

YES >> Repair as necessary.

NO >> Replace front air control Refer to [VTL-8. "Removal and Installation"](#).

Mode Door Motor Diagnosis Procedure

INFOID:000000003790161


SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Press the B/L (↺) mode switch.
3. Check voltage between front air control harness connector M176 terminal 5 and terminal 6 while pressing the mode switch to the floor (↵) mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M176	6	5	Press mode switch	Battery voltage

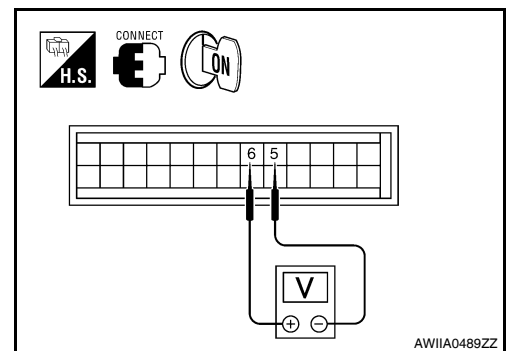

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK MODE DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 5, 6 and ground.


5 - Ground : Continuity should not exist.

6 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

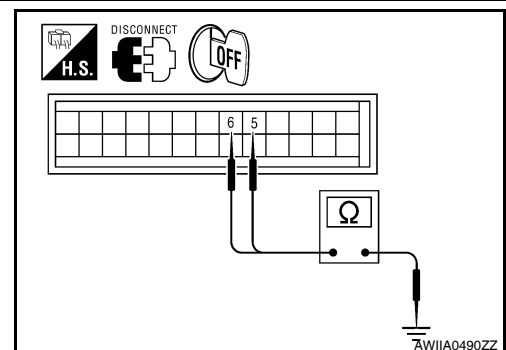

MODE DOOR MOTOR


< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

3. CHECK FRONT AIR CONTROL FOR GROUND AND POWER

1. Press the mode switch to the D/F () mode.
2. Check voltage between front air control harness connector M176 terminal 5 and terminal 6 while pressing the mode switch to the vent () mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M176	5	6	Press mode switch	Battery voltage

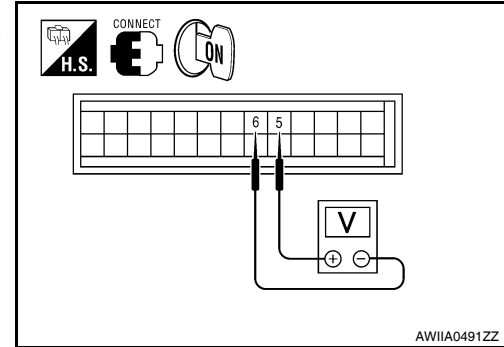

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

4. CHECK MODE DOOR MOTOR AND CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 5 and terminal 6.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

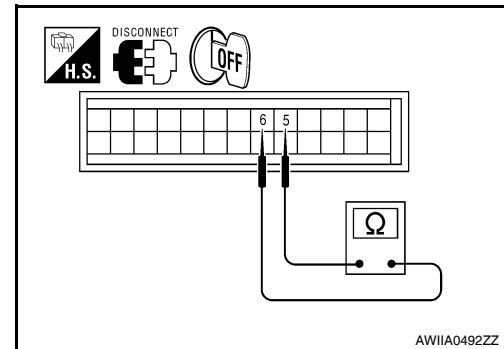

5. CHECK MODE DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the mode door motor harness connector.
2. Check continuity between front air control harness connector M176 (A) terminal 5, 6 and the mode door motor harness connector M142 (B) terminal 5, 6.


5 - 5 : Continuity should exist.

6 - 6 : Continuity should exist.

Is the inspection result normal?

YES >> Replace mode door motor. Refer to [VTL-19. "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

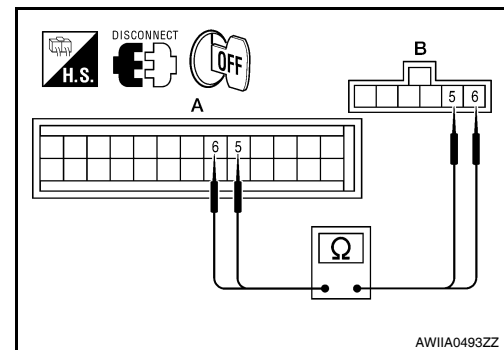

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND


1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 2 and 15.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M176	2	15	5V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

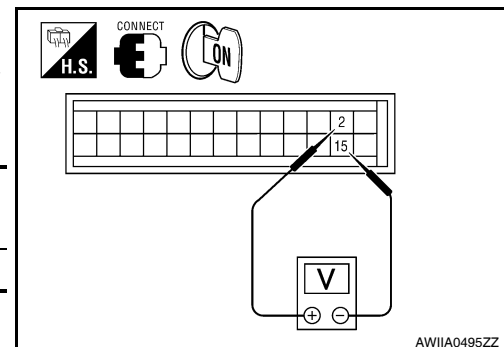

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

MODE DOOR MOTOR

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 2 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

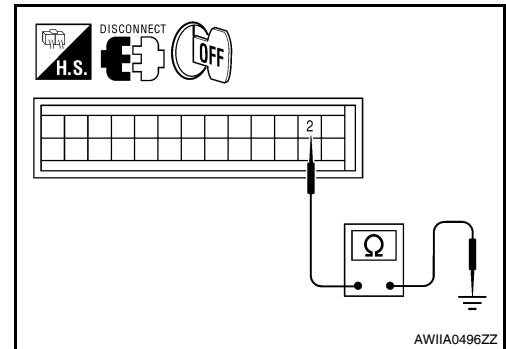


8.CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 2 and terminal 15.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
- NO >> GO TO 9

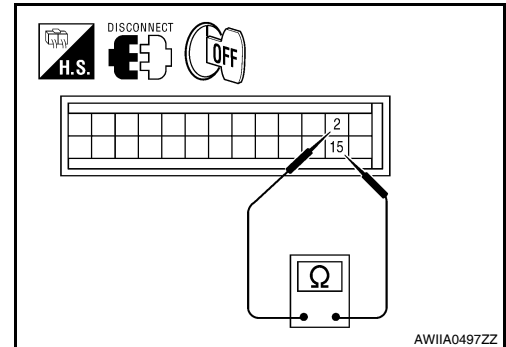

9.CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN


1. Disconnect the mode door motor harness connector.
2. Check continuity between mode door motor harness connector M142 (B) terminal 3, 1 and front air control harness connector M176 (A) terminals 2, 15.

2 - 3 : Continuity should exist.

15 - 1 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

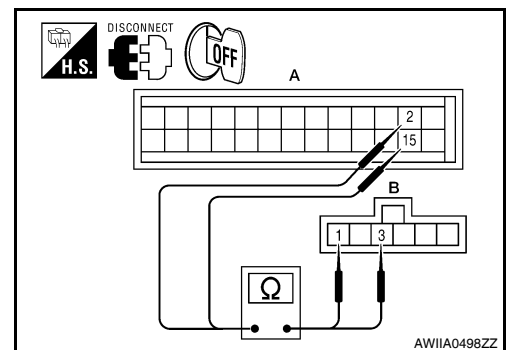


10.CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 16 and ground while cycling mode switch through all modes.

Voltage : Approx. 1V - 4.5V

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> GO TO 11.

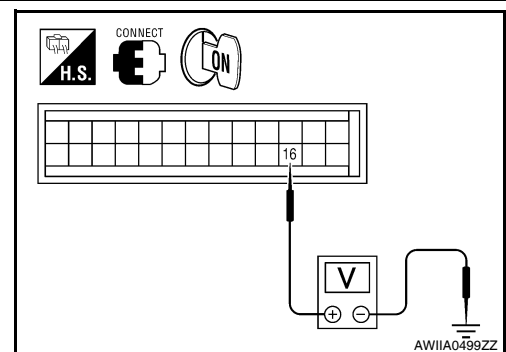

11.CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

MODE DOOR MOTOR

[MANUAL A/C (TYPE 2)]


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 16 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

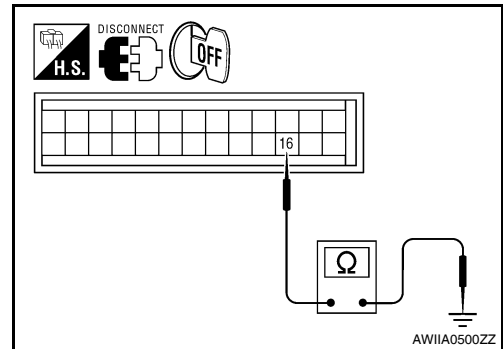


12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the mode door motor harness connector and front air control harness connector.
3. Check continuity between mode door motor harness connector M142 (B) terminal 2 and front air control harness connector M176 (A) terminal 16.

Continuity should exist.

Is the inspection result normal?

- YES >> Replace mode door motor. Refer to [VTL-19, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

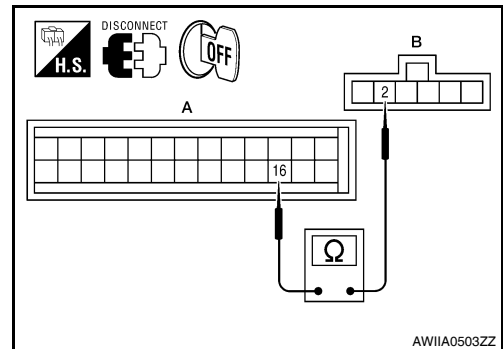

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AIR MIX DOOR MOTOR

System Description

INFOID:000000003790162

SYSTEM DESCRIPTION

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

SYSTEM DESCRIPTION

Component Parts


Air mix door control system components are:

- Front air control
- Air mix door motor
- PBR (built-into air mix door motors)
- Intake sensor

System Operation

The front air control receives data from the temperature selected by the driver side, passenger side, and rear. The front air control then applies a voltage to one circuit of the appropriate air mix door motor, while ground is applied to the other circuit, causing the appropriate air mix door motor to rotate. The direction of rotation is determined by which circuit has voltage applied to it, and which one has ground applied to it. The front air control monitors the air mix door positions by measuring the voltage signal on the PBR circuits of each door.


Air Mix Door Control Specification

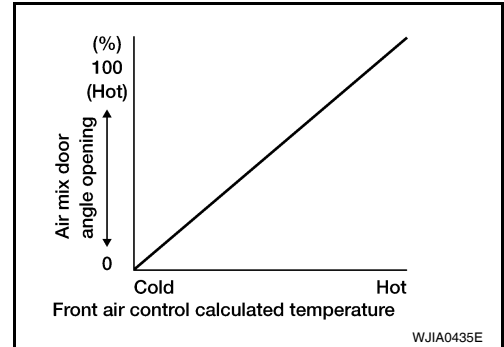

COMPONENT DESCRIPTION

Air Mix Door Motors

The air mix door motor is attached to the front heater & cooling unit assembly. The motor rotates so that the air mix door is opened or closed to a position set by the front air control. Motor rotation is then conveyed through a shaft and the air mix door position is then fed back to the front air control by the PBR built into the air mix door motor.

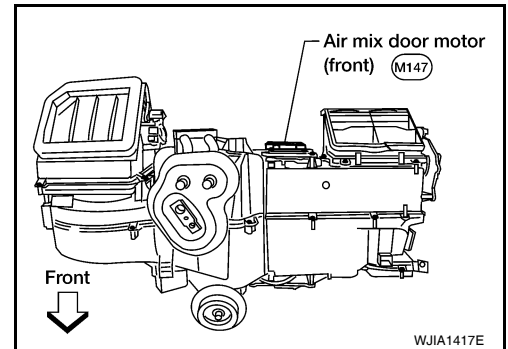

Air Mix Door Motor Component Function Check

INFOID:000000003790163

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE INCREASE

1. Turn the temperature control dial clockwise to maximum hot.
2. Check for hot air at discharge air outlets.

AIR MIX DOOR MOTOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

>> GO TO 2.

2. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE DECREASE

1. Turn the temperature control dial counterclockwise to maximum cold.
2. Check for cold air at discharge air outlets.

Can a symptom be duplicated?

YES >> GO TO 4.

NO >> GO TO 3.

3. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Can a symptom be duplicated?

YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> System OK.

4. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 5.

5. CHECK AIR MIX DOOR OPERATION

Check and verify air mix door mechanism for smooth operation from maximum cold °to maximum hot in each mode.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair as necessary.

6. CHECK THE AIR MIX DOOR MOTOR PBR CIRCUIT

Perform diagnostic procedure for the air mix door motor. Refer to [HAC-204, "Air Mix Door Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair PBR circuit or replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

7. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> Replace front air control Refer to [VTL-8, "Removal and Installation"](#).

Air Mix Door Motor Diagnosis Procedure

INFOID:000000003790164

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR

1. CHECK FRONT AIR CONTROL FOR POWER AND GROUND


AIR MIX DOOR MOTOR

[MANUAL A/C (TYPE 2)]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch ON.
2. Rotate temperature control dial to maximum hot.
3. Check voltage between front air control harness connector M176 terminal 3 and terminal 4 while rotating temperature control dial to maximum cold.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M176	3	4	Rotate temp control dial	Battery voltage

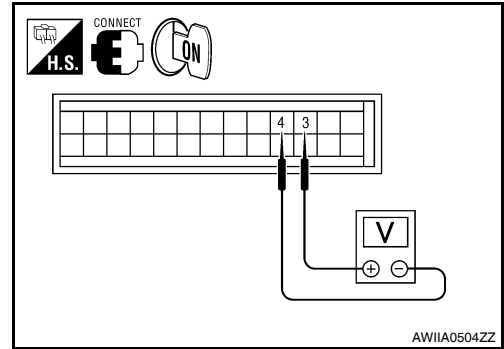

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.


2. CHECK AIR MIX DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 3, 4 and ground.

- 3 - Ground : Continuity should not exist.**
4 - Ground : Continuity should not exist.

Is the inspection result normal?


- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
NO >> Repair or replace harness as necessary.

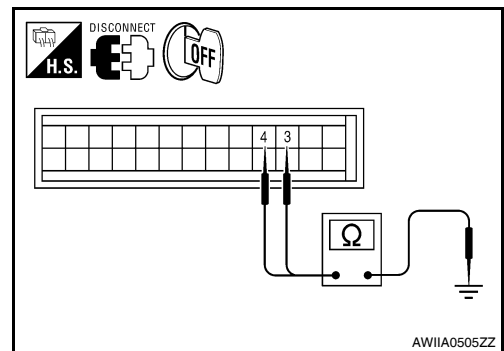

3. CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Rotate temperature control dial to maximum hot.
3. Check voltage between front air control harness connector M176 terminal 3 and terminal 4 while rotating temperature control dial to maximum cold.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M176	4	3	Rotate temp control dial	Battery voltage

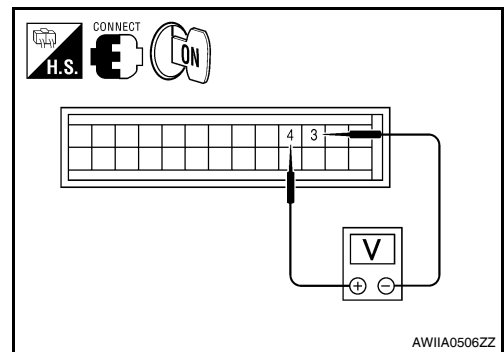

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).


4. CHECK AIR MIX DOOR MOTOR CIRCUITS FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 3 and terminal 4.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 6.
NO >> GO TO 5.

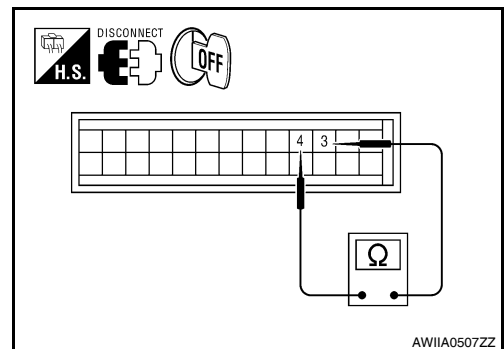

5. CHECK AIR MIX DOOR MOTOR CIRCUITS FOR OPEN

AIR MIX DOOR MOTOR

[MANUAL A/C (TYPE 2)]


< COMPONENT DIAGNOSIS >

1. Disconnect the air mix door motor harness connector.
2. Check continuity between front air control harness connector M176 (A) terminal 3, 4 and the air mix door motor harness connector M147 (B) terminal 1, 6.

3 - 1 : Continuity should exist.
4 - 6 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace air mix door motor. Refer to [VTL-20. "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

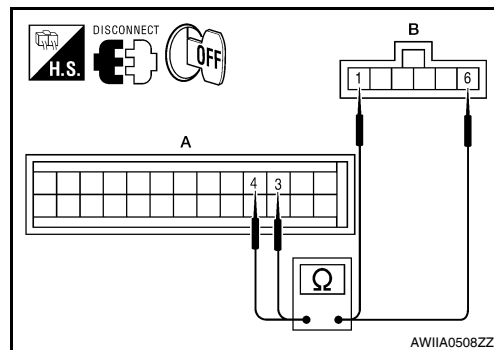


6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND

1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 2 and 15

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M176	2	15	5V

Is the inspection result normal?

- YES >> GO TO 8.
 NO >> GO TO 7.

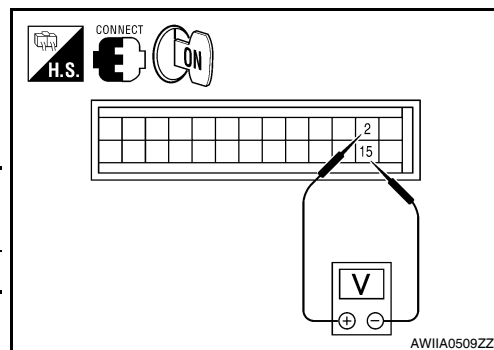


7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 2 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

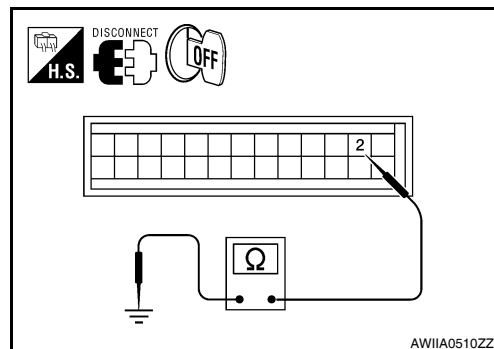


8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 2 and 15.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
 NO >> GO TO 9.

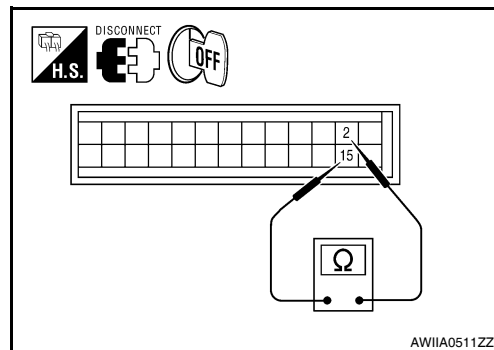

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN

AIR MIX DOOR MOTOR

[MANUAL A/C (TYPE 2)]

< COMPONENT DIAGNOSIS >

1. Disconnect the air mix door motor harness connector.
2. Check continuity between air mix door motor harness connector M147 (B) terminal 3, 2 and front air control harness connector M176 (A) terminal 2 and 15.

2 - 3 : Continuity should exist.

15 - 2 : Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

10. CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 18 and ground while rotating temperature control dial from maximum hot to maximum cold.

Voltage : Approx. .5V - 4.5V

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 11.

11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 18 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN





1. Turn ignition switch OFF.
2. Disconnect the air mix door motor harness connector and front air control harness connector.
3. Check continuity between air mix door motor harness connector M147 (B) terminal 4 and front air control harness connector M176 (A) terminal 18.

Continuity should exist.

Is the inspection result normal?

YES >> Replace air mix door motor. Refer to [VTL-20, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

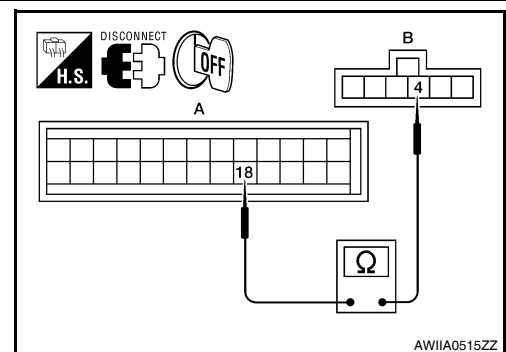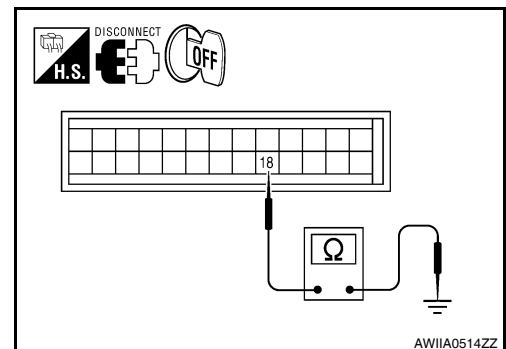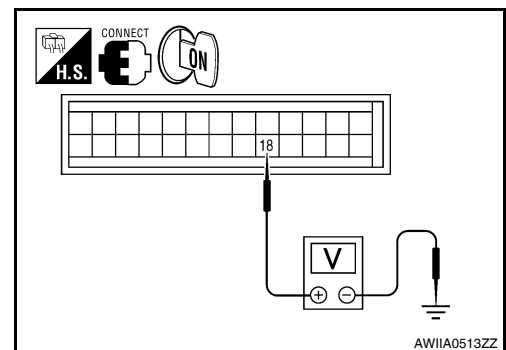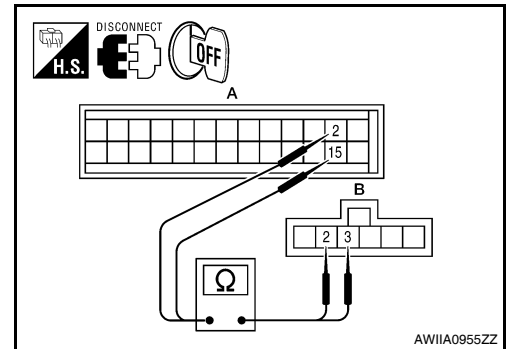

INTAKE DOOR MOTOR

System Description

INFOID:000000003790165

SYSTEM DESCRIPTION

SYMPTOM:

- Intake door motor does not operate normally.
- Intake door does not change.

SYSTEM DESCRIPTION

Component Parts


Intake door control system components are:

- Front air control
- Intake door motor (PBR built into the intake door motor)
- Intake sensor

System Operation

The intake door control determines the intake door position based on the position of the recirculation switch. When the recirculation switch is depressed the intake door motor rotates closing off the fresh air inlet and recirculating the cabin air. If the recirculation switch is depressed again, the intake door motor rotates in the opposite direction, again allowing fresh air into the cabin.


Intake Door Control Specification

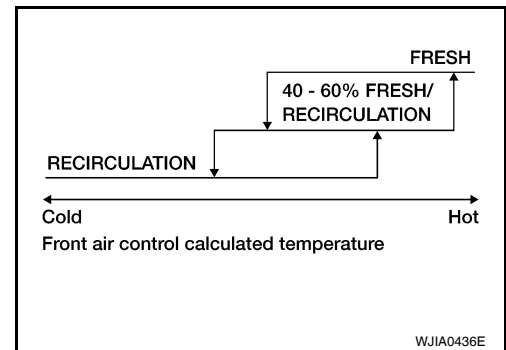

COMPONENT DESCRIPTION

Intake door motor

The intake door motor is attached to the intake unit. It rotates so that air is drawn from inlets set by the front air control. Motor rotation is conveyed to a lever which activates the intake door.

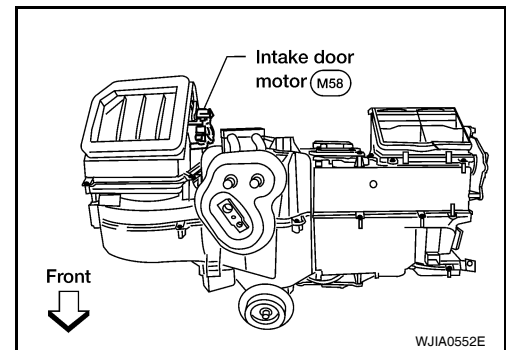






Intake Door Motor Component Function Check

INFOID:000000003790166

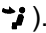INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - REC ()

1. Press the vent mode switch ().
2. Press REC () switch. The REC () indicator should illuminate.
3. Press REC () switch again. The REC () indicator should go out.
4. Listen for intake door position change (you should hear blower sound change slightly).

INTAKE DOOR MOTOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Can a symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2.PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-184. "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-183. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3.CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4.CHECK INTAKE DOOR OPERATION

Check and verify intake door mechanism for smooth operation.

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair intake door mechanism.

5.RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184. "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-183. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).

Intake Door Motor Diagnosis Procedure

INFOID:000000003790167

SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR

1.CHECK FRONT AIR CONTROL FOR POWER AND GROUND


1. Turn ignition switch ON.
2. Check voltage between front air control harness connector M176 terminal 8 and terminal 7 while placing the HVAC system into self-diagnostic mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
front air control: M176	8	7	Self-diagnostic mode	Battery voltage

Is the inspection result normal?

- OK >> GO TO 3.
- NO >> GO TO 2.

2.CHECK INTAKE DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

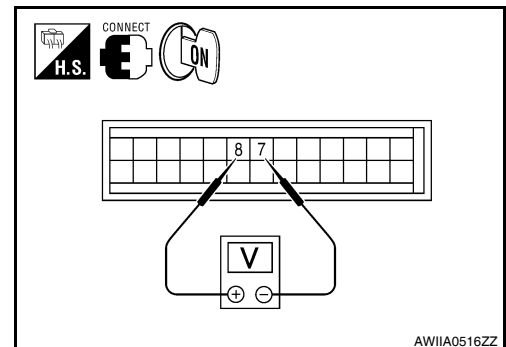

AWIIA0516ZZ

INTAKE DOOR MOTOR

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 8, 7 and ground.

8 - Ground : Continuity should not exist.
7 - Ground : Continuity should not exist.

Is the inspection result normal?

- OK >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

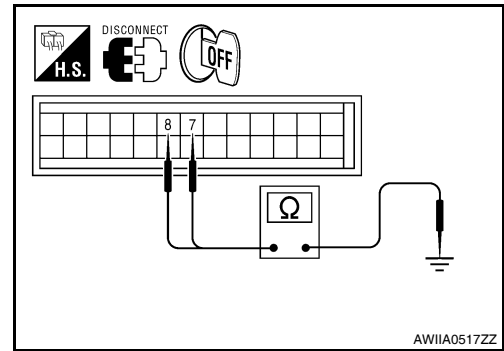


3. CHECK FRONT AIR CONTROL FOR GROUND AND POWER

1. Press the BACK button to back out of self-diagnostic mode.
2. Check voltage between front air control harness connector M176 terminal 8 and terminal 7 while placing the HVAC system into self-diagnostic mode.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
front air control: M176	7	8	Self-diagnostic mode	Battery voltage

Is the inspection result normal?

- OK >> GO TO 4.
 NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

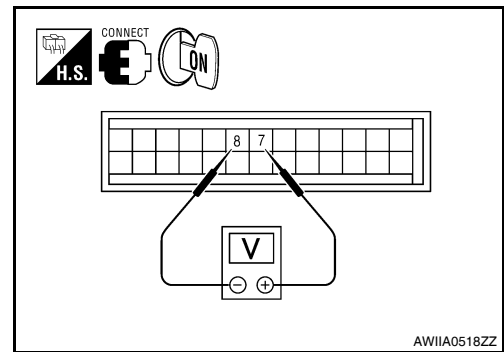


4. CHECK INTAKE DOOR MOTOR AND CIRCUITS FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 8 and terminal 7.

Continuity should exist.

Is the inspection result normal?

- OK >> Replace intake door motor. Refer to [VTL-18, "Removal and Installation"](#).
 NO >> GO TO 5.

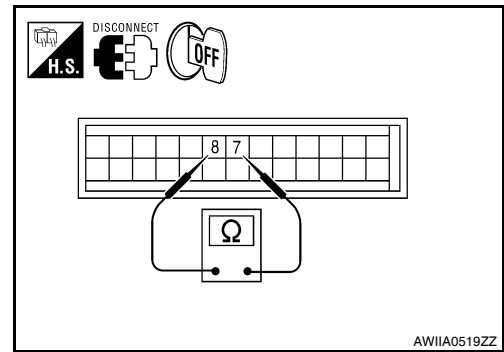


5. CHECK INTAKE DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the intake door motor harness connector.
2. Check continuity between front air control harness connector M176 (A) terminal 7, 8 and the intake door motor harness connector M58 (B) terminal 1, 6.

8 - 6 : Continuity should exist.
7 - 1 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace intake door motor. Refer to [VTL-18, "Removal and Installation"](#).
 NO >> Repair or replace harness as necessary.

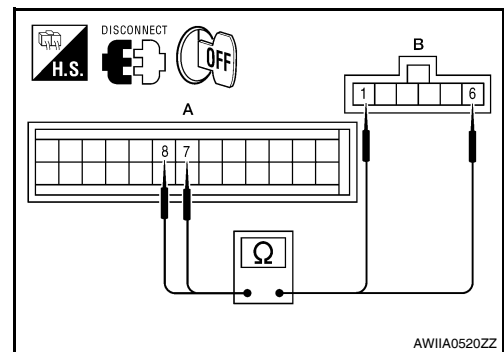

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

DEFROSTER DOOR MOTOR CIRCUIT

System Description

INFOID:000000003790168

SYSTEM DESCRIPTION

Component Parts

Defroster door control system components are:

- Front air control
- Defroster door motor
- PBR (Built into defroster door motor)
- Intake sensor


System Operation

The front air control determines defroster door position based on the position of the defroster switch. When the defroster switch is depressed, the defroster door motor rotates directing air to the defroster ducts. When any mode other than defroster is selected, the defroster motor rotates in the opposite direction closing off air flow to the defroster ducts.

COMPONENT DESCRIPTION

Defroster door motor

The defroster door motor is attached to the front heater & cooling unit assembly. The front air control sends a voltage to rotate to the defroster door directing the air flow either to the defroster ducts, or to the floor ducts, depending on which way the voltage and ground are applied to the motor leads. Motor rotation is conveyed to a lever which activates the defroster door.

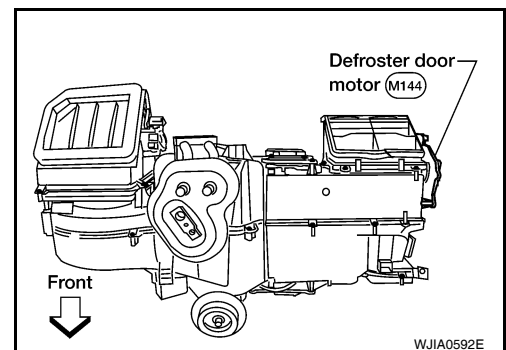



Defroster Door Motor Component Function Check

INFOID:000000003790169

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - DEFROSTER DOOR

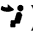1. Select vent () mode.
2. Rotate mode control dial to defrost mode ().
3. Listen for defroster door position change (blower sound should change slightly).

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> SYSTEM OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK DEFROSTER DOOR MOTOR

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Perform diagnostic procedure for defroster door motor. Refer to [HAC-212, "Defroster Door Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair PBR circuit or replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).

5.CHECK DEFROSTER DOOR OPERATION

Check and verify defroster door mechanism for smooth operation.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).

NO >> Repair defroster door mechanism.

Defroster Door Motor Diagnosis Procedure

INFOID:000000003790170

SYMPTOM:


- Defroster door does not change.
- Defroster door motor does not operate normally.

DIAGNOSTIC PROCEDURE FOR DEFROSTER DOOR MOTOR

1.CHECK FRONT AIR CONTROL FOR POWER AND GROUND

1. Turn ignition switch ON.
2. Rotate the mode control dial to defrost mode (☼).
3. Check voltage between front air control harness connector M176 terminal 20 and terminal 19 and then press the defroster switch (☼) again.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M176	20	19	Press defroster switch	Battery voltage

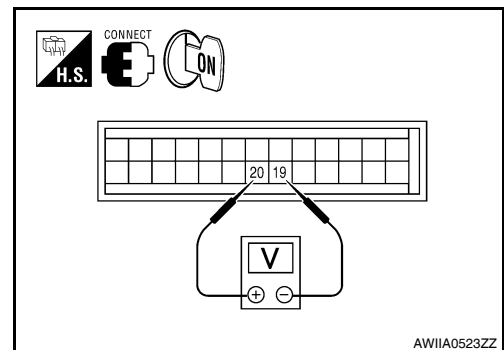

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DEFROSTER DOOR MOTOR CIRCUITS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 19, 20 and ground.

19 - Ground : Continuity should not exist.


20 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

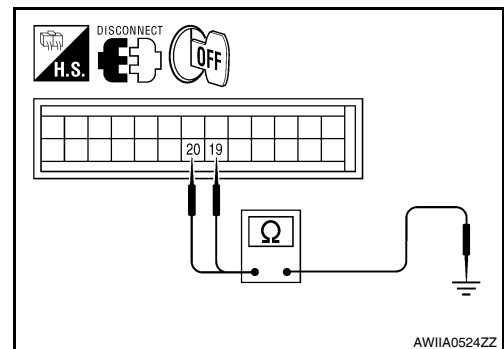

3.CHECK FRONT AIR CONTROL FOR GROUND AND POWER




DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

1. Press the defroster switch ().
2. Check voltage between front air control harness connector M176 terminal 19 and terminal 20 and the press the defroster switch () again.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Front air control: M176	19	20	Press defroster switch	Battery voltage

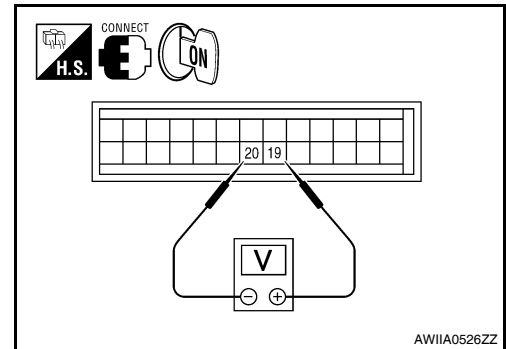

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

4. CHECK DEFROSTER DOOR MOTOR AND CIRCUITS FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 19 and terminal 20.

Continuity should exist.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

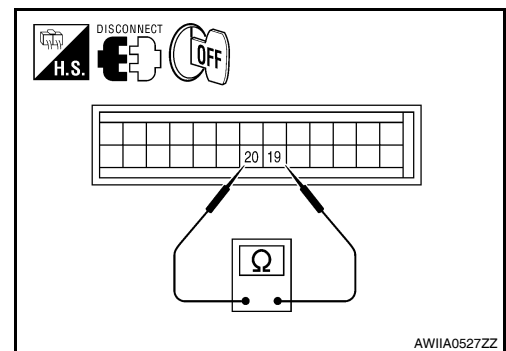

5. CHECK DEFROSTER DOOR MOTOR CIRCUITS FOR OPEN

1. Disconnect the defroster door motor harness connector.
2. Check continuity between front air control harness connector M176 (A) terminal 19, 20 and the defroster door motor harness connector M144 (B) terminal 1, 6.

19 - 1 : Continuity should exist.

20 - 6 : Continuity should exist.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

6. CHECK FRONT AIR CONTROL FOR PBR POWER AND GROUND


1. Reconnect front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 2 and 15.

Connector	Terminals		Voltage (Approx.)
	(+)	(-)	
Front air control: M176	2	15	5V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

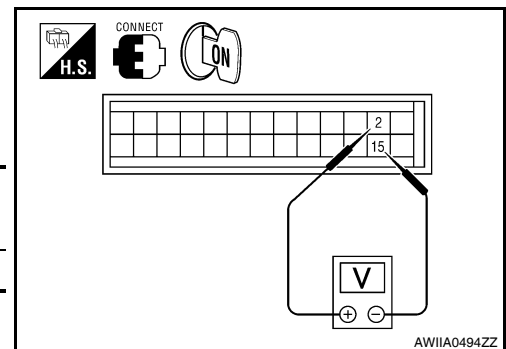

7. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR SHORT TO GROUND

DEFROSTER DOOR MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 2 and ground.

Continuity should not exist.

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

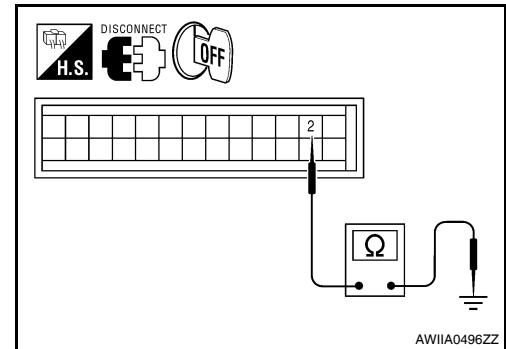


8. CHECK PBR REFERENCE VOLTAGE AND GROUND CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect the front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 2 and 15.

Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 10.
- NO >> GO TO 9.

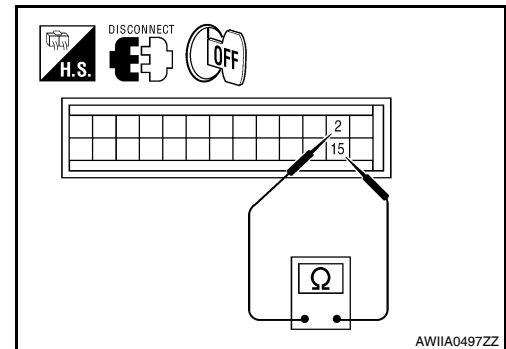

9. CHECK PBR REFERENCE VOLTAGE CIRCUIT FOR OPEN


1. Disconnect the defroster door motor harness connector.
2. Check continuity between defroster door motor harness connector M144 (B) terminal 3, 2 and front air control harness connector M176 (A) terminal 2, and 15.

2 - 3 : Continuity should exist.

15 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).
- NO >> Repair or replace harness as necessary.

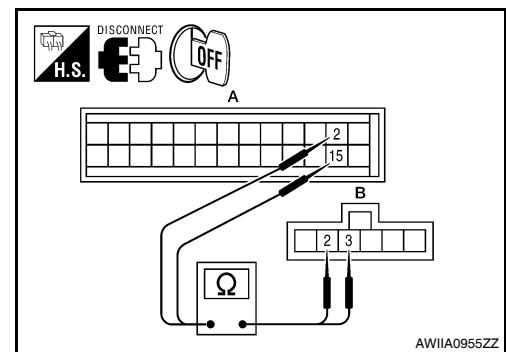


10. CHECK PBR FEEDBACK VOLTAGE

1. Reconnect the front air control harness connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 25 and ground while cycling defroster switch on and off.

Voltage : Approx. 1V - 4.5V

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> GO TO 11.

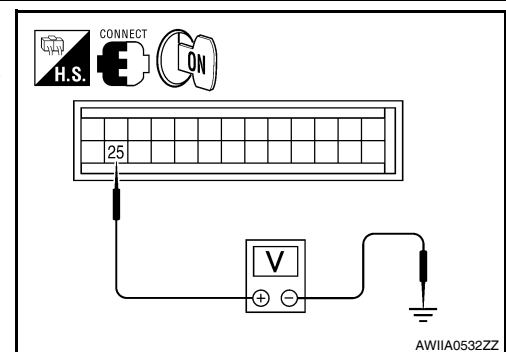

11. CHECK PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT TO GROUND

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

DEFROSTER DOOR MOTOR CIRCUIT

[MANUAL A/C (TYPE 2)]

< COMPONENT DIAGNOSIS >


1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Check continuity between front air control harness connector M176 terminal 25 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

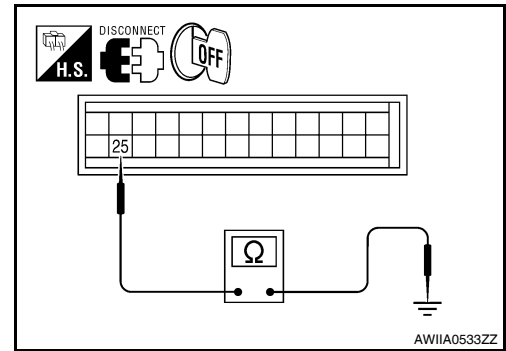

12. CHECK PBR FEEDBACK CIRCUIT FOR OPEN


1. Turn ignition switch OFF.
2. Disconnect the defroster door motor harness connector and front air control harness connector.
3. Check continuity between defroster door motor harness connector M144 (B) terminal 4 and front air control harness connector M176 (A) terminal 25.

Continuity should exist.

Is the inspection result normal?

YES >> Replace defroster door motor. Refer to [VTL-17, "Removal and Installation"](#).

NO >> Repair or replace harness as necessary.

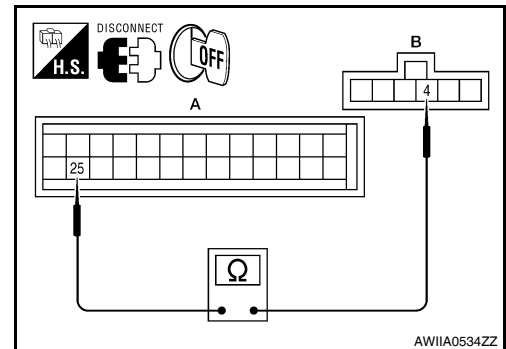

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

BLOWER MOTOR CONTROL SYSTEM

System Description

INFOID:000000003790171


SYSTEM DESCRIPTION

Component Parts

Blower speed control system components are:

- Front air control
- Variable blower control
- Front blower motor relay
- Front blower motor
- Intake sensor


System Operation

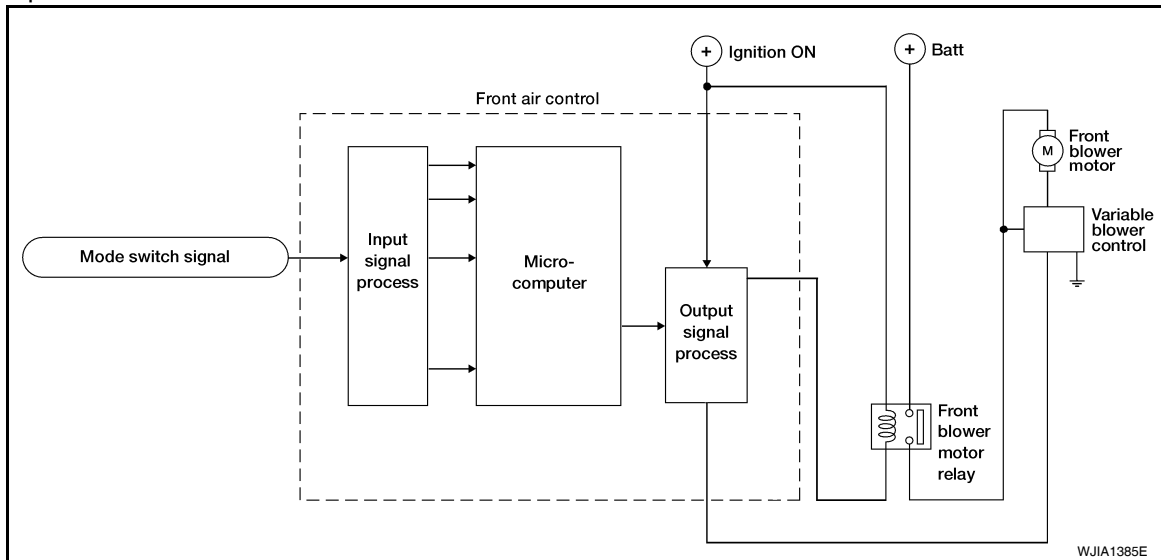

COMPONENT DESCRIPTION

Variable Blower Control

The variable blower control is located on the cooling unit. The variable blower control (1) receives a gate voltage from the front air control to steplessly maintain the blower motor voltage in the 0 to 5 volt range (approx.).

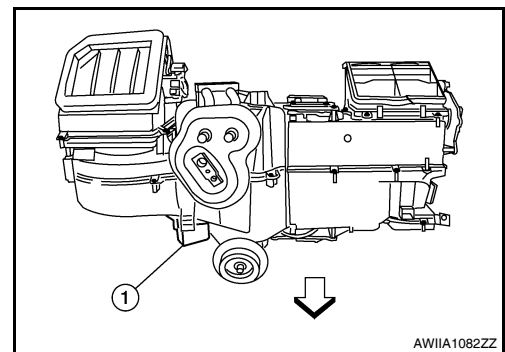

Front Blower Motor Component Function Check

INFOID:000000003790172

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - FRONT BLOWER

1. Rotate the blower control dial clockwise once. Blower motor should operate in low speed.
2. Rotate the blower control dial clockwise, and continue checking blower speed until all speeds are checked.

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184. "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-183. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK BLOWER MOTOR OPERATION

Check and verify blower motor operates manually in all speeds.

Does blower motor operate in all speeds?

YES >> GO TO 5.

NO >> Refer to [HAC-218. "Front Blower Motor Diagnosis Procedure"](#).

5. CHECK ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT

Check engine coolant temperature sensor circuit. Refer to [EC-126. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace engine coolant temperature sensor.

6. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184. "Operational Check"](#).

Does another symptom exist?

YES >> Refer to [HAC-183. "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).

NO >> Replace front air control. Refer to [VTL-8. "Removal and Installation"](#).


Front Blower Motor Diagnosis Procedure

INFOID:000000003790173

SYMPTOM: Blower motor operation is malfunctioning.

DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning under starting blower speed control.

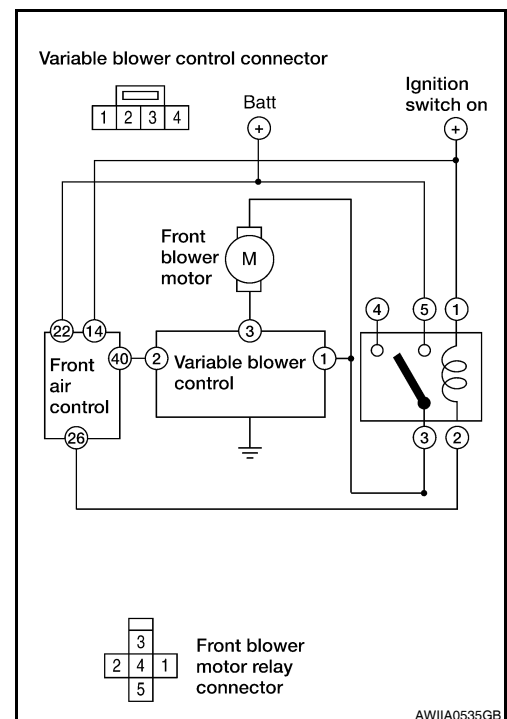

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

1. CHECK FUSES

Check 20A fuses [No. 24 and 27 (Located in the fuse and fusible link box)]. For fuse layout. Refer to [PG-73, "Terminal Arrangement"](#).

Fuses are good.

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> GO TO 9.


2. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector.
3. Turn ignition switch ON.
4. Press the A/C switch.
5. Rotate blower control dial to maximum speed.
6. Check voltage between front blower motor harness connector M62 terminal 2 and ground.

2 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 11.
- NO >> GO TO 3.

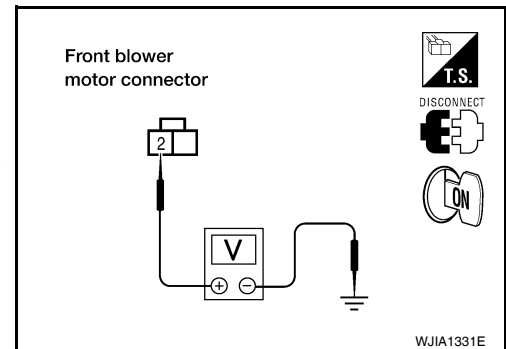


3. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front blower motor relay.
3. Check voltage between front blower motor relay harness connector M107 terminal 5 and ground.

5 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

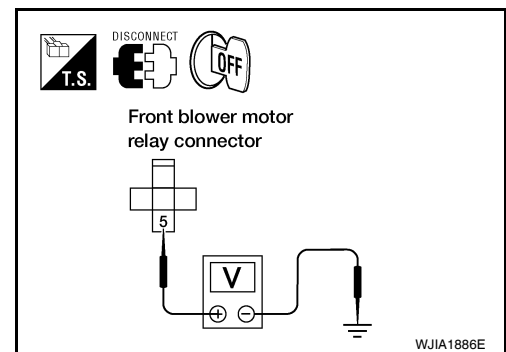

4. CHECK FRONT BLOWER MOTOR RELAY

Turn ignition switch OFF.

Check front blower motor relay. Refer to [HAC-221, "Front Blower Motor Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace front blower motor relay.


5. CHECK FRONT BLOWER MOTOR RELAY (SWITCH SIDE) CIRCUIT FOR OPEN

Check continuity between front blower motor relay harness connector M107 terminal 3 and front blower motor harness connector M62 terminal 2.

3 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair harness or connector.

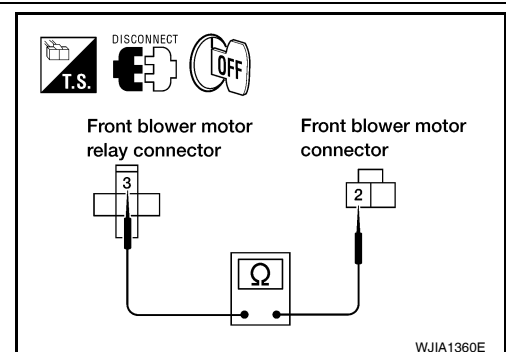

6. CHECK VARIABLE BLOWER CONTROL POWER SUPPLY CIRCUIT FOR OPEN

BLOWER MOTOR CONTROL SYSTEM

[MANUAL A/C (TYPE 2)]


< COMPONENT DIAGNOSIS >

1. Disconnect variable blower control harness connector.
2. Check continuity between front blower motor relay harness connector M107 (A) terminals 3 and variable blower control harness connector M179 (B) terminal 1.

3 - 1 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

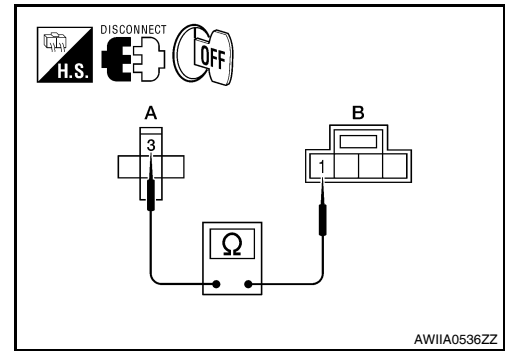


7. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

1. Disconnect front air control connector.
2. Check continuity between front air control harness connector M177 (B) terminal 40 and variable blower control harness connector M179 (A) terminal 2.

40 - 2 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair harness or connector.

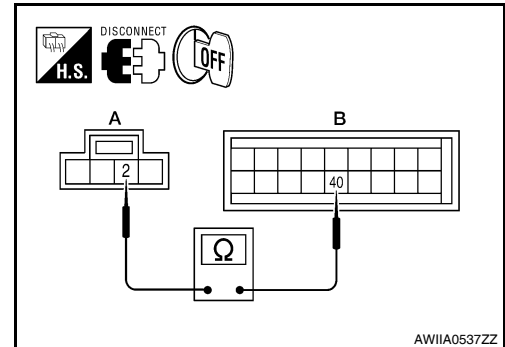


8. CHECK FRONT BLOWER MOTOR RELAY (COIL SIDE) POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front blower motor relay harness connector M107 terminal 1 and ground.

1 - Ground : Battery voltage

Is the inspection result normal?

- YES >> GO TO 9.
NO >> Repair front blower motor ground circuit or connector.

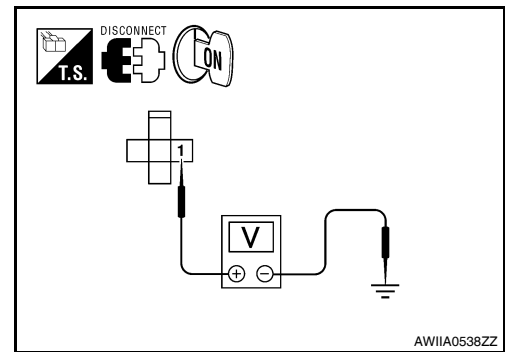

9. REPLACE FUSES

1. Replace fuses.
2. Activate the front blower motor.

Does the fuse blow?

- YES >> GO TO 10.
NO >> Inspection End.


10. CHECK FRONT BLOWER MOTOR POWER SUPPLY CIRCUIT FOR SHORT

1. Turn ignition switch OFF.
2. Disconnect front blower motor connector and variable blower control connector.
3. Check continuity between variable blower control harness connector M179 terminal 1 and ground.

1 - Ground : Continuity should not exist.

Is the inspection result normal?

- YES >> GO TO 11.
NO >> Repair harness or connector.

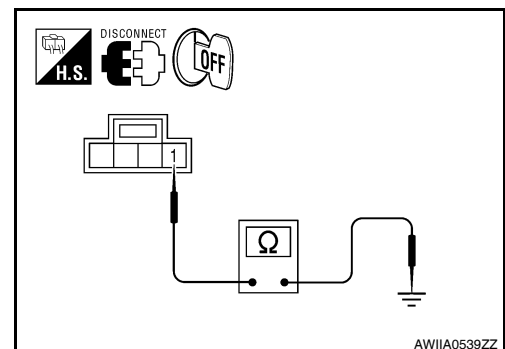

11. CHECK VARIABLE BLOWER CONTROL SIGNAL CIRCUIT

BLOWER MOTOR CONTROL SYSTEM

[MANUAL A/C (TYPE 2)]

< COMPONENT DIAGNOSIS >


1. Disconnect front air control connector.
2. Check continuity between front air control harness connector M177 (B) terminal 40 and variable blower control harness connector M179 (A) terminal 2.

40 - 2 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair harness or connector.

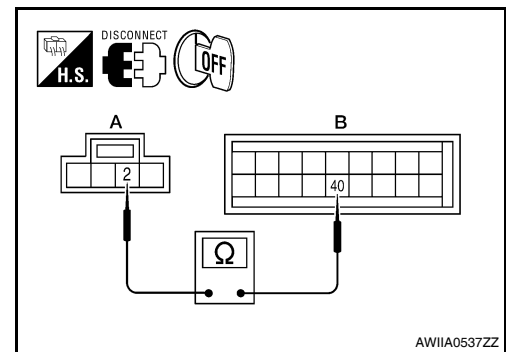

12. CHECK FRONT BLOWER MOTOR

Check front blower motor. Refer to [HAC-217, "Front Blower Motor Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace front blower motor. Refer to [VTL-12, "Removal and Installation"](#).

13. CHECK BLOWER MOTOR GROUND CIRCUIT


Check continuity between front blower motor harness connector M62 (B) terminal 1 and variable blower control harness connector M179 (A) terminal 3.

1 - 3 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

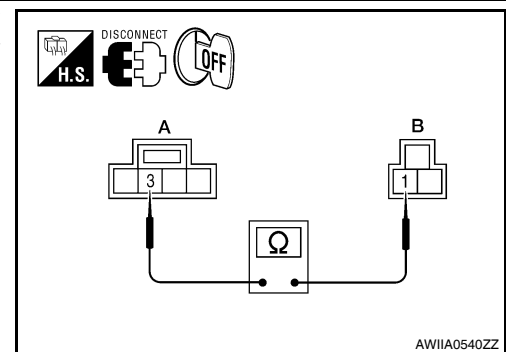

14. CHECK VARIABLE BLOWER CONTROL GROUND CIRCUIT


Check continuity between variable blower control harness connector M179 terminal 4 and ground.

4 - Ground : Continuity should exist.

Is the inspection result normal?

YES >> Replace variable blower control. Refer to [VTL-22, "Removal and Installation"](#).

NO >> Repair harness or connector.

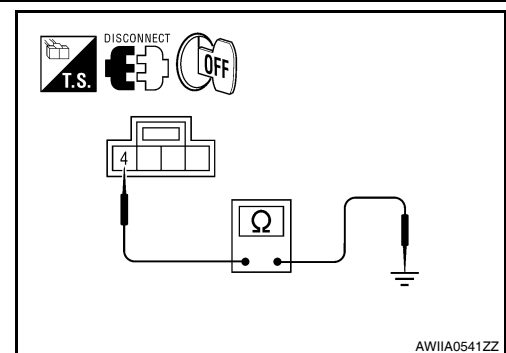

Front Blower Motor Component Inspection

INFOID:000000003790174


COMPONENT INSPECTION

BLOWER MOTOR CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]


Check continuity between terminals by supplying 12 volts and ground to coil side terminals of relay.

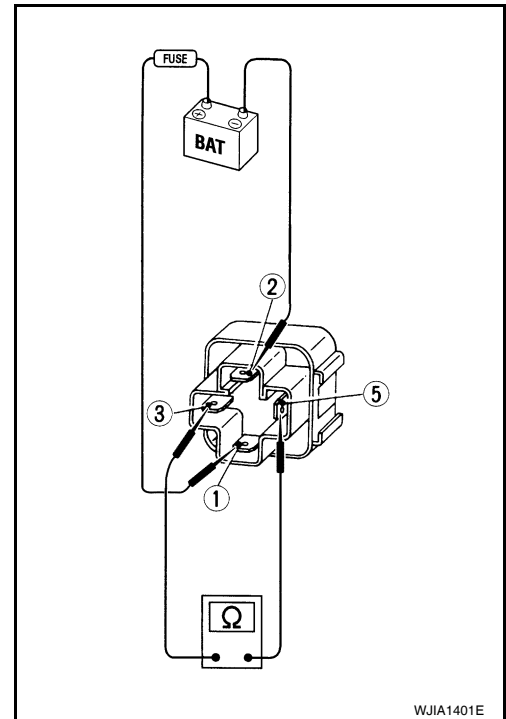

Front Blower Motor

Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the blower unit.
- Apply 12 volts to terminal 2 and ground to terminal 1 and verify that the motor operates freely and quietly.

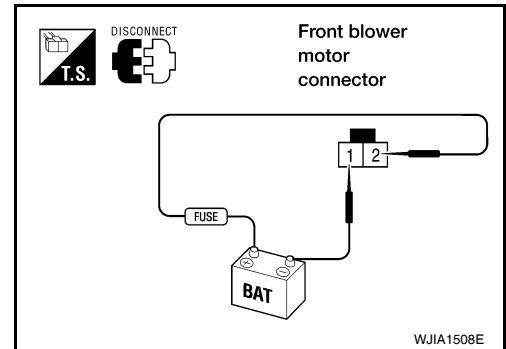

MAGNET CLUTCH

System Description

INFOID:000000003790175

SYSTEM DESCRIPTION

The front air control controls compressor operation based on ambient and intake temperature and a signal from ECM.

Low Temperature Protection Control

The front air control will turn the compressor ON or OFF as determined by a signal detected by the intake sensor.

When intake air temperature is higher than the preset value, the compressor turns ON. The compressor turns OFF when intake air temperature is lower than the preset value.

Magnet Clutch Component Function Check

INFOID:000000003790176

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - MAGNET CLUTCH

1. Turn ignition switch ON.
2. Turn the blower control dial to low speed and press the A/C switch.
3. Rotate mode control dial to vent mode (↺).
4. Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle and set temperatures.)

Can the symptom be duplicated?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK INTAKE SENSOR

Check and verify intake sensor circuit. Refer to [HAC-230, "Intake Sensor Diagnosis Procedure"](#).

>> GO TO 5.

5. RECHECK FOR ANY SYMPTOMS

Perform a complete operational check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Does another symptom exist?

- YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

Magnet Clutch Diagnosis Procedure

INFOID:000000003790177


DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH

MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

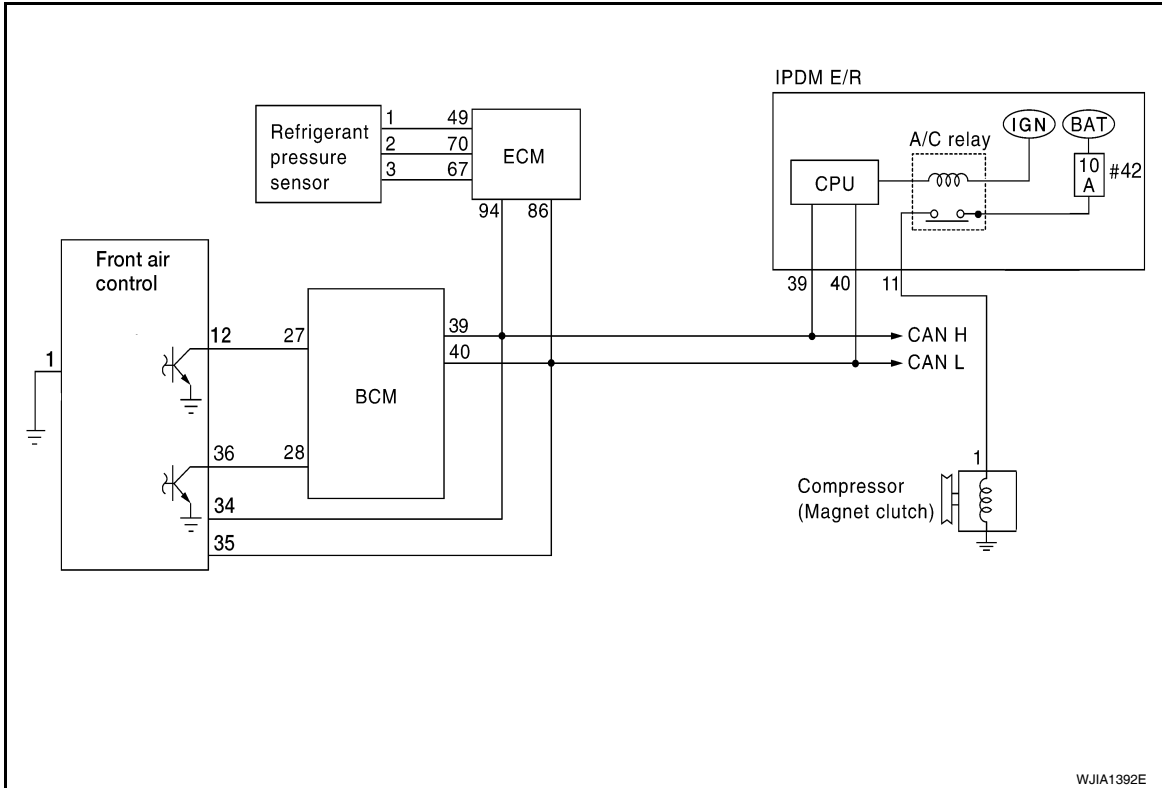

1. CHECK INTAKE SENSOR CIRCUIT

Check intake sensors. Refer to [HAC-231, "Intake Sensor Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check malfunctioning intake sensor. Refer to [HAC-230, "Intake Sensor Diagnosis Procedure"](#).

2. PERFORM AUTO ACTIVE TEST

Refer to [PCS-11, "Diagnosis Description"](#).

Does magnet clutch operate?

YES >> • WITH CONSULT-III
GO TO 5.

• WITHOUT CONSULT-III
GO TO 6.

NO >> Check 10A fuse (No. 42, located in IPDM E/R), and GO TO 3.

3. CHECK CIRCUIT CONTINUITY BETWEEN IPDM E/R AND COMPRESSOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and compressor (magnet clutch) connector.
3. Check continuity between IPDM E/R harness connector E119 terminal 11 and A/C compressor harness connector F3 terminal 1.


11 – 1 : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK MAGNET CLUTCH CIRCUIT

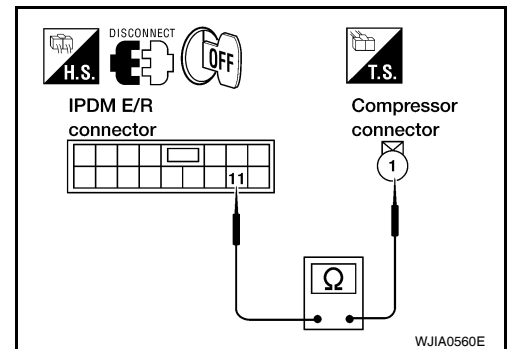

MAGNET CLUTCH


< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Check for operation sound when applying battery voltage direct current to terminal.

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).
- NO >> Replace magnet clutch. Refer to [HA-34, "Removal and Installation for Compressor Clutch"](#).

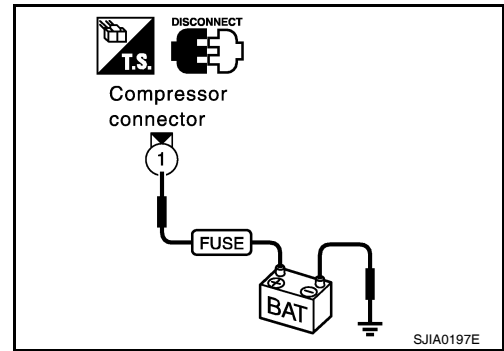

5. CHECK BCM INPUT (COMPRESSOR ON) SIGNAL

Check compressor ON/OFF signal. Refer to [HAC-196, "CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

A/C SW ON : COMP ON SIG ON
A/C SW OFF : COMP ON SIG OFF

Is the inspection result normal?

- YES >> GO TO 8.
- NO >> GO TO 6.


6. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect BCM connector and front air control connector.
3. Check continuity between BCM harness connector M18 (A) terminal 27 and front air control harness connector M176 (B) terminal 12.

27 - 12 Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Repair harness or connector.

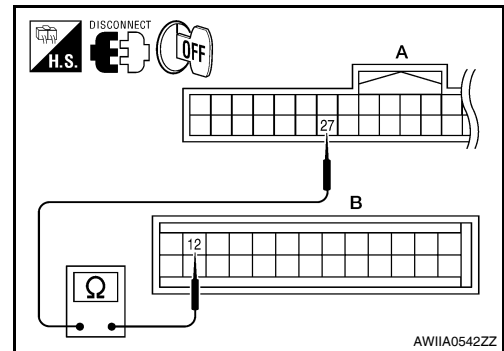

7. CHECK VOLTAGE FOR FRONT AIR CONTROL (A/C COMPRESSOR ON SIGNAL)

1. Reconnect BCM connector and front air control connector.
2. Turn ignition switch ON.
3. Check voltage between front air control harness connector M176 terminal 12 and ground.

Terminals		Condition	Voltage
(+)	(-)		
front air control connector	Terminal No.		
M176	12	A/C switch: ON	Approx. 0V
		A/C switch: OFF	Approx. 5V

Is the inspection result normal?

- YES >> GO TO 8.
- NO-1 >> If the voltage is approx. 5V when A/C switch is ON, replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
- NO-2 >> If the voltage is approx. 0V when A/C switch is OFF, replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

8. CHECK REFRIGERANT PRESSURE SENSOR

1. Start engine.


MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

- Check voltage between ECM harness connector F54 terminal 70 and ground.

Terminals		(-)	Condition	Voltage
(+) Terminal No.				
ECM connector				
F54	70	Ground	A/C switch: ON	Approx. 0.36 - 3.88V

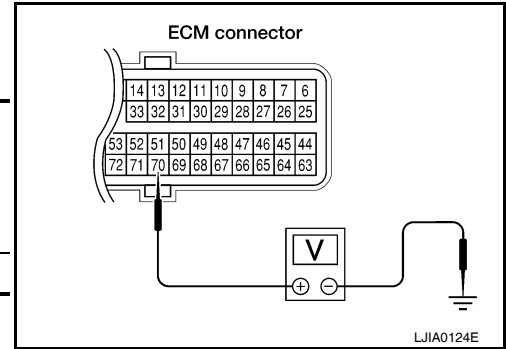

Is the inspection result normal?

- YES >> GO TO 9.
 NO >> Refer to [EC-412, "Diagnosis Procedure"](#).

9. CHECK BCM INPUT (FAN ON) SIGNAL

Check FAN ON/OFF signal. Refer to [BCS-15, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

**FRONT BLOWER CONTROL : FAN ON SIG ON
 DIAL ON**

**FRONT BLOWER CONTROL : FAN ON SIG OFF
 DIAL OFF**

Is the inspection result normal?

- YES >> GO TO 12.
 NO >> GO TO 10.


10. CHECK CIRCUIT CONTINUITY BETWEEN BCM AND FRONT AIR CONTROL

- Turn ignition switch OFF.
- Disconnect BCM connector and front air control connector.
- Check continuity between BCM harness connector M18 (A) terminal 28 and front air control harness connector M177 (B) terminal 36.

28 - 36 Continuity should exist.

Is the inspection result normal?


- YES >> GO TO 11.
 NO >> Repair harness or connector.

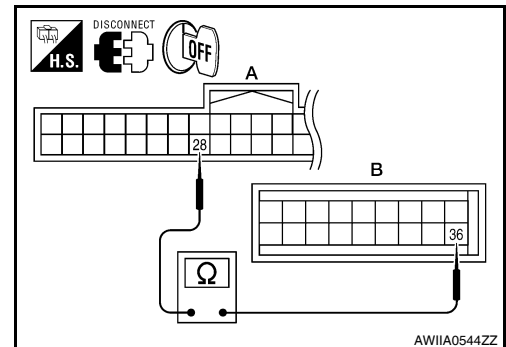

11. CHECK VOLTAGE FOR FRONT AIR CONTROL (FAN ON SIGNAL)

- Reconnect BCM connector and front air control connector.
- Turn ignition switch ON.
- Check voltage between front air control harness connector M177 terminal 36 and ground.

Terminals		(-)	Condition	Voltage
(+) Terminal No.				
front air control connector				
M177	36	Ground	A/C switch: ON Blower motor operates	Approx. 0V
			A/C switch: OFF	Approx. 5V

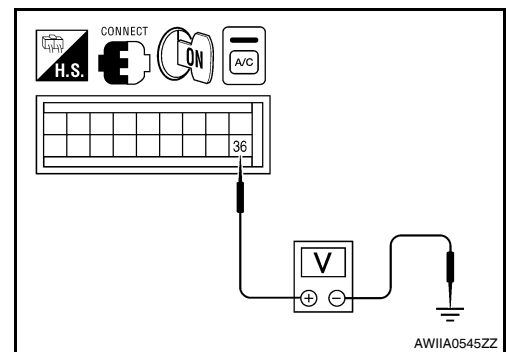

Is the inspection result normal?

- YES >> GO TO 12.
 NO-1 >> If the voltage is approx. 5V when blower motor is ON, replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

MAGNET CLUTCH

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

NO-2 >> If the voltage is approx. 0V when blower motor is OFF, replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

12.CHECK CAN COMMUNICATION

Check CAN communication. Refer to [LAN-4. "System Description"](#).

- BCM – ECM
- ECM – IPDM E/R
- ECM – Front air control

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace malfunctioning part(s).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

WATER VALVE CIRCUIT


Description

INFOID:000000003790178

COMPONENT DESCRIPTION

Water Valve

The water valve (1) cuts the flow of engine coolant to the heater core to allow for maximum cooling during A/C operation. It is controlled by the front air control.

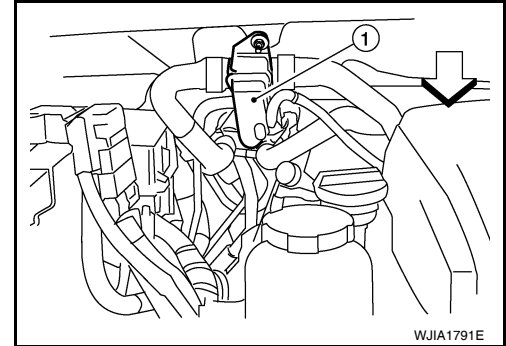

Water Valve Diagnosis Procedure


INFOID:000000003790179

DIAGNOSTIC PROCEDURE FOR WATER VALVE

1. CHECK WATER VALVE POWER AND GROUND CIRCUITS

1. Disconnect water valve connector F68.
2. Turn ignition switch ON.
3. Rotate temperature control dial to maximum heat.
4. Check voltage between water valve harness connector F68 terminal 1 and terminal 2 while rotating temperature control dial to maximum cold.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Water valve: F68	2	1	Rotate temperature control dial	Battery voltage

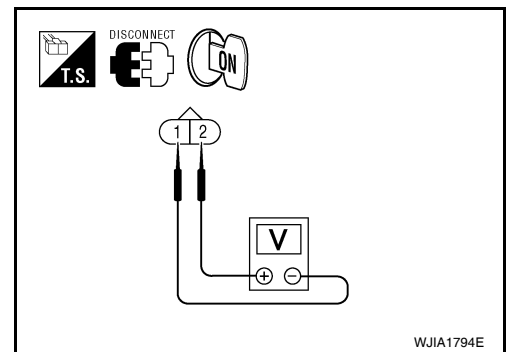

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 2.


2. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M177.
3. Check continuity between water valve harness connector F68 (A) terminal 2 and front air control harness connector M177 (B) terminal 30.

2 - 30 : Continuity should exist.

4. Check continuity between water valve harness connector F68 terminal 2 and ground.

2 - Ground : Continuity should not exist.

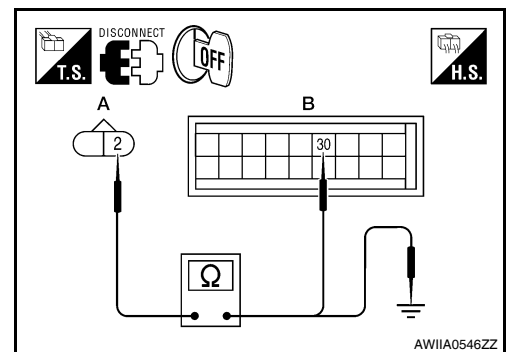

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 NO >> Repair harness or connector.

3. CHECK WATER VALVE POWER AND GROUND CIRCUITS

WATER VALVE CIRCUIT

< COMPONENT DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

1. Rotate temperature control dial to maximum cold.
2. Check voltage between water valve harness connector F68 terminal 1 and terminal 2 while rotating temperature control dial to maximum heat.

Connector	Terminals		Condition	Voltage (Approx.)
	(+)	(-)		
Water valve: F68	1	2	Rotate temperature control dial	Battery voltage

Is the inspection result normal?

- YES >> Replace the water valve.
 NO >> GO TO 4.

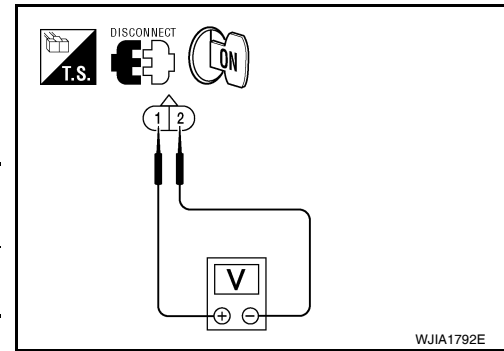


4. CHECK WATER VALVE CONTROL OUTPUT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front air control connector M177.
3. Check continuity between water valve harness connector F68 (A) terminal 1 and front air control harness connector M177 (B) terminal 29.

1 - 29 : Continuity should exist.

4. Check continuity between water valve harness connector F68 (A) terminal 1 and ground.

1 - Ground : Continuity should not exist.

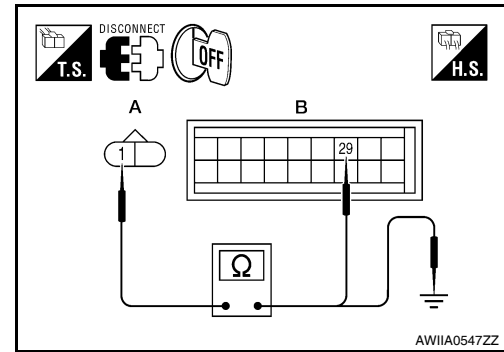

Is the inspection result normal?

- YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
 NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

INTAKE SENSOR


System Description

INFOID:000000003790180

COMPONENT DESCRIPTION

Intake Sensor

The intake sensor (1) is located on the heater & cooling unit assembly. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the front air control.

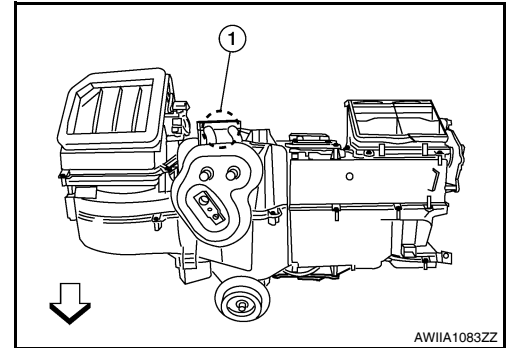


Intake Sensor Diagnosis Procedure

INFOID:000000003790181

DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted.

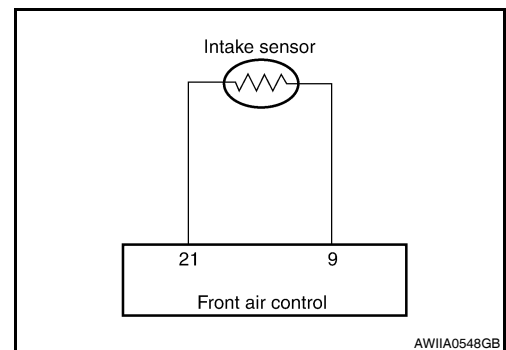


1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND

1. Disconnect intake sensor connector.
2. Turn ignition switch ON.
3. Check voltage between intake sensor harness connector M182 terminal 2 and ground.

2 - Ground : Approx. 5V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

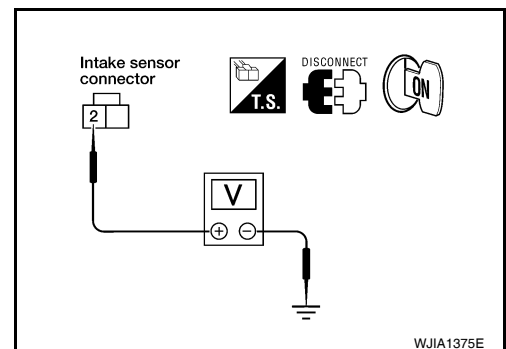


2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between intake sensor harness connector M182 (B) terminal 1 and front air control harness connector M176 (A) terminal 21.

1 - 21 : Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

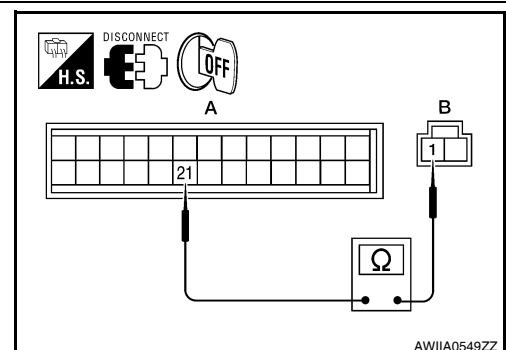

INTAKE SENSOR

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

3. CHECK INTAKE SENSOR

Check intake sensor. Refer to [HAC-231, "Intake Sensor Component Inspection"](#).

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Replace intake sensor. Refer to [VTL-11, "Removal and Installation"](#).


4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between intake sensor harness connector M182 (B) terminal 2 and front air control harness connector M176 (A) terminal 9.

2 - 9 : Continuity should exist.

4. Check continuity between intake sensor harness connector M182 (B) terminal 2 and ground.

2 - Ground : Continuity should not exist.

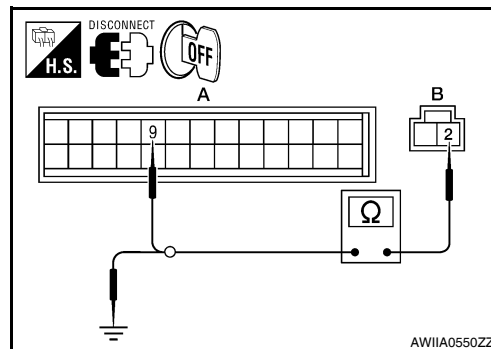

Is the inspection result normal?

YES >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

NO >> Repair harness or connector.

Intake Sensor Component Inspection

INFOID:000000003790182


COMPONENT INSPECTION

Intake Sensor

After disconnecting intake sensor (1) connector, measure resistance between terminals 1 and 2 at sensor harness side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	209.0
-10 (14)	160.0
-5 (23)	123.0
0 (32)	95.8
5 (41)	74.9
10 (50)	58.9
15 (59)	46.7
20 (68)	37.3
25 (77)	30.0
30 (86)	24.2
35 (95)	19.7
40 (104)	16.1
45 (113)	13.2

If NG, replace intake sensor. Refer to [VTL-11, "Removal and Installation"](#).

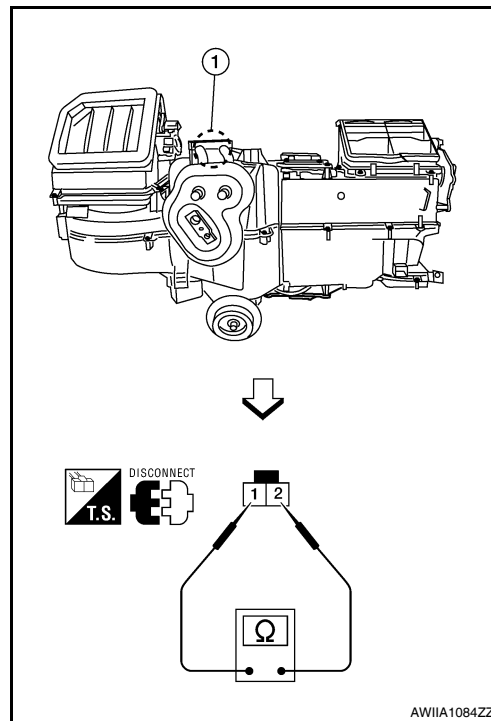

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

Component Description


INFOID:000000003790183

COMPONENT DESCRIPTION

Front Air Control


The front air control has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, defroster door motor, blower motor and A/C compressor are then controlled.

The front air control is unitized with control mechanisms. When the various switches and temperature dials are operated, data is input to the front air control.

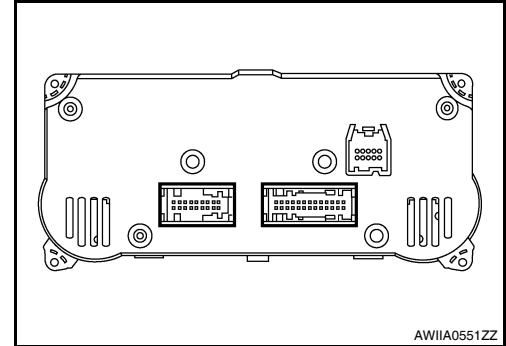

Potential Temperature Control (PTC)

The PTC is built into the front air control. It can be set from cold to hot or any intermediate position by rotating the temperature control dial.

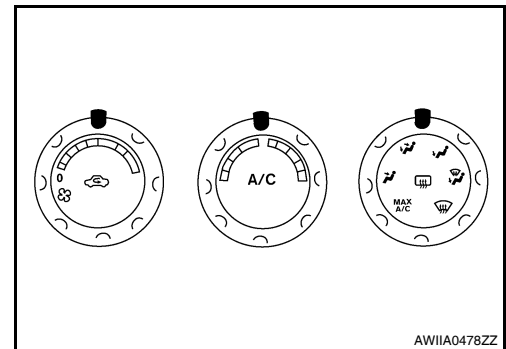

Front Air Control Component Function Check

INFOID:000000003790184

SYMPTOM: A/C system does not come on.

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK

1. Turn the blower control dial clockwise to low speed.
2. Press the A/C switch.
3. Confirm that the compressor clutch engages (sound or visual inspection).

Can a symptom be duplicated?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. PERFORM COMPLETE OPERATIONAL CHECK

Perform a complete operational check and check for any symptoms. Refer to [HAC-184, "Operational Check"](#).

Can a symptom be duplicated?

- YES >> Refer to [HAC-183, "How to Perform Trouble Diagnosis For Quick And Accurate Repair"](#).
- NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK POWER AND GROUND CIRCUIT

Check main power supply and ground circuit. Refer to [HAC-233, "Front Air Control Power and Ground Diagnosis Procedure"](#).

POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER

< COMPONENT DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Is the inspection result normal?

YES >> System OK.


NO >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).

Front Air Control Power and Ground Diagnosis Procedure

INFOID:000000003790185

DIAGNOSTIC PROCEDURE FOR A/C SYSTEM


SYMPTOM: A/C system does not come on.

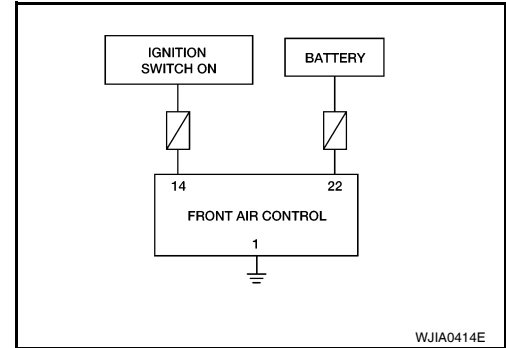

1. CHECK POWER SUPPLY CIRCUITS FOR FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Disconnect front air control connectors.
3. Turn ignition switch ON.
4. Check voltage between front air control harness connector M176 terminals 14, 22, and ground.

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
front air control connector	Terminal No.				
M176	14	Ground	Approx. 0V	Approx. 0V	Battery voltage
	22		Battery voltage	Battery voltage	Battery voltage

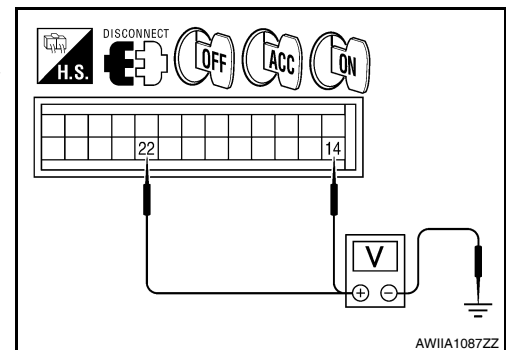

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Check 10A fuses [Nos. 8 and 19, located in the fuse block (J/B)]. Refer to [PG-73, "Terminal Arrangement"](#).
- If fuses are OK, check harness for open circuit. Repair or replace as necessary.
 - If fuses are NG, replace fuse and check harness for short circuit. Repair or replace as necessary.


2. CHECK GROUND CIRCUIT FOR FRONT AIR CONTROL

1. Turn ignition switch OFF.
2. Check continuity between front air control harness connector M176 terminal 1 and ground.

1 - Ground : Continuity should exist.

Is the inspection result normal?

- OK >> Replace front air control. Refer to [VTL-8, "Removal and Installation"](#).
- NG >> Repair harness or connector.

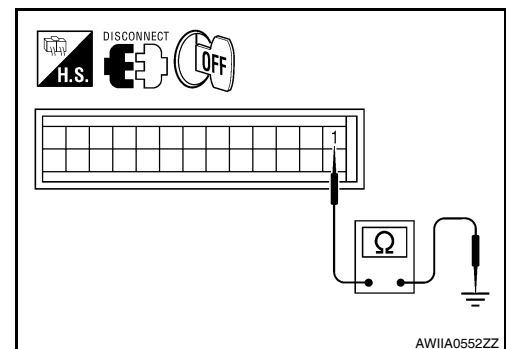

MANUAL A/C IDENTIFICATION TABLE

< ECU DIAGNOSIS >



[MANUAL A/C (TYPE 2)]

ECU DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790186

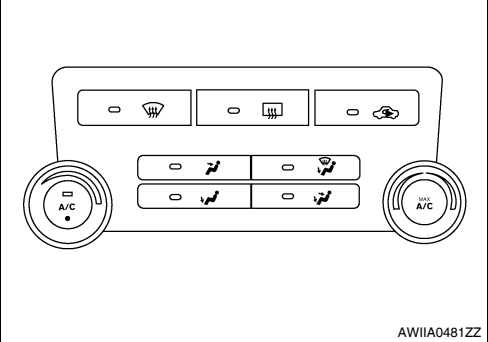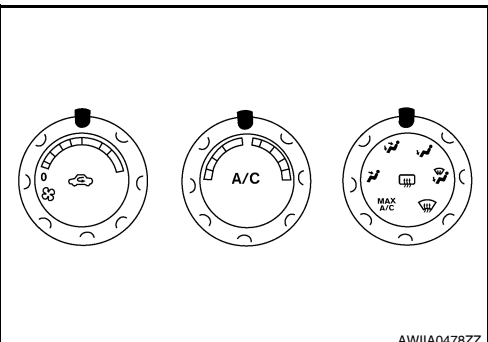Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

AIR CONDITIONER CONTROL


Front Air Control Terminals Reference Values

INFOID:000000003790187

Measure voltage between each terminal and ground by following Terminals and Reference Value for front air control (1).

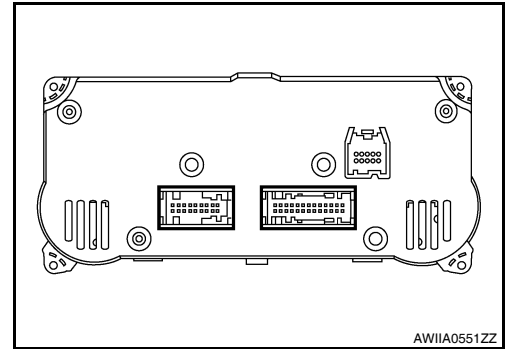

FRONT AIR CONTROL HARNESS CONNECTOR TERMINAL LAYOUT

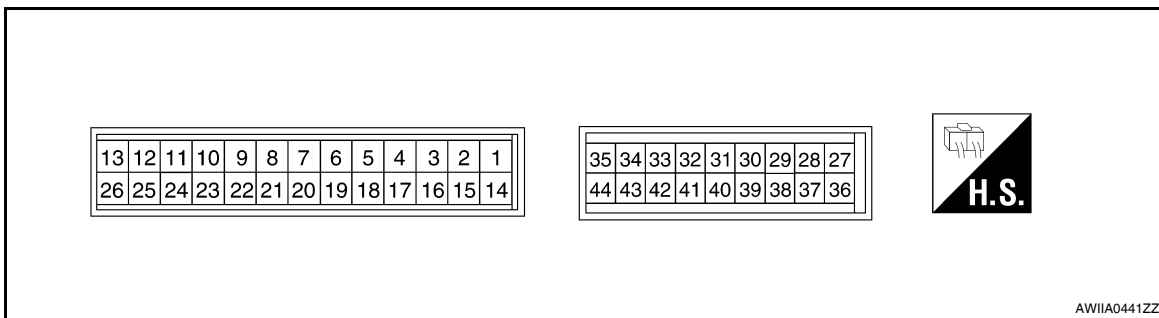


TERMINALS AND REFERENCE VALUES FOR FRONT AIR CONTROL

Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
1	B	Ground	-	-	0V
2	Y	V ref ACTR (5V)	ON	-	0 - 5V
3	W/G	Air mix door motor CW	ON	Clockwise rotation	Battery voltage
4	G	Air mix door motor CCW	ON	Counterclockwise rotation	Battery voltage
5	BR/W	Mode door motor CW	ON	Clockwise rotation	Battery voltage
6	P/L	Mode door motor CCW	ON	Counterclockwise rotation	Battery voltage
7	O	Intake door motor CW	ON	Clockwise rotation	Battery voltage
8	G/B	Intake door motor CCW	ON	Counterclockwise rotation	Battery voltage
9	L/B	Intake sensor	ON	-	0 - 5V
11	Y/B	Rear defogger request *1	ON	-	Battery voltage
12	W/R	Compressor ON signal	ON	A/C switch OFF	5V
			ON	A/C switch ON	0V
14	Y/G	Power supply for IGN	ON	-	Battery voltage
15	P	V ref ACTR (ground)	ON	-	5V
16	GR	Mode door motor feedback	ON	-	0 - 5V
18	SB	Air mix door motor feedback	ON	-	0 - 5V
19	LG	Defroster door motor CW	ON	Clockwise rotation	Battery voltage
20	P/B	Defroster door motor CCW	ON	Counterclockwise rotation	Battery voltage
21	V/R	Sensor ground	ON	-	0V
22	Y/R	Power supply for BAT	-	-	Battery voltage
23	R/L	Illumination +	ON	Park lamps ON	Battery voltage

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

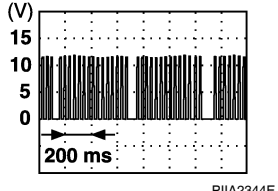Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V) (Approx.)
24	BR	Illumination -	-	Park lamps ON	
25	LG/B	Defroster door motor feedback	ON	-	0 - 5V
26	R/B	Front blower request	ON	Front blower motor OFF	Battery voltage
				Front blower motor ON	0V
29	Y/L	Water valve	ON	Water valve open	Battery voltage
				Water valve closed	0V
30	W/G	Water valve	ON	Water valve open	0V
				Water valve closed	Battery voltage
34	L	CAN-H	ON	-	0 - 5V
35	P	CAN-L	ON	-	0 - 5V
36	L/R	Fan ON signal	ON	Blower switch OFF	5V
			ON	Blower switch ON	0V
40	G/R	Variable blower control	ON	-	0 - 5V

*1: If equipped


AIR CONDITIONER CONTROL CONNECTORS - MANUAL WITH 3 CONTROL DIAL SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
5N	Y/G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	Y/B	REAR DEFOGGER SW
27	W/R	AIR CON SW
28	L/R	BLOWER FAN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

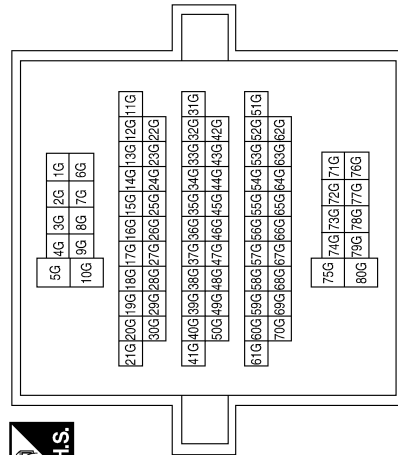

Terminal No.	Color of Wire	Signal Name
21G	Y/L	-
29G	W/G	-
31G	L	-
42G	P	-
71G	P	-
79G	P	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

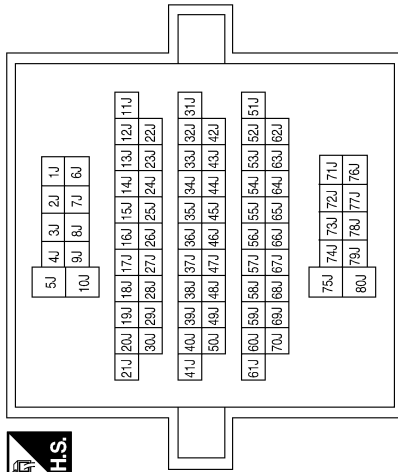


Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

Connector No.	M107
Connector Name	FRONT BLOWER RELAY
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	Y/G	-
2	R/B	-
3	W/L	-
4	-	-
5	GR	-

Connector No.	M58
Connector Name	INTAKE DOOR MOTOR
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	O	-
6	G/B	-

Connector No.	M52
Connector Name	FRONT BLOWER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	W/L	-

Connector No.	M144
Connector Name	DEFROSTER DOOR MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	P	-
3	Y	-
4	LG/B	-
6	P/B	-

ABIA0025GB


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

Connector No.	M147
Connector Name	AIR MIX DOOR MOTOR (FRONT)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	P	-
3	Y	-
4	SB	-
6	G	-


Connector No.	M176
Connector Name	FRONT AIR CONTROL (WITH MANUAL 3 CONTROL DIAL SYSTEM)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	B	GND
2	Y	V REF ACTUATOR 5
3	W/G	DRIVER BLEND CW
4	G	DRIVER BLEND WCW
5	BRW	PANEL/FLOOR CW
6	P/L	PANEL/FLOOR CCW
7	O	RECIRC 1 CW
8	G/B	RECIRC 1 CCW
9	L/B	EVAP TEMP SENS
10	-	-
11	Y/B	HB REQUEST

Terminal No.	Color of Wire	Signal Name
12	W/R	AC REQUEST
13	-	-
14	Y/G	V IGN
15	P	V REF RETURN
16	GR	PANEL/FLOOR FEEDBACK
17	-	-
18	SB	DRIVER BLEND FEEDBACK
19	LG	DEFROST CW
20	P/B	DEFROST CCW
21	V/R	SENSOR RETURN
22	Y/R	V BAT
23	R/L	ILLUM +
24	BR	ILLUM -
25	LG/B	DEFROST FEEDBACK
26	R/B	FRONT BLOWER REQUEST

Connector No.	M177
Connector Name	FRONT AIR CONTROL (WITH MANUAL 3 CONTROL DIAL SYSTEM)
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
27	-	-
28	-	-
29	Y/L	WATER VALVE OPEN +

Terminal No.	Color of Wire	Signal Name
30	W/G	WATER VALVE CLOSE -
31	-	-
32	-	-
33	-	-
34	L	CAN-H
35	P	CAN-L
36	L/R	FAN ON
37	-	-
38	-	-
39	-	-
40	G/R	VBC OUTPUT

Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	-	-
44	-	-


ABIIA0026GB

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
14	Y/B	-

Connector No.	M182
Connector Name	INTAKE SENSOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V/R	-
2	L/B	-

Connector No.	M179
Connector Name	VARIABLE BLOWER CONTROL
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	G/R	-
3	L/W	-
4	B/W	-

Connector No.	E48
Connector Name	REFRIGERANT PRESSURE SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	B/W	-
3	B	-

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

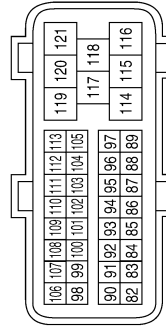

Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	Y/L	-
3	L	-
5	L	-
7	W/G	-
10	B	-
11	R/Y	-
14	P	-
15	P	-
24	B/W	-

ABIA0027GB

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

Connector No.	E50
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
11	Y/B	AC_COMP

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

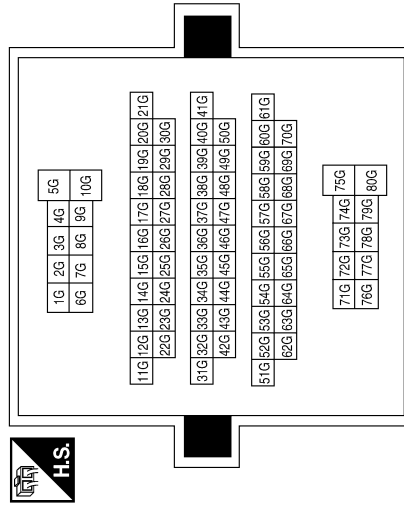

Terminal No.	Color of Wire	Signal Name
21G	Y/L	-
29G	W/G	-
31G	L	-
42G	P	-
71G	GR	-
79G	P	-


ABIIA0028GB

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

Connector No.	F3
Connector Name	A/C COMPRESSOR
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
1	Y/B	-

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2	Y/L	-
3	L	-
5	L	-
7	W/G	-
10	B	-
11	R/Y	-
14	P	-
15	P	-
24	B/W	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
14	Y/B	-

Connector No.	F54
Connector Name	ECM
Connector Color	BLACK

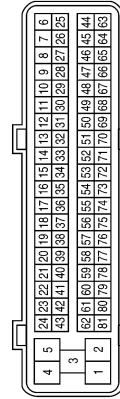

Terminal No.	Color of Wire	Signal Name
49	R/Y	AVCC (PDPRES)
67	B	GND-A
70	B/W	PD PRES

Connector No.	F68
Connector Name	WATER VALVE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y/L	-
2	W/G	-

ABIIA0029GB

AIR CONDITIONER CONTROL

< ECU DIAGNOSIS >

[MANUAL A/C (TYPE 2)]


Connector No.	B75
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

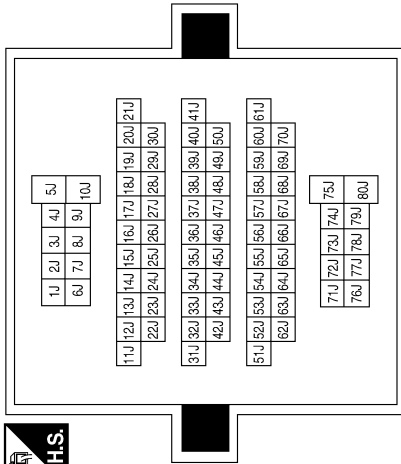

ABIIA0030GB

MANUAL A/C IDENTIFICATION TABLE

< SYMPTOM DIAGNOSIS >



[MANUAL A/C (TYPE 2)]

SYMPTOM DIAGNOSIS

MANUAL A/C IDENTIFICATION TABLE

Application Table

INFOID:000000003790189

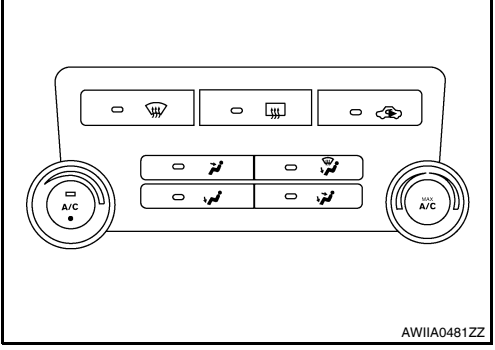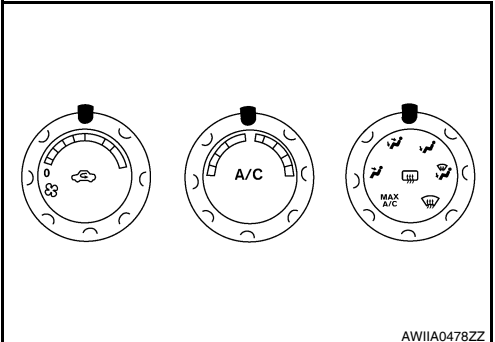Manual A/C Type	Description	Visual Identification
Manual A/C (Type 1)	Two Control Dial System	
Manual A/C (Type 2)	Three Control Dial System [with variable blower control (VBC)]	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HAC

AIR CONDITIONER CONTROL

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

AIR CONDITIONER CONTROL

Symptom Matrix Chart

INFOID:000000003790190

SYMPTOM TABLE

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-232
Air outlet does not change.	Go to Trouble Diagnosis Procedure for Mode Door Motor.	HAC-199
Mode door motor is malfunctioning.		
Discharge air temperature does not change.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor.	HAC-204
Air mix door motor is malfunctioning.		
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor.	HAC-209
Intake door motor is malfunctioning.		
Defroster door motor is malfunctioning.	Go to Trouble Diagnosis Procedure for Defroster Door Motor.	HAC-212
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-217
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-223
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-247
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-255
Noise	Go to Trouble Diagnosis Procedure for Noise.	HAC-257

INSUFFICIENT COOLING

Component Function Check

INFOID:000000003790191

SYMPTOM: Insufficient cooling

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE DECREASE

1. Rotate the blower control dial to the low speed.
2. Turn temperature control dial counterclockwise to maximum cold.
3. Check for cold air at discharge air outlets.

Can the symptom be duplicated?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMSPerform a complete operational check for any symptoms. Refer to [HAC-184, "Operational Check"](#).Does another symptom exist?YES >> Refer to [HAC-246, "Symptom Matrix Chart"](#).

NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

4. CHECK DRIVE BELTSCheck compressor belt tension. Refer to [EM-13, "Checking Drive Belts"](#).Is the inspection result normal?

YES >> GO TO 5.

NO >> Adjust or replace compressor belt. Refer to [EM-13, "Removal and Installation"](#).**5.** CHECK AIR MIX DOOR OPERATIONCheck and verify air mix door mechanism for smooth operation. Refer to [HAC-204, "Air Mix Door Motor Component Function Check"](#).Does air mix door operate correctly?

YES >> GO TO 6.

NO >> Check air mix door motor circuit. Refer to [HAC-205, "Air Mix Door Motor Diagnosis Procedure"](#).**6.** CHECK COOLING FAN MOTOR OPERATIONCheck and verify cooling fan motor for smooth operation. Refer to [EC-386, "Component Inspection"](#).Does cooling fan motor operate correctly?

YES >> GO TO 7.

NO >> Check cooling fan motor. Refer to [EC-386, "Diagnosis Procedure"](#).**7.** CHECK WATER VALVE OPERATIONCheck and verify water valve for smooth operation. Refer to [HAC-228, "Description"](#).Does water valve operate correctly?

YES >> GO TO 8.

NO >> Check water valve circuit. Refer to [HAC-228, "Water Valve Diagnosis Procedure"](#).**8.** CHECK RECOVERY/RECYCLING EQUIPMENT BEFORE USAGE

Check recovery/recycling equipment before connecting to vehicle. Verify there is no pressure in the recovery/recycling equipment by checking the gauges. If pressure exists, recover refrigerant from equipment lines.

>> GO TO 9.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

9. CHECK REFRIGERANT PURITY

1. Connect recovery/recycling equipment to vehicle.
2. Confirm refrigerant purity in supply tank using recovery/recycling and refrigerant identifier.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check contaminated refrigerant. Refer to [HAC-258, "Working with HFC-134a \(R-134a\)"](#).

10. CHECK FOR EVAPORATOR FREEZE UP

Start engine and run A/C. Check for evaporator freeze up.

Does evaporator freeze up?

YES >> Perform performance test diagnoses. Refer to [HAC-248, "Diagnostic Work Flow"](#).

NO >> GO TO 11.

11. CHECK REFRIGERANT PRESSURE

Check refrigerant pressure with manifold gauge connected. Refer to [HAC-250, "Performance Chart"](#).

Is the inspection result normal?

YES >> Perform performance test diagnoses. Refer to [HAC-248, "Diagnostic Work Flow"](#).

NO >> GO TO 12.

12. CHECK AIR DUCTS

Check ducts for air leaks.

Is the inspection result normal?

YES >> System OK.

NO >> Repair air leaks.


Diagnostic Work Flow

INFOID:000000003790192

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

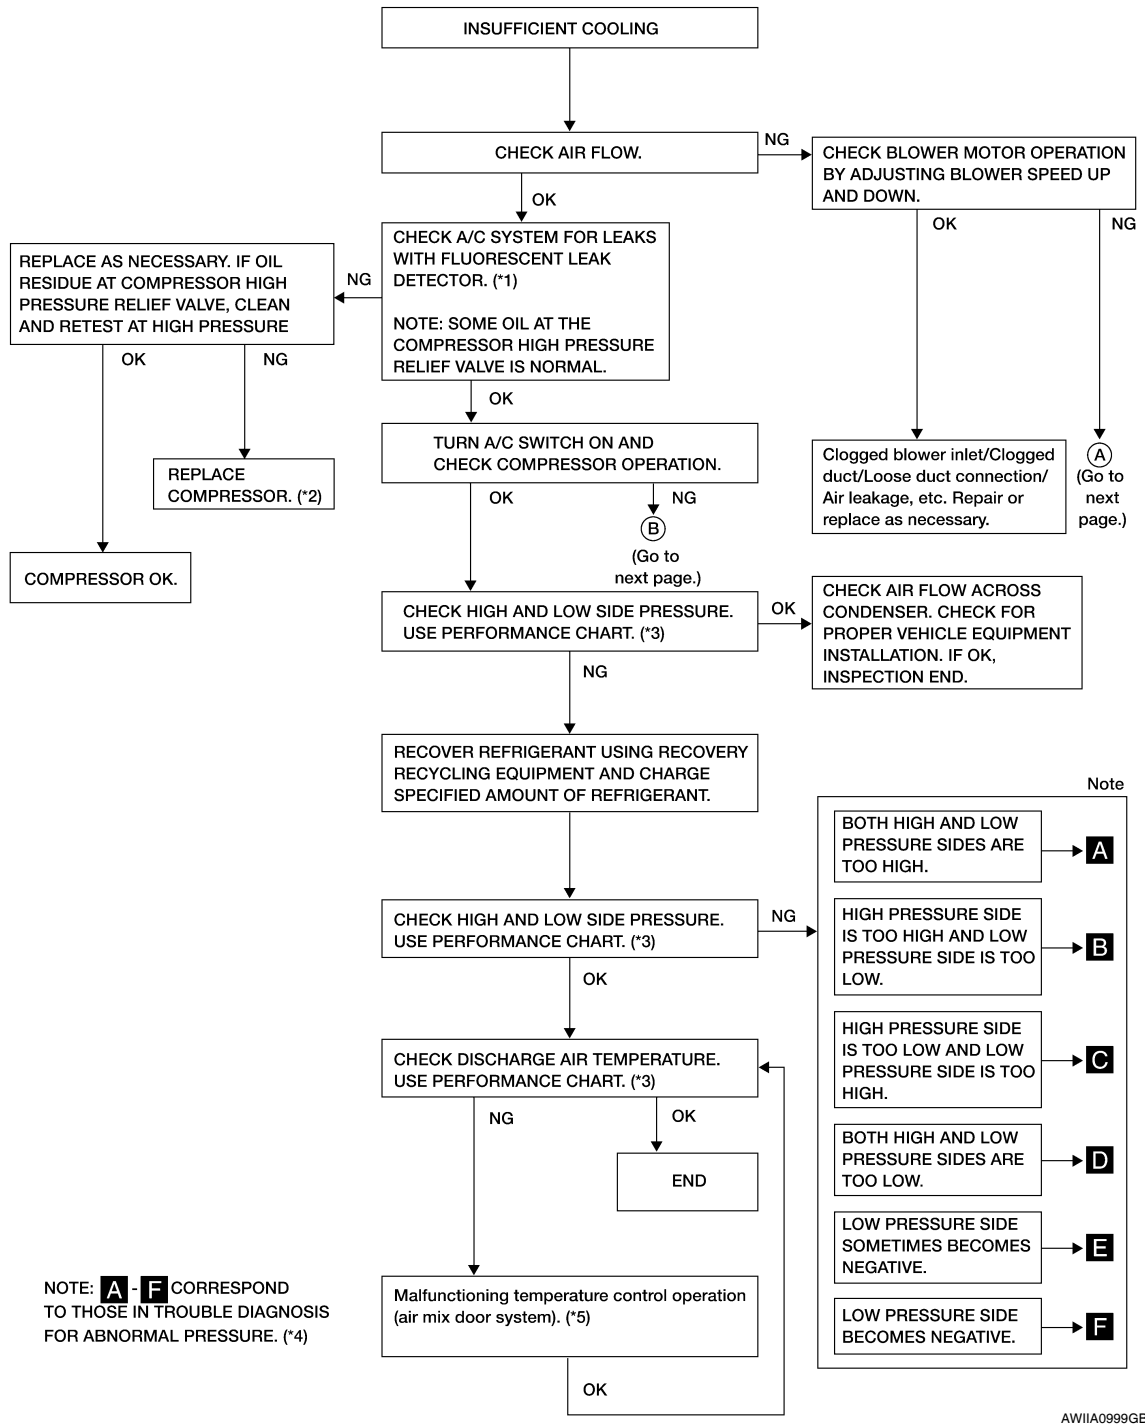

*1 [HA-25. "Checking System for Leaks Using the Fluorescent Dye Leak Detector"](#)

*2 [HA-33. "Removal and Installation for Compressor"](#)

*3 [HAC-250. "Performance Chart"](#)


*4 [HAC-251. "Trouble Diagnoses for Abnormal Pressure"](#)

*5 [HAC-204. "Air Mix Door Motor Component Function Check"](#)

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

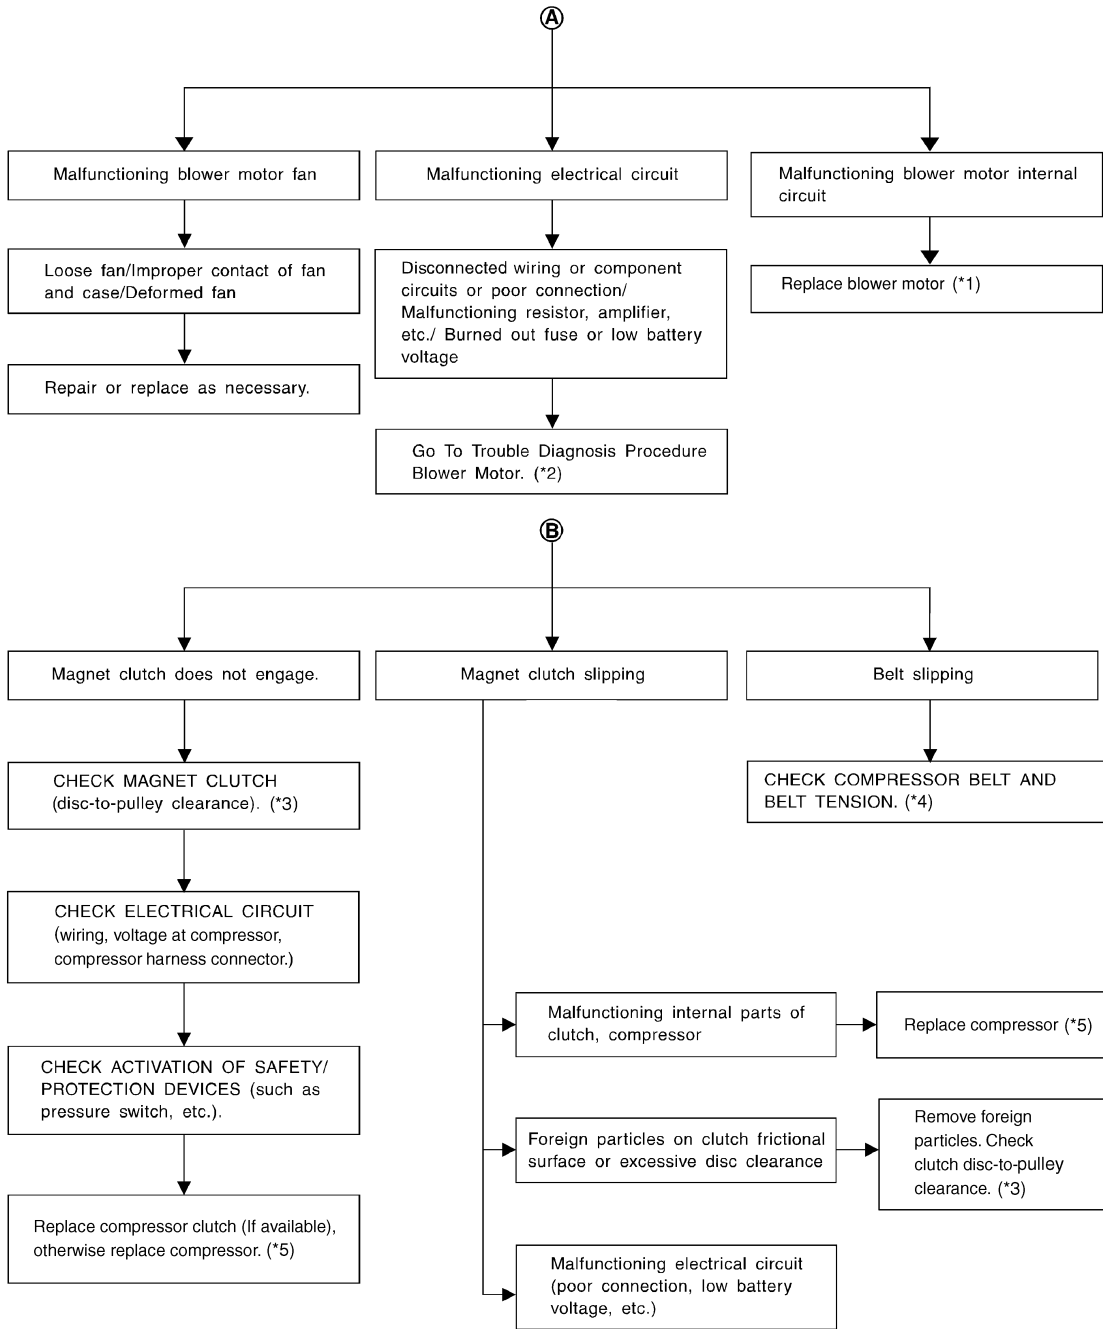

AWI1A1000GB

*1 [VTL-12. "Removal and Installation"](#)

*2 [HAC-217. "Front Blower Motor Component Function Check"](#)

*3 [HA-34. "Removal and Installation for Compressor Clutch"](#)

*4 [EM-13. "Checking Drive Belts"](#)

*5 [HA-33. "Removal and Installation for Compressor"](#)

Performance Chart

INFOID:000000003790193

TEST CONDITION

Testing must be performed as follows:

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door window	Open
Hood	Open
TEMP.	Max. COLD
Mode control dial	(Ventilation) set
Recirculation (REC) switch	(Recirculation) set
Blower speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

TEST READING

Recirculation-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	9.9 - 13.9 (50 - 57)
	25 (77)	14.6 - 18.6 (58 - 65)
	30 (86)	16.8 - 21.8 (62 - 71)
	35 (95)	21.1 - 27.1 (70 - 81)
	40 (104)	25.3 - 31.5 (78 - 89)
60 - 70	20 (68)	11.4 - 15.2 (53 - 59)
	25 (77)	15.5 - 20.0 (60 - 68)
	30 (86)	19.9 - 25.0 (68 - 77)
	35 (95)	24.5 - 29.6 (76 - 85)
	40 (104)	28.7 - 34.9 (84 - 95)

Ambient Air Temperature-to-operating Pressure Table

Ambient air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	1020 - 1250 (10.4 - 12.7, 147.9 - 181.3)	160 - 190 (1.63 - 1.94, 23.2 - 27.6)
	25 (77)	1236 - 1510 (12.6 - 15.4, 179.2 - 219)	206 - 245 (2.1 - 2.5, 29.9 - 35.6)
	30 (86)	1569 - 1,922 (16.0 - 19.6, 227.6 - 278.8)	265 - 324 (2.7 - 3.3, 38.4 - 46.9)
	35 (95)	1,697 - 2079 (17.3 - 21.2, 246.1 - 301.5)	304 - 363 (3.1 - 3.7, 44.1 - 52.6)
	40 (104)	1971 - 2403 (20.1 - 24.5, 285.9 - 348.5)	373 - 451 (3.8 - 4.6, 54.0 - 65.4)

Trouble Diagnoses for Abnormal Pressure

INFOID:000000003790195

Whenever system's high and/or low side pressure is unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the stan-


INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >


[MANUAL A/C (TYPE 2)]

Standard (usual) pressure, however, differs from vehicle to vehicle, refer to above table (Ambient air temperature-to-operating pressure table).

Both High- and Low-pressure Sides are Too High

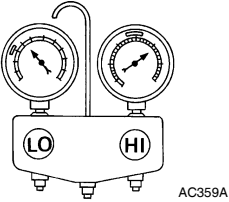Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>A Both high- and low-pressure sides are too high.</p> 	Pressure is reduced soon after water is splashed on condenser.	Excessive refrigerant charge in refrigeration cycle	Reduce refrigerant until specified pressure is obtained.
	Air suction by cooling fan is insufficient.	Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan	<ul style="list-style-type: none"> • Clean condenser. • Check and repair cooling fan if necessary.
	<ul style="list-style-type: none"> • Low-pressure pipe is not cold. • When compressor is stopped high-pressure valve quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then decreases gradually thereafter. 	Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.) ↓ Air in refrigeration cycle	Evacuate and recharge system.
	Engine tends to overheat.	Engine cooling systems malfunction.	Check and repair engine cooling system.
	<ul style="list-style-type: none"> • An area of the low-pressure pipe is colder than areas near the evaporator outlet. • Plates are sometimes covered with frost. 	<ul style="list-style-type: none"> • Excessive liquid refrigerant on low-pressure side • Excessive refrigerant discharge flow • Expansion valve is open a little compared with the specification. ↓ Improper expansion valve adjustment	Replace expansion valve.

High-pressure Side is Too High and Low-pressure Side is Too Low

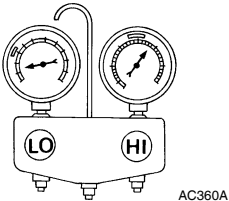
Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>B High-pressure side is too high and low-pressure side is too low.</p> 	Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.	High-pressure tube or parts located between compressor and condenser are clogged or crushed.	<ul style="list-style-type: none"> • Check and repair or replace malfunctioning parts. • Check oil for contamination.

High-pressure Side is Too Low and Low-pressure Side is Too High

INSUFFICIENT COOLING


< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

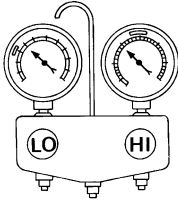Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>C High-pressure side is too low and low-pressure side is too high.</p>  <p style="text-align: right; font-size: small;">AC356A</p>	High- and low-pressure sides become equal soon after compressor operation stops.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.
	No temperature difference between high- and low-pressure sides.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.

A
B
C
D

Both High- and Low-pressure Sides are Too Low

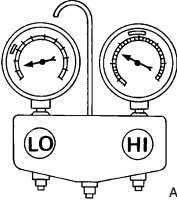Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>D Both high- and low-pressure sides are too low.</p>  <p style="text-align: right; font-size: small;">AC353A</p>	<ul style="list-style-type: none"> There is a big temperature difference between liquid tank outlet and inlet. Outlet temperature is extremely low. Liquid tank inlet and expansion valve are frosted. 	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> Replace liquid tank. Check oil for contamination.
	<ul style="list-style-type: none"> Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank. Expansion valve inlet may be frosted. Temperature difference occurs somewhere in high-pressure side. 	High-pressure pipe located between liquid tank and expansion valve is clogged.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check oil for contamination.
	Expansion valve and liquid tank are warm or only cool when touched.	Low refrigerant charge. ↓ Leaking fittings or components.	Check refrigerant system for leaks. Refer to HA-23, "Checking of Refrigerant Leaks" .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment. 2. Malfunctioning expansion valve. 3. Outlet and inlet may be clogged.	<ul style="list-style-type: none"> Remove foreign particles by using compressed air. Check oil for contamination.
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check oil for contamination.
Air flow volume is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> Check intake sensor circuit. Refer to HAC-230, "Intake Sensor Diagnosis Procedure". Repair evaporator fins. Replace evaporator. Refer to HAC-217, "Front Blower Motor Component Function Check". 	


E
F
G
H
HAC
J
K
L
M
N
O
P

Low-pressure Side Sometimes Becomes Negative


INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

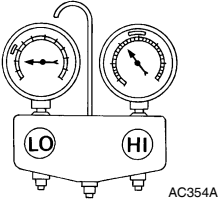Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>E Low-pressure side sometimes becomes negative.</p>  <p style="text-align: right; font-size: small;">AC354A</p>	<ul style="list-style-type: none"> • Air conditioning system does not function and does not cyclically cool the compartment air. • The system constantly functions for a certain period of time after compressor is stopped and restarted. 	<p>Refrigerant does not discharge cyclically.</p> <p>↓</p> <p>Moisture is frozen at expansion valve outlet and inlet.</p> <p>↓</p> <p>Water is mixed with refrigerant.</p>	<ul style="list-style-type: none"> • Drain water from refrigerant or replace refrigerant. • Replace liquid tank.

Low-pressure Side Becomes Negative

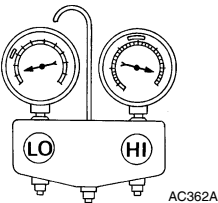Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>F Low-pressure side becomes negative.</p>  <p style="text-align: right; font-size: small;">AC362A</p>	<p>Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.</p>	<p>High-pressure side is closed and refrigerant does not flow.</p> <p>↓</p> <p>Expansion valve or liquid tank is frosted.</p>	<p>Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles.</p> <ul style="list-style-type: none"> • If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant. • If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air). • If either of the above methods cannot correct the malfunction, replace expansion valve. • Replace liquid tank. • Check oil for contamination.

INSUFFICIENT HEATING**Component Function Check**

INFOID:000000003790196

SYMPTOM: Insufficient heating

INSPECTION FLOW**1. CONFIRM SYMPTOM BY PERFORMING OPERATIONAL CHECK - TEMPERATURE INCREASE**

1. Turn the blower control dial to low speed.
2. Turn the temperature control dial clockwise to maximum heat
3. Check for hot air at discharge air outlets.

Can this symptom be duplicated?

YES >> GO TO 2.

NO >> Perform complete system operational check. Refer to [HAC-184, "Operational Check"](#).**2. CHECK FOR SERVICE BULLETINS**

Check for any service bulletins.

>> GO TO 3.

3. CHECK ENGINE COOLING SYSTEM

1. Check for proper engine coolant level. Refer to [CO-10, "Inspection"](#).
2. Check hoses for leaks or kinks.
3. Check radiator cap. Refer to [CO-10, "Inspection"](#).
4. Check for air in cooling system.

>> GO TO 4.

4. CHECK AIR MIX DOOR OPERATION

Check the operation of the air mix door.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the air mix door motor circuit. Refer to [HAC-204, "Air Mix Door Motor Component Function Check"](#).**5. CHECK AIR DUCTS**

Check for disconnected or leaking air ducts.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair all disconnected or leaking air ducts.

6. CHECK HEATER HOSE TEMPERATURES

1. Start engine and warm it up to normal operating temperature.
2. Touch both the inlet and outlet heater hoses.

Is the inspection result normal?

YES >> Hot inlet hose and a warm outlet hose: GO TO 7.

NO >> • Inlet hose cold: GO TO 10.
• Both hoses warm: GO TO 8.**7. CHECK ENGINE COOLANT SYSTEM**Check engine control temperature sensor. Refer to [EC-127, "Component Inspection"](#).Is the inspection result normal?

YES >> System OK.

NO >> Repair or replace as necessary. Retest.

8. CHECK HEATER HOSES

Check heater hoses for proper installation.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

INSUFFICIENT HEATING

< SYMPTOM DIAGNOSIS >

[MANUAL A/C (TYPE 2)]

Is the inspection result normal?

YES >> System OK.

- NO >> 1. Back flush heater core.
2. Drain the water from the system.
3. Refill system with new engine coolant. Refer to [CO-11, "Changing Engine Coolant"](#).
4. GO TO 9 to retest.

9. CHECK HEATER HOSE TEMPERATURES

1. Start engine and warm it up to normal operating temperature.
2. Touch both the inlet and outlet heater hoses.

Is the inspection result normal?

YES >> System OK.

- NO >> Replace heater core. Refer to [VTL-15, "Removal and Installation"](#).

10. CHECK WATER VALVE

Check the operation of the water valve. Refer to [HAC-228, "Water Valve Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> System OK.

- NO >> Replace water valve.


NOISE

Component Function Check

INFOID:000000003790197

SYMPTOM: Noise

INSPECTION FLOW

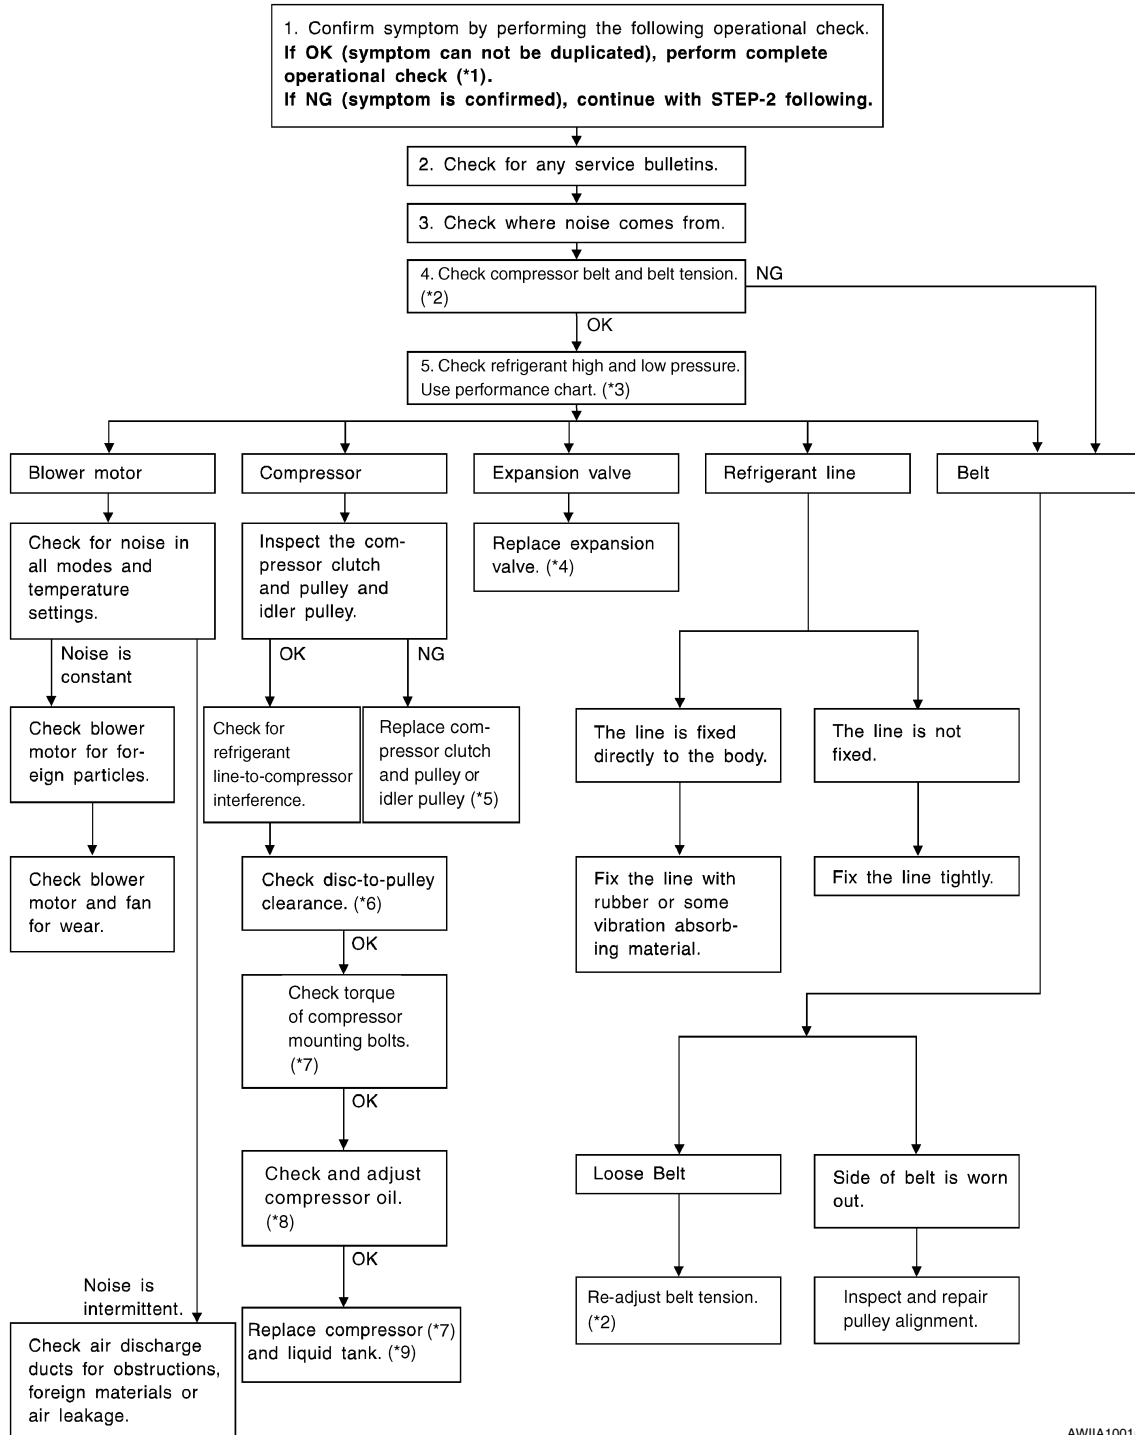

AWIIA1001GB

*1 [HAC-184, "Operational Check"](#)

*2 [EM-13, "Checking Drive Belts"](#)

*3 [HAC-250, "Performance Chart"](#)

*4 [HA-44, "Removal and Installation for Expansion Valve"](#)

*5 [HA-34, "Removal and Installation for Compressor Clutch"](#)

*6 [HA-34, "Removal and Installation for Compressor Clutch"](#)

*7 [HA-33, "Removal and Installation for Compressor"](#)

*8 [HA-20, "Maintenance of Oil Quantity in Compressor"](#)

*9 [HA-42, "Removal and Installation for Condenser"](#)

PRECAUTION

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003790198

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Working with HFC-134a (R-134a)

INFOID:000000003790199

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer to [HA-4, "Contaminated Refrigerant"](#). To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/ Recycling Recharging equipment and Refrigerant Identifier.
- Use only specified oil for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If oil other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) oil rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified oil from a sealed container. Immediately reseal containers of oil. Without proper sealing, oil will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and oil vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recycling equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and oil manufacturers.
 - Do not allow A/C oil to come in contact with styrofoam parts. Damage may result.

CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers**. Do not recover contaminated refrigerant into your existing service equipment. If your facility does

PRECAUTIONS

[MANUAL A/C (TYPE 2)]

< PRECAUTION >


- not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

Precaution for Service Equipment

INFOID:000000003790200


MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified oil.

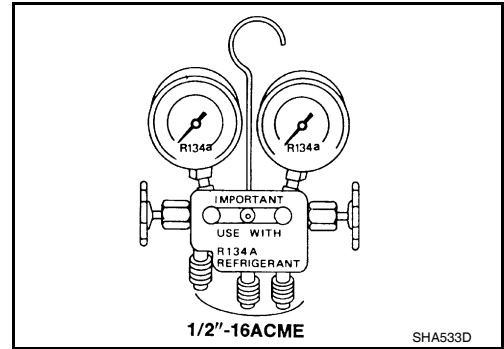

SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

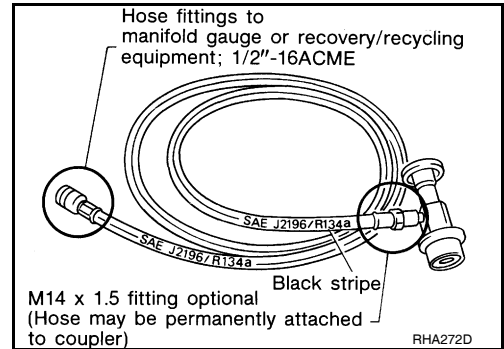

SERVICE COUPLERS

Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

