

SECTION **IDX**  
ALPHABETICAL INDEX

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L

IDX

# ALPHABETICAL INDEX

## A

A/C air flow ..... [MTC-22](#)  
A/C component layout ..... [MTC-17](#)  
A/C compressor mounting ..... [MTC-84](#)  
A/C compressor precaution ..... [MTC-8](#)  
A/C compressor special service tool ..... [MTC-12](#)  
A/C control operation (manual A/C) ..... [MTC-21](#)  
A/C controller ..... [MTC-61](#)  
A/C evaporator ..... [MTC-90](#)  
A/C HFC134a (R134a) system precaution ..... [MTC-4](#)  
A/C HFC134a (R134a) system service procedure ..... [MTC-80](#)  
A/C HFC134a (R134a) system service tools .. [MTC-12](#)  
A/C HFC134a system service equipment precaution ... [MTC-9](#)  
A/C lubricant (R134a) ..... [MTC-5](#), [MTC-18](#)  
A/C lubrication oil ..... [MTC-96](#)  
A/C operational check ..... [MTC-33](#)  
A/C service data specification ..... [MTC-96](#)  
A/C trouble diagnoses (manual A/C) ..... [MTC-24](#)  
A/C unit assembly ..... [MTC-64](#)  
A/C, M - Wiring diagram ..... [MTC-29](#)  
A/F - Wiring diagram ... [EC-223](#), [EC-229](#), [EC-235](#), [EC-242](#), [EC-542](#)  
A/FH - Wiring diagram ..... [EC-162](#)  
A/T fluid checking ..... [AT-16](#), [MA-22](#)  
A/T fluid replacement ..... [AT-17](#), [MA-23](#)  
A/T fluid temperature sensor ..... [AT-106](#)  
A/T IND - Wiring diagram ..... [DI-38](#)  
A/T indicator ..... [DI-37](#)  
A/T shift control system ..... [AT-229](#)  
A/T shift lock system ..... [AT-235](#)  
A/T shift lock system - Wiring diagram ..... [AT-236](#)  
A/T trouble diagnoses ..... [AT-43](#)  
ABS - Wiring diagram ..... [BRC-13](#)  
ABS (anti-lock brake system) ..... [BRC-5](#)  
ABS sensor rotor ..... [RAX-4](#)  
Accelerator pedal position (APP) sensor . [EC-513](#), [EC-519](#), [EC-532](#)  
Accelerator pedal released position learning ..... [EC-77](#)  
Air bag ..... [SRS-3](#)  
Air bleeding (hydraulic clutch) ..... [CL-8](#)  
Air cleaner filter replacement ..... [MA-16](#)  
Air conditioner cut control ..... [EC-27](#)  
Air fuel ratio sensor 1 .. [EC-220](#), [EC-227](#), [EC-233](#), [EC-239](#), [EC-540](#)  
Air fuel ratio sensor 1 heater ..... [EC-161](#)  
Air mix door control linkage adjustment ..... [MTC-70](#)  
Angular tightening application ..... [EM-4](#)  
Anti-lock brake system - See ABS ..... [BRC-5](#)  
Anti-lock brake system - Wiring diagram ..... [BRC-13](#)  
APPS1 - Wiring diagram ..... [EC-515](#)  
APPS2 - Wiring diagram ..... [EC-521](#)  
APPS3 - Wiring diagram ..... [EC-534](#)  
ASC/BS - Wiring diagram ..... [EC-475](#)  
ASC/SW - Wiring diagram ..... [EC-468](#)  
ASCBOF - Wiring diagram ..... [EC-550](#)  
ASCD ..... [EC-28](#)

ASCD brake switch ..... [EC-473](#), [EC-549](#)  
ASCD clutch switch ..... [EC-473](#), [EC-549](#)  
ASCD steering switch ..... [EC-466](#)  
ASCIND - Wiring diagram ..... [EC-560](#)  
AUDIO - Wiring diagram ..... [AV-9](#)  
Auto anti-dazzling inside mirror ..... [GW-67](#)  
Axle ..... [MA-26](#)

## B

BA/FTS - Wiring diagram ..... [AT-171](#)  
BACK/L - Wiring diagram ..... [LT-73](#)  
Back-up lamp ..... [LT-73](#), [LT-87](#)  
Back-up lamp switch (M/T) ..... [MT-11](#)  
Basic inspection ..... [EC-70](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-18](#), [SC-26](#)  
Baulk ring (M/T) ..... [MT-18](#)  
BCM (Body control module) ..... [BCS-3](#)  
Blower motor ..... [MTC-37](#), [MTC-68](#)  
Blower resistor ..... [MTC-72](#)  
Body alignment ..... [BL-244](#)  
Body component parts ..... [BL-232](#)  
Body construction ..... [BL-243](#)  
Body exterior paint color ..... [BL-231](#)  
Body repair ..... [BL-231](#)  
Body sealing ..... [BL-240](#)  
Brake booster ..... [BR-19](#)  
Brake fluid level ..... [MA-24](#)  
Brake inspection ..... [MA-25](#)  
Brake lines and cables inspection ..... [MA-24](#)  
Brake pedal ..... [BR-6](#)  
Brake switch ..... [EC-488](#)  
BRK/SW - Wiring diagram ..... [EC-489](#)  
Bulb specifications ..... [LT-116](#)  
Bumper, front ..... [EI-14](#)

## C

Cabin air filter ..... [MA-20](#)  
Camshaft ..... [EM-47](#)  
Camshaft inspection ..... [EM-49](#)  
Camshaft position sensor (PHASE) ..... [EC-327](#)  
CAN - Wiring diagram ..... [EC-152](#), [AT-95](#), [CVT-69](#)  
CAN communication [EC-30](#), [EC-151](#), [EC-154](#), [AT-31](#), [AT-94](#), [CVT-25](#), [CVT-68](#)  
CAN communication (EPS) ..... [STC-6](#)  
CHARGE - Wiring diagram ..... [SC-25](#)  
Charging system ..... [SC-24](#)  
Chassis and body maintenance ..... [MA-8](#), [MA-20](#)  
CHIME - Wiring diagram ..... [DI-50](#)  
Circuit breaker ..... [PG-16](#)  
Closed loop control ..... [EC-24](#), [EC-442](#)  
Clutch cover ..... [CL-13](#)  
Clutch disc ..... [CL-13](#)  
Clutch master cylinder ..... [CL-9](#)  
Clutch pedal ..... [CL-5](#)  
Coil spring (rear) ..... [RSU-11](#)

# ALPHABETICAL INDEX

Collision diagnosis .....	<a href="#">SRS-54</a>	Diagnostic trouble code (DTC) for OBD system ..	<a href="#">EC-8</a> , <a href="#">EC-48</a>	A
Combination lamp, rear, removal and installation	<a href="#">LT-87</a>	Diagnostic trouble code (DTC) inspection priority chart	<a href="#">EC-89</a> , <a href="#">CVT-34</a>	B
Combination meter .....	<a href="#">DI-5</a>	Differential gear (FF M/T) .....	<a href="#">MT-22</a>	C
Combination meter removal and installation - See Instrument panel .....	<a href="#">IP-11</a>	Differential side oil seal .....	<a href="#">CVT-206</a>	D
COMBSW - Wiring diagram .....	<a href="#">LT-67</a>	DLC - Wiring diagram .....	<a href="#">EC-592</a>	E
Component Location (manual A/C) .....	<a href="#">MTC-25</a>	Door glass .....	<a href="#">GW-43</a> , <a href="#">GW-47</a>	F
Compression pressure .....	<a href="#">EM-62</a>	Door glass Fitting Adjustment(Front) .....	<a href="#">GW-46</a>	G
Compressor mounting .....	<a href="#">MTC-84</a>	Door glass Fitting Adjustment(Rear) .....	<a href="#">GW-49</a>	H
Compressor special service tool .....	<a href="#">MTC-12</a>	Door mirror .....	<a href="#">GW-65</a>	I
Condenser .....	<a href="#">MTC-88</a>	Door trim .....	<a href="#">EI-27</a>	J
Connecting rod .....	<a href="#">EM-97</a>	Door, front .....	<a href="#">GW-43</a>	K
Connecting rod bearing clearance .....	<a href="#">EM-101</a>	Door, rear .....	<a href="#">GW-47</a>	L
Connecting rod bushing clearance .....	<a href="#">EM-97</a>	Drive shaft .....	<a href="#">MA-27</a>	
CONSULT for ABS .....	<a href="#">BRC-20</a>	Driver air bag .....	<a href="#">SRS-41</a>	
CONSULT general information .....	<a href="#">GI-37</a>	Dropping resistor (A/T) .....	<a href="#">AT-150</a>	
CONSULT-II for engine .....	<a href="#">EC-113</a>	DTC work support .....	<a href="#">EC-122</a>	
CONSULT-II function (EPS) .....	<a href="#">STC-13</a>	DTRL - Wiring diagram .....	<a href="#">LT-31</a>	
CONSULT-II Reference value (CVT) .....	<a href="#">CVT-57</a>	Duct and grilles .....	<a href="#">MTC-75</a>	
Control lever (M/T) .....	<a href="#">MT-12</a>			
Control units (terminal arrangement) .....	<a href="#">PG-72</a>	<b>E</b>		
Control valve (CVT) .....	<a href="#">CVT-29</a>	ECM input/output signal .....	<a href="#">EC-105</a>	
Converter housing installation .....	<a href="#">AT-254</a> , <a href="#">AT-369</a>	ECM power supply .....	<a href="#">EC-144</a>	
COOL/F - Wiring diagram .....	<a href="#">EC-448</a>	ECTS - Wiring diagram .....	<a href="#">EC-202</a>	
Coolant mixture ratio .....	<a href="#">MA-12</a>	Electric sunroof .....	<a href="#">RF-10</a>	
Cooling circuit (engine) .....	<a href="#">CO-7</a>	Electric throttle control actuator ..	<a href="#">EM-18</a> , <a href="#">EC-499</a> , <a href="#">EC-506</a> , <a href="#">EC-511</a>	
Cooling fan .....	<a href="#">CO-15</a>	Electrical load signal circuit .....	<a href="#">EC-562</a>	
Cooling fan motor .....	<a href="#">EC-443</a>	Electrical unit .....	<a href="#">PG-72</a>	
Corrosion protection .....	<a href="#">BL-237</a>	Electrical units location .....	<a href="#">PG-64</a>	
Coupling sleeve (M/T) .....	<a href="#">MT-18</a>	Electronic ignition (EI) system .....	<a href="#">EC-25</a>	
Crankcase ventilation system - See Positive crankcase ventilation .....	<a href="#">EC-44</a>	Electronic key .....	<a href="#">BL-80</a>	
Crankshaft .....	<a href="#">EM-77</a>	ENG SS - Wiring diagram .....	<a href="#">AT-114</a>	
Crankshaft position sensor (POS) .....	<a href="#">EC-319</a>	Engine control circuit diagram .....	<a href="#">EC-103</a>	
Crash zone sensor .....	<a href="#">SRS-49</a>	Engine control component parts location .....	<a href="#">EC-96</a>	
CVT air breather hose .....	<a href="#">CVT-205</a>	Engine control module (ECM) .....	<a href="#">EC-427</a>	
CVT control system .....	<a href="#">CVT-22</a>	Engine control system diagram .....	<a href="#">EC-22</a>	
CVT cross-sectional view .....	<a href="#">CVT-21</a>	Engine coolant .....	<a href="#">CO-8</a>	
CVT Electrical parts location .....	<a href="#">CVT-40</a>	Engine coolant temperature sensor (ECTS) ...	<a href="#">EC-200</a> , <a href="#">EC-212</a>	
CVT fluid checking .....	<a href="#">CVT-16</a> , <a href="#">CVT-43</a> , <a href="#">MA-20</a>	Engine fail-safe system .....	<a href="#">EC-91</a>	
CVT fluid cooler cleaning .....	<a href="#">CVT-18</a>	Engine oil .....	<a href="#">LU-5</a>	
CVT fluid replacement .....	<a href="#">CVT-17</a> , <a href="#">MA-21</a>	Engine oil precautions .....	<a href="#">GI-7</a>	
CVT fluid temperature sensor .....	<a href="#">CVT-85</a>	Engine removal .....	<a href="#">EM-73</a>	
CVT hydraulic control system .....	<a href="#">CVT-23</a>	EPS - Wiring diagram .....	<a href="#">STC-9</a>	
CVT indicator .....	<a href="#">DI-42</a>	EPS control unit input/output signal reference values ..	<a href="#">STC-11</a>	
CVT self-diagnoses .....	<a href="#">CVT-60</a> , <a href="#">CVT-67</a>	EPS system description .....	<a href="#">STC-5</a>	
CVT shift lock system .....	<a href="#">CVT-197</a>	EPS system diagram .....	<a href="#">STC-6</a>	
CVT trouble diagnoses .....	<a href="#">CVT-34</a>	ETC1 - Wiring diagram .....	<a href="#">EC-500</a>	
CVTIND - Wiring diagram .....	<a href="#">DI-43</a>	ETC2 - Wiring diagram .....	<a href="#">EC-495</a>	
Cylinder block .....	<a href="#">EM-77</a>	ETC3 - Wiring diagram .....	<a href="#">EC-507</a>	
Cylinder head .....	<a href="#">EM-62</a>	EVAP canister .....	<a href="#">EC-34</a>	
Cylinder head bolt tightening .....	<a href="#">EM-65</a>	EVAP canister purge volume control solenoid valve ....	<a href="#">EC-354</a> , <a href="#">EC-362</a>	
<b>D</b>		EVAP canister vent control valve .....	<a href="#">EC-369</a> , <a href="#">EC-376</a>	
D/LOCK - Wiring diagram .....	<a href="#">BL-26</a> , <a href="#">BL-31</a>	EVAP control system (small leak) diagnosis ..	<a href="#">EC-346</a> ,	
Data link connector .....	<a href="#">EC-115</a> , <a href="#">EC-127</a> , <a href="#">EC-592</a>			
DEF - Wiring diagram .....	<a href="#">GW-52</a>			
Diagnosis sensor unit .....	<a href="#">SRS-52</a>			

# ALPHABETICAL INDEX

[EC-398](#), [EC-406](#)  
EVAP control system pressure sensor .... [EC-382](#), [EC-385](#), [EC-391](#)  
EVAP control system purge flow monitoring diagnosis [EC-340](#)  
EVAP vapor lines inspection ..... [MA-19](#)  
Evaporative emission (EVAP) system ..... [EC-31](#)  
Evaporator ..... [MTC-90](#)  
Exhaust manifold ..... [EM-21](#)  
Exhaust system inspection ..... [MA-20](#), [MA-22](#)  
Expansion valve ..... [MTC-91](#)

## F

F/FOG - Wiring diagram ..... [LT-43](#)  
F/PUMP - Wiring diagram ..... [EC-571](#)  
Final drive (FF M/T) ..... [MT-22](#)  
Floor trim ..... [EI-37](#)  
Flow charts ..... [GI-27](#)  
Fluid temperature sensor (CVT) ..... [CVT-85](#)  
Fluid temperature sensor (A/T) ..... [AT-106](#)  
Fluids ..... [MA-11](#)  
Fluorescent leak detector ..... [MTC-92](#)  
Flywheel (clutch) ..... [CL-13](#)  
Flywheel runout ..... [EM-103](#)  
Fork rod (M/T) ..... [MT-21](#)  
Freeze frame data ..... [EC-52](#), [EC-116](#)  
Front bumper ..... [EI-14](#)  
Front door ..... [GW-43](#)  
Front passenger air bag ..... [SRS-46](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-51](#)  
Front washer ..... [WW-4](#)  
Front wiper ..... [WW-4](#)  
FTS - Wiring diagram ..... [AT-103](#), [CVT-86](#)  
FTTS - Wiring diagram ..... [EC-293](#), [EC-298](#)  
FUEL - Wiring diagram ..... [EC-278](#), [EC-286](#)  
Fuel cut control (at no load high engine speed) . [EC-26](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system ..... [EC-276](#), [EC-284](#)  
Fuel injector ..... [EC-564](#)  
Fuel injector and fuel tube ..... [EM-33](#)  
Fuel level sensor ..... [EC-415](#), [EC-417](#), [EC-419](#)  
Fuel line inspection ..... [FL-4](#), [MA-15](#)  
Fuel precautions ..... [GI-6](#)  
Fuel pressure check ..... [EC-81](#)  
Fuel pressure release ..... [EC-81](#)  
Fuel pump ..... [EC-570](#)  
Fuel systemCommercial Service Tools ..... [FL-3](#)  
Fuel systemPREPARATION ..... [FL-3](#)  
Fuel tank temperature sensor ..... [EC-291](#), [EC-297](#)  
Fuel tank vacuum relief valve ..... [EC-34](#)  
Fuse ..... [PG-16](#)  
Fuse and fusible link box ..... [PG-77](#)  
Fusible link ..... [PG-16](#)

## G

Gauges ..... [DI-5](#)

Gear components (M/T) ..... [MT-18](#)  
Generic scan tool (GST) ..... [EC-126](#)  
Glass ..... [GW-11](#), [GW-43](#), [GW-47](#)  
Grille - See Exterior ..... [EI-19](#)  
Ground distribution ..... [PG-30](#)

## H

H/LAMP - Wiring diagram ..... [LT-8](#)  
H/PHON - Wiring diagram ..... [AV-52](#)  
Handling precautions for plastics ..... [BL-255](#)  
Harness connector ..... [PG-68](#)  
Harness layout ..... [PG-39](#)  
Hazard warning lamp ..... [LT-51](#)  
Headlining - See Roof trim ..... [EI-39](#)  
Heated oxygen sensor 2 .... [EC-248](#), [EC-257](#), [EC-267](#)  
Heated oxygen sensor 2 heater ..... [EC-166](#)  
HEATER - Wiring diagram ..... [MTC-28](#)  
Heater system - Wiring diagram ..... [MTC-28](#)  
HFC134a (R134a) system precaution ..... [MTC-4](#)  
HFC134a (R134a) system service procedure . [MTC-80](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-9](#)  
HO2S2 - Wiring diagram .... [EC-251](#), [EC-260](#), [EC-270](#)  
HO2S2H - Wiring diagram ..... [EC-168](#)  
Horn ..... [WW-46](#)  
HORN - Wiring diagram ..... [WW-46](#)  
How to erase DTC for OBD system ..... [EC-60](#)

## I

IATS - Wiring diagram ..... [EC-197](#)  
Idle air volume learning ..... [EC-78](#)  
Idle speed ..... [EC-75](#)  
Idle speed control (ISC) ..... [EC-423](#), [EC-425](#)  
Ignition coil ..... [EC-576](#)  
Ignition control system ..... [EC-576](#)  
Ignition timing ..... [EC-75](#)  
IGNSYS - Wiring diagram ..... [EC-577](#)  
ILL - Wiring diagram ..... [LT-111](#)  
Illumination control ..... [LT-108](#)  
In-cabin Microfilter ..... [MA-20](#)  
INJECT - Wiring diagram ..... [EC-565](#)  
Input shaft (FF M/T) ..... [MT-18](#)  
Input/Output signal of TCM ..... [CVT-25](#)  
Instrument panel ..... [IP-10](#)  
INT/L - Wiring diagram ..... [LT-96](#)  
Intake air temperature sensor ..... [EC-195](#), [EC-215](#)  
Intake door control linkage adjustment ..... [MTC-69](#)  
Intake manifold ..... [EM-18](#)  
Intake valve timing control ..... [EC-156](#)  
Intake valve timing control solenoid valve ..... [EC-173](#)  
Interior ..... [EI-32](#)  
Interior lamp ..... [LT-91](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-17](#)  
IVC - Wiring diagram ..... [EC-174](#)

# ALPHABETICAL INDEX

## K

KEYLES - Wiring diagram ..... [BL-57](#)  
 Knock sensor (KS) ..... [EC-315](#)  
 KS - Wiring diagram ..... [EC-316](#)

## L

L/USSV - Wiring diagram ..... [CVT-159](#)  
 Line pressure and secondary pressure control [CVT-26](#)  
 Line pressure solenoid valve ..... [CVT-113](#), [CVT-118](#)  
 Line pressure test (A/T) ..... [AT-56](#)  
 Liquid gasket application ..... [EM-5](#), [LU-2](#), [CO-3](#)  
 Location of electrical units ..... [PG-64](#)  
 Lock-up and select control ..... [CVT-28](#)  
 Lock-up select solenoid valve ..... [CVT-158](#)  
 Low tire pressure warning system ..... [WT-7](#)  
 Low tire pressure warning system - trouble diagnoses  
[WT-10](#)  
 Low tire pressure warning system - Wiring diagram ....  
[WT-10](#)  
 LPSV - Wiring diagram ..... [AT-146](#), [CVT-114](#)  
 Lubricant (R134a) A/C ..... [MTC-5](#), [MTC-18](#)  
 Lubrication circuit (engine) ..... [LU-4](#)  
 Lubrication oil A/C ..... [MTC-96](#)

## M

M/T major overhaul ..... [MT-17](#)  
 M/T removal and installation ..... [MT-15](#)  
 MAFS - Wiring diagram ..... [EC-181](#), [EC-189](#)  
 Magnet clutch ..... [MTC-41](#)  
 MAIN - Wiring diagram ..... [EC-144](#), [AT-183](#)  
 Mainshaft (M/T) ..... [MT-18](#)  
 Maintenance ..... [MA-5](#)  
 Malfunction indicator lamp (MIL) ..... [EC-61](#)  
 Manual air conditioner - Wiring diagram ..... [MTC-29](#)  
 Mass air flow sensor (MAFS) ..... [EC-178](#), [EC-187](#)  
 Master cylinder (clutch) ..... [CL-9](#)  
 Meter ..... [DI-5](#)  
 METER - Wiring diagram ..... [DI-9](#)  
 MIL data link connectors circuit ..... [EC-592](#)  
 MIRROR - Wiring diagram ..... [GW-64](#)  
 Mirror, door ..... [GW-65](#)  
 Mirror, out side ..... [GW-65](#)  
 Misfire ..... [EC-308](#)  
 Mode door control linkage adjustment ..... [MTC-71](#)  
 Molding - See Exterior ..... [EI-23](#), [EI-24](#)  
 Mud guard - See Exterior ..... [EI-26](#)  
 Multiport fuel injection (MFI) system ..... [EC-23](#)  
 Multiport fuel injection precautions ..... [GI-6](#)  
 Multi-remote control system - See Remote keyless entry  
 system ..... [BL-54](#)

## N

NATS - Wiring diagram ..... [BL-215](#)  
 NATS (Nissan anti-theft system) precautions ..... [GI-3](#)  
 NONDTC - Wiring diagram ..... [AT-193](#), [CVT-176](#)

NVH troubleshooting (BR) ..... [BR-5](#)  
 NVH troubleshooting (RSU) ..... [RSU-4](#)  
 NVIS (Nissan vehicle immobilizer system) ..... [BL-212](#)

## O

Oil change (capacity) ..... [MA-11](#)  
 Oil cooler (engine) ..... [EM-24](#)  
 Oil filter ..... [LU-8](#)  
 Oil pan (engine) ..... [EM-24](#)  
 Oil pressure (engine) ..... [LU-5](#)  
 Oil seal replacement (engine) . [EM-24](#), [EM-37](#), [EM-59](#),  
[EM-66](#)  
 On board diagnostic system ..... [EC-47](#)  
 ORVR (On-board Refueling Vapor Recovery) ... [EC-38](#)  
 Out side mirror ..... [GW-65](#)  
 Overdrive control switch ..... [AT-186](#), [AT-191](#)  
 Overheat ..... [EC-443](#)  
 OVRCSV - Wiring diagram ..... [AT-162](#)

## P

P/SCKT - Wiring diagram ..... [WW-44](#)  
 Park/Neutral position switch ..... [EC-436](#)  
 Park/neutral position switch (A/T) ..... [AT-97](#), [AT-186](#)  
 Park/neutral position switch (CVT) ..... [CVT-78](#)  
 Park/neutral position switch (M/T) ..... [MT-11](#)  
 Parking brake control ..... [PB-4](#)  
 PCV (positive crankcase ventilation) ..... [EC-44](#)  
 Periodic maintenance ..... [MA-7](#)  
 PGC/V - Wiring diagram ..... [EC-356](#), [EC-364](#)  
 PHASE - Wiring diagram ..... [EC-329](#)  
 Pilot bushing replacement ..... [EM-77](#)  
 Piston assembly ..... [EM-99](#)  
 Piston pin inspection ..... [EM-95](#)  
 Piston ring inspection ..... [EM-96](#)  
 Piston to bore clearance ..... [EM-99](#)  
 PNP/SW - Wiring diagram .... [EC-438](#), [AT-98](#), [CVT-80](#)  
 POS - Wiring diagram ..... [EC-321](#)  
 POWER - Wiring diagram ..... [CVT-146](#), [PG-6](#)  
 Power door lock ..... [BL-23](#)  
 Power socket ..... [WW-44](#)  
 Power steering gear ..... [PS-12](#)  
 Power supply routing ..... [PG-4](#)  
 Power window ..... [GW-17](#)  
 PRE/SE - Wiring diagram ..... [EC-387](#), [EC-393](#)  
 Precautions for Leak detection dye ..... [MTC-10](#)  
 Precautions (General) ..... [GI-4](#)  
 Pressure control solenoid valve A [CVT-113](#), [CVT-118](#)  
 Pressure control solenoid valve B [CVT-121](#), [CVT-124](#)  
 Pressure plate - See Clutch cover ..... [CL-13](#)  
 Pressure test (CVT) ..... [CVT-45](#)  
 Primary pressure sensor ..... [CVT-137](#)  
 Primary Speed Sensor ..... [CVT-90](#)  
 PRIPS - Wiring diagram ..... [CVT-138](#)  
 PRSCVT - Wiring diagram ..... [CVT-91](#)  
 PT/SEN - Wiring diagram ..... [AT-177](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX



# ALPHABETICAL INDEX

## R

Radiator .....	<a href="#">CO-11</a>
Rear axle .....	<a href="#">RAX-4</a>
Rear combination lamp removal and installation	<a href="#">LT-87</a>
Rear door .....	<a href="#">GW-47</a>
Rear seat belt .....	<a href="#">SB-6</a>
Rear suspension .....	<a href="#">RSU-5</a>
Rear washer .....	<a href="#">WW-30</a>
Rear window defogger .....	<a href="#">GW-50</a>
Rear wiper .....	<a href="#">WW-30</a>
Refrigerant connection precaution .....	<a href="#">MTC-5</a>
Refrigerant discharging evacuating charging .	<a href="#">MTC-80</a>
Refrigerant general precaution .....	<a href="#">MTC-5</a>
Refrigerant lines .....	<a href="#">MTC-80</a>
Refrigerant pressure sensor .....	<a href="#">EC-586</a> , <a href="#">MTC-88</a>
Refrigeration cycle .....	<a href="#">MTC-16</a>
Remote keyless entry system .....	<a href="#">BL-54</a>
Removal and installation (A/T) .....	<a href="#">AT-253</a>
Reverse idler shaft (M/T) .....	<a href="#">MT-18</a>
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	<a href="#">MT-11</a>
Reverse main gear (M/T) .....	<a href="#">MT-18</a>
Road test .....	<a href="#">AT-58</a> , <a href="#">AT-61</a> , <a href="#">AT-64</a> , <a href="#">AT-65</a> , <a href="#">CVT-46</a>
Room lamp - See Interior lamp .....	<a href="#">LT-91</a>
RP/SEN - Wiring diagram .....	<a href="#">EC-587</a>

## S

SAE J1979 - Service \$01 - 09 .....	<a href="#">EC-47</a>
Seat belt inspection .....	<a href="#">SB-8</a> , <a href="#">MA-27</a>
Seat belt, front .....	<a href="#">SB-3</a>
Seat belt, rear .....	<a href="#">SB-6</a>
Secondary pressure sensor .....	<a href="#">CVT-129</a>
Secondary Speed Sensor .....	<a href="#">CVT-95</a>
SECPS - Wiring diagram .....	<a href="#">CVT-130</a>
SECPSV - Wiring diagram .....	<a href="#">CVT-125</a>
Self-diagnostic results .....	<a href="#">EC-64</a> , <a href="#">EC-116</a>
SEN/PW - Wiring diagram .....	<a href="#">EC-431</a>
SESCVT - Wiring diagram .....	<a href="#">CVT-96</a>
SHIFT - Wiring diagram .....	<a href="#">AT-236</a> , <a href="#">CVT-198</a>
Shift control .....	<a href="#">CVT-26</a>
Shift control components (M/T) .....	<a href="#">MT-21</a>
Shift control system .....	<a href="#">CVT-191</a>
Shift fork (M/T) .....	<a href="#">MT-21</a>
Shift lever .....	<a href="#">MT-12</a>
Shift lock system .....	<a href="#">AT-235</a>
Shift schedule .....	<a href="#">AT-67</a> , <a href="#">CVT-53</a> , <a href="#">CVT-210</a>
Shock absorber (rear) .....	<a href="#">RSU-9</a>
Side air bag (satellite) sensor .....	<a href="#">SRS-50</a>
Side curtain air bag .....	<a href="#">SRS-47</a>
Side trim .....	<a href="#">EI-32</a>
SMJ (super multiple junction) .....	<a href="#">PG-75</a>
Specification value .....	<a href="#">EC-133</a>
Speedometer .....	<a href="#">DI-5</a>
Spiral cable .....	<a href="#">SRS-44</a>
Spot lamp .....	<a href="#">LT-107</a>
SPSW - Wiring diagram .....	<a href="#">CVT-171</a>
SROOF - Wiring diagram .....	<a href="#">RF-13</a>

SRS - See Supplemental Restraint System .....	<a href="#">SRS-4</a>
SRS - Wiring diagram .....	<a href="#">SRS-13</a>
SRS Trouble diagnoses .....	<a href="#">SRS-9</a>
SSV/A - Wiring diagram .....	<a href="#">AT-152</a>
SSV/B - Wiring diagram .....	<a href="#">AT-157</a>
Stall Test .....	<a href="#">CVT-43</a>
Stall test (A/T) .....	<a href="#">AT-53</a>
START - Wiring diagram .....	<a href="#">SC-12</a>
Starting system .....	<a href="#">SC-10</a>
Steering linkage .....	<a href="#">PS-12</a>
Steering wheel and column .....	<a href="#">PS-6</a> , <a href="#">PS-9</a>
Steering wheel turning force .....	<a href="#">PS-6</a>
Step motor .....	<a href="#">CVT-164</a> , <a href="#">CVT-168</a>
STM - Wiring diagram .....	<a href="#">CVT-165</a>
Stop lamp .....	<a href="#">LT-71</a> , <a href="#">LT-87</a>
Stop lamp switch .....	<a href="#">EC-488</a>
STOP/L - Wiring diagram .....	<a href="#">LT-71</a>
STSIG - Wiring diagram .....	<a href="#">CVT-73</a>
Sun roof, electric .....	<a href="#">RF-10</a>
Sunroof .....	<a href="#">RF-10</a> , <a href="#">RF-22</a>
Supplemental Restraint System .....	<a href="#">SRS-4</a>
Suspension .....	<a href="#">MA-26</a>
Swirl control valve .....	<a href="#">EC-592</a>
Symbols and abbreviations .....	<a href="#">GI-10</a> , <a href="#">GI-23</a>
Symptom matrix chart .....	<a href="#">EC-92</a>
Synchronizer (M/T) .....	<a href="#">MT-18</a>
System readiness test (SRT) code .....	<a href="#">EC-52</a>

## T

Tachometer .....	<a href="#">DI-5</a>
Tail lamp .....	<a href="#">LT-87</a>
TAIL/L - Wiring diagram .....	<a href="#">LT-78</a>
TCM circuit diagram .....	<a href="#">CVT-42</a>
TCM function .....	<a href="#">CVT-24</a>
TCM inspection table .....	<a href="#">AT-78</a> , <a href="#">CVT-54</a>
TCV - Wiring diagram .....	<a href="#">AT-135</a> , <a href="#">CVT-106</a>
Telephone .....	<a href="#">AV-49</a>
Theft warning system - See Vehicle security (Theft warn- ing) system .....	<a href="#">BL-193</a>
Thermo control amp .....	<a href="#">MTC-63</a>
Thermostat .....	<a href="#">CO-18</a>
Three way catalyst function .....	<a href="#">EC-334</a>
Three way catalyst precautions .....	<a href="#">GI-5</a>
Throttle control motor relay .....	<a href="#">EC-493</a>
Throttle position sensor (TPS) ..	<a href="#">EC-206</a> , <a href="#">EC-302</a> , <a href="#">EC-460</a> , <a href="#">EC-462</a> , <a href="#">EC-526</a>
Throttle valve closed position learning .....	<a href="#">EC-78</a>
Tie-rod .....	<a href="#">PS-12</a>
Timing chain .....	<a href="#">EM-37</a>
TLID - Wiring diagram .....	<a href="#">BL-177</a>
Torque converter installation ....	<a href="#">AT-254</a> , <a href="#">AT-369</a> , <a href="#">CVT-208</a>
Torque convertor clutch solenoid valve	<a href="#">CVT-105</a> , <a href="#">CVT-110</a>
TPS1 - Wiring diagram .....	<a href="#">EC-304</a>
TPS2 - Wiring diagram .....	<a href="#">EC-208</a>
TPS3 - Wiring diagram .....	<a href="#">EC-528</a>
Transmission case (M/T) .....	<a href="#">MT-17</a>

# ALPHABETICAL INDEX

---

Trouble diagnoses .....	<a href="#">GI-11</a>
TURN - Wiring diagram .....	<a href="#">LT-55</a>
Turn signal lamp .....	<a href="#">LT-51</a>
Two trip detection logic .....	<a href="#">EC-47</a>

A

## V

---

Vacuum hose (brake system) .....	<a href="#">BR-22</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-102</a>
Valve clearance .....	<a href="#">EM-55</a>
Valve guide .....	<a href="#">EM-68</a>
Valve lifter .....	<a href="#">EM-51</a>
Valve seat .....	<a href="#">EM-70</a>
Valve spring .....	<a href="#">EM-71</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-44</a>
Vehicle security (theft warning) system .....	<a href="#">BL-193</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-421</a> , <a href="#">EC-485</a> , <a href="#">EC-486</a>
VEHSEC - Wiring diagram .....	<a href="#">BL-197</a>
VENT/V - Wiring diagram .....	<a href="#">EC-371</a> , <a href="#">EC-378</a>
Ventilation air filter .....	<a href="#">MTC-74</a>
VIN registration .....	<a href="#">EC-77</a>
Viscosity number (SAE) .....	<a href="#">MA-12</a>
VSS A/T - Wiring diagram .....	<a href="#">AT-109</a>
VSSMTR - Wiring diagram .....	<a href="#">AT-167</a>

B

C

D

E

F

G

## W

---

WARN - Wiring diagram .....	<a href="#">DI-25</a>
Warning chime .....	<a href="#">DI-47</a>
Warning lamps .....	<a href="#">DI-24</a>
Washer, front .....	<a href="#">WW-4</a>
Washer, rear .....	<a href="#">WW-30</a>
Water control valve .....	<a href="#">CO-20</a>
Water pump .....	<a href="#">CO-17</a>
Water temperature gauge .....	<a href="#">DI-5</a>
Wheel alignment (front) .....	<a href="#">FSU-6</a>
Wheel alignment (rear) .....	<a href="#">RSU-5</a>
Wheel balance .....	<a href="#">WT-6</a> , <a href="#">MA-24</a>
Wheel bearing (rear) .....	<a href="#">RAX-4</a>
Wheel hub (rear) .....	<a href="#">RAX-4</a>
Wheel sensor (VDC) .....	<a href="#">BRC-33</a>
Wheel sensors (ABS) .....	<a href="#">BRC-11</a>
WINDOW - Wiring diagram .....	<a href="#">GW-23</a>
Window, door .....	<a href="#">GW-43</a> , <a href="#">GW-47</a>
Windshield .....	<a href="#">GW-11</a>
WIP/R - Wiring diagram .....	<a href="#">WW-33</a>
WIPER - Wiring diagram .....	<a href="#">WW-9</a>
Wiper, front .....	<a href="#">WW-4</a>
Wiper, rear .....	<a href="#">WW-30</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-61</a>
Wiring diagrams .....	<a href="#">GI-15</a>

H

I

J

K

L

IDX