

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [MTC-22](#)
A/C component layout [MTC-16](#)
A/C compressor precaution [MTC-8](#)
A/C compressor special service tool [MTC-11](#), [MTC-14](#)
A/C control operation (manual A/C) [MTC-21](#)
A/C diagnostic work flow (manual A/C) [MTC-23](#)
A/C HFC134a (R134a) system precaution [MTC-3](#)
A/C HFC134a (R134a) system service tools .. [MTC-12](#)
A/C HFC134a system service equipment precaution ... [MTC-8](#)
A/C lubricant (R134a) [MTC-18](#)
A/C lubrication oil [MTC-18](#)
A/C operational check [MTC-30](#)
A/C reray [MTC-47](#)
A/C switch [MTC-21](#)
A/C, M - Wiring diagram [MTC-28](#)
A/T control [EC-996](#), [EC-1586](#)
A/T fluid checking [AT-61](#)
A/T fluid temperature sensor [AT-109](#)
A/T shift lock system [AT-246](#)
A/T shift lock system - Wiring diagram [AT-247](#)
A/T Wiring diagram AT - 1ST [AT-122](#)
A/T Wiring diagram AT - 2ND [AT-128](#)
A/T Wiring diagram AT - 3RD [AT-134](#)
A/T Wiring diagram AT - 4TH [AT-140](#)
A/T Wiring diagram AT - BA/FTS [AT-185](#)
A/T Wiring diagram AT - ENG SS [AT-117](#)
A/T Wiring diagram AT - FTS [AT-107](#)
A/T Wiring diagram AT - LPSV [AT-158](#)
A/T Wiring diagram AT - MAIN [AT-97](#)
A/T Wiring diagram AT - NONDTC [AT-203](#)
A/T Wiring diagram AT - OVRCSV [AT-180](#)
A/T Wiring diagram AT - PNP/SW [AT-101](#)
A/T Wiring diagram AT - SSV/A [AT-163](#)
A/T Wiring diagram AT - SSV/B [AT-168](#)
A/T Wiring diagram AT - TCCSIG [AT-151](#)
A/T Wiring diagram AT - TCV [AT-146](#)
A/T Wiring diagram AT - TPS [AT-173](#)
A/T Wiring diagram AT - VSS A/T [AT-112](#)
A/T Wiring diagram AT - VSSMTR [AT-192](#)
AAC/V - Wiring diagram [EC-399](#), [EC-404](#), [EC-409](#), [EC-985](#), [EC-1575](#)
ABS - Wiring diagram [BRC-13](#), [BRC-15](#)
ABS (anti-lock brake system) [BRC-7](#), [BRC-57](#)
ABS input/output signal inspection .. [BRC-21](#), [BRC-72](#)
ABS sensor rotor [FAX-15](#)
Accelerator control system [ACC-2](#)
Accelerator wire adjustment [ACC-2](#)
Air bag [SRS-43](#)
Air bag disposal [SRS-52](#)
Air bleeding (hydraulic clutch) [CL-6](#)
Air bleeding for brake system [BR-9](#)
Air cleaner filter replacement [MA-20](#), [MA-30](#)
Air conditioner cut control ... [EC-33](#), [EC-596](#), [EC-1199](#)
Air spoiler, rear [EI-26](#)
Alternator [SC-34](#)
Angular tightening application [EM-4](#), [EM-70](#)

Antenna - See Power antenna [AV-18](#)
Anti-lock brake system - See ABS [BRC-7](#), [BRC-57](#)
Anti-lock brake system - Wiring diagram [BRC-13](#), [BRC-15](#)
ASCD - Wiring diagram [ACS-8](#)
ASCD (automatic speed control device) [ACS-3](#)
AT/C - Wiring diagram [EC-997](#), [EC-1587](#)
ATDIAG - Wiring diagram [EC-1119](#), [EC-1695](#)
Audio [AV-3](#)
AUDIO - Wiring diagram [AV-7](#)
Audio and A/C control removal and installation - See Instrument panel [IP-10](#)
Auto lock free running hub [FAX-9](#)
Automatic speed control system - See ASCD .. [ACS-3](#)
Automatic transmission fluid replacement [MA-37](#)
Automatic transmission number [GI-46](#)

B

Back door [EI-15](#)
Back door opener - See Back door [EI-15](#)
Back window [EI-26](#)
BACK/L - Wiring diagram [LT-20](#)
Back-up lamp [LT-20](#)
Back-up lamp switch (M/T) [MT-9](#), [MT-46](#)
Ball joint (front) [FSU-21](#)
Basic inspection [EC-73](#), [EC-640](#), [EC-1242](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#), [SC-27](#)
Baulk ring (M/T) [MT-14](#), [MT-53](#)
Body alignment [BL-68](#)
Body mounting [EI-31](#)
Boring/horning cylinder block [EM-50](#), [EM-131](#)
Brake booster [BR-17](#)
Brake fluid change [BR-8](#)
Brake fluid level [MA-40](#)
Brake fluid level and line check [BR-8](#)
Brake inspection [MA-41](#)
Brake lines and cables inspection [MA-40](#)
Brake master cylinder [BR-12](#)
Brake pedal [BR-6](#)
Bulb specifications [LT-45](#)
Bumper, front [EI-12](#)
Bumper, rear [EI-15](#)
BYPS/V - Wiring diagram . [EC-508](#), [EC-515](#), [EC-1102](#), [EC-1109](#), [EC-1678](#), [EC-1685](#)

C

Camshaft inspection [EM-33](#), [EM-106](#)
Camshaft position sensor (CMPS) .. [EC-865](#), [EC-1475](#)
CAN communication [BRC-60](#)
Center bearing assembly (propeller shaft) [PR-11](#)
Center bearing disassembly (propeller shaft) [PR-9](#)
Center case (Transfer) [TF-13](#)
CHARGE - Wiring diagram [SC-25](#)
Charging system [SC-24](#)
Chassis and body maintenance [MA-35](#)

ALPHABETICAL INDEX

CHIME - Wiring diagram	DI-34	Data link connector for Consult	EC-671 , EC-1273	A
CIGAR - Wiring diagram	WW-16	Daytime light system	LT-11	
Cigarette lighter	WW-16	Daytime running light - See Daytime light system ..	LT-11	
Circuit breaker	PG-15	DEF - Wiring diagram	GW-31	B
CKPS - Wiring diagram EC-269 , EC-452 , EC-861 , EC-1044 , EC-1471 , EC-1634		Diagnosis sensor unit	SRS-39	
Closed loop control	EC-31 , EC-594 , EC-1197	Diagnostic trouble code (DTC) for OBD system EC-17 , EC-578 , EC-617 , EC-1181 , EC-1219		C
Closed throttle position switch	EC-989 , EC-1579	Diagnostic trouble code (DTC) inspection priority chart EC-71 , EC-639 , EC-1241		
Clutch cover	CL-12 , CL-13	Differential carrier disassembly	RFD-15 , RFD-41	D
Clutch disc	CL-12	Differential gear oil replacement	MA-39	
Clutch fluid level	MA-35	Dimensions	GI-47	
Clutch master cylinder	CL-8	Distributor ignition (DI) system EC-32 , EC-595 , EC-1198		E
Clutch operating cylinder	CL-9	Dome light - See Interior lamp	LT-36	
Clutch pedal	CL-5 , CL-6	Door glass	BL-11 , GW-24	
Clutch release bearing	CL-10	Door glass Fitting Adjustment	BL-11 , GW-24	F
Clutch release mechanism	CL-10	Door lock	BL-11 , GW-24	
Clutch withdrawal lever	CL-10	Door trim	EI-21	G
CMPS - Wiring diagram EC-275 , EC-867 , EC-1477		Door, front	BL-11 , GW-24	
Collision diagnosis	SRS-59	Drive belt inspection	MA-15 , MA-24	H
Combination lamp, front, removal and installation EI-12		Drive chain (Transfer)	TF-14	
Combination lamp, rear, removal and installation EI-26		Drive pinion diff. inspection	FFD-18 , RFD-47	I
Combination meter	DI-3	Drive pinion height	FFD-21 , RFD-21 , RFD-50	
Combination meter removal and installation - See Instrument panel	IP-10	Drive plate runout	EM-56 , EM-137	J
Combination switch	LT-4	Drive shaft (front)	FAX-20	
COMPAS - Wiring diagram	DI-19	Dropping resistor (A/T)	AT-160	K
Compass	DI-18	DTC work support	EC-108 , EC-678 , EC-1280	
Component Location (manual A/C)	MTC-24	DTRL - Wiring diagram	LT-14	L
Compression pressure	EM-99			
Compressor precaution	MTC-8	E		I DX
Compressor special service tool MTC-11 , MTC-14		ECM input/output signal	EC-90 , EC-661 , EC-1263	
Connecting rod	EM-49 , EM-130	ECM power supply	EC-120	K
Connecting rod bearing clearance EM-54 , EM-135		ECTS - Wiring diagram EC-158 , EC-178 , EC-738 , EC-1345		
Connecting rod bushing clearance EM-56 , EM-136		EGR/TS - Wiring diagram	EC-300 , EC-890	L
Console box - See Instrument panel	IP-10	EGRC/V - Wiring diagram	EC-458 , EC-1050	
CONSULT for ABS	BRC-21 , BRC-72	EGRC1 - Wiring diagram EC-285 , EC-466 , EC-876 , EC-1058		
CONSULT for engine	EC-98 , EC-669 , EC-1271	Electrical unit	PG-66	
Control lever (M/T)	MT-16 , MT-57	Electrical units location	PG-30	
Control valve (A/T)	AT-282	Engine compartment	BL-69	
Converter housing installation	AT-259	Engine control circuit diagram EC-89 , EC-660 , EC-1262		
Coolant mixture ratio	MA-14	Engine control component parts location .. EC-87 , EC-657 , EC-1259		
Coolant replacement	MA-16 , MA-26	Engine control system diagram and chart . EC-28 , EC-591 , EC-1194		
Cooling circuit (engine)	CO-7 , CO-22	Engine coolant temperature sensor (ECTS) ... EC-156 , EC-176 , EC-736 , EC-758 , EC-1343 , EC-1366		
Cooling fan	CO-16 , CO-31	Engine fail-safe system	EC-72 , EC-640 , EC-1242	
Counter gear (M/T)	MT-14 , MT-53	Engine oil filter replacement	MA-21 , MA-31	
Counter gear (Transfer)	TF-14	Engine oil precautions	GI-6	
Coupling sleeve (M/T)	MT-14 , MT-53	Engine oil replacement	MA-20 , MA-30	
Crankshaft	EM-51 , EM-133	Engine outer component parts	EM-13 , EM-78	
Crankshaft position sensor (OBD) cog chipping ... EC-1043 , EC-1633		Engine removal	EM-44 , EM-124	
Crash zone sensor	SRS-40	Engine room - See Engine compartment	BL-69	
Cruise control - See ASCD	ACS-3			
Cylinder block	EM-46 , EM-127			
Cylinder block boring	EM-50			
Cylinder head	EM-30 , EM-99			
D				
D/LOCK - Wiring diagram	BL-18			

ALPHABETICAL INDEX

Engine serial number [GI-46](#)
EVAP canister [EC-561](#), [EC-1165](#), [EC-1742](#)
EVAP canister purge volume control solenoid valve
[EC-473](#), [EC-919](#), [EC-1064](#), [EC-1508](#), [EC-1640](#)
EVAP canister vent control valve [EC-926](#), [EC-1073](#),
[EC-1079](#), [EC-1515](#), [EC-1649](#), [EC-1655](#)
EVAP control system (small leak) diagnosis .. [EC-371](#),
[EC-492](#), [EC-562](#), [EC-907](#), [EC-947](#), [EC-1062](#), [EC-1087](#),
[EC-1496](#), [EC-1536](#), [EC-1638](#), [EC-1663](#)
EVAP control system pressure sensor [EC-932](#), [EC-938](#),
[EC-1521](#), [EC-1527](#)
EVAP control system purge flow monitoring diagnosis
[EC-309](#), [EC-899](#), [EC-1488](#)
EVAP system close mode [EC-562](#)
EVAP vapor lines inspection [MA-23](#), [MA-34](#)
Exhaust system [EX-3](#)
Exterior [EI-26](#)

F

F/FOG - Wiring diagram [LT-22](#)
F/PUMP - Wiring diagram [EC-544](#), [EC-1148](#), [EC-1724](#)
Fast idle cam (FIC) inspection and adjustment [EC-609](#),
[EC-1212](#)
FICD - Wiring diagram [EC-553](#), [EC-1157](#), [EC-1734](#)
Final drive disassembly [RFD-15](#), [RFD-41](#)
Final drive pre-inspection [RFD-40](#)
Final drive removal and installation .. [RFD-10](#), [RFD-38](#)
Finisher, interior - See Trim [EI-18](#)
Floor trim [EI-18](#)
Flow charts [GI-25](#)
FLS1 - Wiring diagram [EC-383](#), [EC-968](#), [EC-1558](#)
FLS2 - Wiring diagram [EC-389](#), [EC-974](#), [EC-1564](#)
FLS3 - Wiring diagram [EC-504](#), [EC-1098](#), [EC-1674](#)
Fluid temperature sensor (A/T) [AT-109](#)
Fluids [MA-12](#)
Flywheel (clutch) [CL-12](#), [CL-13](#)
Flywheel runout [EM-56](#), [EM-137](#)
Fog lamp, front [LT-21](#)
Fog lamp, front, removal and installation [EI-12](#)
Fork rod (M/T) [MT-16](#), [MT-57](#)
Forward clutch [AT-304](#)
Freeze frame data [EC-51](#), [EC-617](#), [EC-1220](#)
Front bumper [EI-12](#)
Front case (Transfer) [TF-13](#)
Front combination lamp removal and installation [EI-12](#)
Front disc brake [BR-23](#)
Front door [BL-11](#), [GW-24](#)
Front drive shaft (Transfer) [TF-14](#)
Front final drive disassembly (4WD) [FFD-13](#)
Front final drive pre-inspection (4WD) [FFD-12](#)
Front final drive removal and installation (4WD) [FFD-9](#)
Front fog lamp [LT-21](#)
Front fog lamp removal and installation [EI-12](#)
Front oxygen sensor (O2S) monitor [EC-628](#), [EC-1230](#)
Front passenger air bag [SRS-47](#)
Front seat [SE-2](#)
Front seat belt [SB-3](#)
Front washer [WW-3](#)

Front wiper [WW-3](#)
FTTS - Wiring diagram [EC-244](#), [EC-248](#), [EC-834](#), [EC-838](#),
[EC-1441](#), [EC-1445](#)
FUEL - Wiring diagram [EC-231](#), [EC-238](#)
Fuel cut control (at no load high engine speed) [EC-33](#),
[EC-596](#), [EC-1199](#)
Fuel filler lid [EI-15](#)
Fuel gauge [DI-3](#)
Fuel level sensor .. [EC-382](#), [EC-386](#), [EC-388](#), [EC-503](#),
[EC-967](#), [EC-971](#), [EC-973](#), [EC-1097](#), [EC-1557](#), [EC-1561](#),
[EC-1563](#), [EC-1673](#)
Fuel line inspection [FL-2](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-46](#), [EC-611](#), [EC-1214](#)
Fuel pressure regulator [EC-47](#), [EC-612](#), [EC-1215](#)
Fuel pressure release [EC-45](#), [EC-611](#), [EC-1214](#)
Fuel system [FL-2](#)
Fuel tank temperature sensor ... [EC-832](#), [EC-837](#), [EC-1439](#),
[EC-1444](#)
Fuel tank vacuum relief valve . [EC-561](#), [EC-1165](#), [EC-1742](#)
FUELB1 - Wiring diagram [EC-819](#), [EC-827](#), [EC-1426](#),
[EC-1434](#)
FUELB2 - Wiring diagram [EC-820](#), [EC-828](#), [EC-1427](#),
[EC-1435](#)
Fuse [PG-15](#)
Fuse block [PG-64](#)
Fusible link [PG-15](#)

G

Garage jack and safety stand [GI-37](#)
Gauges [DI-3](#)
Gear components (M/T) [MT-14](#), [MT-53](#)
Generator [SC-34](#)
Generator - See Alternator [SC-34](#)
Generic scan tool (GST) ... [EC-109](#), [EC-680](#), [EC-1281](#)
Glass [BL-11](#), [GW-24](#)
Grease [MA-12](#)

H

H/LAMP - Wiring diagram [LT-7](#)
Harness connector [PG-4](#)
Harness layout [PG-33](#)
Hazard warning lamp [LT-25](#)
Headlamp [LT-6](#)
Headlining - See Roof trim [EI-24](#)
Heated oxygen sensor 1 ... [EC-190](#), [EC-197](#), [EC-206](#),
[EC-421](#), [EC-426](#)
Heated oxygen sensor 1 (bank 1) [EC-766](#), [EC-775](#),
[EC-787](#), [EC-1004](#), [EC-1010](#), [EC-1374](#), [EC-1383](#), [EC-1395](#),
[EC-1594](#), [EC-1600](#)
Heated oxygen sensor 1 (bank 2) [EC-766](#), [EC-775](#),
[EC-787](#), [EC-1004](#), [EC-1010](#), [EC-1374](#), [EC-1383](#), [EC-1395](#),
[EC-1594](#)
Heated oxygen sensor 1 heater [EC-127](#)
Heated oxygen sensor 1 heater (bank 1) [EC-699](#), [EC-1300](#)

ALPHABETICAL INDEX

Heated oxygen sensor 1 heater (bank 2) [EC-699](#), [EC-1300](#)
 Heated oxygen sensor 2 ... [EC-213](#), [EC-220](#), [EC-431](#), [EC-438](#)
 Heated oxygen sensor 2 (bank 1) [EC-797](#), [EC-806](#), [EC-1017](#), [EC-1027](#), [EC-1405](#), [EC-1414](#), [EC-1607](#), [EC-1617](#)
 Heated oxygen sensor 2 (bank 2) [EC-797](#), [EC-806](#), [EC-1017](#), [EC-1027](#), [EC-1405](#), [EC-1414](#), [EC-1607](#), [EC-1617](#)
 Heated oxygen sensor 2 heater [EC-132](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-707](#), [EC-1314](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-707](#), [EC-1314](#)
 Height (Dimensions) [GI-47](#)
 HFC134a (R134a) system precaution [MTC-3](#)
 HFC134a (R134a) system service tools [MTC-12](#)
 HFC134a system service equipment precaution [MTC-8](#)
 High clutch [AT-301](#)
 Hood [EI-12](#)
 Horn [WW-17](#)
 HORN - Wiring diagram [WW-17](#)
 How to erase DTC for OBD system ... [EC-60](#), [EC-626](#), [EC-1228](#)
 Hydraulic lash adjuster inspection [EM-113](#)

I

IATS - Wiring diagram [EC-184](#)
 Identification [MTC-4](#)
 Identification plate [GI-45](#)
 Idle mixture ratio [EC-35](#), [EC-598](#), [EC-1201](#)
 Idle speed [EC-35](#), [EC-598](#), [EC-1201](#)
 IGN/SG - Wiring diagram [EC-528](#), [EC-1132](#), [EC-1708](#)
 Ignition timing [EC-35](#), [EC-598](#), [EC-1201](#)
 ILL - Wiring diagram [LT-34](#)
 Illumination [LT-33](#)
 INJECT - Wiring diagram [EC-535](#), [EC-1138](#), [EC-1714](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-39](#)
 Intake air temperature sensor ... [EC-151](#), [EC-182](#), [EC-730](#), [EC-761](#), [EC-1337](#), [EC-1369](#)
 Intake manifold [EM-13](#), [EM-78](#)
 Interior [EI-18](#)
 Interior lamp [LT-36](#)

J

Jacking points [GI-37](#)
 Journal bearing assembly (propeller shaft) [PR-11](#)
 Journal bearing disassembly (propeller shaft) .. [PR-10](#)
 Jump seat [SE-3](#)
 Junction box (J/B) [PG-64](#)

K

Keyless entry system - See Multi-remote control system [BL-29](#)

Knock sensor (KS) [EC-264](#)
 Knuckle spindle [FAX-17](#)
 KS - Wiring diagram [EC-856](#), [EC-1466](#)

L

Leaf spring (rear) [RSU-10](#)
 Length (Dimensions) [GI-47](#)
 License lamp [LT-18](#)
 Lifting points [GI-38](#)
 Limited slip diff. adjustment [RFD-49](#)
 Limited slip diff. assembly [RFD-56](#)
 Limited slip diff. disassembly [RFD-46](#)
 Limited slip diff. inspection [RFD-48](#)
 Line pressure solenoid valve [AT-143](#), [AT-155](#), [AT-160](#)
 Line pressure test (A/T) [AT-64](#)
 Liquid gasket application [EM-4](#), [EM-20](#), [EM-70](#)
 Location of electrical units [PG-30](#)
 Lock, door [BL-11](#), [GW-24](#)
 Low and reverse brake [AT-309](#)
 Low tire pressure warning system [WT-7](#)
 Low tire pressure warning system - trouble diagnoses [WT-9](#), [WT-17](#)
 Low tire pressure warning system - Wiring diagram [WT-9](#)
 Lubricant (R134a) A/C [MTC-18](#)
 Lubricants [MA-12](#)
 Lubrication circuit (engine) [LU-5](#), [LU-14](#)
 Lubrication oil A/C [MTC-18](#)
 Lubrication-locks, hinges and hood latches [MA-44](#)
 Luggage room lamp [LT-36](#)

M

M/T major overhaul [MT-12](#), [MT-51](#)
 M/T removal and installation [MT-10](#), [MT-48](#)
 Main drive gear (M/T) [MT-14](#), [MT-53](#)
 Main gear (Transfer) [TF-14](#)
 Mainshaft (M/T) [MT-14](#), [MT-53](#)
 Mainshaft (Transfer) [TF-14](#)
 Major overhaul (Transfer) [TF-12](#)
 Malfunction indicator lamp (MIL) . [EC-61](#), [EC-628](#), [EC-1230](#)
 Manual air conditioner - Wiring diagram [MTC-28](#)
 Manual transmission number [GI-46](#)
 Manual transmission oil replacement [MA-35](#)
 Mass air flow sensor (MAFS) [EC-138](#), [EC-145](#), [EC-715](#), [EC-723](#), [EC-1322](#), [EC-1330](#)
 Master cylinder (brake) [BR-12](#)
 Master cylinder (clutch) [CL-8](#)
 Meter [DI-3](#)
 METER - Wiring diagram [DI-8](#)
 MIRROR - Wiring diagram [GW-26](#)
 Mirror defogger [GW-28](#)
 Misfire [EC-846](#), [EC-1456](#)
 Mode door control linkage adjustment [MTC-33](#)
 Model variation [GI-43](#)
 Molding - See Exterior [EI-26](#)
 MULTI - Wiring diagram [BL-34](#)

ALPHABETICAL INDEX

Multiport fuel injection (MFI) system ... [EC-30](#), [EC-593](#),
[EC-1196](#)
Multiport fuel injection precautions [GI-5](#)
Multi-remote control system [BL-29](#)

N

NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (CL) [CL-4](#)
NVH troubleshooting (EM) [EM-11](#), [EM-76](#)
NVH troubleshooting (M/T) [MT-6](#), [MT-41](#)
NVH troubleshooting (SU) [RSU-4](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-3](#)

O

Oil change (capacity) [MA-12](#)
Oil pan (engine) [EM-16](#), [EM-85](#)
Oil pressure (engine) [LU-7](#), [LU-15](#)
Oil pump (A/T) [AT-277](#)
Oil pump (engine) [LU-8](#), [LU-16](#)
Oil pump regulator valve (engine) [LU-9](#), [LU-17](#)
Oil seal replacement (engine) [EM-27](#), [EM-96](#)
Operating cylinder (clutch) [CL-9](#)
ORVR (On-board Refueling Vapor Recovery) [EC-1168](#), [EC-1745](#)
Overdrive control switch [AT-243](#)
Overheat [EC-251](#), [EC-447](#), [EC-841](#), [EC-1039](#), [EC-1448](#), [EC-1629](#)
Overrun clutch [AT-304](#)
Overrun clutch solenoid valve [AT-182](#)
Oversize piston [EM-132](#)

P

Pantograph jack [GI-37](#)
Park/neutral position switch (A/T) [AT-103](#), [AT-244](#)
Park/neutral position switch (M/T) [MT-9](#), [MT-46](#)
Parking brake control [PB-2](#)
Parking lamp [LT-18](#)
PCV filter replacement [MA-23](#)
PGC/V - Wiring diagram [EC-333](#), [EC-475](#), [EC-921](#), [EC-1066](#), [EC-1510](#), [EC-1642](#)
Pilot bushing replacement [EM-60](#), [EM-139](#)
Pinion bearing preload diff. [FFD-21](#)
Pinion gear height diff. [FFD-21](#), [RFD-21](#), [RFD-50](#)
Piston assembly [EM-56](#), [EM-137](#)
Piston pin inspection [EM-48](#), [EM-129](#)
Piston ring inspection [EM-49](#), [EM-130](#)
Piston to bore clearance [EM-50](#), [EM-131](#)
PNP/SW - Wiring diagram [EC-524](#), [EC-1126](#), [EC-1702](#)
POWER - Wiring diagram [PG-10](#)
Power antenna [AV-18](#)
Power door lock [BL-13](#)
Power door mirror [GW-26](#)
Power steering fluid level [PS-7](#), [MA-42](#)
Power steering hydraulic pressure [PS-9](#)
Power steering oil pump [PS-17](#)

Power steering system bleeding [PS-8](#)
Power supply routing [PG-8](#)
Power window [GW-14](#)
PRE/SE - Wiring diagram .. [EC-345](#), [EC-352](#), [EC-934](#),
[EC-940](#), [EC-1523](#), [EC-1529](#)
Precations for Leak detection dye [MTC-4](#)
Precautions (General) [GI-3](#)
Pressure plate - See Clutch cover [CL-12](#)
Pressure test (A/T) [AT-64](#)
Propeller shaft [PR-5](#), [PR-6](#)
Propeller shaft greasing [MA-38](#)
Propeller shaft inspection [MA-38](#)
Propeller shaft on vehicle service [PR-4](#)
Propeller shaft vibration [PR-4](#)
PST/SW - Wiring diagram [EC-549](#), [EC-1153](#), [EC-1730](#)

R

Radiator [CO-14](#), [CO-29](#)
Radiator fan - See Cooling fan [CO-16](#), [CO-31](#)
Radio - See Audio [AV-3](#)
Rear air spoiler [EI-26](#)
Rear body [EI-31](#)
Rear bumper [EI-15](#)
Rear case (Transfer) [TF-13](#)
Rear combination lamp removal and installation [EI-26](#)
Rear cover packing replacement diff. [RFD-9](#)
Rear drum brake [BR-28](#)
Rear seat [SE-3](#)
Rear seat belt [SB-5](#)
Rear side window [GW-11](#)
Rear washer [WW-9](#)
Rear window defogger [GW-28](#)
Rear wiper [WW-9](#)
Refrigerant connection precaution [MTC-5](#)
Refrigerant discharging evacuating charging .. [MTC-63](#)
Refrigerant general precaution [MTC-4](#)
Refrigerant lines [MTC-63](#)
Refrigerant pressure sensor [MTC-47](#)
Refrigeration cycle [MTC-15](#)
Release bearing (clutch) [CL-10](#)
Removal and installation (A/T) [AT-258](#)
Removal and installation (Transfer) [TF-11](#)
Reverse clutch [AT-296](#)
Reverse idler shaft (M/T) [MT-14](#), [MT-53](#)
Reverse lamp switch (M/T) - See Back-up lamp switch
(M/T) [MT-9](#), [MT-46](#)
Reverse main gear (M/T) [MT-14](#), [MT-53](#)
Revolution sensor (A/T) [AT-114](#)
Ring gear diff. inspection [FFD-18](#), [RFD-47](#)
Road wheel size [GI-47](#)
Roof trim [EI-24](#)
Room lamp - See Interior lamp [LT-36](#)

S

S/CHGR - Wiring diagram [EC-1310](#)
S/SIG - Wiring diagram ... [EC-540](#), [EC-1144](#), [EC-1720](#)
Seal - See Exterior [EI-26](#)

ALPHABETICAL INDEX

Two-pole lift [GI-38](#)

Wrist pin - See Piston pin inspection .. [EM-48](#), [EM-129](#)

WT-T/WARN - Wiring diagram [WT-9](#)

U

Under body [BL-71](#)

V

Vacuum cut valve bypass valve [EC-512](#), [EC-1100](#), [EC-1106](#), [EC-1676](#), [EC-1682](#)

Vacuum hose (brake system) [BR-21](#)

Vacuum hose drawing (Engine control) [EC-29](#), [EC-592](#), [EC-1195](#)

Valve clearance [EM-41](#), [EM-142](#)

Valve guide [EM-35](#), [EM-108](#)

Valve lifter [EM-39](#)

Valve seat [EM-37](#), [EM-110](#)

Valve spring [EM-38](#), [EM-112](#)

VDC (vehicle dynamics control) [BRC-57](#)

VDC -Wiring diagram [BRC-65](#), [BRC-66](#)

Vehicle identification number [GI-45](#)

Vehicle recovery (freeing a stuck vehicle) [GI-40](#)

VENT/V - Wiring diagram [EC-338](#), [EC-928](#), [EC-1075](#), [EC-1082](#), [EC-1517](#), [EC-1651](#), [EC-1658](#)

Viscosity number (SAE) [MA-14](#)

VSS - Wiring diagram [EC-394](#), [EC-979](#), [EC-1569](#)

W

WARN - Wiring diagram [DI-23](#)

Warning chime [DI-31](#)

Warning lamps [DI-22](#)

Washer, front [WW-3](#)

Washer, rear [WW-9](#)

Water pump [CO-10](#), [CO-25](#)

Water temperature gauge [DI-3](#)

Weatherstrip - See Exterior [EI-26](#)

Wheel alignment (front) [FSU-8](#)

Wheel balance [MA-40](#)

Wheel bearing (front) [FAX-5](#)

Wheel bearing (rear) [RAX-6](#)

Wheel hub (front) [FAX-12](#)

Wheel sensor (VDC) [BRC-128](#)

Wheel sensors (ABS) [BRC-48](#), [BRC-128](#)

Wheel size [GI-47](#)

Wheelbase (Dimensions) [GI-47](#)

Width (Dimensions) [GI-47](#)

WINDOW - Wiring diagram [GW-18](#)

Window, back [EI-26](#)

Window, door [BL-11](#), [GW-24](#)

Window, opera [EI-31](#)

Windshield [GW-10](#)

WIP/R - Wiring diagram [WW-11](#)

WIPER - Wiring diagram [WW-5](#)

Wiper, front [WW-3](#)

Wiper, rear [WW-9](#)

Wiring Diagram (Cell code) list [PG-59](#)

Wiring diagrams [GI-13](#)

Withdrawal lever (clutch) [CL-10](#)