

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## Numerics

4LO switch .....	<a href="#">TF-59</a>
4WD - Wiring diagram .....	<a href="#">TF-24</a> , <a href="#">TF-31</a>
4WD shift switch .....	<a href="#">TF-63</a>
4WD system description .....	<a href="#">TF-15</a>
4WD system diagram .....	<a href="#">TF-18</a>

## A

A/C air flow .....	<a href="#">MTC-26</a>
A/C compressor clutch removal and installation .	<a href="#">MTC-99</a>
A/C compressor mounting .....	<a href="#">MTC-98</a>
A/C compressor precaution .....	<a href="#">MTC-9</a>
A/C compressor special service tool .....	<a href="#">MTC-12</a>
A/C control operation (manual A/C) .....	<a href="#">MTC-25</a>
A/C evaporator .....	<a href="#">MTC-105</a>
A/C HFC134a (R134a) system identification ....	<a href="#">MTC-5</a>
A/C HFC134a (R134a) system precaution .....	<a href="#">MTC-4</a>
A/C HFC134a (R134a) system service procedure .....	<a href="#">MTC-95</a>
A/C HFC134a (R134a) system service tools ..	<a href="#">MTC-12</a>
A/C HFC134a system service equipment precaution ...	<a href="#">MTC-9</a>
A/C lubricant (R134a) .....	<a href="#">MTC-19</a>
A/C lubrication oil .....	<a href="#">MTC-19</a>
A/C operational check .....	<a href="#">MTC-37</a>
A/C service data specification .....	<a href="#">MTC-110</a>
A/C trouble diagnoses (manual A/C) .....	<a href="#">MTC-28</a>
A/C, M - Wiring diagram .....	<a href="#">MTC-33</a>
A/T fluid checking .....	<a href="#">AT-13</a> , <a href="#">AT-54</a> , <a href="#">MA-22</a>
A/T fluid cooler cleaning .....	<a href="#">AT-16</a>
A/T fluid replacement .....	<a href="#">AT-15</a> , <a href="#">MA-24</a>
A/T fluid temperature sensor .....	<a href="#">AT-128</a>
A/T IND - Wiring diagram .....	<a href="#">DI-32</a>
A/T indicator .....	<a href="#">DI-32</a>
A/T self-diagnoses .....	<a href="#">AT-96</a>
A/T shift lock system .....	<a href="#">AT-218</a>
A/T trouble diagnoses .....	<a href="#">AT-44</a>
ABS - Wiring diagram .....	<a href="#">BRC-17</a> , <a href="#">BRC-78</a>
ABS (anti-lock brake system) .....	<a href="#">BRC-8</a> , <a href="#">BRC-68</a>
Accelerator control system .....	<a href="#">ACC-3</a>
Accelerator pedal position (APP) sensor .	<a href="#">EC-589</a> , <a href="#">EC-595</a> , <a href="#">EC-609</a>
Accelerator pedal released position learning .....	<a href="#">EC-78</a>
AF1B1-Wiring diagram	<a href="#">EC-233</a> , <a href="#">EC-241</a> , <a href="#">EC-249</a> , <a href="#">EC-258</a> , <a href="#">EC-618</a>
AF1B2-Wiring diagram	<a href="#">EC-235</a> , <a href="#">EC-243</a> , <a href="#">EC-251</a> , <a href="#">EC-260</a> , <a href="#">EC-620</a>
AF1HB1-Wiring diagram .....	<a href="#">EC-167</a>
AF1HB2-Wiring diagram .....	<a href="#">EC-169</a>
Aiming adjustment .....	<a href="#">LT-22</a> , <a href="#">LT-45</a>
Air bag .....	<a href="#">SRS-3</a>
Air bleeding (hydraulic clutch) .....	<a href="#">CL-8</a>
Air cleaner and air duct .....	<a href="#">EM-16</a>
Air cleaner filter .....	<a href="#">EM-16</a>
Air cleaner filter replacement .....	<a href="#">MA-17</a>
Air conditioner cut control .....	<a href="#">EC-28</a>

Air flow meter - See Mass air flow sensor	<a href="#">EC-189</a> , <a href="#">EC-198</a>
Air fuel ratio sensor 1 ..	<a href="#">EC-230</a> , <a href="#">EC-239</a> , <a href="#">EC-247</a> , <a href="#">EC-255</a> , <a href="#">EC-616</a>
Air fuel ratio sensor 1 heater .....	<a href="#">EC-165</a>
Air mix. door motor .....	<a href="#">MTC-45</a>
Angular tightening application .....	<a href="#">EM-5</a>
Antenna .....	<a href="#">AV-53</a>
Anti-lock brake system - Wiring diagram .....	<a href="#">BRC-17</a> , <a href="#">BRC-78</a>
APPS1 - Wiring diagram .....	<a href="#">EC-591</a>
APPS2 - Wiring diagram .....	<a href="#">EC-597</a>
APPS3 - Wiring diagram .....	<a href="#">EC-611</a>
ASC/BS - Wiring diagram .....	<a href="#">EC-546</a>
ASC/SW - Wiring diagram .....	<a href="#">EC-539</a>
ASCBOF - Wiring diagram .....	<a href="#">EC-629</a>
ASCD .....	<a href="#">EC-29</a>
ASCD (automatic speed control device) .....	<a href="#">ACS-2</a>
ASCIND - Wiring diagram .....	<a href="#">EC-643</a>
ATP switch .....	<a href="#">TF-87</a> , <a href="#">TF-89</a>
Audio .....	<a href="#">AV-4</a>
AUDIO - Wiring diagram .....	<a href="#">AV-8</a>
Automatic transmission number .....	<a href="#">GI-51</a>

## B

B/COMP - Wiring diagram .....	<a href="#">DI-47</a>
Back door trim .....	<a href="#">EI-24</a>
BACK/L - Wiring diagram .....	<a href="#">LT-71</a>
Back-up lamp .....	<a href="#">LT-71</a>
Back-up lamp switch (M/T) .....	<a href="#">MT-13</a> , <a href="#">MT-22</a>
Ball joint (front) .....	<a href="#">FSU-15</a>
Basic inspection .....	<a href="#">EC-71</a>
Battery .....	<a href="#">SC-4</a>
Battery current sensor .	<a href="#">EC-509</a> , <a href="#">EC-516</a> , <a href="#">EC-523</a> , <a href="#">EC-530</a>
Battery/Starting/Charging System Tester	<a href="#">SC-6</a> , <a href="#">SC-18</a> , <a href="#">SC-27</a>
Baulk ring (M/T) .....	<a href="#">MT-24</a>
BCM (Body control module) .....	<a href="#">BCS-3</a>
Block heater .....	<a href="#">EM-107</a>
Blower motor .....	<a href="#">MTC-54</a> , <a href="#">MTC-82</a>
Board computer .....	<a href="#">DI-46</a>
Body alignment .....	<a href="#">BL-132</a>
Body component parts .....	<a href="#">BL-119</a>
Body construction .....	<a href="#">BL-131</a>
Body exterior paint color .....	<a href="#">BL-118</a>
Body mounting .....	<a href="#">BL-117</a>
Body repair .....	<a href="#">BL-118</a>
Body sealing .....	<a href="#">BL-128</a>
Boring/horning cylinder block .....	<a href="#">EM-128</a>
Brake booster .....	<a href="#">BR-16</a>
Brake fluid level .....	<a href="#">MA-30</a>
Brake hydraulic line .....	<a href="#">BR-11</a>
Brake inspection .....	<a href="#">MA-31</a>
Brake lines and cables inspection .....	<a href="#">MA-30</a>
Brake master cylinder .....	<a href="#">BR-14</a>
Brake switch .....	<a href="#">EC-565</a>
BRK/SW - Wiring diagram .....	<a href="#">EC-566</a>





# ALPHABETICAL INDEX

HFC134a (R134a) system precaution ..... [MTC-4](#)  
HFC134a (R134a) system service procedure [MTC-95](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-9](#)  
High and low reverse clutch solenoid valve .... [AT-152](#),  
[AT-154](#)  
Horn ..... [WW-46](#)  
HORN - Wiring diagram ..... [WW-46](#)  
How to erase DTC for OBD system ..... [EC-61](#)

## I

IATS - Wiring diagram ..... [EC-207](#)  
Identification plate ..... [GI-50](#)  
Idle air volume learning ..... [EC-78](#)  
Idle speed control (ISC) ..... [EC-462](#), [EC-464](#)  
Ignition coil ..... [EM-32](#), [EC-660](#)  
Ignition control system ..... [EC-660](#)  
Ignition key hole illumination ..... [LT-99](#)  
IGNSYS - Wiring diagram ..... [EC-661](#)  
ILL - Wiring diagram ..... [LT-130](#)  
Illumination ..... [LT-125](#)  
Illumination control ..... [LT-125](#), [LT-138](#)  
In-cabin Microfilter ..... [MTC-83](#)  
INJECT - Wiring diagram ..... [EC-648](#)  
Injector ..... [EC-647](#)  
Input clutch solenoid valve ..... [AT-140](#), [AT-142](#)  
Instrument panel ..... [IP-10](#)  
INT/L - Wiring diagram ..... [LT-107](#)  
Intake air temperature sensor ..... [EC-205](#), [EC-225](#)  
Intake door control linkage adjustment ..... [MTC-51](#)  
Intake door motor ..... [MTC-50](#), [MTC-88](#)  
Intake manifold ..... [EM-20](#)  
Intake manifold collector ..... [EM-17](#)  
Intake sensor ..... [MTC-78](#), [MTC-81](#)  
Intake valve timing control (Bank 1) ..... [EC-161](#)  
Intake valve timing control (Bank 2) ..... [EC-161](#)  
Intake valve timing control solenoid valve (Bank 1) [EC-182](#)  
Intake valve timing control solenoid valve (Bank 2) [EC-182](#)  
Interior ..... [EI-27](#)  
Interior lamp ..... [LT-99](#)  
Interior lamp on-off control ..... [LT-99](#)  
Internal gear (Transfer) ..... [TF-112](#), [TF-114](#), [TF-120](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-18](#)  
IVCB1 - Wiring diagram ..... [EC-183](#)  
IVCB2 - Wiring diagram ..... [EC-185](#)  
IVIS (Infiniti vehicle immobilizer system) precautions .. [GI-3](#)

## J

Jacking points ..... [GI-42](#)  
Junction box (J/B) ..... [PG-83](#)

## K

Key illumination ..... [LT-99](#)  
KEYLES - Wiring diagram ..... [BL-45](#)  
Knock sensor (KS) ..... [EC-352](#)  
KS - Wiring diagram ..... [EC-353](#)

## L

Leaf spring (rear) ..... [RSU-8](#)  
Length (Dimensions) ..... [GI-52](#)  
License lamp ..... [LT-74](#)  
Lifting points ..... [GI-43](#)  
Line pressure solenoid valve ..... [AT-123](#)  
Line pressure test (A/T) ..... [AT-55](#)  
Liquid gasket application ..... [EM-5](#), [LU-2](#), [CO-2](#)  
Location of electrical units ..... [PG-71](#)  
Low coast brake solenoid valve ..... [AT-156](#), [AT-158](#)  
Low tire pressure warning system ..... [WT-8](#)  
Low tire pressure warning system - trouble diagnoses [WT-11](#)  
Low tire pressure warning system - Wiring diagram ..... [WT-11](#)  
Lubricant (R134a) A/C ..... [MTC-19](#)  
Lubricants ..... [MA-11](#)  
Lubrication circuit (engine) ..... [LU-5](#)  
Lubrication oil A/C ..... [MTC-19](#)  
Lubrication-locks, hinges and hood latches ..... [MA-33](#)  
Luggage room lamp ..... [LT-99](#)

## M

MAFS - Wiring diagram ..... [EC-192](#), [EC-200](#)  
Magnet clutch ..... [MTC-62](#), [MTC-99](#)  
MAIN - Wiring diagram ..... [EC-148](#), [AT-168](#)  
Main drive gear (M/T) ..... [MT-24](#)  
Mainshaft (M/T) ..... [MT-24](#)  
Mainshaft (Transfer) ..... [TF-112](#), [TF-114](#), [TF-120](#)  
Maintenance (engine)Schedule 1 ..... [MA-7](#)  
Maintenance (engine)Schedule 2 ..... [MA-9](#)  
Major overhaul (Final drive) [FFD-15](#), [RFD-15](#), [RFD-49](#),  
[RFD-119](#)  
Major overhaul (Transfer) ..... [TF-112](#)  
Malfunction indicator lamp (MIL) ..... [EC-62](#)  
Map lamp ..... [LT-99](#)  
Mass air flow sensor (MAFS) ..... [EC-189](#), [EC-198](#)  
Master cylinder (clutch) ..... [CL-9](#)  
Meter ..... [DI-4](#)  
METER - Wiring diagram ..... [DI-8](#)  
MIL data link connectors circuit ..... [EC-687](#)  
MIL/DL - Wiring diagram ..... [EC-687](#)  
MIRROR - Wiring diagram ..... [GW-77](#)  
Misfire ..... [EC-344](#)  
Mode door control linkage adjustment ..... [MTC-42](#)  
Mode door motor ..... [MTC-41](#), [MTC-89](#)  
Model variation ..... [GI-48](#)  
Multiport fuel injection (MFI) system ..... [EC-24](#)  
Multiport fuel injection precautions ..... [GI-6](#)  
Multi-remote control system - See Remote keyless entry

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

system ..... [BL-41](#)

## N

NATS - Wiring diagram ..... [BL-100](#)  
NONDTC - Wiring diagram ..... [AT-176](#)  
NVH troubleshooting (AX) ..... [FAX-4](#)  
NVH troubleshooting (EM) ..... [EM-11](#)  
NVH troubleshooting (Final drive) [FFD-6](#), [RFD-8](#), [RFD-42](#), [RFD-76](#)  
NVH troubleshooting (M/T) ..... [MT-7](#)  
NVH troubleshooting (Propeller shaft) ..... [PR-3](#)  
NVH troubleshooting (ST) ..... [PS-5](#)  
NVH troubleshooting (Transfer) ..... [TF-11](#)  
NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-4](#)  
NVIS (Nissan vehicle immobilizer system) ..... [BL-97](#)  
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

## O

O2H2B1 - Wiring diagram ..... [EC-175](#)  
O2H2B2 - Wiring diagram ..... [EC-177](#)  
O2S2B1 - Wiring diagram ... [EC-270](#), [EC-282](#), [EC-296](#)  
O2S2B2 - Wiring diagram ... [EC-272](#), [EC-284](#), [EC-298](#)  
Oil cooler (engine) ..... [LU-11](#)  
Oil filter ..... [LU-10](#)  
Oil pan (engine) ..... [EM-27](#)  
Oil pressure (engine) ..... [LU-8](#)  
Oil pump (A/T) ..... [AT-277](#)  
Oil pump (engine) ..... [LU-13](#)  
Oil pump regulator valve (engine) ..... [LU-13](#)  
Oil seal replacement (engine) ..... [EM-89](#)  
Oil seal replacement (front of final drive) [FFD-9](#), [RFD-11](#)  
Oil seal replacement (side of final drive) ..... [FFD-11](#)  
On board diagnostic system ..... [EC-47](#)  
Operating cylinder (clutch) ..... [CL-11](#)  
ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)  
Overheat ..... [EC-492](#)  
Oversize piston ..... [EM-127](#)

## P

P/SCKT - Wiring diagram ..... [WW-44](#)  
Pantograph jack ..... [GI-42](#)  
Park/Neutral position switch ..... [EC-483](#)  
Park/neutral position switch (A/T) ..... [AT-106](#)  
Park/neutral position switch (M/T) ..... [MT-13](#), [MT-22](#)  
Parking brake control ..... [PB-4](#)  
Parking lamp ..... [LT-74](#)  
PCV (positive crankcase ventilation) ..... [EC-44](#)  
PGC/V - Wiring diagram ..... [EC-395](#), [EC-403](#)  
PHSB1 - Wiring diagram ..... [EC-366](#)  
PHSB2 - Wiring diagram ..... [EC-368](#)  
Pilot bushing replacement - See Pilot converter ... [EM-108](#)  
Piston assembly ..... [EM-118](#)

Piston pin inspection ..... [EM-123](#)  
Piston ring inspection ..... [EM-124](#)  
Piston to bore clearance ..... [EM-127](#)  
Planetary carrier (Transfer) .. [TF-112](#), [TF-114](#), [TF-120](#), [TF-129](#)  
PNP/SW - Wiring diagram ..... [EC-485](#), [AT-107](#)  
POS - Wiring diagram ..... [EC-359](#)  
POWER - Wiring diagram ..... [PG-6](#)  
Power door lock ..... [BL-16](#)  
Power door mirror ..... [GW-77](#)  
Power steering fluid level ..... [MA-32](#)  
Power steering gear ..... [PS-15](#)  
Power steering oil pump ..... [PS-20](#)  
Power steering pressure (PSP) sensor ..... [EC-466](#)  
Power steering system bleeding ..... [PS-6](#)  
Power supply routing ..... [PG-4](#)  
Power window ..... [GW-15](#)  
PRE/SE - Wiring diagram ..... [EC-426](#), [EC-432](#)  
Precautions (General) ..... [GI-4](#)  
Precautions in repairing high strength steel .... [BL-149](#)  
Pressure plate - See Clutch cover ..... [CL-16](#)  
Pressure switch 1 ..... [AT-146](#), [AT-160](#)  
Pressure switch 2 ..... [AT-158](#)  
Pressure switch 3 ..... [AT-142](#), [AT-162](#)  
Pressure switch 5 ..... [AT-150](#), [AT-164](#)  
Pressure switch 6 ..... [AT-154](#), [AT-166](#)  
Pressure test (A/T) ..... [AT-55](#)  
Propeller shaft ..... [PR-4](#), [PR-9](#)  
Propeller shaft inspection ..... [MA-26](#)  
Propeller shaft on vehicle service ..... [PR-9](#)  
Propeller shaft vibration ..... [PR-4](#), [PR-9](#)  
PS/SEN - Wiring diagram ..... [EC-467](#)

## R

Radiator ..... [CO-14](#)  
Radio - See Audio ..... [AV-4](#)  
Rear bumper ..... [EI-15](#)  
Rear case (Transfer) ..... [TF-112](#), [TF-114](#), [TF-120](#)  
Rear combination lamp removal and installation [LT-89](#)  
Rear cover packing replacement diff. .... [RFD-13](#)  
Rear door ..... [BL-87](#), [GW-53](#)  
Rear seat ..... [SE-17](#)  
Rear seat belt ..... [SB-5](#)  
Rear washer ..... [WW-30](#)  
Rear window defogger ..... [GW-61](#)  
Rear wiper ..... [WW-30](#)  
Refrigerant connection precaution ..... [MTC-5](#)  
Refrigerant discharging evacuating charging .. [MTC-95](#)  
Refrigerant general precaution ..... [MTC-5](#)  
Refrigerant lines ..... [MTC-95](#), [MTC-102](#), [MTC-103](#)  
Refrigerant pressure sensor ..... [EC-673](#), [MTC-103](#)  
Relay box ..... [PG-85](#)  
Release bearing (clutch) ..... [CL-14](#)  
Remote keyless entry system ..... [BL-41](#)  
Removal and installation (A/T) ..... [AT-241](#), [AT-244](#)  
Removal and installation (Transfer) ..... [TF-111](#)  
Reverse idler shaft (M/T) ..... [MT-24](#)  
Reverse lamp switch (M/T) - See Back-up lamp switch

# ALPHABETICAL INDEX

(M/T) ..... [MT-13](#), [MT-22](#)  
 Reverse main gear (M/T) ..... [MT-24](#)  
 Revolution sensor (A/T) ..... [AT-112](#)  
 Road wheel size ..... [GI-52](#)  
 Rocker cover ..... [EM-41](#)  
 Room lamp ..... [LT-99](#)  
 Room lamp - See Interior lamp ..... [LT-99](#)  
 ROOM/L - Wiring diagram ..... [LT-107](#)  
 RP/SEN - Wiring diagram ..... [EC-674](#)

## S

SAE J1979 - Service \$01 - 09 ..... [EC-47](#)  
 Seat belt inspection ..... [SB-8](#), [MA-34](#)  
 Seat belt pre-tensioner ..... [SRS-49](#)  
 Seat belt, front ..... [SB-3](#)  
 Seat belt, rear ..... [SB-5](#)  
 Seat, front ..... [SE-10](#)  
 Seat, rear ..... [SE-17](#)  
 Self-diagnosis (Transfer) ..... [TF-45](#)  
 SEN/PW - Wiring diagram ..... [EC-479](#)  
 SHIFT - Wiring diagram ..... [AT-219](#)  
 Shift control (Transfer) .. [TF-112](#), [TF-114](#), [TF-120](#), [TF-135](#)  
 Shift control components (M/T) ..... [MT-26](#)  
 Shift fork (M/T) ..... [MT-26](#)  
 Shift lever ..... [MT-14](#)  
 Shift lock system ..... [AT-218](#)  
 Shock absorber (front) ..... [FSU-10](#)  
 Shock absorber (rear) ..... [RSU-7](#)  
 Side air bag (satellite) sensor ..... [SRS-48](#)  
 Side curtain air bag ..... [SRS-45](#)  
 Side trim ..... [EI-27](#)  
 SMJ (super multiple junction) ..... [PG-81](#)  
 Spare tire size ..... [GI-52](#)  
 Spark plug replacement ..... [EM-33](#), [MA-19](#)  
 Specification value ..... [EC-137](#)  
 Speedometer ..... [DI-4](#)  
 Spiral cable ..... [SRS-39](#)  
 SRS - See Supplemental Restraint System ..... [SRS-5](#)  
 SRS - Wiring diagram ..... [SRS-13](#)  
 SRS Trouble diagnoses ..... [SRS-9](#)  
 Stabilizer bar (front) ..... [FSU-12](#)  
 Stabilizer bar (rear) ..... [RSU-11](#)  
 Stall test (A/T) ..... [AT-54](#)  
 Standardized relay ..... [PG-79](#)  
 START - Wiring diagram ..... [SC-12](#), [SC-15](#)  
 Starting system ..... [SC-10](#)  
 Steering gear, linkage and transfer gear inspection ..... [MA-31](#)  
 Steering linkage ..... [PS-15](#)  
 Steering wheel and column ..... [PS-8](#)  
 Stop lamp ..... [LT-67](#)  
 Stop lamp switch ..... [EC-565](#)  
 STOP/L - Wiring diagram ..... [LT-68](#)  
 Striking rod (M/T) ..... [MT-26](#)  
 Strut (front) ..... [FSU-10](#)  
 STSIG - Wiring diagram ..... [AT-102](#)  
 Sun gear (Transfer) ..... [TF-112](#), [TF-114](#), [TF-120](#)

Supplemental Restraint System ..... [SRS-5](#)  
 Symbols and abbreviations ..... [GI-10](#), [GI-22](#)  
 Symptom matrix chart ..... [EC-92](#)  
 Synchronizer (M/T) ..... [MT-24](#)  
 System readiness test (SRT) code ..... [EC-53](#)

## T

T/TOW - Wiring diagram ..... [LT-94](#)  
 Tachometer ..... [DI-4](#)  
 Tail lamp ..... [LT-74](#)  
 TAIL/L - Wiring diagram ..... [LT-77](#)  
 TCM circuit diagram ..... [AT-53](#)  
 TCM inspection table ..... [AT-87](#)  
 TCS - Wiring diagram ..... [BRC-17](#), [BRC-78](#)  
 TCS (traction control system) ..... [BRC-8](#), [BRC-68](#)  
 TCS component parts and connector location [BRC-15](#), [BRC-76](#)  
 Theft warning system - See Vehicle security (Theft warning) system ..... [BL-65](#)  
 Thermostat ..... [CO-24](#)  
 Three way catalyst ..... [EM-22](#)  
 Three way catalyst function (Bank 1) ..... [EC-373](#)  
 Three way catalyst function (Bank 2) ..... [EC-373](#)  
 Three way catalyst precautions ..... [GI-5](#)  
 Throttle control motor ..... [EC-582](#)  
 Throttle control motor relay ..... [EC-570](#)  
 Throttle position sensor (TPS) ... [EC-215](#), [EC-337](#), [EC-503](#), [EC-505](#), [EC-602](#)  
 Throwout bearing - See Clutch release bearing [CL-14](#)  
 Tie-rod ..... [PS-15](#)  
 Timing chain ..... [EM-55](#)  
 Tire rotation ..... [MA-30](#)  
 Tire size ..... [GI-52](#)  
 Torque converter installation ..... [AT-243](#), [AT-246](#)  
 Torque convertor clutch solenoid valve .... [AT-119](#), [AT-121](#)  
 Tow truck towing ..... [GI-44](#)  
 Towing point ..... [GI-45](#)  
 TPS1 - Wiring diagram ..... [EC-339](#)  
 TPS2 - Wiring diagram ..... [EC-217](#)  
 TPS3 - Wiring diagram ..... [EC-604](#)  
 Traction control system - Wiring diagram ..... [BRC-17](#), [BRC-78](#)  
 Transfer control device ..... [TF-76](#), [TF-107](#)  
 Transfer control unit inspection table ..... [TF-37](#)  
 Transfer serial number ..... [GI-51](#)  
 Transmission case (M/T) ..... [MT-22](#)  
 Transmission serial number ..... [GI-51](#)  
 Tread-FR&RR (Dimensions) ..... [GI-52](#)  
 Trim ..... [EI-27](#)  
 Trouble diagnoses ..... [GI-11](#)  
 Turbine revolution sensor ..... [AT-110](#)  
 TURN - Wiring diagram ..... [LT-51](#)  
 Turn signal lamp ..... [LT-47](#)  
 Two trip detection logic ..... [EC-47](#)  
 Two-pole lift ..... [GI-43](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## V

Vacuum hose (brake system) .....	<a href="#">BR-19</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-103</a>
Valve clearance .....	<a href="#">EM-84</a>
Valve guide .....	<a href="#">EM-99</a> , <a href="#">EM-100</a>
Valve lifter .....	<a href="#">EM-79</a>
Valve seat .....	<a href="#">EM-101</a>
Valve spring .....	<a href="#">EM-102</a> , <a href="#">EM-103</a>
Vanity mirror lamp .....	<a href="#">LT-99</a>
Variable induction air control system (VIAS) ..	<a href="#">EC-560</a> , <a href="#">EC-678</a>
VDC (vehicle dynamics control) .....	<a href="#">BRC-8</a> , <a href="#">BRC-68</a>
VDC -Wiring diagram .....	<a href="#">BRC-17</a> , <a href="#">BRC-78</a>
Vehicle identification number .....	<a href="#">GI-50</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-45</a>
Vehicle security (theft warning) system .....	<a href="#">BL-65</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-460</a> , <a href="#">EC-559</a>
VEHSEC - Wiring diagram .....	<a href="#">BL-69</a>
VENT/V - Wiring diagram .....	<a href="#">EC-410</a> , <a href="#">EC-417</a>
VIAS - Wiring diagram .....	<a href="#">EC-680</a>
VIAS/V - Wiring diagram .....	<a href="#">EC-561</a>
VIN registration .....	<a href="#">EC-77</a>
Viscosity number (SAE) .....	<a href="#">MA-12</a>
VSS A/T - Wiring diagram .....	<a href="#">AT-114</a>

## W

Wait detection switch .....	<a href="#">TF-67</a>
WARN - Wiring diagram .....	<a href="#">DI-25</a>
Warning chime .....	<a href="#">DI-34</a>
Warning lamps .....	<a href="#">DI-24</a>
Washer, front .....	<a href="#">WW-4</a>
Washer, rear .....	<a href="#">WW-30</a>
Water pump .....	<a href="#">CO-19</a>
Water temperature gauge .....	<a href="#">DI-4</a>
Wheel alignment (front) .....	<a href="#">FSU-6</a>
Wheel balance .....	<a href="#">MA-28</a>
Wheel bearing (front) .....	<a href="#">FAX-5</a>
Wheel bearing (rear) .....	<a href="#">RAX-6</a> , <a href="#">RAX-18</a>
Wheel size .....	<a href="#">GI-52</a>
Wheelbase (Dimensions) .....	<a href="#">GI-52</a>
Width (Dimensions) .....	<a href="#">GI-52</a>
WINDOW - Wiring diagram .....	<a href="#">GW-21</a>
Window, door .....	<a href="#">GW-49</a> , <a href="#">GW-53</a>
Windshield .....	<a href="#">GW-11</a>
Windshield washer - See Front washer .....	<a href="#">WW-4</a>
Windshield wiper - See Front wiper .....	<a href="#">WW-4</a>
WIP/R - Wiring diagram .....	<a href="#">WW-32</a>
WIPER - Wiring diagram .....	<a href="#">WW-9</a>
Wiper, front .....	<a href="#">WW-4</a>
Wiper, rear .....	<a href="#">WW-30</a>
Wiring Diagram (Cell code) list .....	<a href="#">PG-69</a>
Wiring diagrams .....	<a href="#">GI-15</a>
Withdrawal lever (clutch) .....	<a href="#">CL-14</a>
WT-T/WARN - Wiring diagram .....	<a href="#">WT-11</a>