





Pro-Jector

PARTS LISTING

Key No.	Part No.	Description
01	190216	Frame
02	190217	Toggle
03	392437	Socket Head Set Screw
04	392408	Toggle Ram Link
05	392417	Toggle Link Pin
06	392424	Spring Washer
07	390081	Retaining Ring
08	392406	Yoke
09	392416	Toggle Ram Pin
10	392404	Ram
11	392405	Subplate
13	392425	Spiral Pin (upper-2)
14	392412	Driveshaft
15	392422	Thrust Washer
16	392426	Spiral Pin
17		Shell Plate
18	392440	Self-locking Nut
19	392409	Case Retainer Spring
20	392418	Handle
21	480088	Knob
22	390027	Handle Lock Nut
23	392413	Powder Measure Adapter
24	190218	Small Sleeve
25	190219	Large Sleeve
26	044000	Sure Loc Lock Ring
27	392431	Cap Screw, Automatic Primer Feed (A.P.F.)
28	392414	Cam (A.P.F.)
29	392432	Cap Screw (Cam)
30	290029	Spent Primer Tube
31	580199	ID Plate
32	392428	Wrench, Shell Plate (S.P.)
33	392443	Hex Head Screw
34	392011	Hex Nut
35	392444	Set Screw
36	392439	Primer Tube Pin
38	392441	Spiral Pin (lower)
39	392415/A	Pawl Housing (left)
40	392403	Pawl
41	392423	Pawl Spring
42	392415/B	Pawl Housing (right)

Key No.	Part No.	Description
43	392400	Index Wheel
44	392427	Spiral pin
45	392410	Base Plate (A.P.F.)
46	392411	Primer Arm (A.P.F.)
47	050045	Primer Tube Housing
48	190005	Body (A.P.F.)
49	392407	Primer Arm Spring
50	392457	Spring Screw (A.P.F.)
51	392458	Spring Nut (A.P.F.)
52	050046	Small Primer Tube
53	050047	Large Primer Tube
54	392419	Bolt (A.P.F.)
55	390035	Large Primer Punch
56	390034	Small Primer Punch
57	390007	Primer Cup Spring
58	392401	Small Primer Cup
59	392402	Larger Primer Cup
60	392456	Spring (A.P.F.)
61	392433	Cap Screw (A.P.F.)
62	392421	Lock-Nut (A.P.F.)
63	050052	Spent Primer Container
65	392450	Brass Kicker Spring Retaining Lock Nut
66	392449	Brass Kicker Arm Return Spring
67	392454	Brass Kicker Arm
68	392453	Brass Kicker Cam
69	392451	Brass Kicker Cam Bolt
70	392452	Brass Kicker Cam Bolt Lock Nut
71	392455	Cartridge Catcher Bracket
72	480039	Cartridge Catcher

SOLD ONLY AS ASSEMBLY

050050	Drive Shaft Assembly (14, 43, 44)
050048	Left Pawl Assembly (16, 39, 40, 41)
050049	Right Pawl Assembly (16, 40, 41, 42)
050023	Primer Arm Assembly, Complete, Consisting of Key #46, 55, 56, 57, 58, 59, 62
050022	Automatic Primer Feed Assy., Consisting of Key #45, 48, 49, 50, 51, 60, 61, 46, 54, 55, 56, 57, 58, 59, 62
050028	Automatic Primer Shut-Off Assembly (48, 50, 51, 60)

Note: When ordering any part, always include serial number of press.

For parts inquiries, call 1-800-338-3220