

BRYCO ARMS '38'
MODEL 380 AUTO
*SPECIFY IF PISTOL=22 CAL.

MAGAZINE ASSEMBLY
PART NO. 3850 32/380
3855 22 CAL

GRIP SCREW
2020b BLACK
2020c CHROME

PART NO. 3860P BLACK
3862P IVORY

SLIDE PART NOS.

3807-22n 22 CAL BLACK	3807-32n 32 CAL BLACK	3807-38n 380 BLACK
3801-22n 22 CAL CHROME	3807-32n 32 CAL CHROME	3807-38n 380 CHROME
3807-22n 22 CAL NICKEL	3807-32n 32 CAL NICKEL	3807-38n 380 NICKEL

PART	PRICE	
XXXX	FRAME (NOT AVAIL)	—
3807-XX	SLIDE (SEE BELOW)	\$40.00
3816-X	TRIGGER S/A	8.00
2012	CATCH	3.00
*385	TAKE DOWN BUTTON	5.00
*386	FIRING PIN	3.00
*387	SEAR ASSEMBLY	5.00
3849f	SHOCK BUTTON	5.00
2590s	CAM	3.00
2001	SAFETY	3.00
3848f	SHOCK SPRING	2.00
*3812b	EXTRACTOR	3.00
3811b	EJECTOR (22 ONLY)	3.00
38XX	MAGAZINE ASSY.	12.00
3860P	BLACK GRIPS PAIR	6.00
3862P	IVORY GRIPS PAIR	6.00
2034	BARREL PIN	1.00
2037	TAKE DN. CROSS PIN	1.00
2032	EXTRACTOR PIN	1.00
2031	TRIGGER CROSS PIN	1.00
2036	CAM/CATCH PIN	1.00
*3825	RECOIL SPRING	2.00
3824	FIRING PIN SPRING	2.00
2042	SEAR SPRING	1.00
2040.	CATCH SPRING	1.00
2016	TRIGGER RETURN SPRING	1.00
2003	SAFETY SPRING	2.00
*3833	EXTRACTOR SPRING	1.00
2020b	GRIP SCREWS BLACK	1.00 EA.
2020c	GRIP SCREWS CHROME	1.00 EA.

PARTS ORDERING INSTRUCTIONS

Changes in design may occur from time to time, always specify the color and serial number of your pistol with your order. Add \$2.00 Shipping & Handling.

MAIL CHECK OR MONEY ORDER PAYABLE TO

BRYCO ARMS
17692 COWAN
IRVINE, CA 92714
(714) 252-7621


• CAUTION •

For your safety, and that of others, we strongly recommend that you do not place a cartridge in the barrel until you are ready to shoot it.

BE CAREFUL!

MFG. BY BRYCO ARMS
Jennings Firearms

MODEL '38'
380 AUTO

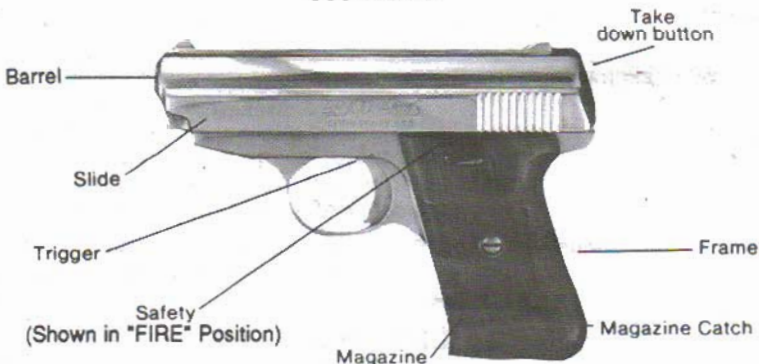

VERY IMPORTANT!

THESE INSTRUCTIONS SHOULD BE CAREFULLY READ AND NOTED.

ALL FIREARMS ARE DANGEROUS PLEASE BE CAREFUL

We strongly advise that you familiarize yourself with all the mechanism of this, or any gun before putting ammunition into it.

- Do not carry with cartridge in chamber
- Wear shooting glasses and hearing protection.
- Always point Pistol in a safe direction.
- Never place your finger on the trigger, unless you are ready to shoot the pistol.
- Always check chamber, after removing Magazine, for cartridge in barrel.
- Do not 'Dry Fire' (shoot pistol with empty chamber)

SAFETY: The word "FIRE" is visible when pistol is in firing condition. Moving the safety upwards, the word 'safe' is visible. When the pistol is in safe position the slide cannot be moved to chamber a cartridge and the trigger is inoperative.

LOADING THE PISTOL: After loading your Magazine, insert it into the bottom of the pistol handle and push it into the pistol as far as possible. When fully inserted, the Magazine Catch will hook over the bottom of the Magazine and hold it in its proper position. Take the pistol in one hand with a firm grip, making sure your fingers are not touching the trigger. *Point Your Pistol in a Safe Direction* and pull the slide as far rearward as it will go. Release the Slide allowing it to go forward of its own accord. This procedure places the first cartridge into the chamber and the gun is ready for firing. Subsequent feeding and ejection operations are performed automatically until the pistol is empty.

UNLOADING WITHOUT FIRING: Always point your pistol in a safe direction. To unload unfired cartridges move the Magazine Catch rearward until the Magazine can be pulled from the pistol. After the Magazine is removed, pull the Slide to the rear to remove the cartridge from the Barrel chamber. Always check the Barrel chamber visually for cartridges by holding the Slide back and looking into the Slide, Chamber and Magazine cavities.

DISASSEMBLY: *The pistol must be in unloaded, uncocked condition before take down can be performed.* To remove the Slide, use a blunt object to push the take down button, located in the back end of the Slide, forward until it stops (about 1/8 inch). While holding the take down button depressed, gently lift the Slide away from the Frame until it stops. Release the take down button gently as it is springloaded. Hold the rear of the Slide up and push the Slide forward, off of the end of the gun. This procedure removes the entire Slide Assembly and is sufficient for normal cleaning and oiling. Clean the Barrel within a reasonable period of time after shooting. After the powder residue has been removed, give the Barrel bore a light protective coat of oil.

ASSEMBLY: Make sure the Recoil Spring is installed (under the barrel). Place the Slide Assembly over the Barrel and pull rearward until it can be dropped down onto the Frame. Depress the take down button into the Slide far enough to allow it to drop into its slot. Release the take down button after Slide is pushed down into the Frame. You should not be able to lift the rear of the Slide away from the Frame if properly assembled. *After the assembly is completed, but before loading, manually operate the pistol to see that everything functions properly.*